1st cross member Removal and Installation




Note :

• Welding method is the same on both sides.

Removal :


1. Use a belt sander or the like, scrape off the rivet crimp to remove the 1st cross member.

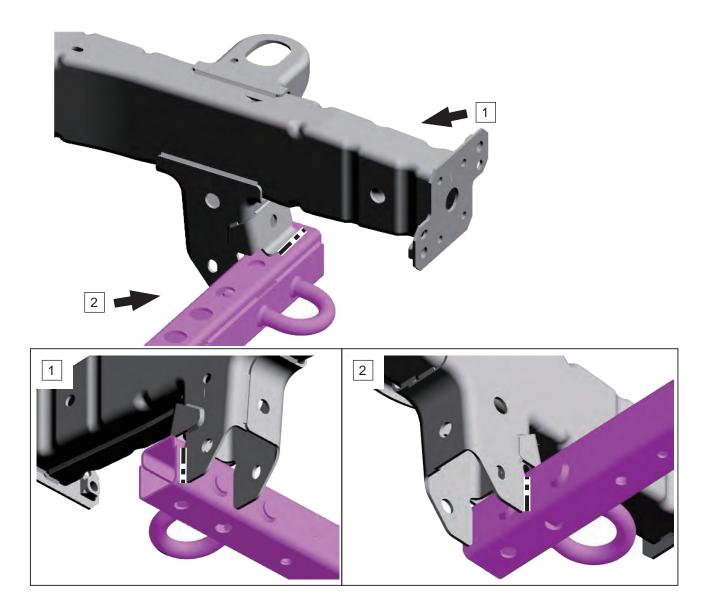

334 Body Structure

Installation :

- 1. Install the 1st cross member.
- 2. Conduct fillet weld.

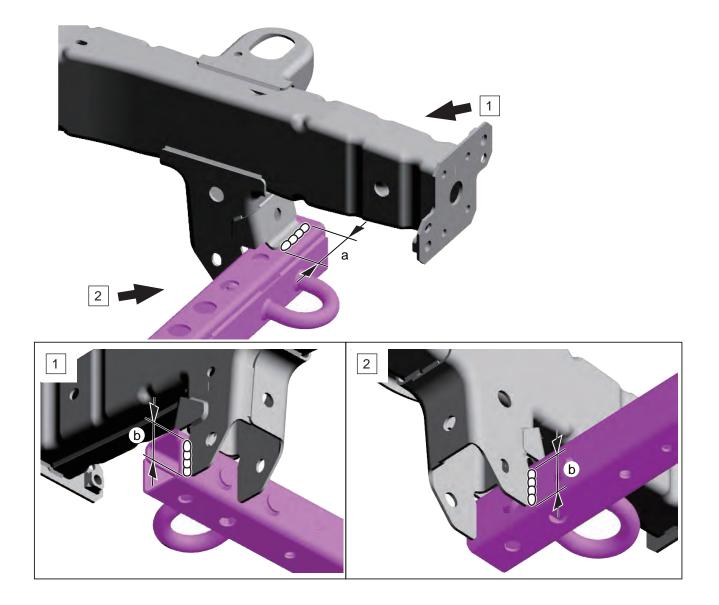

- a. 25 mm {0.98 in}
- b. 28 mm {1.10 in}