

Precautions

Maintenance precautions of paint / coatings

1. Precautions for working

Warning :

- Wear clothes and protective items suitable for repair work and ensure that the work place is well ventilated.

Caution :

- Follow the manufacturer's instructions on how to use painting and sealing material.
- Always apply sealer and anti-rust wax after applying anti-rust primer.
- Do not apply sealer to engine-related parts, installation areas of the strut assembly and shock absorber and moving parts.
- Do not fill drain holes in body panels with coating or sealing material.

Note :

- After removing the applied spot sealer from the sealer application areas using thinner or equivalent, apply primer or equivalent for anti-rust treatment, and then apply body sealer.
- Apply degreasing agent or equivalent to a clean cloth and clean the sealer application areas.
- Apply anti-rust wax (penetrating compound) to areas where the normal undercoating material is difficult to be applied such as the inside of the doors and side sills.

2. Procedure for applying anti-rust wax and sealer

1. Apply degreasing agent or equivalent to a clean cloth and clean the sealer application areas.
2. Apply primer.
3. Apply sealer.
4. Apply color paint to necessary areas such as the hemmed edges, exposed joint parts and underbodies.
5. Apply anti-rust wax to the inside of the doors and side sills.
6. Apply undercoating.