





Sealant Application Areas

1. Apply sealant to the following figures




Engine Compartment

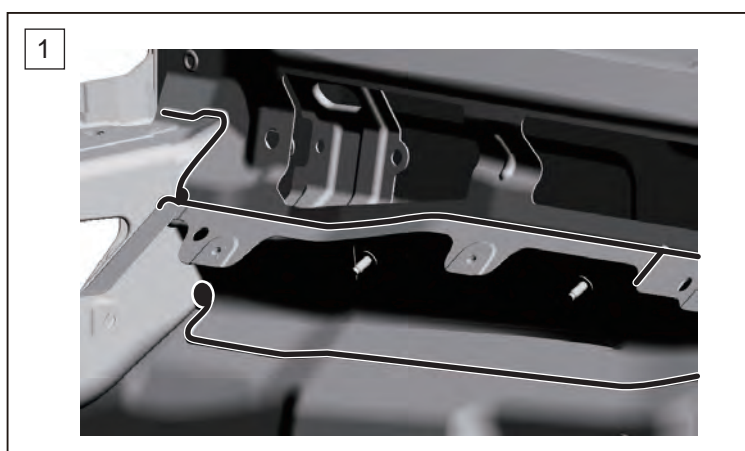





Floor (Regular cab)

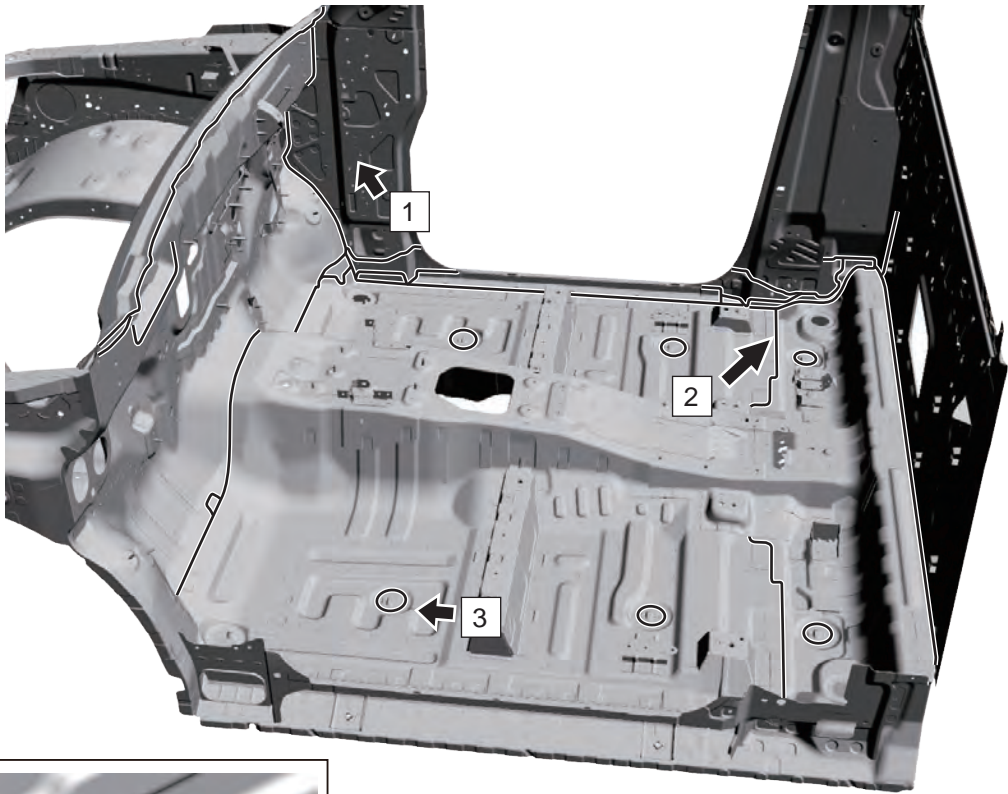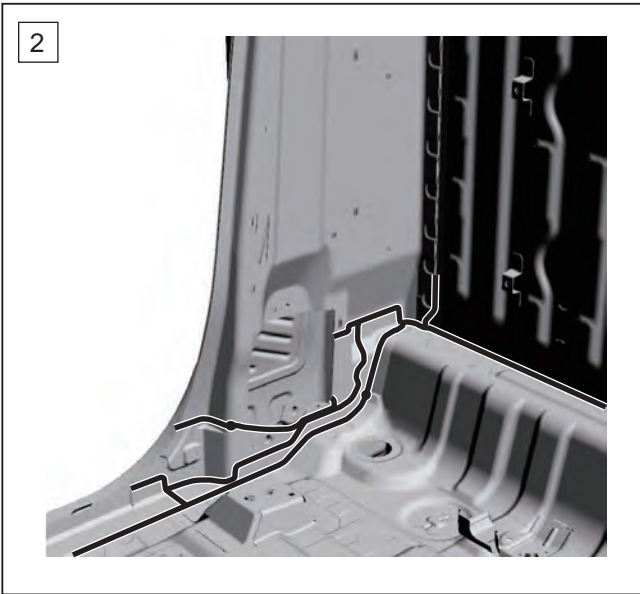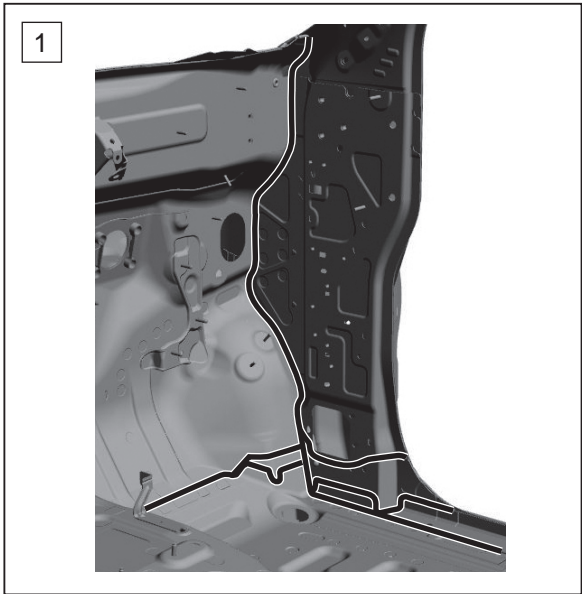





Floor (Extended cab)

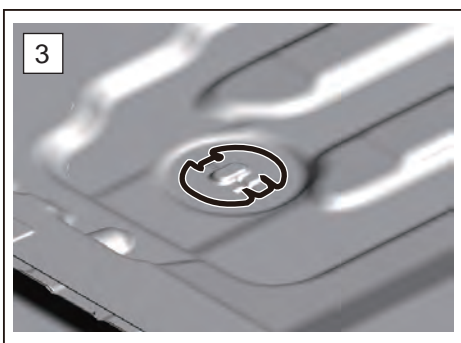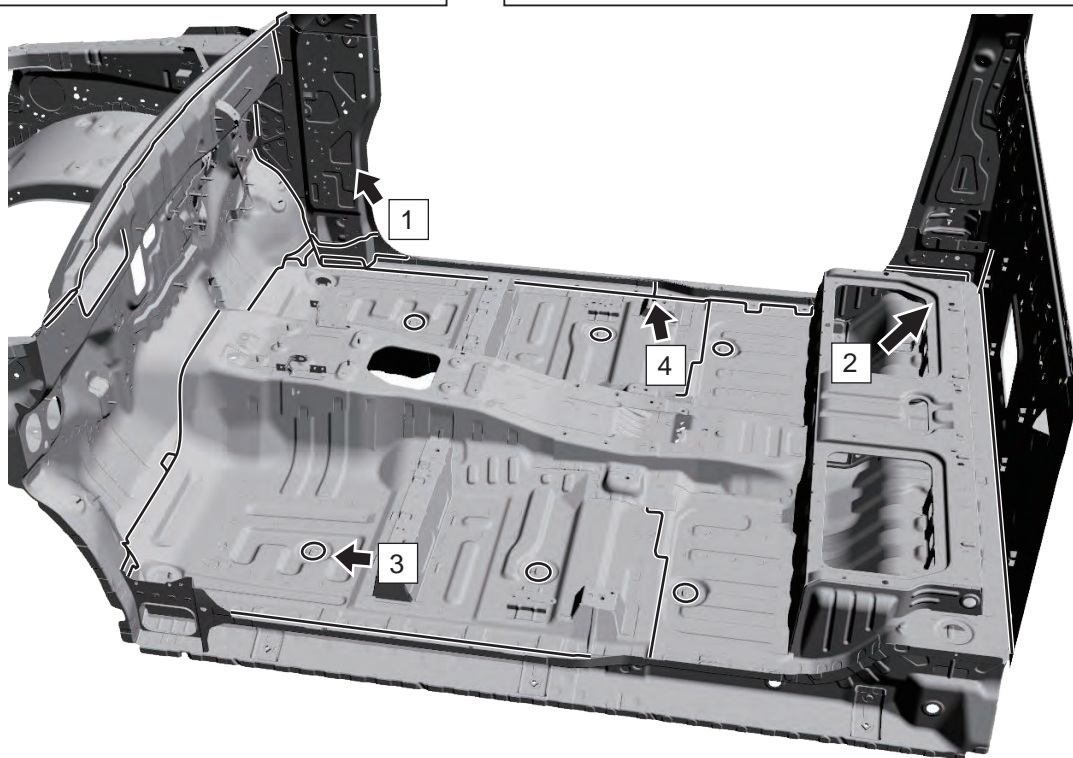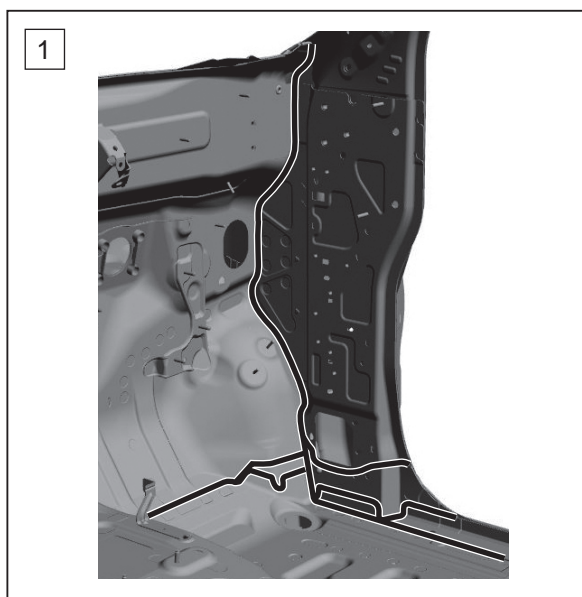




Floor (Crew cab)

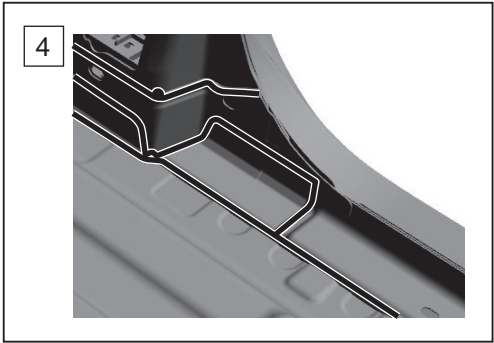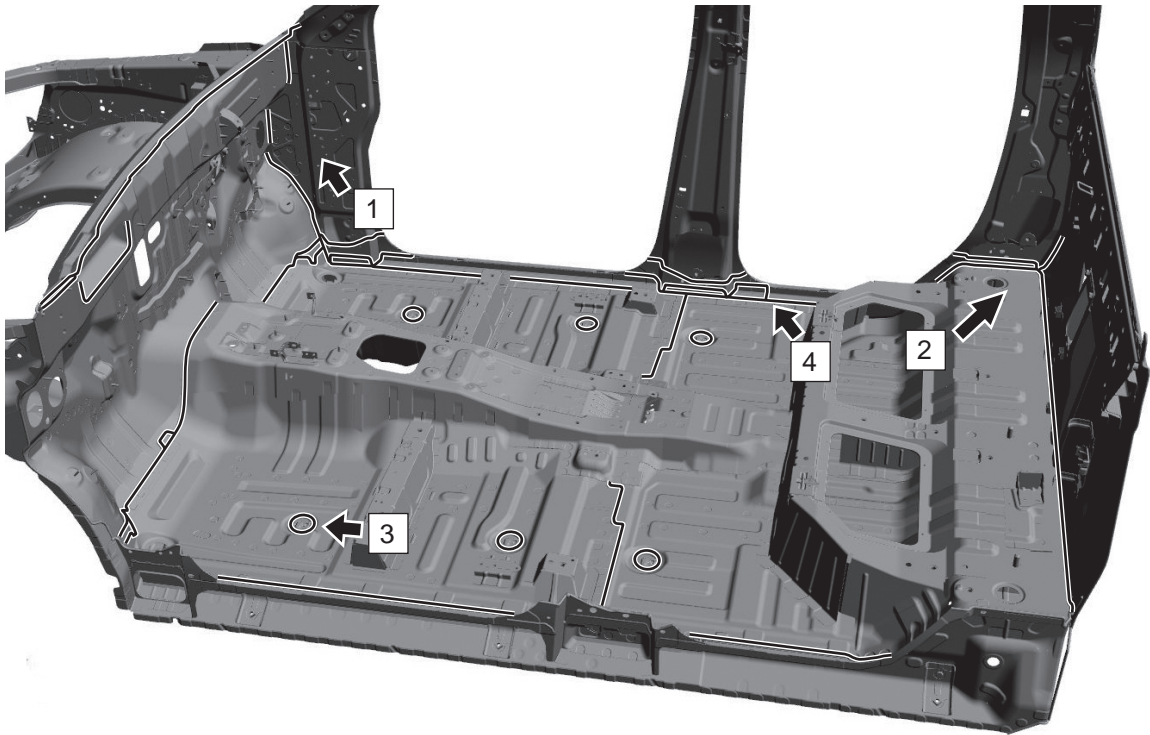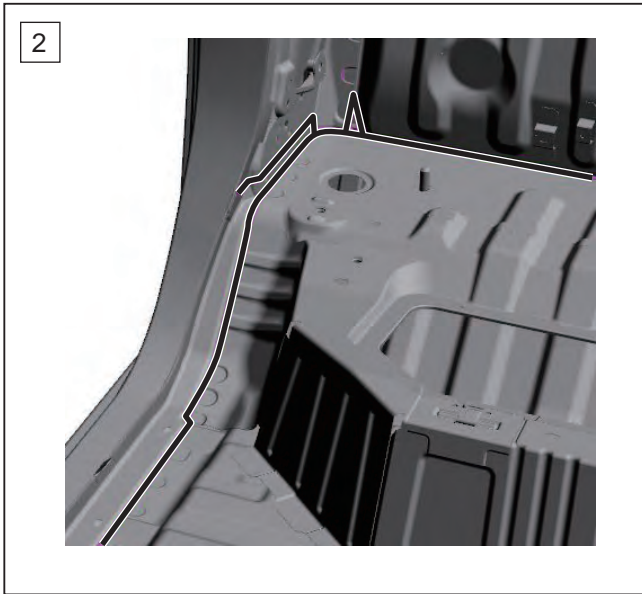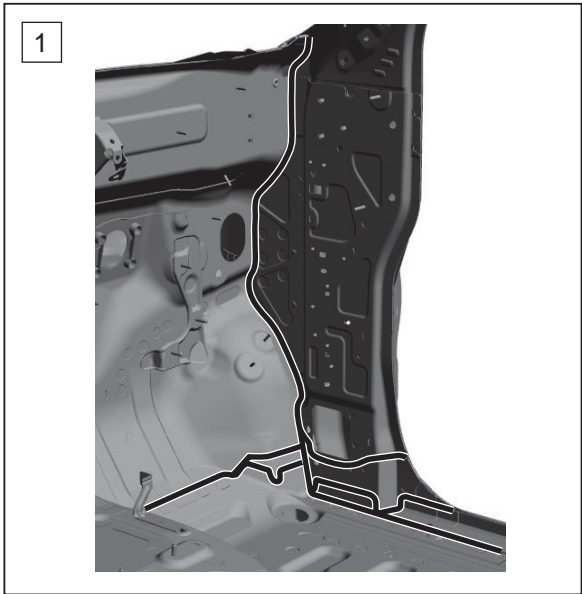





Back and Roof (Regular cab)

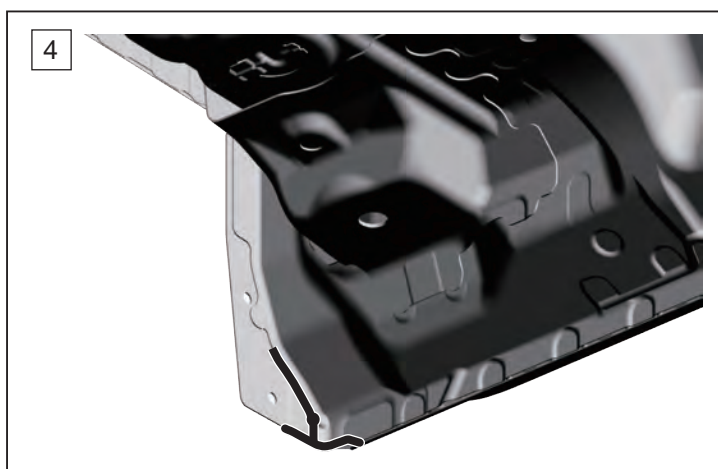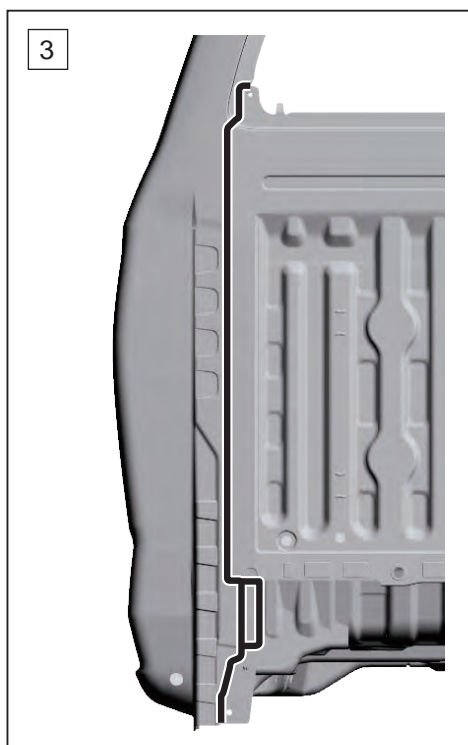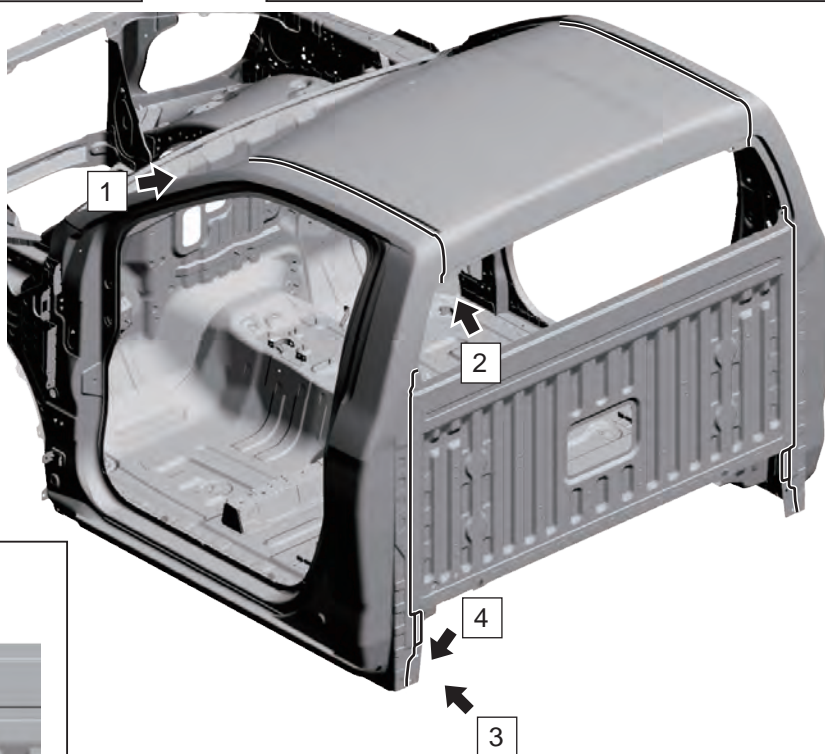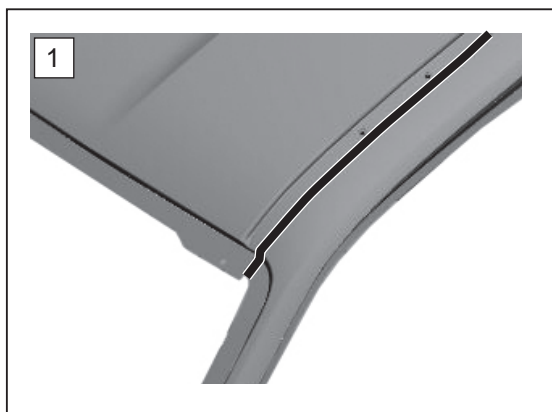

Back and Roof (Extended cab)

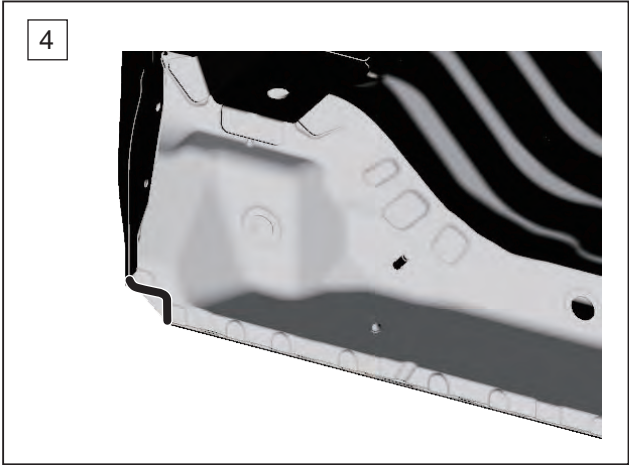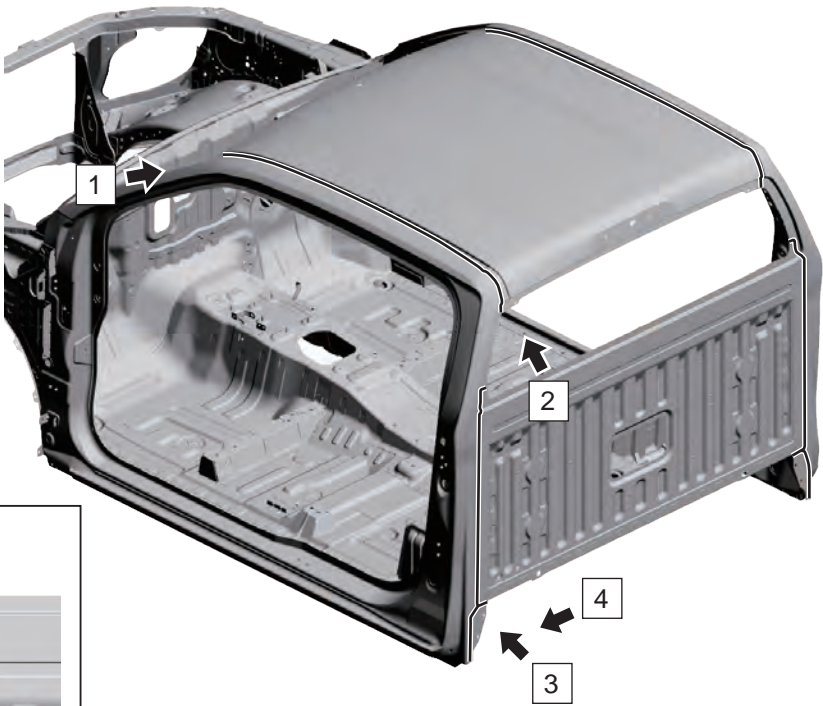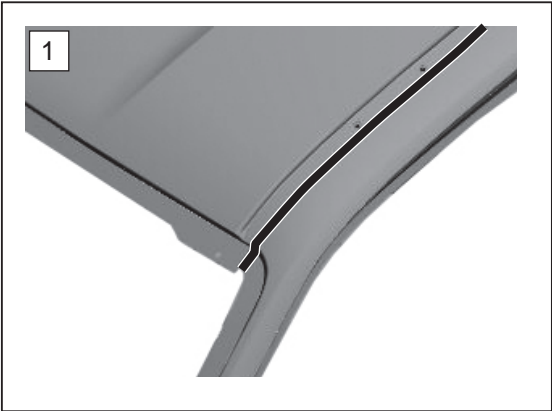

Back and Roof (Crew cab)

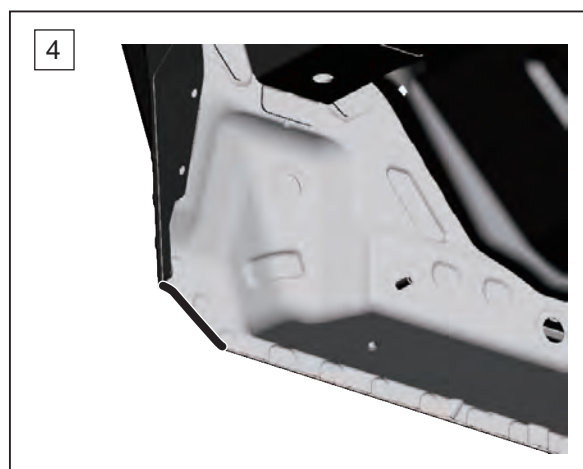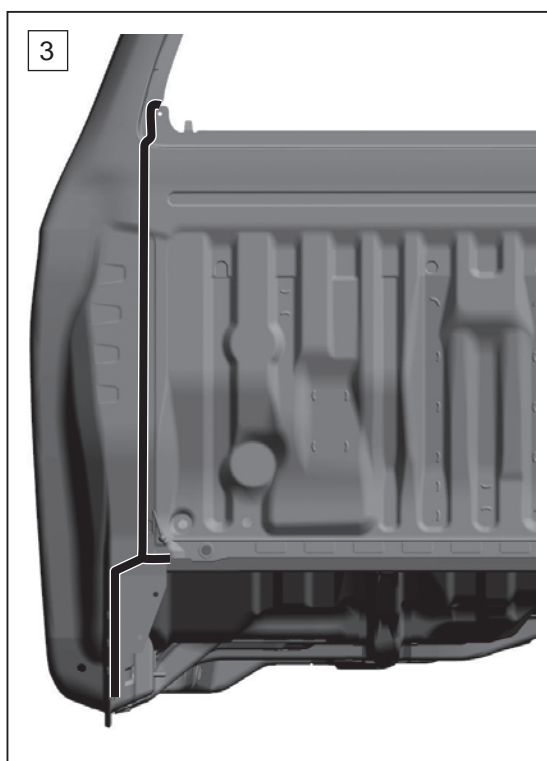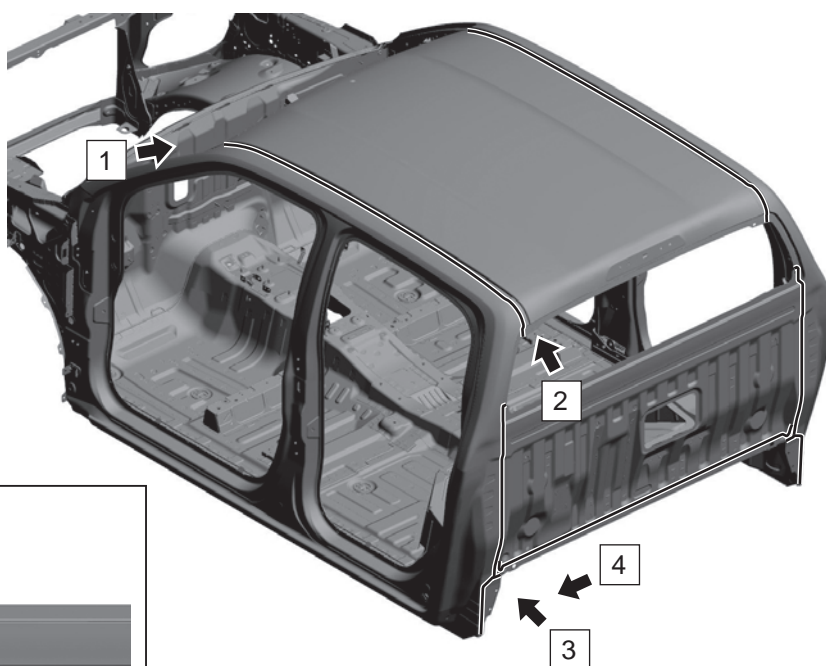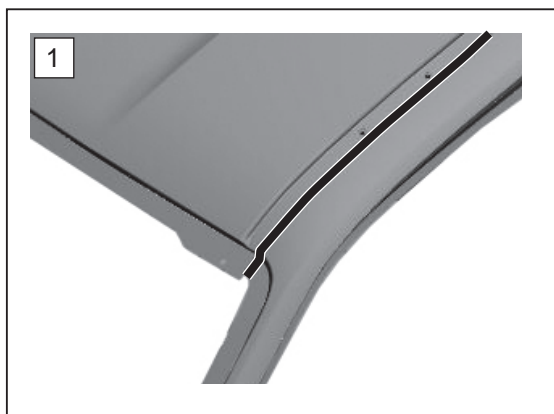

Underfloor

