
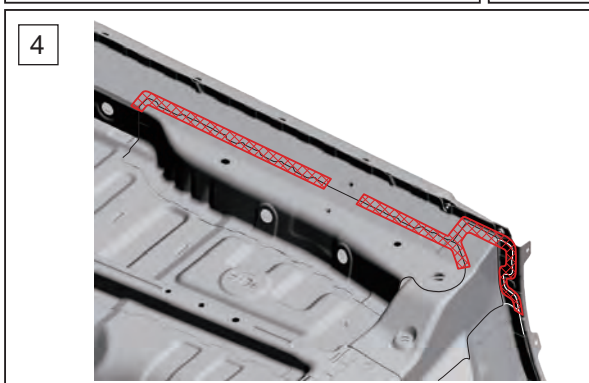
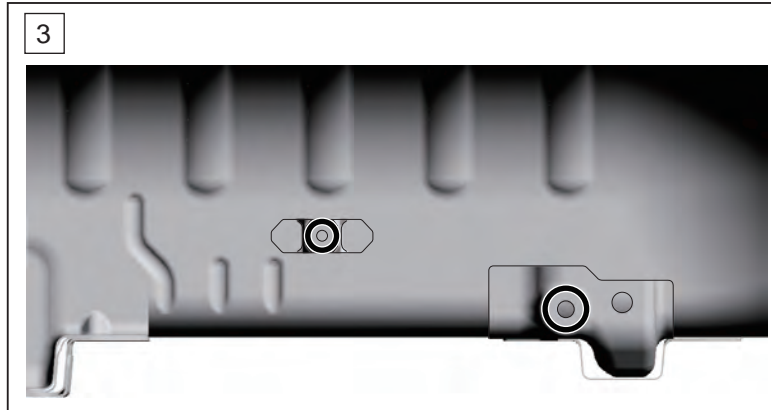
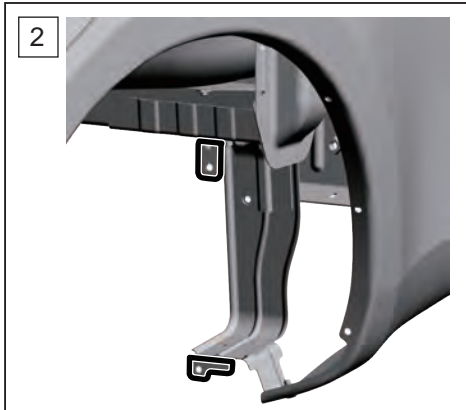
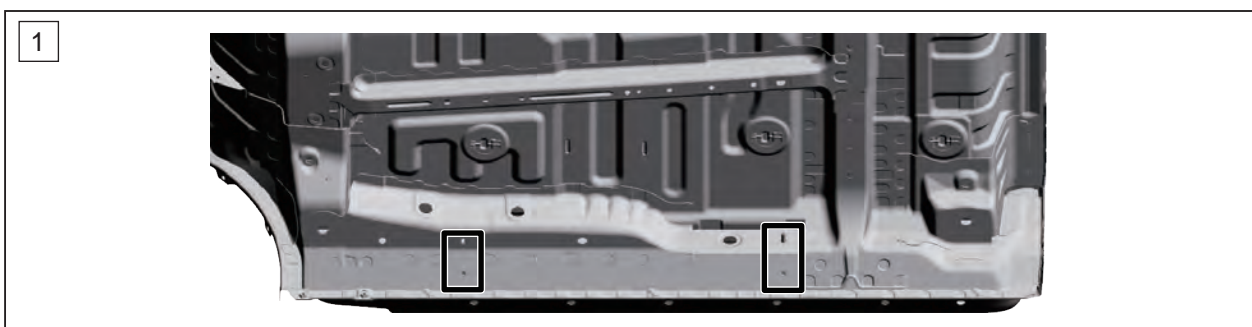


## Undercoating Application Areas

1. Apply undercoating referring to the following figures.

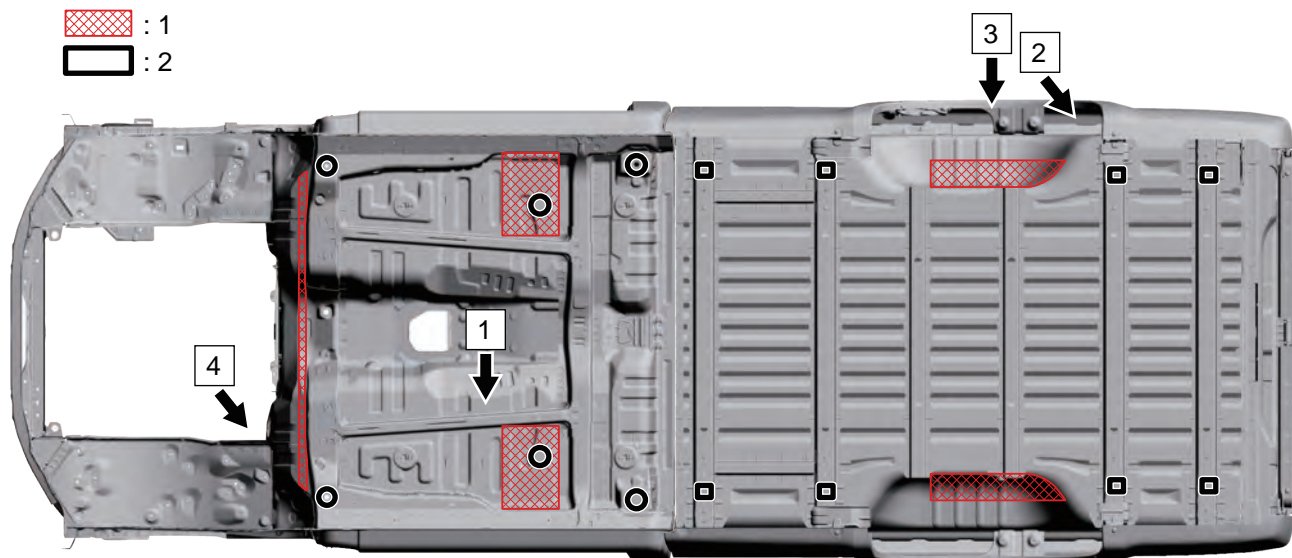

Regular Cab






 : 1  
 : 2



1. Apply undercoating.
  2. Do not apply undercoating.
-

## Extended Cab






-  : 1
-  : 2

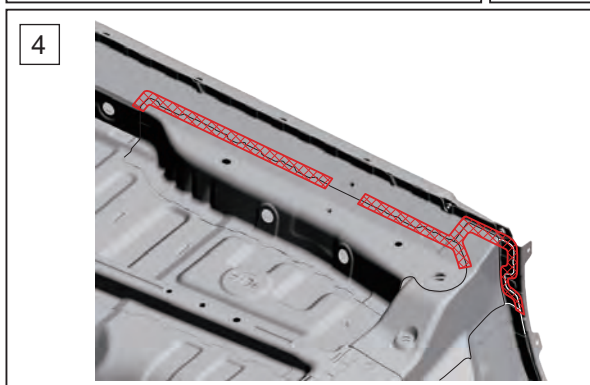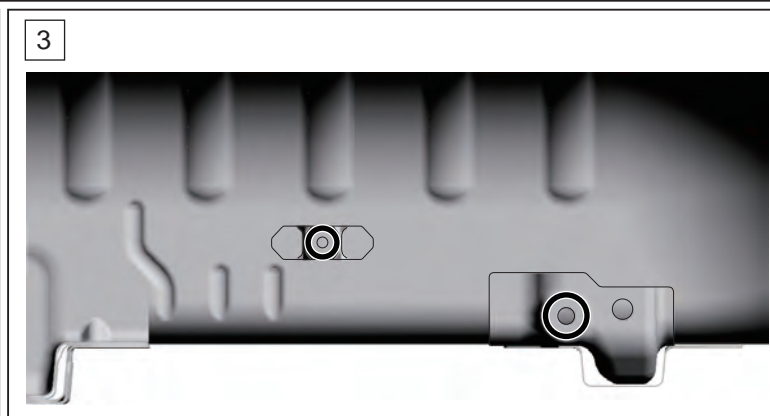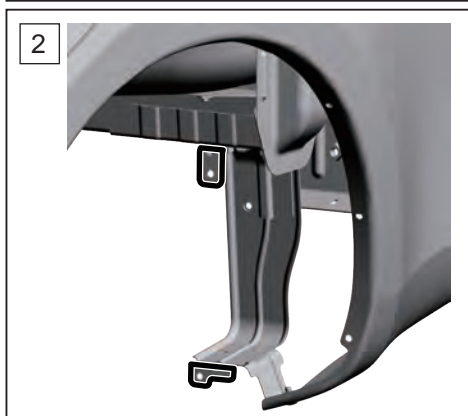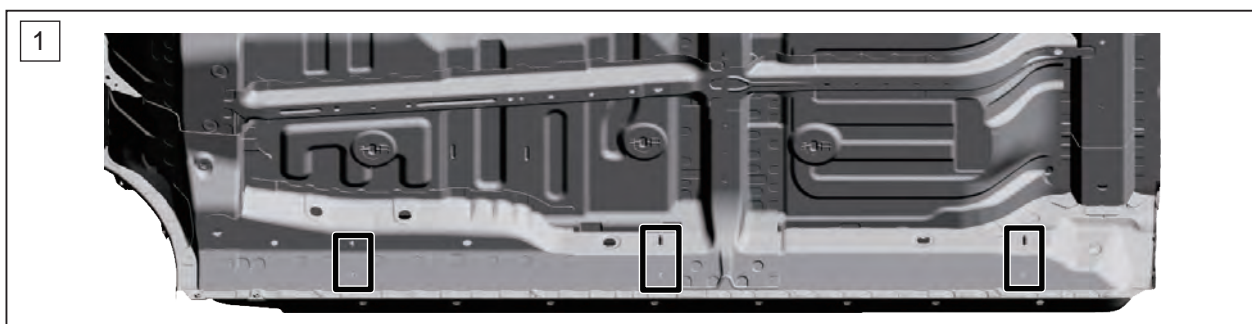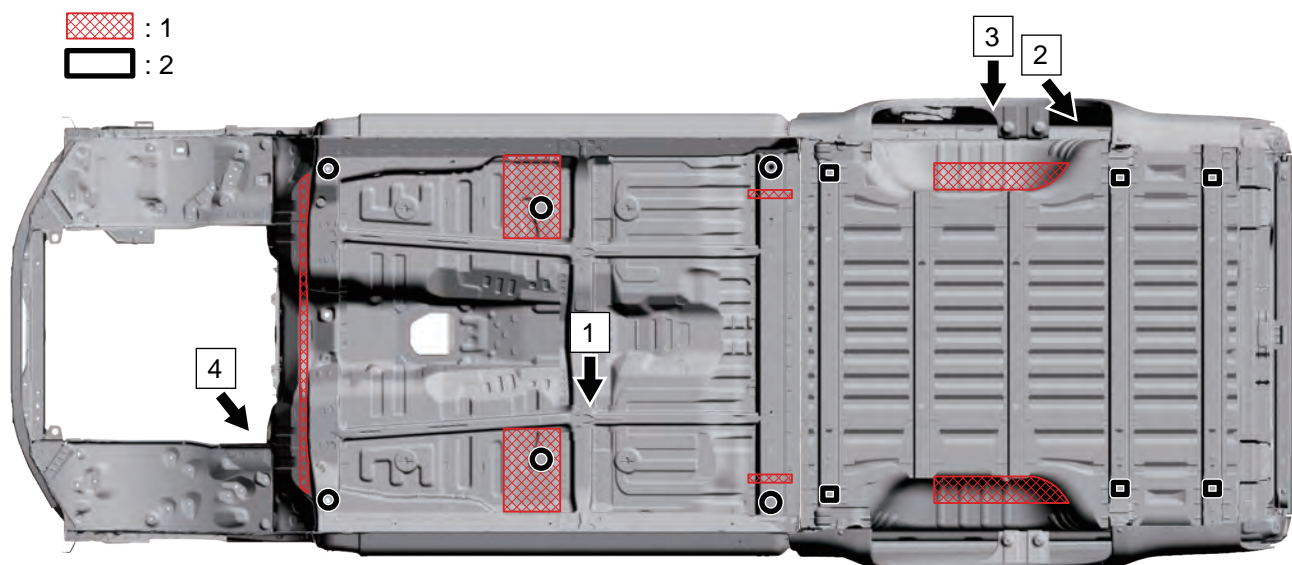

1. Apply undercoating.
  2. Do not apply undercoating.
-

## Crew Cab

-  : 1
-  : 2

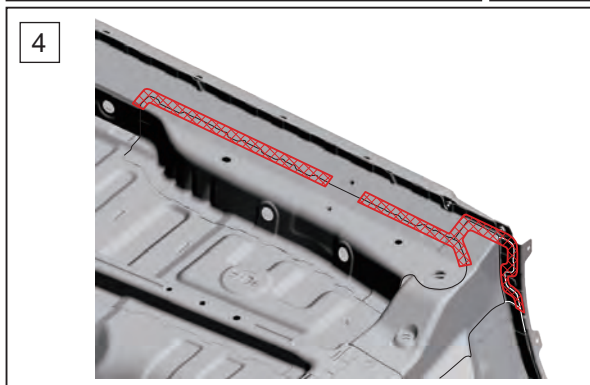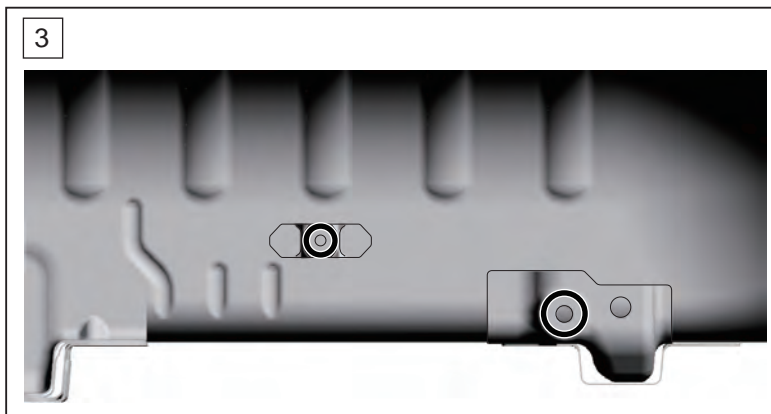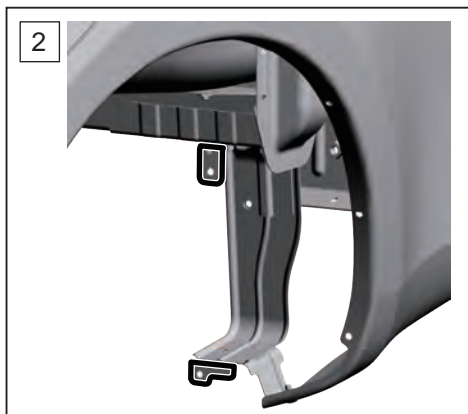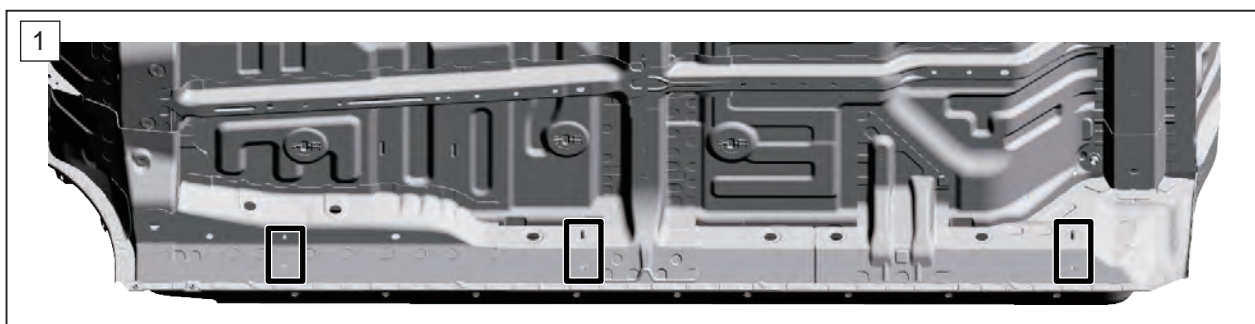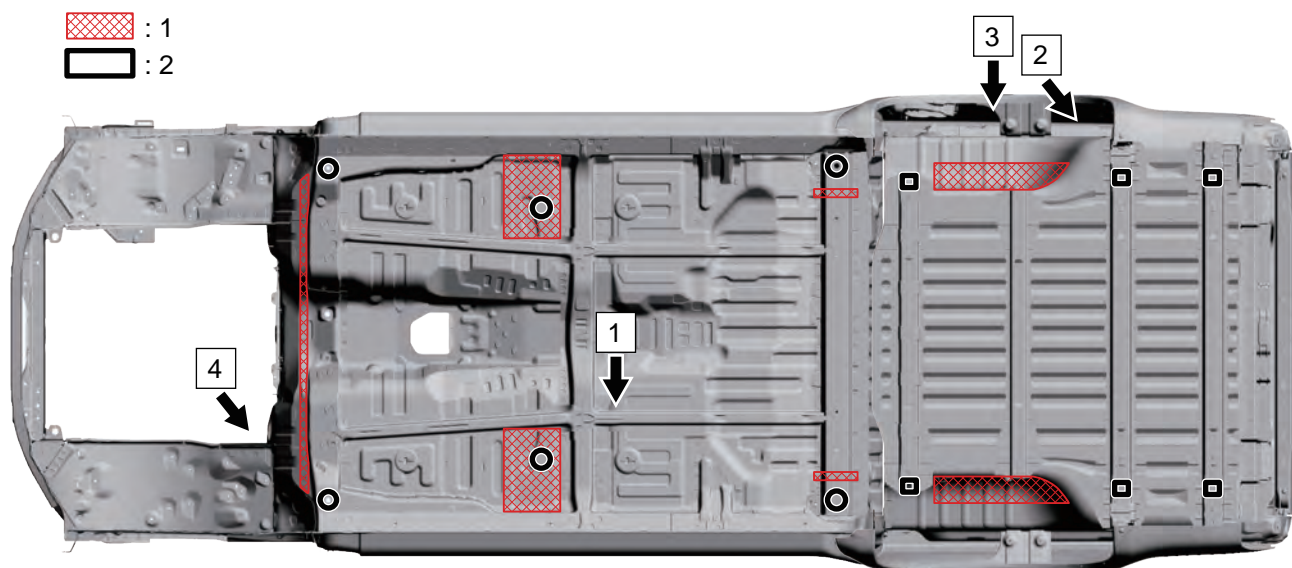

1. Apply undercoating.
  2. Do not apply undercoating.
-