

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
T00 DIAGNOSIS				
DTC READING BY DIAGNOSTIC TOOL		T9999XDX	0.2	
The labor operation for DIAGNOSTIC TOOLS usage (T9999*-*~*) can be applied only when the diagnosis requires the NGS/WDS/PDS/IDS tester to read the Diagnostic Trouble Code for Auto cruise control/Theft deterrent control system components.				
T01 POWER CIRCUIT				
FUSE, R&R		T0102XRX	0.2	
MAIN FUSE, R&R	Without i-stop	T0103ARX	0.2	
MAIN FUSE, R&R	With i-stop	T0103BRX	0.3	
FUSE BLOCK OR PASSENGER JUNCTION BOX, R&R	Fuse block,Without i-stop	T0104ARX	0.4	
FUSE BLOCK OR PASSENGER JUNCTION BOX, R&R	Fuse block,With i-stop	T0104BRX	0.5	
FUSE BLOCK COVER, R&R		T0105XRX	0.2	
MAIN FUSE BLOCK, R&R	[SKYACTIV-G 2.0,Without Coolant Control Valve,Without Cylinder Deactivation,PCM cover with standard bolts,Without i-stop]/[SKYACTIV-G 2.0,With Coolant Control Valve,Without Cylinder Deactivation,PCM cover with standard bolts,Without i-stop]/[SKYACTIV-G 2.5,Without Coolant Control Valve,Without Cylinder Deactivation,PCM cover with standard bolts,Without i-stop]/[SKYACTIV-G 2.5,With Coolant Control Valve,Without Cylinder Deactivation,PCM cover with standard bolts,Without i-stop]	T0106ARX	2.7	

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
MAIN FUSE BLOCK, R&R	[SKYACTIV-G 2.0,Without Coolant Control Valve,Without Cylinder Deactivation,PCM cover with standard bolts,With i-stop]/[SKYACTIV-G 2.0,With Coolant Control Valve,Without Cylinder Deactivation,PCM cover with standard bolts,With i-stop]/[SKYACTIV-G 2.5,Without Coolant Control Valve,Without Cylinder Deactivation,PCM cover with standard bolts,With i-stop]/[SKYACTIV-G 2.5,With Coolant Control Valve,Without Cylinder Deactivation,PCM cover with standard bolts,With i-stop]	T0106BRX	2.8	
MAIN FUSE BLOCK, R&R	[SKYACTIV-G 2.0,Without Coolant Control Valve,Without Cylinder Deactivation,PCM cover with shear-off bolts,Without i-stop]/[SKYACTIV-G 2.0,With Coolant Control Valve,Without Cylinder Deactivation,PCM cover with shear-off bolts,Without i-stop]/[SKYACTIV-G 2.5,Without Coolant Control Valve,Without Cylinder Deactivation,PCM cover with shear-off bolts,Without i-stop]/[SKYACTIV-G 2.5,With Coolant Control Valve,Without Cylinder Deactivation,PCM cover with shear-off bolts,Without i-stop]	T0106CRX	2.8	

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
MAIN FUSE BLOCK, R&R	[SKYACTIV-G 2.0,Without Coolant Control Valve,Without Cylinder Deactivation,PCM cover with shear-off bolts,With i-stop]/[SKYACTIV-G 2.0,With Coolant Control Valve,Without Cylinder Deactivation,PCM cover with shear-off bolts,With i-stop]/[SKYACTIV-G 2.5,Without Coolant Control Valve,Without Cylinder Deactivation,PCM cover with shear-off bolts,With i-stop]/[SKYACTIV-G 2.5,With Coolant Control Valve,Without Cylinder Deactivation,PCM cover with shear-off bolts,With i-stop]	T0106DRX	2.9	
MAIN FUSE BLOCK, R&R	[SKYACTIV-G 2.0,With Coolant Control Valve,With Cylinder Deactivation,PCM cover with standard bolts]/[SKYACTIV-G 2.5,With Coolant Control Valve,With Cylinder Deactivation,PCM cover with standard bolts]	T0106FRX	2.8	
MAIN FUSE BLOCK, R&R	[SKYACTIV-G 2.0,With Coolant Control Valve,With Cylinder Deactivation,PCM cover with shear-off bolts]/[SKYACTIV-G 2.5,With Coolant Control Valve,With Cylinder Deactivation,PCM cover with shear-off bolts]	T0106GRX	2.9	
MAIN FUSE BLOCK, R&R	SKYACTIV-G 2.5T,Without i-stop	T0106HRX	2.6	
MAIN FUSE BLOCK, R&R	SKYACTIV-G 2.5T,With i-stop	T0106JRX	2.7	

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
MAIN FUSE BLOCK, R&R	[SKYACTIV-D 2.2,Fuel injector (2pin type)]/[SKYACTIV-D 2.2,Fuel injector (6pin type),Without SCR system]/[SKYACTIV-D 2.2,Fuel injector (6pin type),With SCR system]	T0106ERX	2.7	
MAIN FUSE BLOCK COVER, R&R		T0107XRX	0.2	
BODY CONTROL MODULE [BCM], R&R	Front body control module (FBCM),Without i-stop	T0108ARX	0.2	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	Front body control module (FBCM),With i-stop	T0108BRX	0.3	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	Rear body control module (RBCM),Without i-stop	T0108CRX	0.4	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	Rear body control module (RBCM),With i-stop	T0108DRX	0.5	◆Body control module [BCM] configuration
BACKUP POWER SUPPLY, R&R	Without i-stop	T0116ARX	0.4	
BACKUP POWER SUPPLY, R&R	With i-stop	T0116BRX	0.5	
WIRELESS CHARGER, R&R		T0118XRX	0.3	
T02 SWITCHES				
HAZARD SWITCH, R&R	Without i-stop	T0204ARX	0.2	
HAZARD SWITCH, R&R	With i-stop	T0204BRX	0.3	
CIGAR LIGHTER, R&R	Front accessory socket	T0206ARX	0.3	
CIGAR LIGHTER, R&R	Center accessory socket,Without i-stop	T0206BRX	0.2	
CIGAR LIGHTER, R&R	Center accessory socket,With i-stop	T0206CRX	0.3	
CIGAR LIGHTER, R&R	Rear accessory socket,Without i-stop	T0206DRX	0.4	
CIGAR LIGHTER, R&R	Rear accessory socket,With i-stop	T0206ERX	0.5	
POWER WINDOW SWITCH, R&R	Front,One side	T0207ARX	0.3	◆Door trim (S1026), R&R
POWER WINDOW SWITCH, R&R	Front,Both sides,Without i-stop	T0207BRX	0.4	◆Door trim (S1026), R&R
POWER WINDOW SWITCH, R&R	Front,Both sides,With i-stop	T0207CRX	0.5	◆Door trim (S1026), R&R
POWER WINDOW SWITCH, R&R	Rear,One side	T0207DRX	0.3	◆Door trim (S1125), R&R
POWER WINDOW SWITCH, R&R	Rear,Both sides	T0207ERX	0.4	◆Door trim (S1125), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
REMOTE CONTROL MIRROR SWITCH, R&R	Without i-stop	T0209ARX	0.3	◆Door trim (S1026), R&R
REMOTE CONTROL MIRROR SWITCH, R&R	With i-stop	T0209BRX	0.4	◆Door trim (S1026), R&R
CLOCK SPRING, R&R	Without i-stop	T0220ARX	0.3	◆Steering wheel (N0102), R&R◆ Steering column cover (S0706), R&R
CLOCK SPRING, R&R	With i-stop	T0220BRX	0.4	◆Steering wheel (N0102), R&R◆ Steering column cover (S0706), R&R
PUSH BUTTON START SWITCH, R&R	Without i-stop	T0222ARX	0.2	
PUSH BUTTON START SWITCH, R&R	With i-stop	T0222BRX	0.3	
T03 EXTERIOR LIGHTING SYSTEM				
HEADLIGHT SET, R&R	Without 360°view monitor system,One side,Without i-stop	T0301ARX	0.6	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)
HEADLIGHT SET, R&R	Without 360°view monitor system,One side,With i-stop	T0301BRX	0.7	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)
HEADLIGHT SET, R&R	Without 360°view monitor system,Both sides,Without i-stop	T0301CRX	0.7	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)
HEADLIGHT SET, R&R	Without 360°view monitor system,Both sides,With i-stop	T0301DRX	0.8	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One side,Without i-stop	T0301ERX	0.7	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One side,With i-stop	T0301FRX	0.8	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Both sides	T0301GRX	0.9	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side,Without i-stop	T0301HRX	0.8	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side,With i-stop	T0301JRX	0.9	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides	T0301KRX	1.0	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	Without 360°view monitor system,One side,Without i-stop	T0304ARX	0.6	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	Without 360°view monitor system,One side,With i-stop	T0304BRX	0.7	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	Without 360°view monitor system,Both sides,Without i-stop	T0304CRX	0.8	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	Without 360°view monitor system,Both sides,With i-stop	T0304DRX	0.9	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One side,Without i-stop	T0304ERX	0.7	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One side,With i-stop	T0304FRX	0.8	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Both sides,Without i-stop	T0304GRX	0.9	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Both sides,With i-stop	T0304HRX	1.0	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side,Without i-stop	T0304JRX	0.8	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side,With i-stop	T0304KRX	0.9	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,Without i-stop	T0304LRX	1.0	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,With i-stop	T0304MRX	1.1	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
FRONT TURN SIGNAL LIGHT BULB, R&R	One or both sides	T0317XRX	0.2	
REAR COMBINATION LIGHT SET, R&R	One side,Without i-stop	T0318ARX	0.4	
REAR COMBINATION LIGHT SET, R&R	One side,With i-stop	T0318BRX	0.5	
REAR COMBINATION LIGHT SET, R&R	Both sides	T0318CRX	0.6	
REAR COMBINATION LIGHT UNIT/LENS, R&R	One side,Without i-stop	T0319ARX	0.2	
REAR COMBINATION LIGHT UNIT/LENS, R&R	One side,With i-stop	T0319BRX	0.3	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
REAR COMBINATION LIGHT UNIT/LENS, R&R	Both sides,Without i-stop	T0319CRX	0.3	
REAR COMBINATION LIGHT UNIT/LENS, R&R	Both sides,With i-stop	T0319DRX	0.4	
REAR COMBINATION LIGHT BULB, R&R	One side,Without i-stop	T0320ARX	0.2	
REAR COMBINATION LIGHT BULB, R&R	One side,With i-stop	T0320BRX	0.3	
REAR COMBINATION LIGHT BULB, R&R	Both sides,Without i-stop	T0320CRX	0.3	
REAR COMBINATION LIGHT BULB, R&R	Both sides,With i-stop	T0320DRX	0.4	
HIGH MOUNT STOP LIGHT SET, R&R	Without i-stop	T0323ARX	0.5	◆Rear spoiler (S1903), R&R
HIGH MOUNT STOP LIGHT SET, R&R	With i-stop	T0323BRX	0.6	◆Rear spoiler (S1903), R&R
LICENSE LIGHT SET, R&R	One or both sides	T0327XRX	0.3	
LICENSE LIGHT BULB, R&R	One side	T0328ARX	0.2	
LICENSE LIGHT BULB, R&R	Both sides,Without i-stop	T0328BRX	0.2	
LICENSE LIGHT BULB, R&R	Both sides,With i-stop	T0328CRX	0.3	
BACKUP LIGHT SWITCH, R&R	[SKYACTIV-G 2.0,Without Coolant Control Valve,Without i-stop]/[SKYACTIV-G 2.0,With Coolant Control Valve,Without i-stop]/[SKYACTIV-D 2.2,Fuel injector (6pin type),With SCR system]	T0330ARX	0.3	
BACKUP LIGHT SWITCH, R&R	[SKYACTIV-G 2.0,Without Coolant Control Valve,With i-stop]/[SKYACTIV-G 2.0,With Coolant Control Valve,With i-stop]/[SKYACTIV-D 2.2,Fuel injector (2pin type)]	T0330BRX	0.4	
LIGHT SWITCH, R&R	Without i-stop	T0333ARX	0.2	◆Steering column cover (S0706), R&R
LIGHT SWITCH, R&R	With i-stop	T0333BRX	0.3	◆Steering column cover (S0706), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
LIFTGATE LIGHT SET, R&R	Without 360°view monitor system,One side	T0339ARX	0.7	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	Without 360°view monitor system,Both sides,Without i-stop	T0339BRX	0.7	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	Without 360°view monitor system,Both sides,With i-stop	T0339CRX	0.8	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One side	T0339DRX	0.8	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Both sides,Without i-stop	T0339ERX	0.8	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Both sides,With i-stop	T0339FRX	0.9	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side	T0339GRX	0.9	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,Without i-stop	T0339HRX	0.9	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,With i-stop	T0339JRX	1.0	◆Rear finisher (S0414), R&R
FRONT FOG LIGHT SET, R&R	One side,Without i-stop	T0341ARX	0.4	◆Front fog light, Aiming
FRONT FOG LIGHT SET, R&R	One side,With i-stop	T0341BRX	0.5	◆Front fog light, Aiming
FRONT FOG LIGHT SET, R&R	Both sides	T0341CRX	0.7	◆Front fog light, Aiming

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
SIDE TURN SIGNAL LIGHT SET, R&R	Without side camera,One side	T0345ARX	0.3	
SIDE TURN SIGNAL LIGHT SET, R&R	Without side camera,Both sides	T0345DRX	0.4	
SIDE TURN SIGNAL LIGHT SET, R&R	With side camera,Without 360°view monitor system,One side,Without i-stop	T0345BRX	0.5	◆Side camera, Aiming
SIDE TURN SIGNAL LIGHT SET, R&R	With side camera,Without 360°view monitor system,One side,With i-stop	T0345CRX	0.6	◆Side camera, Aiming
SIDE TURN SIGNAL LIGHT SET, R&R	With side camera,Without 360°view monitor system,Both sides	T0345ERX	0.7	◆Side camera, Aiming
SIDE TURN SIGNAL LIGHT SET, R&R	With side camera,With 360°view monitor system,360°view monitor system screen display verification only,One side,Without i-stop	T0345FRX	0.4	
SIDE TURN SIGNAL LIGHT SET, R&R	With side camera,With 360°view monitor system,360°view monitor system screen display verification only,One side,With i-stop	T0345GRX	0.5	
SIDE TURN SIGNAL LIGHT SET, R&R	With side camera,With 360°view monitor system,360°view monitor system screen display verification only,Both sides,Without i-stop	T0345HRX	0.5	
SIDE TURN SIGNAL LIGHT SET, R&R	With side camera,With 360°view monitor system,360°view monitor system screen display verification only,Both sides,With i-stop	T0345JRX	0.6	

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
SIDE TURN SIGNAL LIGHT SET, R&R	With side camera,With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side	T0345KRX	0.6	
SIDE TURN SIGNAL LIGHT SET, R&R	With side camera,With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,Without i-stop	T0345LRX	0.8	
SIDE TURN SIGNAL LIGHT SET, R&R	With side camera,With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,With i-stop	T0345MRX	0.9	
FRONT POSITION LIGHT BULB, R&R	Parking light bulb,One or both sides	T0351ARX	0.2	
FRONT POSITION LIGHT BULB, R&R	Running light bulb,One or both sides,Without i-stop	T0351BRX	0.2	
FRONT POSITION LIGHT BULB, R&R	Running light bulb,One or both sides,With i-stop	T0351CRX	0.3	
HEADLIGHT AUTO LEVELING CONTROL MODULE, R&R		T0355XRX	0.3	
T04 INTERIOR LIGHTING SYSTEM				
INTERIOR LAMP ASSEMBLY, R&R		T0401XRX	1.3	◆Headliner (S1701), D&C
INTERIOR LAMP LENS, R&R		T0402XRX	0.2	
INTERIOR LAMP BULB, R&R		T0403XRX	0.2	
OVERHEAD CONSOLE, R&R	Without intruder sensor	T0410ARX	0.2	
OVERHEAD CONSOLE, R&R	With intruder sensor,Without i-stop	T0410BRX	0.2	
OVERHEAD CONSOLE, R&R	With intruder sensor,With i-stop	T0410CRX	0.3	
OVERHEAD CONSOLE ROOM, LAMP LENS/BULB, R&R		T0411XRX	0.2	

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
GLOVE BOX LAMP LENS AND/OR BULB, R&R		T0415XRX	0.2	
LIFTGATE LAMP ASSEMBLY, R&R		T0421XRX	0.2	
LIFTGATE LAMP LENS, R&R		T0422XRX	0.2	
LIFTGATE LAMP BULB, R&R		T0423XRX	0.2	
T05 WARNING SYSTEM				
OIL LEVEL SENSOR, R&R	Without i-stop	T0502ARX	0.5	
OIL LEVEL SENSOR, R&R	With i-stop	T0502BRX	0.6	
OIL PRESSURE SWITCH, R&R	[SKYACTIV-G 2.0,Without Coolant Control Valve,Without Cylinder Deactivation]/[SKYACTIV-G 2.5,Without Coolant Control Valve,Without Cylinder Deactivation]	T0504ARX	0.4	
OIL PRESSURE SWITCH, R&R	[SKYACTIV-G 2.0,With Coolant Control Valve,Without Cylinder Deactivation,Engine oil pressure sensor/engine oil temperature sensor]/[SKYACTIV-G 2.0,With Coolant Control Valve,With Cylinder Deactivation,Engine oil pressure sensor/engine oil temperature sensor]/[SKYACTIV-G 2.5,With Coolant Control Valve,Without Cylinder Deactivation,Engine oil pressure sensor/engine oil temperature sensor]/[SKYACTIV-G 2.5,With Coolant Control Valve,With Cylinder Deactivation,Engine oil pressure sensor/engine oil temperature sensor]	T0504DRX	0.4	
OIL PRESSURE SWITCH, R&R	SKYACTIV-G 2.5T,Engine oil pressure sensor/engine oil temperature sensor,Without i-stop	T0504ERX	0.3	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
OIL PRESSURE SWITCH, R&R	SKYACTIV-G 2.5T,Engine oil pressure sensor/engine oil temperature sensor,With i-stop	T0504FRX	0.4	
OIL PRESSURE SWITCH, R&R	SKYACTIV-D 2.2,Fuel injector (2pin type),Engine oil pressure sensor/engine oil temperature sensor,Without i-stop	T0504BRX	0.3	
OIL PRESSURE SWITCH, R&R	[SKYACTIV-D 2.2,Fuel injector (2pin type),Engine oil pressure sensor/engine oil temperature sensor,With i-stop]/[SKYACTIV-D 2.2,Fuel injector (6pin type),Without SCR system,Engine oil pressure sensor/engine oil temperature sensor]/[SKYACTIV-D 2.2,Fuel injector (6pin type),With SCR system,Engine oil pressure sensor/engine oil temperature sensor]	T0504CRX	0.4	
WASHER LEVEL WARNING SWITCH, R&R	Without 360°view monitor system	T0506XRX	0.5	◆Front bumper assembly, R&R
WASHER LEVEL WARNING SWITCH, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Without i-stop	T0506ARX	0.6	◆Front bumper assembly, R&R
WASHER LEVEL WARNING SWITCH, R&R	With 360°view monitor system,360°view monitor system screen display verification only,With i-stop	T0506BRX	0.7	◆Front bumper assembly, R&R
WASHER LEVEL WARNING SWITCH, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Without i-stop	T0506CRX	0.7	◆Front bumper assembly, R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
WASHER LEVEL WARNING SWITCH, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,With i-stop	T0506DRX	0.8	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Front camera,360°view monitor system screen display verification only,Without i-stop	T0512JRX	0.6	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Front camera,360°view monitor system screen display verification only,With i-stop	T0512KRX	0.7	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Front camera,360°view monitor system screen display verification and 360°view monitor system aiming,Without i-stop	T0512LRX	0.7	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Front camera,360°view monitor system screen display verification and 360°view monitor system aiming,With i-stop	T0512MRX	0.8	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Side camera,Without 360°view monitor system,Without i-stop	T0512ARX	0.5	◆Side camera, Aiming
PARKING ASSIST SYSTEM, R&R	Side camera,Without 360°view monitor system,With i-stop	T0512BRX	0.6	◆Side camera, Aiming
PARKING ASSIST SYSTEM, R&R	Side camera,With 360°view monitor system,360°view monitor system screen display verification only,One side,Without i-stop	T0512NRX	0.4	
PARKING ASSIST SYSTEM, R&R	Side camera,With 360°view monitor system,360°view monitor system screen display verification only,One side,With i-stop	T0512PRX	0.5	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
PARKING ASSIST SYSTEM, R&R	Side camera,With 360°view monitor system,360°view monitor system screen display verification only,Both sides,Without i-stop	T0512QRX	0.5	
PARKING ASSIST SYSTEM, R&R	Side camera,With 360°view monitor system,360°view monitor system screen display verification only,Both sides,With i-stop	T0512RRX	0.6	
PARKING ASSIST SYSTEM, R&R	Side camera,With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side	T0512SRX	0.6	
PARKING ASSIST SYSTEM, R&R	Side camera,With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,Without i-stop	T0512TRX	0.8	
PARKING ASSIST SYSTEM, R&R	Side camera,With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,With i-stop	T0512URX	0.9	
PARKING ASSIST SYSTEM, R&R	Rear mount camera,Without 360°view monitor system,Fixed assist lines display type,Without i-stop	T0512CRX	0.5	
PARKING ASSIST SYSTEM, R&R	Rear mount camera,Without 360°view monitor system,Fixed assist lines display type,With i-stop	T0512DRX	0.6	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
PARKING ASSIST SYSTEM, R&R	Rear mount camera,Without 360°view monitor system,Predicted vehicle path assist lines display type	T0512ERX	0.6	
PARKING ASSIST SYSTEM, R&R	Rear mount camera,With 360°view monitor system,360°view monitor system screen display verification only,Without i-stop	T0512VRX	0.6	
PARKING ASSIST SYSTEM, R&R	Rear mount camera,With 360°view monitor system,360°view monitor system screen display verification only,With i-stop	T0512WRX	0.7	
PARKING ASSIST SYSTEM, R&R	Rear mount camera,With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Without i-stop	T0512YRX	0.7	
PARKING ASSIST SYSTEM, R&R	Rear mount camera,With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,With i-stop	T0512ZRX	0.8	
PARKING ASSIST SYSTEM, R&R	360°view monitor control module,Without i-stop	T05121RX	0.8	◆360°view monitor system aiming◆ 360°view monitor system screen display verification
PARKING ASSIST SYSTEM, R&R	360°view monitor control module,With i-stop	T05122RX	0.9	◆360°view monitor system aiming◆ 360°view monitor system screen display verification
PARKING ASSIST SYSTEM, R&R	Monitor switch,Without i-stop	T0512FRX	0.2	
PARKING ASSIST SYSTEM, R&R	Monitor switch,With i-stop	T0512GRX	0.3	
PARKING ASSIST SYSTEM, R&R	Parking assist unit (Optical)	T0512HRX	0.6	
BLIND SPOT MONITORING [BSM], R&R	Blind spot monitoring (BSM) control module,One side,Without i-stop	T0513ARX	0.9	◆Rear bumper assembly, R&R◆Blind spot monitoring [BSM] radar test

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
BLIND SPOT MONITORING [BSM], R&R	Blind spot monitoring (BSM) control module,One side,With i-stop	T0513BRX	1.0	◆Rear bumper assembly, R&R◆Blind spot monitoring [BSM] radar test
BLIND SPOT MONITORING [BSM], R&R	Blind spot monitoring (BSM) control module,Both sides	T0513CRX	1.0	◆Rear bumper assembly, R&R◆Blind spot monitoring [BSM] radar test
PARKING SENSOR CONTROL MODULE, R&R	Parking assist unit (Ultra sonic),Without i-stop	T0514ARX	0.2	
PARKING SENSOR CONTROL MODULE, R&R	Parking assist unit (Ultra sonic),With i-stop	T0514BRX	0.3	
PARKING SENSOR BUZZER, R&R	Front,Without i-stop	T0516ARX	0.2	
PARKING SENSOR BUZZER, R&R	Front,With i-stop	T0516BRX	0.3	
PARKING SENSOR BUZZER, R&R	Rear	T0516CRX	0.3	
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,One,Without i-stop	T0517ARX	0.4	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,One,With i-stop	T0517BRX	0.5	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,Two	T0517CRX	0.5	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,Three	T0517DRX	0.5	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,All,Without i-stop	T0517ERX	0.5	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,All,With i-stop	T0517FRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,One	T0517GRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,Two,Without i-stop	T0517HRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,Two,With i-stop	T0517JRX	0.7	◆Front bumper assembly, R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,Three,Without i-stop	T0517KRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,Three,With i-stop	T0517LRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,All,Without i-stop	T0517MRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,All,With i-stop	T0517NRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One	T0517PRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Two	T0517QRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Three,Without i-stop	T0517RRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Three,With i-stop	T0517SRX	0.8	◆Front bumper assembly, R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,All,Without i-stop	T0517TRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,All,With i-stop	T0517URX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	One	T0518ARX	0.6	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	Two	T0518BRX	0.6	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	Three,Without i-stop	T0518CRX	0.6	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	Three,With i-stop	T0518DRX	0.7	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	All,Without i-stop	T0518ERX	0.6	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	All,With i-stop	T0518FRX	0.7	◆Rear bumper assembly, R&R
FORWARD SENSING CAMERA [FSC], R&R	Without i-stop	T0520ARX	0.4	◆Forward sensing camera [FSC], Aiming
FORWARD SENSING CAMERA [FSC], R&R	With i-stop	T0520BRX	0.5	◆Forward sensing camera [FSC], Aiming
LANE DEPARTURE WARNING SYSTEM [LDWS] SWITCH, R&R	Without i-stop	T0521ARX	0.2	
LANE DEPARTURE WARNING SYSTEM [LDWS] SWITCH, R&R	With i-stop	T0521BRX	0.3	
MAZDA ERA-GLONASS RELATED PARTS, R&R	MAZDA ERA-GLONASS control module,Without i-stop	T0523ARX	0.6	◆Rear console (S0803), R&R
MAZDA ERA-GLONASS RELATED PARTS, R&R	MAZDA ERA-GLONASS control module,With i-stop	T0523BRX	0.7	◆Rear console (S0803), R&R
MAZDA ERA-GLONASS RELATED PARTS, R&R	TEL antenna,Without i-stop	T0523CRX	0.2	
MAZDA ERA-GLONASS RELATED PARTS, R&R	TEL antenna,With i-stop	T0523DRX	0.3	
MAZDA ERA-GLONASS RELATED PARTS, R&R	MAZDA ERA-GLONASS speaker,Without i-stop	T0523ERX	0.2	
MAZDA ERA-GLONASS RELATED PARTS, R&R	MAZDA ERA-GLONASS speaker,With i-stop	T0523FRX	0.3	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
MAZDA ERA-GLONASS RELATED PARTS, R&R	MAZDA ERA-GLONASS control module battery, Without i-stop	T0523GRX	0.5	◆Rear console (S0803), R&R
MAZDA ERA-GLONASS RELATED PARTS, R&R	MAZDA ERA-GLONASS control module battery, With i-stop, Type A	T0523HRX	0.5	◆Rear console (S0803), R&R
MAZDA ERA-GLONASS RELATED PARTS, R&R	MAZDA ERA-GLONASS control module battery, With i-stop, Type B	T0523JRX	0.6	◆Rear console (S0803), R&R
MAZDA ERA-GLONASS RELATED PARTS, R&R	Emergency call microphone, Without i-stop	T0523KRX	0.2	
MAZDA ERA-GLONASS RELATED PARTS, R&R	Emergency call microphone, With i-stop	T0523LRX	0.3	
TELEMATICS COMMUNICATION UNIT/EMERGENCY CALL UNIT, R&R	Telematics communication unit	T0524ARX	0.6	◆Rear console (S0803), R&R
TELEMATICS COMMUNICATION UNIT/EMERGENCY CALL UNIT, R&R	TEL antenna No.1	T0524BRX	0.3	
TELEMATICS COMMUNICATION UNIT/EMERGENCY CALL UNIT, R&R	TEL antenna No.2	T0524CRX	0.4	
T06 INSTRUMENT CLUSTER (METER)				
METER SET HOOD, R&R	No.1	T0602ARX	0.3	
METER SET HOOD, R&R	No.2, Without i-stop	T0602BRX	0.3	
METER SET HOOD, R&R	No.2, With i-stop	T0602CRX	0.4	
METER SET AND/OR CENTRAL PROCESSING UNIT [CPU], R&R	Without wheel unit (TPMS)	T0603ARX	0.4	◆Meter set hood (T0602), R&R
METER SET AND/OR CENTRAL PROCESSING UNIT [CPU], R&R	With wheel unit (TPMS), Without i-stop	T0603BRX	0.5	◆Meter set hood (T0602), R&R
METER SET AND/OR CENTRAL PROCESSING UNIT [CPU], R&R	With wheel unit (TPMS), With i-stop	T0603CRX	0.6	◆Meter set hood (T0602), R&R
FRONT LENS [WINDOW PLATE], R&R	Without i-stop	T0606ARX	0.3	◆Meter set assembly, R&R
FRONT LENS [WINDOW PLATE], R&R	With i-stop	T0606BRX	0.4	◆Meter set assembly, R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
FUEL TANK GAUGE UNIT, R&R	[SKYACTIV-G 2.0,Without Coolant Control Valve,Without Cylinder Deactivation,2WD]/[SKYACTIV-G 2.0,With Coolant Control Valve,Without Cylinder Deactivation,2WD]/[SKYACTIV-G 2.0,With Coolant Control Valve,With Cylinder Deactivation,2WD]/[SKYACTIV-G 2.5,Without Coolant Control Valve,Without Cylinder Deactivation,2WD]/[SKYACTIV-G 2.5,With Coolant Control Valve,Without Cylinder Deactivation,2WD]/[SKYACTIV-G 2.5,With Coolant Control Valve,With Cylinder Deactivation,2WD]	T0619ARX	0.8	◆Fuel pump assembly, R&R
FUEL TANK GAUGE UNIT, R&R	[SKYACTIV-G 2.0,Without Coolant Control Valve,Without Cylinder Deactivation,4WD,Main gauge unit]/[SKYACTIV-G 2.0,With Coolant Control Valve,Without Cylinder Deactivation,4WD,Main gauge unit]/[SKYACTIV-G 2.0,With Coolant Control Valve,With Cylinder Deactivation,4WD,Main gauge unit]/[SKYACTIV-G 2.5,Without Coolant Control Valve,Without Cylinder Deactivation,4WD,Main gauge unit]/[SKYACTIV-G 2.5,With Coolant Control Valve,Without Cylinder Deactivation,4WD,Main gauge unit]/[SKYACTIV-G 2.5,With Coolant Control Valve,With Cylinder Deactivation,4WD,Main gauge unit]	T0619BRX	0.8	◆Fuel pump assembly, R&R

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
FUEL TANK GAUGE UNIT, R&R	[SKYACTIV-G 2.0,Without Coolant Control Valve,Without Cylinder Deactivation,4WD,Sub gauge unit,Without i-stop]/[SKYACTIV-G 2.0,With Coolant Control Valve,Without Cylinder Deactivation,4WD,Sub gauge unit,Without i-stop]/[SKYACTIV-G 2.5,Without Coolant Control Valve,Without Cylinder Deactivation,4WD,Sub gauge unit,Without i-stop]/[SKYACTIV-G 2.5,With Coolant Control Valve,Without Cylinder Deactivation,4WD,Sub gauge unit,Without i-stop]	T0619CRX	0.7	
FUEL TANK GAUGE UNIT, R&R	[SKYACTIV-G 2.0,Without Coolant Control Valve,Without Cylinder Deactivation,4WD,Sub gauge unit,With i-stop]/[SKYACTIV-G 2.0,With Coolant Control Valve,Without Cylinder Deactivation,4WD,Sub gauge unit,With i-stop]/[SKYACTIV-G 2.0,With Coolant Control Valve,With Cylinder Deactivation,4WD,Sub gauge unit,With i-stop]/[SKYACTIV-G 2.5,Without Coolant Control Valve,Without Cylinder Deactivation,4WD,Sub gauge unit,With i-stop]/[SKYACTIV-G 2.5,With Coolant Control Valve,Without Cylinder Deactivation,4WD,Sub gauge unit,With i-stop]/[SKYACTIV-G 2.5,With Coolant Control Valve,With Cylinder Deactivation,4WD,Sub gauge unit]	T0619DRX	0.8	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
FUEL TANK GAUGE UNIT, R&R	SKYACTIV-G 2.5T,2WD	T0619LRX	0.8	◆Fuel pump assembly, R&R
FUEL TANK GAUGE UNIT, R&R	SKYACTIV-G 2.5T,4WD,Main gauge unit	T0619HRX	0.8	◆Fuel pump assembly, R&R
FUEL TANK GAUGE UNIT, R&R	SKYACTIV-G 2.5T,4WD,Sub gauge unit,Without i-stop	T0619JRX	0.7	
FUEL TANK GAUGE UNIT, R&R	SKYACTIV-G 2.5T,4WD,Sub gauge unit,With i-stop	T0619KRX	0.8	
FUEL TANK GAUGE UNIT, R&R	[SKYACTIV-D 2.2,Fuel injector (2pin type),2WD]/[SKYACTIV-D 2.2,Fuel injector (6pin type),Without SCR system,2WD]/[SKYACTIV-D 2.2,Fuel injector (6pin type),With SCR system,2WD]	T0619ERX	0.8	
FUEL TANK GAUGE UNIT, R&R	[SKYACTIV-D 2.2,Fuel injector (2pin type),4WD,Main gauge unit]/[SKYACTIV-D 2.2,Fuel injector (6pin type),Without SCR system,4WD,Main gauge unit]/[SKYACTIV-D 2.2,Fuel injector (6pin type),With SCR system,4WD,Main gauge unit]	T0619FRX	0.8	
FUEL TANK GAUGE UNIT, R&R	[SKYACTIV-D 2.2,Fuel injector (2pin type),4WD,Sub gauge unit]/[SKYACTIV-D 2.2,Fuel injector (6pin type),Without SCR system,4WD,Sub gauge unit]/[SKYACTIV-D 2.2,Fuel injector (6pin type),With SCR system,4WD,Sub gauge unit]	T0619GRX	0.7	
ACTIVE DRIVING DISPLAY, R&R	Windshield type,Display assembly	T0626ARX	0.4	◆Meter set hood (T0602), R&R
ACTIVE DRIVING DISPLAY, R&R	Windshield type,Lens only,Without i-stop	T0626BRX	0.4	◆Meter set hood (T0602), R&R
ACTIVE DRIVING DISPLAY, R&R	Windshield type,Lens only,With i-stop	T0626CRX	0.5	◆Meter set hood (T0602), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
ACTIVE DRIVING DISPLAY, R&R	Auto flip-up type,Display assembly	T0626DRX	0.4	◆Meter set hood (T0602), R&R
ACTIVE DRIVING DISPLAY, R&R	Auto flip-up type,Combiner only,Without i-stop	T0626FRX	0.5	◆Meter set hood (T0602), R&R
ACTIVE DRIVING DISPLAY, R&R	Auto flip-up type,Combiner only,With i-stop	T0626ERX	0.5	◆Meter set hood (T0602), R&R
T08 AUTO CRUISE & RADAR RACONTROL SYSTEM				
AUTO CRUISE CONTROL SWITCH, R&R	Without i-stop	T0805ARX	0.2	
AUTO CRUISE CONTROL SWITCH, R&R	With i-stop	T0805BRX	0.3	
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit,Without 360°view monitor system	T0808ARX	0.8	◆Front bumper assembly, R&R◆Radar unit, Aiming
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit,With 360°view monitor system,360°view monitor system screen display verification only,Without i-stop	T0808DRX	0.8	◆Front bumper assembly, R&R◆Radar unit, Aiming
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit,With 360°view monitor system,360°view monitor system screen display verification only,With i-stop	T0808ERX	0.9	◆Front bumper assembly, R&R◆Radar unit, Aiming
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit,With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming	T0808FRX	0.9	◆Front bumper assembly, R&R◆Radar unit, Aiming
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Cruise control switch,Without i-stop	T0808BRX	0.2	
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Cruise control switch,With i-stop	T0808CRX	0.3	
ADJUSTABLE SPEED LIMITER CONTROL SWITCH, R&R	Without i-stop	T0809ARX	0.2	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
ADJUSTABLE SPEED LIMITER CONTROL SWITCH, R&R	With i-stop	T0809BRX	0.3	
T09 THEFT DETERRENT SYSTEM				
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar horn	T0901ARX	0.4	
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar siren,Without 360°view monitor system	T0901BRX	0.6	◆Front bumper assembly, R&R
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar siren,With 360° view monitor system,360°view monitor system screen display verification only,Without i-stop	T0901DRX	0.7	◆Front bumper assembly, R&R
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar siren,With 360° view monitor system,360°view monitor system screen display verification only,With i-stop	T0901ERX	0.8	◆Front bumper assembly, R&R
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar siren,With 360° view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Without i-stop	T0901FRX	0.8	◆Front bumper assembly, R&R
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar siren,With 360° view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,With i-stop	T0901GRX	0.9	◆Front bumper assembly, R&R
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Intruder sensor	T0901CRX	0.3	
T10 HORN				
HORN RELAY, R&R		T1001XRX	0.2	
HORN, R&R	Without 360°view monitor system,One,Without i-stop	T1002ARX	0.4	◆Front bumper assembly, R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
HORN, R&R	Without 360°view monitor system,One,With i-stop	T1002BRX	0.5	◆Front bumper assembly, R&R
HORN, R&R	Without 360°view monitor system,Two	T1002CRX	0.5	◆Front bumper assembly, R&R
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One	T1002DRX	0.6	◆Front bumper assembly, R&R
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Two,Without i-stop	T1002ERX	0.6	◆Front bumper assembly, R&R
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Two,With i-stop	T1002FRX	0.7	◆Front bumper assembly, R&R
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One	T1002GRX	0.7	◆Front bumper assembly, R&R
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Two	T1002HRX	0.7	◆Front bumper assembly, R&R
T11 AUDIO SYSTEM				
SPEAKER GRILLE, R&R	Tweeter speaker,One side	T1101ARX	0.2	
SPEAKER GRILLE, R&R	Tweeter speaker,Both sides	T1101BRX	0.3	
SPEAKER GRILLE, R&R	Center speaker	T1101CRX	0.2	
SPEAKER GRILLE, R&R	C pillar speaker,One side,Without i-stop	T1101DRX	0.5	◆"C" pillar trim (S1704), R&R
SPEAKER GRILLE, R&R	C pillar speaker,One side,With i-stop	T1101ERX	0.6	◆"C" pillar trim (S1704), R&R
SPEAKER GRILLE, R&R	C pillar speaker,Both sides,Without i-stop	T1101FRX	0.7	◆"C" pillar trim (S1704), R&R
SPEAKER GRILLE, R&R	C pillar speaker,Both sides,With i-stop	T1101GRX	0.8	◆"C" pillar trim (S1704), R&R
AUDIO SET, R&R		T1102XRX	0.4	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
TUNER, R&R	Tuner and amp unit (TAU),RHD	T1103ARX	0.4	
TUNER, R&R	Tuner and amp unit (TAU),LHD,Without i-stop	T1103BRX	0.3	
TUNER, R&R	Tuner and amp unit (TAU),LHD,With i-stop	T1103CRX	0.4	
TUNER, R&R	Remote tuner (RT),RHD	T1103DRX	0.5	
TUNER, R&R	Remote tuner (RT),LHD	T1103ERX	0.4	
ANTENNA, R&R	Center roof antenna	T1106XRX	1.3	◆Headliner (S1701), D&C
REAR ANTENNA FEEDER, R&R	A pillar to C pillar,Without center display,Without i-stop	T1108ARX	1.5	◆Headliner (S1701), D&C
REAR ANTENNA FEEDER, R&R	A pillar to C pillar,Without center display,With i-stop	T1108BRX	1.6	◆Headliner (S1701), D&C
REAR ANTENNA FEEDER, R&R	A pillar to C pillar,With center display,Without i-stop	T1108CRX	1.7	◆Headliner (S1701), D&C
REAR ANTENNA FEEDER, R&R	A pillar to C pillar,With center display,With i-stop	T1108DRX	1.8	◆Headliner (S1701), D&C
REAR ANTENNA FEEDER, R&R	C pillar to antenna,Without i-stop	T1108ERX	1.4	◆Headliner (S1701), D&C
REAR ANTENNA FEEDER, R&R	C pillar to antenna,With i-stop	T1108FRX	1.5	◆Headliner (S1701), D&C
FRONT ANTENNA FEEDER, R&R	RHD	T1109ARX	0.7	
FRONT ANTENNA FEEDER, R&R	LHD,Without i-stop	T1109BRX	0.6	
FRONT ANTENNA FEEDER, R&R	LHD,With i-stop	T1109CRX	0.7	
CONDENSER, R&R	Without i-stop	T1111ARX	0.7	
CONDENSER, R&R	With i-stop	T1111BRX	0.8	
CD PLAYER, R&R	Without i-stop	T1113ARX	0.4	
CD PLAYER, R&R	With i-stop	T1113BRX	0.5	
AMPLIFIER, R&R	Without i-stop	T1115ARX	0.2	
AMPLIFIER, R&R	With i-stop	T1115BRX	0.3	
CAR COMMUNICATION SYSTEM, R&R	Center display	T1117ARX	0.4	
CAR COMMUNICATION SYSTEM, R&R	Connectivity master unit (CMU)	T1117BRX	0.5	
CAR COMMUNICATION SYSTEM, R&R	Commander switch,Without i-stop	T1117CRX	0.2	
CAR COMMUNICATION SYSTEM, R&R	Commander switch,With i-stop	T1117DRX	0.3	
CAR COMMUNICATION SYSTEM, R&R	GPS antenna,Without i-stop	T1117ERX	0.3	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
CAR COMMUNICATION SYSTEM, R&R	GPS antenna,With i-stop	T1117FRX	0.4	
SPEAKER [FRONT], R&R	Center speaker,Without i-stop	T1122ARX	0.2	
SPEAKER [FRONT], R&R	Center speaker,With i-stop	T1122BRX	0.3	
SPEAKER [FRONT], R&R	Front door speaker,One side	T1122CRX	0.3	◆Door trim (S1026), R&R
SPEAKER [FRONT], R&R	Front door speaker,Both sides,Without i-stop	T1122DRX	0.4	◆Door trim (S1026), R&R
SPEAKER [FRONT], R&R	Front door speaker,Both sides,With i-stop	T1122ERX	0.5	◆Door trim (S1026), R&R
SPEAKER [REAR], R&R	Rear door speaker,One side	T1123ARX	0.3	◆Door trim (S1125), R&R
SPEAKER [REAR], R&R	Rear door speaker,Both sides,Without i-stop	T1123BRX	0.4	◆Door trim (S1125), R&R
SPEAKER [REAR], R&R	Rear door speaker,Both sides,With i-stop	T1123CRX	0.5	◆Door trim (S1125), R&R
SPEAKER [REAR], R&R	C pillar speaker,One side	T1123DRX	0.5	◆"C" pillar trim (S1704), R&R
SPEAKER [REAR], R&R	C pillar speaker,Both sides	T1123ERX	0.7	◆"C" pillar trim (S1704), R&R
SPEAKER [REAR], R&R	Bass-box,Without i-stop	T1123FRX	0.2	
SPEAKER [REAR], R&R	Bass-box,With i-stop	T1123GRX	0.3	
SPEAKER [TWEETER], R&R	One side,Without i-stop	T1124ARX	0.2	◆"A" pillar trim (S1702), R&R
SPEAKER [TWEETER], R&R	One side,With i-stop	T1124BRX	0.3	◆"A" pillar trim (S1702), R&R
SPEAKER [TWEETER], R&R	Both sides	T1124CRX	0.3	◆"A" pillar trim (S1702), R&R
INDICATOR UNIT, R&R	Without i-stop	T1125ARX	0.6	◆Rear console (S0803), R&R
INDICATOR UNIT, R&R	With i-stop	T1125BRX	0.7	◆Rear console (S0803), R&R
AUXILIARY JACK, R&R		T1128XRX	0.2	
HANDS-FREE TELEPHONE [HF/TEL] UNIT OR BLUETOOTH UNIT, R&R	Without i-stop	T1129ARX	0.2	
HANDS-FREE TELEPHONE [HF/TEL] UNIT OR BLUETOOTH UNIT, R&R	With i-stop	T1129BRX	0.3	