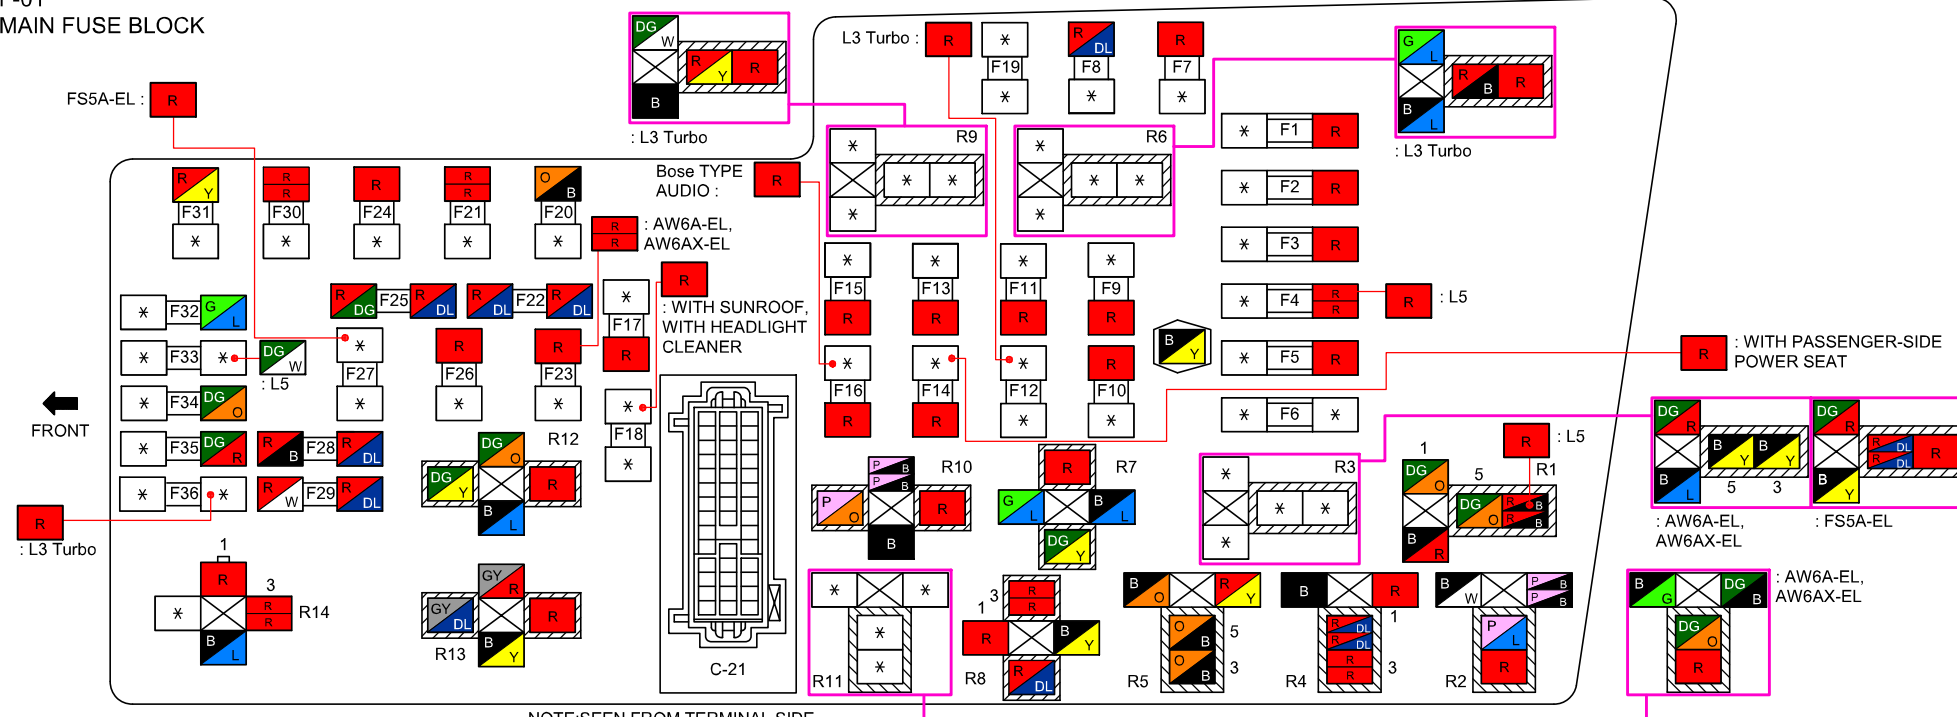


F-01
MAIN FUSE BLOCK

NOTE:SEEN FROM TERMINAL SIDE

NO.	FUSE NAME	FUSE RATING	NO.	FUSE NAME	FUSE RATING
F1	FAN 1	40A	F19	<DSC>	<7.5A>
F2	IG KEY1	40A	F20	FOG	15A
F3	FAN 2	40A	F21	STOP	10A
F4	FUEL PUMP	30A	F22	HEAD HI RH	15A
F5	BLOWER	40A	F23	TNS	15A
F6	<PCS>	<50A>	F24	HORN	20A
F7	ABS 1	40A	F25	HEAD HI LH	15A
F8	ABS 2	20A	F26	A/C	10A
F9	ENGINE	30A	F27	[TRAILER/TCM]	[20A]
F10	[P.SEAT(D)]	[30A]	F28	HEAD LO LH	15A
F11	D.LOCK	20A	F29	HEAD LO RH	15A
F12	[INJ 1]	[30A]	F30	ENG B+	25A
F13	P.WIND	30A	F31	HAZARD	10A
F14	[P.SEAT(P)]	[30A]	F32	ENG BAR 1	15A
F15	IG KEY2	40A	F33	[INJ 2]	[10A]
F16	[BOSE]	[30A]	F34	ECM	10A
F17	DEF	30A	F35	ENG BAR 2	7.5A
F18	[H/L CLEAN/ROOF]	[20A]	F36	[ETC]	[10A]

{ } NAME INDICATED ON FUSE BOX COVER &19: AW6A-EL,AW6AX-EL
 [] IF EQUIPPED <> NOT USED

NO.	RELAY NAME	NO.	RELAY NAME
R1	FUEL PUMP RELAY {CIRCUIT}	R8	HEADLIGHT RELAY {HEAD}
R2	REAR WINDOW DEFROSTER RELAY {DEF}<{ENGINE}>	R9	[FUEL INJECTOR RELAY {INJ}]
R3	STARTER RELAY NO.2 ← &19 {STARTER 2}<{AT MAIN}> AT MAIN RELAY ← FS5A-EL {AT MAIN}<{STARTER 2}>	R10	BLOWER RELAY {HEATER}
R4	TNS RELAY {TNS}	R11	[BACK-UP LIGHT RELAY {R.LAMP}]
R5	FRONT FOG LIGHT RELAY {F.FOG}	R12	COOLING FAN RELAY NO.2 {FAN 2}
R6	[FUEL PUMP SPEED CONTROL RELAY {FUEL PUMP}]	R13	STARTER RELAY NO.1 {STARTER}
R7	COOLING FAN RELAY NO.1 {FAN MAIN}	R14	MAIN RELAY {ENGINE}<{DEF}>