


F-01
MAIN FUSE BLOCK

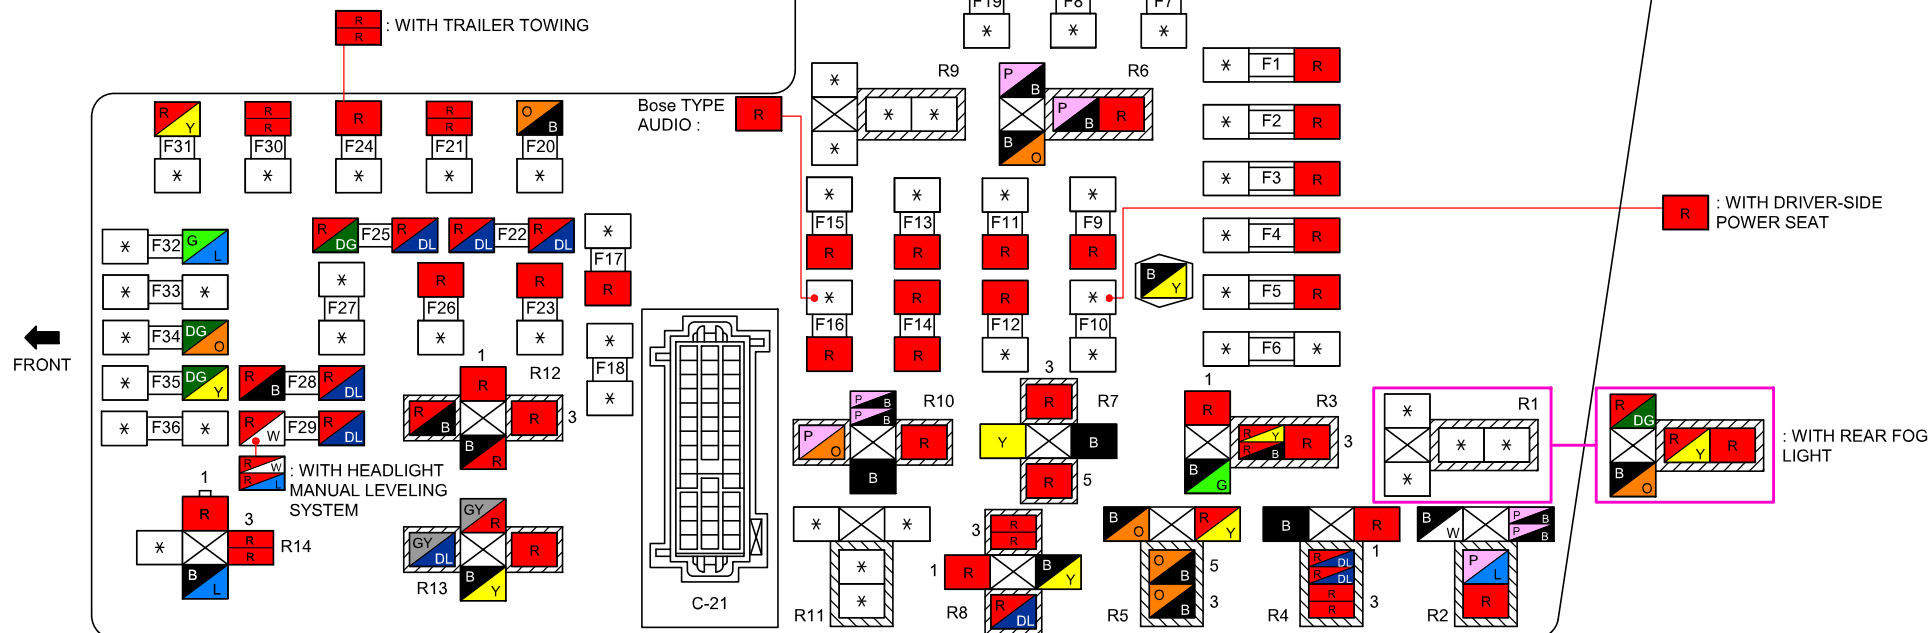

NOTE:SEEN FROM TERMINAL SIDE

| NO. | FUSE NAME | FUSE RATING | NO. | FUSE NAME | FUSE RATING |
|-----|----------------|-------------|-----|------------|-------------|
| F1 | FAN 1 | 30A | F19 | <DSC> | <7.5A> |
| F2 | IG KEY1 | 40A | F20 | F.FOG | 15A |
| F3 | FAN 2 | 30A | F21 | STOP | 10A |
| F4 | P/ST | 80A | F22 | HEAD HI RH | 15A |
| F5 | BLOWER | 40A | F23 | TNS | 15A |
| F6 | <PTC 2> | <60A> | F24 | HORN | 20A |
| F7 | ABS 1 | 40A | F25 | HEAD HI LH | 15A |
| F8 | ABS 2 | 20A | F26 | D.LOCK | 20A |
| F9 | ENGINE | 30A | F27 | <F.WARM> | <20A> |
| F10 | [P.SEAT(D)] | [30A] | F28 | HEAD LO LH | 15A |
| F11 | SCR | 40A | F29 | HEAD LO RH | 15A |
| F12 | GLOW | 30A | F30 | ENG B+ | 15A |
| F13 | P.WIND | 30A | F31 | HAZARD | 10A |
| F14 | BTN | 50A | F32 | ENG BAR 1 | 15A |
| F15 | IG KEY2 | 40A | F33 | * | * |
| F16 | [BOSE] | [30A] | F34 | ECM | 10A |
| F17 | DEF | 30A | F35 | ENG BAR 2 | 7.5A |
| F18 | <W.HEATER/PTC> | <30A> | F36 | * | * |

{ } NAME INDICATED ON FUSE BOX COVER
[] IF EQUIPPED < > NOT USED

| NO. | RELAY NAME | NO. | RELAY NAME |
|-----|--------------------------------------|-----|---------------------------------|
| R1 | [REAR FOG LIGHT RELAY {R.FOG}] | R8 | HEADLIGHT RELAY {HEAD} |
| R2 | REAR WINDOW DEFROSTER RELAY {DEF} | R9 | * |
| R3 | HORN RELAY {HORN} | R10 | BLOWER RELAY {HEATER} |
| R4 | TNS RELAY {TNS} | R11 | * <{PTC}> |
| R5 | FRONT FOG LIGHT RELAY {F.FOG} | R12 | SCR RELAY {SCR} |
| R6 | A/C RELAY {A/C} | R13 | STARTER RELAY NO.1 {STARTER} |
| R7 | GLOW PLUG RELAY {GLOW} | R14 | MAIN RELAY {ENGINE} |