 



|   |   |  |  |  |  |  |
|---|---|--|--|--|--|--|
| 0114-01<br>FUEL PUMP RESISTOR   | 0114-02<br>FUEL PUMP UNIT /<br>FUEL GAUGE SENDER<br>UNIT                            |  |  |  |  |  |
|  |  |  |  |  |  |  |
|   |   |  |  |  |  |  |

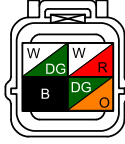