


STARTING SYSTEM (ATX)

0119-2

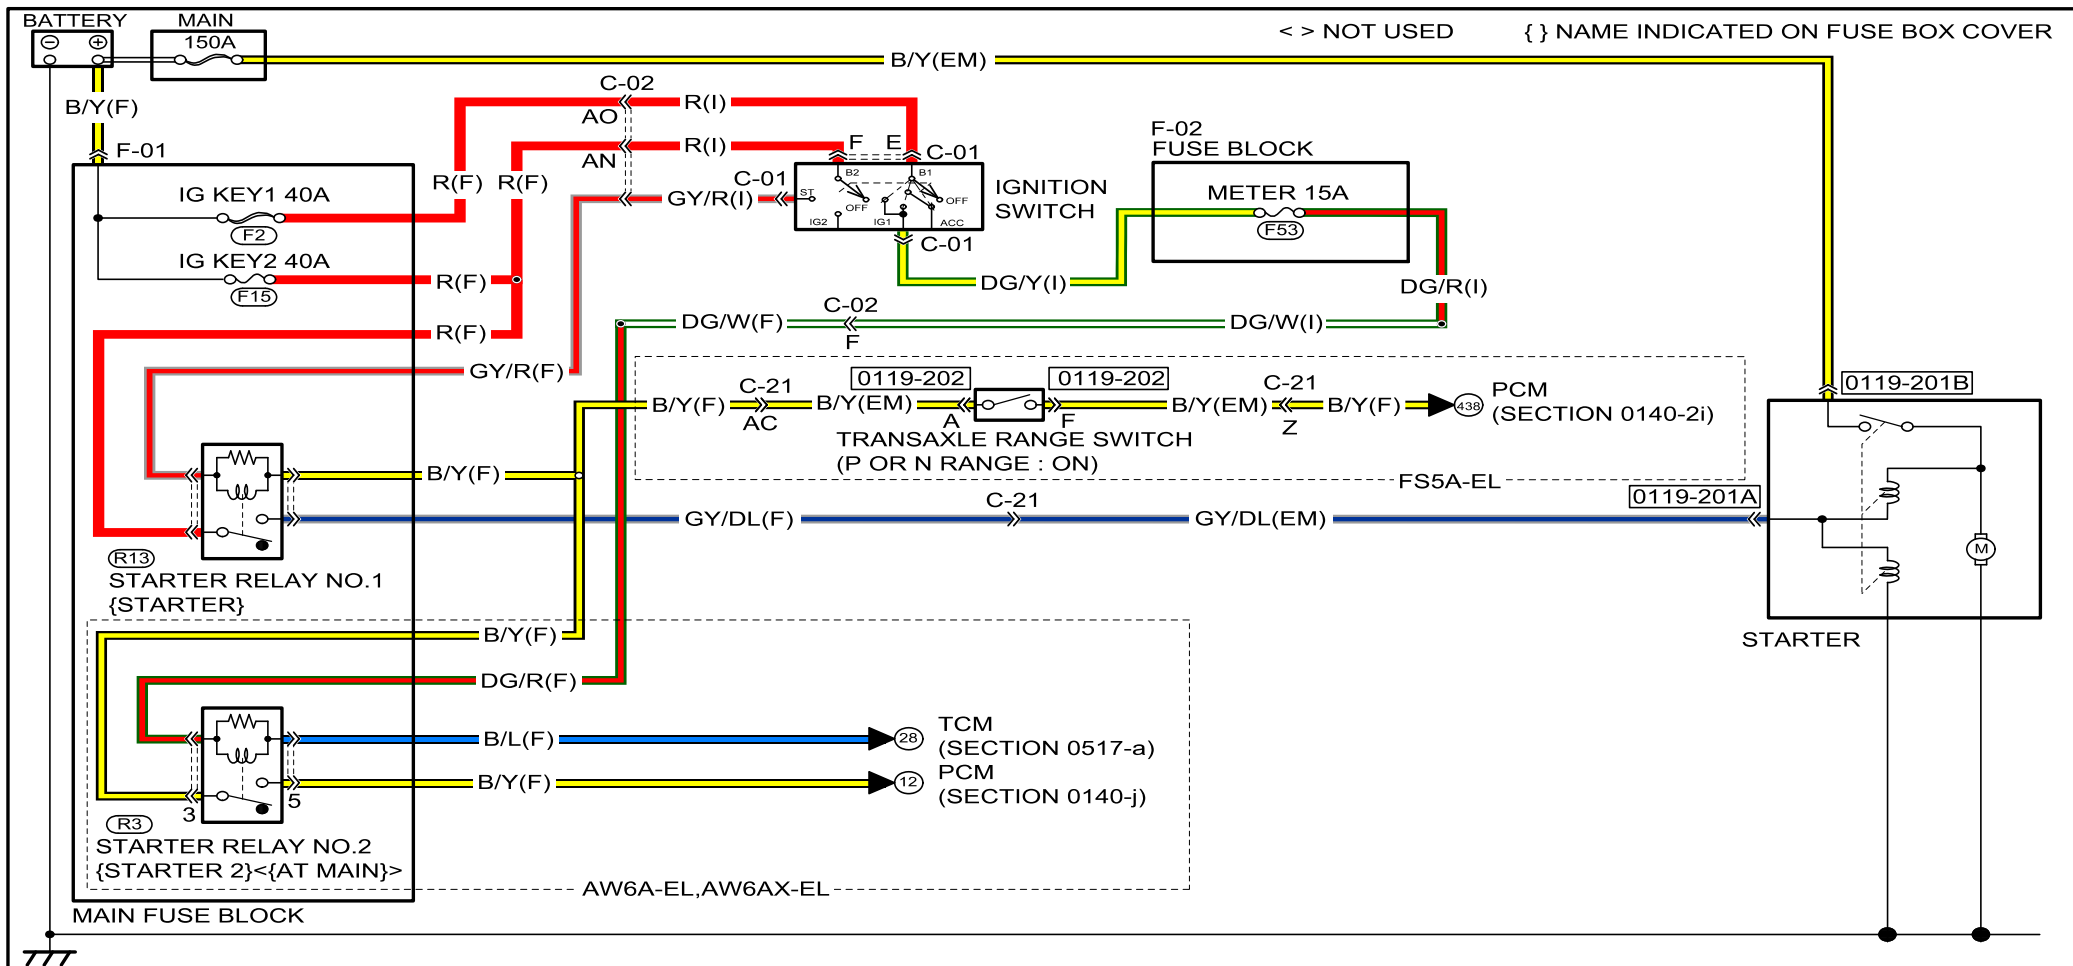

0119-201A STARTER	0119-201B STARTER	0119-202 TRANSAXLE RANGE SWITCH			

