 
 
 
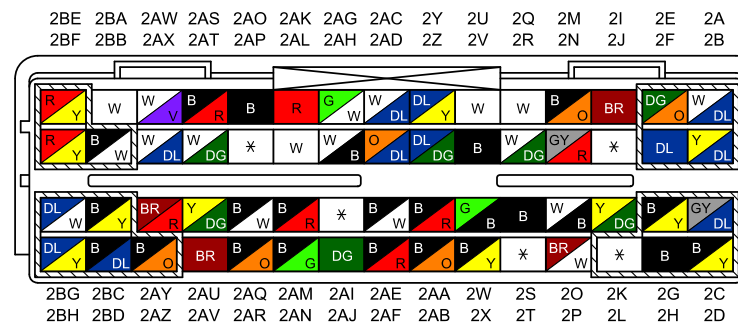 
 
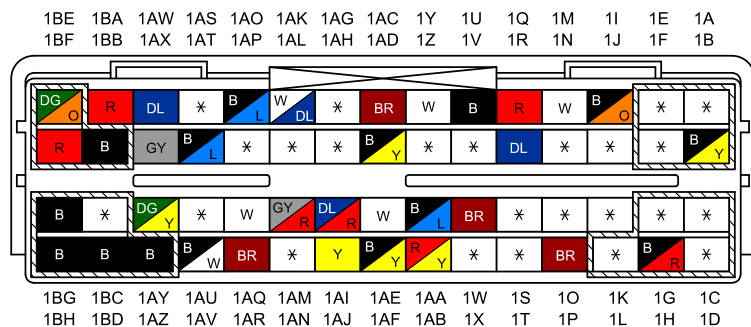 
 


CONTROL SYSTEM (L3 Turbo)

0140-a

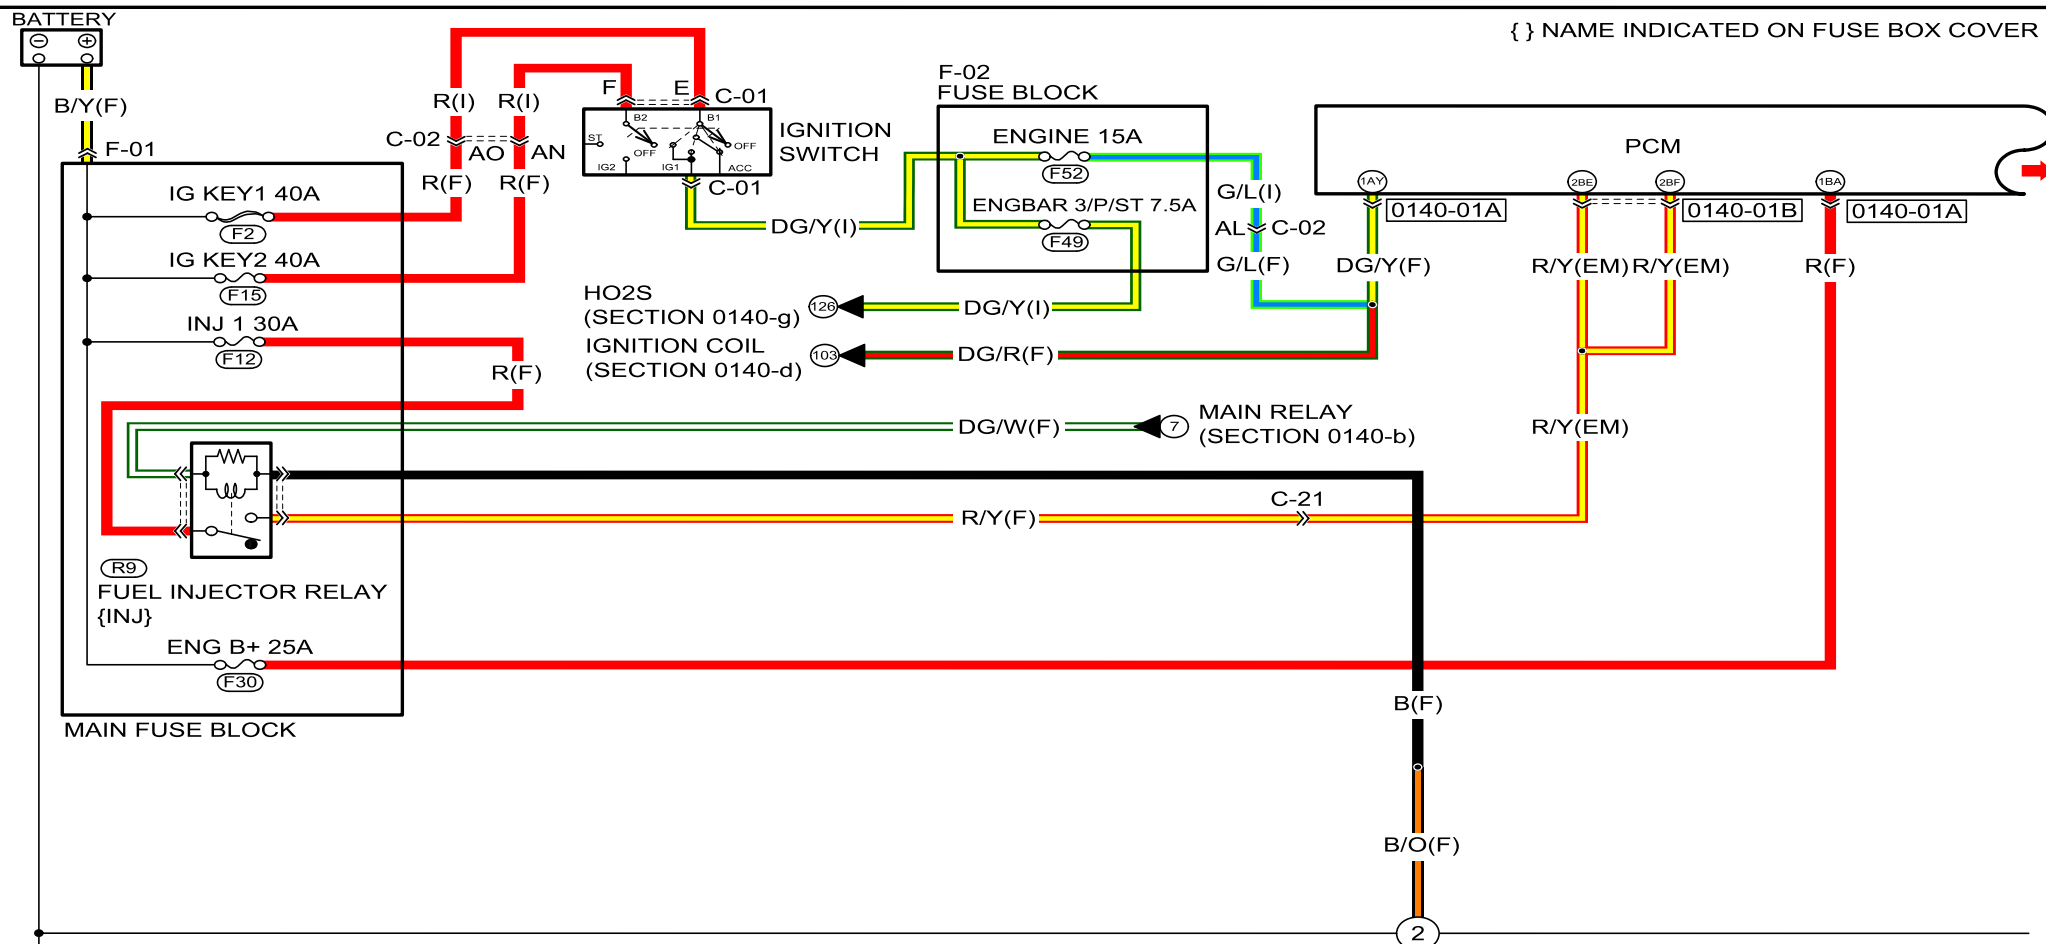 


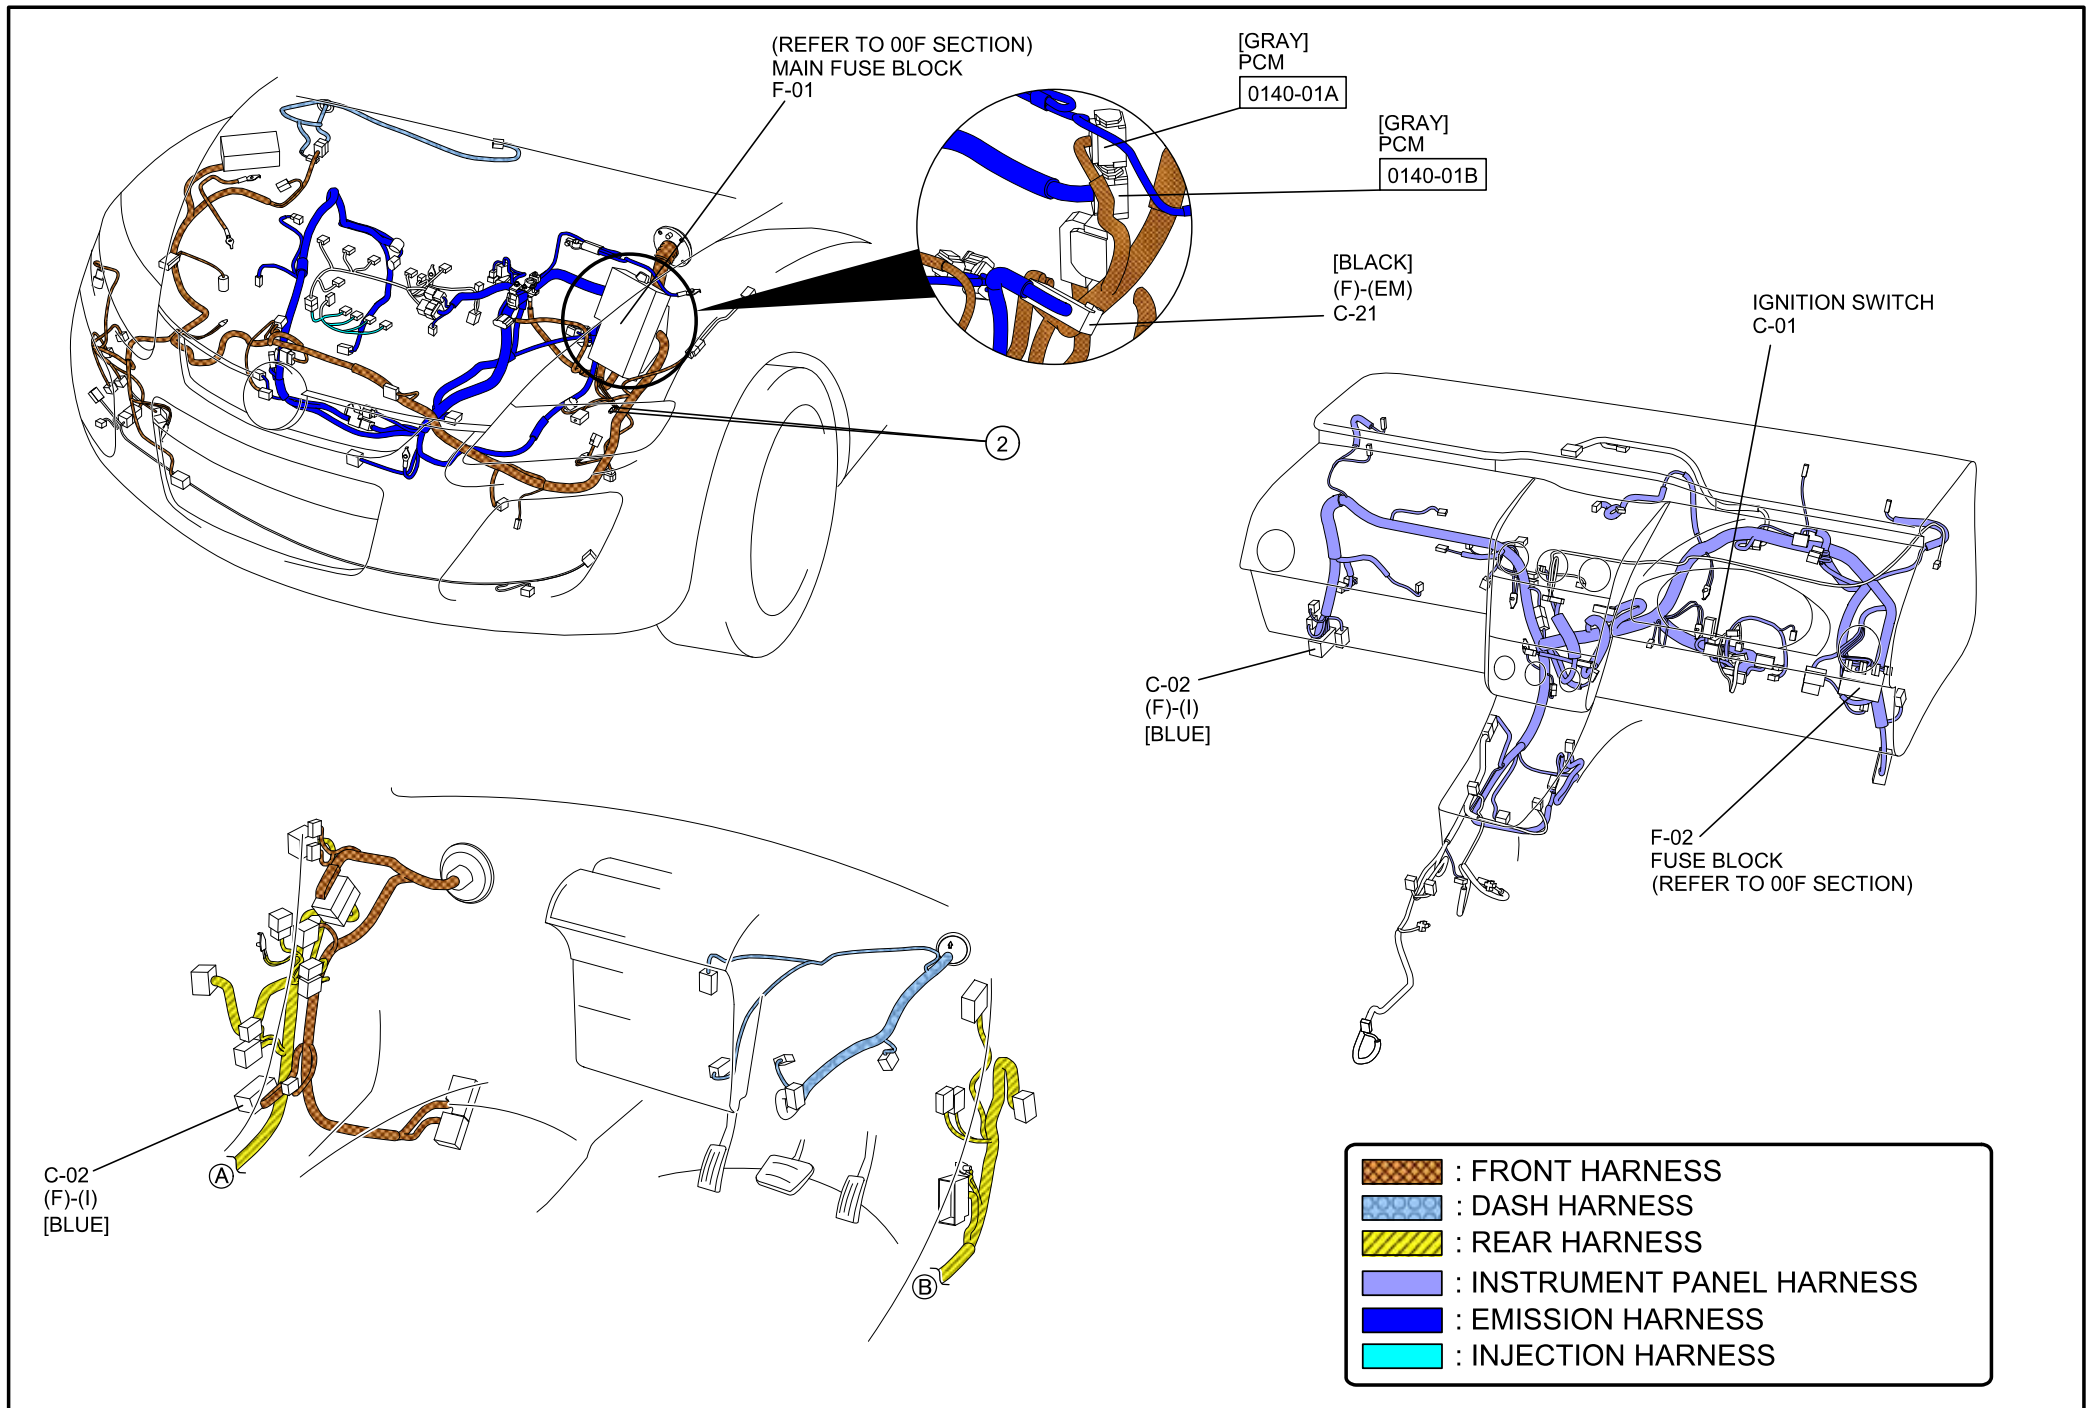

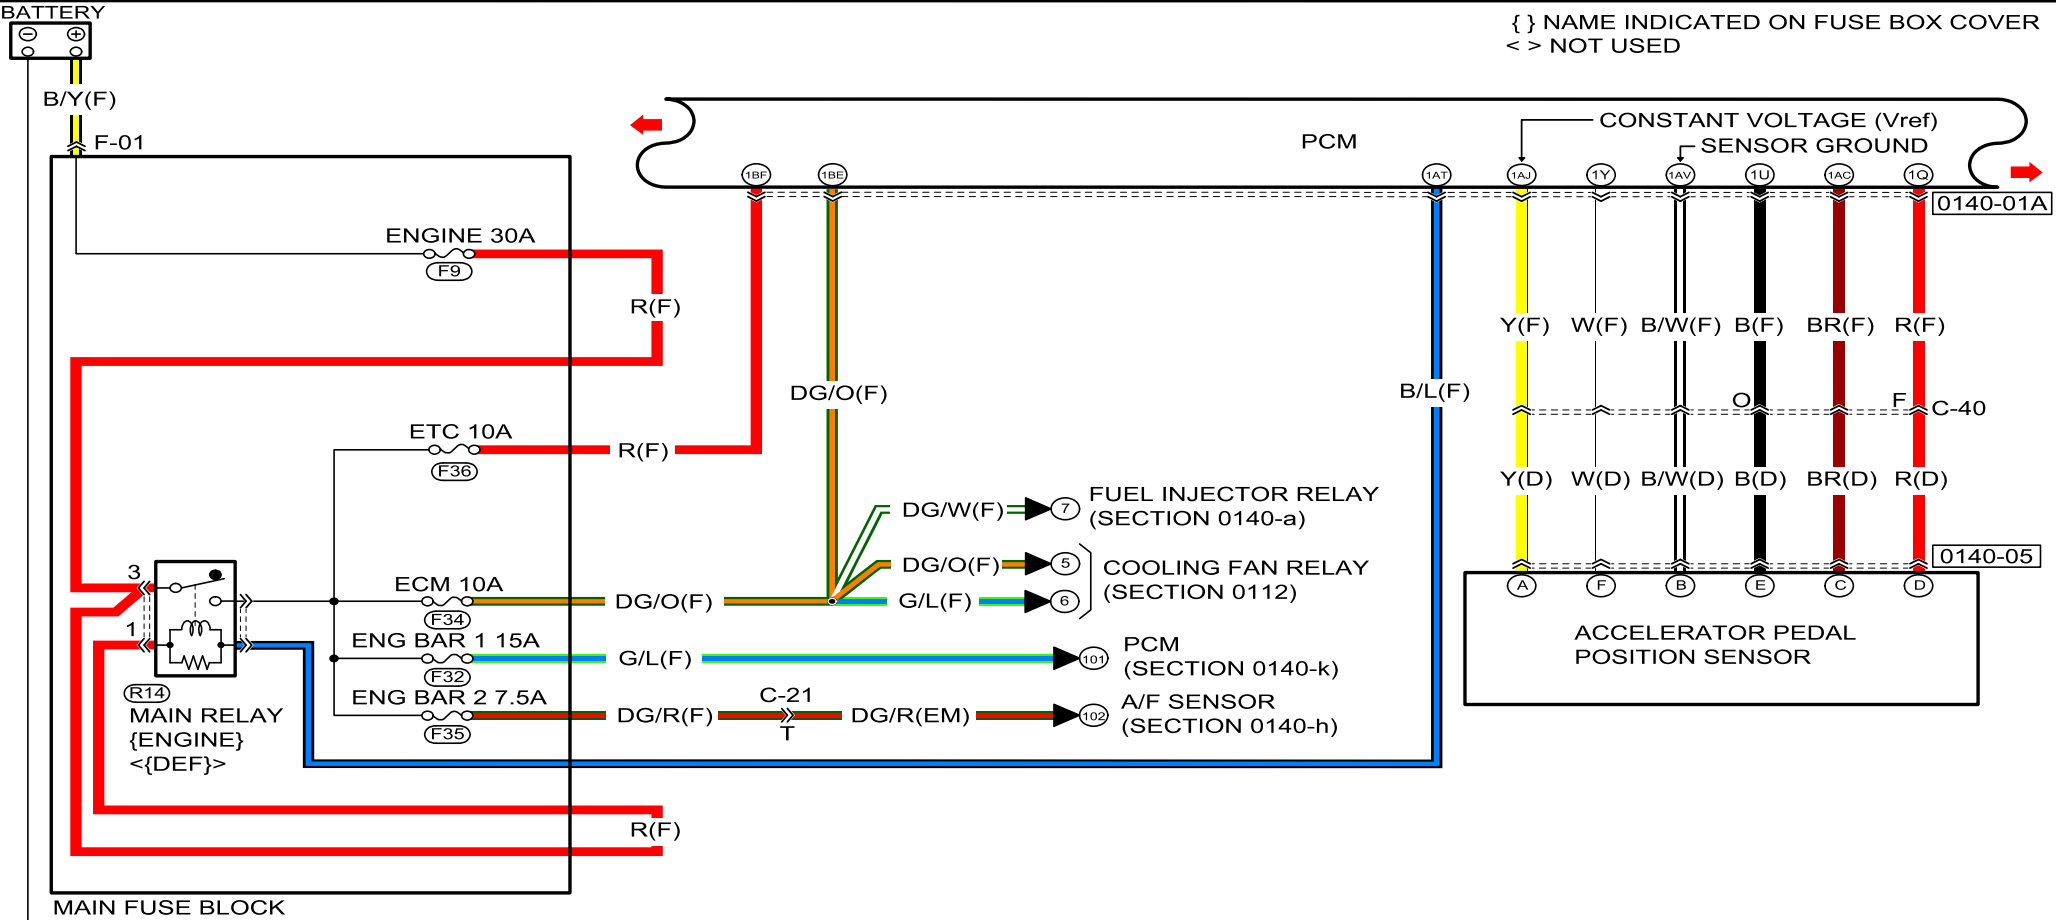



777


0140-01A
PCM

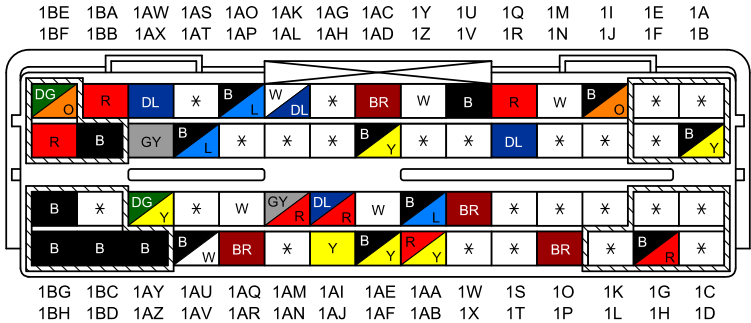

   
0140-05
ACCELERATOR PEDAL POSITION SENSOR

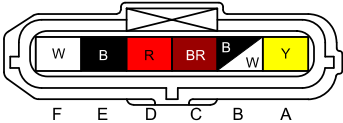

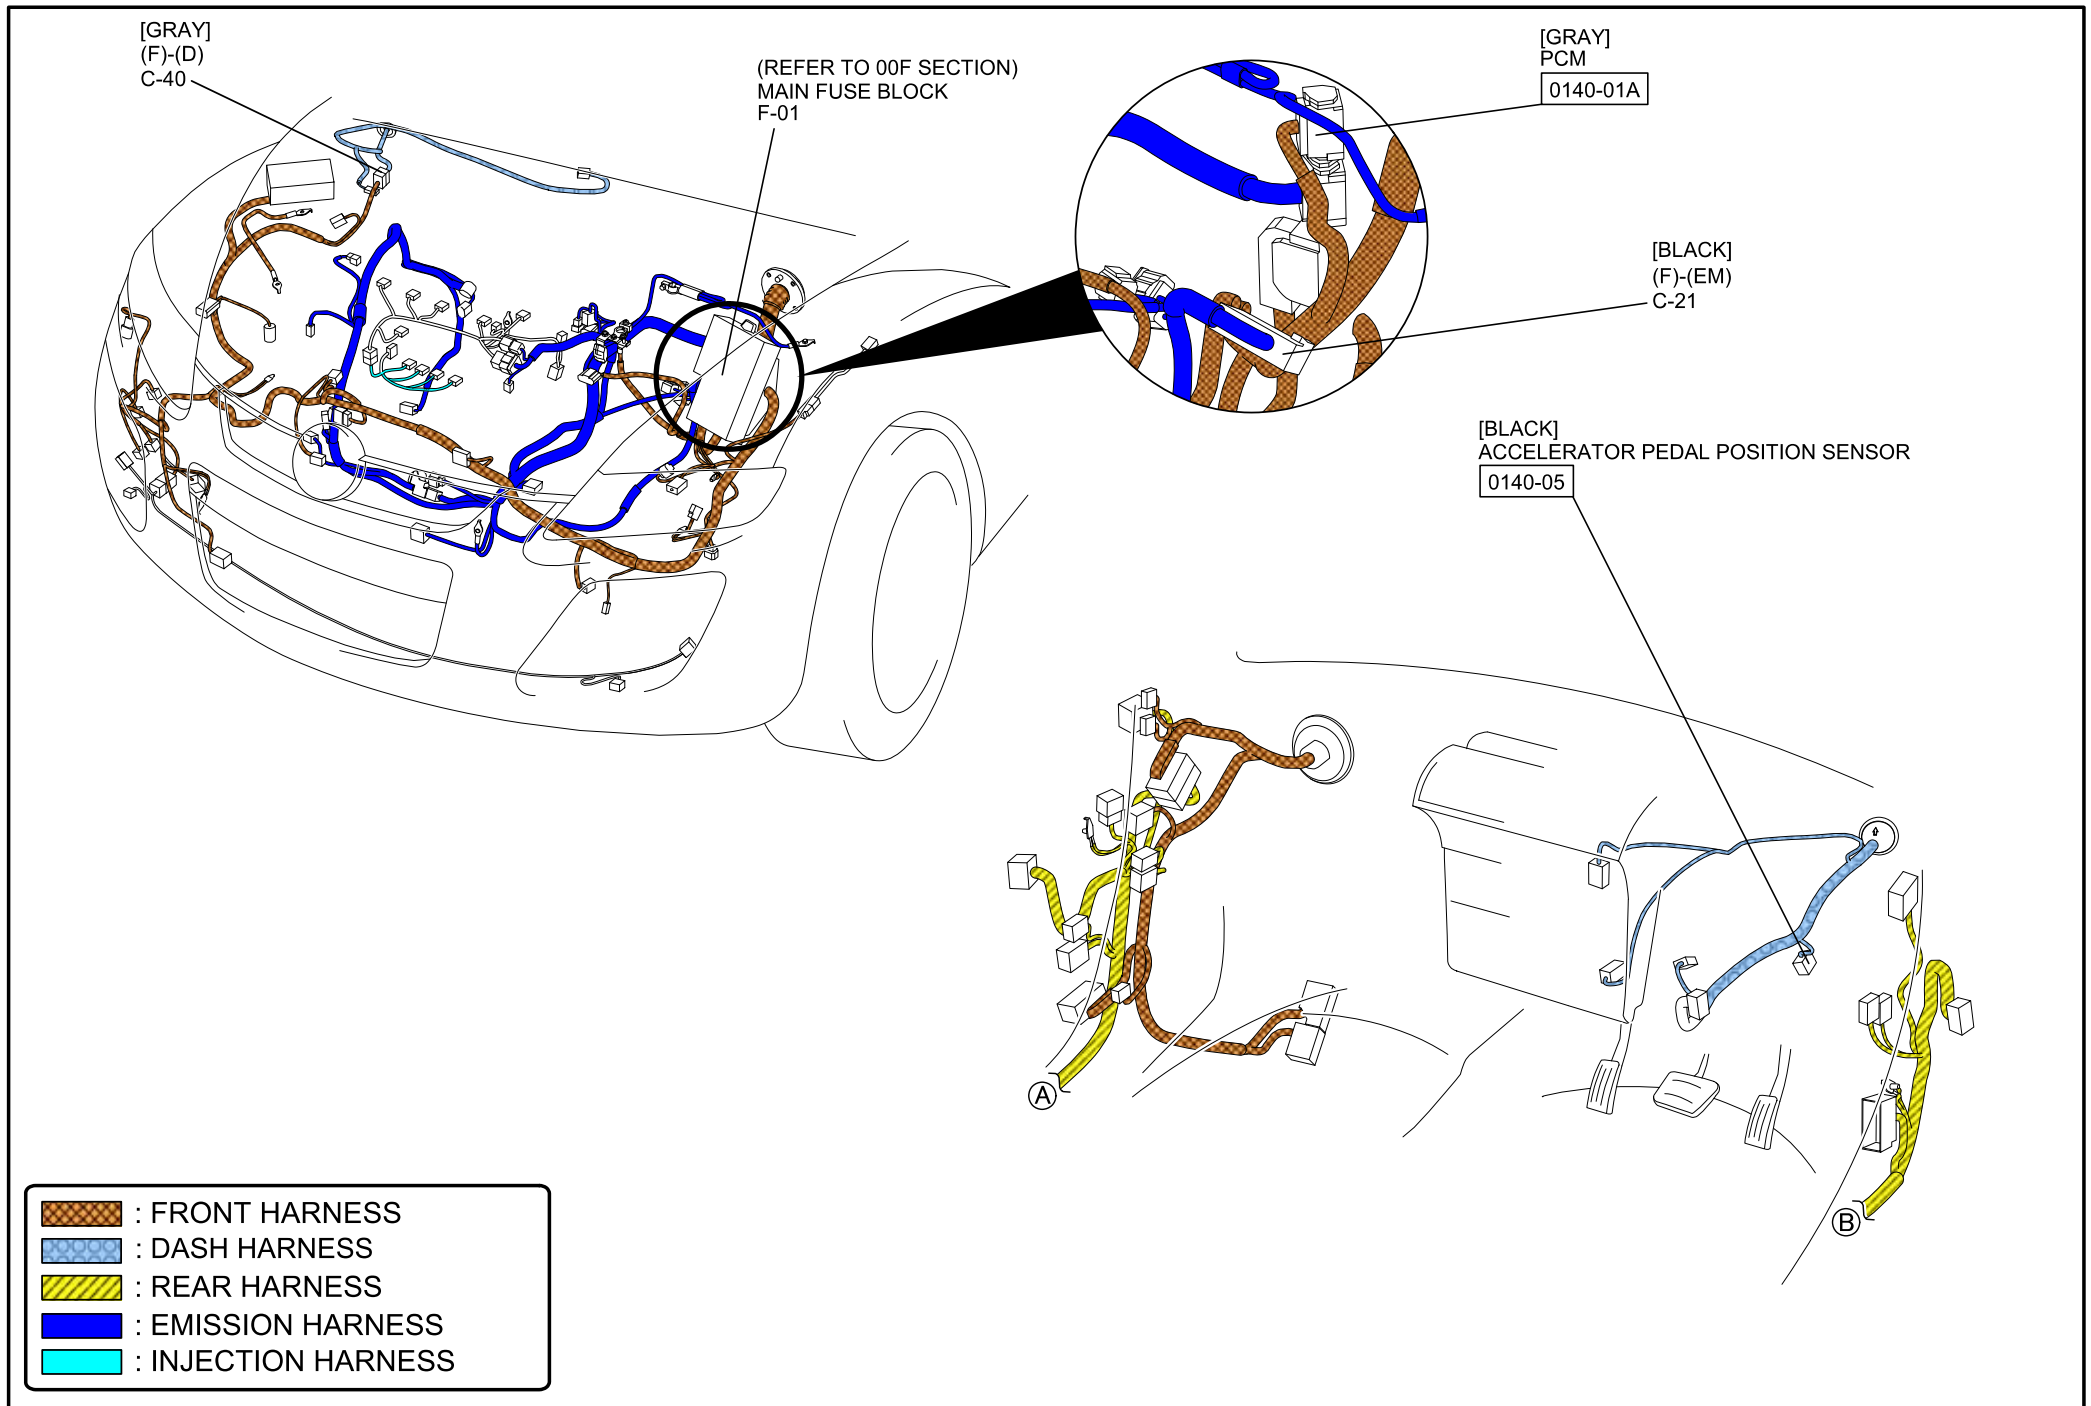


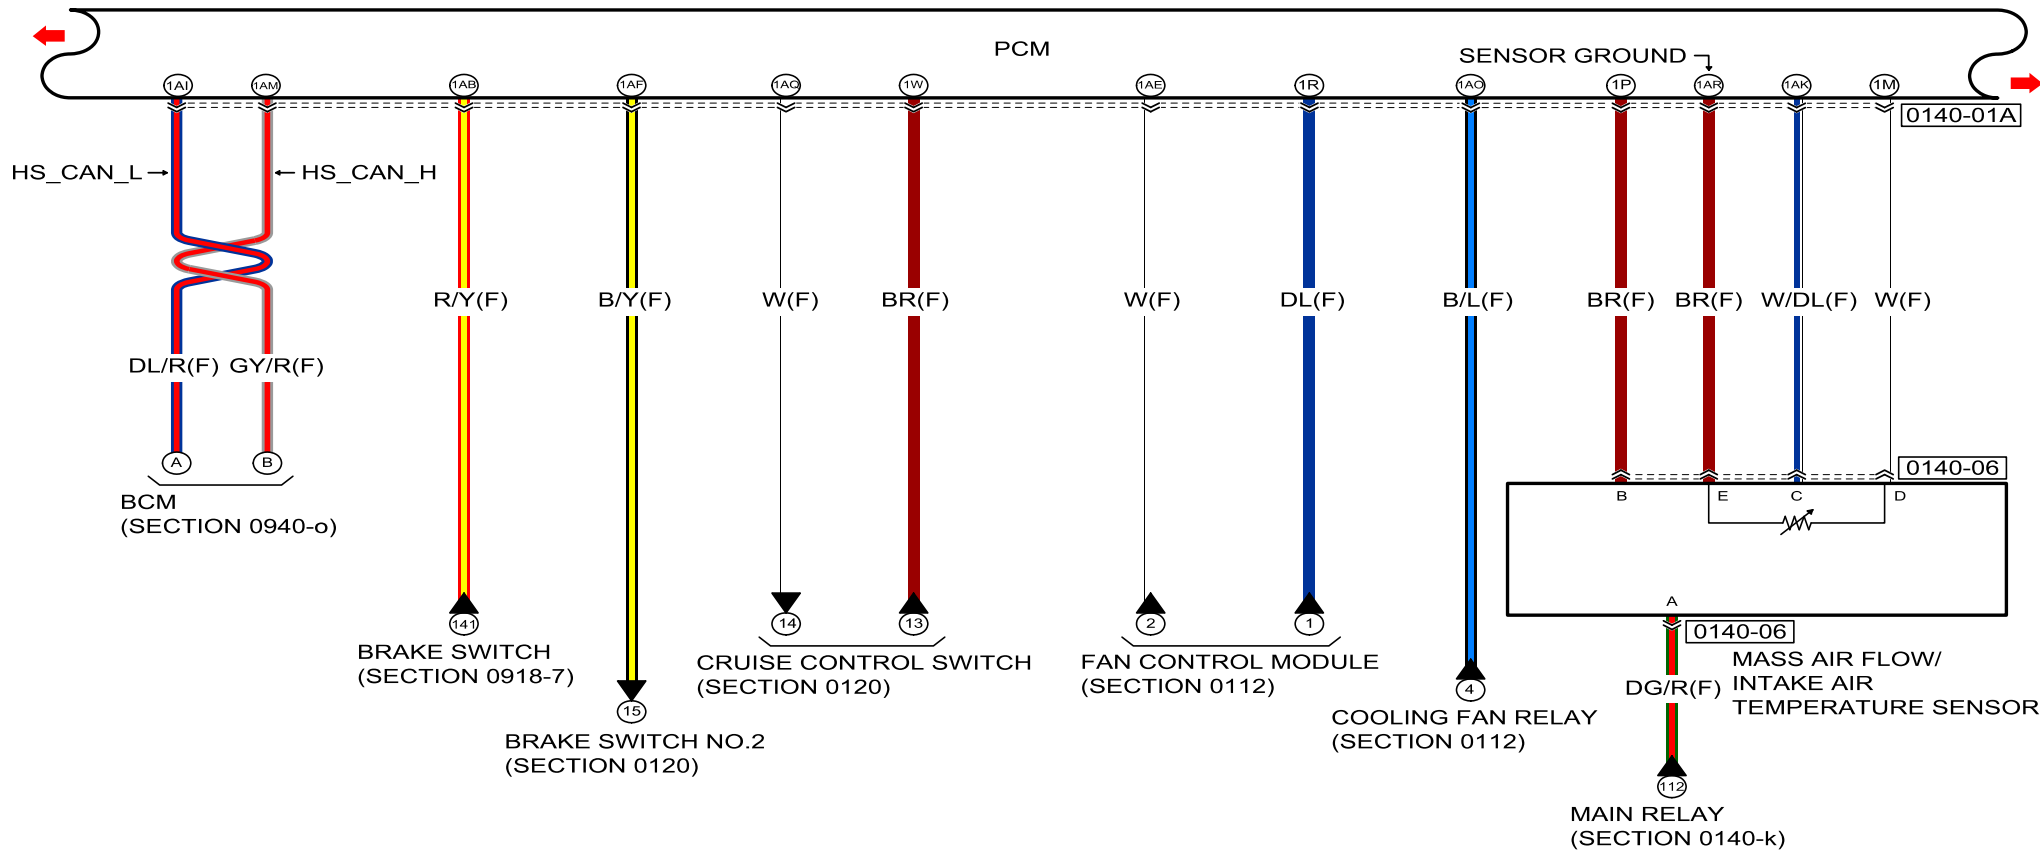



0140-01A
PCM






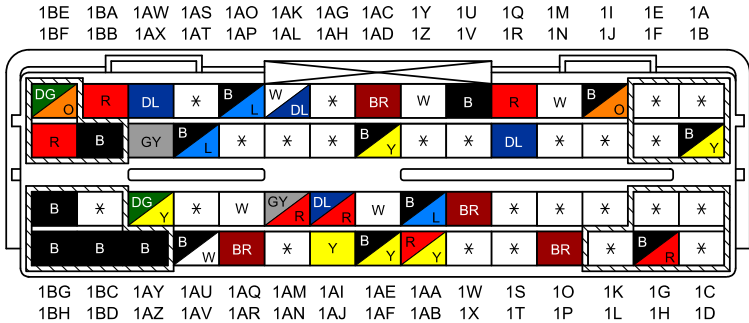 


        
 
0140-06
MASS AIR FLOW/
INTAKE AIR TEMPERATURE SENSOR




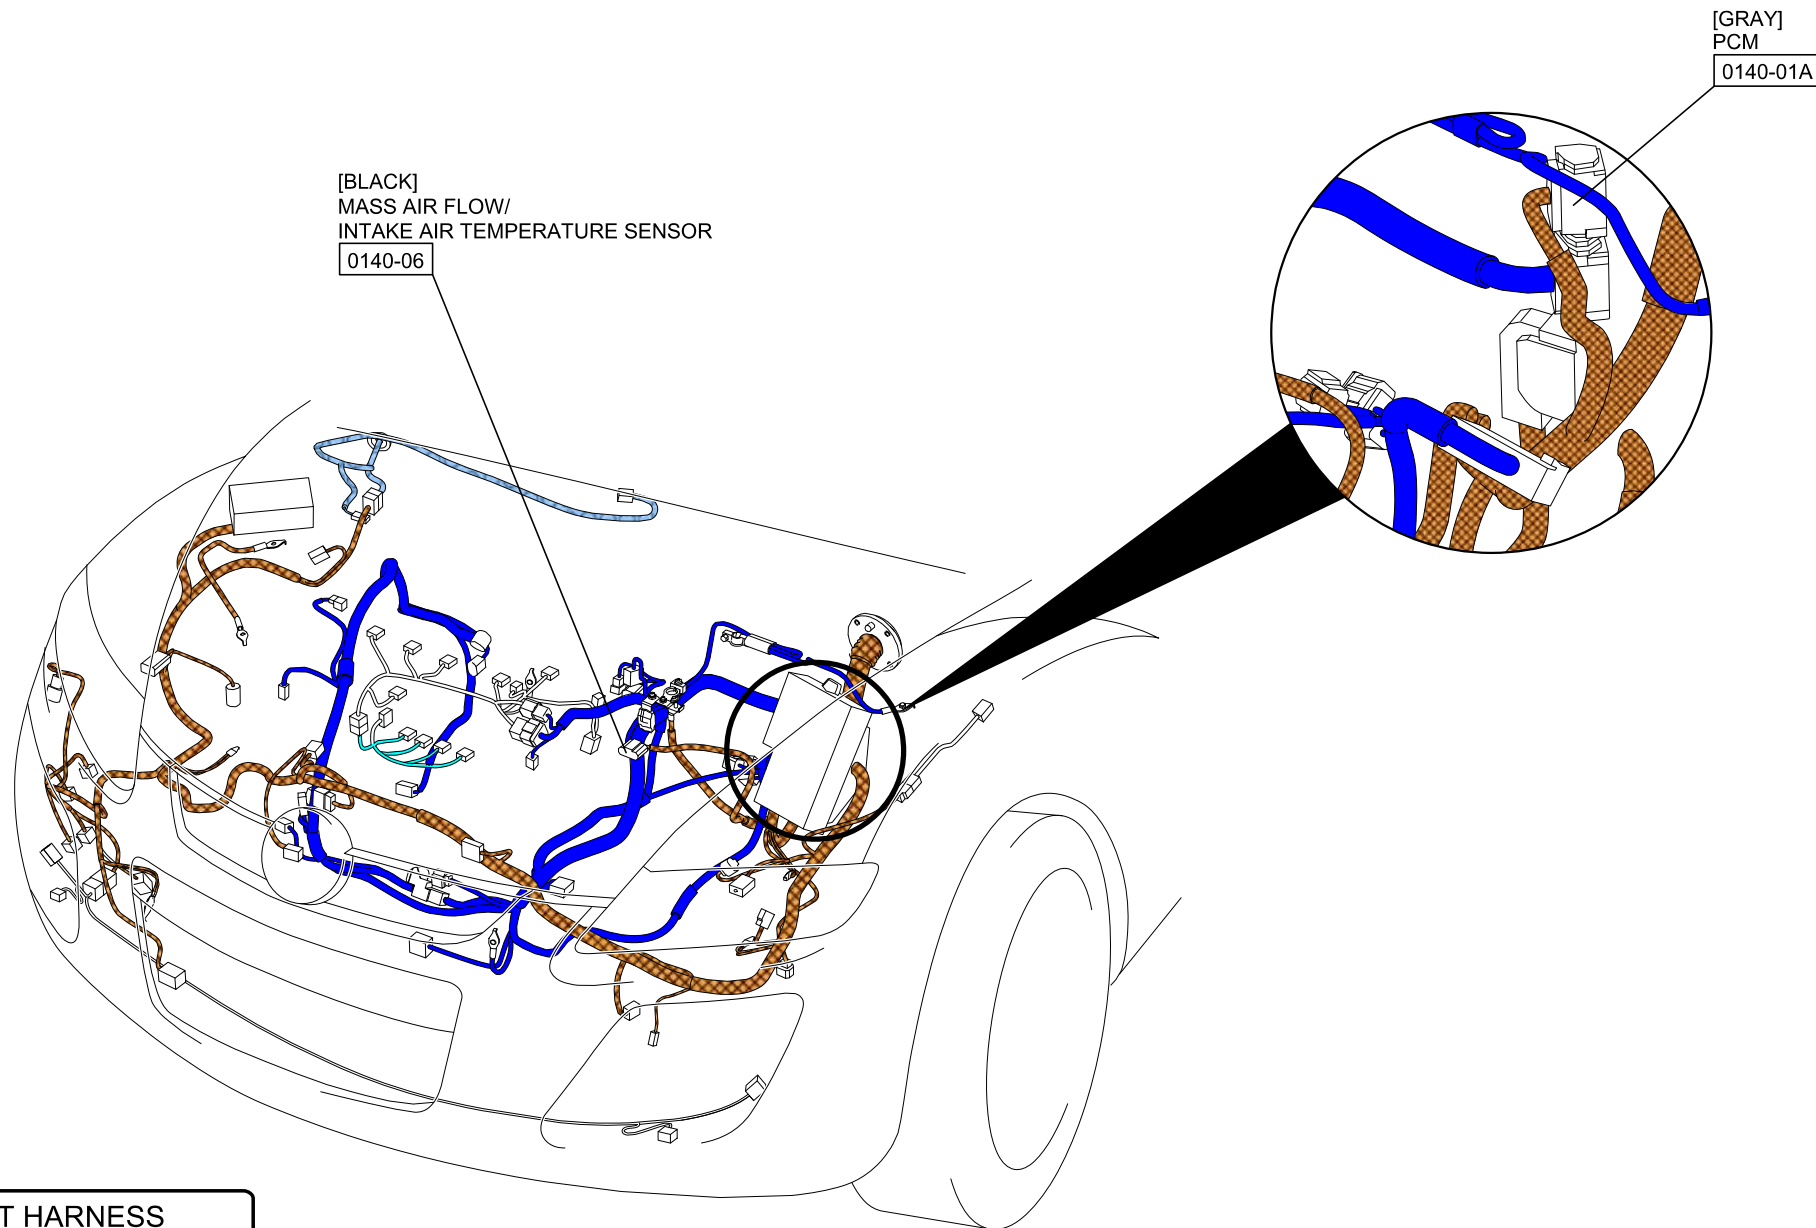








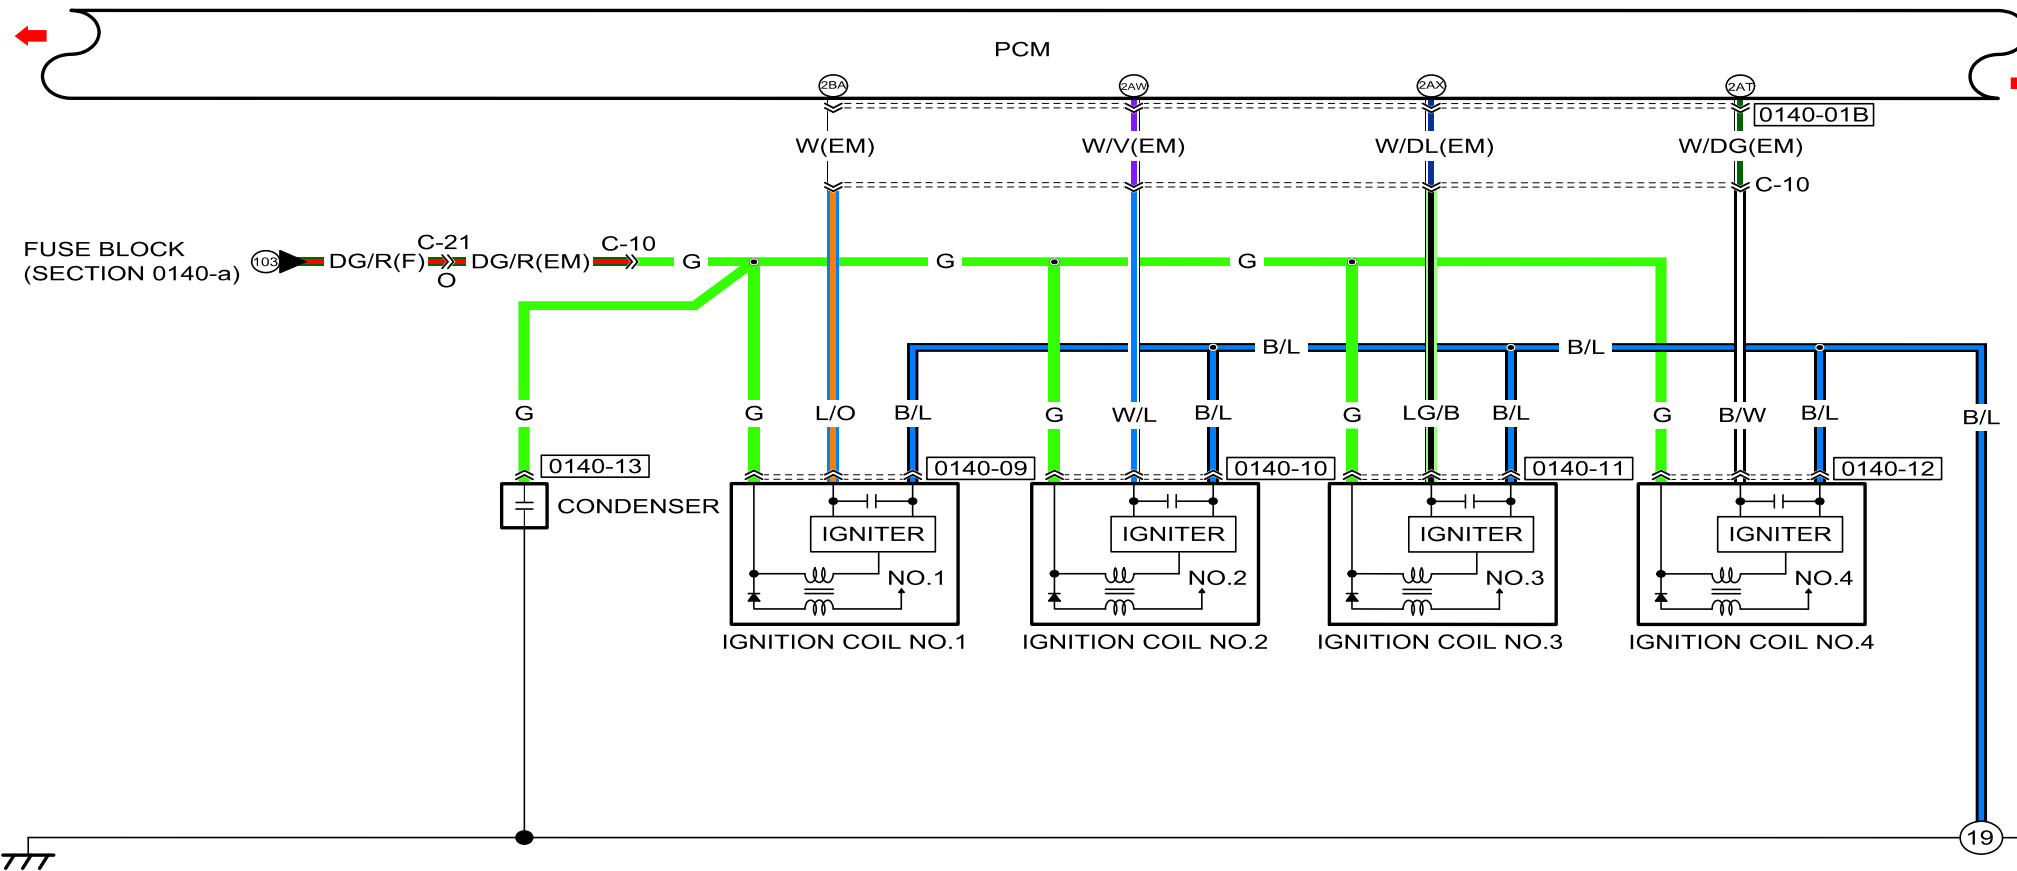


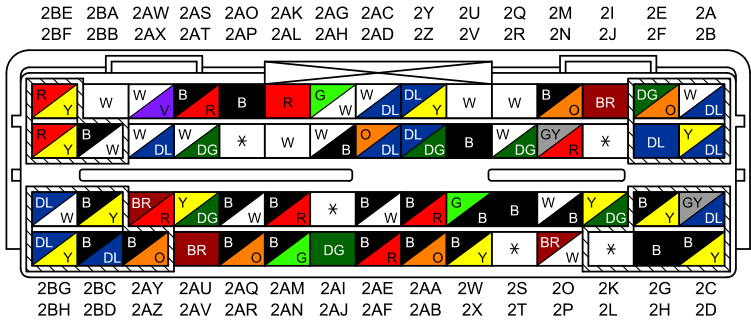
<p>0140-01B PCM</p>  <p>2BE 2BA 2AW 2AS 2AO 2AK 2AG 2AC 2Y 2U 2Q 2M 2I 2E 2A 2BF 2BB 2AX 2AT 2AP 2AL 2AH 2AD 2Z 2V 2R 2N 2J 2F 2B</p> <p>2BG 2BC 2AY 2AU 2AQ 2AM 2AI 2AE 2AA 2W 2S 2O 2K 2G 2C 2BH 2BD 2AZ 2AV 2AR 2AN 2AJ 2AF 2AB 2X 2T 2P 2L 2H 2D</p>	<p>0140-09 IGNITION COIL NO.1</p> 	<p>0140-10 IGNITION COIL NO.2</p> 	<p>0140-11 IGNITION COIL NO.3</p> 
<p>0140-12 IGNITION COIL NO.4</p> 	<p>0140-13 CONDENSER</p> 		

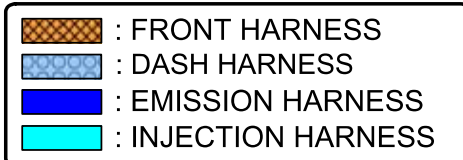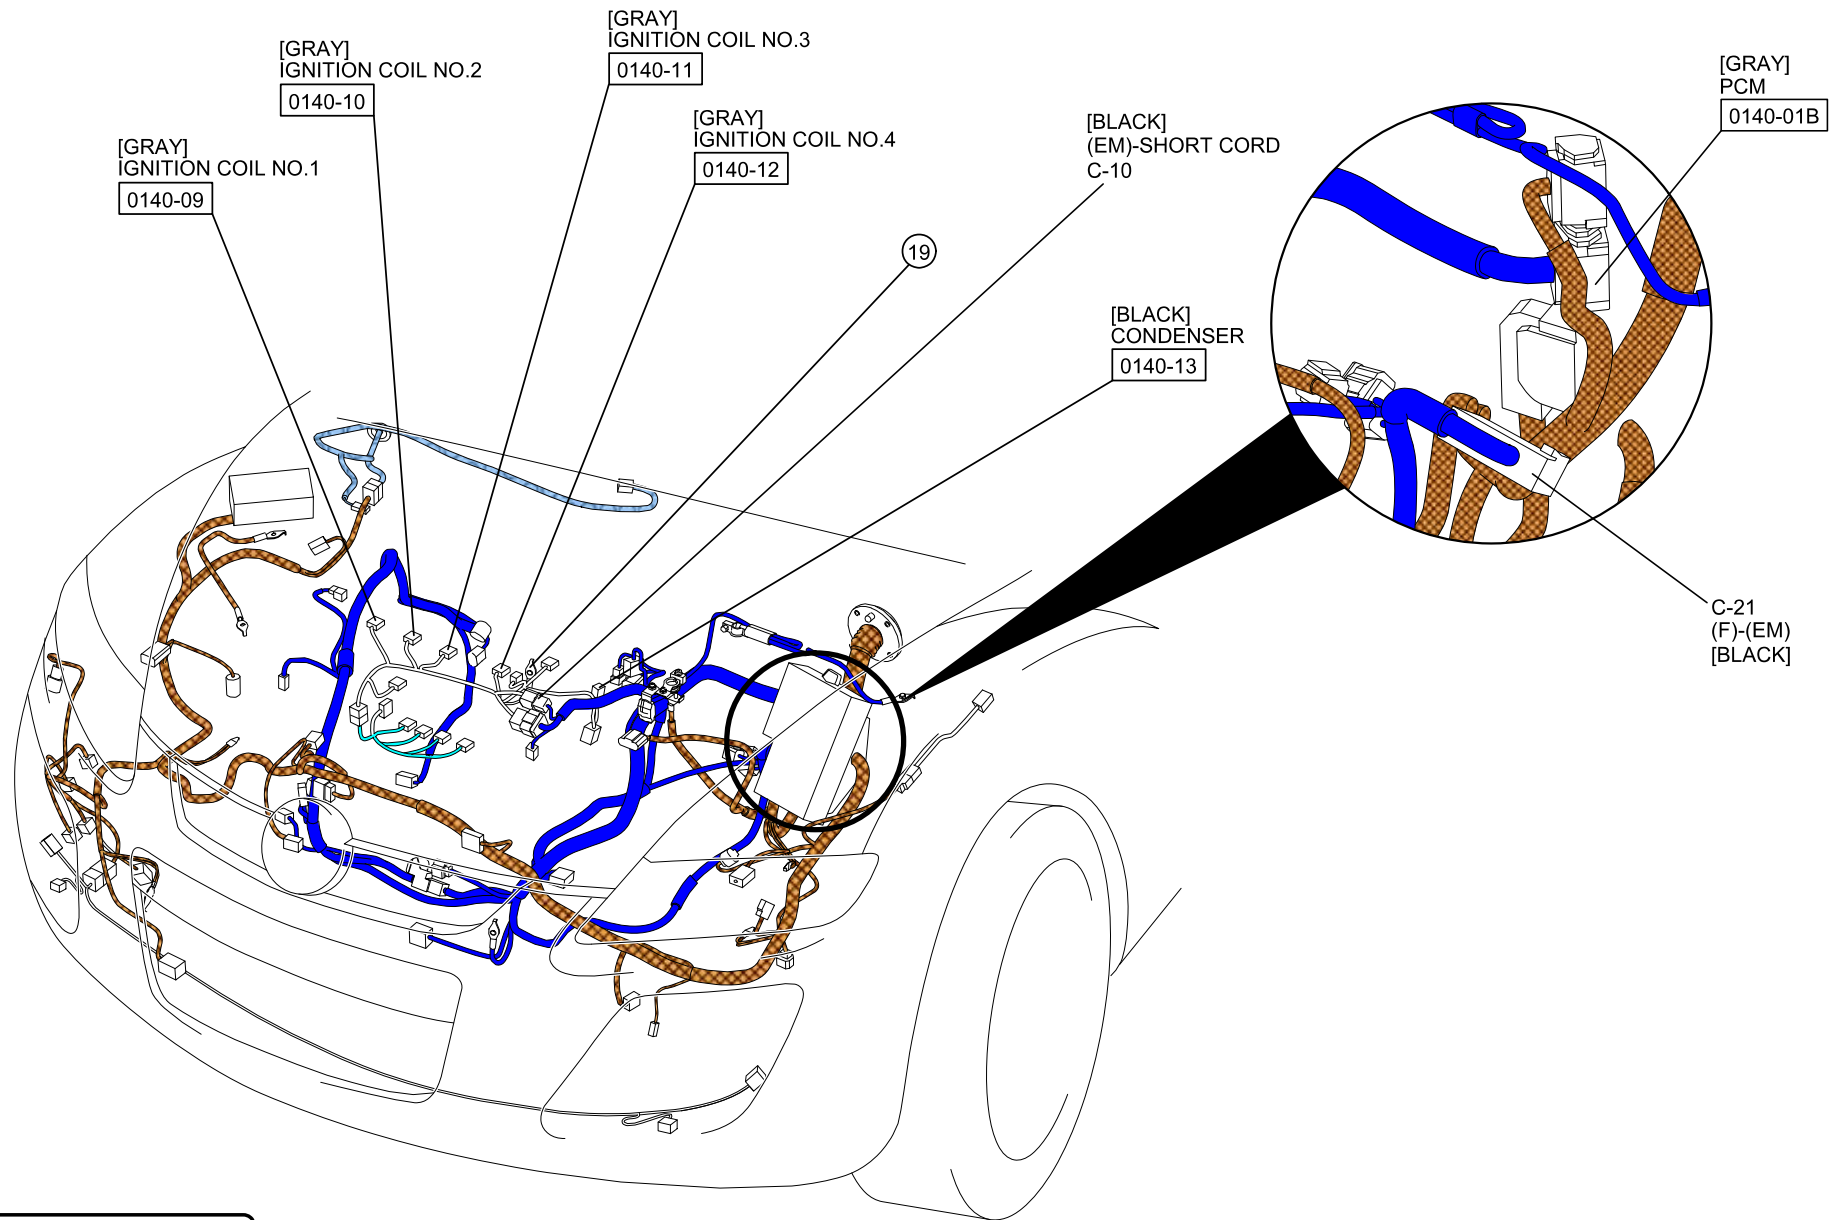  

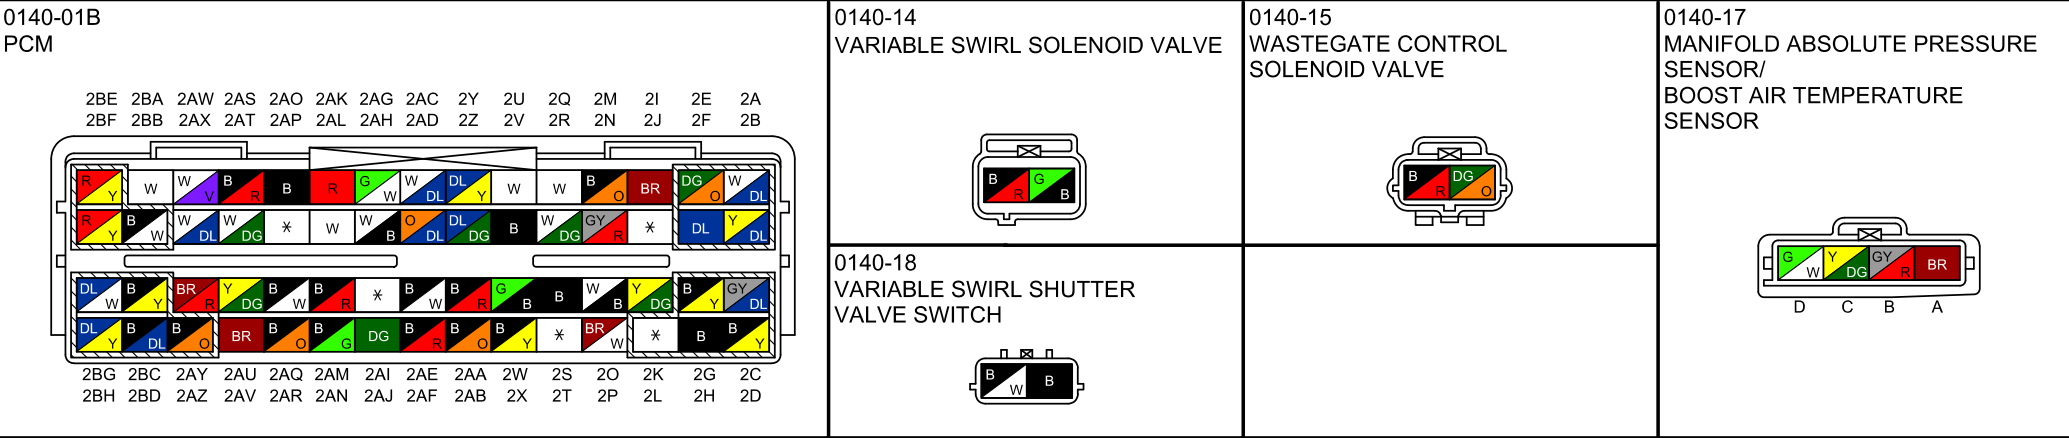 

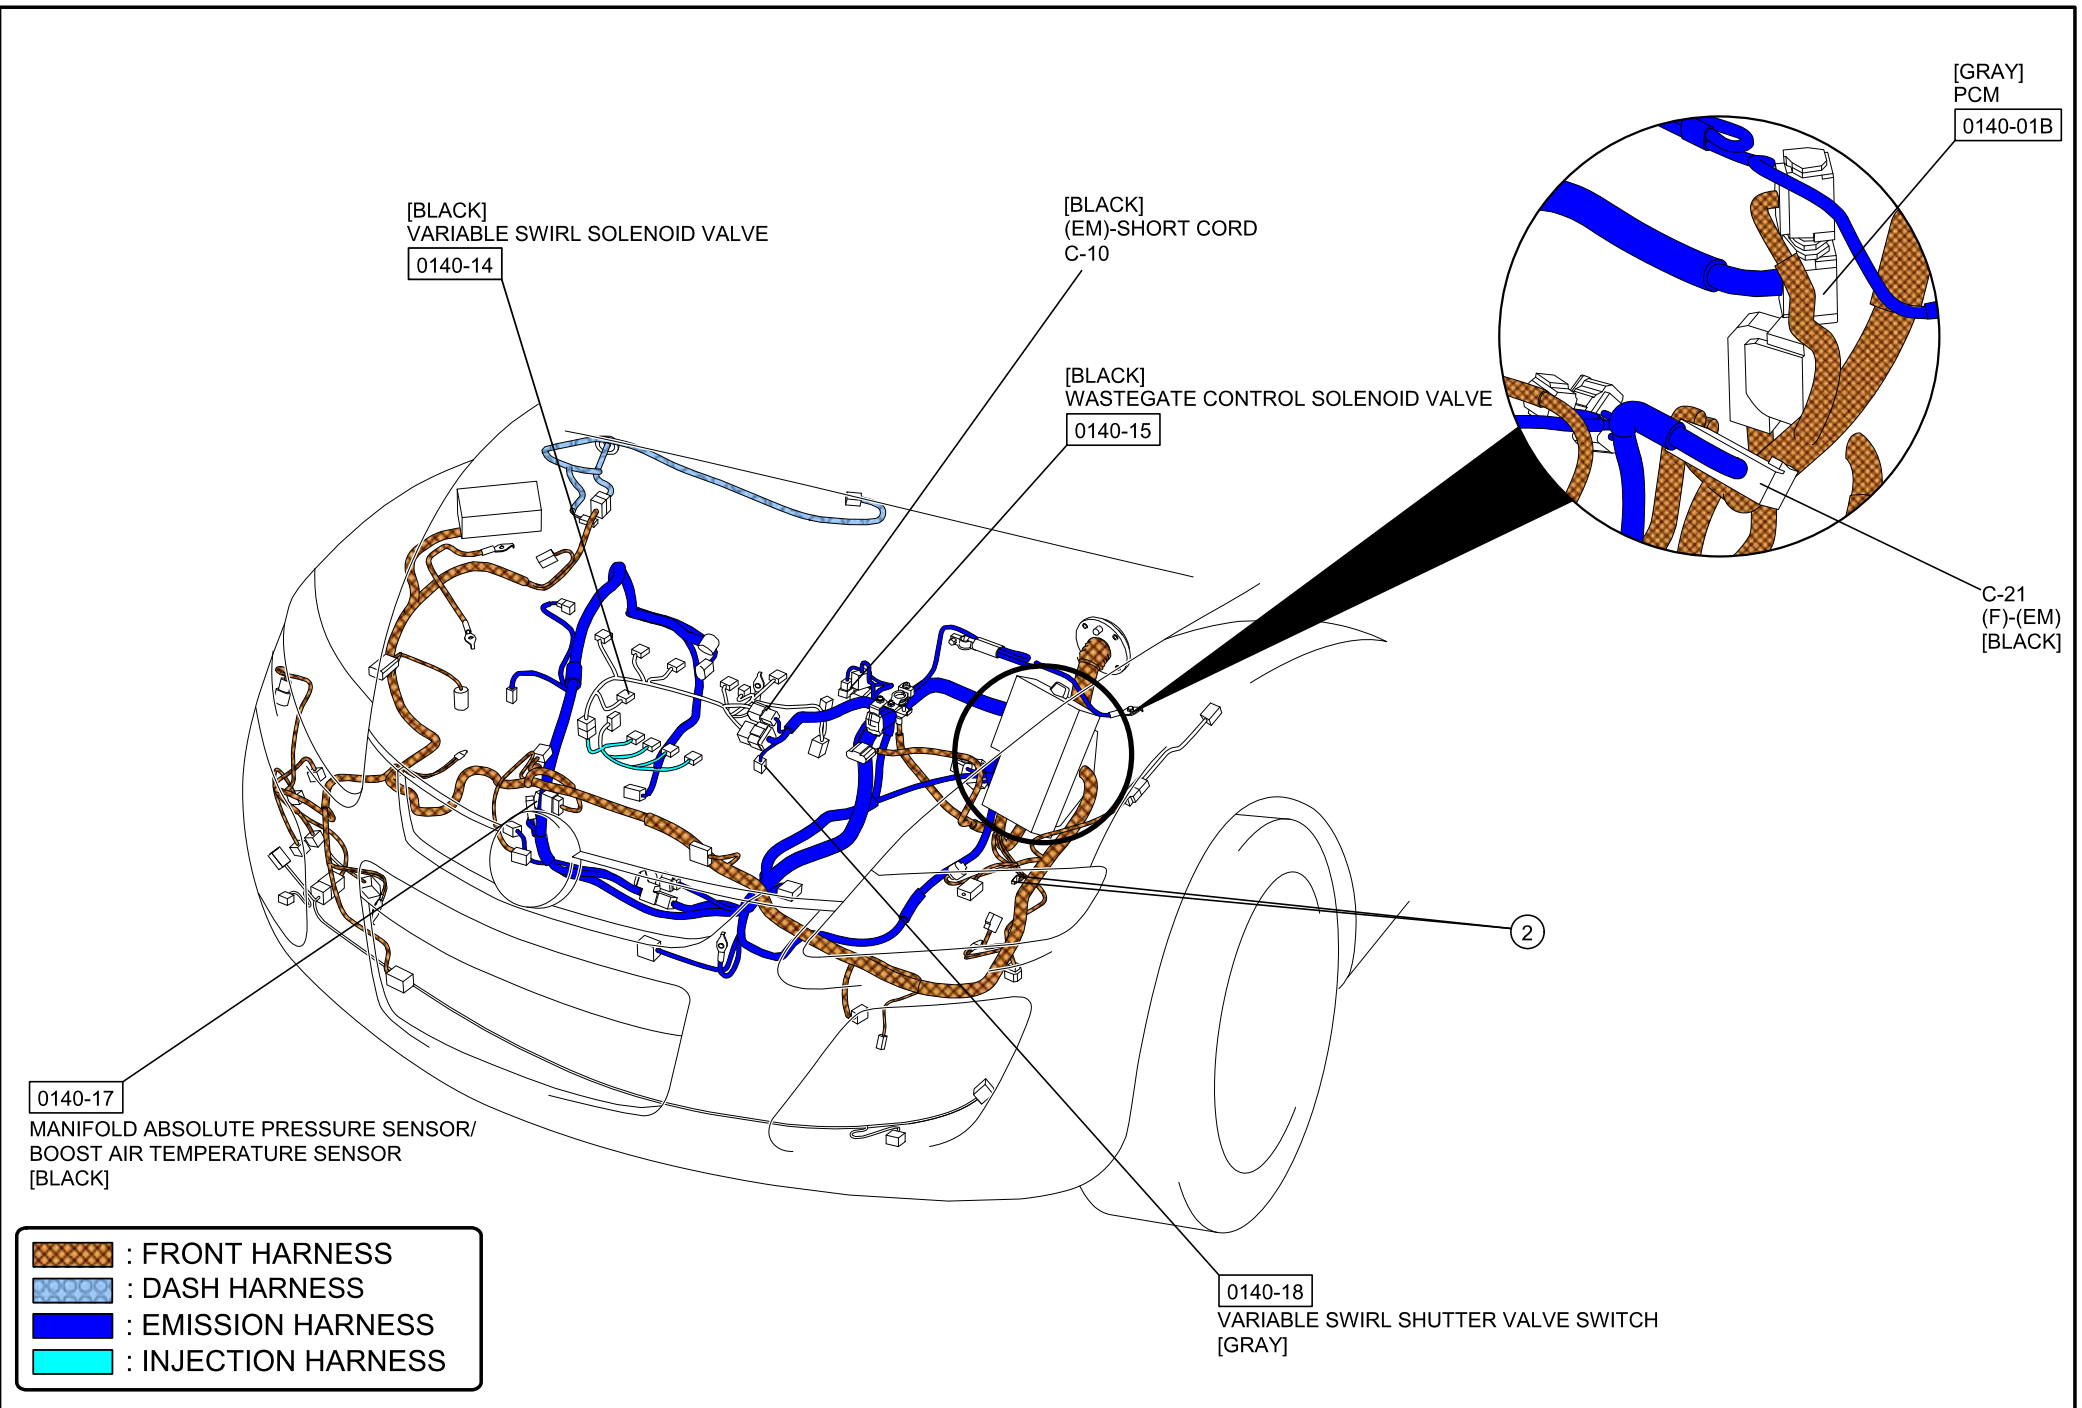 


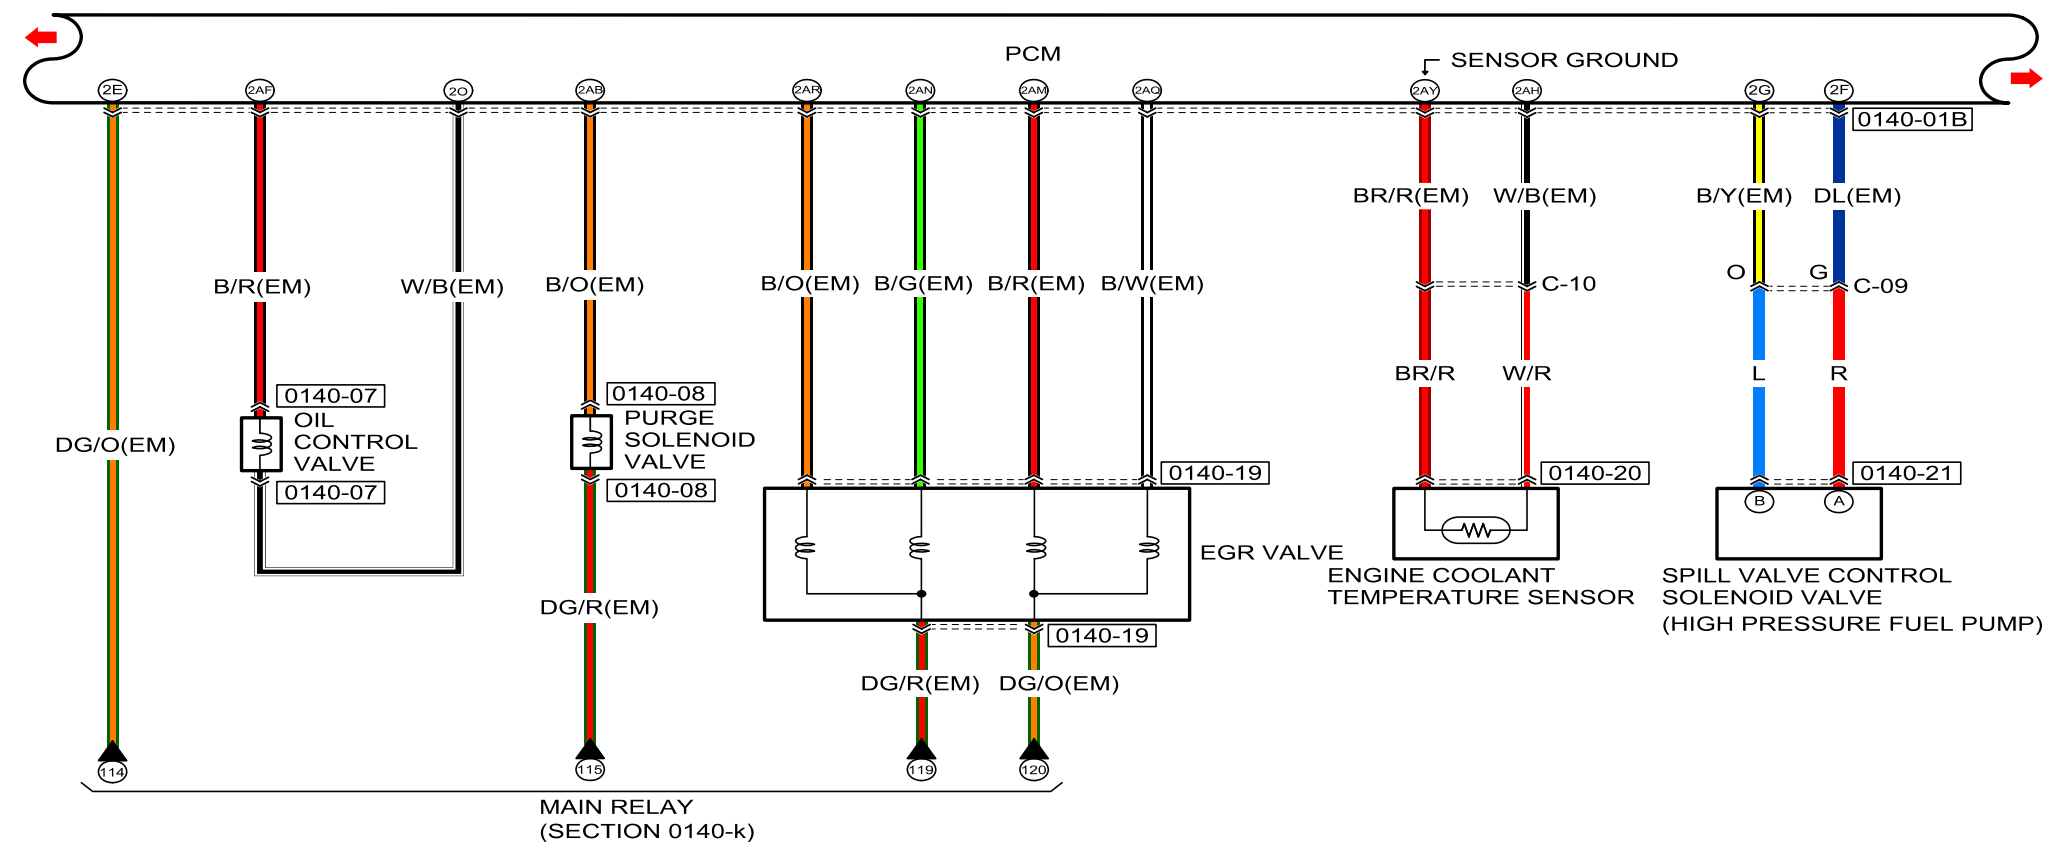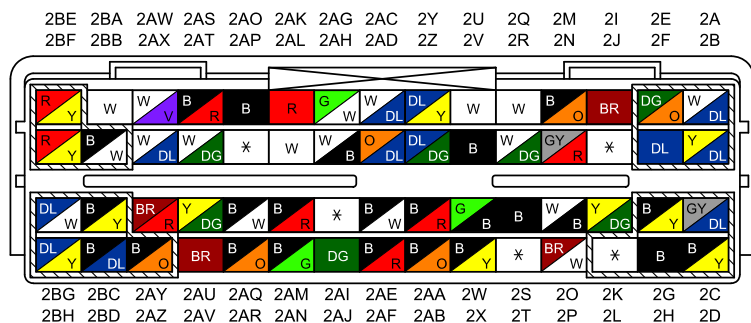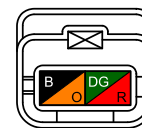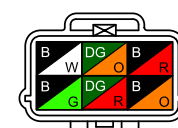        
0140-01B
PCM0140-07
OIL CONTROL VALVE0140-20
ENGINE COOLANT
TEMPERATURE SENSOR0140-08
PURGE SOLENOID VALVE0140-21
SPILL VALVE CONTROL
SOLENOID VALVE
(HIGH PRESSURE FUEL PUMP)0140-19
EGR VALVE

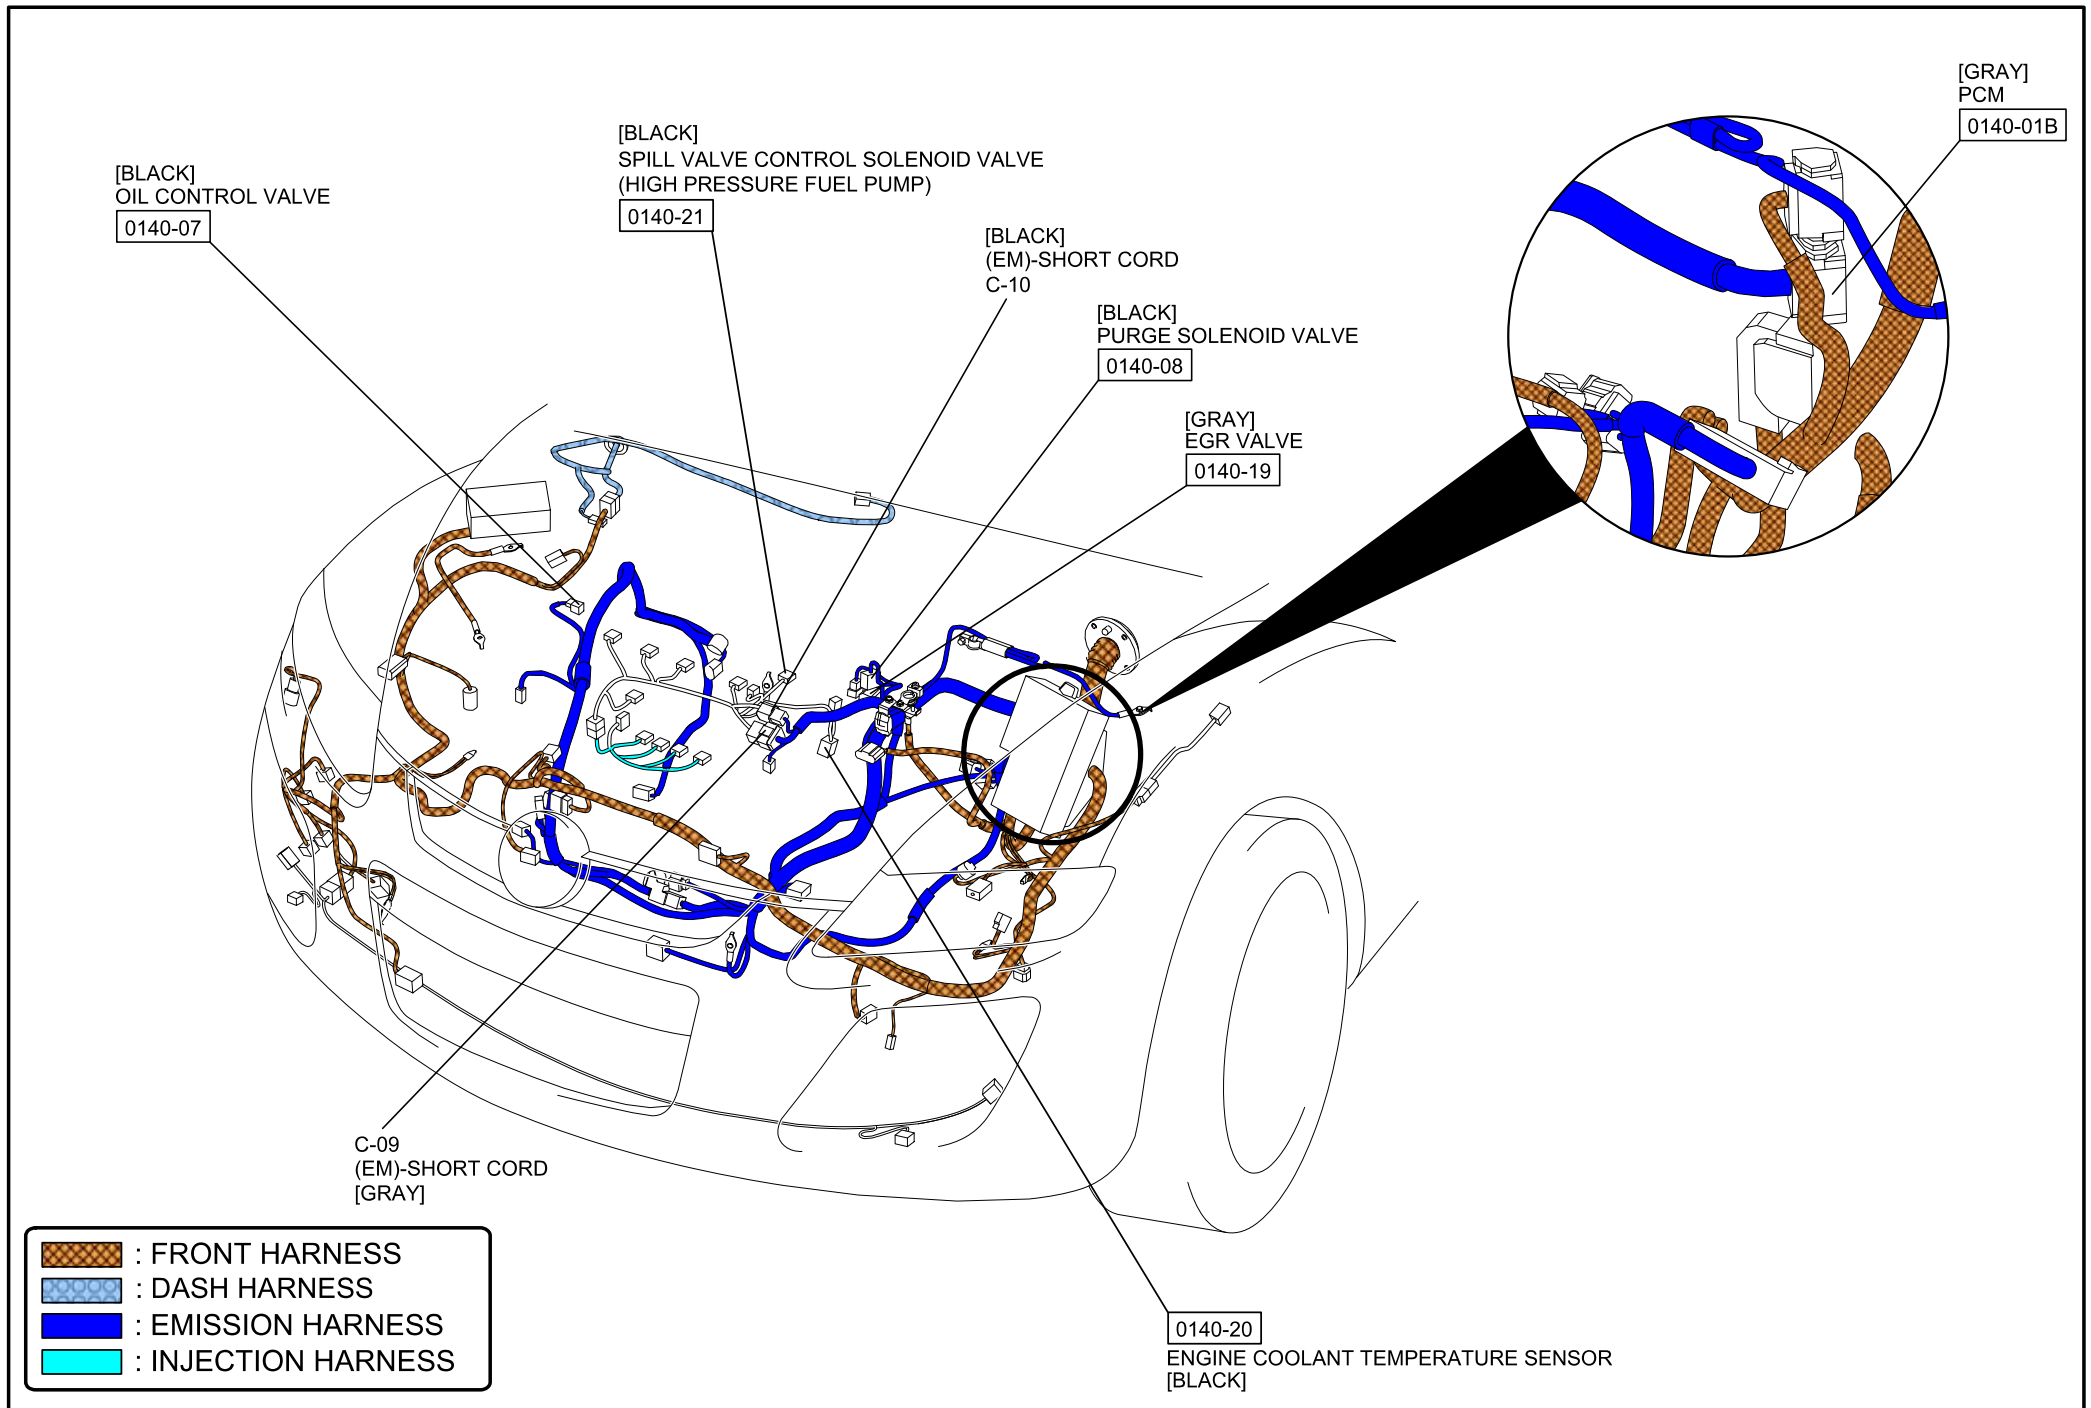









<p>0140-01B PCM</p>	<p>0140-22 HO2S</p>	<p>0140-23 FUEL INJECTOR NO.1</p>	<p>0140-24 FUEL INJECTOR NO.2</p>
<p>2BE 2BA 2AW 2AS 2AO 2AK 2AG 2AC 2Y 2U 2Q 2M 2I 2E 2A 2BF 2BB 2AX 2AT 2AP 2AL 2AH 2AD 2Z 2V 2R 2N 2J 2F 2B</p> <p>2BG 2BC 2AY 2AU 2AQ 2AM 2AI 2AE 2AA 2W 2S 2O 2K 2G 2C 2BH 2BD 2AZ 2AV 2AR 2AN 2AJ 2AF 2AB 2X 2T 2P 2L 2H 2D</p>	<p>0140-25 FUEL INJECTOR NO.3</p>	<p>0140-26 FUEL INJECTOR NO.4</p>	

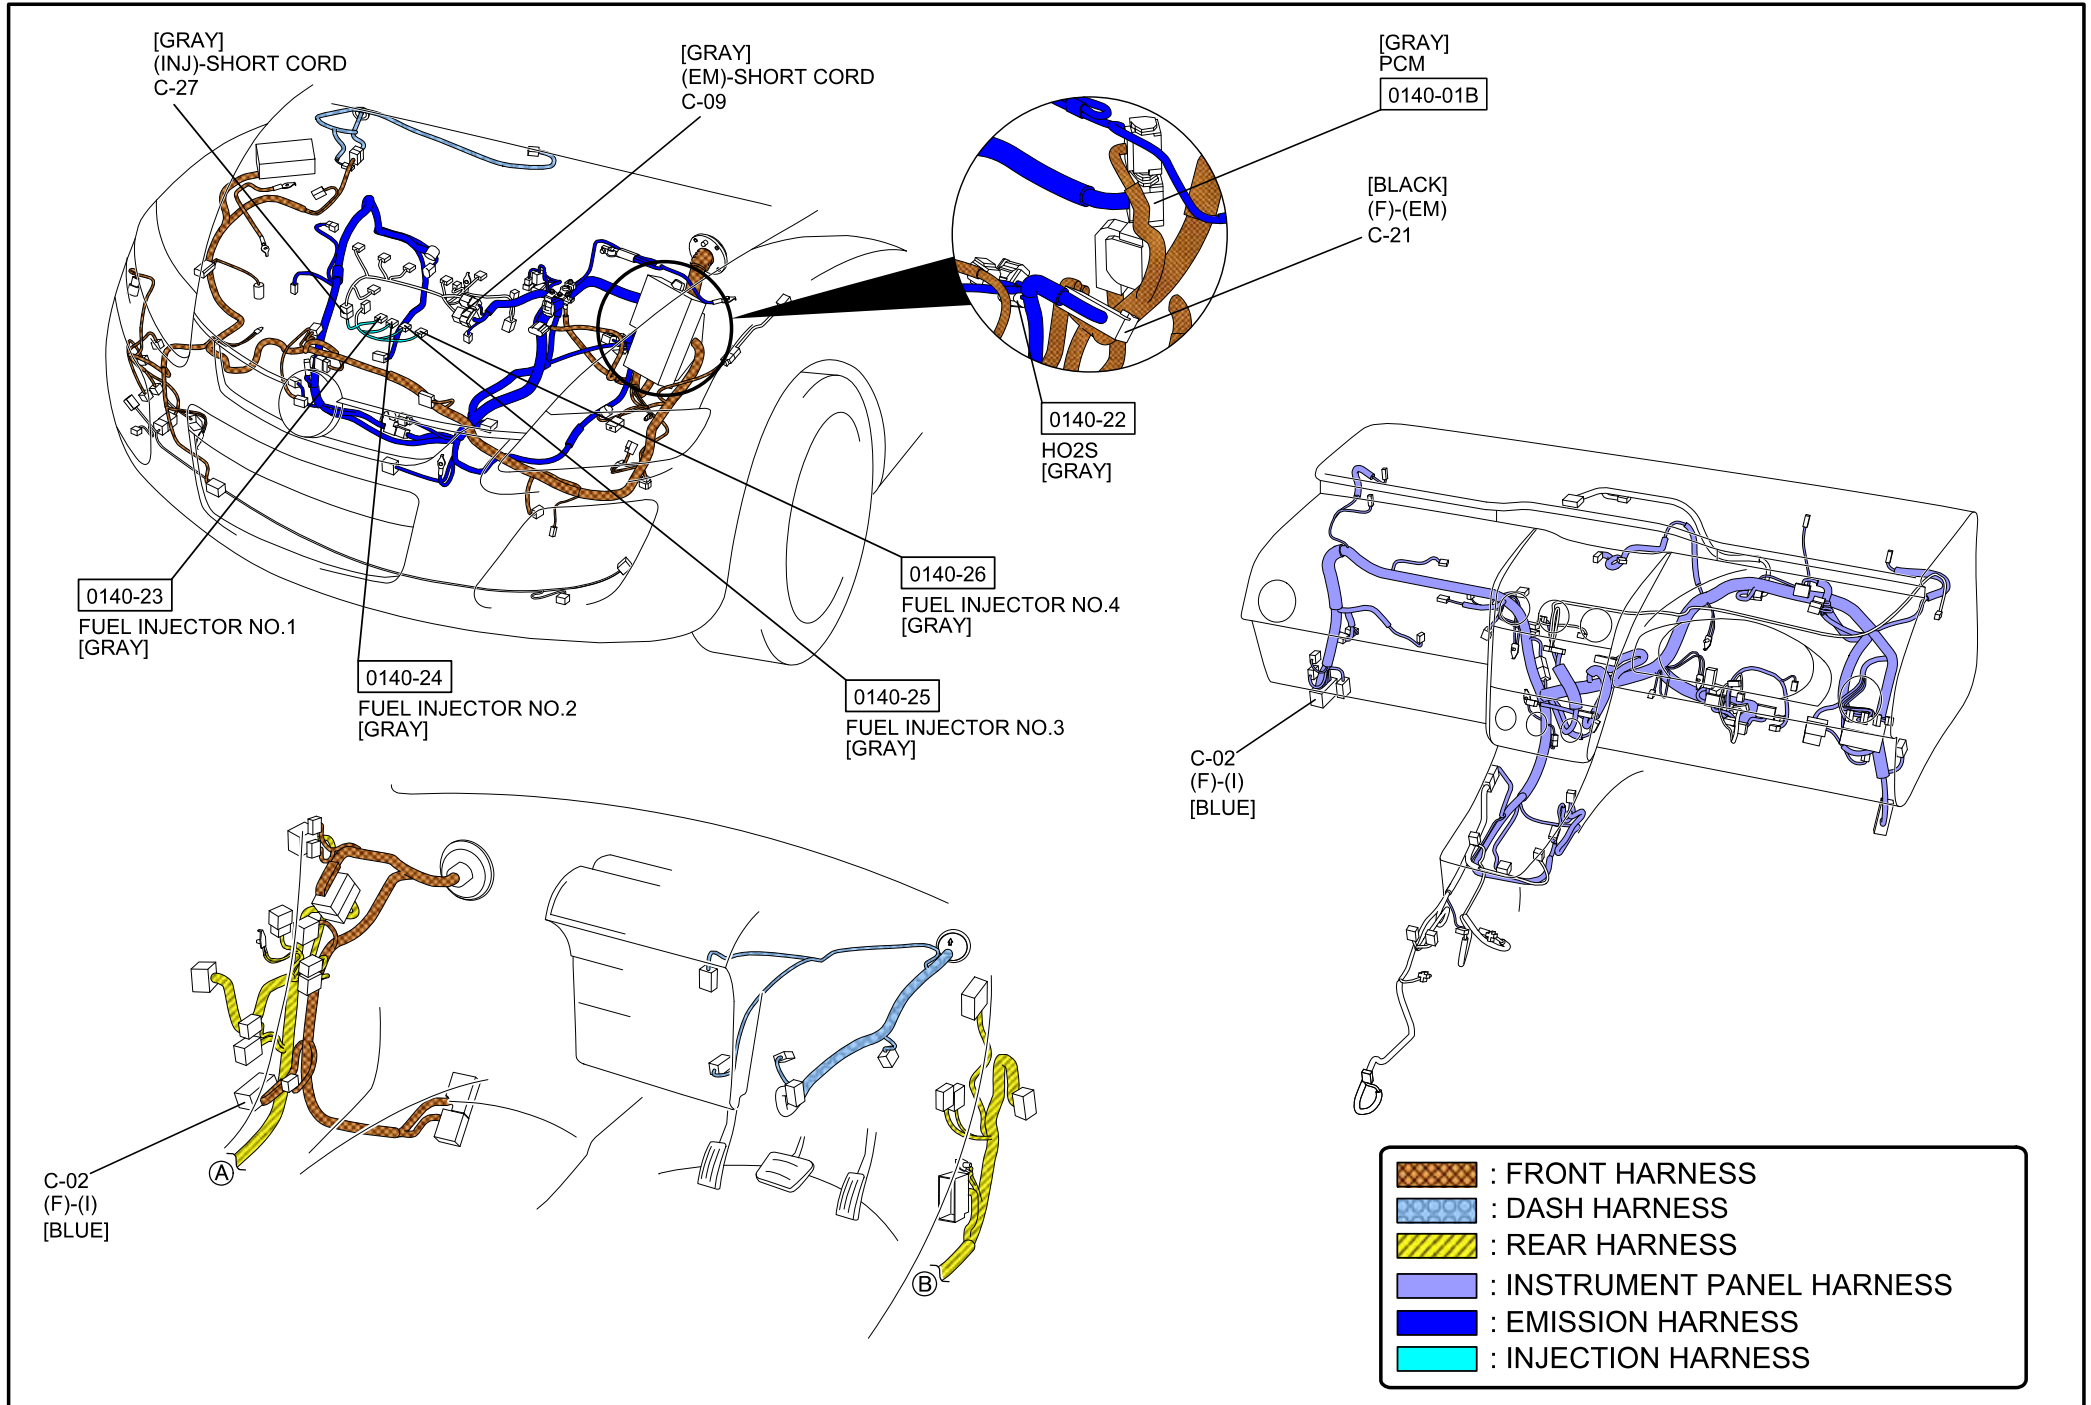 


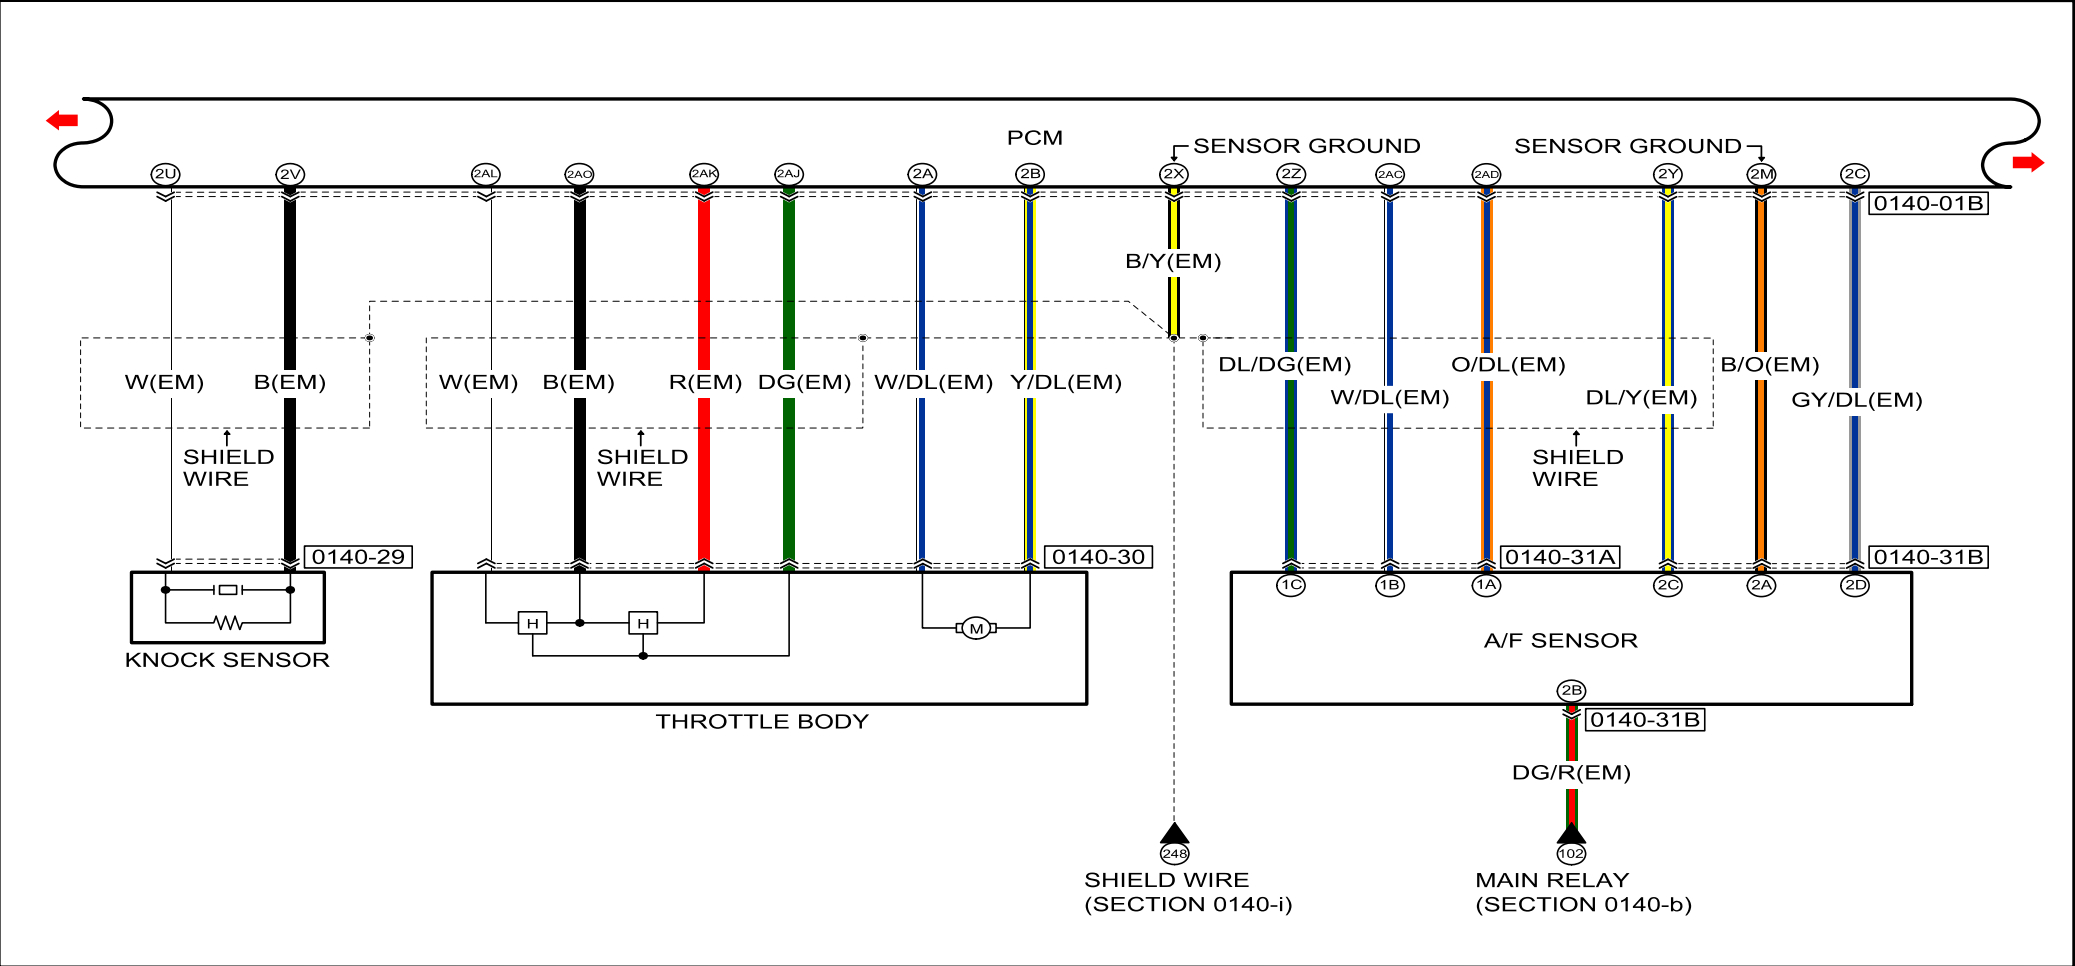 




<div>0140-01B</div> <div>PCM</div> <div></div>	<div>0140-29</div> <div>KNOCK SENSOR</div> <div></div>	<div>0140-30</div> <div>THROTTLE BODY</div> <div></div>	<div>0140-31A</div> <div>A/F SENSOR</div> <div></div>
	<div>0140-31B</div> <div>A/F SENSOR</div> <div></div>		

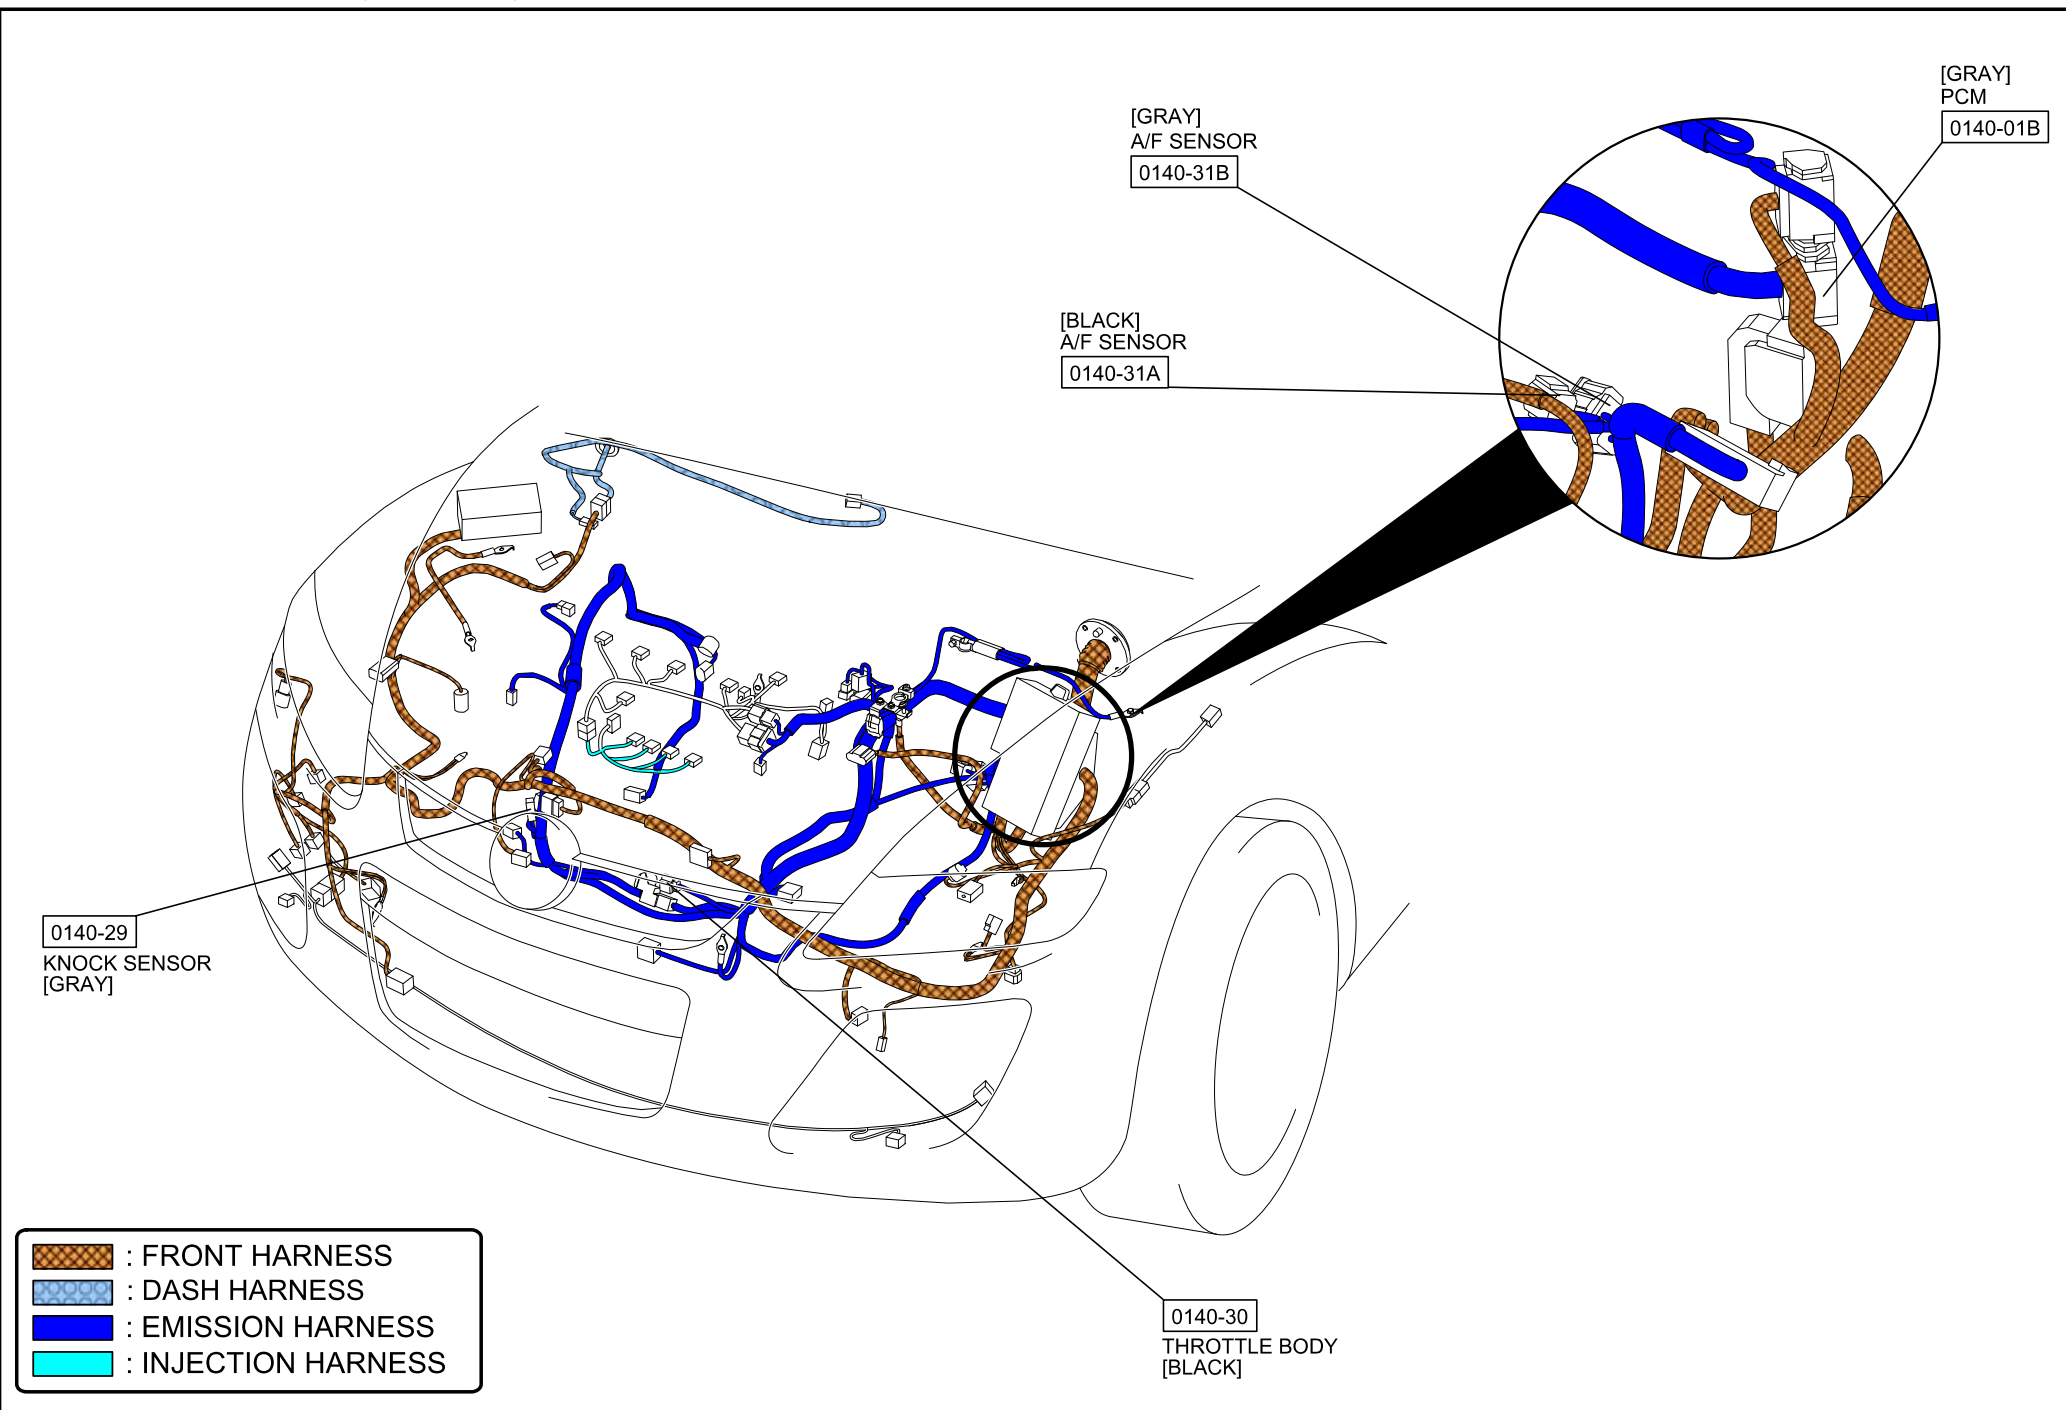 

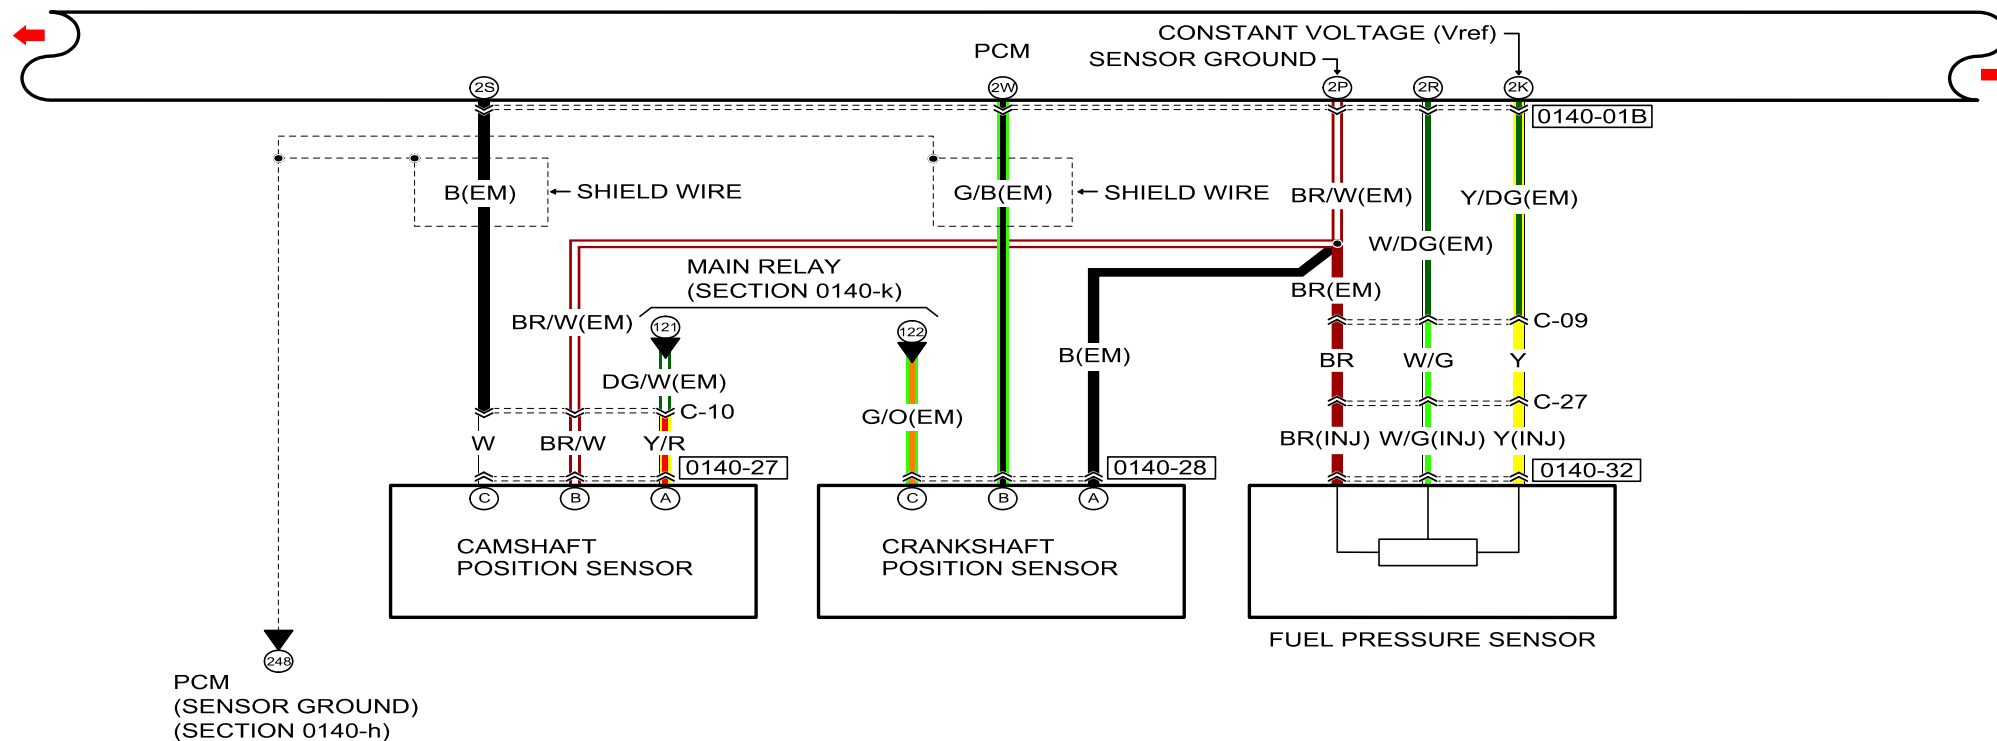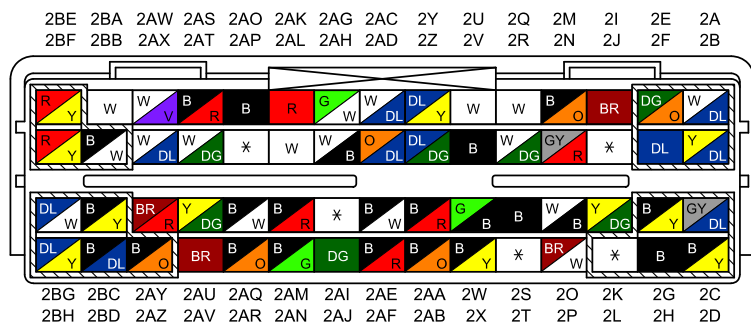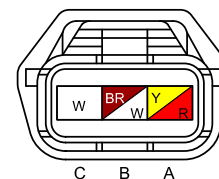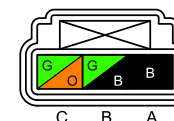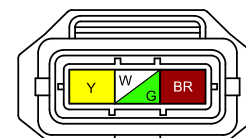     
0140-01B
PCM

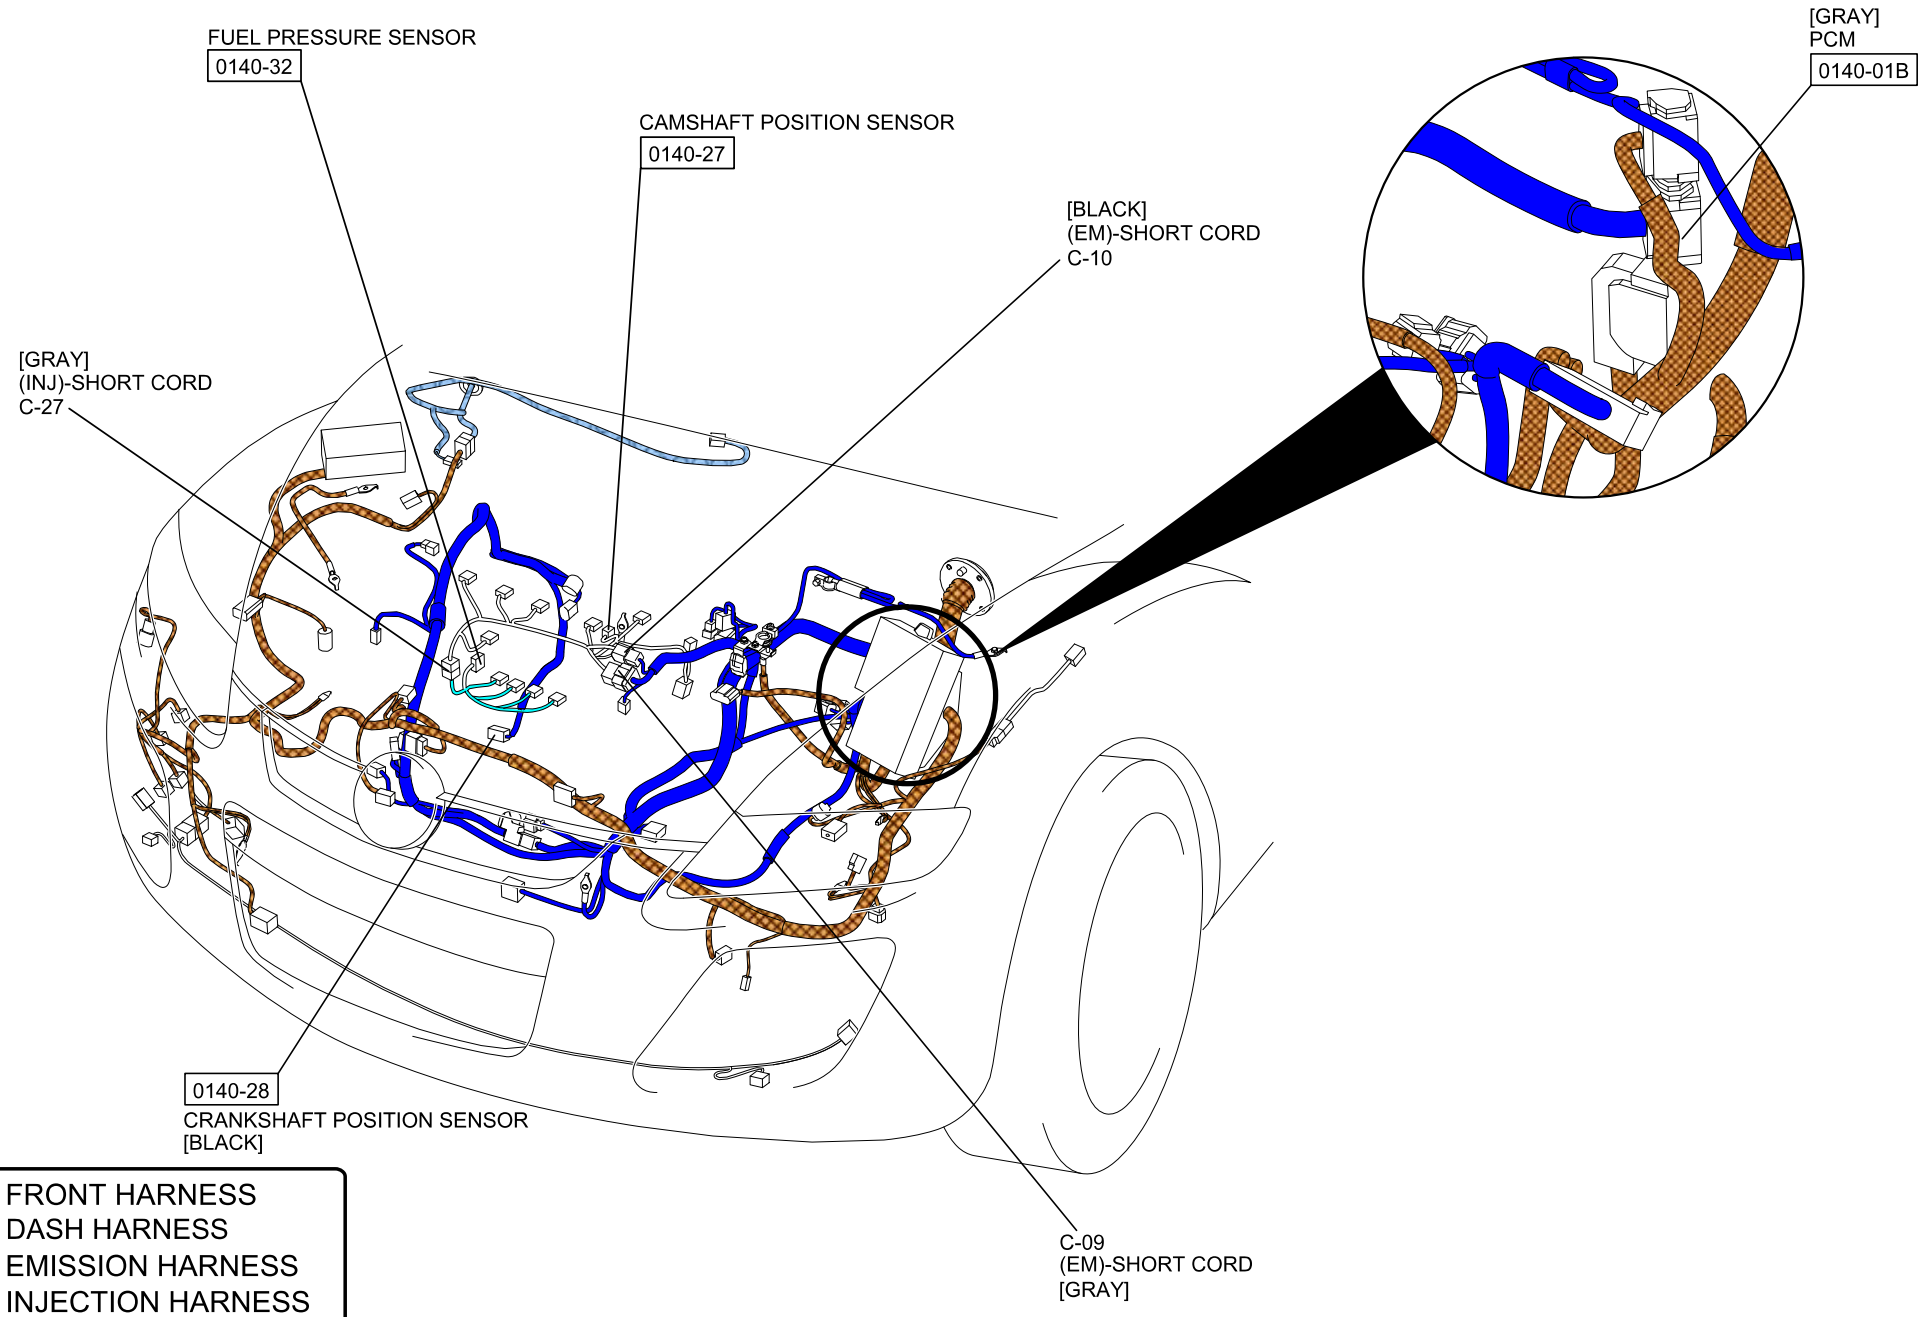 0140-27
CAMSHAFT POSITION
SENSOR

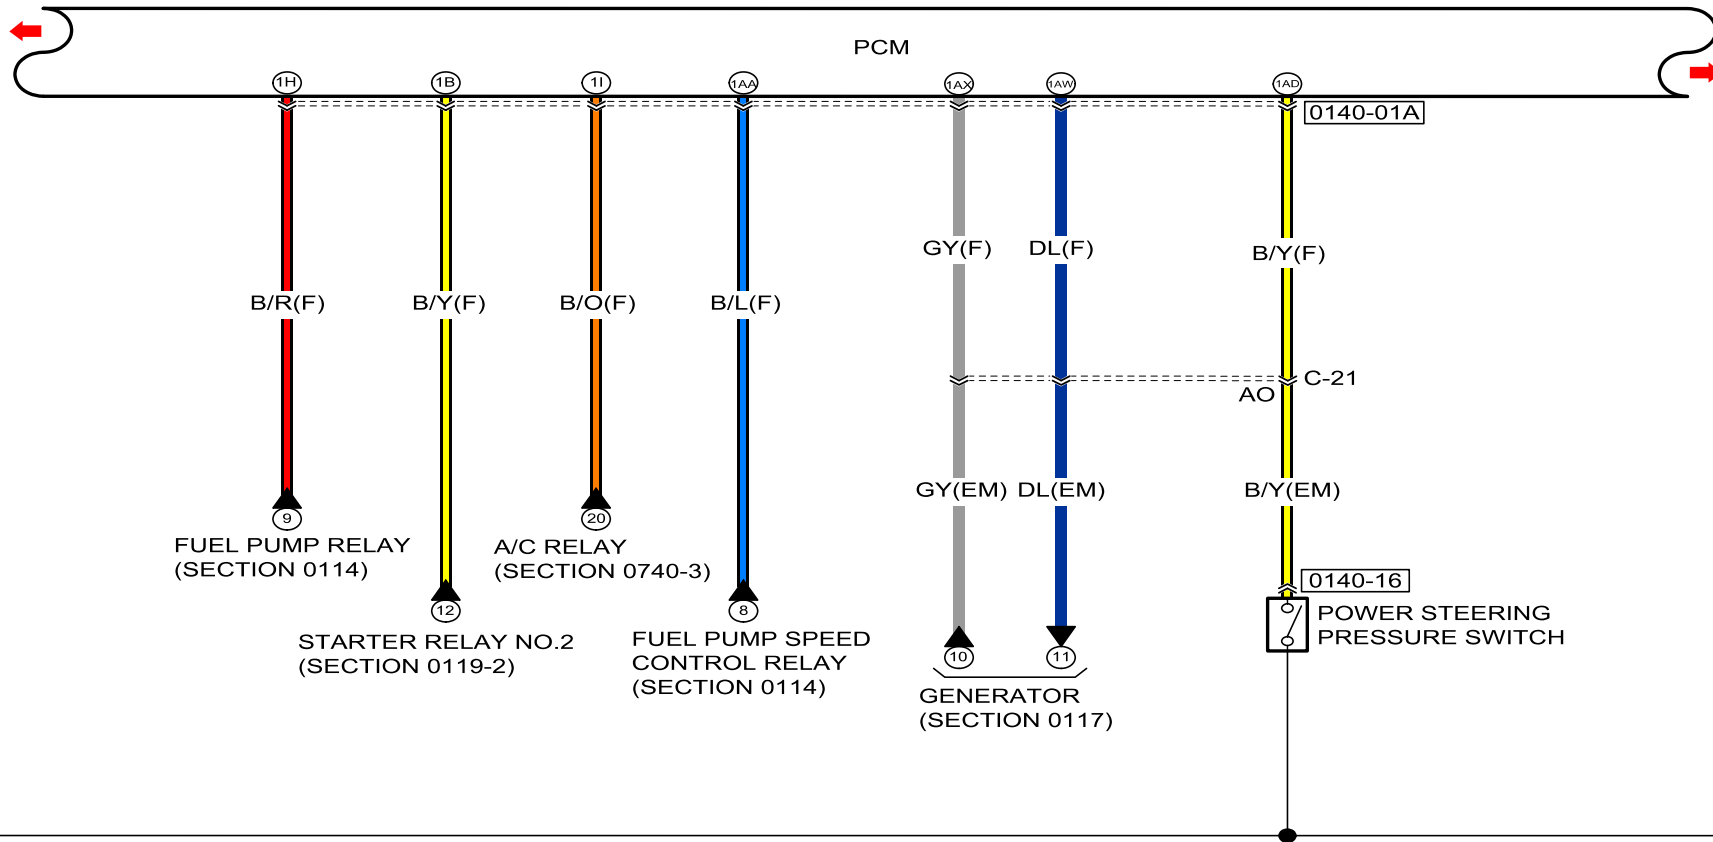 0140-28
CRANKSHAFT POSITION SENSOR

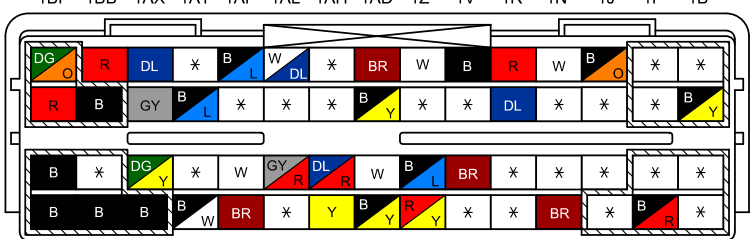 0140-32
FUEL PRESSURE SENSOR






<p>0140-01A PCM</p>  <p>1BE 1BA 1AW 1AS 1AO 1AK 1AG 1AC 1Y 1U 1Q 1M 1I 1E 1A 1BF 1BB 1AX 1AT 1AP 1AL 1AH 1AD 1Z 1V 1R 1N 1J 1F 1B</p> <p>1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C 1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D</p>	<p>0140-16 POWER STEERING PRESSURE SWITCH</p> 			
---	---	--	--	--

 
 
 
POWER STEERING PRESSURE SWITCH

 
0140-16

[GRAY]
PCM

0140-01A

C-21
(F)-(EM)
[BLACK]

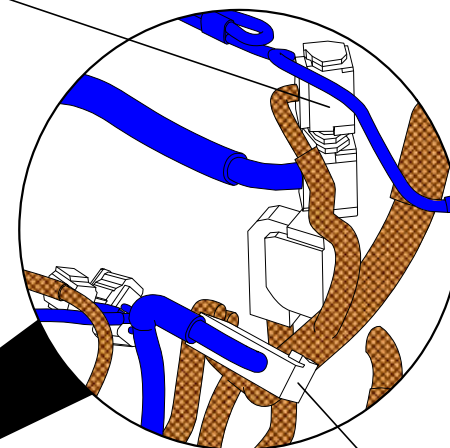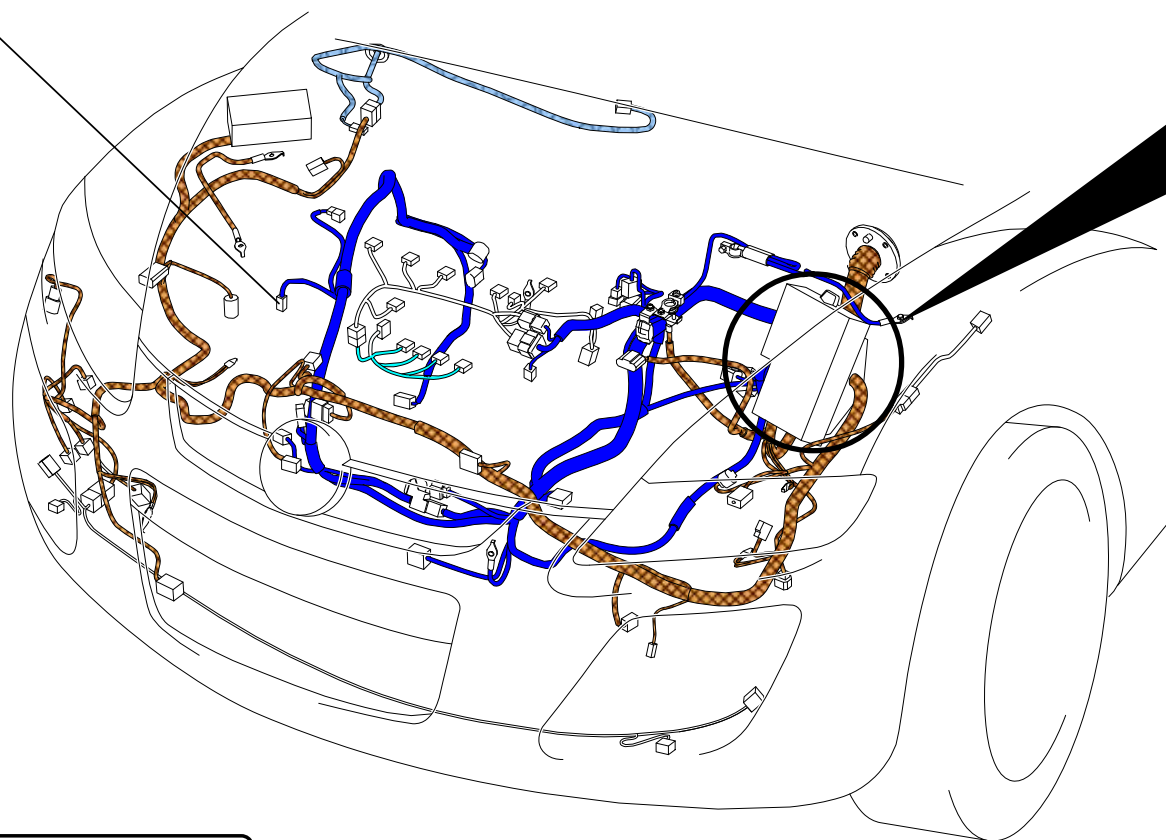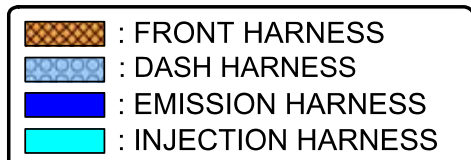

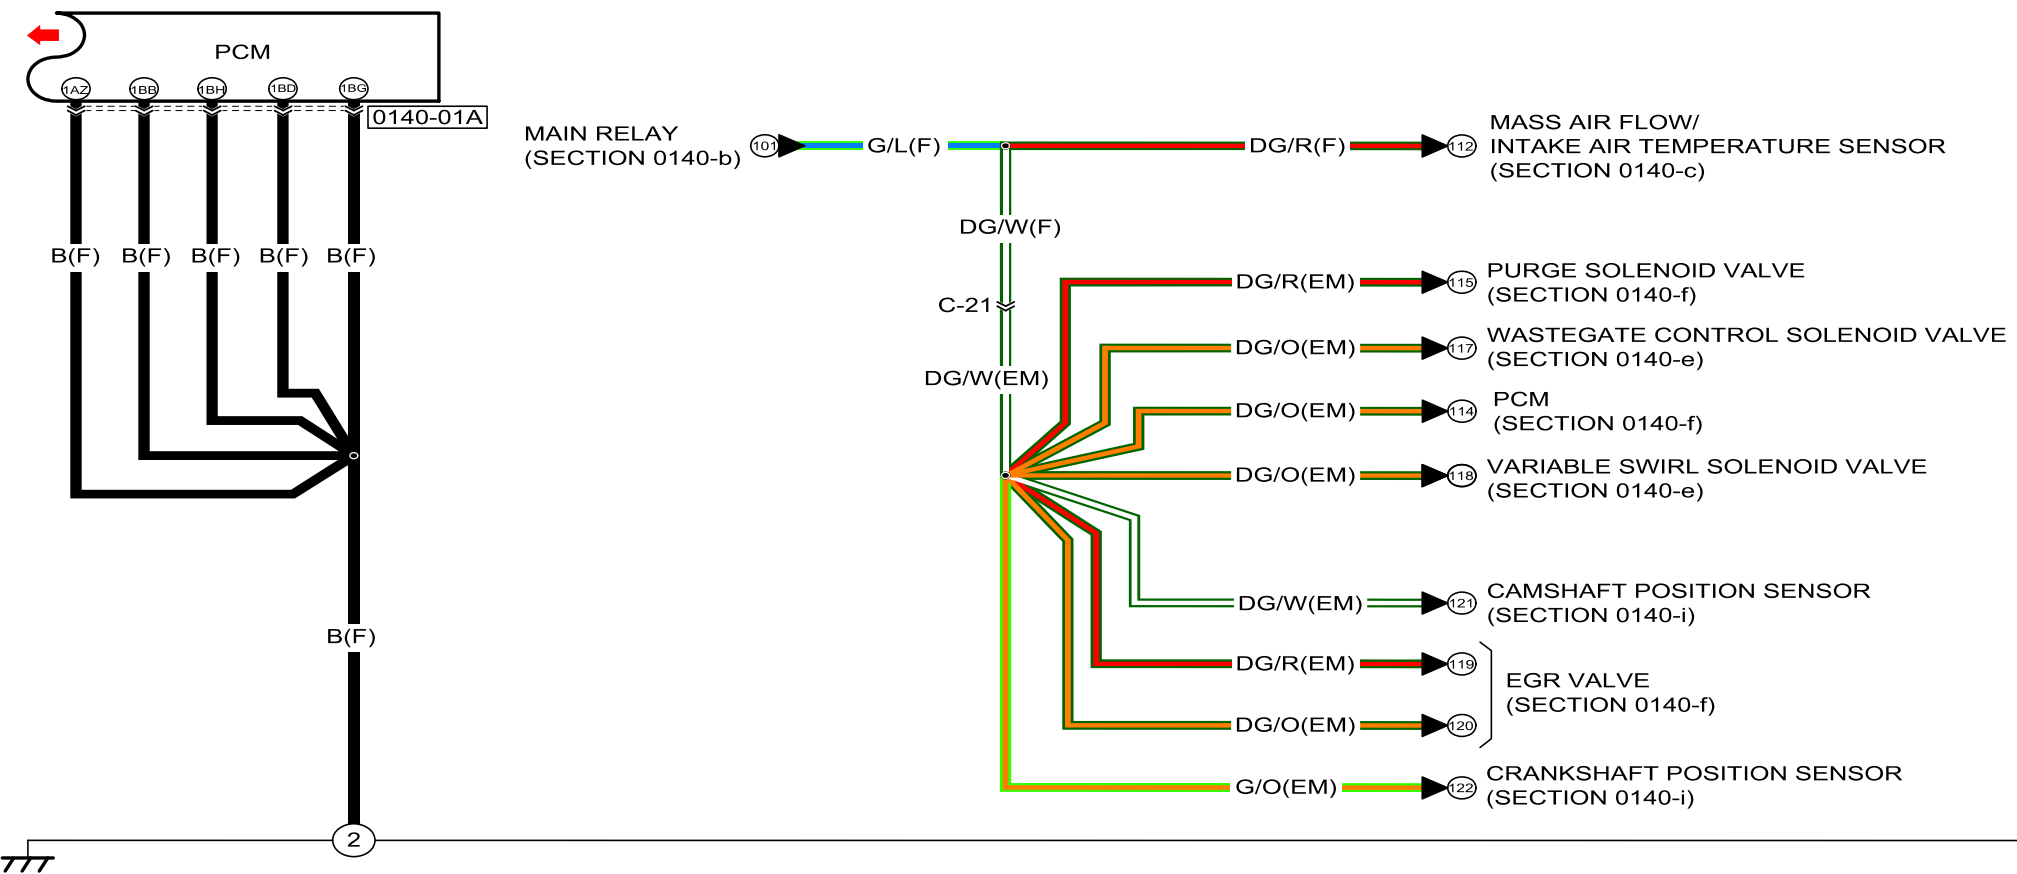

0140-01A
PCM

