 
0140-301A  
PCM

 
1CO 1CK 1CG 1CC 1BY 1BU 1BQ 1BM 1BI 1BE 1BA 1AW 1AS 1AO 1AK 1AG 1AC 1Y 1U 1Q 1M 1I 1E 1A  
1CP 1CL 1CH 1CD 1BZ 1BV 1BR 1BN 1BJ 1BF 1BB 1AX 1AT 1AP 1AL 1AH 1AD 1Z 1V 1R 1N 1J 1F 1B

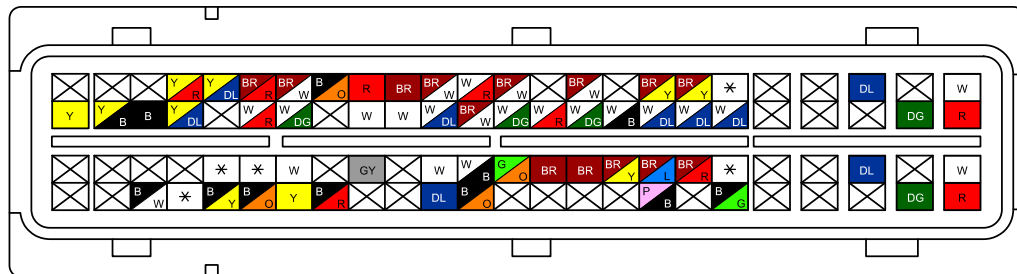

1CQ 1CM 1CI 1CE 1CA 1BW 1BS 1BO 1BK 1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C  
1CR 1CN 1CJ 1CF 1CB 1BX 1BT 1BP 1BL 1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D

0140-301B  
PCM

2BC 2AY 2AU 2AQ 2AM 2AI 2AE 2AA 2W 2S 2O 2K 2G 2D 2A  
2BD 2AZ 2AV 2AR 2AN 2AJ 2AF 2AB 2X 2T 2P 2L 2H

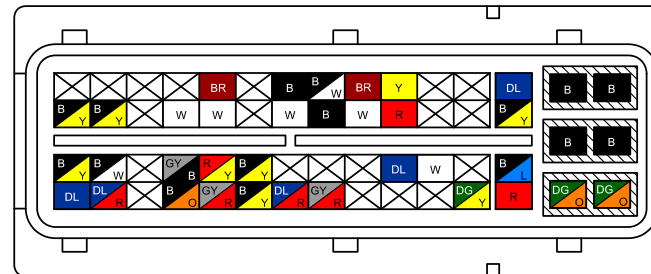

2BE 2BA 2AW 2AS 2AO 2AK 2AG 2AC 2Y 2U 2Q 2M 2I 2E 2B  
2BF 2BB 2AX 2AT 2AP 2AL 2AH 2AD 2Z 2V 2R 2N 2J 2F 2C

0140-302  
ENGINE HARNESS-  
SHORT CORD

 
ENGINE HARNESS



SHORT CORD

0140-303  
GLOW PLUG

(REFER TO 00F SECTION)  
RELAY AND FUSE BLOCK  
F-04

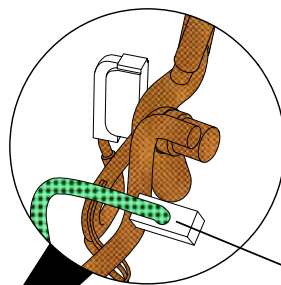

C-21  
(F)-(E)  
[BLACK]

(REFER TO 00F SECTION)  
MAIN FUSE BLOCK  
F-01


②

0140-302  
(E)-SHORT CORD

0140-303  
GLOW PLUG


	: FRONT HARNESS
	: ENGINE HARNESS
	: DASH HARNESS
	: REAR HARNESS
	: INSTRUMENT PANEL HARNESS

 IGNITION SWITCH  
C-01

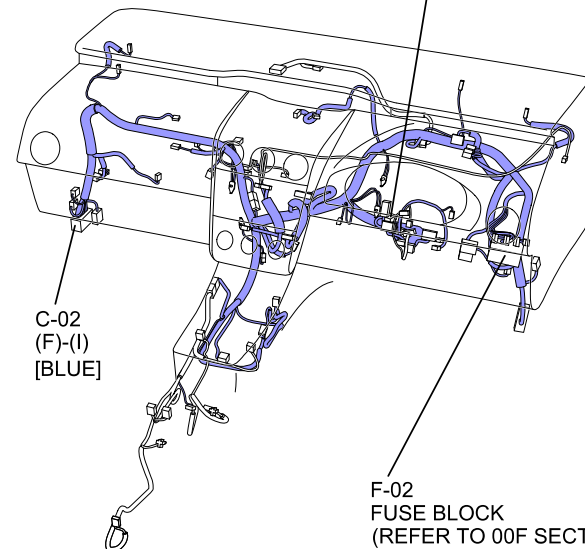

C-02  
(F)-(I)  
[BLUE]

 
F-02  
FUSE BLOCK  
(REFER TO 00F SECTION)

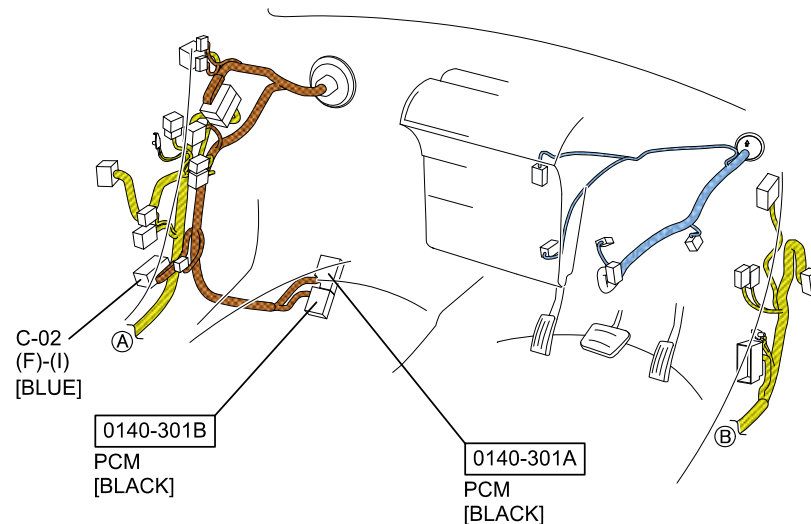

C-02  
(F)-(I)  
[BLUE]


0140-301B  
PCM  
[BLACK]

 0140-301A  
PCM  
[BLACK]

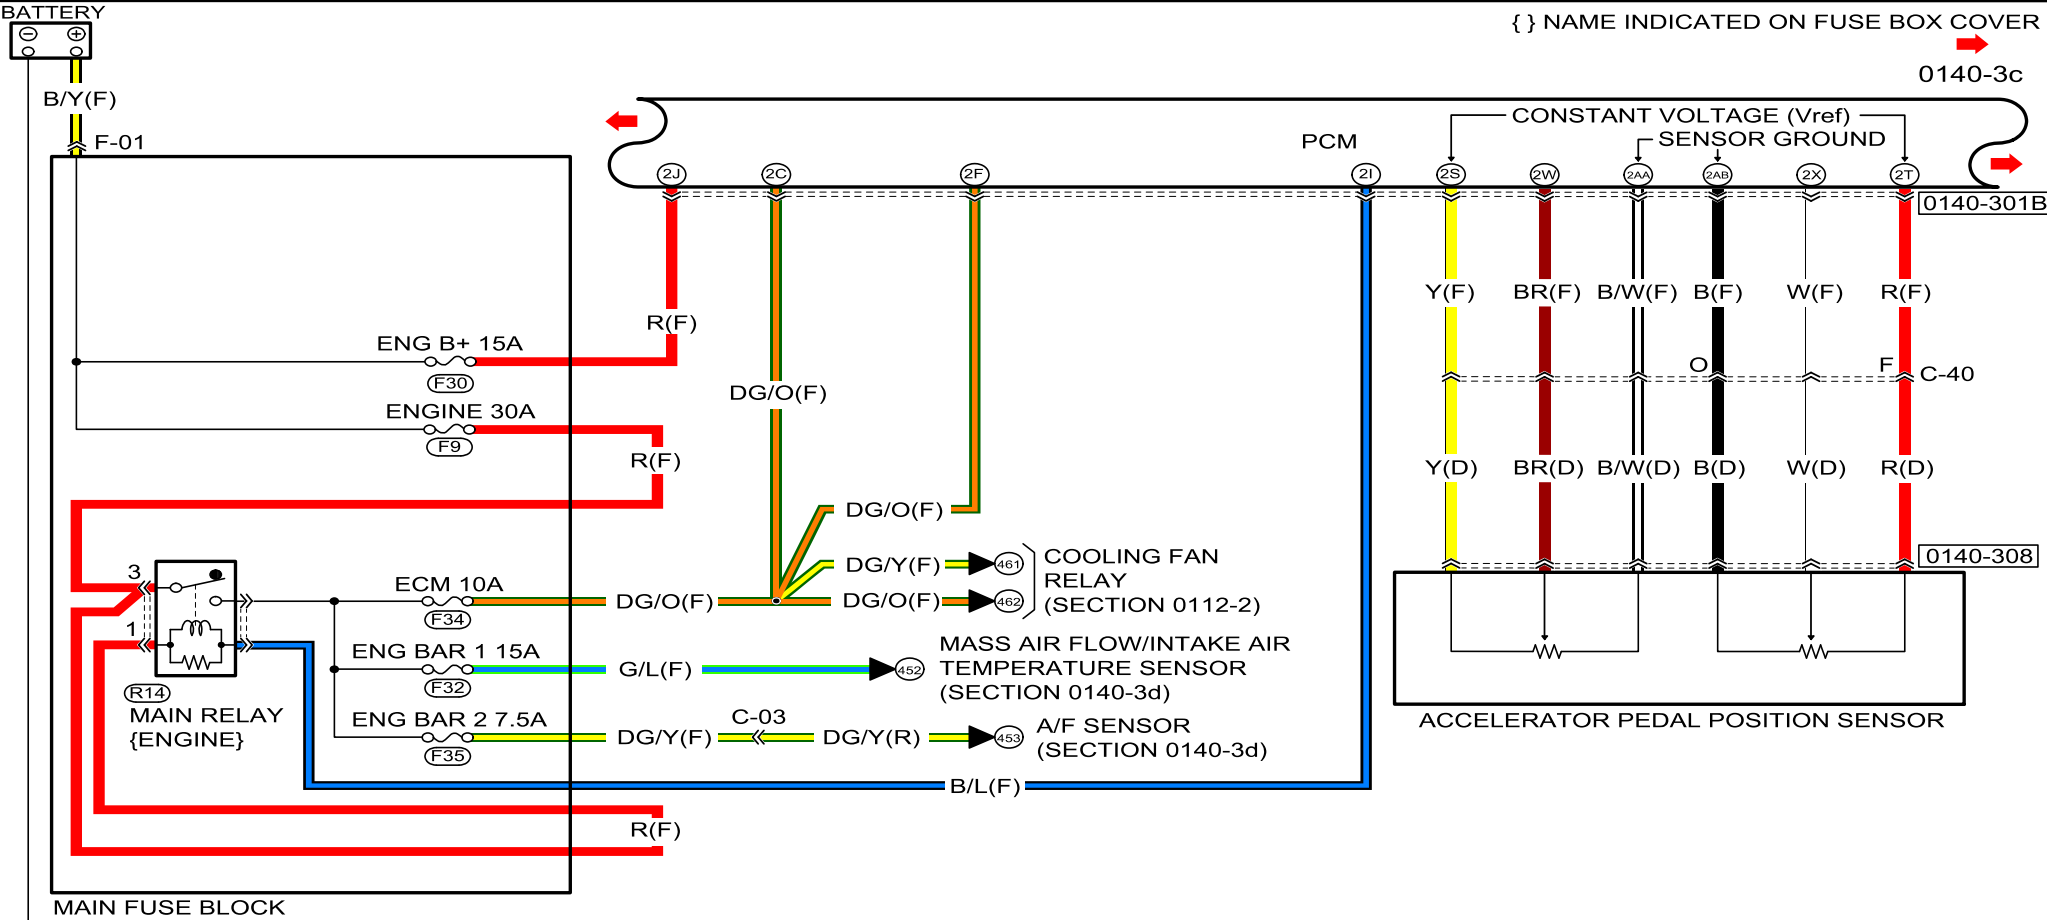



777

 0140-301B  
PCM

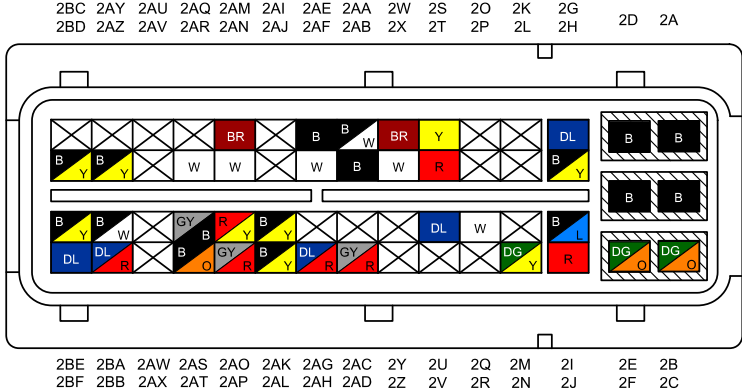

 
 
0140-308  
ACCELERATOR PEDAL POSITION SENSOR






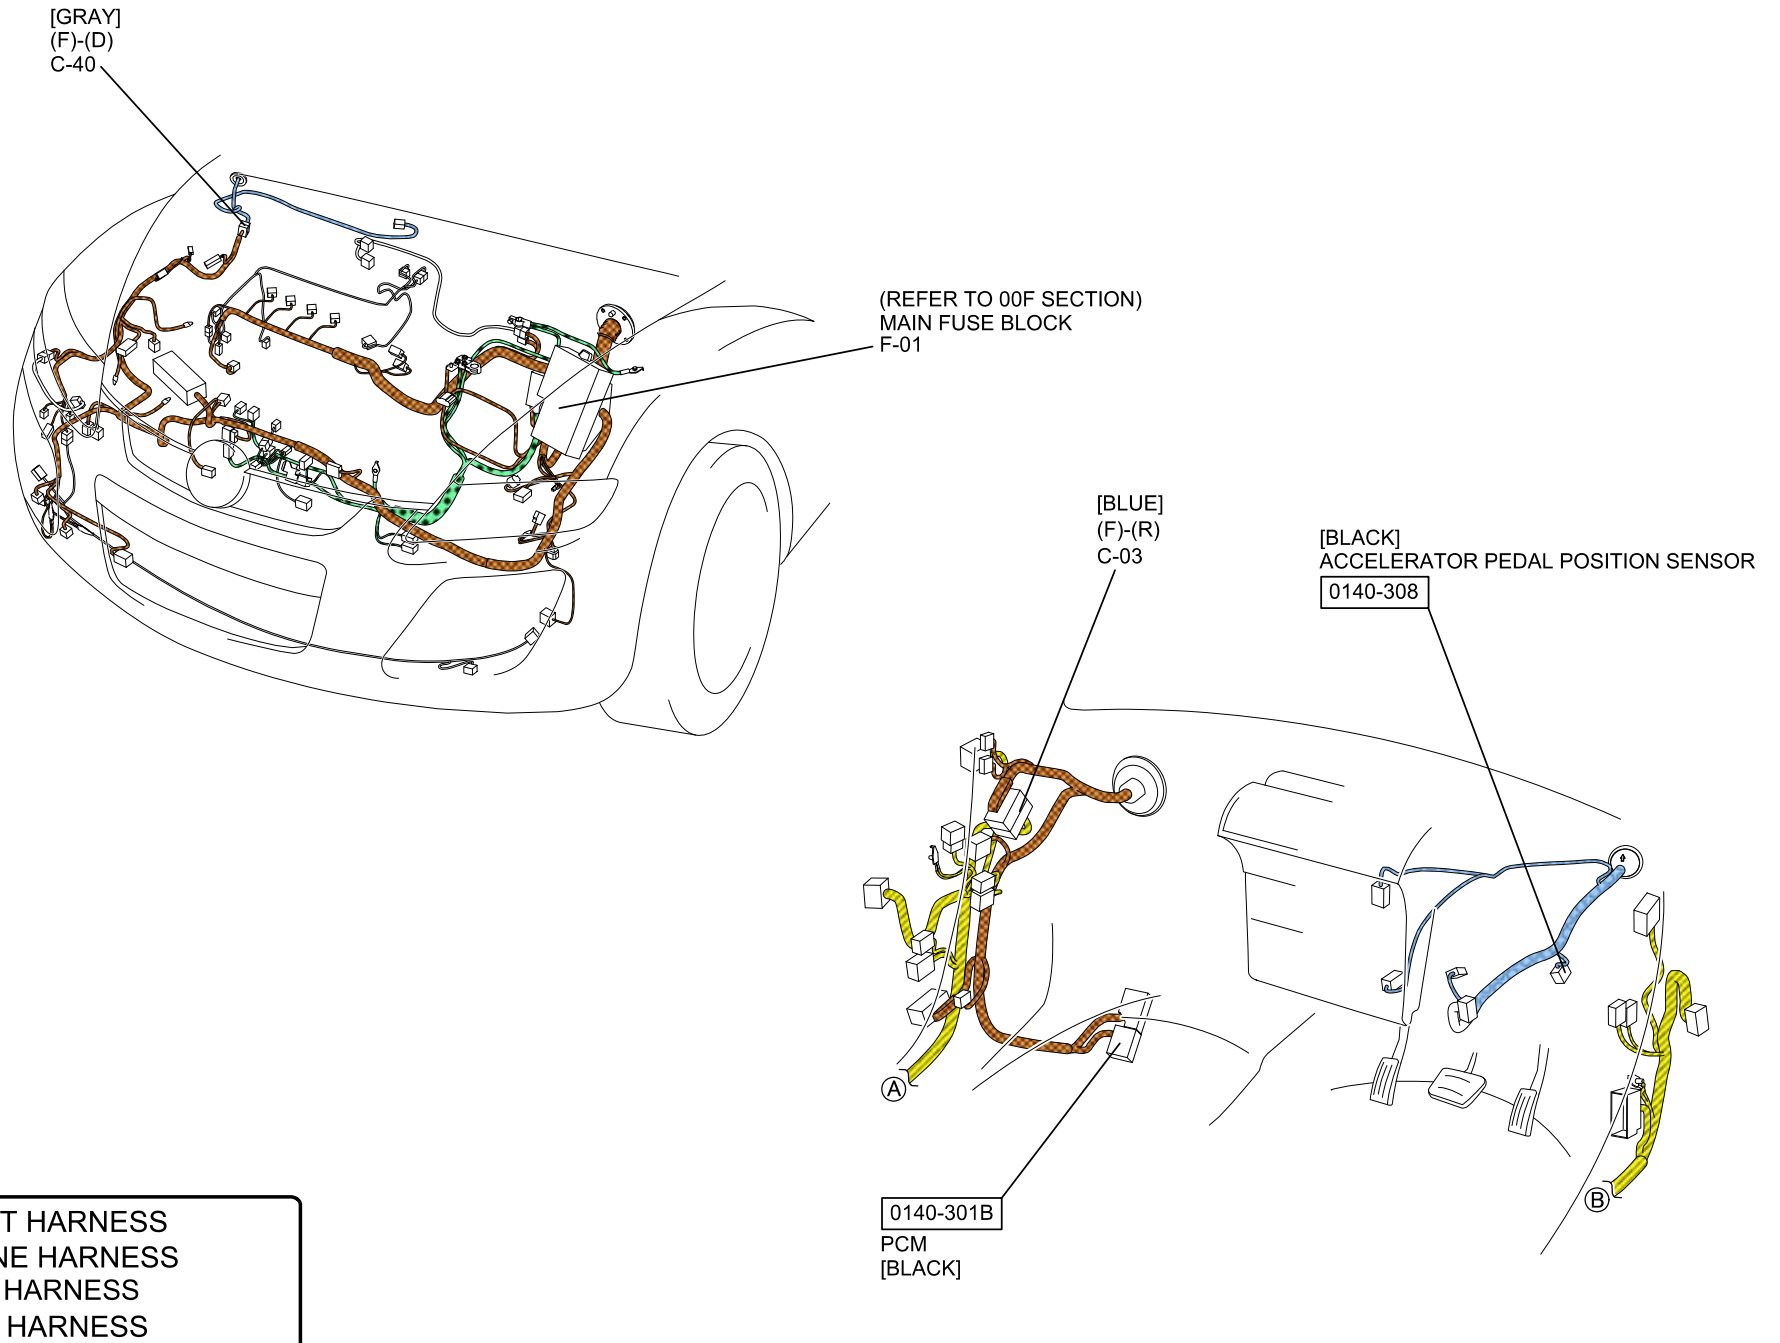


## CONTROL SYSTEM (MZR-CD 2.2)

       
0140-3c

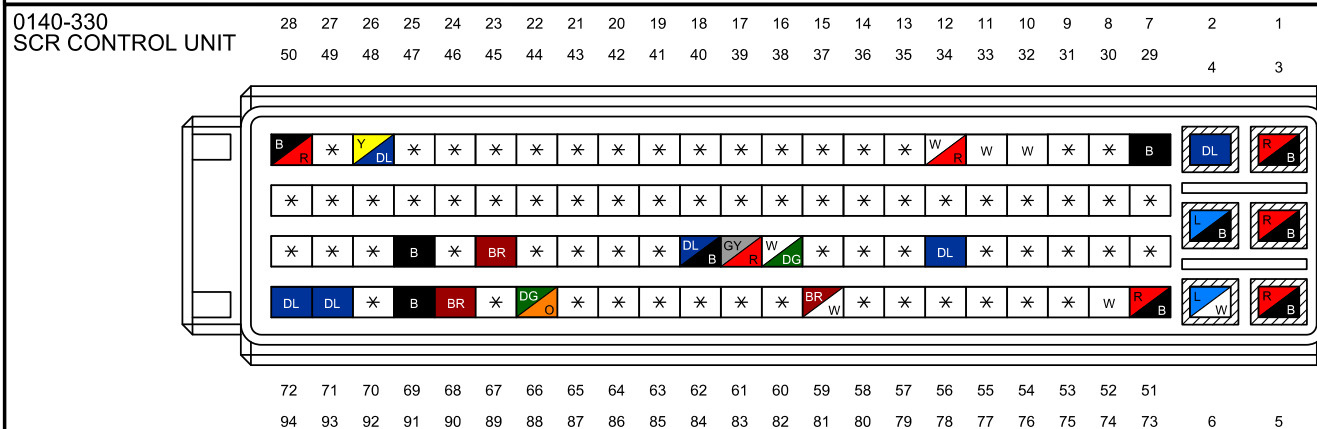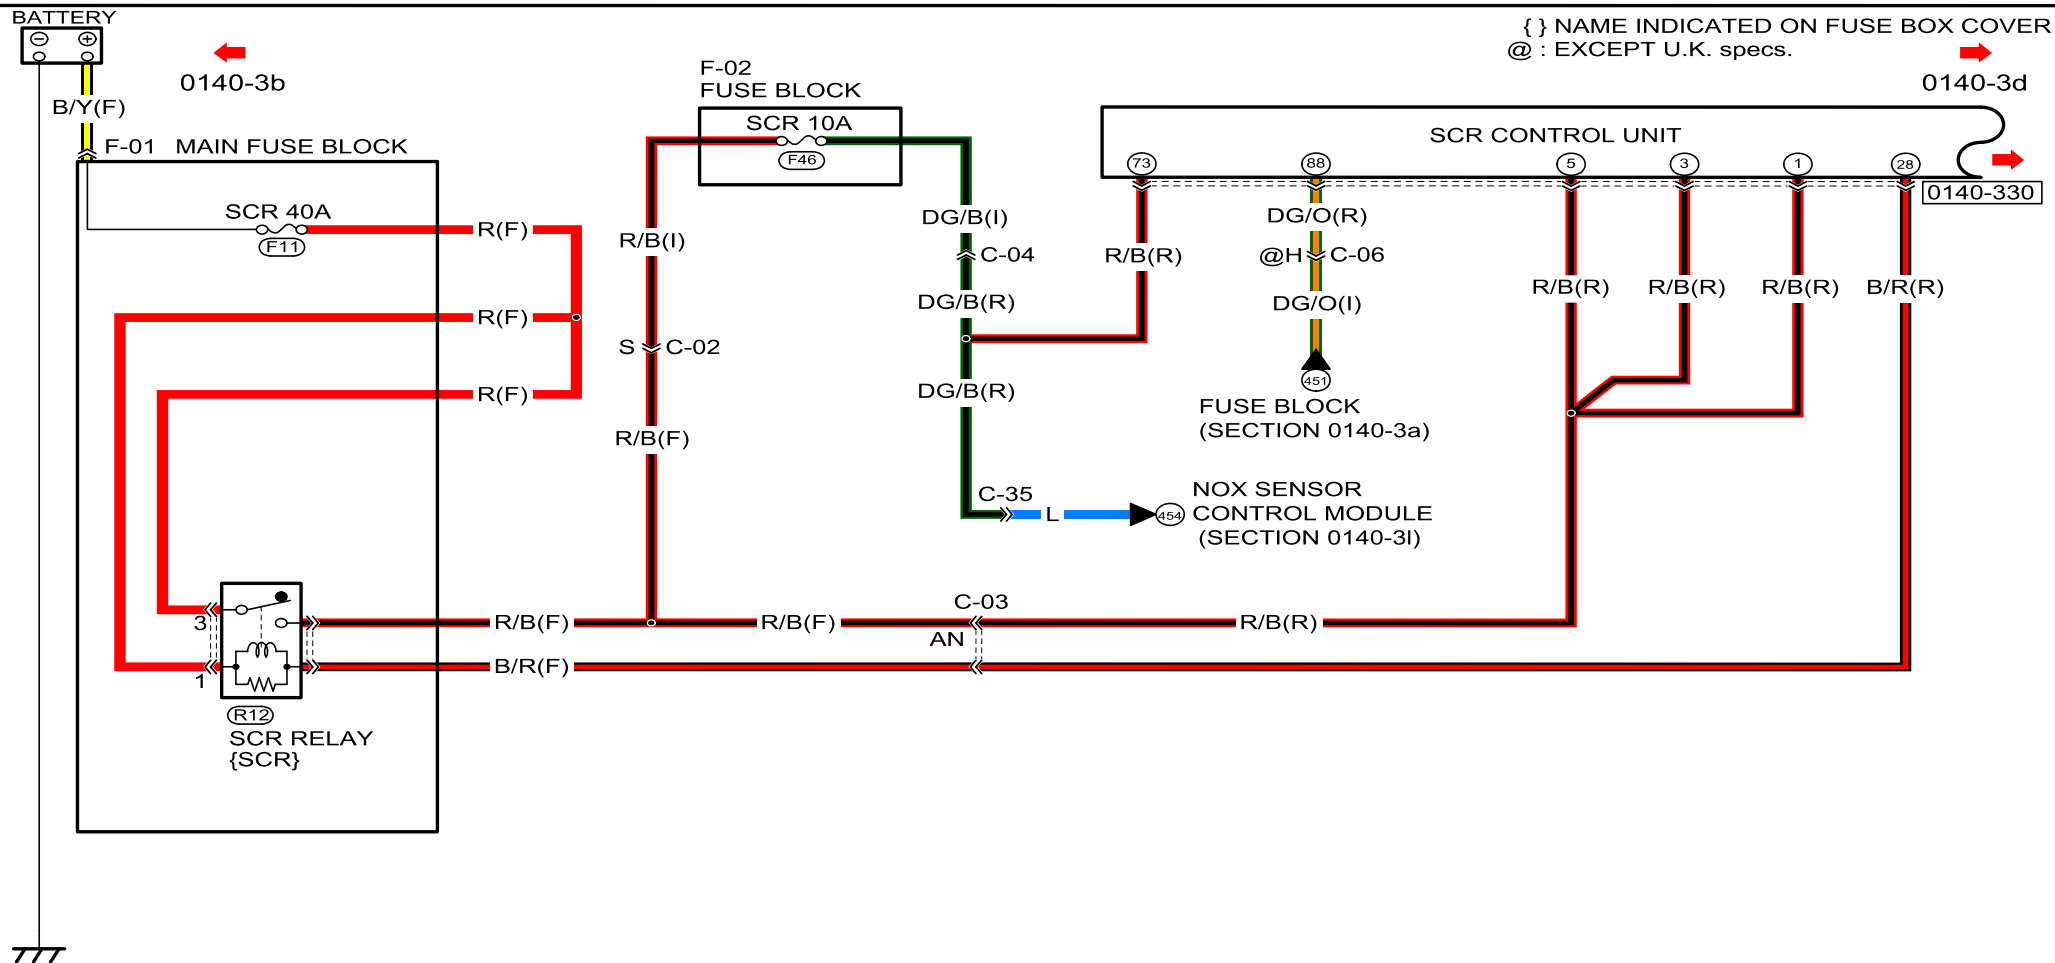

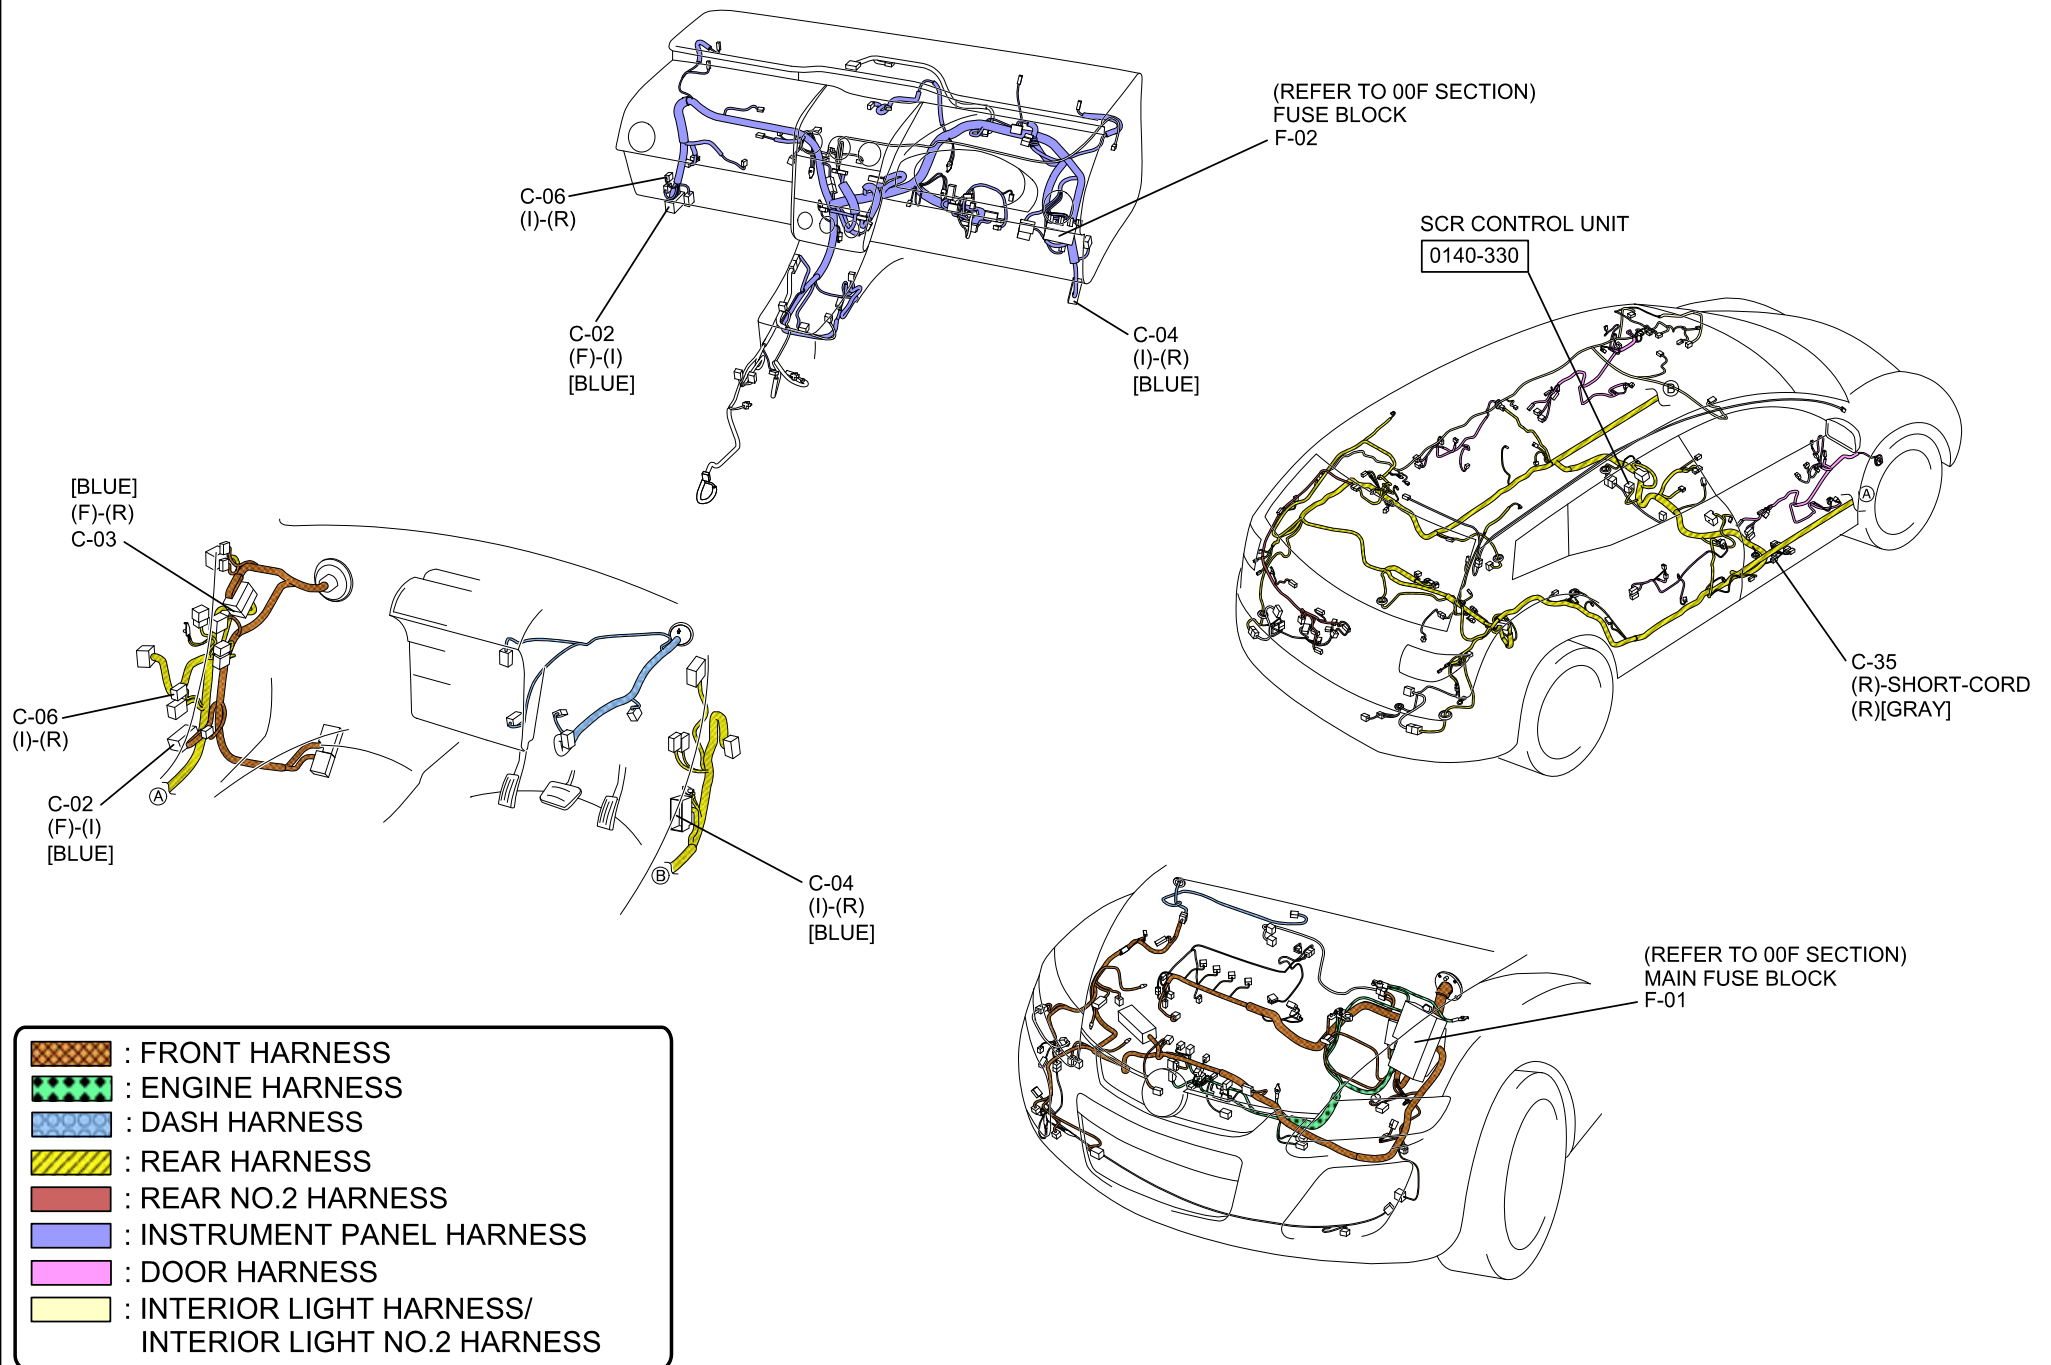 





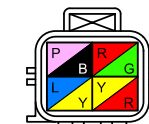 
0140-306  
EGR COOLER BYPASS  
VALVE




0140-305  
VARIABLE BOOST  
CONTROL SOLENOID  
VALVE




0140-307	A/F SENSOR
----------	------------





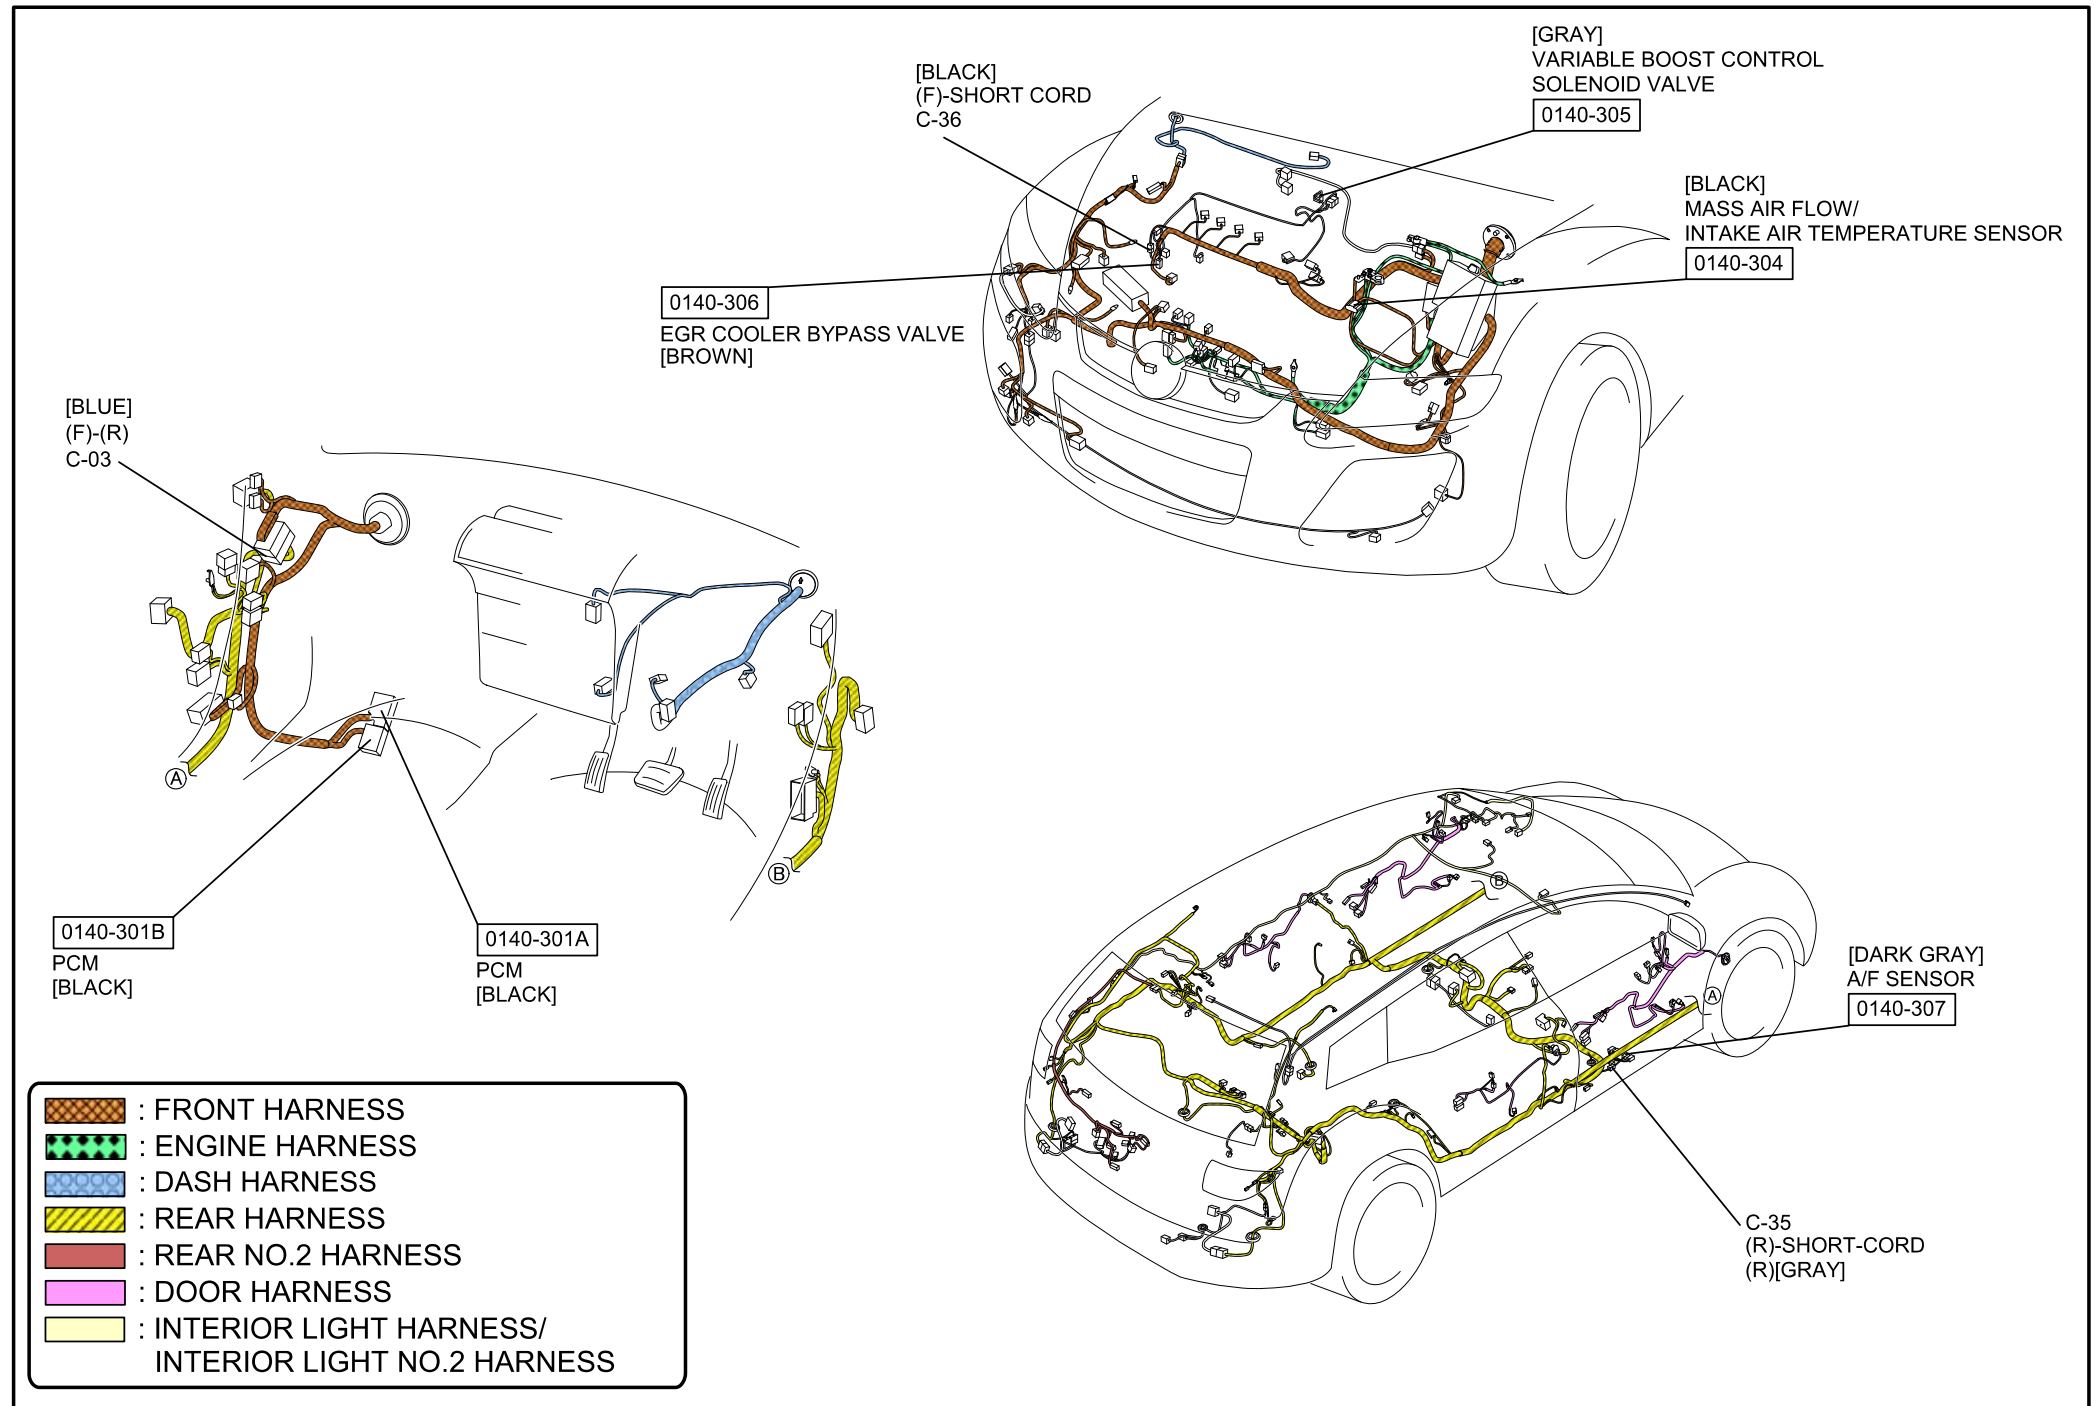 




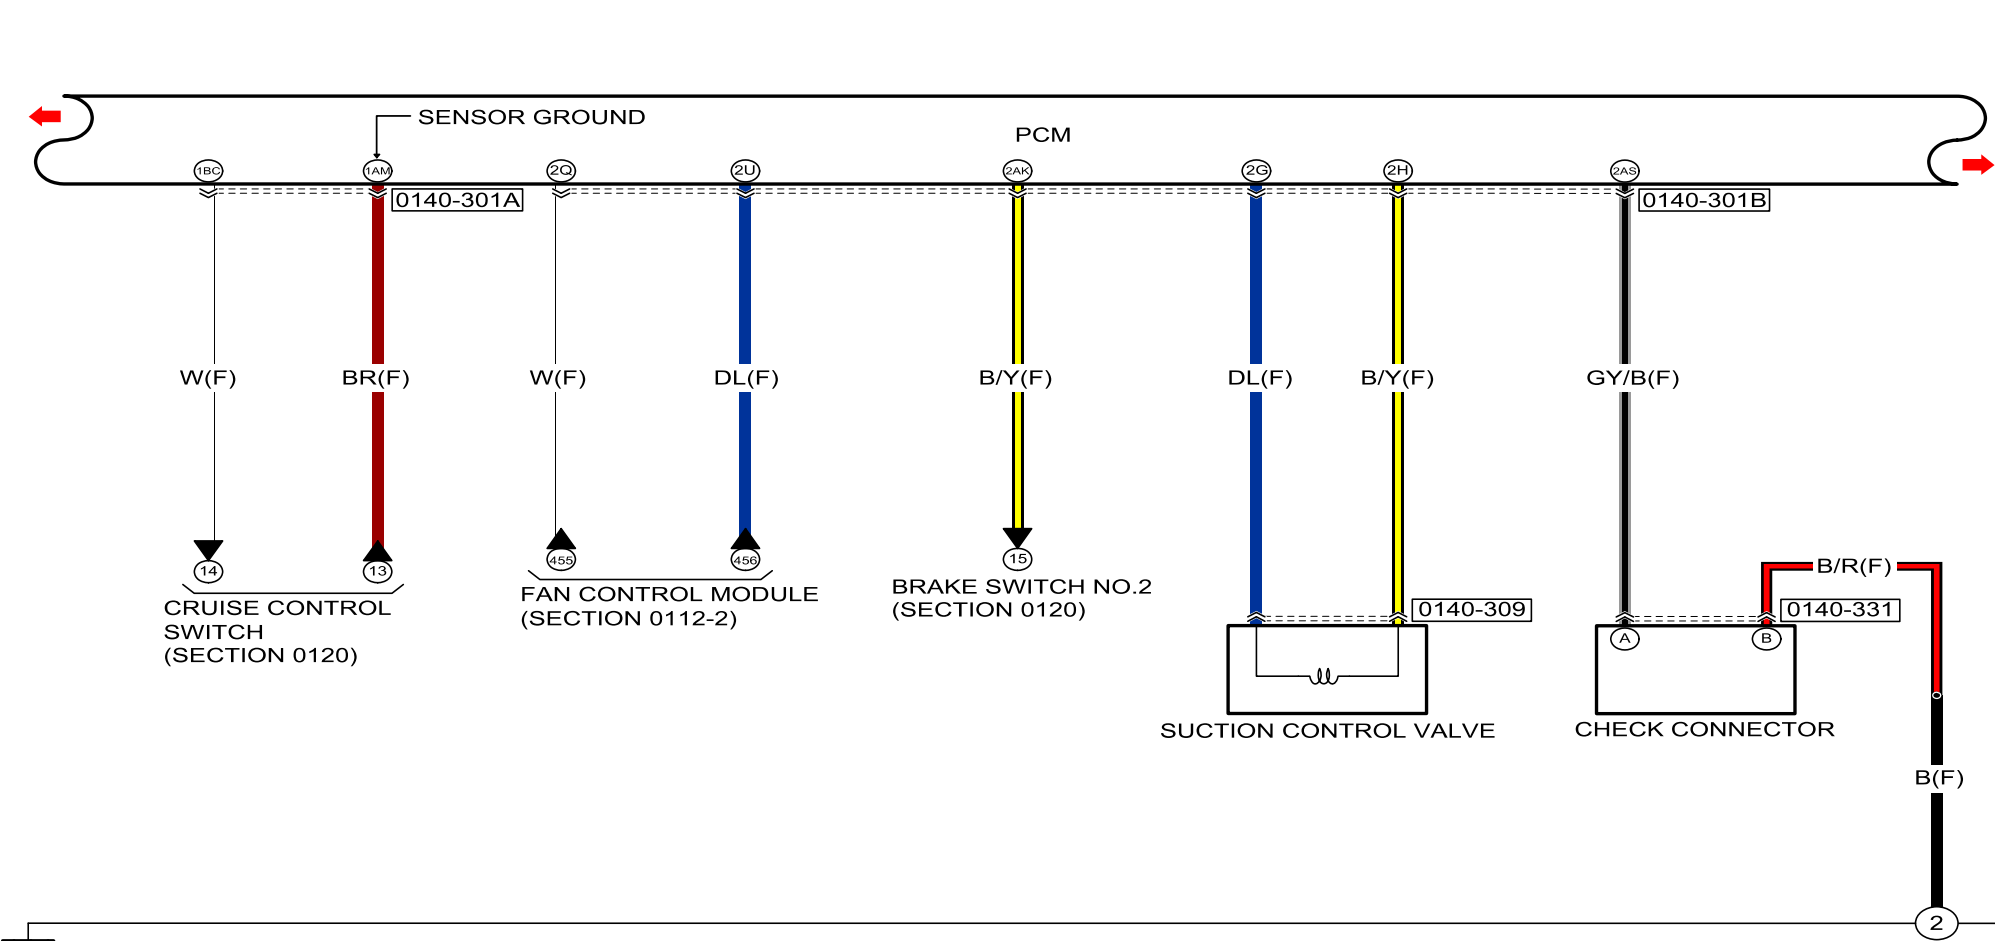 

0140-301A  
PCM

 
1CO 1CK 1CG 1CC 1BY 1BU 1BQ 1BM 1BI 1BE 1BA 1AW 1AS 1AO 1AK 1AG 1AC 1Y 1U 1Q 1M 1I 1E 1A  
1CP 1CL 1CH 1CD 1BZ 1BV 1BR 1BN 1BJ 1BF 1BB 1AX 1AT 1AP 1AL 1AH 1AD 1Z 1V 1R 1N 1J 1F 1B

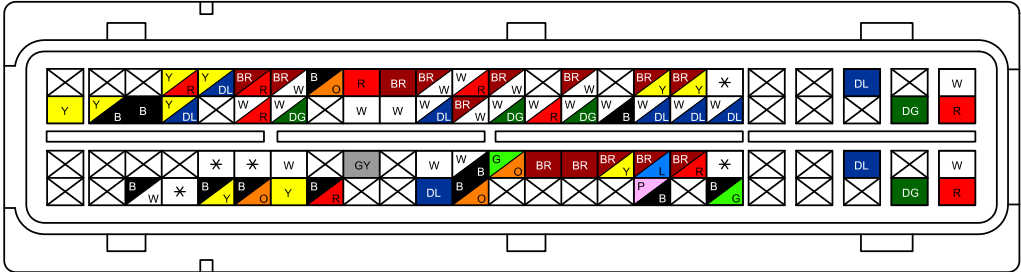

1CQ 1CM 1CI 1CE 1CA 1BW 1BS 1BO 1BK 1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C  
1CR 1CN 1CJ 1CF 1CB 1BX 1BT 1BP 1BL 1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D


0140-301B  
PCM

 2BC 2AY 2AU 2AQ 2AM 2AI 2AE 2AA 2W 2S 2O 2K 2G 2D 2A  
2BD 2AZ 2AV 2AR 2AN 2AJ 2AF 2AB 2X 2T 2P 2L 2H 2D 2A

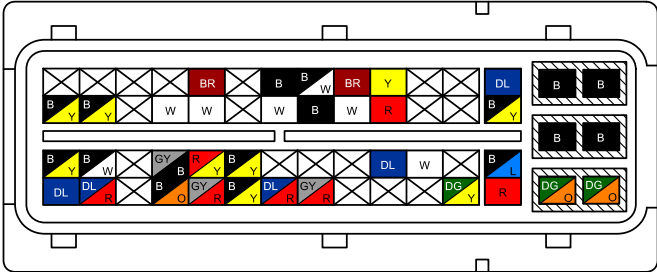



2BE 2BA 2AW 2AS 2AO 2AK 2AG 2AC 2Y 2U 2Q 2M 2I 2E 2B  
2BF 2BB 2AX 2AT 2AP 2AL 2AH 2AD 2Z 2V 2R 2N 2J 2F 2C

 
0140-309  
SUCTION CONTROL  
VALVE




0140-331  
CHECK CONNECTOR

 

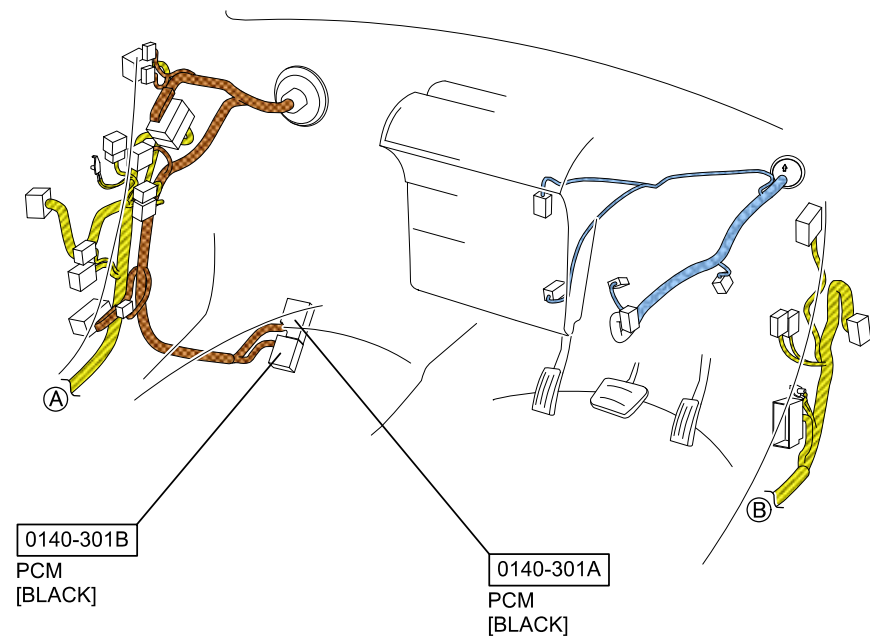 


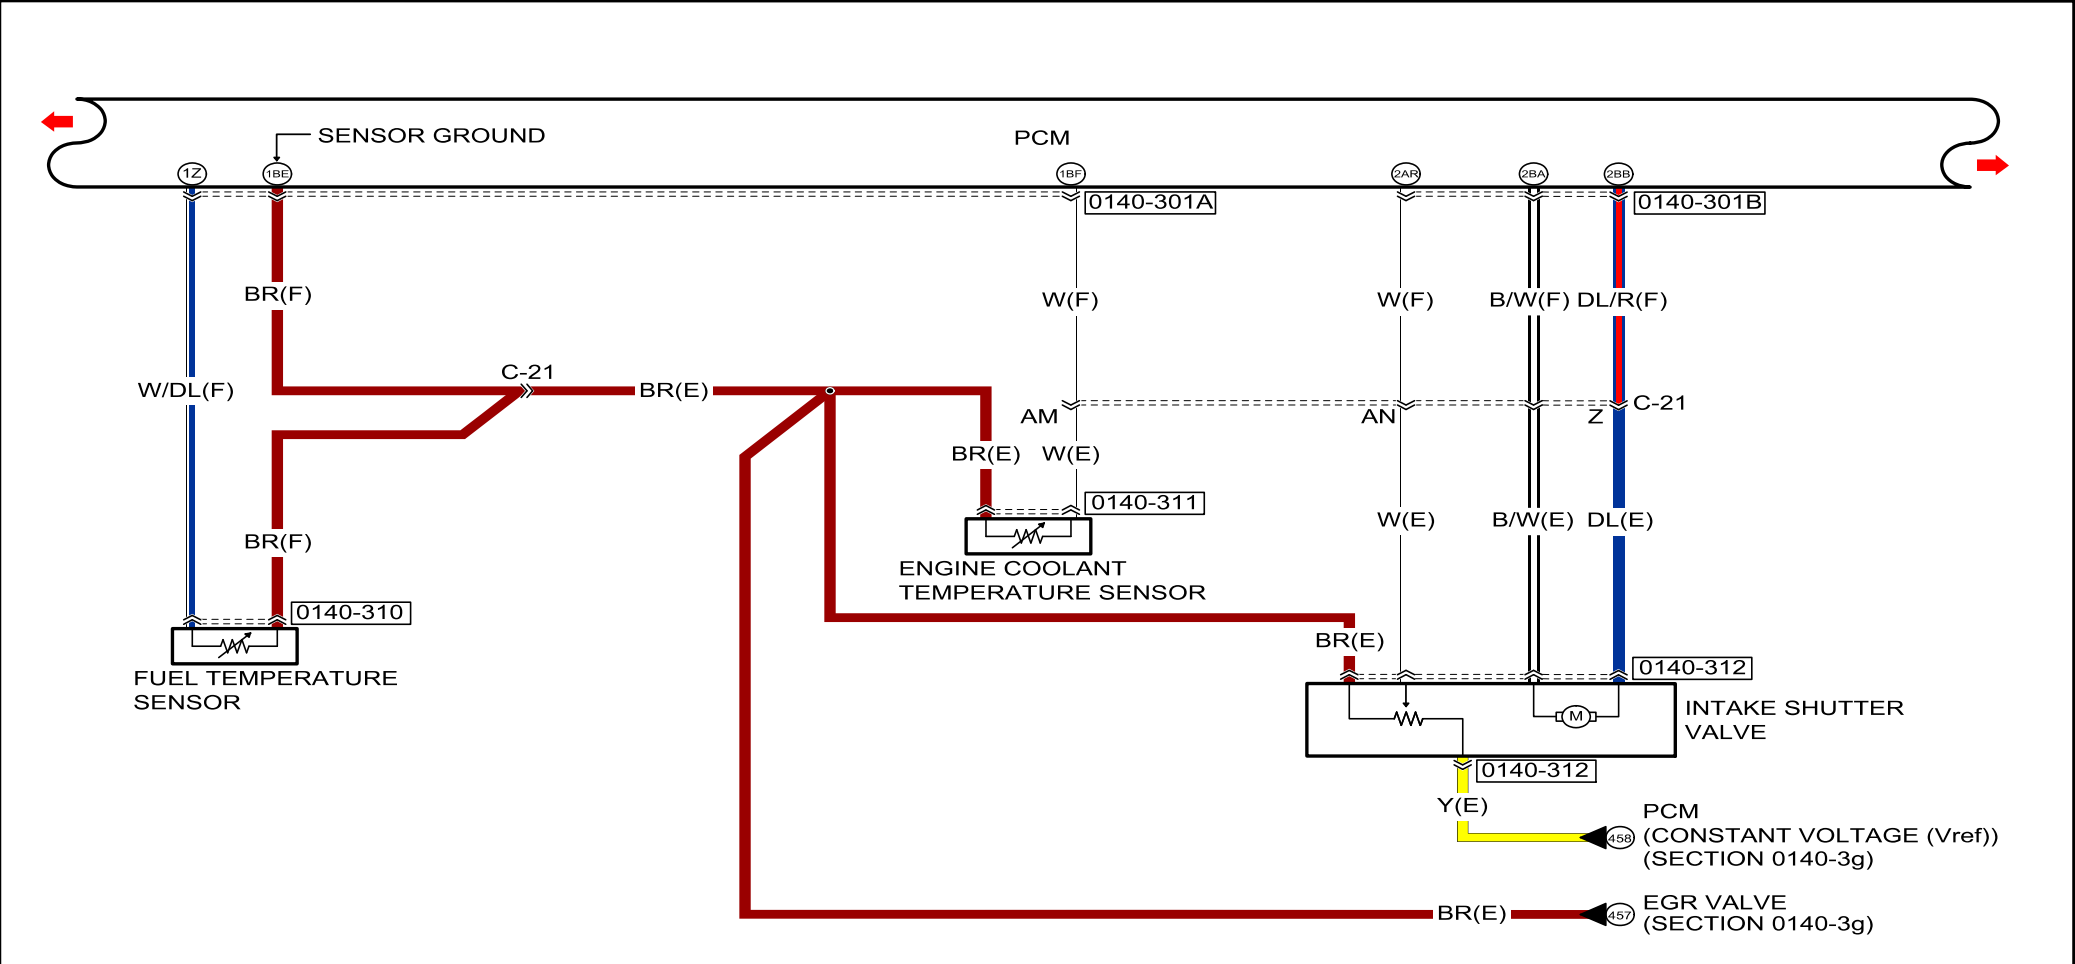 


0140-301A  
PCM

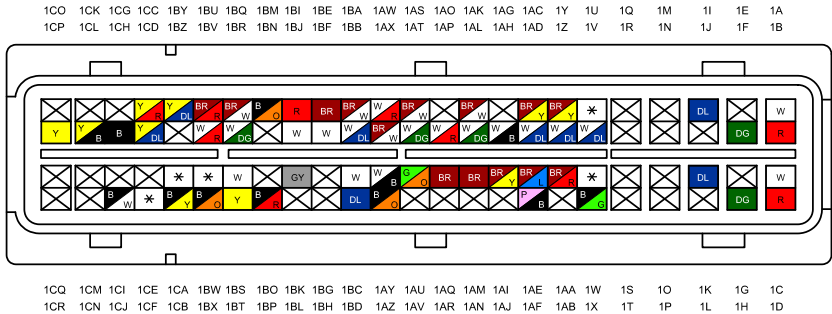 

0140-301B  
PCM

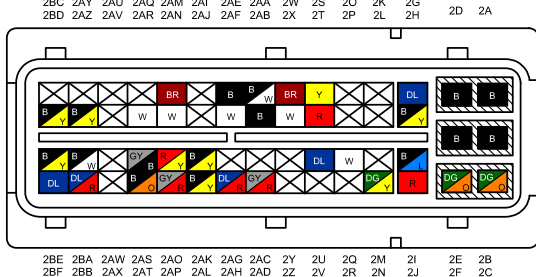 


0140-310  
FUEL TEMPERATURE  
SENSOR

 








0140-311  
ENGINE COOLANT  
TEMPERATURE SENSOR




        
0140-312  
INTAKE SHUTTER VALVE



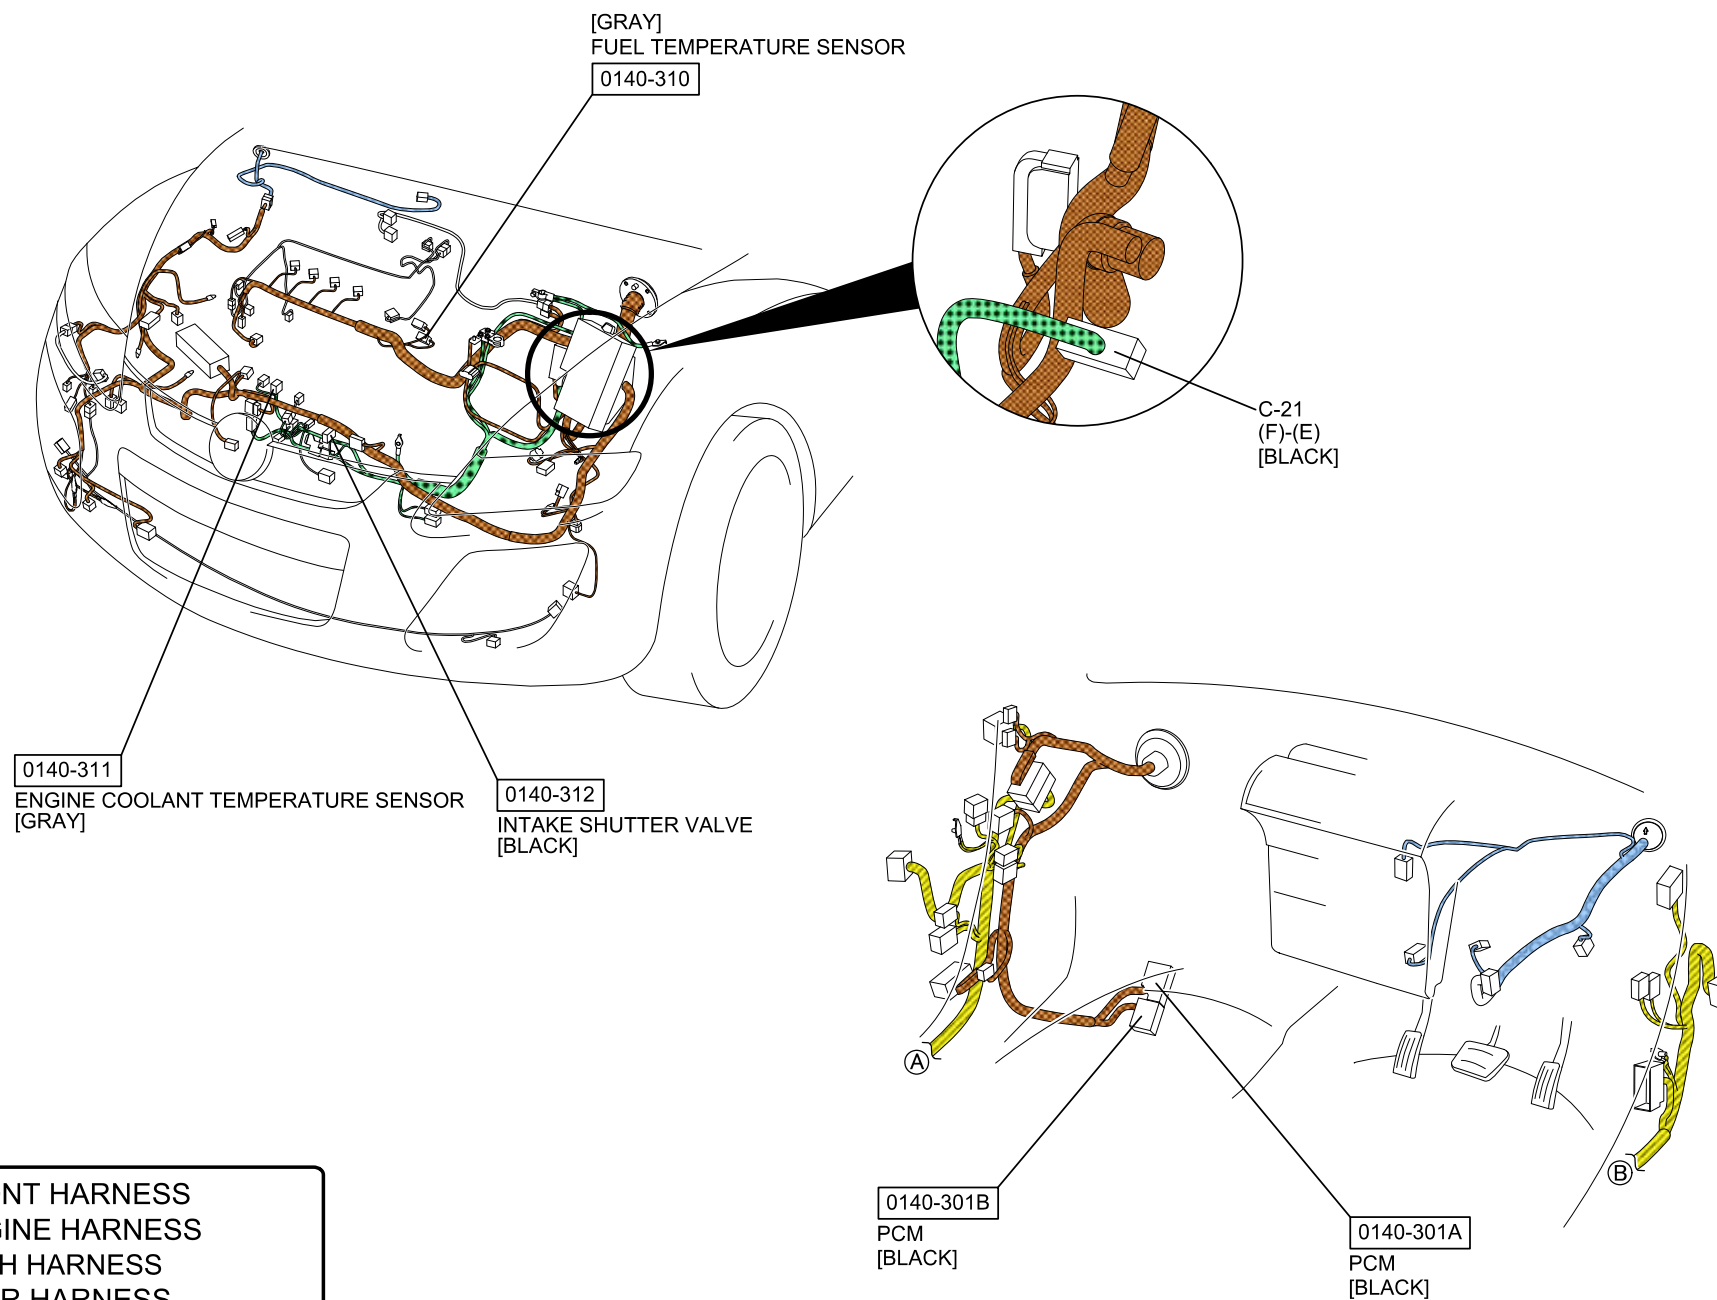

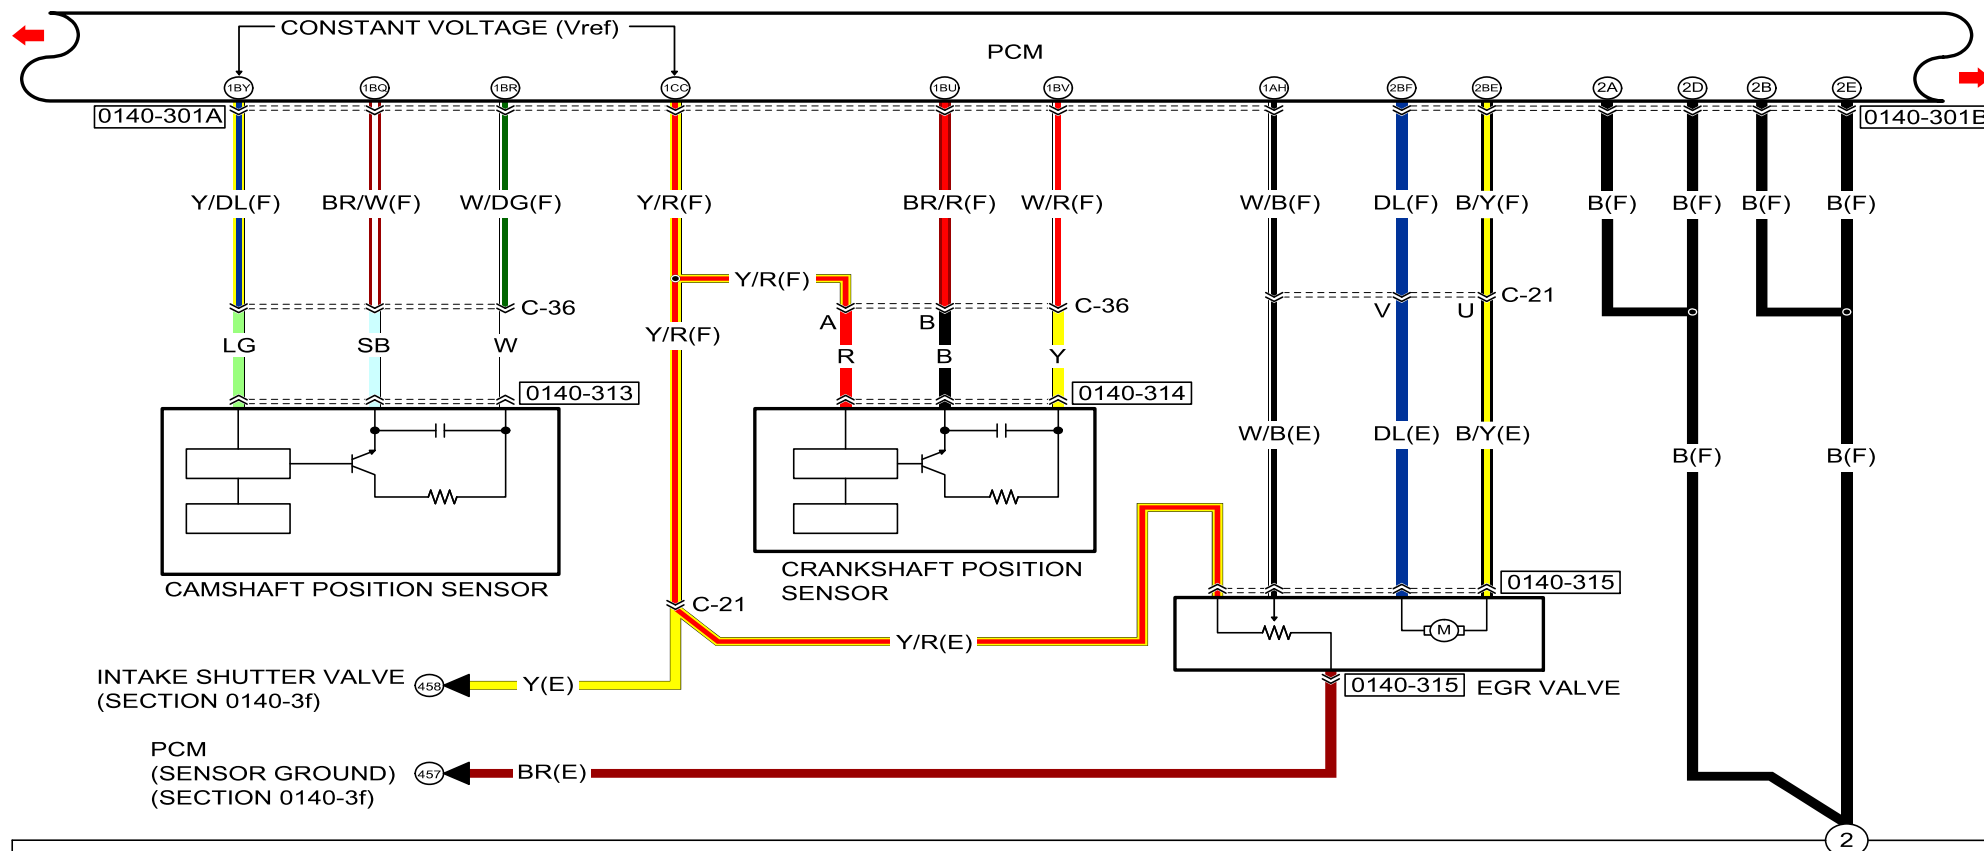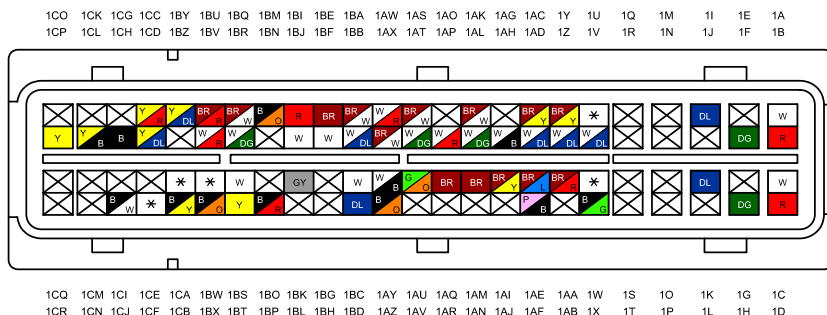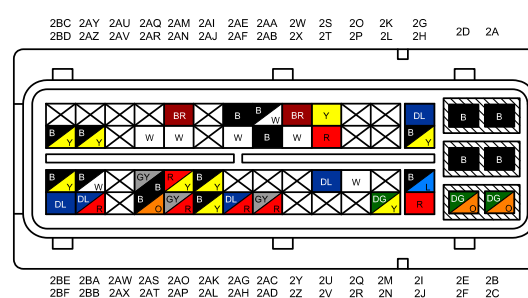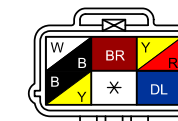  
0140-301A  
PCM0140-301B  
PCM0140-313  
CAMSHAFT POSITION  
SENSOR0140-314  
CRANKSHAFT  
POSITION SENSOR0140-315  
EGR VALVE

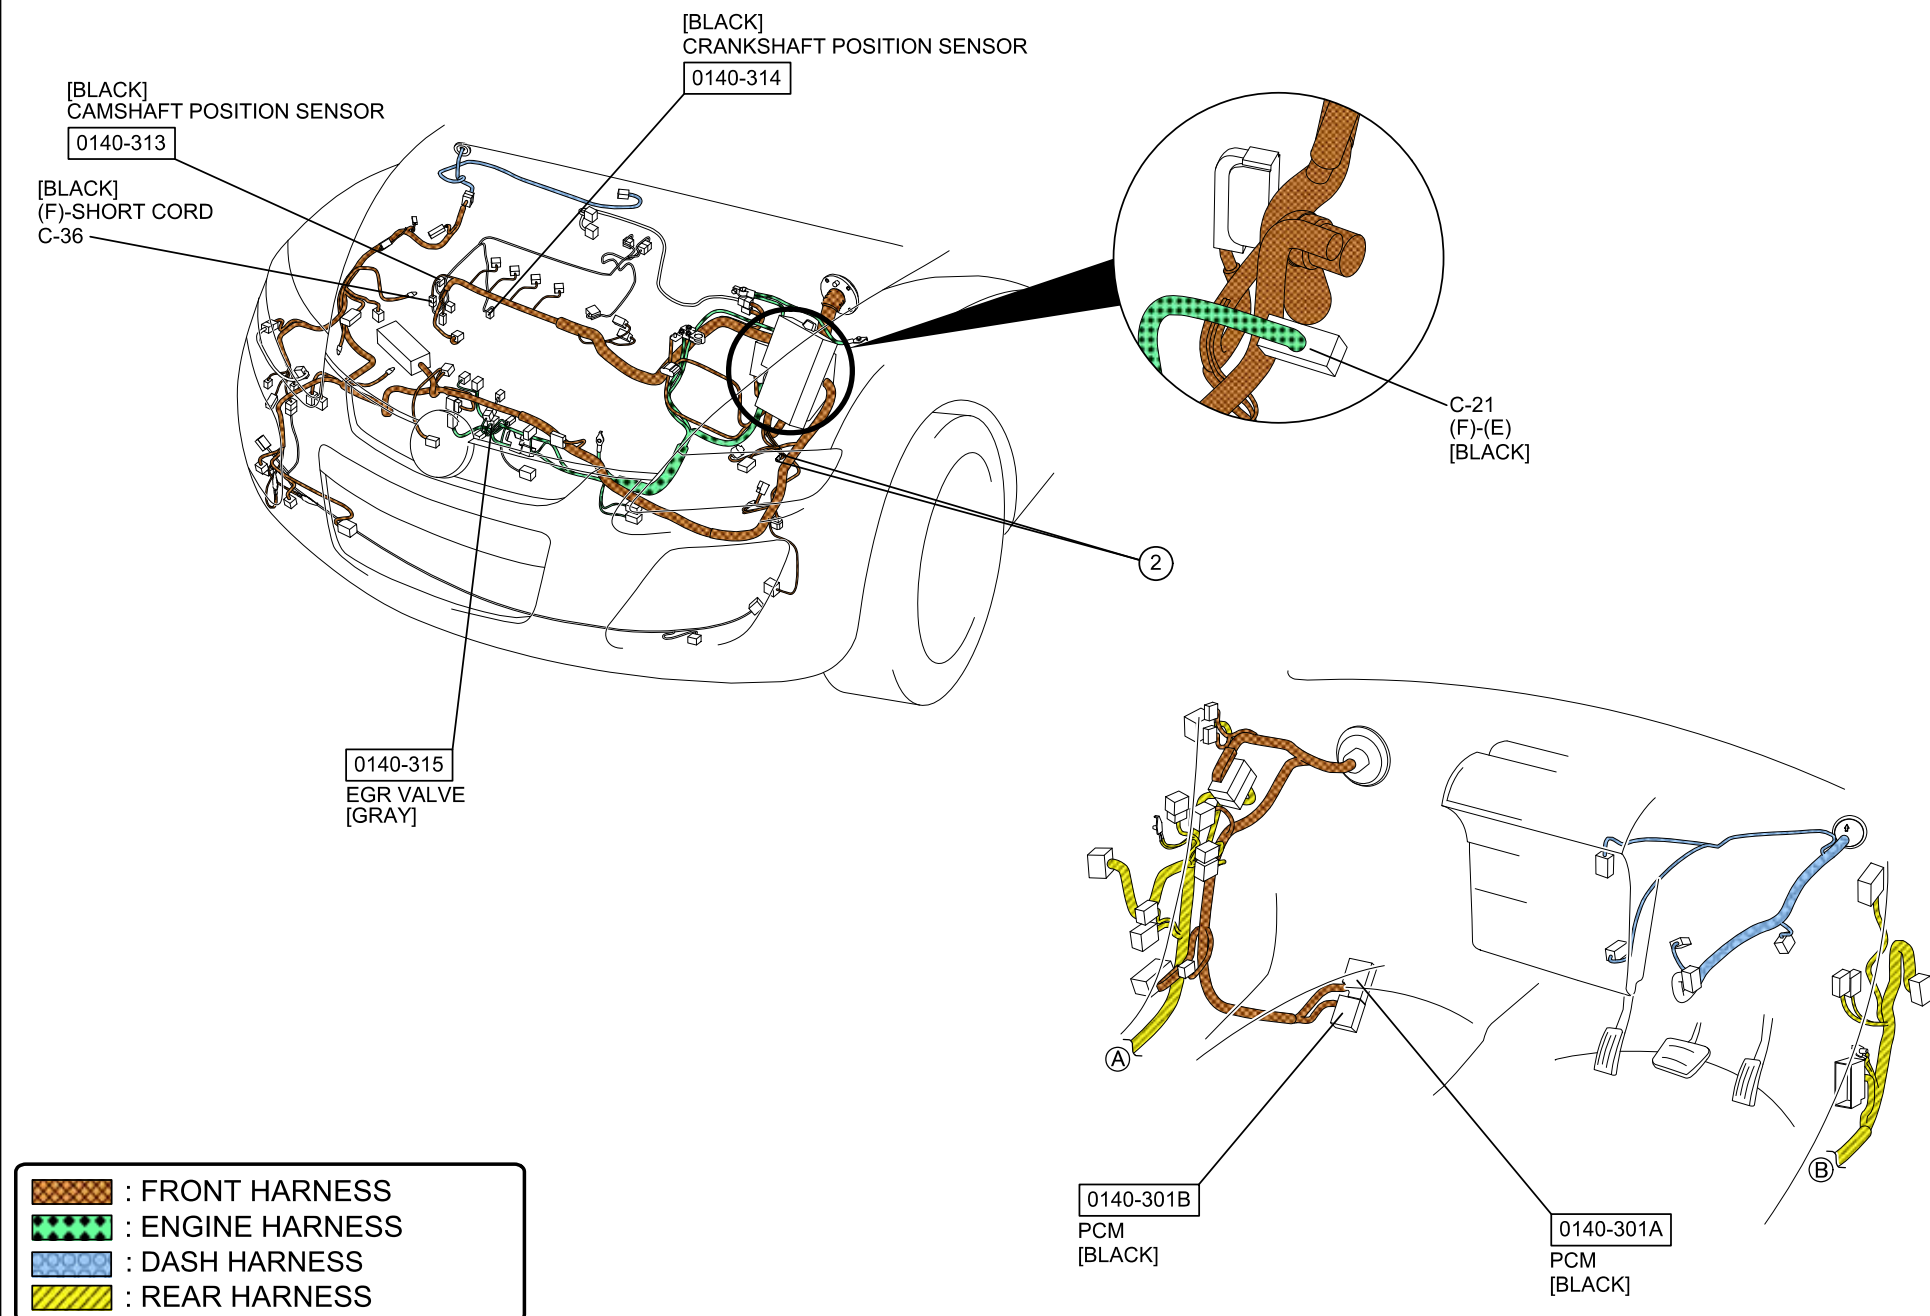

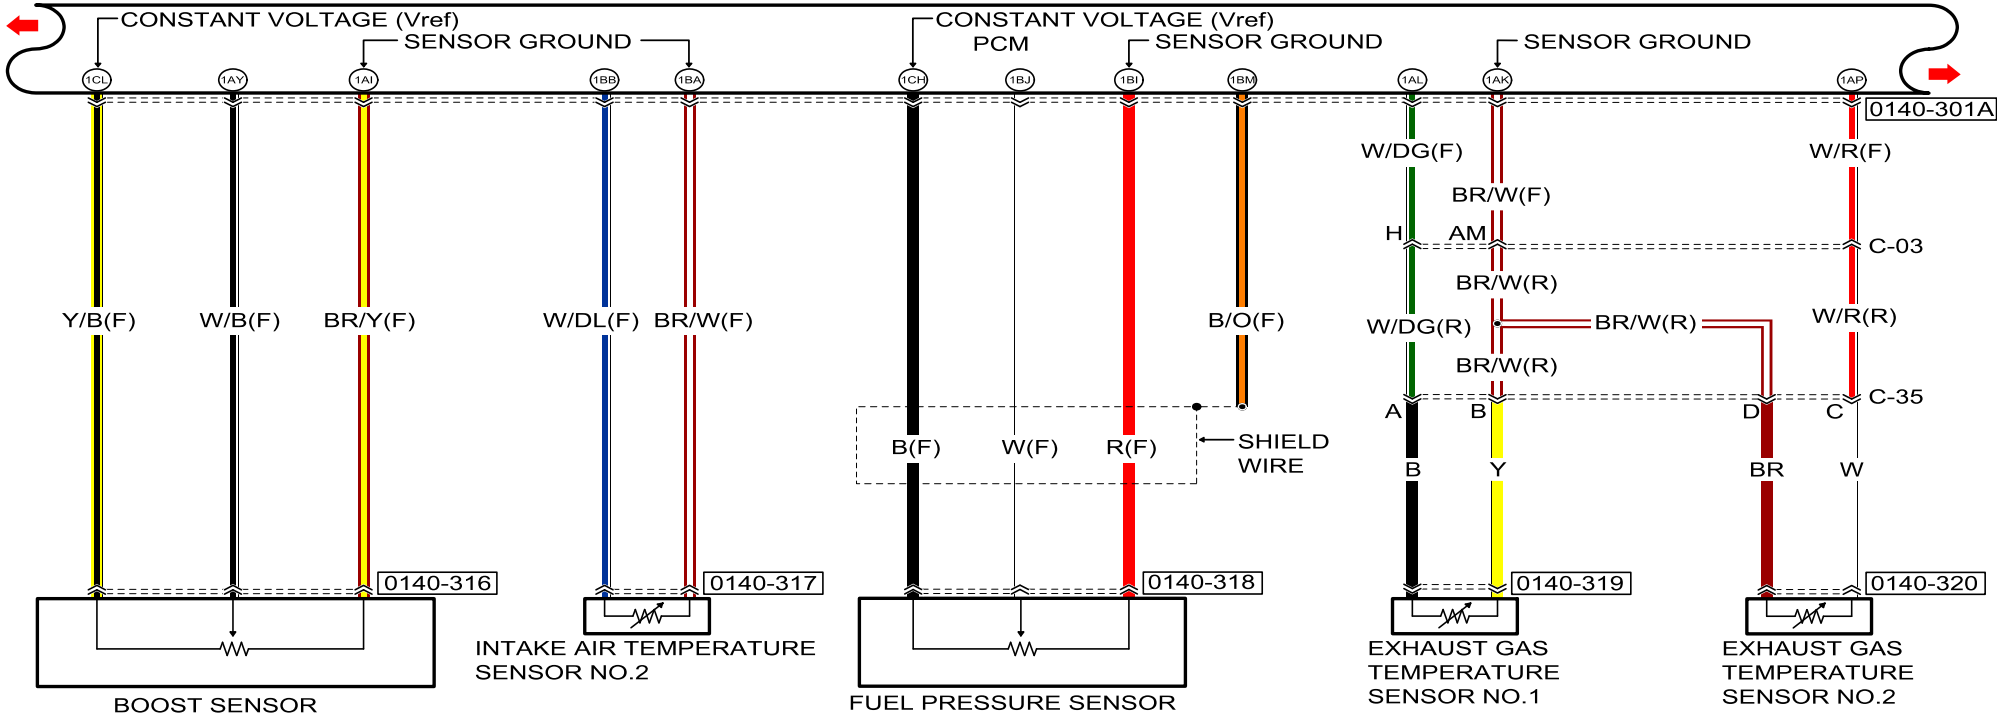


0140-301A  
PCM

 1CO 1CK 1CG 1CC 1BY 1BU 1BQ 1BM 1BI 1BE 1BA 1AW 1AS 1AO 1AK 1AG 1AC 1Y 1U 1Q 1M 1I 1E 1A  
1CP 1CL 1CH 1CD 1BZ 1BV 1BR 1BN 1BJ 1BF 1BB 1AX 1AT 1AP 1AL 1AH 1AD 1Z 1V 1R 1N 1J 1F 1B

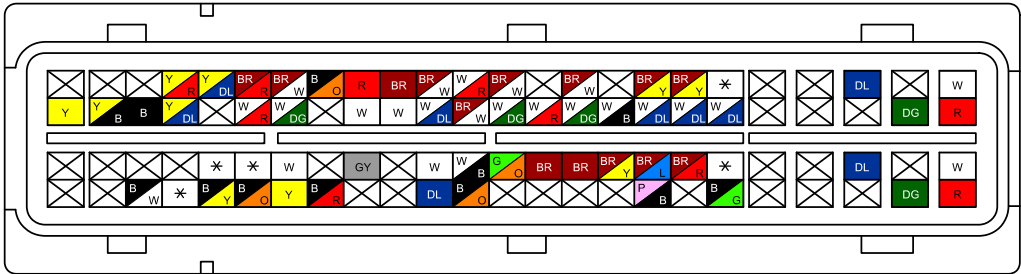


1CQ 1CM 1CI 1CE 1CA 1BW 1BS 1BO 1BK 1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C  
1CR 1CN 1CJ 1CF 1CB 1BX 1BT 1BP 1BL 1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D

 
0140-316  
BOOST SENSOR



 
0140-319  
EXHAUST GAS  
TEMPERATURE SENSOR  
NO.1



 
0140-317  
INTAKE AIR  
TEMPERATURE SENSOR  
NO.2



 0140-320  
EXHAUST GAS  
TEMPERATURE SENSOR  
NO.2





0140-318  
FUEL PRESSURE  
SENSOR

 






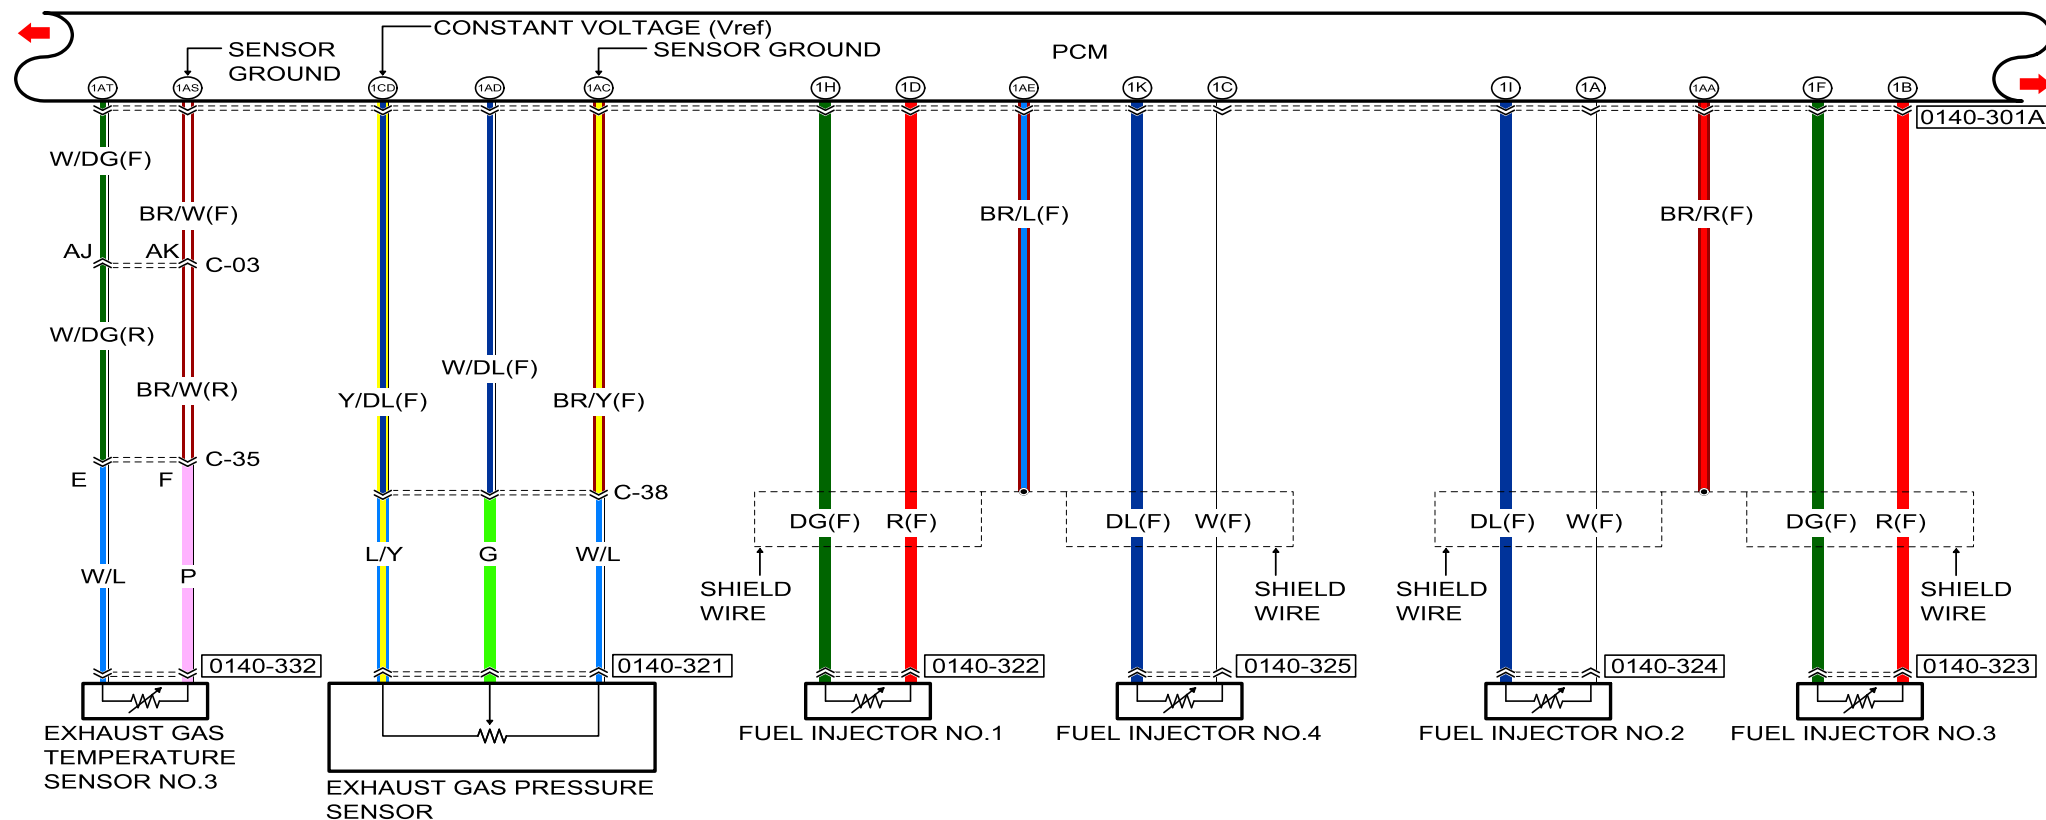  


1CO	1CK	1CG	1CC	1BY	1BU	1BQ	1BM	1BI	1BE	1BA	1AW	1AS	1AO	1AK	1AG	1AC	1Y	1U	1Q	1M	1I	1E	1A
1CP	1CL	1CH	1CD	1BZ	1BV	1BR	1BN	1BJ	1BF	1BB	1AX	1AT	1AP	1AL	1AH	1AD	1Z	1V	1R	1N	1J	1F	1B

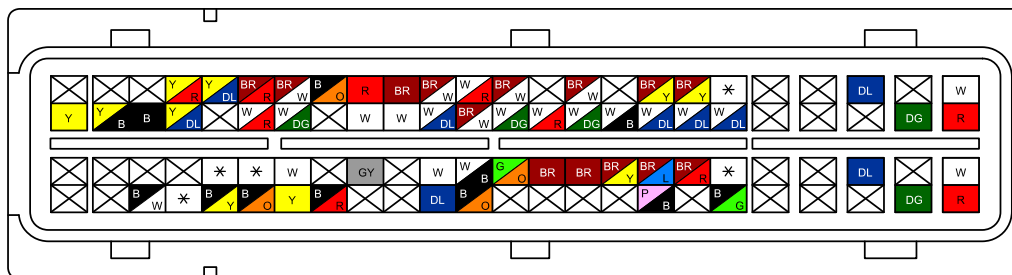 


1CQ 1CM 1CI 1CE 1CA 1BW 1BS 1BO 1BK 1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C  
1CR 1CN 1CJ 1CF 1CB 1BX 1BT 1BP 1BL 1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D


0140-321	EXHAUST GAS PRESSURE SENSOR
----------	--------------------------------

 


0140-324
FUEL INJECTOR NO.2

 


0140-322
FUEL INJECTOR NO.1

 


0140-325	FUEL INJECTOR NO.4
----------	--------------------

 


0140-323	FUEL INJECTOR NO.3
----------	--------------------

 



0140-332	EXHAUST GAS
	TEMPERATURE
	SENSOR NO.3

 

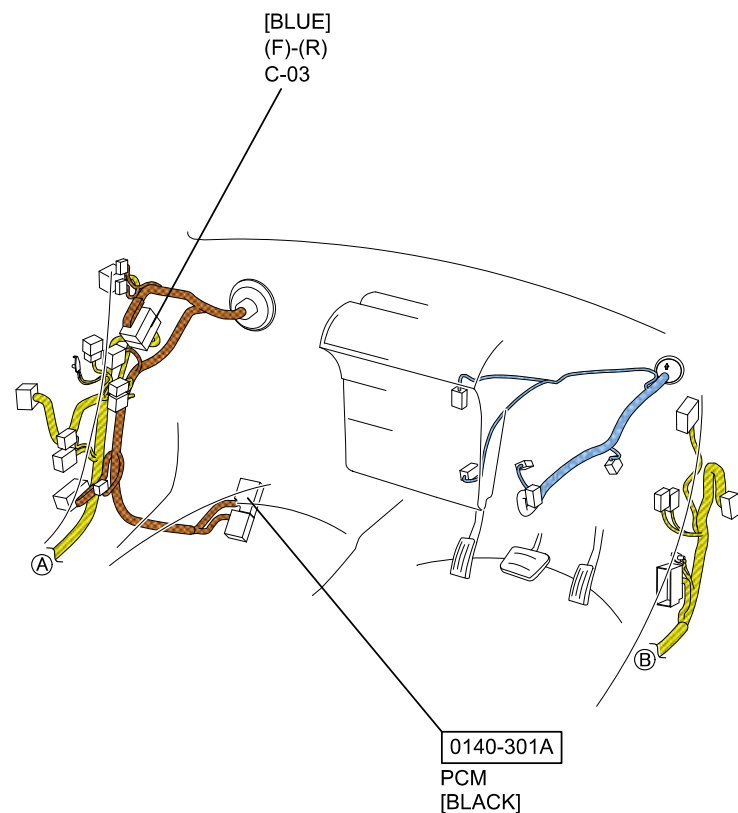 


  - : FRONT HARNESS
- : ENGINE HARNESS
- : DASH HARNESS
- : REAR HARNESS
- : REAR NO.2 HARNESS
- : DOOR HARNESS
- : INTERIOR LIGHT HARNESS/  
INTERIOR LIGHT NO.2 HARNESS

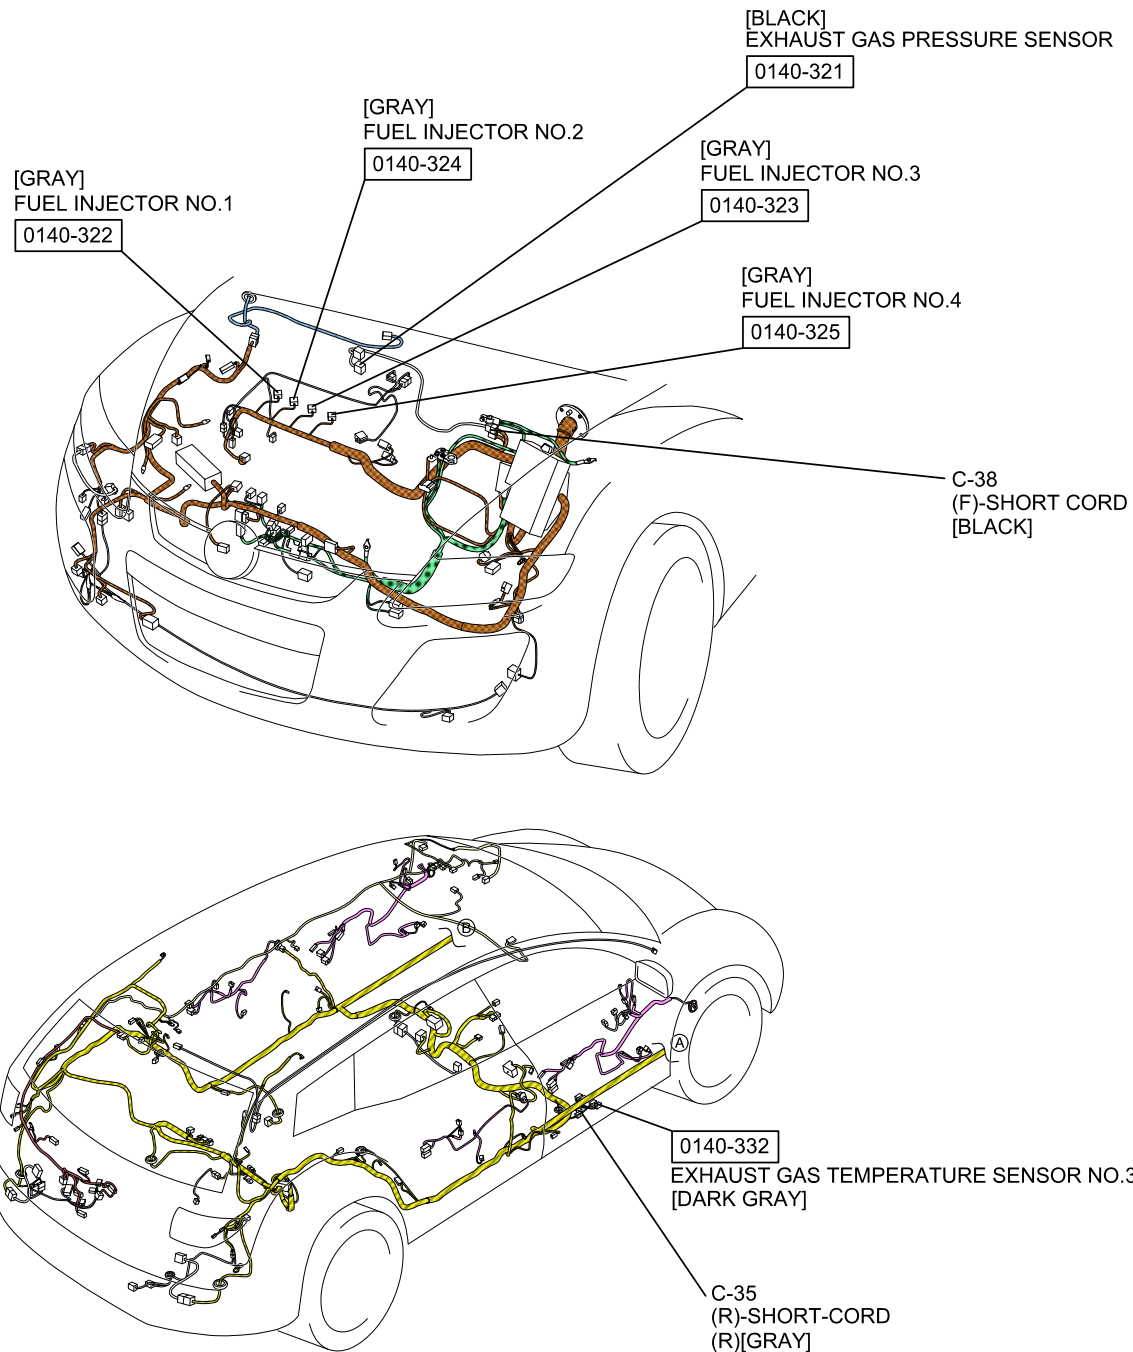


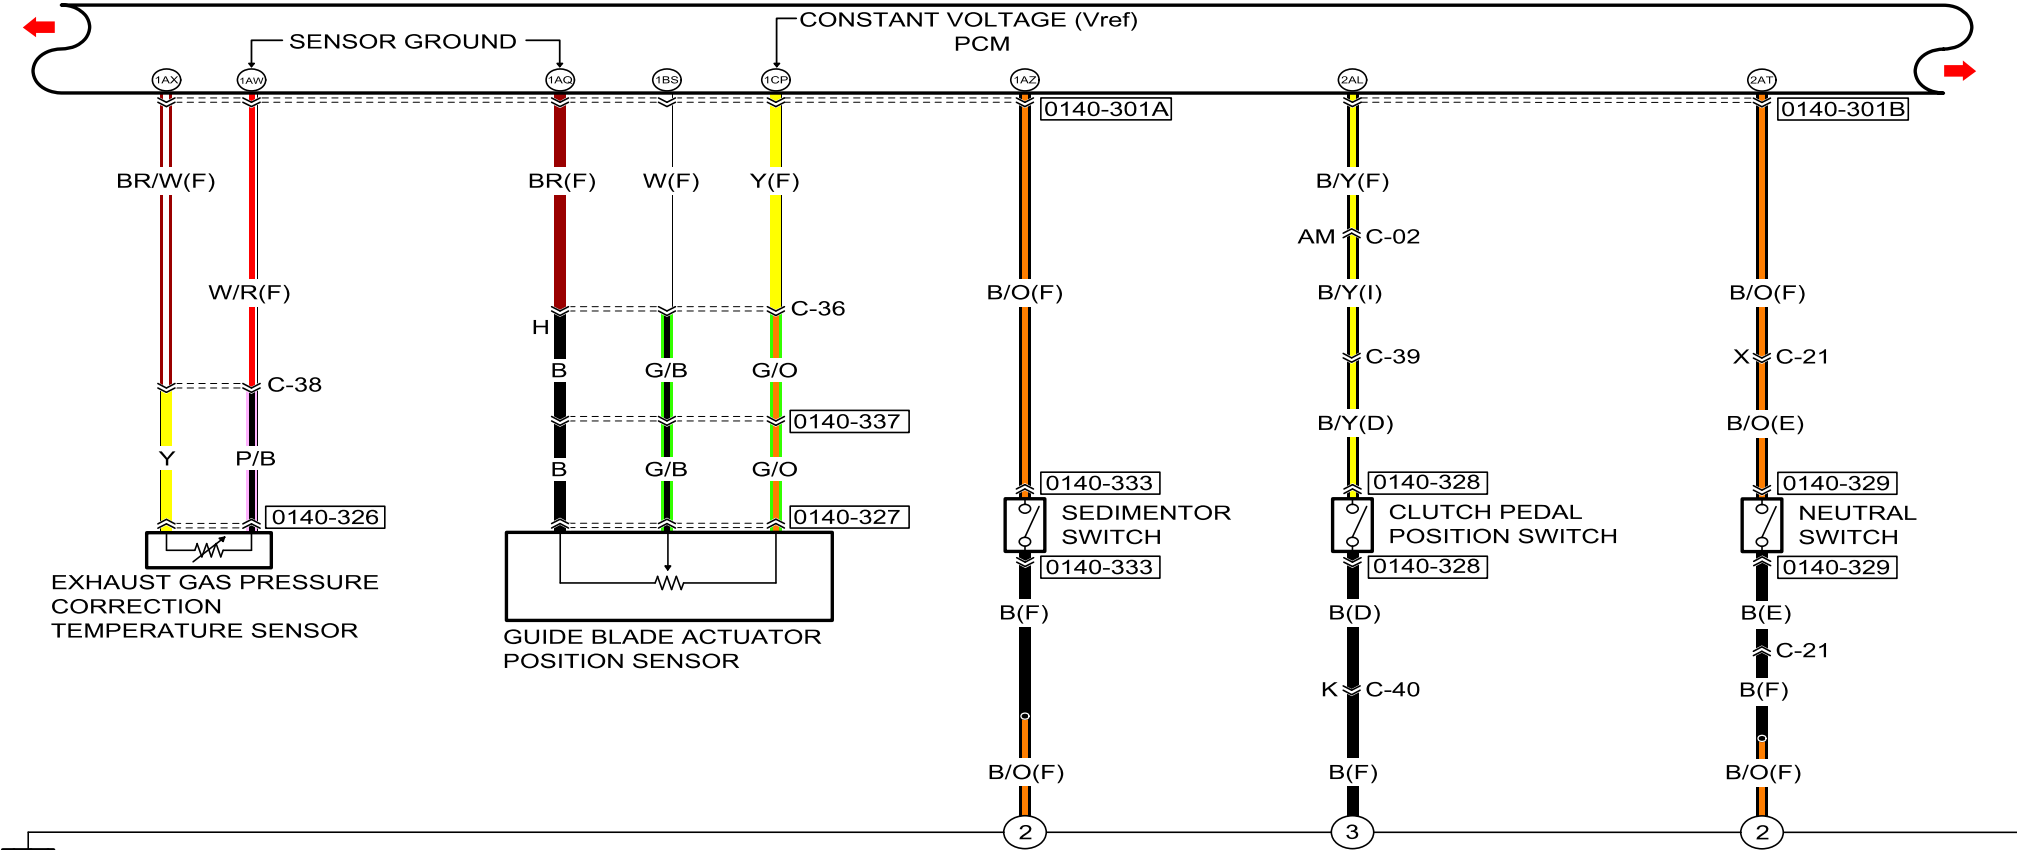


0140-301A  
PCM

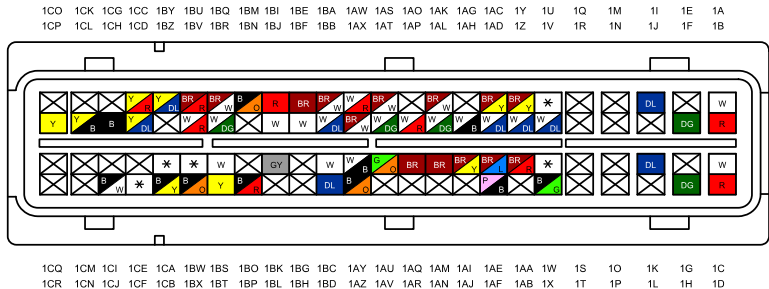 


0140-301B  
PCM

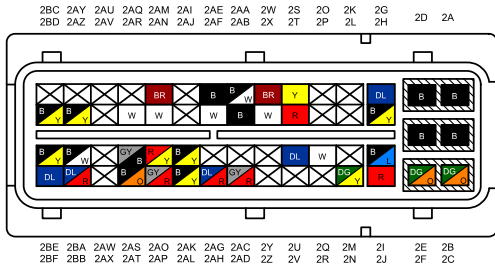 

 0140-326  
EXHAUST GAS  
PRESSURE CORRECTION  
TEMPERATURE SENSOR



 
0140-327  
GUIDE BLADE  
ACTUATOR  
POSITION SENSOR




0140-328  
CLUTCH PEDAL  
POSITION  
SWITCH



 
0140-329  
NEUTRAL SWITCH





0140-333  
SEDIMENTOR  
SWITCH

 

0140-337  
SHORT CORD1-SHORT  
CORD2

 


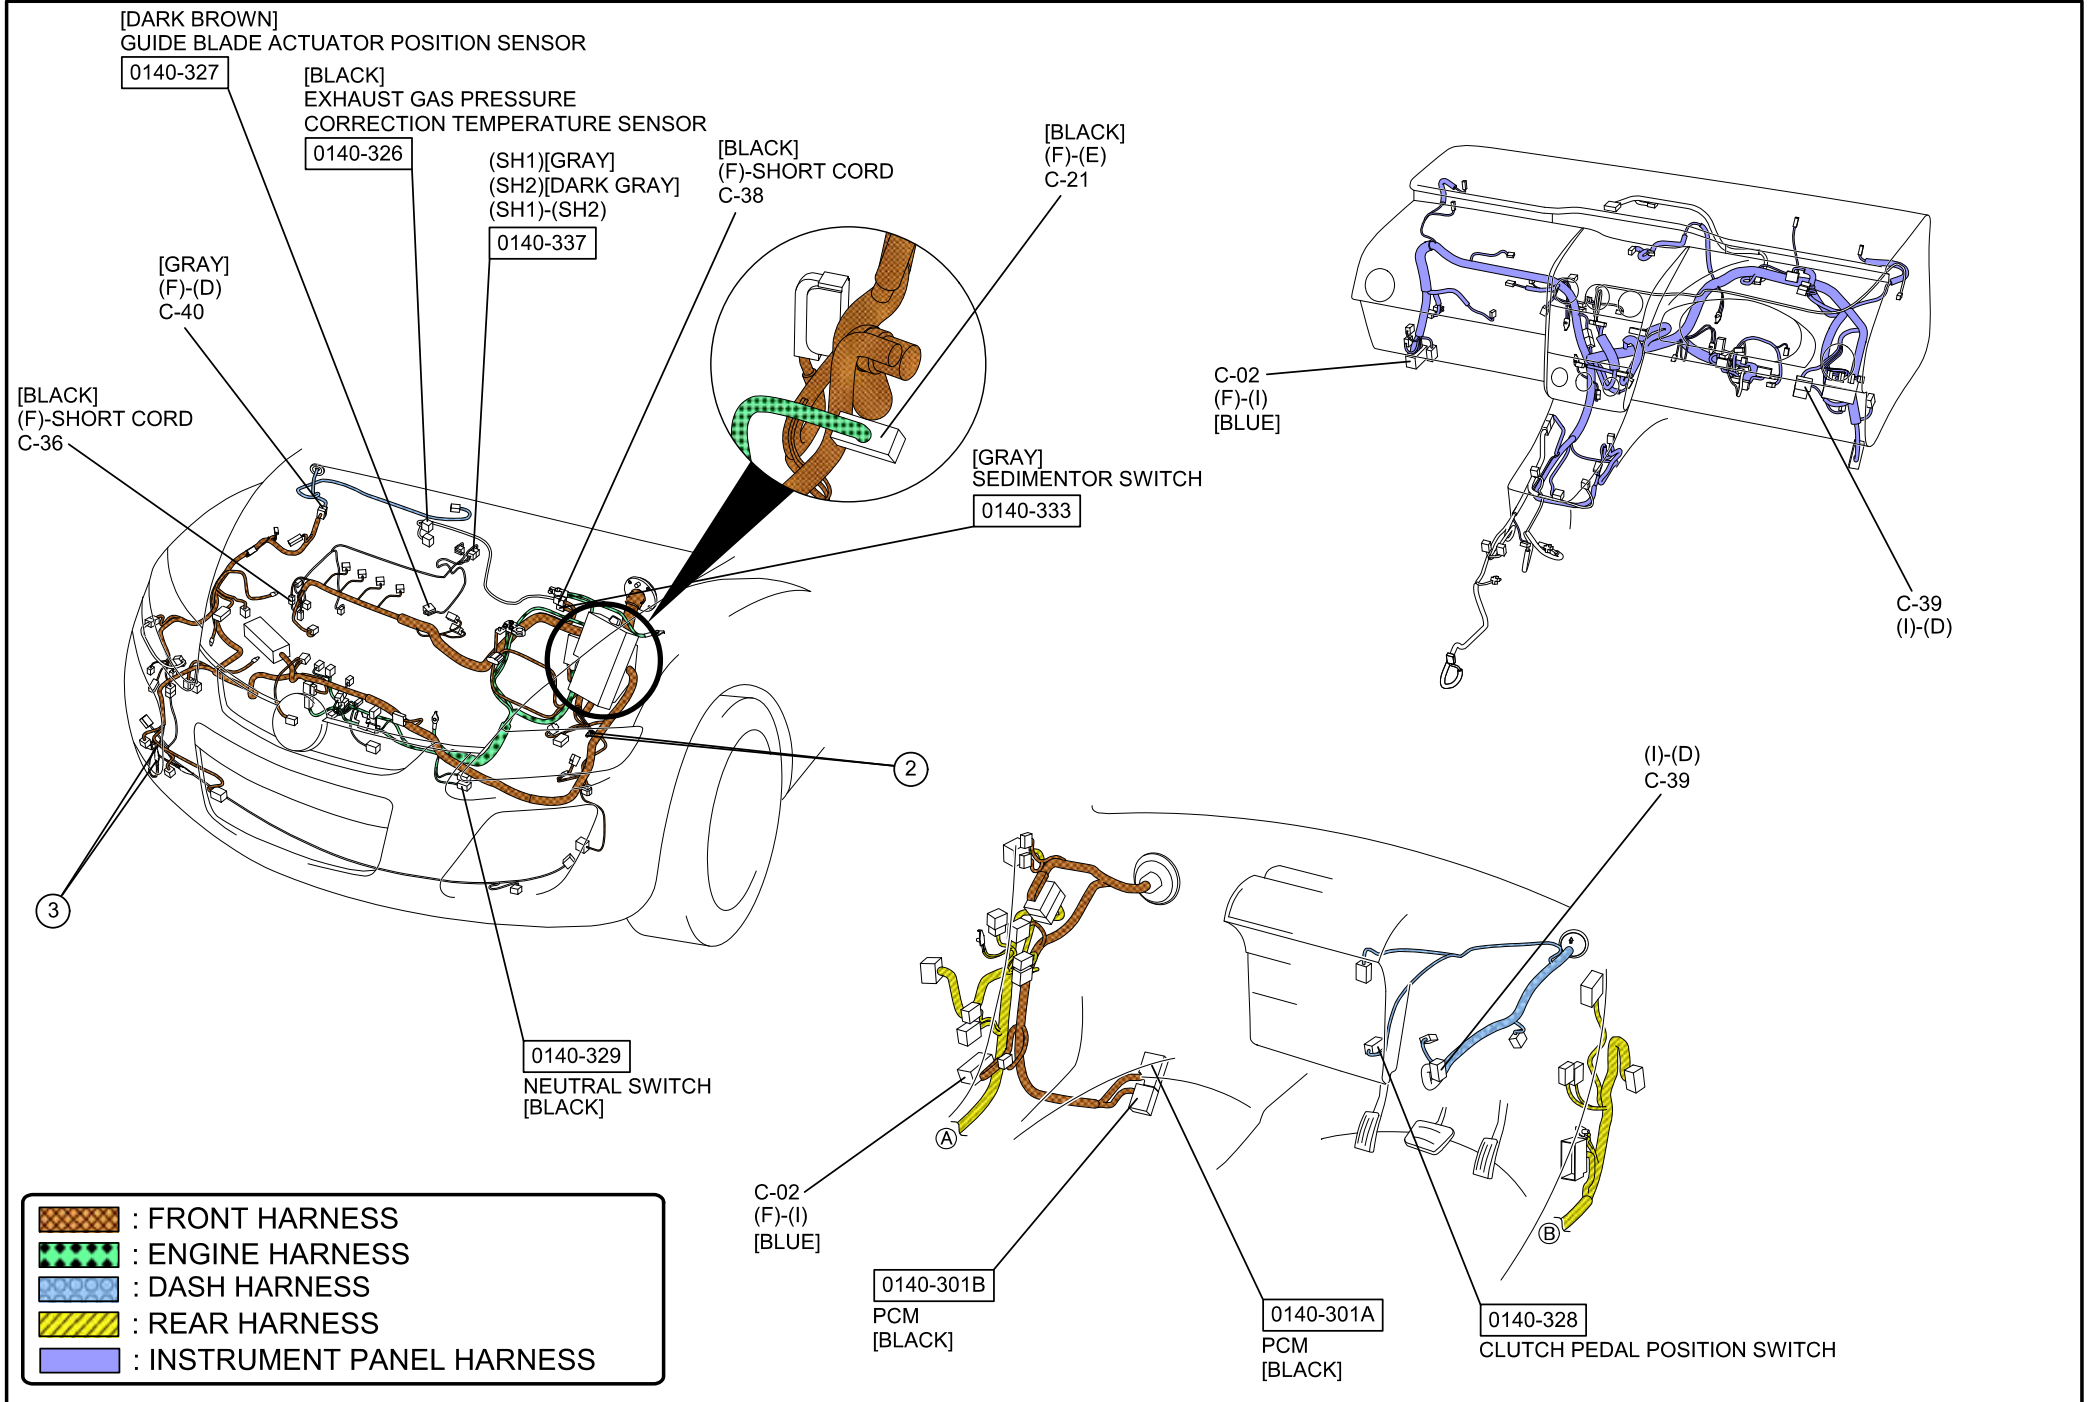 

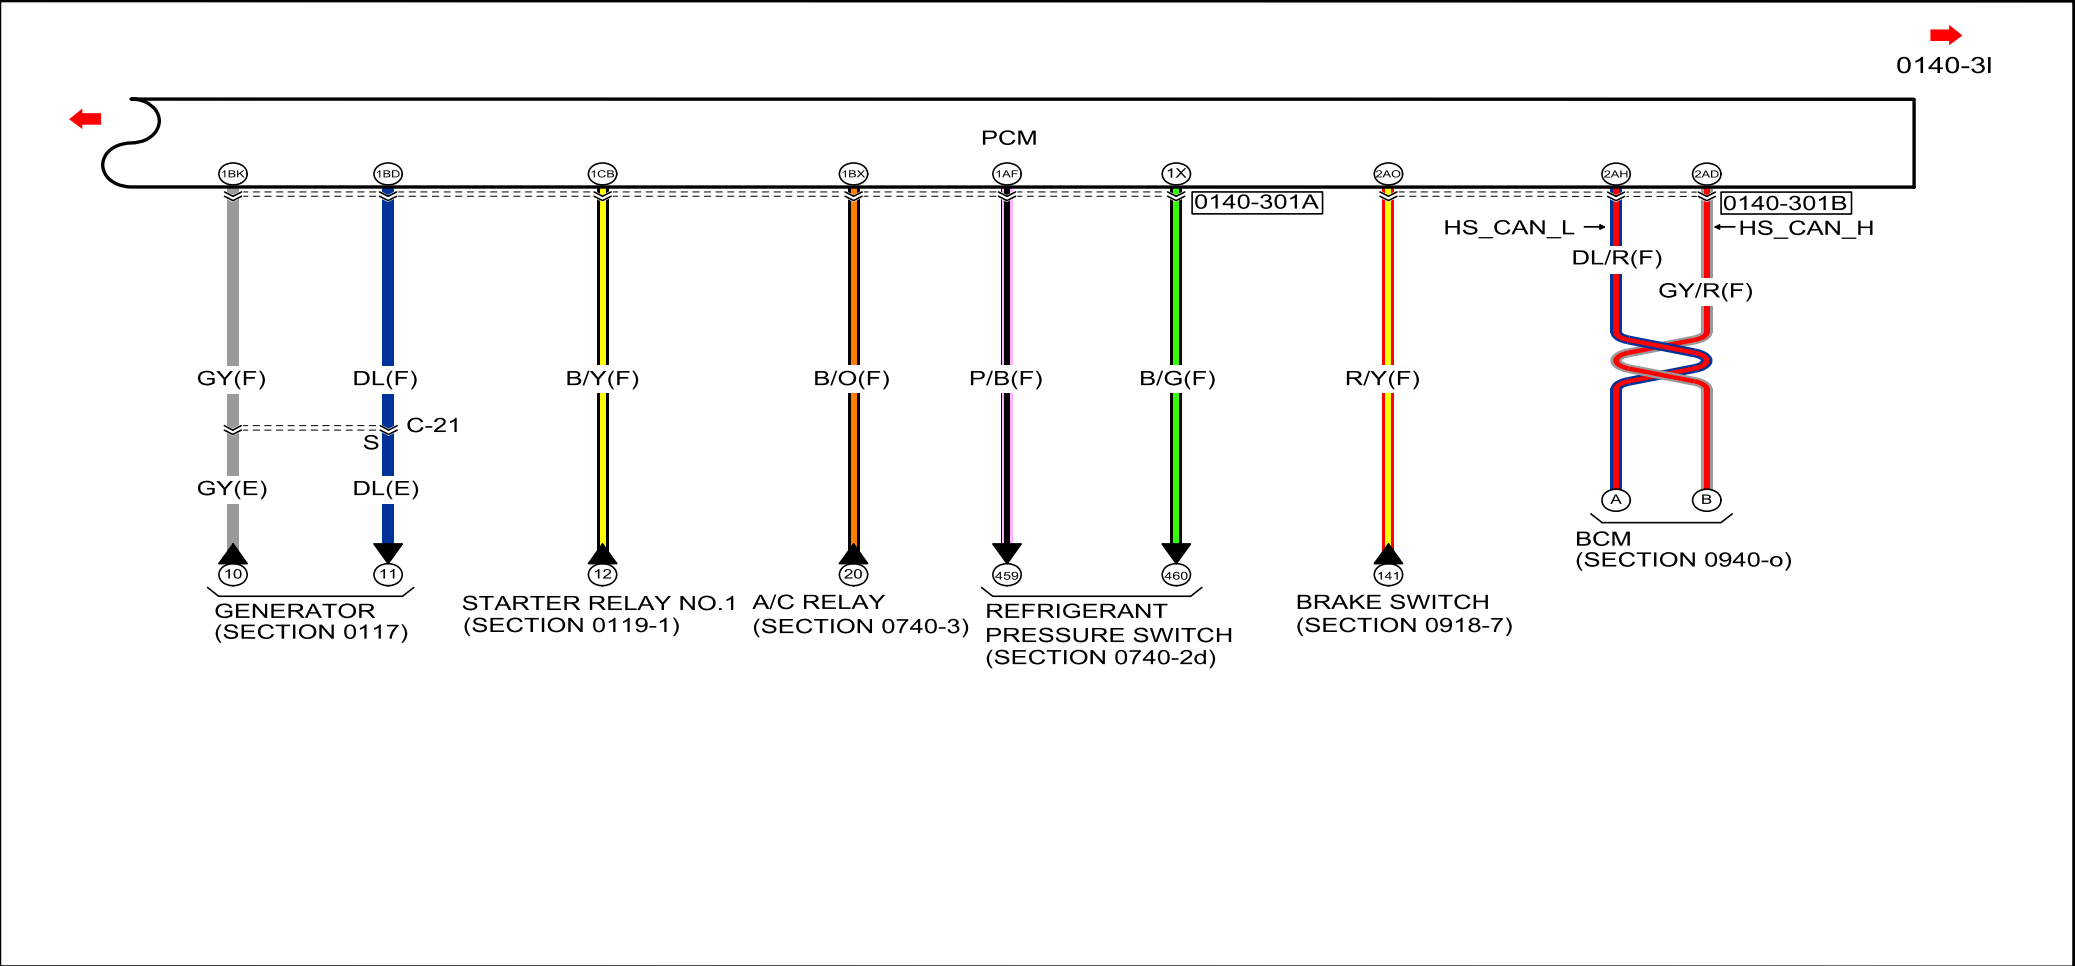 

0140-301A  
PCM

 
1CO 1CK 1CG 1CC 1BY 1BU 1BQ 1BM 1BI 1BE 1BA 1AW 1AS 1AO 1AK 1AG 1AC 1Y 1U 1Q 1M 1I 1E 1A  
1CP 1CL 1CH 1CD 1BZ 1BV 1BR 1BN 1BJ 1BF 1BB 1AX 1AT 1AP 1AL 1AH 1AD 1Z 1V 1R 1N 1J 1F 1B

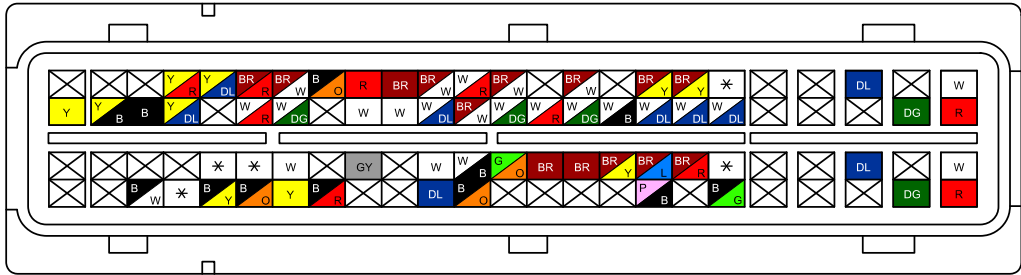


 
1CQ 1CM 1CI 1CE 1CA 1BW 1BS 1BO 1BK 1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C  
1CR 1CN 1CJ 1CF 1CB 1BX 1BT 1BP 1BL 1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D



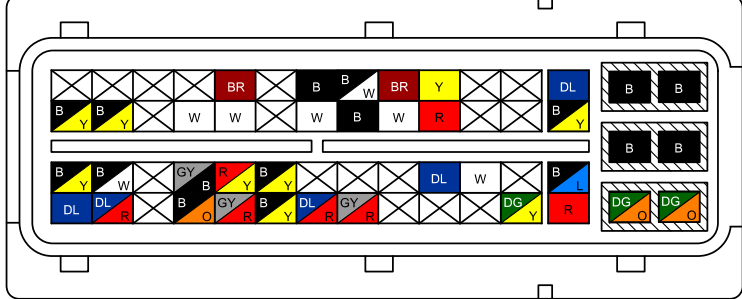

0140-301B  
PCM

  2BC 2AY 2AU 2AQ 2AM 2AI 2AE 2AA 2W 2S 2O 2K 2G 2D 2A  
2BD 2AZ 2AV 2AR 2AN 2AJ 2AF 2AB 2X 2T 2P 2L 2H



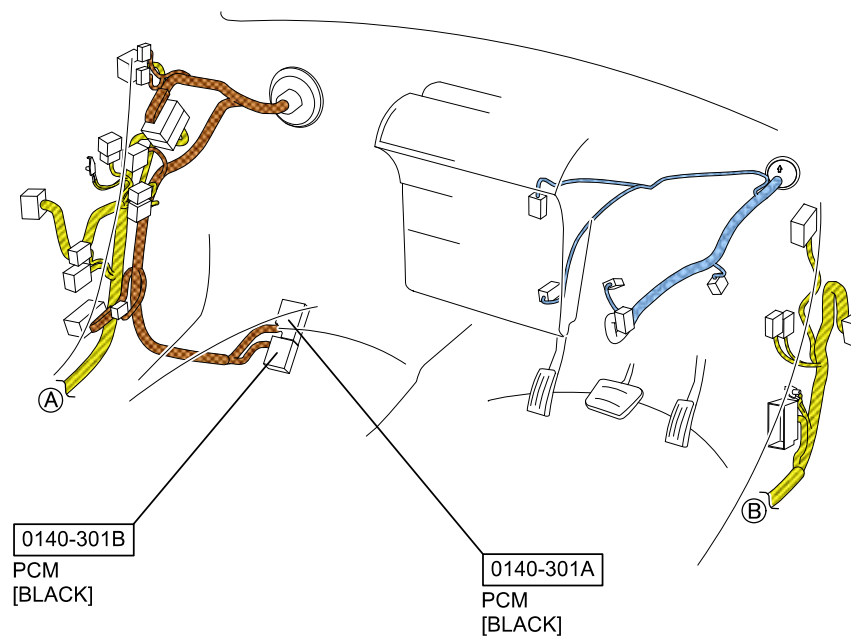
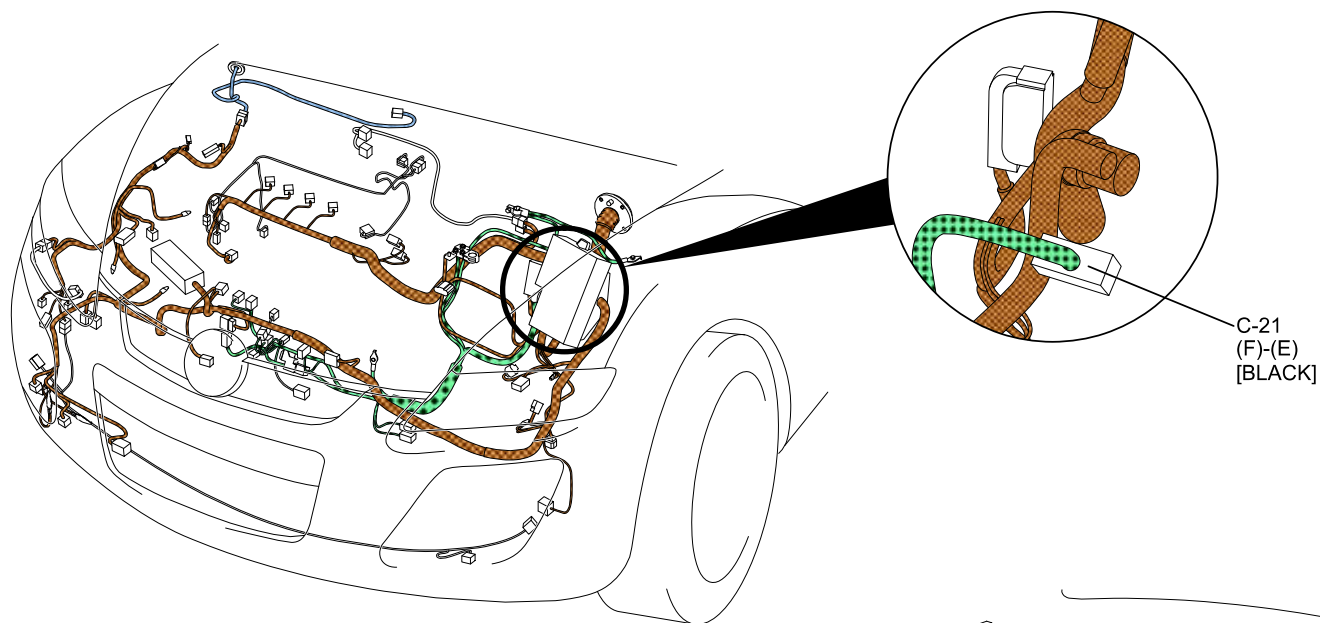


2BE 2BA 2AW 2AS 2AO 2AK 2AG 2AC 2Y 2U 2Q 2M 2I 2E 2B  
2BF 2BB 2AX 2AT 2AP 2AL 2AH 2AD 2Z 2V 2R 2N 2J 2F 2C




    -  : FRONT HARNESS
-  : ENGINE HARNESS
-  : DASH HARNESS
-  : REAR HARNESS

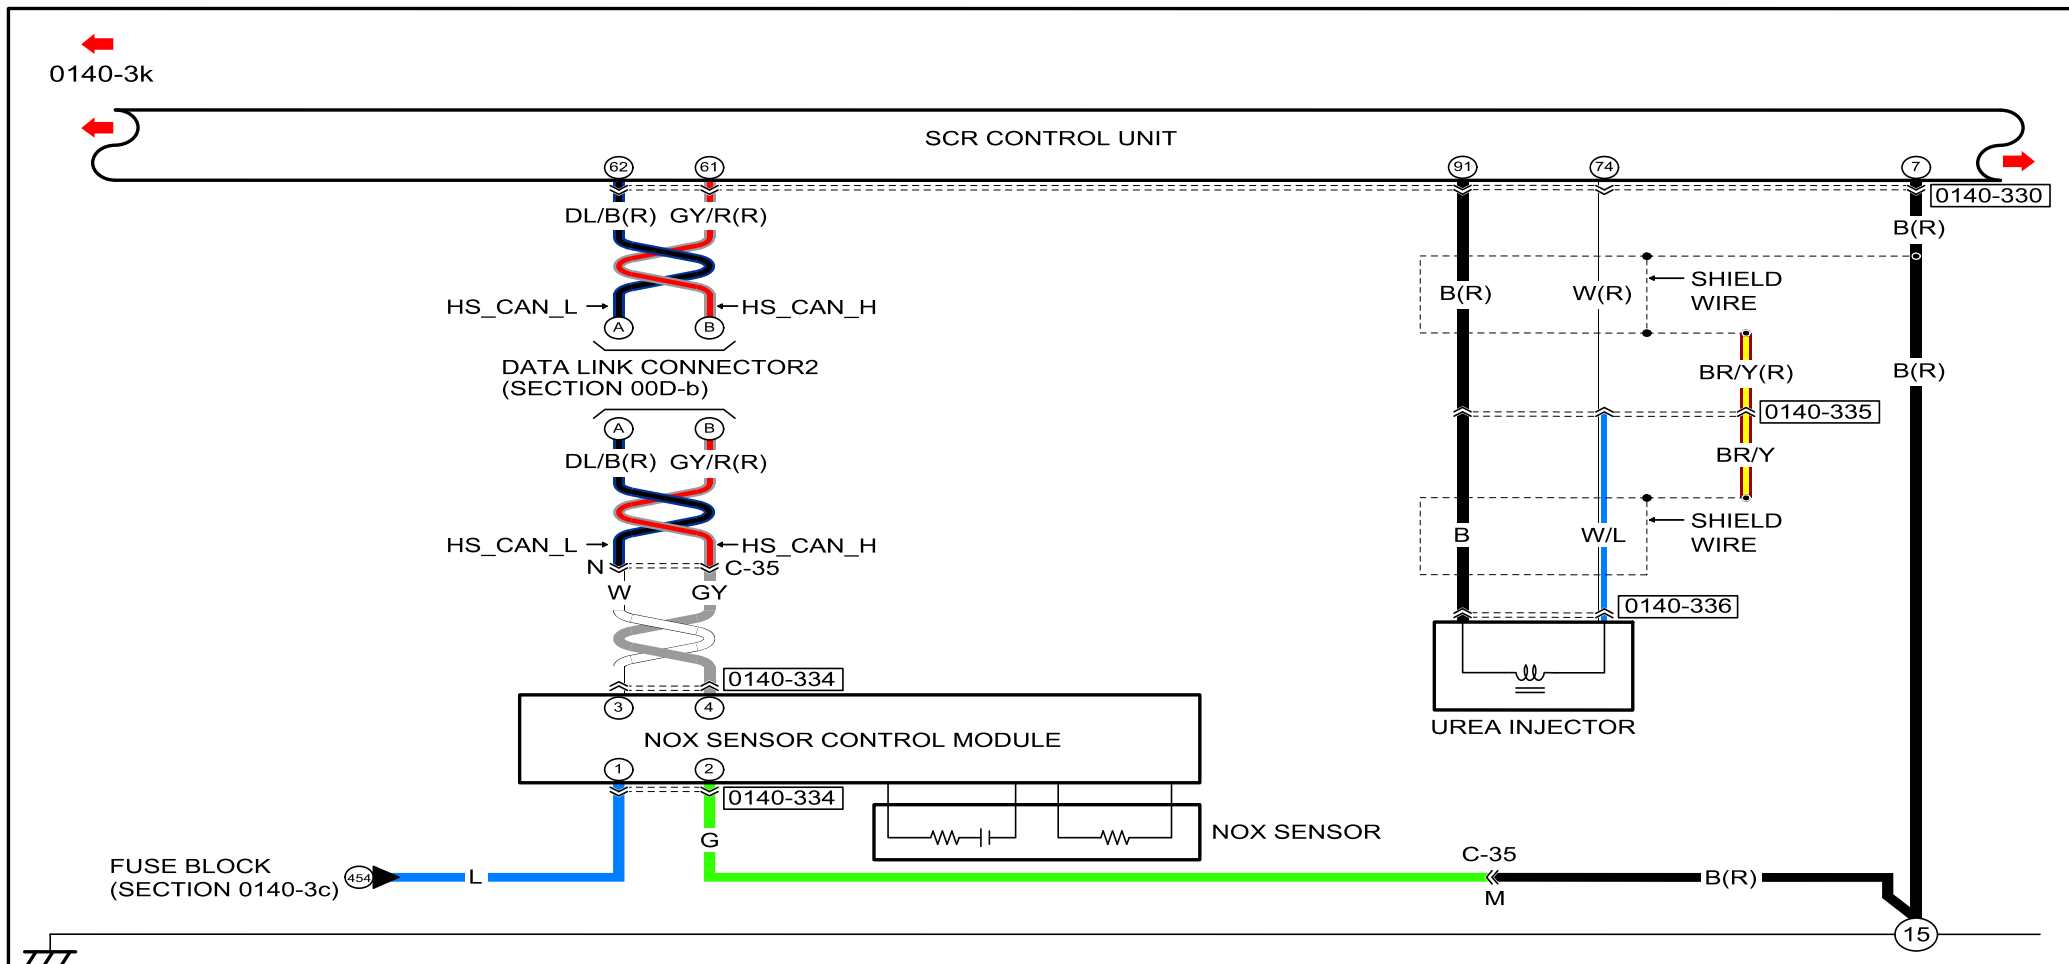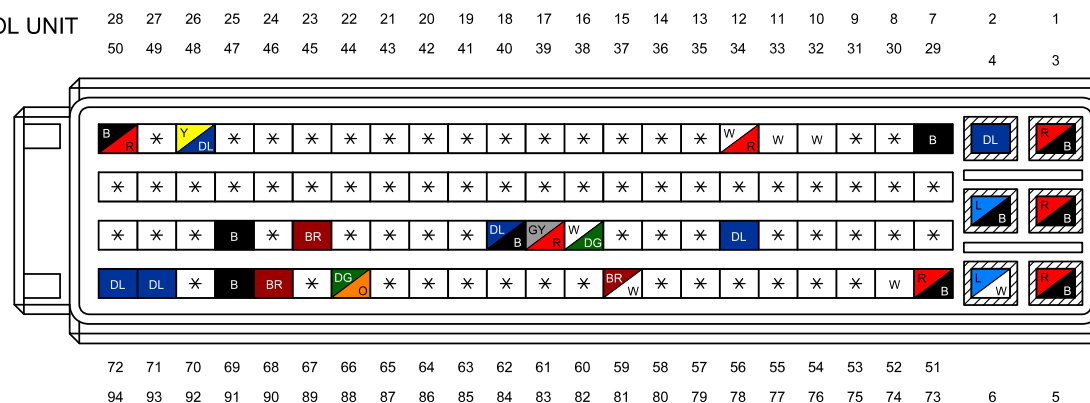



0140-330  
SCR CONTROL UNIT0140-334  
NOX SENSOR CONTROL  
MODULE0140-336  
UREA INJECTOR0140-335  
REAR HARNESS-SHORT CORD

 REAR HARNESS



SHORT CORD

 

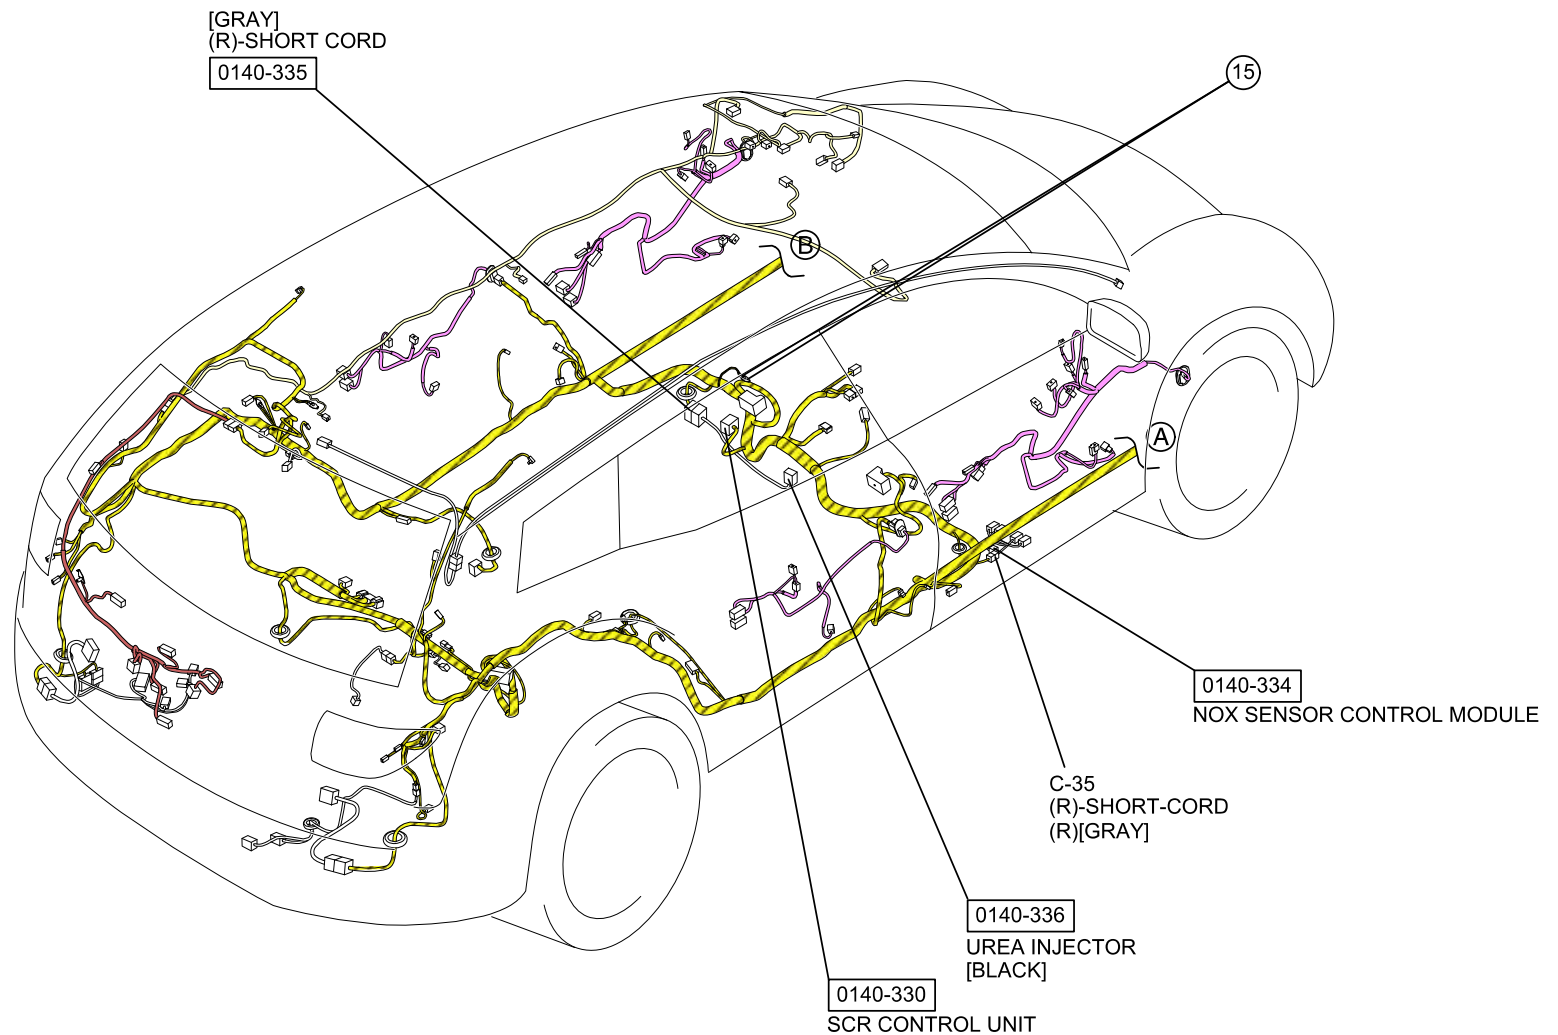 

- : REAR HARNESS
- : REAR NO.2 HARNESS
- : DOOR HARNESS
- : INTERIOR LIGHT HARNESS/  
INTERIOR LIGHT NO.2 HARNESS

