





0517-201A
TCM

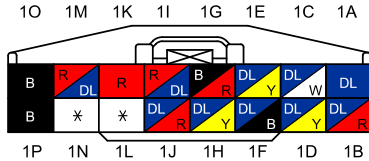


0517-201B
TCM

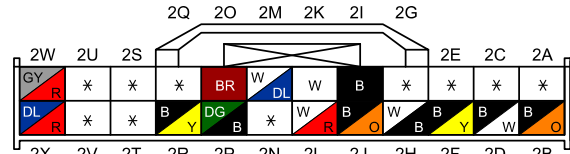

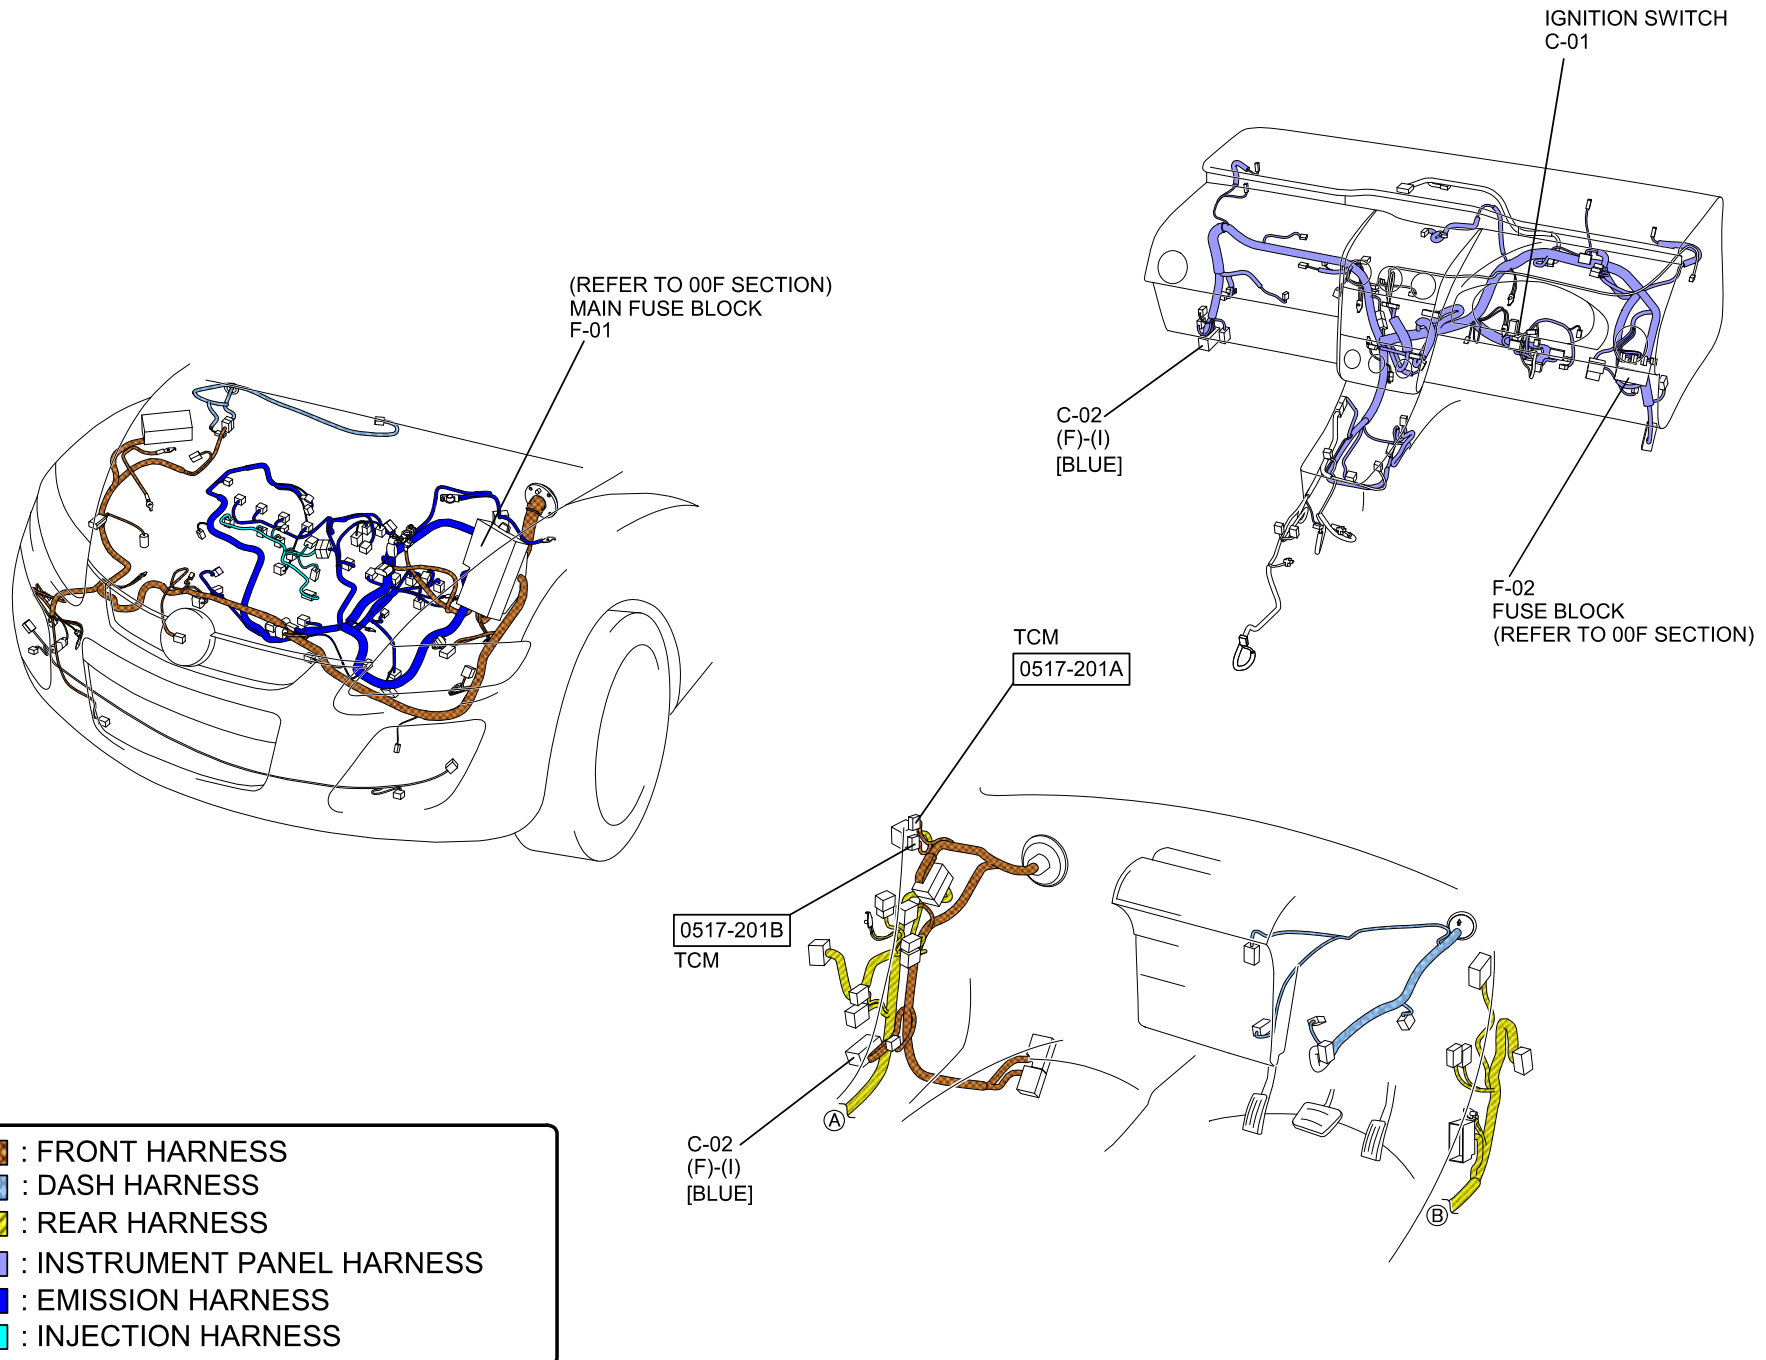


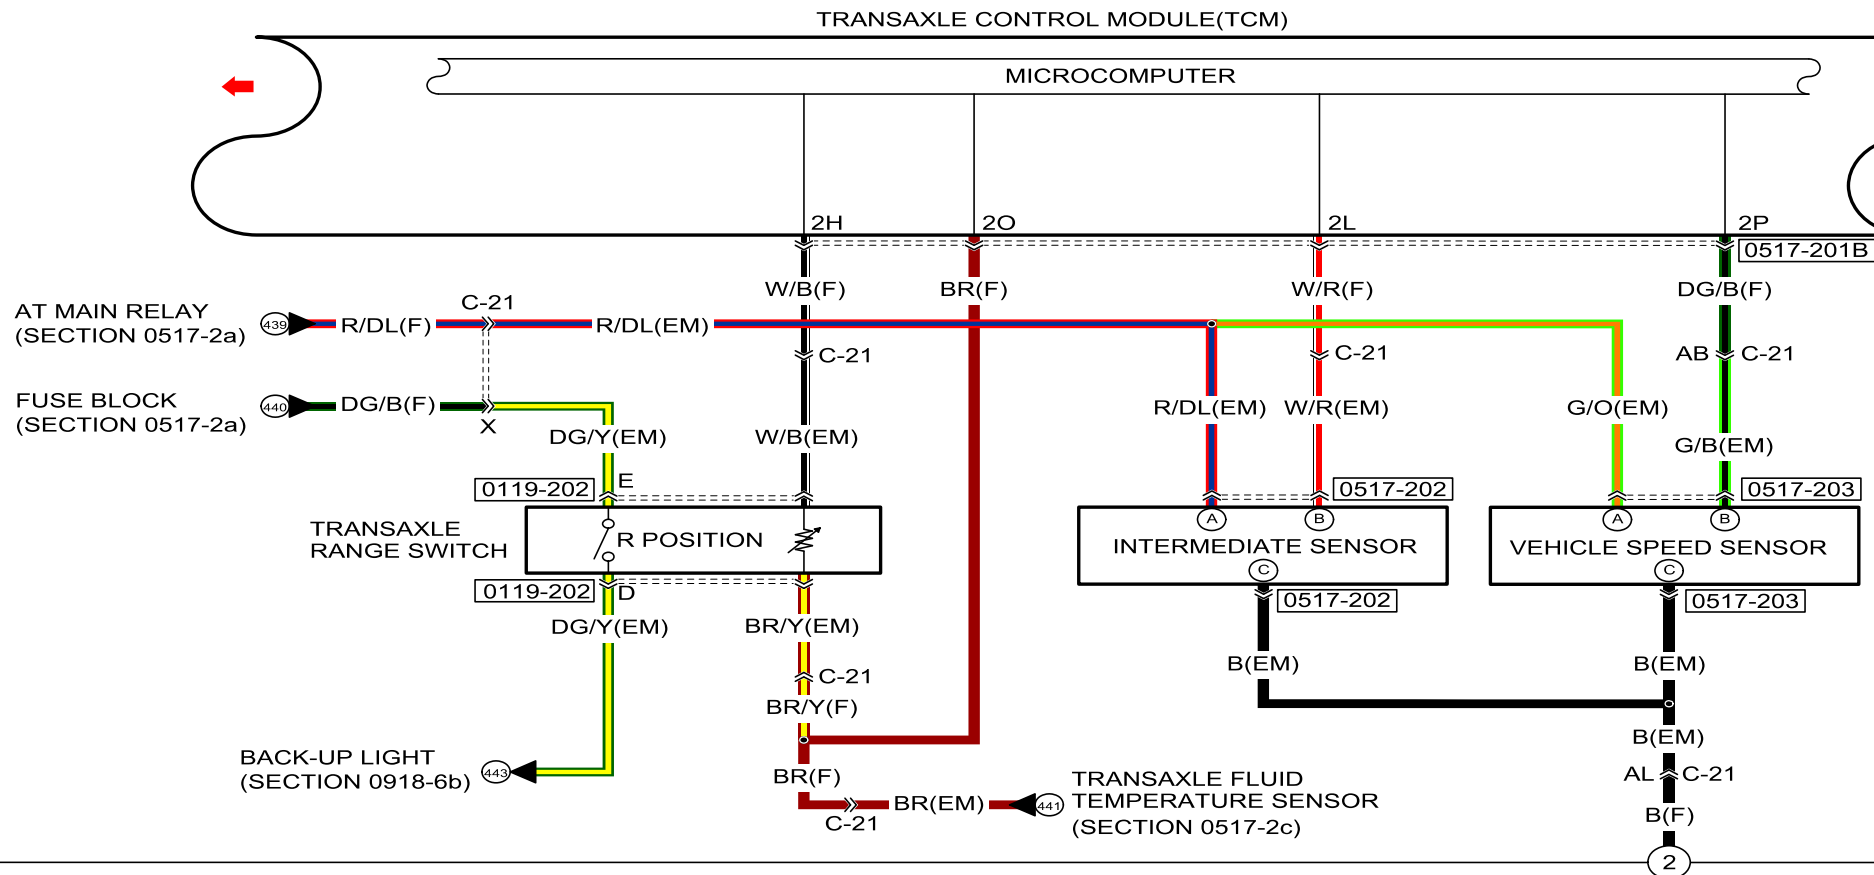


0517-201B
TCM

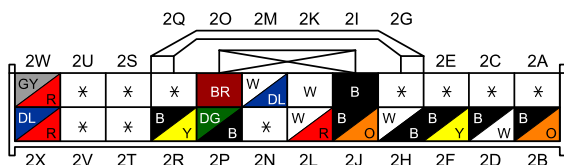


0517-202
INTERMEDIATE SENSOR

 





0517-203
VEHICLE SPEED SENSOR

 


0119-202
TRANSAXLE RANGE SWITCH

 


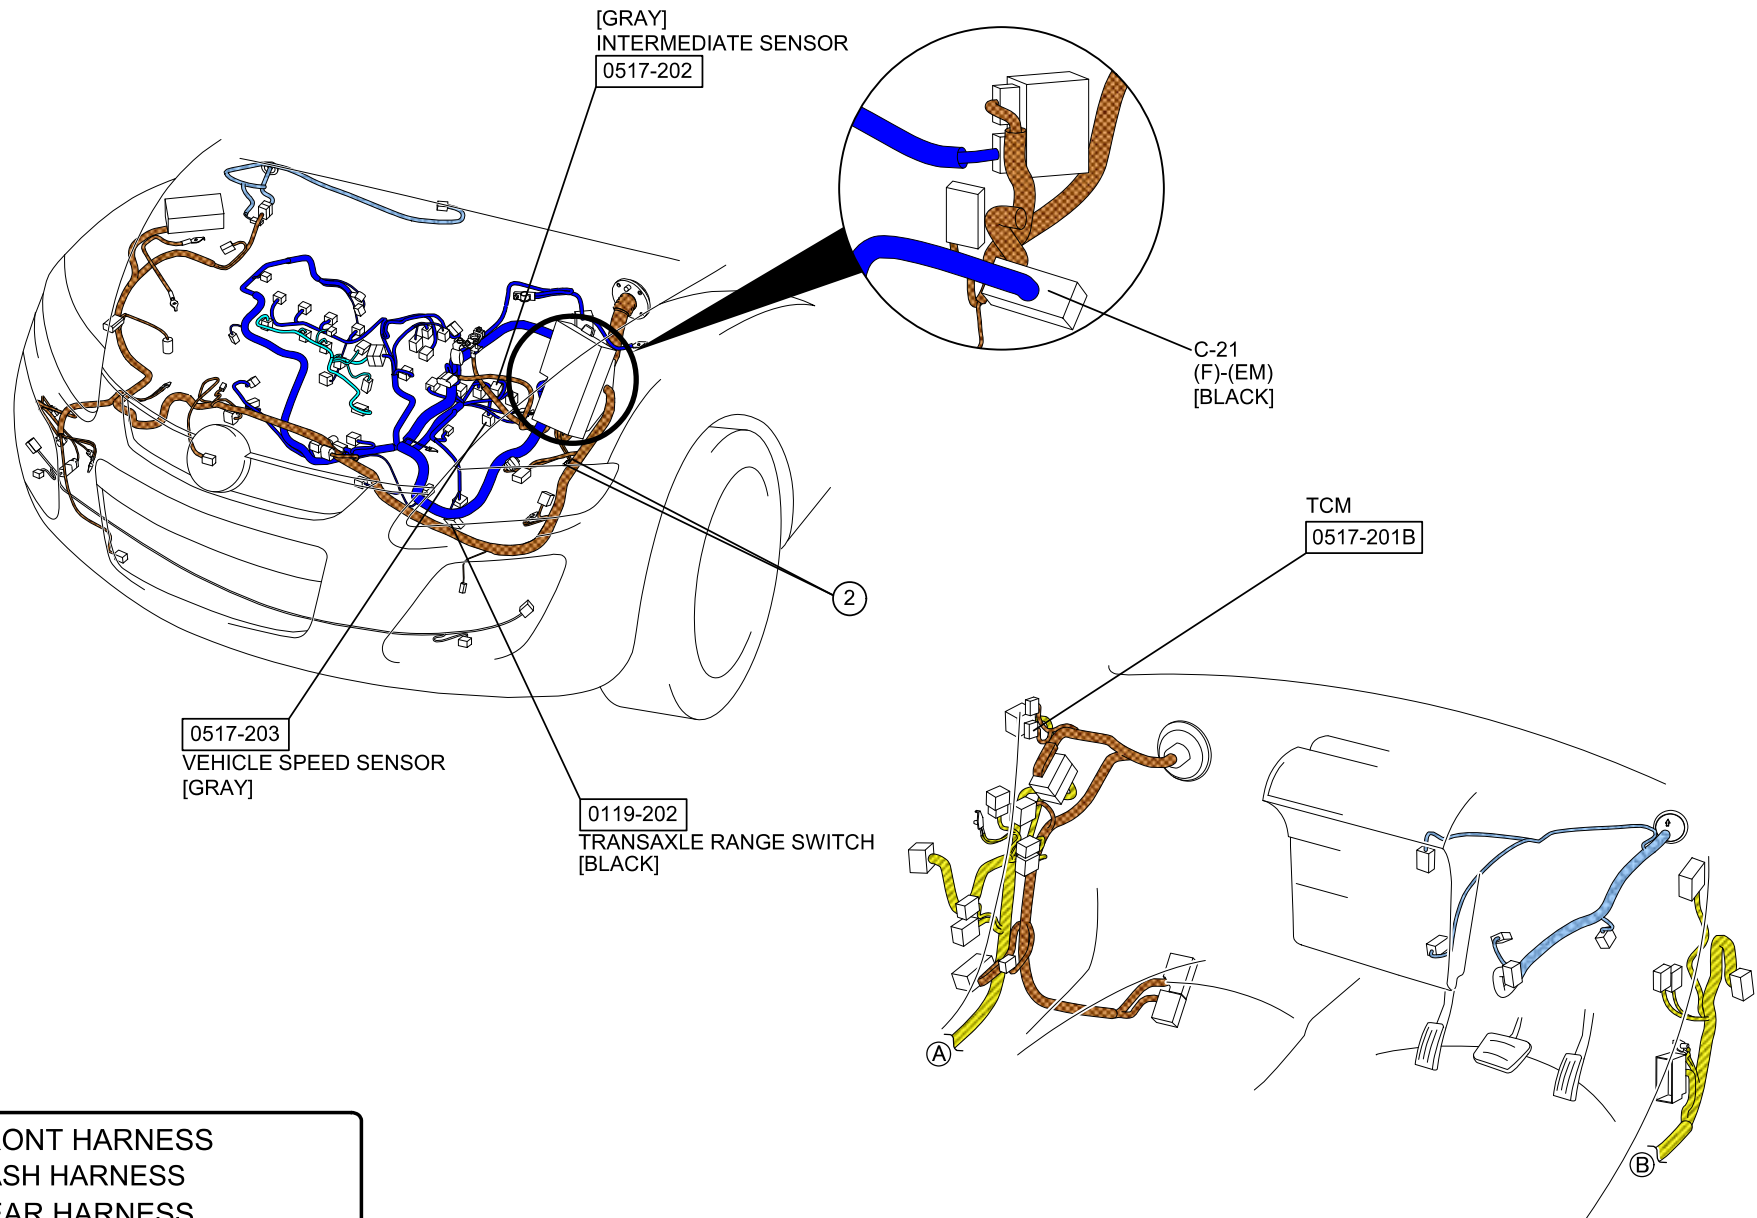


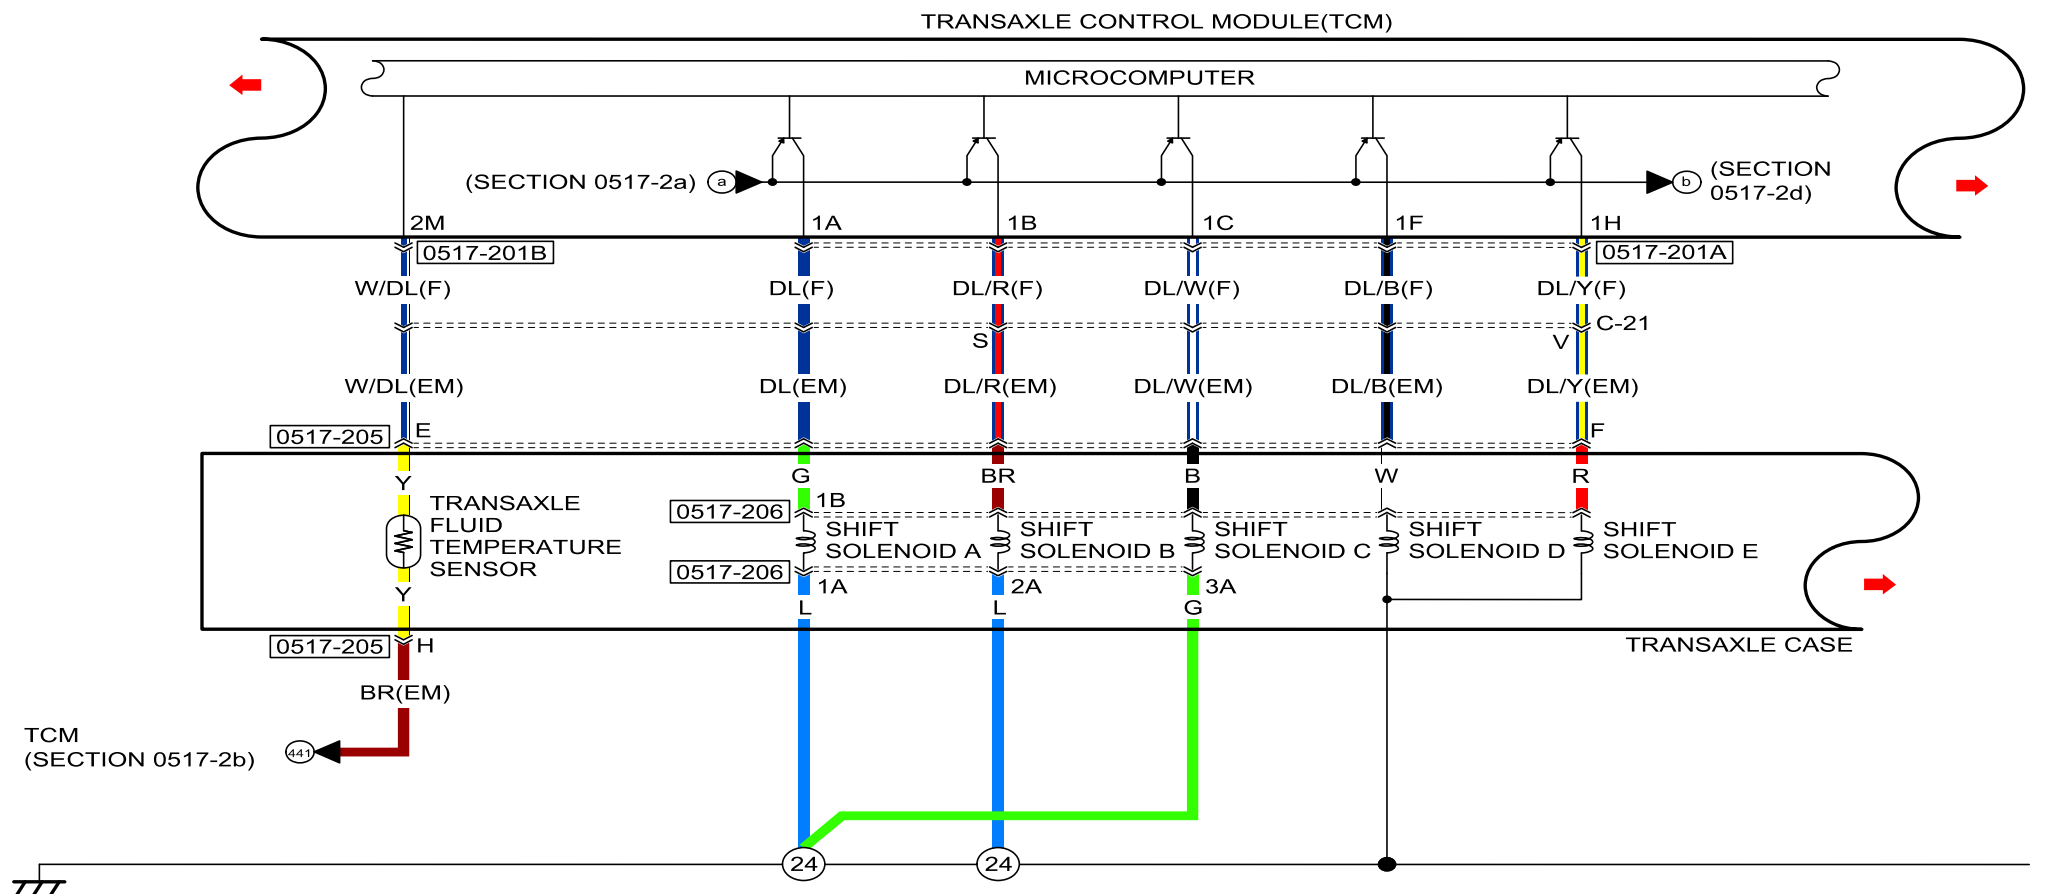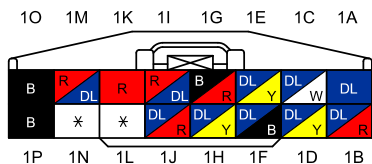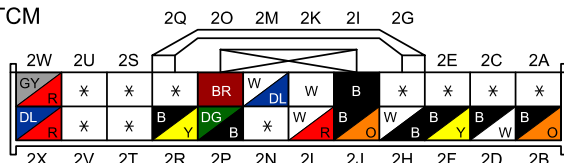
0517-201A
TCM0517-201B
TCM0517-205
EMISSION HARNESS-TRANSAXLE SHORT
CORD(PRIMARY)

EMISSION HARNESS

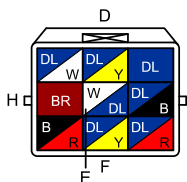

TRANSAXLE SHORT CORD(PRIMARY)

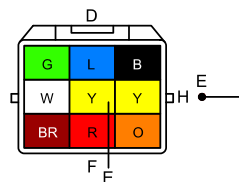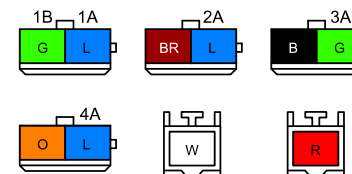0517-206
SOLENOID VALVE (PRIMARY)



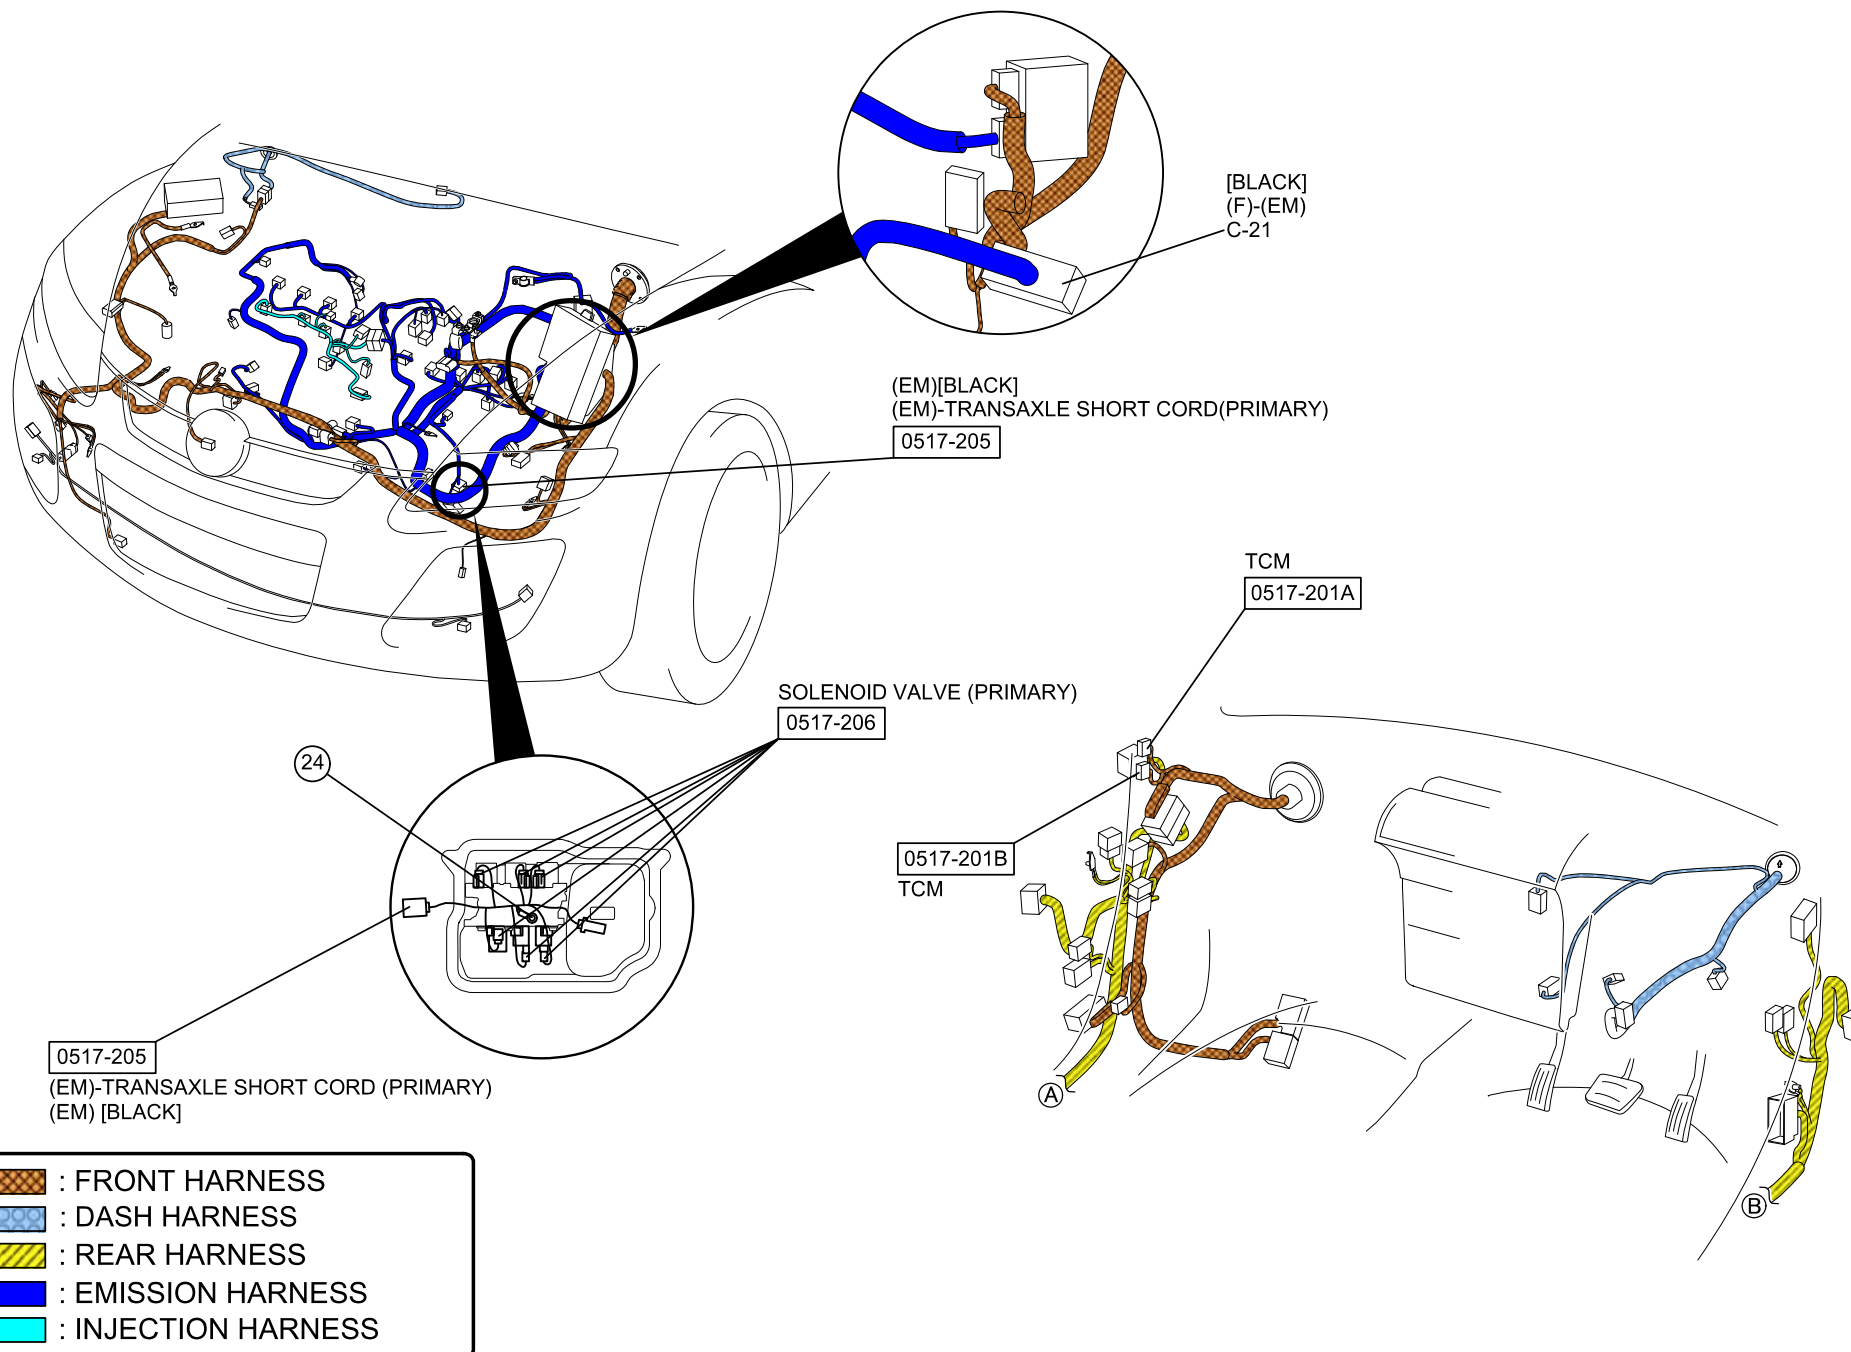


TRANSAXLE CONTROL MODULE(TCM)

MICROCOMPUTER




CURRENT
FEEDBACK DRIVER(SECTION
0517-2c)

b

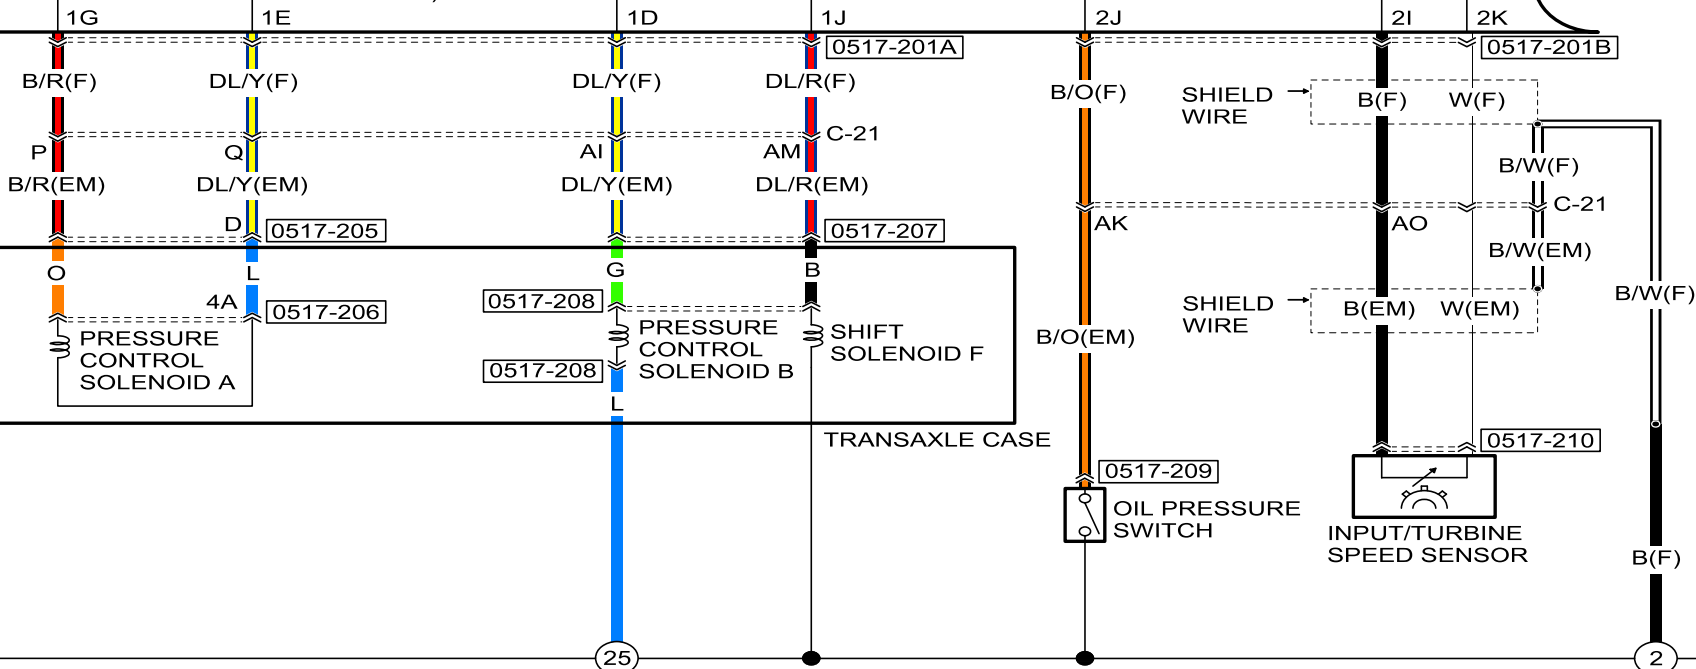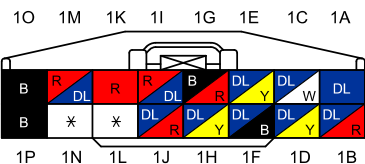
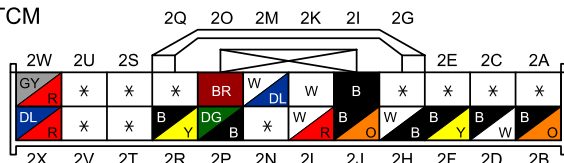
0517-201A
TCM0517-201B
TCM0517-205
EMISSION HARNESS-TRANSAXLE SHORT
CORD(PRIMARY)


EMISSION HARNESS


TRANSAXLE SHORT CORD(PRIMARY)

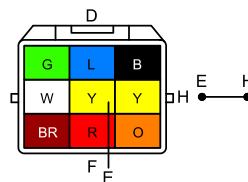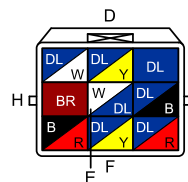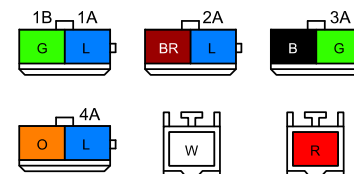0517-206
SOLENOID VALVE(PRIMARY)0517-208
SOLENOID
VALVE(SECONDARY)0517-207
EMISSION HARNESS-TRANSAXLE
SHORT CORD(SECONDARY)

  
EMISSION HARNESS

TRANSAXLE SHORT
CORD(SECONDARY)0517-209
OIL PRESSURE
SWITCH0517-210
INPUT/TURBINE
SPEED SENSOR

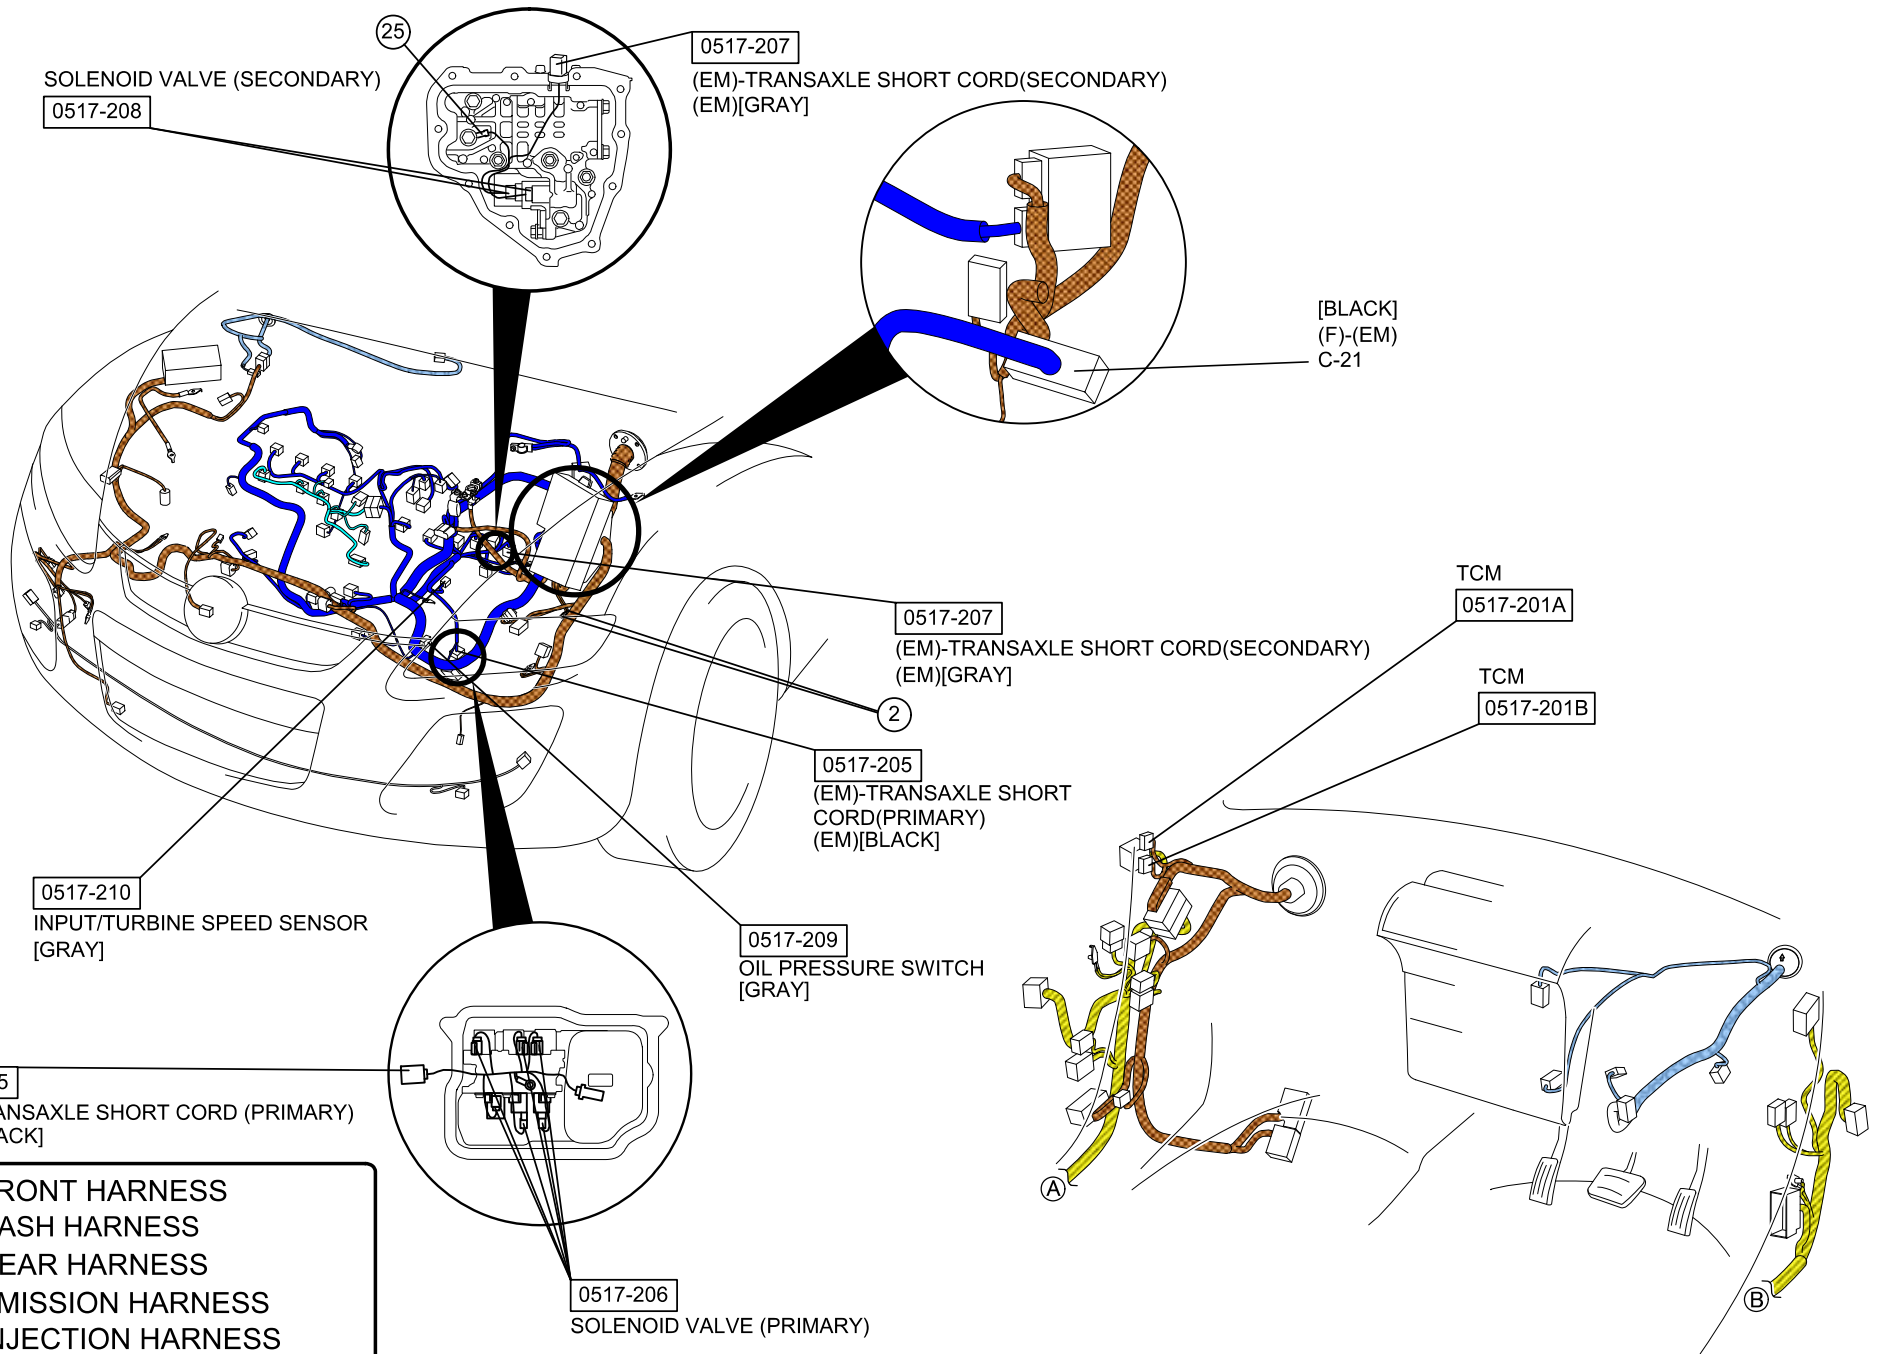


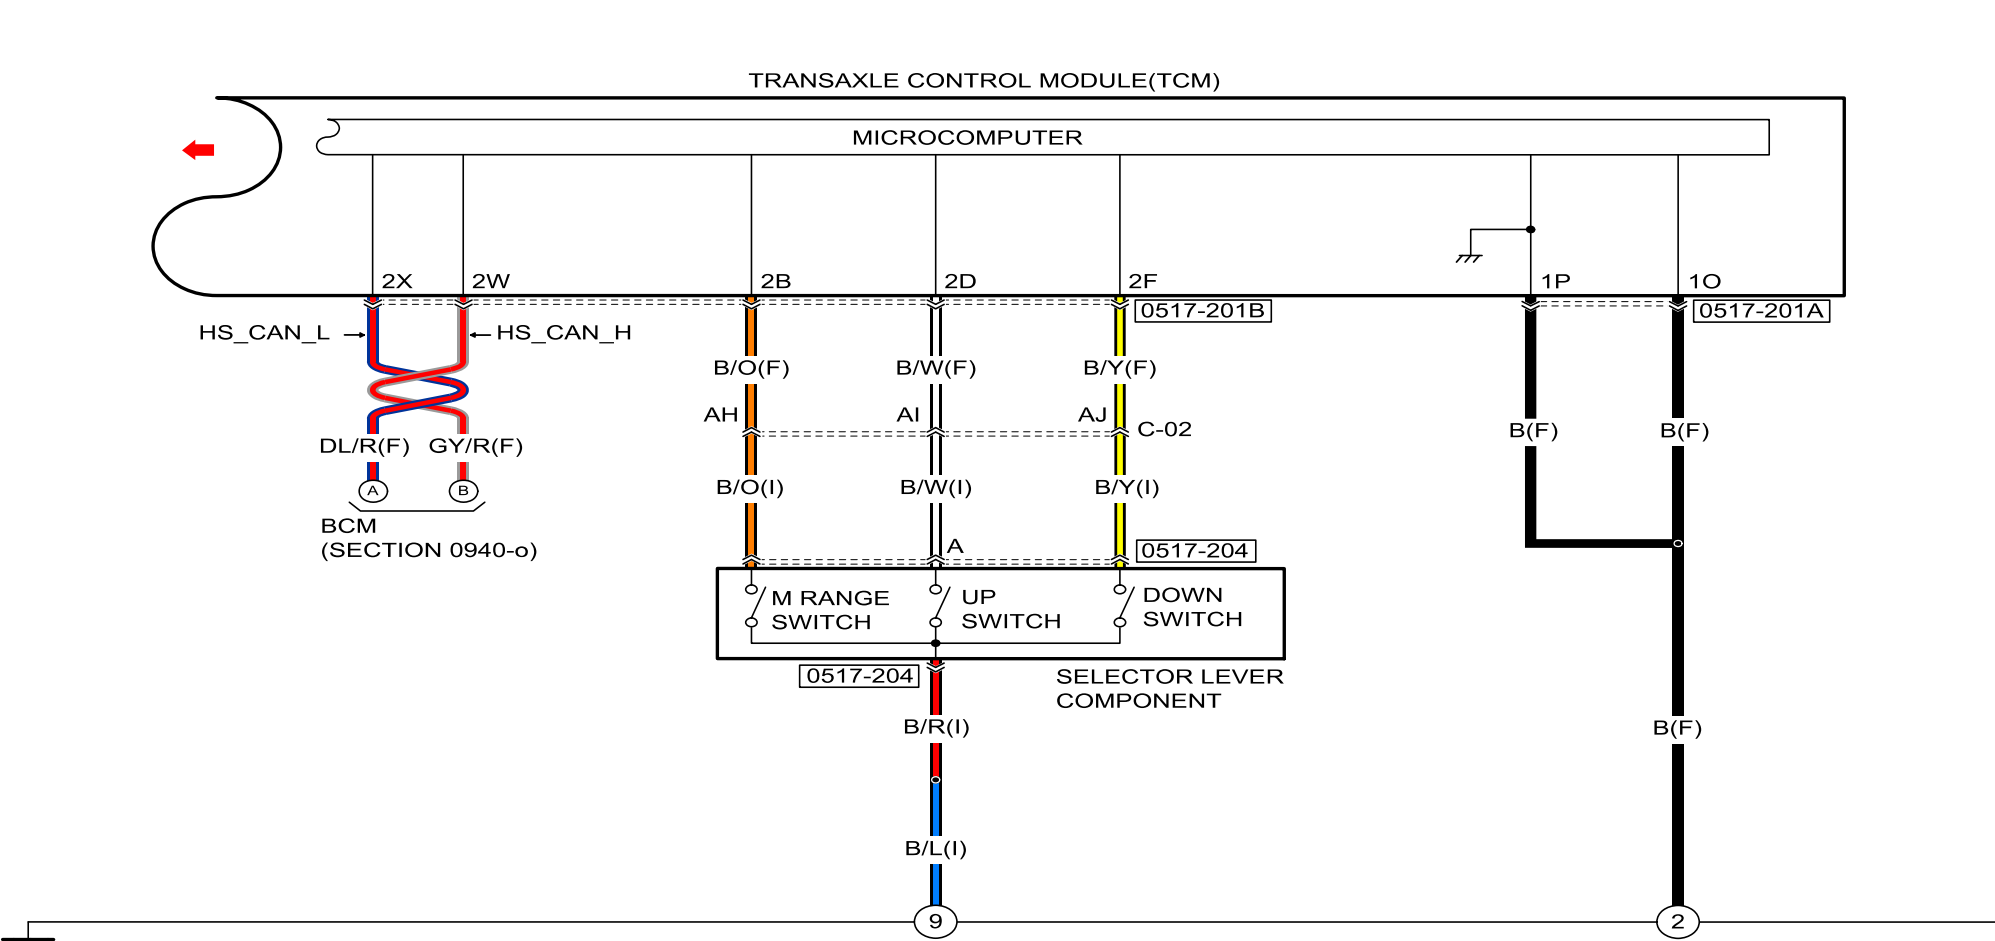

0517-201A
TCM

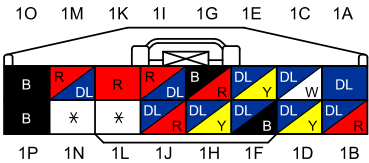

0517-201B
TCM

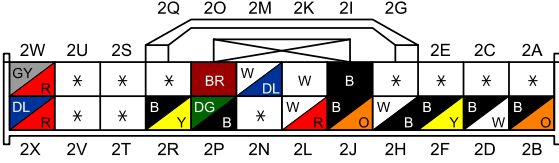

0517-204
SELECTOR LEVER
COMPONENT/
SELECTOR ILLUMINATION

