

BATTERY

B/Y(F)

F-01

IG KEY1 40A (F2)

IG KEY2 40A (F15)

MAIN FUSE BLOCK

F-02 FUSE BLOCK

METER 15A (F53)

DG/Y(I)

DG/R(I)

IGNITION SWITCH

C-01

C-02

AO

AN

R(I)

R(F)

H

O

V

R

F

DG/O(I)

B/R(I)

BR/Y(I)

W(I)

B(I)


0918-1101

HEADLIGHT RELAY (SECTION 0918-1a,2a)

INSTRUMENT CLUSTER (SECTION 0922-1g)


INSTRUMENT CLUSTER (SECTION 0922-1d)

10

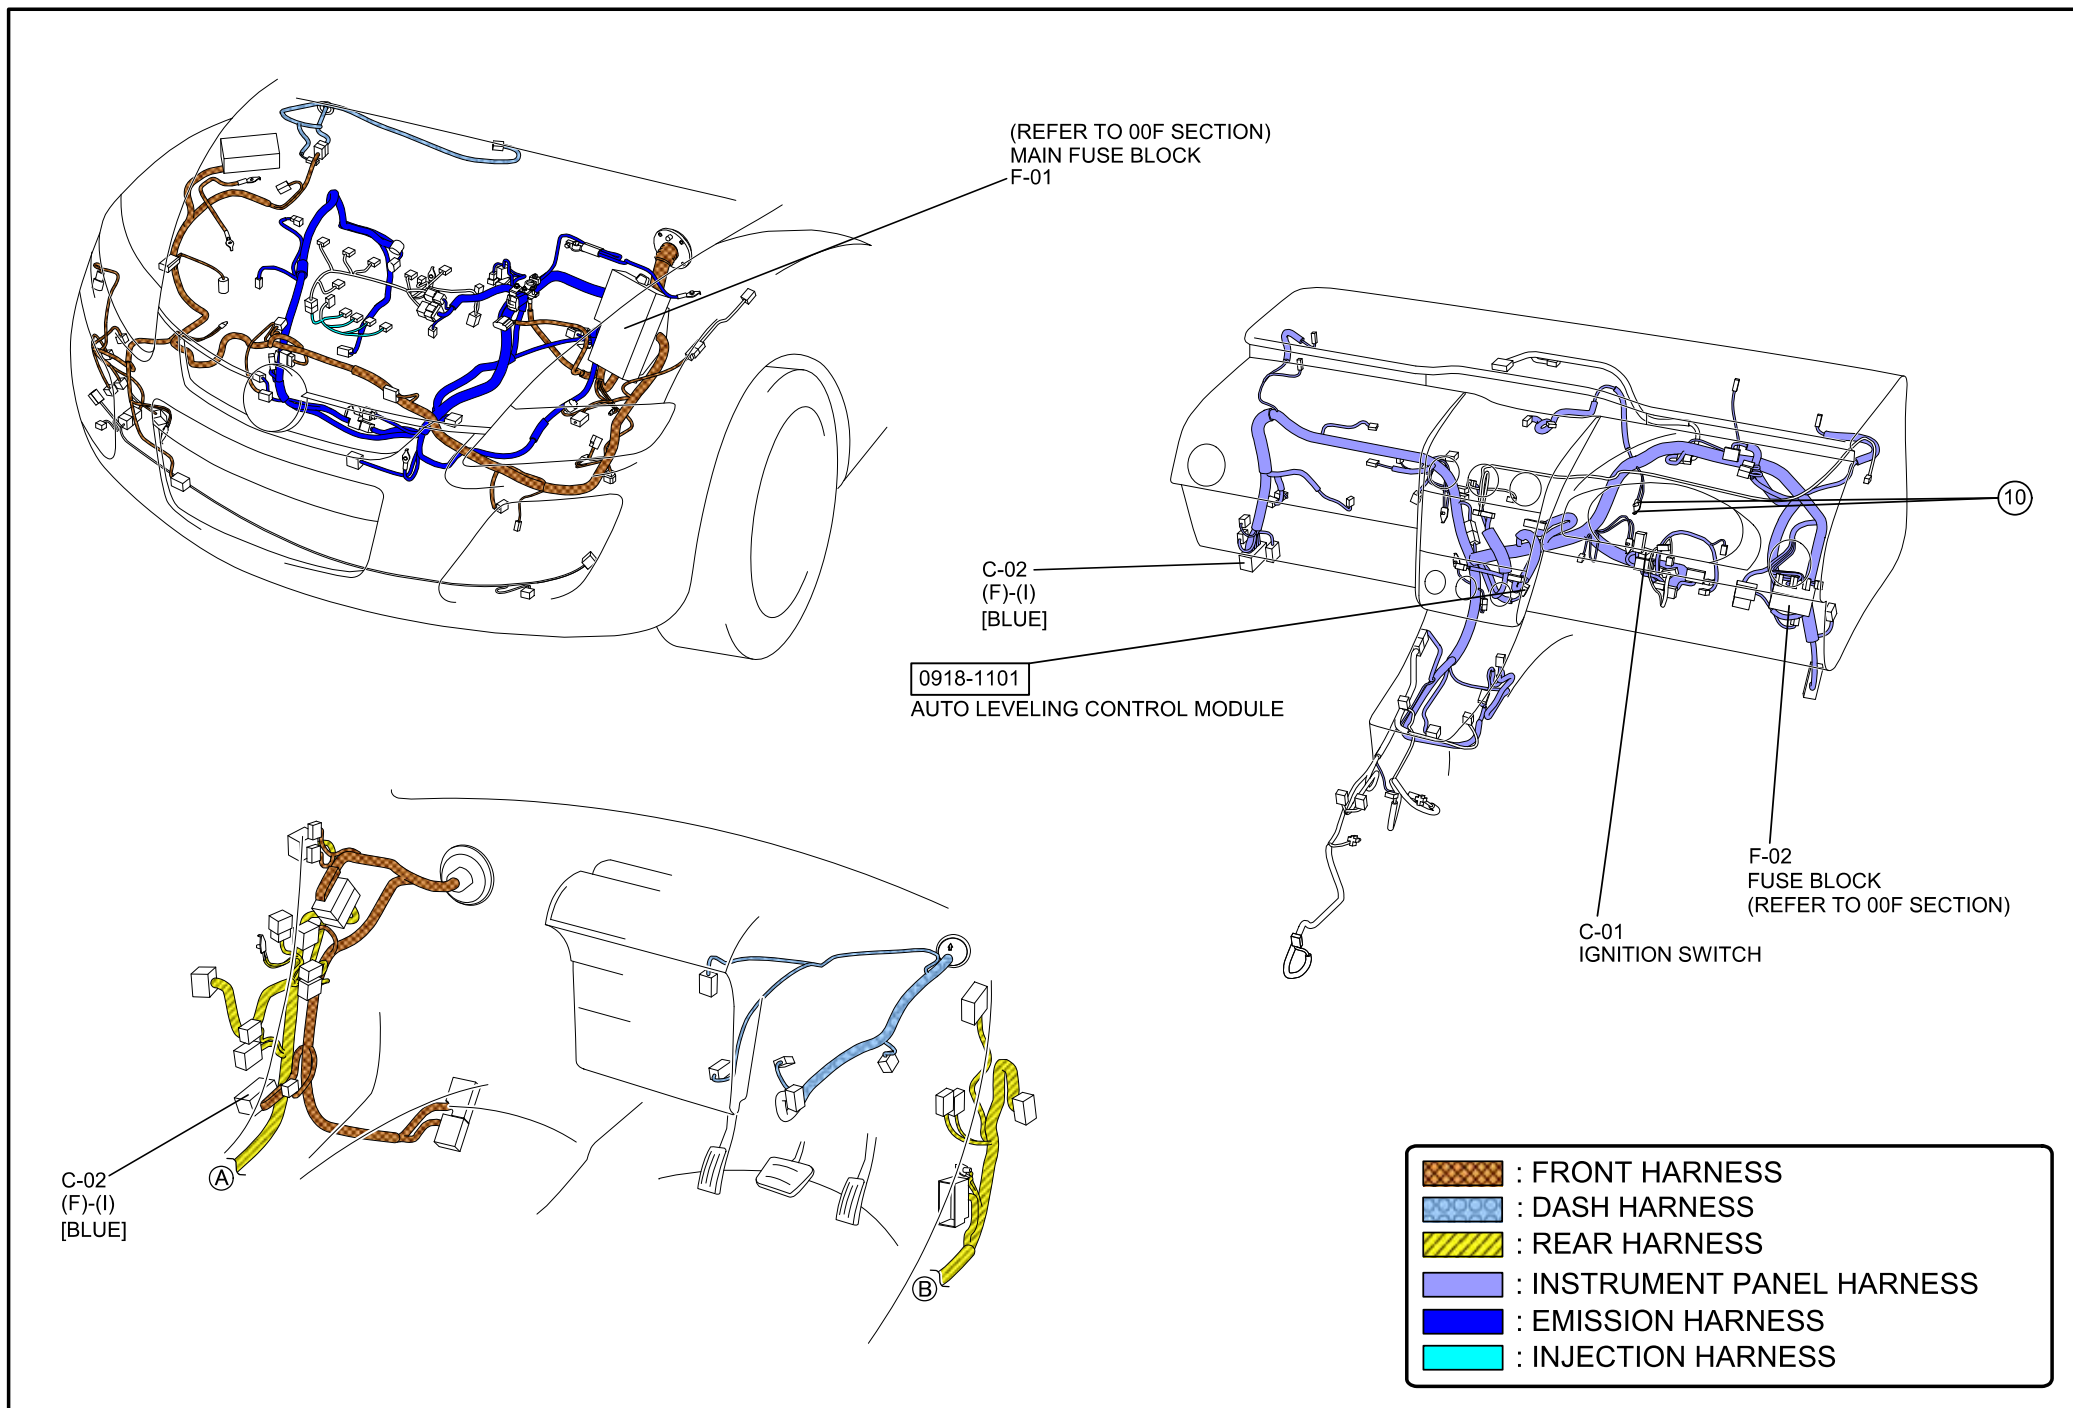


#1 : WITHOUT AUTO LIGHT SYSTEM
#2 : WITH AUTO LIGHT SYSTEM


AUTO LEVELING CONTROL MODULE

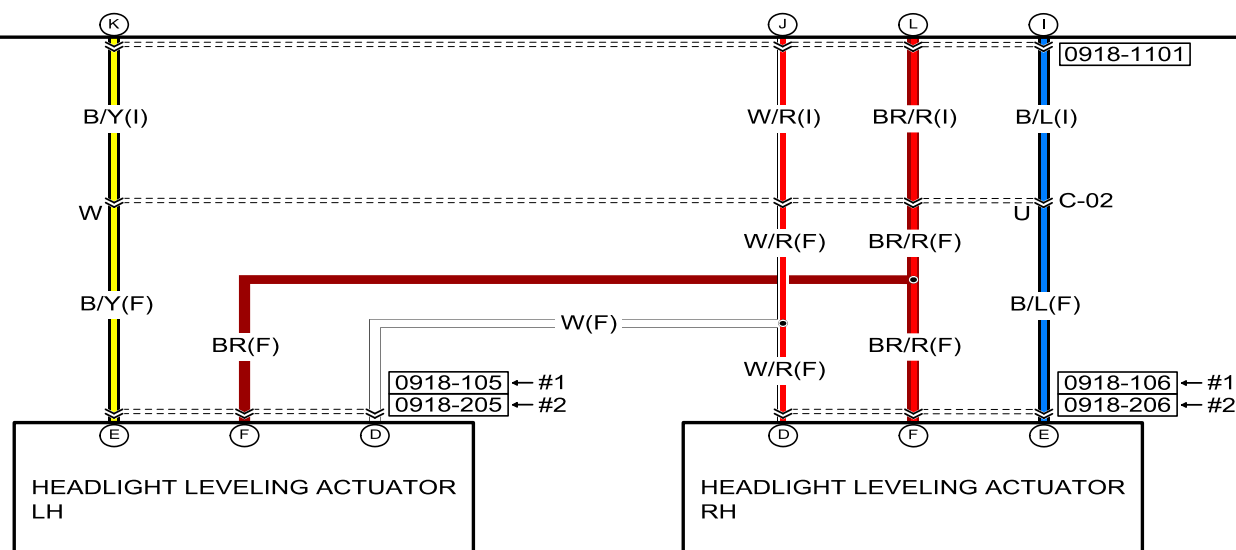


0918-1101
AUTO LEVELING CONTROL MODULE

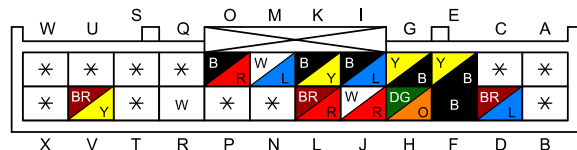


0918-105
HEADLIGHT LOW LH/
HEADLIGHT LEVELING
ACTUATOR LH/
FRONT TURN LIGHT LH

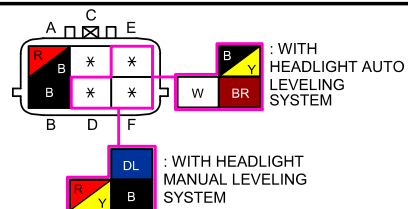


0918-106
HEADLIGHT HIGH RH/
HEADLIGHT LOW RH/
HEADLIGHT LEVELING ACTUATOR RH/
FRONT TURN LIGHT RH

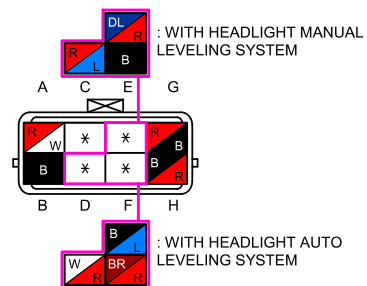

0918-205
HEADLIGHT LOW LH/
HEADLIGHT LEVELING
ACTUATOR LH/
FRONT TURN LIGHT LH

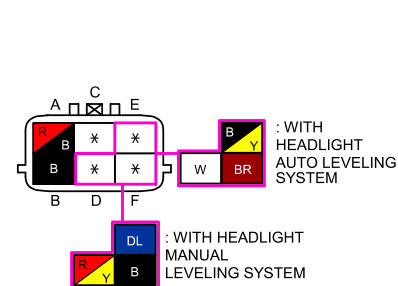

0918-206
HEADLIGHT HIGH RH/
HEADLIGHT LOW RH/
HEADLIGHT LEVELING ACTUATOR RH/
FRONT TURN LIGHT RH

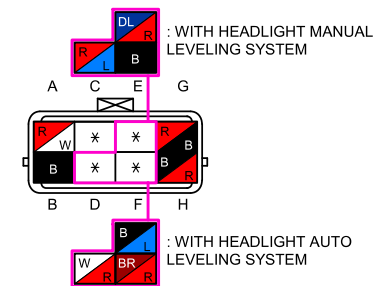

0918-106

HEADLIGHT HIGH RH/
HEADLIGHT LOW RH/
HEADLIGHT LEVELING ACTUATOR RH/
FRONT TURN LIGHT RH
[GRAY]

0918-206

HEADLIGHT HIGH RH/
HEADLIGHT LOW RH/
HEADLIGHT LEVELING ACTUATOR RH/
FRONT TURN LIGHT RH
[GRAY]

0918-105

HEADLIGHT LOW LH/
HEADLIGHT LEVELING ACTUATOR LH/
FRONT TURN LIGHT LH
[GRAY]

0918-205







HEADLIGHT LOW LH/
HEADLIGHT LEVELING ACTUATOR LH/
FRONT TURN LIGHT LH
[GRAY]

C-02
(F)-(I)
[BLUE]


C-02
(F)-(I)
[BLUE]

0918-1101


AUTO LEVELING
CONTROL MODULE

-  : FRONT HARNESS
-  : DASH HARNESS
-  : REAR HARNESS
-  : INSTRUMENT PANEL HARNESS
-  : EMISSION HARNESS
-  : INJECTION HARNESS


@ : EXCEPT U.K. specs.
@21 : WITHOUT FRONT AUTO LEVELING SENSOR

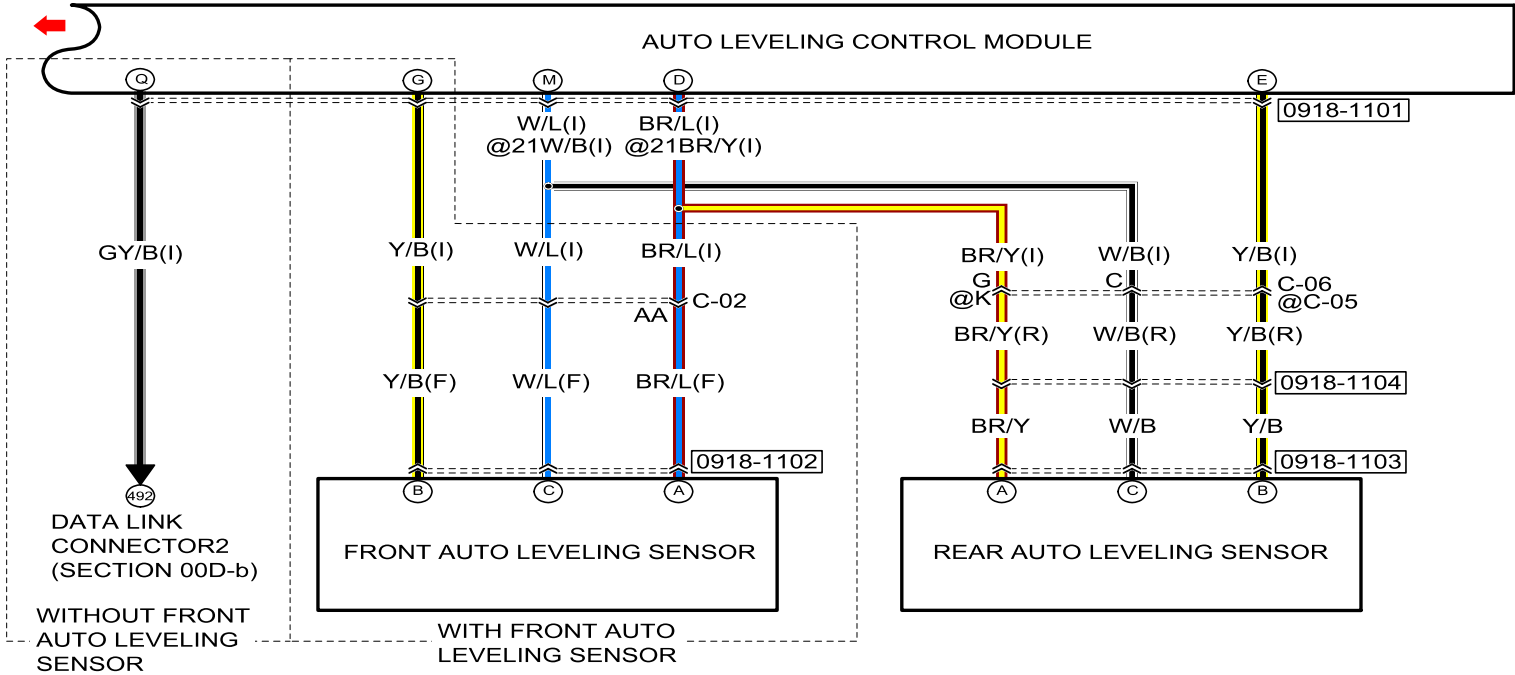


0918-1101
AUTO LEVELING CONTROL MODULE

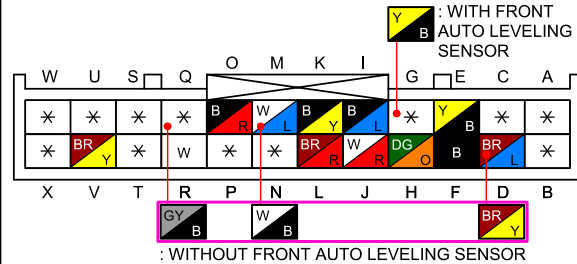

0918-1102
FRONT AUTO LEVELING SENSOR

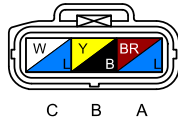

0918-1103
REAR AUTO LEVELING SENSOR

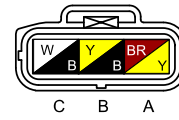

0918-1104
REAR HARNESS-SHORT CORD

