

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
T00 DIAGNOSIS				
DTC READING BY DIAGNOSTIC TOOL The labor operation for DIAGNOSTIC TOOLS usage (T9999*-*~*) can be applied only when the diagnosis requires the NGS/WDS/PDS/IDS tester to read the Diagnostic Trouble Code for Auto cruise control/Theft deterrent control system components.		T9999XDX	0.2	
T01 POWER CIRCUIT				
FUSE, R&R		T0102XRX	0.2	
MAIN FUSE, R&R	Without i-stop	T0103ARX	0.2	
MAIN FUSE, R&R	With i-stop	T0103BRX	0.3	
FUSE BLOCK OR PASSENGER JUNCTION BOX, R&R	Fuse block	T0104XRX	0.6	
FUSE BLOCK COVER, R&R		T0105XRX	0.2	
MAIN FUSE BLOCK, R&R	Without i-stop	T0106ARX	2.7	
MAIN FUSE BLOCK, R&R	With i-stop	T0106BRX	2.9	
MAIN FUSE BLOCK COVER, R&R		T0107XRX	0.2	
BODY CONTROL MODULE [BCM], R&R	Front body control module (FBCM), Without i-stop	T0108ARX	0.2	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	Front body control module (FBCM), With i-stop	T0108BRX	0.3	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	Rear body control module (RBCM), Without i-stop	T0108CRX	0.6	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	Rear body control module (RBCM), With i-stop	T0108DRX	0.7	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	Backup power supply, Without i-stop	T0108ERX	0.5	
BODY CONTROL MODULE [BCM], R&R	Backup power supply, With i-stop	T0108FRX	0.6	

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
T02 SWITCHES				
HAZARD SWITCH, R&R	Without i-stop	T0204ARX	0.2	
HAZARD SWITCH, R&R	With i-stop	T0204BRX	0.3	
CIGAR LIGHTER, R&R	Front accessory socket, Without i-stop	T0206ARX	0.2	
CIGAR LIGHTER, R&R	Front accessory socket, With i-stop	T0206BRX	0.3	
CIGAR LIGHTER, R&R	Rear accessory socket	T0206CRX	0.4	
POWER WINDOW SWITCH, R&R	Front, One side, Without i-stop	T0207ARX	0.3	◆Door trim assembly, R&R
POWER WINDOW SWITCH, R&R	Front, One side, With i-stop	T0207BRX	0.4	◆Door trim assembly, R&R
POWER WINDOW SWITCH, R&R	Front, Both sides, Without i-stop	T0207CRX	0.4	◆Door trim assembly, R&R
POWER WINDOW SWITCH, R&R	Front, Both sides, With i-stop	T0207DRX	0.5	◆Door trim assembly, R&R
POWER WINDOW SWITCH, R&R	Rear, One side	T0207ERX	0.3	◆Door trim assembly, R&R
POWER WINDOW SWITCH, R&R	Rear, Both sides, Without i-stop	T0207FRX	0.4	◆Door trim assembly, R&R
POWER WINDOW SWITCH, R&R	Rear, Both sides, With i-stop	T0207GRX	0.5	◆Door trim assembly, R&R
REMOTE CONTROL MIRROR SWITCH, R&R	Without i-stop	T0209ARX	0.3	◆Door trim assembly, R&R
REMOTE CONTROL MIRROR SWITCH, R&R	With i-stop	T0209BRX	0.4	◆Door trim assembly, R&R
CLOCK SPRING, R&R	Without i-stop	T0220ARX	0.3	◆Steering column cover (S0706), R&R
CLOCK SPRING, R&R	With i-stop	T0220BRX	0.4	◆Steering column cover (S0706), R&R
PUSH BUTTON START SWITCH, R&R		T0222XRX	0.3	◆Meter set hood (T0602), R&R
T03 EXTERIOR LIGHTING SYSTEM				
HEADLIGHT SET, R&R	Without 360°view monitor system, One side, Without i-stop	T0301ARX	0.6	◆Front bumper assembly, R&R◆Headlight (A0115), Aim
HEADLIGHT SET, R&R	Without 360°view monitor system, One side, With i-stop	T0301BRX	0.7	◆Front bumper assembly, R&R◆Headlight (A0115), Aim
HEADLIGHT SET, R&R	Without 360°view monitor system, Both sides, Without i-stop	T0301CRX	0.8	◆Front bumper assembly, R&R◆Headlight (A0115), Aim
HEADLIGHT SET, R&R	Without 360°view monitor system, Both sides, With i-stop	T0301DRX	0.9	◆Front bumper assembly, R&R◆Headlight (A0115), Aim

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One side	T0301ERX	0.8	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Both sides,Without i-stop	T0301FRX	0.9	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Both sides,With i-stop	T0301GRX	1.0	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side,Without i-stop	T0301HRX	0.8	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side,With i-stop	T0301JRX	0.9	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,Without i-stop	T0301KRX	1.0	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,With i-stop	T0301LRX	1.1	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT UNIT, R&R	Without 360°view monitor system,One side	T0304ARX	0.7	◆Headlight set (T0301), R&R◆ Headlight (A0115), Aim

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
HEADLIGHT UNIT, R&R	Without 360°view monitor system,Both sides,Without i-stop	T0304BRX	0.8	◆Headlight set (T0301), R&R◆ Headlight (A0115), Aim
HEADLIGHT UNIT, R&R	Without 360°view monitor system,Both sides,With i-stop	T0304CRX	0.9	◆Headlight set (T0301), R&R◆ Headlight (A0115), Aim
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One side,Without i-stop	T0304DRX	0.8	◆Headlight set (T0301), R&R◆ Headlight (A0115), Aim
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One side,With i-stop	T0304ERX	0.9	◆Headlight set (T0301), R&R◆ Headlight (A0115), Aim
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Both sides	T0304FRX	1.0	◆Headlight set (T0301), R&R◆ Headlight (A0115), Aim
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side	T0304GRX	0.9	◆Headlight set (T0301), R&R◆ Headlight (A0115), Aim
HEADLIGHT UNIT, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides	T0304HRX	1.1	◆Headlight set (T0301), R&R◆ Headlight (A0115), Aim
FRONT TURN SIGNAL LIGHT BULB, R&R	One or both sides	T0317XRX	0.2	
REAR COMBINATION LIGHT SET, R&R	One side,Without i-stop	T0318ARX	0.3	
REAR COMBINATION LIGHT SET, R&R	One side,With i-stop	T0318BRX	0.4	
REAR COMBINATION LIGHT SET, R&R	Both sides,Without i-stop	T0318CRX	0.4	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
REAR COMBINATION LIGHT SET, R&R	Both sides,With i-stop	T0318DRX	0.5	
REAR COMBINATION LIGHT UNIT/LENS, R&R	One side,Without i-stop	T0319ARX	0.2	
REAR COMBINATION LIGHT UNIT/LENS, R&R	One side,With i-stop	T0319BRX	0.3	
REAR COMBINATION LIGHT UNIT/LENS, R&R	Both sides,Without i-stop	T0319CRX	0.3	
REAR COMBINATION LIGHT UNIT/LENS, R&R	Both sides,With i-stop	T0319DRX	0.4	
REAR COMBINATION LIGHT BULB, R&R	One side,Without i-stop	T0320ARX	0.2	
REAR COMBINATION LIGHT BULB, R&R	One side,With i-stop	T0320BRX	0.3	
REAR COMBINATION LIGHT BULB, R&R	Both sides,Without i-stop	T0320CRX	0.3	
REAR COMBINATION LIGHT BULB, R&R	Both sides,With i-stop	T0320DRX	0.4	
HIGH MOUNT STOP LIGHT SET, R&R		T0323XRX	0.6	◆Rear spoiler (S1903), R&R
LICENSE LIGHT SET, R&R	One side,Without i-stop	T0327ARX	0.3	
LICENSE LIGHT SET, R&R	One side,With i-stop	T0327BRX	0.4	
LICENSE LIGHT SET, R&R	Both sides,Without i-stop	T0327CRX	0.3	
LICENSE LIGHT SET, R&R	Both sides,With i-stop	T0327DRX	0.4	
LICENSE LIGHT BULB, R&R	One side	T0328ARX	0.2	
LICENSE LIGHT BULB, R&R	Both sides,Without i-stop	T0328BRX	0.2	
LICENSE LIGHT BULB, R&R	Both sides,With i-stop	T0328CRX	0.3	
LIGHT SWITCH, R&R	Without i-stop	T0333ARX	0.2	◆Steering column cover (S0706), R&R
LIGHT SWITCH, R&R	With i-stop	T0333BRX	0.3	◆Steering column cover (S0706), R&R
LIFTGATE LIGHT SET, R&R	Without 360°view monitor system,One side,Without i-stop	T0339ARX	0.7	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	Without 360°view monitor system,One side,With i-stop	T0339BRX	0.8	◆Rear finisher (S0414), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
LIFTGATE LIGHT SET, R&R	Without 360°view monitor system,Both sides,Without i-stop	T0339CRX	0.8	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	Without 360°view monitor system,Both sides,With i-stop	T0339DRX	0.9	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One side	T0339ERX	0.9	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Both sides,Without i-stop	T0339FRX	0.9	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Both sides,With i-stop	T0339GRX	1.0	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side,Without i-stop	T0339HRX	0.9	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side,With i-stop	T0339JRX	1.0	◆Rear finisher (S0414), R&R
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,Without i-stop	T0339KRX	1.0	◆Rear finisher (S0414), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
LIFTGATE LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,With i-stop	T0339LRX	1.1	◆Rear finisher (S0414), R&R
FRONT FOG LIGHT SET, R&R	One side,Without i-stop	T0341ARX	0.3	◆Front fog light, Aiming
FRONT FOG LIGHT SET, R&R	One side,With i-stop	T0341BRX	0.4	◆Front fog light, Aiming
FRONT FOG LIGHT SET, R&R	Both sides	T0341CRX	0.5	◆Front fog light, Aiming
BACKUP LIGHT BULB, R&R	One or both sides	T0344XRX	0.2	
SIDE TURN SIGNAL LIGHT SET, R&R	Without 360°view monitor system,One side	T0345ARX	0.3	
SIDE TURN SIGNAL LIGHT SET, R&R	Without 360°view monitor system,Both sides	T0345BRX	0.4	
SIDE TURN SIGNAL LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One side,Without i-stop	T0345CRX	0.4	
SIDE TURN SIGNAL LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One side,With i-stop	T0345DRX	0.5	
SIDE TURN SIGNAL LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Both sides,Without i-stop	T0345ERX	0.5	
SIDE TURN SIGNAL LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Both sides,With i-stop	T0345FRX	0.6	
SIDE TURN SIGNAL LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One side	T0345GRX	0.6	

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
SIDE TURN SIGNAL LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,Without i-stop	T0345HRX	0.8	
SIDE TURN SIGNAL LIGHT SET, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides,With i-stop	T0345JRX	0.9	
FRONT POSITION LIGHT BULB, R&R	One or both sides	T0351XRX	0.2	
HEADLIGHT AUTO LEVELING SENSOR, R&R	Without i-stop	T0354ARX	0.2	
HEADLIGHT AUTO LEVELING SENSOR, R&R	With i-stop	T0354BRX	0.3	
HEADLIGHT AUTO LEVELING CONTROL MODULE, R&R		T0355XRX	0.3	
T04 INTERIOR LIGHTING SYSTEM				
INTERIOR LAMP ASSEMBLY, R&R	[Without sunroof,Without i-stop]/[With sunroof,With sunroof seaming welt,Without i-stop]	T0401ARX	1.5	
INTERIOR LAMP ASSEMBLY, R&R	[Without sunroof,With i-stop]/[With sunroof,With sunroof seaming welt,With i-stop]	T0401BRX	1.6	
INTERIOR LAMP ASSEMBLY, R&R	With sunroof,Without sunroof seaming welt,Without i-stop	T0401CRX	1.6	
INTERIOR LAMP ASSEMBLY, R&R	With sunroof,Without sunroof seaming welt,With i-stop	T0401DRX	1.7	
INTERIOR LAMP LENS, R&R		T0402XRX	0.2	
INTERIOR LAMP BULB, R&R		T0403XRX	0.2	
CARGO ROOM LAMP ASSEMBLY, R&R		T0404XRX	0.2	
CARGO ROOM LAMP LENS, R&R		T0405XRX	0.2	
CARGO ROOM LAMP BULB, R&R		T0406XRX	0.2	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
OVERHEAD CONSOLE, R&R	Without intruder sensor	T0410ARX	0.2	
OVERHEAD CONSOLE, R&R	With intruder sensor,Without i-stop	T0410BRX	0.2	
OVERHEAD CONSOLE, R&R	With intruder sensor,With i-stop	T0410CRX	0.3	
OVERHEAD CONSOLE ROOM, LAMP LENS/BULB, R&R	Lens	T0411ARX	0.2	
OVERHEAD CONSOLE ROOM, LAMP LENS/BULB, R&R	Bulb	T0411BRX	0.2	
LIFTGATE LAMP ASSEMBLY, R&R		T0421XRX	0.2	
LIFTGATE LAMP LENS, R&R		T0422XRX	0.2	
LIFTGATE LAMP BULB, R&R		T0423XRX	0.2	
T05 WARNING SYSTEM				
OIL LEVEL SENSOR, R&R	Without i-stop	T0502ARX	0.5	
OIL LEVEL SENSOR, R&R	With i-stop	T0502BRX	0.6	
OIL PRESSURE SWITCH, R&R	Engine oil pressure sensor/engine oil temperature sensor,Without i-stop	T0504ARX	0.3	
OIL PRESSURE SWITCH, R&R	Engine oil pressure sensor/engine oil temperature sensor,With i-stop	T0504BRX	0.4	
WASHER LEVEL WARNING SWITCH, R&R	Without 360°view monitor system,Without i-stop	T0506ARX	0.5	◆Front bumper assembly, R&R
WASHER LEVEL WARNING SWITCH, R&R	Without 360°view monitor system,With i-stop	T0506BRX	0.6	◆Front bumper assembly, R&R
WASHER LEVEL WARNING SWITCH, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Without i-stop	T0506CRX	0.6	◆Front bumper assembly, R&R
WASHER LEVEL WARNING SWITCH, R&R	With 360°view monitor system,360°view monitor system screen display verification only,With i-stop	T0506DRX	0.7	◆Front bumper assembly, R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
WASHER LEVEL WARNING SWITCH, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Without i-stop	T0506ERX	0.7	◆Front bumper assembly, R&R
WASHER LEVEL WARNING SWITCH, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,With i-stop	T0506FRX	0.8	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Front camera,360°view monitor system screen display verification only	T0512ARX	0.7	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Front camera,360°view monitor system screen display verification and 360°view monitor system aiming,Without i-stop	T0512BRX	0.7	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Front camera,360°view monitor system screen display verification and 360°view monitor system aiming,With i-stop	T0512CRX	0.8	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Side camera,360°view monitor system screen display verification only,One side,Without i-stop	T0512DRX	0.4	
PARKING ASSIST SYSTEM, R&R	Side camera,360°view monitor system screen display verification only,One side,With i-stop	T0512ERX	0.5	
PARKING ASSIST SYSTEM, R&R	Side camera,360°view monitor system screen display verification only,Both sides	T0512FRX	0.6	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
PARKING ASSIST SYSTEM, R&R	Side camera,360°view monitor system screen display verification and 360°view monitor system aiming,One side,Without i-stop	T0512GRX	0.6	
PARKING ASSIST SYSTEM, R&R	Side camera,360°view monitor system screen display verification and 360°view monitor system aiming,One side,With i-stop	T0512HRX	0.6	
PARKING ASSIST SYSTEM, R&R	Side camera,360°view monitor system screen display verification and 360°view monitor system aiming,Both sides	T0512JRX	0.9	
PARKING ASSIST SYSTEM, R&R	Rear mount camera,Without 360°view monitor system	T0512XRX	0.8	◆Rear finisher (S0414), R&R
PARKING ASSIST SYSTEM, R&R	Rear mount camera,With 360°view monitor system,360°view monitor system screen display verification only	T0512KRX	0.9	◆Rear finisher (S0414), R&R
PARKING ASSIST SYSTEM, R&R	Rear mount camera,With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming	T0512LRX	1.0	◆Rear finisher (S0414), R&R
PARKING ASSIST SYSTEM, R&R	360°view monitor control module,Without i-stop	T0512MRX	1.2	◆Rear console (S0803), R&R◆360°view monitor system aiming◆360°view monitor system screen display verification
PARKING ASSIST SYSTEM, R&R	360°view monitor control module,With i-stop	T0512NRX	1.3	◆Rear console (S0803), R&R◆360°view monitor system aiming◆360°view monitor system screen display verification
PARKING ASSIST SYSTEM, R&R	360°view monitor switch,Without i-stop	T0512PRX	0.3	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
PARKING ASSIST SYSTEM, R&R	360°view monitor switch,With i-stop	T0512QRX	0.4	
BLIND SPOT MONITORING [BSM], R&R	Blind spot monitoring (BSM) control module,One side,Without i-stop	T0513ARX	0.9	◆Rear bumper assembly, R&R◆Blind spot monitoring [BSM] radar, Aiming
BLIND SPOT MONITORING [BSM], R&R	Blind spot monitoring (BSM) control module,One side,With i-stop	T0513BRX	1.0	◆Rear bumper assembly, R&R◆Blind spot monitoring [BSM] radar, Aiming
BLIND SPOT MONITORING [BSM], R&R	Blind spot monitoring (BSM) control module,Both sides,Without i-stop	T0513CRX	1.0	◆Rear bumper assembly, R&R◆Blind spot monitoring [BSM] radar, Aiming
BLIND SPOT MONITORING [BSM], R&R	Blind spot monitoring (BSM) control module,Both sides,With i-stop	T0513DRX	1.1	◆Rear bumper assembly, R&R◆Blind spot monitoring [BSM] radar, Aiming
BLIND SPOT MONITORING [BSM], R&R	Blind spot monitoring (BSM) switch,Without i-stop	T0513ERX	0.3	
BLIND SPOT MONITORING [BSM], R&R	Blind spot monitoring (BSM) switch,With i-stop	T0513FRX	0.4	
PARKING SENSOR CONTROL MODULE, R&R	Without i-stop	T0514ARX	0.2	
PARKING SENSOR CONTROL MODULE, R&R	With i-stop	T0514BRX	0.3	
PARKING SENSOR SWITCH, R&R	Without i-stop	T0515ARX	0.3	
PARKING SENSOR SWITCH, R&R	With i-stop	T0515BRX	0.4	
PARKING SENSOR BUZZER, R&R	Front,Without i-stop	T0516ARX	0.3	
PARKING SENSOR BUZZER, R&R	Front,With i-stop	T0516BRX	0.4	
PARKING SENSOR BUZZER, R&R	Rear,Without i-stop	T0516CRX	0.3	
PARKING SENSOR BUZZER, R&R	Rear,With i-stop	T0516DRX	0.4	
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,One,Without i-stop	T0517ARX	0.5	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,One,With i-stop	T0517BRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,Two,Without i-stop	T0517CRX	0.5	◆Front bumper assembly, R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,Two,With i-stop	T0517DRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,Three,Without i-stop	T0517ERX	0.5	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,Three,With i-stop	T0517FRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,All,Without i-stop	T0517GRX	0.5	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Without 360°view monitor system,All,With i-stop	T0517HRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,One,Without i-stop	T0517JRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,One,With i-stop	T0517KRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,Two,Without i-stop	T0517LRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,Two,With i-stop	T0517MRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,Three,Without i-stop	T0517NRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,Three,With i-stop	T0517PRX	0.7	◆Front bumper assembly, R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,All,Without i-stop	T0517QRX	0.6	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification only,All,With i-stop	T0517RRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One,Without i-stop	T0517SRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One,With i-stop	T0517TRX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Two,Without i-stop	T0517URX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Two,With i-stop	T0517VRX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Three,Without i-stop	T0517WRX	0.7	◆Front bumper assembly, R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Three,With i-stop	T0517YRX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,All,Without i-stop	T0517ZRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,All,With i-stop	T05171RX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	One,Without i-stop	T0518ARX	0.6	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	One,With i-stop	T0518BRX	0.7	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	Two,Without i-stop	T0518CRX	0.6	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	Two,With i-stop	T0518DRX	0.7	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	Three,Without i-stop	T0518ERX	0.6	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	Three,With i-stop	T0518FRX	0.7	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	All,Without i-stop	T0518GRX	0.6	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	All,With i-stop	T0518HRX	0.7	◆Rear bumper assembly, R&R
FORWARD SENSING CAMERA [FSC], R&R	Without i-stop	T0520ARX	0.4	
FORWARD SENSING CAMERA [FSC], R&R	With i-stop	T0520BRX	0.5	
LANE DEPARTURE WARNING SYSTEM [LDWS] SWITCH, R&R	Without i-stop	T0521ARX	0.3	
LANE DEPARTURE WARNING SYSTEM [LDWS] SWITCH, R&R	With i-stop	T0521BRX	0.4	
MAZDA ERA-GLONASS RELATED PARTS, R&R	MAZDA ERA-GLONASS control module,Without i-stop	T0523ARX	0.7	◆Rear console (S0803), R&R
MAZDA ERA-GLONASS RELATED PARTS, R&R	MAZDA ERA-GLONASS control module,With i-stop	T0523BRX	0.8	◆Rear console (S0803), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
MAZDA ERA-GLONASS RELATED PARTS, R&R	TEL antenna,Without i-stop	T0523CRX	0.2	
MAZDA ERA-GLONASS RELATED PARTS, R&R	TEL antenna,With i-stop	T0523DRX	0.3	
MAZDA ERA-GLONASS RELATED PARTS, R&R	MAZDA ERA-GLONASS speaker,Without i-stop	T0523ERX	0.2	
MAZDA ERA-GLONASS RELATED PARTS, R&R	MAZDA ERA-GLONASS speaker,With i-stop	T0523FRX	0.3	
MAZDA ERA-GLONASS RELATED PARTS, R&R	MAZDA ERA-GLONASS control module battery	T0523GRX	0.6	◆Rear console (S0803), R&R
T06 INSTRUMENT CLUSTER (METER)				
METER SET HOOD, R&R		T0602XRX	0.3	
METER SET AND/OR CENTRAL PROCESSING UNIT [CPU], R&R	Without i-stop	T0603ARX	0.4	◆Meter set hood (T0602), R&R
METER SET AND/OR CENTRAL PROCESSING UNIT [CPU], R&R	With i-stop	T0603BRX	0.5	◆Meter set hood (T0602), R&R
FRONT LENS [WINDOW PLATE], R&R		T0606XRX	0.4	◆Meter set hood (T0602), R&R
FUEL TANK GAUGE UNIT, R&R	2WD,LHD,Without i-stop	T0619ARX	0.9	
FUEL TANK GAUGE UNIT, R&R	2WD,LHD,With i-stop	T0619JRX	1.0	
FUEL TANK GAUGE UNIT, R&R	<i>[2WD,RHD,Without i-stop]/[2WD,RHD,With i-stop,Captain type second-row seat]</i>	T0619BRX	1.0	
FUEL TANK GAUGE UNIT, R&R	<i>2WD,RHD,With i-stop,Bench type second-row seat</i>	T0619CRX	1.1	
FUEL TANK GAUGE UNIT, R&R	4WD,LHD,Main gauge unit,Without i-stop	T0619DRX	0.9	
FUEL TANK GAUGE UNIT, R&R	4WD,LHD,Main gauge unit,With i-stop	T0619KRX	1.0	
FUEL TANK GAUGE UNIT, R&R	4WD,LHD,Sub gauge unit,Without i-stop	T0619ERX	0.8	
FUEL TANK GAUGE UNIT, R&R	4WD,LHD,Sub gauge unit,With i-stop	T0619LRX	0.9	
<i>FUEL TANK GAUGE UNIT, R&R</i>	<i>4WD,RHD,Main gauge unit,Captain type second-row seat</i>	<i>T0619MRX</i>	<i>1.0</i>	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
FUEL TANK GAUGE UNIT, R&R	4WD,RHD,Main gauge unit,Bench type second-row seat	T0619FRX	1.1	
FUEL TANK GAUGE UNIT, R&R	4WD,RHD,Sub gauge unit,Without i-stop	T0619GRX	0.8	
FUEL TANK GAUGE UNIT, R&R	4WD,RHD,Sub gauge unit,With i-stop	T0619HRX	0.9	
ACTIVE DRIVING DISPLAY, R&R		T0626XRX	0.4	◆Meter set hood (T0602), R&R
T08 AUTO CRUISE & RADAR RACONTROL SYSTEM				
AUTO CRUISE CONTROL SWITCH, R&R	Without i-stop	T0805ARX	0.2	
AUTO CRUISE CONTROL SWITCH, R&R	With i-stop	T0805BRX	0.3	
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit,Without 360°view monitor system,Without i-stop	T0808ARX	0.8	◆Front bumper assembly, R&R
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit,Without 360°view monitor system,With i-stop	T0808BRX	0.9	◆Front bumper assembly, R&R
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit,With 360°view monitor system,360°view monitor system screen display verification only,Without i-stop	T0808ERX	0.8	◆Front bumper assembly, R&R
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit,With 360°view monitor system,360°view monitor system screen display verification only,With i-stop	T0808FRX	0.9	◆Front bumper assembly, R&R
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit,With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Without i-stop	T0808GRX	0.9	◆Front bumper assembly, R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit,With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,With i-stop	T0808HRX	1.0	◆Front bumper assembly, R&R
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Cruise control switch,Without i-stop	T0808CRX	0.2	
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Cruise control switch,With i-stop	T0808DRX	0.3	
ADJUSTABLE SPEED LIMITER CONTROL SWITCH, R&R	Without i-stop	T0809ARX	0.2	
ADJUSTABLE SPEED LIMITER CONTROL SWITCH, R&R	With i-stop	T0809BRX	0.3	
T09 THEFT DETERRENT SYSTEM				
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar horn,Without i-stop	T0901ARX	0.5	
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar horn,With i-stop	T0901BRX	0.6	
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar siren	T0901CRX	0.3	
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Intruder sensor	T0901DRX	0.3	
T10 HORN				
HORN RELAY, R&R		T1001XRX	0.2	
HORN, R&R	Without 360°view monitor system,One,Without i-stop	T1002ARX	0.5	◆Front bumper assembly, R&R
HORN, R&R	Without 360°view monitor system,One,With i-stop	T1002BRX	0.6	◆Front bumper assembly, R&R
HORN, R&R	Without 360°view monitor system,Two,Without i-stop	T1002CRX	0.5	◆Front bumper assembly, R&R
HORN, R&R	Without 360°view monitor system,Two,With i-stop	T1002DRX	0.6	◆Front bumper assembly, R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One,Without i-stop	T1002ERX	0.6	◆Front bumper assembly, R&R
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification only,One,With i-stop	T1002FRX	0.7	◆Front bumper assembly, R&R
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Two,Without i-stop	T1002GRX	0.6	◆Front bumper assembly, R&R
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification only,Two,With i-stop	T1002HRX	0.7	◆Front bumper assembly, R&R
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One,Without i-stop	T1002JRX	0.7	◆Front bumper assembly, R&R
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,One,With i-stop	T1002KRX	0.8	◆Front bumper assembly, R&R
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Two,Without i-stop	T1002LRX	0.7	◆Front bumper assembly, R&R

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
HORN, R&R	With 360°view monitor system,360°view monitor system screen display verification and 360°view monitor system aiming,Two,With i-stop	T1002MRX	0.8	◆Front bumper assembly, R&R
T11 AUDIO SYSTEM				
SPEAKER GRILLE, R&R	Front side speaker,One side	T1101ARX	0.2	
SPEAKER GRILLE, R&R	Front side speaker,Both sides	T1101BRX	0.2	
SPEAKER GRILLE, R&R	Center speaker	T1101CRX	0.2	
SPEAKER GRILLE, R&R	Rear speaker,One side	T1101DRX	0.2	
SPEAKER GRILLE, R&R	Rear speaker,Both sides	T1101ERX	0.2	
TUNER, R&R	Tuner and amp unit (TAU),LHD,Without i-stop	T1103ARX	0.3	
TUNER, R&R	Tuner and amp unit (TAU),LHD,With i-stop	T1103BRX	0.4	
TUNER, R&R	Tuner and amp unit (TAU),RHD,Without i-stop	T1103CRX	0.3	
TUNER, R&R	Tuner and amp unit (TAU),RHD,With i-stop	T1103DRX	0.4	
TUNER, R&R	Remote tuner (RT)	T1103ERX	0.4	
ANTENNA, R&R	[Without sunroof,Without i-stop]/[With sunroof,With sunroof seaming welt,Without i-stop]	T1106ARX	1.5	
ANTENNA, R&R	[Without sunroof,With i-stop]/[With sunroof,With sunroof seaming welt,With i-stop]	T1106BRX	1.6	
ANTENNA, R&R	With sunroof,Without sunroof seaming welt,Without i-stop	T1106CRX	1.6	
ANTENNA, R&R	With sunroof,Without sunroof seaming welt,With i-stop	T1106DRX	1.7	
REAR ANTENNA FEEDER, R&R	[Without sunroof,A pillar to D pillar,Without i-stop]/[With sunroof,With sunroof seaming welt,A pillar to D pillar,Without i-stop]	T1108ARX	1.7	◆Headliner (S1701), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
REAR ANTENNA FEEDER, R&R	[Without sunroof,A pillar to D pillar,With i-stop]/[With sunroof,With sunroof seaming welt,A pillar to D pillar,With i-stop]	T1108BRX	1.8	◆Headliner (S1701), R&R
REAR ANTENNA FEEDER, R&R	With sunroof,Without sunroof seaming welt,A pillar to D pillar,Without i-stop	T1108ERX	1.8	◆Headliner (S1701), R&R
REAR ANTENNA FEEDER, R&R	With sunroof,Without sunroof seaming welt,A pillar to D pillar,With i-stop	T1108FRX	1.9	◆Headliner (S1701), R&R
REAR ANTENNA FEEDER, R&R	[Without sunroof,D pillar to roof antenna,Without i-stop]/[With sunroof,With sunroof seaming welt,D pillar to roof antenna,Without i-stop]	T1108CRX	1.7	◆Headliner (S1701), R&R
REAR ANTENNA FEEDER, R&R	[Without sunroof,D pillar to roof antenna,With i-stop]/[With sunroof,With sunroof seaming welt,D pillar to roof antenna,With i-stop]	T1108DRX	1.8	◆Headliner (S1701), R&R
REAR ANTENNA FEEDER, R&R	With sunroof,Without sunroof seaming welt,D pillar to roof antenna,Without i-stop	T1108GRX	1.8	◆Headliner (S1701), R&R
REAR ANTENNA FEEDER, R&R	With sunroof,Without sunroof seaming welt,D pillar to roof antenna,With i-stop	T1108HRX	1.9	◆Headliner (S1701), R&R
CONDENSER, R&R	Without i-stop	T1111ARX	0.9	
CONDENSER, R&R	With i-stop	T1111BRX	1.0	
AMPLIFIER, R&R	Without i-stop	T1115ARX	0.2	
AMPLIFIER, R&R	With i-stop	T1115BRX	0.3	
CAR COMMUNICATION SYSTEM, R&R	Center display,Without i-stop	T1117ARX	0.2	
CAR COMMUNICATION SYSTEM, R&R	Center display,With i-stop	T1117BRX	0.3	
CAR COMMUNICATION SYSTEM, R&R	Connectivity master unit (CMU)	T1117CRX	0.5	

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
CAR COMMUNICATION SYSTEM, R&R	Commander switch,Without i-stop	T1117DRX	0.3	
CAR COMMUNICATION SYSTEM, R&R	Commander switch,With i-stop	T1117ERX	0.4	
CAR COMMUNICATION SYSTEM, R&R	GPS antenna,Without i-stop	T1117FRX	0.3	
CAR COMMUNICATION SYSTEM, R&R	GPS antenna,With i-stop	T1117GRX	0.4	
SPEAKER [FRONT], R&R	Front door speaker,One side,Without i-stop	T1122ARX	0.3	◆Door trim assembly, R&R
SPEAKER [FRONT], R&R	Front door speaker,One side,With i-stop	T1122BRX	0.4	◆Door trim assembly, R&R
SPEAKER [FRONT], R&R	Front door speaker,Both sides,Without i-stop	T1122CRX	0.4	◆Door trim assembly, R&R
SPEAKER [FRONT], R&R	Front door speaker,Both sides,With i-stop	T1122DRX	0.5	◆Door trim assembly, R&R
SPEAKER [FRONT], R&R	Front side speaker,One side,Without i-stop	T1122ERX	0.2	
SPEAKER [FRONT], R&R	Front side speaker,One side,With i-stop	T1122FRX	0.3	
SPEAKER [FRONT], R&R	Front side speaker,Both sides,Without i-stop	T1122GRX	0.3	
SPEAKER [FRONT], R&R	Front side speaker,Both sides,With i-stop	T1122HRX	0.4	
SPEAKER [FRONT], R&R	Center speaker,Without i-stop	T1122JRX	0.2	
SPEAKER [FRONT], R&R	Center speaker,With i-stop	T1122KRX	0.3	
SPEAKER [REAR], R&R	Rear door speaker,One side,Without i-stop	T1123ARX	0.3	◆Door trim assembly, R&R
SPEAKER [REAR], R&R	Rear door speaker,One side,With i-stop	T1123BRX	0.4	◆Door trim assembly, R&R
SPEAKER [REAR], R&R	Rear door speaker,Both sides,Without i-stop	T1123CRX	0.4	◆Door trim assembly, R&R
SPEAKER [REAR], R&R	Rear door speaker,Both sides,With i-stop	T1123DRX	0.5	◆Door trim assembly, R&R
SPEAKER [REAR], R&R	Rear speaker,One side,Without i-stop	T1123ERX	0.5	◆Trunk side trim (S1707), R&R
SPEAKER [REAR], R&R	Rear speaker,One side,With i-stop	T1123FRX	0.6	◆Trunk side trim (S1707), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
SPEAKER [REAR], R&R	Rear speaker,Both sides	T1123GRX	0.7	◆Trunk side trim (S1707), R&R
SPEAKER [REAR], R&R	Bass box,Without i-stop	T1123HRX	0.2	
SPEAKER [REAR], R&R	Bass box,With i-stop	T1123JRX	0.3	
SPEAKER [TWEETER], R&R	One side,Without i-stop	T1124ARX	0.2	
SPEAKER [TWEETER], R&R	One side,With i-stop	T1124BRX	0.3	
SPEAKER [TWEETER], R&R	Both sides,Without i-stop	T1124CRX	0.2	
SPEAKER [TWEETER], R&R	Both sides,With i-stop	T1124DRX	0.3	
INFORMATION DISPLAY, R&R	Indicator unit	T1125XRX	0.6	
AUXILIARY JACK, R&R		T1128ARX	0.2	