

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
M01 DRIVE SHAFT				
FRONT DRIVE SHAFT, R&R	2WD,One side	M0101ARX	1.0	
FRONT DRIVE SHAFT, R&R	2WD,Both sides	M0101BRX	1.4	
FRONT DRIVE SHAFT, R&R	4WD,Right side	M0101CRX	0.9	
FRONT DRIVE SHAFT, R&R	4WD,Left side	M0101DRX	1.0	
FRONT DRIVE SHAFT, R&R	4WD,Both sides	M0101ERX	1.6	
REAR DRIVE SHAFT, R&R	Right side,Without i-stop	M0102ARX	1.1	
REAR DRIVE SHAFT, R&R	Right side,With i-stop	M0102BRX	1.2	
REAR DRIVE SHAFT, R&R	Left side,Without i-stop,Without auto leveling sensor	M0102FRX	1.1	
REAR DRIVE SHAFT, R&R	[Left side,Without i-stop,With auto leveling sensor]/[Left side,With i-stop]	M0102CRX	1.2	
REAR DRIVE SHAFT, R&R	[Both sides,Without i-stop]/[Both sides,With i-stop,Without auto leveling sensor]	M0102DRX	2.0	
REAR DRIVE SHAFT, R&R	Both sides,With i-stop,With auto leveling sensor	M0102ERX	2.1	
OUTER JOINT SET [FRONT], R&R	2WD,Right side	M0103ARX	1.4	◆Front drive shaft (M0101), R&R
OUTER JOINT SET [FRONT], R&R	2WD,Left side	M0103BRX	1.5	◆Front drive shaft (M0101), R&R
OUTER JOINT SET [FRONT], R&R	2WD,Both sides	M0103CRX	2.2	◆Front drive shaft (M0101), R&R
OUTER JOINT SET [FRONT], R&R	4WD,Right side	M0103DRX	1.3	◆Front drive shaft (M0101), R&R
OUTER JOINT SET [FRONT], R&R	4WD,Left side	M0103ERX	1.5	◆Front drive shaft (M0101), R&R
OUTER JOINT SET [FRONT], R&R	4WD,Both sides	M0103FRX	2.3	◆Front drive shaft (M0101), R&R
OUTER JOINT SET [REAR], R&R	Right side,Without i-stop	M0104ARX	1.8	◆Rear drive shaft (M0102), R&R
OUTER JOINT SET [REAR], R&R	Right side,With i-stop	M0104BRX	1.9	◆Rear drive shaft (M0102), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
OUTER JOINT SET [REAR], R&R	Left side, Without i-stop, Without auto leveling sensor	M0104FRX	1.8	◆Rear drive shaft (M0102), R&R
OUTER JOINT SET [REAR], R&R	[Left side, Without i-stop, With auto leveling sensor]/[Left side, With i-stop]	M0104CRX	1.9	◆Rear drive shaft (M0102), R&R
OUTER JOINT SET [REAR], R&R	Both sides, Without i-stop	M0104DRX	3.1	◆Rear drive shaft (M0102), R&R
OUTER JOINT SET [REAR], R&R	Both sides, With i-stop	M0104ERX	3.2	◆Rear drive shaft (M0102), R&R
INNER JOINT SET [FRONT], R&R	2WD, One side	M0105ARX	1.3	◆Front drive shaft (M0101), R&R
INNER JOINT SET [FRONT], R&R	2WD, Both sides	M0105BRX	2.0	◆Front drive shaft (M0101), R&R
INNER JOINT SET [FRONT], R&R	4WD, Right side	M0105CRX	1.2	◆Front drive shaft (M0101), R&R
INNER JOINT SET [FRONT], R&R	4WD, Left side	M0105DRX	1.3	◆Front drive shaft (M0101), R&R
INNER JOINT SET [FRONT], R&R	4WD, Both sides	M0105ERX	2.2	◆Front drive shaft (M0101), R&R
INNER JOINT SET [REAR], R&R	Right side, Without i-stop	M0106ARX	1.4	◆Rear drive shaft (M0102), R&R
INNER JOINT SET [REAR], R&R	Right side, With i-stop	M0106BRX	1.5	◆Rear drive shaft (M0102), R&R
INNER JOINT SET [REAR], R&R	Left side, Without i-stop, Without auto leveling sensor	M0106FRX	1.4	◆Rear drive shaft (M0102), R&R
INNER JOINT SET [REAR], R&R	[Left side, Without i-stop, With auto leveling sensor]/[Left side, With i-stop]	M0106CRX	1.5	◆Rear drive shaft (M0102), R&R
INNER JOINT SET [REAR], R&R	Both sides, Without i-stop	M0106DRX	2.5	◆Rear drive shaft (M0102), R&R
INNER JOINT SET [REAR], R&R	Both sides, With i-stop	M0106ERX	2.6	◆Rear drive shaft (M0102), R&R
BALL BEARING, DUST SEAL AND/OR BRACKET, R&R	2WD	M0107ARX	1.4	◆Front drive shaft (M0101), R&R [Right side]
BALL BEARING, DUST SEAL AND/OR BRACKET, R&R	4WD	M0107BRX	1.3	◆Front drive shaft (M0101), R&R [Right side]

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
DRIVE BOOT SET [FRONT], R&R	Standard type,2WD,One side	M0108ARX	1.4	◆Front drive shaft (M0101), R&R
DRIVE BOOT SET [FRONT], R&R	Standard type,2WD,Both sides	M0108BRX	2.1	◆Front drive shaft (M0101), R&R
DRIVE BOOT SET [FRONT], R&R	Standard type,4WD,Right side	M0108CRX	1.3	◆Front drive shaft (M0101), R&R
DRIVE BOOT SET [FRONT], R&R	Standard type,4WD,Left side	M0108DRX	1.4	◆Front drive shaft (M0101), R&R
DRIVE BOOT SET [FRONT], R&R	Standard type,4WD,Both sides	M0108ERX	2.3	◆Front drive shaft (M0101), R&R
DRIVE BOOT SET [FRONT], R&R	Split type,One side	M0108FRX	0.6	
DRIVE BOOT SET [FRONT], R&R	Split type,Both sides	M0108GRX	0.8	
DRIVE BOOT SET [REAR], R&R	Right side,Without i-stop	M0109ARX	1.8	◆Rear drive shaft (M0102), R&R
DRIVE BOOT SET [REAR], R&R	Right side,With i-stop	M0109BRX	1.9	◆Rear drive shaft (M0102), R&R
DRIVE BOOT SET [REAR], R&R	Left side,Without i-stop,Without auto leveling sensor	M0109FRX	1.8	◆Rear drive shaft (M0102), R&R
DRIVE BOOT SET [REAR], R&R	[Left side,Without i-stop,With auto leveling sensor]/[Left side,With i-stop]	M0109CRX	1.9	◆Rear drive shaft (M0102), R&R
DRIVE BOOT SET [REAR], R&R	Both sides,Without i-stop	M0109DRX	3.1	◆Rear drive shaft (M0102), R&R
DRIVE BOOT SET [REAR], R&R	Both sides,With i-stop	M0109ERX	3.2	◆Rear drive shaft (M0102), R&R
CLIP, R&R	Front	M0111ARX	0.9	◆Front drive shaft (M0101), D&C
CLIP, R&R	Rear,Right side,Without i-stop	M0111BRX	1.1	◆Rear drive shaft (M0102), R&R
CLIP, R&R	Rear,Right side,With i-stop	M0111CRX	1.2	◆Rear drive shaft (M0102), R&R
CLIP, R&R	Rear,Left side,Without i-stop,Without auto leveling sensor	M0111GRX	1.1	◆Rear drive shaft (M0102), R&R
CLIP, R&R	[Rear,Left side,Without i-stop,With auto leveling sensor]/[Rear,Left side,With i-stop]	M0111DRX	1.2	◆Rear drive shaft (M0102), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
CLIP, R&R	[Rear,Both sides,Without i-stop]/[Rear,Both sides,With i-stop,Without auto leveling sensor]	M0111ERX	2.0	◆Rear drive shaft (M0102), R&R
CLIP, R&R	Rear,Both sides,With i-stop,With auto leveling sensor	M0111FRX	2.1	◆Rear drive shaft (M0102), R&R
M02 FRONT AXLE				
STEERING KNUCKLE, R&R	One side	M0201ARX	0.7	◆Front wheel hub (M0203), R&R
STEERING KNUCKLE, R&R	Both sides	M0201BRX	1.2	◆Front wheel hub (M0203), R&R
FRONT WHEEL HUB, R&R	One side	M0203ARX	0.7	◆Steering knuckle (M0201), R&R
FRONT WHEEL HUB, R&R	Both sides	M0203BRX	1.2	◆Steering knuckle (M0201), R&R
FRONT WHEEL HUB BOLTS, R&R	One side	M0204ARX	0.5	◆Disc plate (P0102), R&R
FRONT WHEEL HUB BOLTS, R&R	Both sides	M0204BRX	0.9	◆Disc plate (P0102), R&R
LOCK NUT OR LOCK BOLT, R&R	One side	M0206ARX	0.3	
LOCK NUT OR LOCK BOLT, R&R	Both sides	M0206BRX	0.3	
M03 REAR AXLE				
REAR AXLE LOCK NUT, R&R	One side	M0302ARX	0.3	
REAR AXLE LOCK NUT, R&R	Both sides	M0302BRX	0.3	
REAR WHEEL HUB BOLTS, R&R	One side,Without i-stop	M0303ARX	0.6	◆Disc plate (P0208), R&R
REAR WHEEL HUB BOLTS, R&R	One side,With i-stop	M0303BRX	0.7	◆Disc plate (P0208), R&R
REAR WHEEL HUB BOLTS, R&R	Both sides,Without i-stop	M0303CRX	1.0	◆Disc plate (P0208), R&R
REAR WHEEL HUB BOLTS, R&R	Both sides,With i-stop	M0303DRX	1.1	◆Disc plate (P0208), R&R
COLLAR AND/OR BEARING HOUSING, R&R	2WD,Assembly,Right side	M0310ARX	0.9	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	[2WD,Assembly,Left side,Without i-stop]/[2WD,Assembly,Left side,With i-stop,Without auto leveling sensor]	M0310BRX	0.9	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	2WD,Assembly,Left side,With i-stop,With auto leveling sensor	M0310CRX	1.0	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	2WD,Assembly,Both sides,Without i-stop	M0310DRX	1.5	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	2WD,Assembly,Both sides,With i-stop	M0310ERX	1.6	◆Coil spring (R0501), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
COLLAR AND/OR BEARING HOUSING, R&R	2WD,Bushing,Right side,Without i-stop	M0310FRX	1.0	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	2WD,Bushing,Right side,With i-stop	M0310GRX	1.1	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	2WD,Bushing,Left side,Without i-stop,Without auto leveling sensor	M0310WRX	1.0	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	[2WD,Bushing,Left side,Without i-stop,With auto leveling sensor]/[2WD,Bushing,Left side,With i-stop]	M0310HRX	1.1	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	2WD,Bushing,Both sides,Without i-stop,Without auto leveling sensor	M0310YRX	1.8	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	[2WD,Bushing,Both sides,Without i-stop,With auto leveling sensor]/[2WD,Bushing,Both sides,With i-stop]	M0310JRX	1.9	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	4WD,Assembly,Right side,Without i-stop	M0310KRX	1.0	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	4WD,Assembly,Right side,With i-stop	M0310LRX	1.1	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	4WD,Assembly,Left side,Without i-stop	M0310MRX	1.0	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	4WD,Assembly,Left side,With i-stop	M0310NRX	1.1	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	[4WD,Assembly,Both sides,Without i-stop]/[4WD,Assembly,Both sides,With i-stop,Without auto leveling sensor]	M0310PRX	1.8	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	4WD,Assembly,Both sides,With i-stop,With auto leveling sensor	M0310QRX	1.9	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	4WD,Bushing,Right side	M0310RRX	1.2	◆Coil spring (R0501), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
COLLAR AND/OR BEARING HOUSING, R&R	[4WD,Bushing,Left side,Without i-stop]/[4WD,Bushing,Left side,With i-stop,Without auto leveling sensor]	M0310SRX	1.2	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	4WD,Bushing,Left side,With i-stop,With auto leveling sensor	M0310TRX	1.3	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	4WD,Bushing,Both sides,Without i-stop	M0310URX	2.1	◆Coil spring (R0501), R&R
COLLAR AND/OR BEARING HOUSING, R&R	4WD,Bushing,Both sides,With i-stop	M0310VRX	2.2	◆Coil spring (R0501), R&R
REAR WHEEL HUB, R&R	2WD,One side	M0314ARX	0.6	
REAR WHEEL HUB, R&R	2WD,Both sides,Without i-stop	M0314BRX	0.9	
REAR WHEEL HUB, R&R	2WD,Both sides,With i-stop	M0314CRX	1.0	
REAR WHEEL HUB, R&R	4WD,One side,Without i-stop	M0314DRX	0.6	
REAR WHEEL HUB, R&R	4WD,One side,With i-stop	M0314ERX	0.7	
REAR WHEEL HUB, R&R	4WD,Both sides,Without i-stop	M0314FRX	1.0	
REAR WHEEL HUB, R&R	4WD,Both sides,With i-stop	M0314GRX	1.1	
M04 DIFFERENTIAL (Except FWD)				
DIFFERENTIAL ASSEMBLY, OH	Without i-stop,Without auto leveling sensor	M0401AHX	5.5	◆Differential assembly (M0401), R&R◆Pre-load, Adjust
DIFFERENTIAL ASSEMBLY, OH	[Without i-stop,With auto leveling sensor]/[With i-stop]	M0401XHX	5.6	◆Differential assembly (M0401), R&R◆Pre-load, Adjust
DIFFERENTIAL ASSEMBLY, R&R	[Rear differential,Without i-stop]/[Rear differential,With i-stop,Without auto leveling sensor]	M0401ARX	3.6	◆Propeller shaft assembly (L0101), R&R◆Rear drive shaft (M0102), R&R
DIFFERENTIAL ASSEMBLY, R&R	Rear differential,With i-stop,With auto leveling sensor	M0401BRX	3.7	◆Propeller shaft assembly (L0101), R&R◆Rear drive shaft (M0102), R&R
DIFFERENTIAL ASSEMBLY, R&R	Coupling component,Without i-stop	M0401CRX	2.2	◆Propeller shaft assembly (L0101), R&R
DIFFERENTIAL ASSEMBLY, R&R	Coupling component,With i-stop	M0401DRX	2.3	◆Propeller shaft assembly (L0101), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
OIL SEAL, R&R	Without i-stop	M0403ARX	2.2	◆Propeller shaft assembly (L0101), R&R◆Differential assembly (M0401), R&R [Coupling component]
OIL SEAL, R&R	With i-stop	M0403BRX	2.3	◆Propeller shaft assembly (L0101), R&R◆Differential assembly (M0401), R&R [Coupling component]
FINAL GEAR SET, R&R	Without i-stop,Without auto leveling sensor	M0404ARX	5.3	◆Differential assembly (M0401), R&R◆Pre-load, Adjust
FINAL GEAR SET, R&R	[Without i-stop,With auto leveling sensor]/[With i-stop]	M0404XRX	5.4	◆Differential assembly (M0401), R&R◆Pre-load, Adjust
BEARING [DRIVE PINION] [ALL], R&R	Without i-stop	M0405ARX	5.2	◆Differential assembly (M0401), R&R◆Pre-load, Adjust
BEARING [DRIVE PINION] [ALL], R&R	With i-stop	M0405BRX	5.3	◆Differential assembly (M0401), R&R◆Pre-load, Adjust
DIFFERENTIAL CARRIER, R&R	Without i-stop	M0406ARX	5.2	◆Differential assembly (M0401), R&R◆Pre-load, Adjust
DIFFERENTIAL CARRIER, R&R	With i-stop	M0406BRX	5.3	◆Differential assembly (M0401), R&R◆Pre-load, Adjust
OIL SEAL [OUTPUT SHAFT AND SIDE HOUSING], R&R	Right side	M0407ARX	1.2	◆Rear drive shaft (M0102), R&R
OIL SEAL [OUTPUT SHAFT AND SIDE HOUSING], R&R	[Left side,Without i-stop]/[Left side,With i-stop,Without auto leveling sensor]	M0407BRX	1.2	◆Rear drive shaft (M0102), R&R
OIL SEAL [OUTPUT SHAFT AND SIDE HOUSING], R&R	Left side,With i-stop,With auto leveling sensor	M0407CRX	1.3	◆Rear drive shaft (M0102), R&R
OIL SEAL [OUTPUT SHAFT AND SIDE HOUSING], R&R	Both sides,Without i-stop,Without auto leveling sensor	M0407ERX	2.0	◆Rear drive shaft (M0102), R&R
OIL SEAL [OUTPUT SHAFT AND SIDE HOUSING], R&R	[Both sides,Without i-stop,With auto leveling sensor]/[Both sides,With i-stop]	M0407DRX	2.1	◆Rear drive shaft (M0102), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
DIFFERENTIAL PINION GEAR, SIDE GEAR AND/OR PINION SHAFT, R&R	Without i-stop	M0408ARX	5.4	◆Differential assembly (M0401), R&R◆ Pre-load, Adjust
DIFFERENTIAL PINION GEAR, SIDE GEAR AND/OR PINION SHAFT, R&R	With i-stop	M0408BRX	5.5	◆Differential assembly (M0401), R&R◆ Pre-load, Adjust
BEARING [GEAR CASE] [ALL], R&R	[Without i-stop]/[With i-stop, Without auto leveling sensor]	M0409ARX	5.4	◆Differential assembly (M0401), R&R◆ Pre-load, Adjust
BEARING [GEAR CASE] [ALL], R&R	With i-stop, With auto leveling sensor	M0409BRX	5.5	◆Differential assembly (M0401), R&R◆ Pre-load, Adjust
DIFFERENTIAL MOUNT RUBBER, R&R	One side, Without i-stop	M0412ARX	3.2	◆Fuel tank assembly, R&R
DIFFERENTIAL MOUNT RUBBER, R&R	One side, With i-stop	M0412BRX	3.3	◆Fuel tank assembly, R&R
DIFFERENTIAL MOUNT RUBBER, R&R	Both sides	M0412CRX	3.3	◆Fuel tank assembly, R&R
AWD [4WD] CONTROL MODULE, R&R	Without i-stop	M0422ARX	0.2	
AWD [4WD] CONTROL MODULE, R&R	With i-stop	M0422BRX	0.3	