

## ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
<b>G01 ENGINE ELECTRICAL</b>				
IGNITION COIL [ALL], R&R	Without i-stop	G0101ARX	0.3	
IGNITION COIL [ALL], R&R	With i-stop	G0101BRX	0.4	
SPARK PLUG [ALL], R&R		G0102XRX	0.4	◆Ignition coil (G0101), R&R
<b>G03 GENERATOR</b>				
GENERATOR, OH	Without i-ELOOP system	G0301AHX	1.8	◆Generator (G0301), R&R
GENERATOR, OH	With i-ELOOP system	G0301BHX	1.9	◆Generator (G0301), R&R
GENERATOR, R&R	<b><i>Without i-stop</i></b>	G0301ARX	0.8	
<b><i>GENERATOR, R&amp;R</i></b>	<b><i>With i-stop, Without i-ELOOP system</i></b>	<b><i>G0301CRX</i></b>	<b><i>0.9</i></b>	
GENERATOR, R&R	<b><i>With i-stop, With i-ELOOP system</i></b>	G0301BRX	1.0	
GENERATOR DRIVE BELT, R&R		G0303XRX	0.3	
VOLTAGE REGULATOR, R&R	Without i-ELOOP system	G0304ARX	1.7	◆Generator (G0301), R&R
VOLTAGE REGULATOR, R&R	With i-ELOOP system	G0304BRX	1.8	◆Generator (G0301), R&R
GENERATOR PULLEY, R&R	<b><i>Without i-stop</i></b>	G0305ARX	1.0	◆Generator (G0301), R&R
<b><i>GENERATOR PULLEY, R&amp;R</i></b>	<b><i>With i-stop, Without i-ELOOP system</i></b>	<b><i>G0305CRX</i></b>	<b><i>1.1</i></b>	<b><i>◆Generator (G0301), R&amp;R</i></b>
GENERATOR PULLEY, R&R	<b><i>With i-stop, With i-ELOOP system</i></b>	G0305BRX	1.2	◆Generator (G0301), R&R
RECTIFIER, R&R	Without i-ELOOP system	G0307ARX	1.7	◆Generator (G0301), R&R
RECTIFIER, R&R	With i-ELOOP system	G0307BRX	1.8	◆Generator (G0301), R&R
GENERATOR DRIVE BELT TENSIONER, R&R		G0308XRX	0.5	◆Generator drive belt (G0303), R&R
<b>G04 STARTER</b>				
STARTER, OH	Without i-stop	G0401XHX	1.3	◆Starter (G0401), R&R
STARTER, R&R	Without i-stop	G0401ARX	0.5	
STARTER, R&R	With i-stop	G0401BRX	0.6	
MAGNET SWITCH, R&R	Without i-stop	G0402XRX	0.7	◆Starter (G0401), R&R
OVERRUNNING CLUTCH, R&R	Without i-stop	G0403XRX	1.2	◆Starter (G0401), R&R
<b>G05 BATTERY</b>				
BATTERY INSPECTION, CHARGE AND TEST		G0501XCX	0.5	◆Battery (G0501), R&R◆Battery load test◆Charging and capacity test◆ Charging system test◆Dark current test

## ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
BATTERY, R&R	<b><i>Without i-stop</i></b>	G0501ARX	0.2	
BATTERY, R&R	<b><i>With i-stop</i></b>	G0501BRX	0.3	
BATTERY BOX COVER, R&R	<b><i>Without i-stop</i></b>	G0502ARX	0.2	
BATTERY BOX COVER, R&R	<b><i>With i-stop</i></b>	G0502BRX	0.3	
BATTERY CARRIER, R&R	Without i-ELOOP system	G0503ARX	0.3	
BATTERY CARRIER, R&R	With i-ELOOP system	G0503BRX	0.4	
BATTERY CLAMP AND/OR CLAMP BOLT [ALL], R&R		G0504XRX	0.2	
DC-DC CONVERTER, R&R		G0506XRX	0.4	
CAPACITOR [i-ELOOP], R&R		G0507XRX	0.6	