

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
T00 DIAGNOSIS									
DTC READING BY DIAGNOSTIC TOOL The labor operation for DIAGNOSTIC TOOLS usage (T9999*~*~*) can be applied only when the diagnosis requires the NGS/WDS/PDS/IDS tester to read the Diagnostic Trouble Code for Auto cruise control/Theft deterrent control system components.							T9999XDX	0.2	
T01 POWER CIRCUIT									
FUSE, R&R							T0102ARX	0.2	
MAIN FUSE, R&R							T0103ARX	0.2	
FUSE BLOCK OR PASSENGER JUNCTION BOX, R&R	Fuse block						T0104ARX	0.4	
FUSE BLOCK COVER, R&R							T0105ARX	0.2	
MAIN FUSE BLOCK, R&R							T0106ARX	2.5	
MAIN FUSE BLOCK COVER, R&R							T0107ARX	0.2	
BODY CONTROL MODULE [BCM], R&R	With power seat	With emergency call unit					T0108ARX	0.4	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	With power seat	Without emergency call unit					T0108BRX	0.3	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	Without power seat						T0108CRX	0.3	◆Body control module [BCM] configuration
ELECTRICAL SUPPLY UNIT [ESU], R&R	Door electrical supply unit	Both sides					T0115ARX	0.6	
ELECTRICAL SUPPLY UNIT [ESU], R&R	Door electrical supply unit	One side					T0115BRX	0.4	
ELECTRICAL SUPPLY UNIT [ESU], R&R	Electrical supply unit						T0115CRX	0.5	
ELECTRICAL SUPPLY UNIT [ESU], R&R	Charge port-electrical supply unit						T0115DRX	0.4	
BACKUP POWER SUPPLY, R&R							T0116ARX	0.3	
AC POWER OUTLET, R&R	AC power outlet						T0117ARX	0.2	
AC POWER OUTLET, R&R	Inverter						T0117BRX	0.9	
T02 SWITCHES									
HAZARD SWITCH, R&R							T0204ARX	0.3	
CIGAR LIGHTER, R&R	Front accessory socket						T0206ARX	0.8	
POWER WINDOW SWITCH, R&R	Both sides						T0207ARX	0.3	
POWER WINDOW SWITCH, R&R	One side						T0207BRX	0.2	
REMOTE CONTROL MIRROR SWITCH, R&R							T0209ARX	0.2	
CLOCK SPRING, R&R							T0220ARX	0.3	◆Steering wheel assembly, R&R
PUSH BUTTON START SWITCH, R&R							T0222ARX	0.3	
T03 EXTERIOR LIGHTING SYSTEM									
HEADLIGHT SET, R&R	Both sides	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T0301ARX	1.1	◆Front bumper assembly, R&R◆Headlight (A0115), Aim
HEADLIGHT SET, R&R	Both sides	With 360°view monitor system	360°view monitor system screen display verification only	With front cross traffic alert (FCTA) system			T0301BRX	1.1	◆Front bumper assembly, R&R◆Headlight (A0115), Aim

ILLUSTRATION

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
HEADLIGHT SET, R&R	Both sides	With 360°view monitor system	360°view monitor system screen display verification only	Without front cross traffic alert (FCTA) system			T0301CRX	1.0	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT SET, R&R	Both sides	Without 360°view monitor system					T0301DRX	1.0	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT SET, R&R	One side	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming	With front cross traffic alert (FCTA) system			T0301ERX	1.0	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT SET, R&R	One side	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming	Without front cross traffic alert (FCTA) system			T0301FRX	0.9	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT SET, R&R	One side	With 360°view monitor system	360°view monitor system screen display verification only				T0301GRX	0.9	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT SET, R&R	One side	Without 360°view monitor system	With front cross traffic alert (FCTA) system				T0301HRX	0.9	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
HEADLIGHT SET, R&R	One side	Without 360°view monitor system	Without front cross traffic alert (FCTA) system				T0301JRX	0.8	◆Front bumper assembly, R&R◆ Headlight (A0115), Aim
FRONT TURN SIGNAL LIGHT SET, R&R	Both sides	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming	With front cross traffic alert (FCTA) system			T0315ARX	0.9	
FRONT TURN SIGNAL LIGHT SET, R&R	Both sides	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming	Without front cross traffic alert (FCTA) system			T0315BRX	0.8	
FRONT TURN SIGNAL LIGHT SET, R&R	Both sides	With 360°view monitor system	360°view monitor system screen display verification only				T0315CRX	0.8	
FRONT TURN SIGNAL LIGHT SET, R&R	Both sides	Without 360°view monitor system	With front cross traffic alert (FCTA) system				T0315DRX	0.8	
FRONT TURN SIGNAL LIGHT SET, R&R	Both sides	Without 360°view monitor system	Without front cross traffic alert (FCTA) system				T0315ERX	0.7	

ILLUSTRATION

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
FRONT TURN SIGNAL LIGHT SET, R&R	One side	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T0315FRX	0.8	
FRONT TURN SIGNAL LIGHT SET, R&R	One side	With 360°view monitor system	360°view monitor system screen display verification only	With front cross traffic alert (FCTA) system			T0315GRX	0.8	
FRONT TURN SIGNAL LIGHT SET, R&R	One side	With 360°view monitor system	360°view monitor system screen display verification only	Without front cross traffic alert (FCTA) system			T0315HRX	0.7	
FRONT TURN SIGNAL LIGHT SET, R&R	One side	Without 360°view monitor system					T0315JRX	0.7	
REAR COMBINATION LIGHT SET, R&R	Both sides						T0318ARX	0.7	
REAR COMBINATION LIGHT SET, R&R	One side						T0318BRX	0.5	
HIGH MOUNT STOP LIGHT SET, R&R							T0323ARX	0.4	
LICENSE LIGHT SET, R&R	Both sides	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T0327ARX	0.7	
LICENSE LIGHT SET, R&R	Both sides	With 360°view monitor system	360°view monitor system screen display verification only				T0327BRX	0.6	
LICENSE LIGHT SET, R&R	Both sides	Without 360°view monitor system					T0327CRX	0.5	
LICENSE LIGHT SET, R&R	One side	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T0327DRX	0.7	
LICENSE LIGHT SET, R&R	One side	With 360°view monitor system	360°view monitor system screen display verification only				T0327ERX	0.6	
LICENSE LIGHT SET, R&R	One side	Without 360°view monitor system					T0327FRX	0.5	
LIGHT SWITCH, R&R							T0333ARX	0.3	
LIFTGATE LIGHT SET, R&R	Both sides	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T0339ARX	0.8	
LIFTGATE LIGHT SET, R&R	Both sides	With 360°view monitor system	360°view monitor system screen display verification only				T0339BRX	0.7	

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
LIFTGATE LIGHT SET, R&R	Both sides	Without 360°view monitor system					T0339CRX	0.6	
LIFTGATE LIGHT SET, R&R	One side	With 360°view monitor system					T0339DRX	0.7	
LIFTGATE LIGHT SET, R&R	One side	Without 360°view monitor system	With advanced keyless entry system				T0339ERX	0.6	
LIFTGATE LIGHT SET, R&R	One side	Without 360°view monitor system	Without advanced keyless entry system				T0339FRX	0.5	
SIDE TURN SIGNAL LIGHT SET, R&R	Both sides	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T0345ARX	0.9	
SIDE TURN SIGNAL LIGHT SET, R&R	Both sides	With 360°view monitor system	360°view monitor system screen display verification only				T0345BRX	0.6	
SIDE TURN SIGNAL LIGHT SET, R&R	Both sides	Without 360°view monitor system					T0345CRX	0.4	
SIDE TURN SIGNAL LIGHT SET, R&R	One side	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T0345DRX	0.6	
SIDE TURN SIGNAL LIGHT SET, R&R	One side	With 360°view monitor system	360°view monitor system screen display verification only				T0345ERX	0.4	
SIDE TURN SIGNAL LIGHT SET, R&R	One side	Without 360°view monitor system					T0345FRX	0.3	
HEADLIGHT AUTO LEVELING CONTROL MODULE, R&R							T0355ARX	0.5	
T04 INTERIOR LIGHTING SYSTEM									
INTERIOR LAMP ASSEMBLY, R&R							T0401ARX	0.8	◆Headliner (S1701), D&C
CARGO ROOM LAMP ASSEMBLY, R&R							T0404ARX	0.2	
OVERHEAD CONSOLE, R&R							T0410ARX	0.2	
OVERHEAD CONSOLE ROOM, LAMP LENS/BULB, R&R							T0411ARX	0.2	
GLOVE BOX LAMP LENS AND/OR BULB, R&R							T0415ARX	0.2	
T05 WARNING SYSTEM									
WASHER LEVEL WARNING SWITCH, R&R	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming					T0506ARX	0.9	◆Front bumper assembly, R&R
WASHER LEVEL WARNING SWITCH, R&R	With 360°view monitor system	360°view monitor system screen display verification only					T0506BRX	0.8	◆Front bumper assembly, R&R

ILLUSTRATION

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
WASHER LEVEL WARNING SWITCH, R&R	Without 360°view monitor system						T0506CRX	0.8	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	360°view monitor control module						T0512ARX	0.9	◆360°view monitor system aiming
PARKING ASSIST SYSTEM, R&R	Front camera	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming	With front cross traffic alert (FCTA) system			T0512BRX	0.9	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Front camera	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming	Without front cross traffic alert (FCTA) system			T0512CRX	0.8	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Front camera	With 360°view monitor system	360°view monitor system screen display verification only				T0512DRX	0.8	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Front camera	Without 360°view monitor system	With front cross traffic alert (FCTA) system				T0512ERX	0.8	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Front camera	Without 360°view monitor system	Without front cross traffic alert (FCTA) system				T0512FRX	0.7	◆Front bumper assembly, R&R
PARKING ASSIST SYSTEM, R&R	Rear mount camera	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T0512GRX	1.0	◆Rear finisher (S0414), R&R
PARKING ASSIST SYSTEM, R&R	Rear mount camera	With 360°view monitor system	360°view monitor system screen display verification only				T0512HRX	0.9	◆Rear finisher (S0414), R&R
PARKING ASSIST SYSTEM, R&R	Rear mount camera	Without 360°view monitor system	Fixed assist lines display type				T0512JRX	0.8	◆Rear finisher (S0414), R&R
PARKING ASSIST SYSTEM, R&R	Rear mount camera	Without 360°view monitor system	Predicted vehicle path assist lines display type				T0512KRX	0.9	◆Rear finisher (S0414), R&R
PARKING ASSIST SYSTEM, R&R	Side camera	Both sides	360°view monitor system screen display verification and 360°view monitor system aiming				T0512LRX	0.8	
PARKING ASSIST SYSTEM, R&R	Side camera	Both sides	360°view monitor system screen display verification only				T0512MRX	0.5	

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
PARKING ASSIST SYSTEM, R&R	Side camera	One side	360°view monitor system screen display verification and 360°view monitor system aiming				T0512NRX	0.6	
PARKING ASSIST SYSTEM, R&R	Side camera	One side	360°view monitor system screen display verification only				T0512PRX	0.4	
PARKING ASSIST SYSTEM, R&R	Switch						T0512QRX	0.4	
BLIND SPOT MONITORING [BSM] / REAR CROSS TRAFFIC ALERT [RCTA], R&R	i-ACTIVSENSE OFF switch						T0513ARX	0.4	
BLIND SPOT MONITORING [BSM] / REAR CROSS TRAFFIC ALERT [RCTA], R&R	Rear side radar sensor	Both sides					T0513BRX	0.7	◆Radar sensor aiming
BLIND SPOT MONITORING [BSM] / REAR CROSS TRAFFIC ALERT [RCTA], R&R	Rear side radar sensor	One side					T0513CRX	0.6	◆Radar sensor aiming
PARKING SENSOR CONTROL MODULE, R&R							T0514ARX	0.4	
PARKING SENSOR BUZZER, R&R	Front						T0516ARX	0.9	◆Lower panel (S0710), R&R
PARKING SENSOR BUZZER, R&R	Rear						T0516BRX	0.3	
ULTRASONIC SENSOR [FRONT], R&R	Four	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming	With front cross traffic alert (FCTA) system			T0517ARX	0.9	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Four	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming	Without front cross traffic alert (FCTA) system			T0517BRX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Four	With 360°view monitor system	360°view monitor system screen display verification only				T0517CRX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Four	Without 360°view monitor system					T0517DRX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Three	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming	With front cross traffic alert (FCTA) system			T0517ERX	0.9	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Three	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming	Without front cross traffic alert (FCTA) system			T0517FRX	0.8	◆Front bumper assembly, R&R

ILLUSTRATION

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
ULTRASONIC SENSOR [FRONT], R&R	Three	With 360°view monitor system	360°view monitor system screen display verification only				T0517GRX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Three	Without 360°view monitor system	With front cross traffic alert (FCTA) system				T0517HRX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Three	Without 360°view monitor system	Without front cross traffic alert (FCTA) system				T0517JRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Two	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T0517KRX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Two	With 360°view monitor system	360°view monitor system screen display verification only	With front cross traffic alert (FCTA) system			T0517LRX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Two	With 360°view monitor system	360°view monitor system screen display verification only	Without front cross traffic alert (FCTA) system			T0517MRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	Two	Without 360°view monitor system					T0517NRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	One	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T0517PRX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	One	With 360°view monitor system	360°view monitor system screen display verification only	With front cross traffic alert (FCTA) system			T0517QRX	0.8	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	One	With 360°view monitor system	360°view monitor system screen display verification only	Without front cross traffic alert (FCTA) system			T0517RRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [FRONT], R&R	One	Without 360°view monitor system					T0517SRX	0.7	◆Front bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	Six						T0518ARX	1.3	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	Five						T0518BRX	1.2	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	Four						T0518CRX	1.2	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	Three						T0518DRX	1.2	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	Two						T0518ERX	1.2	◆Rear bumper assembly, R&R
ULTRASONIC SENSOR [REAR], R&R	One						T0518FRX	1.2	◆Rear bumper assembly, R&R
FORWARD SENSING CAMERA [FSC], R&R							T0520ARX	0.5	◆Forward sensing camera [FSC], Aiming
LANE DEPARTURE WARNING SYSTEM [LDWS] SWITCH, R&R							T0521ARX	0.4	
APPROACHING VEHICLE AUDIBLE SYSTEM [AVAS] DEVICE, R&R							T0522ARX	0.4	

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
TELEMATICS COMMUNICATION UNIT/EMERGENCY CALL UNIT, R&R	Emergency call speaker/microphone						T0524ARX	0.2	
TELEMATICS COMMUNICATION UNIT/EMERGENCY CALL UNIT, R&R	Emergency call unit	LHD					T0524BRX	0.5	
TELEMATICS COMMUNICATION UNIT/EMERGENCY CALL UNIT, R&R	Emergency call unit	RHD					T0524FRX	0.5	
TELEMATICS COMMUNICATION UNIT/EMERGENCY CALL UNIT, R&R	Emergency call unit battery	LHD					T0524CRX	0.5	
TELEMATICS COMMUNICATION UNIT/EMERGENCY CALL UNIT, R&R	Emergency call unit battery	RHD					T0524GRX	0.6	
TELEMATICS COMMUNICATION UNIT/EMERGENCY CALL UNIT, R&R	TEL antenna	No.1					T0524DRX	0.9	
TELEMATICS COMMUNICATION UNIT/EMERGENCY CALL UNIT, R&R	TEL antenna	No.2					T0524ERX	0.9	
DRIVER MONITORING CAMERA UNIT, R&R	LHD						T0525ARX	0.4	
DRIVER MONITORING CAMERA UNIT, R&R	RHD						T0525BRX	0.5	
FRONT CROSS TRAFFIC ALERT [FCTA], R&R	Front side radar sensor	Both sides	With 360°view monitor system				T0526ARX	0.8	◆Front bumper assembly, R&R◆Radar sensor aiming
FRONT CROSS TRAFFIC ALERT [FCTA], R&R	Front side radar sensor	Both sides	Without 360°view monitor system				T0526BRX	0.7	◆Front bumper assembly, R&R◆Radar sensor aiming
FRONT CROSS TRAFFIC ALERT [FCTA], R&R	Front side radar sensor	One side	With 360°view monitor system				T0526CRX	0.8	◆Front bumper assembly, R&R◆Radar sensor aiming
FRONT CROSS TRAFFIC ALERT [FCTA], R&R	Front side radar sensor	One side	Without 360°view monitor system				T0526DRX	0.7	◆Front bumper assembly, R&R◆Radar sensor aiming
T06 INSTRUMENT CLUSTER (METER)									
METER SET HOOD, R&R							T0602ARX	0.2	
METER SET AND/OR CENTRAL PROCESSING UNIT [CPU], R&R							T0603ARX	1.1	◆Meter set hood (T0602), R&R
FRONT LENS [WINDOW PLATE], R&R							T0606ARX	0.9	◆Meter set assembly, R&R
ACTIVE DRIVING DISPLAY, R&R	Display assembly	With AC power outlet					T0626ARX	2.6	
ACTIVE DRIVING DISPLAY, R&R	Display assembly	Without AC power outlet					T0626BRX	2.5	
ACTIVE DRIVING DISPLAY, R&R	Display lens						T0626CRX	2.5	
T08 AUTO CRUISE & RADAR RACONTROL SYSTEM									
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Cruise control switch						T0808ARX	0.3	◆Steering wheel assembly, R&R
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T0808BRX	0.8	◆Front bumper assembly, R&R◆Radar sensor aiming
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit	With 360°view monitor system	360°view monitor system screen display verification only	With front cross traffic alert (FCTA) system			T0808CRX	0.8	◆Front bumper assembly, R&R◆Radar sensor aiming
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit	With 360°view monitor system	360°view monitor system screen display verification only	Without front cross traffic alert (FCTA) system			T0808DRX	0.7	◆Front bumper assembly, R&R◆Radar sensor aiming

ILLUSTRATION

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit	Without 360°view monitor system	With front cross traffic alert (FCTA) system				T0808ERX	0.8	◆Front bumper assembly, R&R◆Radar sensor aiming
MAZDA RADAR CRUISE CONTROL [MRCC] /MAZDA PRECRASH SAFETY SYSTEM RELATED PARTS, R&R	Radar unit	Without 360°view monitor system	Without front cross traffic alert (FCTA) system				T0808FRX	0.7	◆Front bumper assembly, R&R◆Radar sensor aiming
T09 THEFT DETERRENT SYSTEM									
THEFT DETERRENT CONTROL SYSTEM, R&R	Theft-deterrent horn						T0901ARX	1.2	
THEFT DETERRENT CONTROL SYSTEM, R&R	Theft-deterrent siren						T0901BRX	1.3	
THEFT DETERRENT CONTROL SYSTEM, R&R	Intruder sensor						T0901CRX	0.3	
T10 HORN									
HORN RELAY, R&R							T1001ARX	0.2	
HORN, R&R	One	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T1002ARX	0.8	◆Front bumper assembly, R&R
HORN, R&R	One	With 360°view monitor system	360°view monitor system screen display verification only	With front cross traffic alert (FCTA) system			T1002BRX	0.8	◆Front bumper assembly, R&R
HORN, R&R	One	With 360°view monitor system	360°view monitor system screen display verification only	Without front cross traffic alert (FCTA) system			T1002CRX	0.7	◆Front bumper assembly, R&R
HORN, R&R	One	Without 360°view monitor system					T1002DRX	0.7	◆Front bumper assembly, R&R
HORN, R&R	Two	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming				T1002ERX	0.8	◆Front bumper assembly, R&R
HORN, R&R	Two	With 360°view monitor system	360°view monitor system screen display verification only	With front cross traffic alert (FCTA) system			T1002FRX	0.8	◆Front bumper assembly, R&R
HORN, R&R	Two	With 360°view monitor system	360°view monitor system screen display verification only	Without front cross traffic alert (FCTA) system			T1002GRX	0.7	◆Front bumper assembly, R&R
HORN, R&R	Two	Without 360°view monitor system					T1002HRX	0.7	◆Front bumper assembly, R&R
T11 AUDIO SYSTEM									
SPEAKER GRILLE, R&R	Center						T1101ARX	0.2	
SPEAKER GRILLE, R&R	Front door speaker	Both sides					T1101BRX	0.2	
SPEAKER GRILLE, R&R	Front door speaker	One side					T1101CRX	0.2	
TUNER, R&R	Remote tuner (RT)						T1103ARX	0.3	
REAR ANTENNA FEEDER, R&R	Antenna Feeder No.1						T1108ARX	0.9	◆Headliner (S1701), D&C

ILLUSTRATION

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
REAR ANTENNA FEEDER, R&R	Antenna Feeder No.2						T1108BRX	0.2	
CONDENSER, R&R	All						T1111ARX	0.7	◆Headliner (S1701), D&C
CONDENSER, R&R	One						T1111BRX	0.7	◆Headliner (S1701), D&C
AMPLIFIER, R&R							T1115ARX	0.3	
CAR COMMUNICATION SYSTEM, R&R	Center display						T1117ARX	0.2	
CAR COMMUNICATION SYSTEM, R&R	Commander switch						T1117BRX	0.3	
CAR COMMUNICATION SYSTEM, R&R	Connectivity master unit (CMU)						T1117CRX	0.9	
CAR COMMUNICATION SYSTEM, R&R	GPS antenna						T1117DRX	0.9	
SPEAKER [FRONT], R&R	Center speaker						T1122ARX	0.2	
SPEAKER [FRONT], R&R	Cowl side woofer	Both sides	With AC power outlet				T1122BRX	2.6	
SPEAKER [FRONT], R&R	Cowl side woofer	Both sides	Without AC power outlet				T1122CRX	2.6	
SPEAKER [FRONT], R&R	Cowl side woofer	Driver side	LHD				T1122DRX	1.1	
SPEAKER [FRONT], R&R	Cowl side woofer	Driver side	RHD				T1122JRX	2.5	
SPEAKER [FRONT], R&R	Cowl side woofer	Passenger side					T1122ERX	2.6	
SPEAKER [FRONT], R&R	Front door speaker	Both sides					T1122FRX	0.5	◆Door trim assembly, R&R
SPEAKER [FRONT], R&R	Front door speaker	Driver side					T1122GRX	0.4	◆Door trim assembly, R&R
SPEAKER [FRONT], R&R	Front door speaker	Passenger side					T1122HRX	0.3	◆Door trim assembly, R&R
SPEAKER [REAR], R&R	Bass box						T1123ARX	0.2	
SPEAKER [REAR], R&R	Rear door speaker	Both sides					T1123BRX	0.4	
SPEAKER [REAR], R&R	Rear door speaker	One side					T1123CRX	0.3	
SPEAKER [REAR], R&R	Rear speaker	Both sides					T1123DRX	0.3	
SPEAKER [REAR], R&R	Rear speaker	One side					T1123ERX	0.2	
SPEAKER [TWEETER], R&R	Both sides						T1124ARX	0.2	
SPEAKER [TWEETER], R&R	One side						T1124BRX	0.2	
INFORMATION DISPLAY, R&R	Indicator unit						T1125ARX	0.2	
AUXILIARY JACK, R&R							T1128ARX	0.2	