

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
<b>F00 DIAGNOSIS</b>									
EGI SYSTEM, DRIVE MODE							F0009XDX	0.5	
DTC READING BY DIAGNOSTIC TOOL							F9999XDX	0.2	
The labor operation for DIAGNOSTIC TOOLS usage (F9999*-*~*) can be applied only when the diagnosis requires the NGS/WDS/PDS/IDS tester to read the Diagnostic Trouble Code for fuel and emission control system components.									
<b>F01 INTAKE AIR SYSTEM</b>									
INTAKE MANIFOLD, R&R							F0101ARX	0.9	◆ Intake manifold gasket (F0102), R&R ◆ Throttle body gasket (F0108), R&R
INTAKE MANIFOLD GASKET, R&R							F0102ARX	0.8	
AIR CLEANER ASSEMBLY, R&R							F0105ARX	0.4	
AIR CLEANER ELEMENT, R&R							F0106ARX	0.2	
THROTTLE BODY, R&R							F0107ARX	0.6	◆ Throttle body gasket (F0108), R&R
THROTTLE BODY GASKET, R&R							F0108ARX	0.6	
INTAKE AIR DUCT, R&R							F0117ARX	0.2	
FRESH AIR DUCT, R&R							F0131ARX	0.3	
RESONANCE CHAMBER AND/OR AIR HOSE, R&R							F0132ARX	0.3	
<b>F02 EXHAUST SYSTEM</b>									
EXHAUST MANIFOLD GASKET, R&R							F0202ARX	1.5	
FRONT EXHAUST PIPE GASKET [ALL], R&R							F0203ARX	1.0	
MAIN SILENCER, R&R							F0210ARX	0.4	
EXHAUST MANIFOLD HEAT INSULATOR, R&R							F0213ARX	0.8	
HANGER, R&R	All						F0214ARX	0.4	
HANGER, R&R	One						F0214BRX	0.2	
INSULATOR [UPPER SIDE], R&R	All	2WD					F0218ARX	1.5	◆ Oxidation/three way/warm up three way catalytic converter (F0702), R&R [Three way catalytic converter]
INSULATOR [UPPER SIDE], R&R	All	4WD					F0218BRX	1.9	◆ Oxidation/three way/warm up three way catalytic converter (F0702), R&R [Three way catalytic converter]
MAIN SILENCER GASKET OR TAIL PIPE GASKET, R&R							F0220ARX	0.4	
MAIN SILENCER INSULATOR OR TAIL PIPE INSULATOR, R&R							F0224ARX	0.5	
<b>F03 FUEL SYSTEM</b>									
FUEL PUMP AND/OR GAUGE GASKET, R&R	Fuel pump (Fuel tank side)	2WD					F0301ARX	0.8	
FUEL PUMP AND/OR GAUGE GASKET, R&R	Fuel pump (Fuel tank side)	4WD					F0301BRX	0.9	
FUEL PUMP AND/OR GAUGE GASKET, R&R	High pressure fuel pump						F0301CRX	1.0	
FUEL FILTER, R&R							F0302ARX	0.9	
FUEL DISTRIBUTOR [ALL], R&R							F0303ARX	1.4	◆ Intake manifold gasket (F0102), R&R

## ILLUSTRATION

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
FUEL INJECTOR, INSULATOR, GROMMET AND/OR "O" RING [ALL], R&R							F0304ARX	1.4	◆Intake manifold gasket (F0102), R&R
PRESSURE REGULATOR, "O" RING AND/OR GASKET, R&R	2WD						F0306ARX	0.8	◆Fuel pump and/or gauge gasket (F0301), R&R
PRESSURE REGULATOR, "O" RING AND/OR GASKET, R&R	4WD						F0306BRX	0.9	◆Fuel pump and/or gauge gasket (F0301), R&R
FUEL MAIN HOSE, R&R							F0312ARX	0.8	
FUEL PUMP CONTROL UNIT, R&R							F0314ARX	0.4	
FUEL PUMP RELAY, R&R							F0315ARX	0.2	
F05 FUEL TANK & PIPINGS									
FUEL TANK, R&R	2WD						F0501ARX	2.5	◆Fuel pump assembly , R&R
FUEL TANK, R&R	4WD						F0501BRX	3.0	◆Fuel pump assembly , R&R◆Propeller shaft assembly (L0101), R&R
FILLER CAP, R&R							F0502ARX	0.2	
FILLER PIPE ASSEMBLY, R&R							F0503ARX	1.0	
FILLER PIPE DUST COVER, R&R	Fuel filler lid box						F0504ARX	1.3	
JOINT HOSE [FILLER PIPE TO JOINT PIPE OR FUEL TANK], R&R							F0505ARX	1.1	
FUEL FILLER LID, R&R							F0508ARX	0.2	
FUEL FILLER LID OPENER, R&R	Fuel filler lid lock actuator						F0509ARX	1.4	
FUEL FILLER LID OPENER CABLE, R&R							F0511ARX	1.4	
F06 EMISSION 1/2									
CHARCOAL CANISTER, R&R							F0601ARX	0.6	
POSITIVE CRANKCASE VENTILATION [PCV] VALVE, R&R							F0609ARX	0.9	◆Intake manifold gasket (F0102), R&R
PURGE SOLENOID VALVE, R&R							F0621ARX	0.5	
F07 EMISSION 2/2									
OXIDATION/THREE WAY/WARM UP THREE WAY CATALYTIC CONVERTER, R&R	Three way catalytic converter						F0702ARX	1.1	
OXIDATION/THREE WAY/WARM UP THREE WAY CATALYTIC CONVERTER, R&R	Warm up three way catalytic converter						F0702BRX	3.2	◆Front crossmember assembly, R&R
VENTILATION HOSE [TO CHARCOAL CANISTER], R&R	All						F0707ARX	0.8	
VENTILATION HOSE [TO CHARCOAL CANISTER], R&R	Charcoal canister - body pipe						F0707BRX	0.6	
VENTILATION HOSE [TO CHARCOAL CANISTER], R&R	Charcoal canister - plug (atmosphere)						F0707CRX	0.7	
VENTILATION HOSE [TO CHARCOAL CANISTER], R&R	Fuel tank - Charcoal canister						F0707DRX	0.6	
VENTILATION HOSE [PCV], R&R							F0708ARX	0.8	◆Intake manifold gasket (F0102), R&R

## ILLUSTRATION

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
F08 EMISSION CONTROLS									
VOLUME/MASS AIR FLOW SENSOR, R&R							F0801ARX	0.5	◆ Idle speed, Check (A0106)
BOOST SENSOR, R&R							F0805ARX	0.3	
CRANKSHAFT POSITION SENSOR, R&R							F0807ARX	0.7	◆ Ignition timing, Check (A0108)
MAIN RELAY, R&R							F0809ARX	0.2	
ENGINE COOLANT TEMPERATURE SENSOR, R&R	Engine coolant temperature (ECT) sensor No.1						F0810ARX	0.8	
ENGINE COOLANT TEMPERATURE SENSOR, R&R	Engine coolant temperature (ECT) sensor No.2						F0810BRX	1.3	
A/F SENSOR/OXYGEN SENSOR, R&R	A/F sensor						F0811ARX	0.4	
A/F SENSOR/OXYGEN SENSOR, R&R	All						F0811BRX	0.7	
A/F SENSOR/OXYGEN SENSOR, R&R	Oxygen sensor						F0811CRX	0.6	
POWERTRAIN CONTROL MODULE [PCM], R&R							F0812ARX	0.6	
KNOCK SENSOR, R&R							F0815ARX	0.8	◆ Intake manifold gasket (F0102), R&R
CAMSHAFT POSITION SENSOR, R&R	All						F0822ARX	0.9	◆ Intake manifold gasket (F0102), R&R
CAMSHAFT POSITION SENSOR, R&R	Exhaust camshaft side						F0822BRX	0.3	
CAMSHAFT POSITION SENSOR, R&R	Intake camshaft side						F0822CRX	0.8	◆ Intake manifold gasket (F0102), R&R
ACCELERATOR PEDAL OR PAD, R&R							F0823ARX	0.4	