

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
Z01 WIRE HARNESS									
FRONT HARNESS, R&R	With 360°view monitor system	360°view monitor system screen display verification and 360°view monitor system aiming					Z0101ARX	5.7	
FRONT HARNESS, R&R	With 360°view monitor system	360°view monitor system screen display verification only					Z0101BRX	5.6	
FRONT HARNESS, R&R	Without 360°view monitor system						Z0101CRX	5.6	
INSTRUMENT PANEL HARNESS, R&R	With Bose						Z0102ARX	3.1	◆Instrument panel assembly, R&R
INSTRUMENT PANEL HARNESS, R&R	Without Bose						Z0102BRX	3.0	◆Instrument panel assembly, R&R
REAR HARNESS, R&R	Dashboard to audio amp						Z0104ARX	5.6	◆Instrument panel assembly, R&R
REAR HARNESS, R&R	Dashboard to electrical supply unit (ESU)						Z0104BRX	4.9	◆Rear bumper assembly, R&R
REAR HARNESS, R&R	Dashboard to front seat						Z0104CRX	1.7	
REAR HARNESS NO.2, R&R							Z0105ARX	0.5	◆Liftgate trim (S1218), R&R
ENGINE HARNESS, R&R							Z0106ARX	0.7	
INTERIOR LAMP HARNESS, R&R							Z0107ARX	1.0	◆Headliner (S1701), R&R
FRONT DOOR HARNESS, R&R	Both sides						Z0110ARX	0.9	◆Door trim (S1026), R&R
FRONT DOOR HARNESS, R&R	One side						Z0110BRX	0.6	◆Door trim (S1026), R&R
REAR DOOR HARNESS, R&R	Both sides						Z0111ARX	1.0	◆Door trim (S1125), R&R
REAR DOOR HARNESS, R&R	One side						Z0111BRX	0.6	◆Door trim (S1125), R&R
EMISSION HARNESS [CONTROL WIRING HARNESS FOR FUEL/IGNITION/EMISSION SYSTEM], R&R							Z0112ARX	1.8	
EARTH WIRE [ENGINE TO BODY], R&R							Z0113ARX	0.2	
BATTERY CABLE [POSITIVE], R&R	With Mazda M Hybrid						Z0117ARX	0.7	