

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
A01 MAINTENANCE AND ADJUSTMENTS									
IDLE SPEED, CHECK AND ADJUST							A0106AAX	0.4	
IGNITION TIMING, CHECK AND ADJUST							A0108AAX	0.4	
FRONT AND/OR REAR WHEEL ALIGNMENT, CHECK AND ADJUST	Except 4-wheel alignment tester used	Front	Steering angle				A0109AAX	0.6	◆Tire pressure, Adjust
FRONT AND/OR REAR WHEEL ALIGNMENT, CHECK AND ADJUST	Except 4-wheel alignment tester used	Front	Steering angle and toe-in				A0109BAX	1.0	◆Tire pressure, Adjust
FRONT AND/OR REAR WHEEL ALIGNMENT, CHECK AND ADJUST	Except 4-wheel alignment tester used	Front	Toe-in				A0109CAX	0.6	◆Tire pressure, Adjust
FRONT AND/OR REAR WHEEL ALIGNMENT, CHECK AND ADJUST	Wired type 4-wheel alignment tester used	Front					A0109DAX	1.1	◆Tire pressure, Adjust
FRONT AND/OR REAR WHEEL ALIGNMENT, CHECK AND ADJUST	Wireless type 4-wheel alignment tester used	Front					A0109EAX	0.7	◆Tire pressure, Adjust
FRONT AND/OR REAR WHEEL ALIGNMENT, CHECK	Except 4-wheel alignment tester used	Front					A0109ACX	0.6	◆Tire pressure, Adjust
FRONT AND/OR REAR WHEEL ALIGNMENT, CHECK	Except 4-wheel alignment tester used	Rear					A0109BCX	0.6	◆Tire pressure, Adjust
FRONT AND/OR REAR WHEEL ALIGNMENT, CHECK	Wired type 4-wheel alignment tester used	Front and rear					A0109CCX	0.9	◆Tire pressure, Adjust
FRONT AND/OR REAR WHEEL ALIGNMENT, CHECK	Wireless type 4-wheel alignment tester used	Front and rear					A0109DCX	0.5	◆Tire pressure, Adjust
WHEEL, BALANCE	Off the car	All					A0112AAX	0.7	◆Tire pressure, Adjust
WHEEL, BALANCE	Off the car	Three					A0112BAX	0.6	◆Tire pressure, Adjust
WHEEL, BALANCE	Off the car	Two					A0112CAX	0.5	◆Tire pressure, Adjust
WHEEL, BALANCE	Off the car	One					A0112DAX	0.4	◆Tire pressure, Adjust
WHEEL, BALANCE	On the car	All					A0112EAX	0.6	◆Tire pressure, Adjust
WHEEL, BALANCE	On the car	Three					A0112FAX	0.5	◆Tire pressure, Adjust
WHEEL, BALANCE	On the car	Two					A0112GAX	0.4	◆Tire pressure, Adjust
WHEEL, BALANCE	On the car	One					A0112HAX	0.3	◆Tire pressure, Adjust
EXHAUST MANIFOLD NUT, RETIGHTEN							A0113ATX	0.9	◆Exhaust manifold heat insulator (F0213), R&R
SPARK PLUG [ALL], CLEAN AND CHECK							A0114ACX	0.4	◆Spark plug (G0102), R&R
HEADLIGHT, AIM	Both sides						A0115AAX	0.4	
HEADLIGHT, AIM	One side						A0115BAX	0.3	
BRAKE PEDAL FREE PLAY, CHECK AND ADJUST							A0118AAX	0.2	
BRAKE LINES, AIR BLEED							A0120ARX	0.4	
FRONT DOOR GLASS AND/OR WINDOW REGULATOR, ADJUST	Both sides						A0127AAX	0.6	
FRONT DOOR GLASS AND/OR WINDOW REGULATOR, ADJUST	One side						A0127BAX	0.4	

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
AC1 MAINTENANCE AND ADJUSTMENTS (NOT COVERED BY MANUFACTURER'S WARRANTY)									
COMPRESSION PRESSURE, CHECK							AC101ACX	0.7	◆Spark plug (G0102), R&R
CHARCOAL CANISTER, CHECK							AC103ACX	0.6	
POSITIVE CRANKCASE VENTILATION [PCV] VALVE, CHECK							AC105ACX	0.9	◆Intake manifold gasket (F0102), R&R
FUEL EVAPORATIVE LINE, CHECK FOR LEAK							AC116ACX	0.3	
VENTILATION HOSE [CHARCOAL CANISTER], CHECK							AC117ACX	0.8	
ENGINE OIL, CHECK FOR LEAK							AC118ACX	0.3	
ENGINE OIL, CHANGE							AC118ARX	0.4	
ENGINE OIL PRESSURE, CHECK							AC119ACX	0.3	
COOLING SYSTEM, CHECK FOR LEAK							AC121ACX	0.2	
ENGINE COOLANT, CHANGE							AC122ARX	0.5	
FUEL PUMP FEEDING PRESSURE, CHECK							AC123ACX	0.4	
FUEL LINE AND CONNECTION, CHECK FOR LEAK							AC124ACX	0.3	
ACCELERATOR LINKAGE AND CHOKE MECHANISM, CHECK							AC125ACX	0.2	
FILLER CAP [FUEL TANK], CHECK							AC126ACX	0.2	
BATTERY TERMINAL, CLEAN AND CHECK							AC130ACX	0.2	
IGNITION COIL [ALL], CHECK							AC132ACX	0.3	
LIGHT AND METER, CHECK							AC136ACX	0.2	
SEAT BELT WARNING SYSTEM, CHECK							AC138ACX	0.2	
SEAT BELT EMERGENCY LOCKING RETRACTOR, CHECK							AC139ACX	0.2	
CLIMATE MODE CONTROL, CHECK							AC140ACX	0.3	
AUTOMATIC TRANSMISSION FLUID LEVEL, CHECK AND ADJUST							AC147AAX	0.5	
REAR AXLE OIL, CHANGE							AC149ARX	0.3	
BRAKE FLUID LEVEL, CHECK							AC154ACX	0.2	
DISC BRAKE PAD [ALL], CHECK AND ADJUST	All						AC158AAX	0.9	
DISC BRAKE PAD [ALL], CHECK AND ADJUST	Front side						AC158BAX	0.5	
DISC BRAKE PAD [ALL], CHECK AND ADJUST	Rear side						AC158CAX	0.6	
BRAKE FLUID, CHANGE							AC160ARX	0.5	
AIR BLEED [BRAKE LINE], ALL WHEELS							AC161ARX	0.4	
WHEEL, INTERCHANGE							AC162ARX	0.7	◆Tire pressure, Adjust
PURGE SOLENOID VALVE, CHECK							AC176ACX	0.5	
RADIATOR FILLER CAP, CHECK							AC177ACX	0.2	
OXYGEN SENSOR, CHECK							AC178ACX	0.6	
BOOST SENSOR, CHECK							AC182ACX	0.2	

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
ENGINE COOLANT TEMPERATURE SENSOR/CYLINDER HEAD TEMPERATURE SENSOR, CHECK	Engine coolant temperature (ECT) sensor No.1						AC183ACX	0.8	◆Engine coolant temperature sensor (F0810), R&R
ENGINE COOLANT TEMPERATURE SENSOR/CYLINDER HEAD TEMPERATURE SENSOR, CHECK	Engine coolant temperature (ECT) sensor No.2						AC183BCX	1.4	◆Engine coolant temperature sensor (F0810), R&R
VOLTAGE REGULATOR, CHECK							AC186ACX	0.4	
TIRE PRESSURE, CHECK AND ADJUST							AC189AAX	0.2	
WHEEL LUGNUT OR BOLT, CHECK AND RETIGHTEN							AC190ATX	0.2	
AUTOMATIC TRANSMISSION LINE PRESSURE, CHECK							AC191ACX	0.8	◆Oil pressure test
AUTOMATIC TRANSMISSION LINE PRESSURE & OPERATION, CHECK							AC193ACX	1.1	◆Time lag test◆Oil pressure test
ATF, CHANGE							AC197ARX	0.6	
AG1 MY MAZDA SERVICE (For AUSTRALIA) (NOT COVERED BY MANUFACTURER'S WARRANTY)									
MY MAZDA SERVICE 1st							AG101AMX	1.2	
MY MAZDA SERVICE 2nd							AG102AMX	1.6	
MY MAZDA SERVICE 3rd							AG103AMX	1.1	
MY MAZDA SERVICE 4th							AG104AMX	1.6	
MY MAZDA SERVICE 5th							AG105AMX	1.2	
MY MAZDA SERVICE 6th							AG106AMX	1.6	
MY MAZDA SERVICE 7th							AG107AMX	1.1	
MY MAZDA SERVICE 8th							AG108AMX	1.6	
MY MAZDA SERVICE 9th							AG109AMX	1.2	
MY MAZDA SERVICE 10th							AG110AMX	1.6	
MY MAZDA SERVICE 11th							AG111AMX	1.1	
MY MAZDA SERVICE 12th							AG112AMX	1.6	
MY MAZDA SERVICE 13th							AG113AMX	1.2	
MY MAZDA SERVICE 14th							AG114AMX	1.6	
MY MAZDA SERVICE 15th							AG115AMX	1.1	
MY MAZDA SERVICE 16th							AG116AMX	1.6	
SPARK PLUGS REPLACE							AG151AMX	0.4	
AIR FILTER REPLACE							AG152AMX	0.2	
ENGINE COOLANT REPLACE							AG153AMX	0.5	
FUEL FILTER REPLACE							AG154AMX	0.9	
BRAKE FLUID REPLACE							AG155AMX	0.5	
CABIN AIR FILTER [IF EQUIPPED] REPLACE							AG157AMX	0.2	
AG2 MY MAZDA SERVICE (For NEW ZEALAND) (NOT COVERED BY MANUFACTURER'S WARRANTY)									
MY MAZDA SERVICE 1st							AG201AMX	1.6	
MY MAZDA SERVICE 2nd							AG202AMX	1.6	
MY MAZDA SERVICE 3rd							AG203AMX	1.6	
MY MAZDA SERVICE 4th							AG204AMX	1.7	
MY MAZDA SERVICE 5th							AG205AMX	1.6	
MY MAZDA SERVICE 6th							AG206AMX	1.6	
MY MAZDA SERVICE 7th							AG207AMX	1.6	
MY MAZDA SERVICE 8th							AG208AMX	1.7	
MY MAZDA SERVICE 9th							AG209AMX	1.6	

OPERATION	VARIATION 1	VARIATION 2	VARIATION 3	VARIATION 4	VARIATION 5	OTHER VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
MY MAZDA SERVICE 10th							AG210AMX	1.6	
MY MAZDA SERVICE 11th							AG211AMX	1.6	
MY MAZDA SERVICE 12th							AG212AMX	1.7	
MY MAZDA SERVICE 13th							AG213AMX	1.6	
MY MAZDA SERVICE 14th							AG214AMX	1.6	
MY MAZDA SERVICE 15th							AG215AMX	1.6	
MY MAZDA SERVICE 16th							AG216AMX	1.7	
SPARK PLUGS REPLACE							AG251AMX	0.4	
AIR FILTER REPLACE							AG252AMX	0.2	
ENGINE COOLANT REPLACE							AG253AMX	0.5	
FUEL FILTER REPLACE							AG254AMX	0.9	
BRAKE FLUID REPLACE							AG255AMX	0.5	
EXHAUST SYSTEM AND HEAT SHIELDS INSPECT							AG257AMX	0.2	
CABIN AIR FILTER [IF EQUIPPED] REPLACE							AG258AMX	0.2	
EMERGENCY FLAT TYRE REPAIR KIT [IF EQUIPPED] INSPECT							AG259AMX	0.2	