

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
J01 TRANSMISSION COMPLETE (MANUAL TRANSMISSION)				
TRANSMISSION COMPLETE, OH	LHD,Without i-stop	J0101AHX	9.0	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION COMPLETE, OH	LHD,With i-stop,Without center under cover	J0101BHX	9.3	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION COMPLETE, OH	LHD,With i-stop,With center under cover	J0101CHX	9.4	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION COMPLETE, OH	RHD,Without i-stop	J0101DHX	9.1	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION COMPLETE, OH	RHD,With i-stop,Without front suspension tower bar	J0101EHX	9.2	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION COMPLETE, OH	RHD,With i-stop,With front suspension tower bar	J0101FHX	9.3	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION COMPLETE, R&R	LHD,Without i-stop,Without front suspension tower bar	J0101ARX	4.7	Oxidation/three way/warm up three way catalytic converter (F0702), R&R Propeller shaft assembly (L0101), R&R Power plant frame (J0503), R&R
TRANSMISSION COMPLETE, R&R	LHD,Without i-stop,With front suspension tower bar	J0101BRX	4.8	Oxidation/three way/warm up three way catalytic converter (F0702), R&R Propeller shaft assembly (L0101), R&R Power plant frame (J0503), R&R
TRANSMISSION COMPLETE, R&R	LHD,With i-stop,Without center under cover	J0101CRX	5.1	Oxidation/three way/warm up three way catalytic converter (F0702), R&R Propeller shaft assembly (L0101), R&R Power plant frame (J0503), R&R
TRANSMISSION COMPLETE, R&R	LHD,With i-stop,With center under cover	J0101DRX	5.2	Oxidation/three way/warm up three way catalytic converter (F0702), R&R Propeller shaft assembly (L0101), R&R Power plant frame (J0503), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
TRANSMISSION COMPLETE, R&R	RHD,Without i-stop	J0101ERX	4.9	Oxidation/three way/warm up three way catalytic converter (F0702), R&R Propeller shaft assembly (L0101), R&R Power plant frame (J0503), R&R
TRANSMISSION COMPLETE, R&R	RHD,With i-stop	J0101FRX	5.0	Oxidation/three way/warm up three way catalytic converter (F0702), R&R Propeller shaft assembly (L0101), R&R Power plant frame (J0503), R&R
J02 TRANSMISSION CASE (MANUAL TRANSMISSION)				
TRANSMISSION CASE, R&R	LHD,Without i-stop,Without front suspension tower bar	J0201ARX	7.3	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION CASE, R&R	LHD,Without i-stop,With front suspension tower bar	J0201BRX	7.4	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION CASE, R&R	LHD,With i-stop,Without front suspension tower bar,Without center under cover	J0201CRX	7.6	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION CASE, R&R	[LHD,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,With i-stop,With front suspension tower bar,Without center under cover]	J0201DRX	7.7	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION CASE, R&R	LHD,With i-stop,With front suspension tower bar,With center under cover	J0201ERX	7.8	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION CASE, R&R	RHD,Without i-stop,Without front suspension tower bar	J0201FRX	7.4	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION CASE, R&R	RHD,Without i-stop,With front suspension tower bar	J0201GRX	7.5	Transmission complete (J0101), R&R Shim, Adjust
TRANSMISSION CASE, R&R	RHD,With i-stop	J0201HRX	7.6	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
EXTENSION HOUSING, R&R	LHD,Without i-stop	J0202ARX	6.0	Transmission complete (J0101), R&R Shim, Adjust
EXTENSION HOUSING, R&R	LHD,With i-stop,Without front suspension tower bar,Without center under cover	J0202BRX	6.3	Transmission complete (J0101), R&R Shim, Adjust
EXTENSION HOUSING, R&R	[LHD,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,With i-stop,With front suspension tower bar,Without center under cover]	J0202CRX	6.4	Transmission complete (J0101), R&R Shim, Adjust
EXTENSION HOUSING, R&R	LHD,With i-stop,With front suspension tower bar,With center under cover	J0202DRX	6.5	Transmission complete (J0101), R&R Shim, Adjust
EXTENSION HOUSING, R&R	RHD,Without i-stop,Without front suspension tower bar	J0202ERX	6.1	Transmission complete (J0101), R&R Shim, Adjust
EXTENSION HOUSING, R&R	[RHD,Without i-stop,With front suspension tower bar]/[RHD,With i-stop,Without front suspension tower bar]	J0202FRX	6.2	Transmission complete (J0101), R&R Shim, Adjust
EXTENSION HOUSING, R&R	RHD,With i-stop,With front suspension tower bar	J0202GRX	6.3	Transmission complete (J0101), R&R Shim, Adjust
GEARSHIFT CONTROL CASE/SHIFT CONTROL COMPONENT, R&R	LHD,Without i-stop	J0207ARX	5.0	Transmission complete (J0101), R&R Shim, Adjust
GEARSHIFT CONTROL CASE/SHIFT CONTROL COMPONENT, R&R	LHD,With i-stop,Without front suspension tower bar,Without center under cover	J0207BRX	5.3	Transmission complete (J0101), R&R Shim, Adjust
GEARSHIFT CONTROL CASE/SHIFT CONTROL COMPONENT, R&R	[LHD,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,With i-stop,With front suspension tower bar]	J0207CRX	5.4	Transmission complete (J0101), R&R Shim, Adjust
GEARSHIFT CONTROL CASE/SHIFT CONTROL COMPONENT, R&R	RHD,Without i-stop	J0207DRX	5.1	Transmission complete (J0101), R&R Shim, Adjust
GEARSHIFT CONTROL CASE/SHIFT CONTROL COMPONENT, R&R	RHD,With i-stop,Without front suspension tower bar	J0207ERX	5.2	Transmission complete (J0101), R&R Shim, Adjust
GEARSHIFT CONTROL CASE/SHIFT CONTROL COMPONENT, R&R	RHD,With i-stop,With front suspension tower bar	J0207FRX	5.3	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
FRONT COVER AND/OR OIL SEAL, R&R	LHD,Without i-stop,Without front suspension tower bar	J0209ARX	5.1	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER AND/OR OIL SEAL, R&R	LHD,Without i-stop,With front suspension tower bar	J0209BRX	5.2	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER AND/OR OIL SEAL, R&R	LHD,With i-stop,Without front suspension tower bar,Without center under cover	J0209CRX	5.4	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER AND/OR OIL SEAL, R&R	[LHD,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,With i-stop,With front suspension tower bar,Without center under cover]	J0209DRX	5.5	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER AND/OR OIL SEAL, R&R	LHD,With i-stop,With front suspension tower bar,With center under cover	J0209ERX	5.6	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER AND/OR OIL SEAL, R&R	RHD,Without i-stop,Without front suspension tower bar	J0209FRX	5.2	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER AND/OR OIL SEAL, R&R	RHD,Without i-stop,With front suspension tower bar	J0209GRX	5.3	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER AND/OR OIL SEAL, R&R	RHD,With i-stop	J0209HRX	5.4	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER GASKET, R&R	LHD,Without i-stop,Without front suspension tower bar	J0210ARX	5.0	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER GASKET, R&R	LHD,Without i-stop,With front suspension tower bar	J0210BRX	5.1	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER GASKET, R&R	[LHD,With i-stop,Without front suspension tower bar]/[LHD,With i-stop,With front suspension tower bar,Without center under cover]	J0210CRX	5.4	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER GASKET, R&R	LHD,With i-stop,With front suspension tower bar,With center under cover	J0210DRX	5.5	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
FRONT COVER GASKET, R&R	RHD,Without i-stop,Without front suspension tower bar	J0210ERX	5.1	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER GASKET, R&R	RHD,Without i-stop,With front suspension tower bar	J0210FRX	5.2	Transmission complete (J0101), R&R Shim, Adjust
FRONT COVER GASKET, R&R	RHD,With i-stop	J0210GRX	5.3	Transmission complete (J0101), R&R Shim, Adjust
EXTENSION HOUSING OIL SEAL, R&R	Without center under cover	J0211ARX	0.6	Propeller shaft assembly, R&R
EXTENSION HOUSING OIL SEAL, R&R	With center under cover	J0211BRX	0.7	Propeller shaft assembly, R&R
J03 TRANSMISSION GEARS				
4TH GEAR AND/OR 4TH GEAR RELATED PARTS, R&R	LHD,Mainshaft side and countershaft side,Without i-stop,Without front suspension tower bar	J0302ARX	6.7	Transmission complete (J0101), R&R Shim, Adjust
4TH GEAR AND/OR 4TH GEAR RELATED PARTS, R&R	LHD,Mainshaft side and countershaft side,Without i-stop,With front suspension tower bar	J0302BRX	6.8	Transmission complete (J0101), R&R Shim, Adjust
4TH GEAR AND/OR 4TH GEAR RELATED PARTS, R&R	LHD,Mainshaft side and countershaft side,With i-stop,Without front suspension tower bar,Without center under cover	J0302CRX	7.0	Transmission complete (J0101), R&R Shim, Adjust
4TH GEAR AND/OR 4TH GEAR RELATED PARTS, R&R	[LHD,Mainshaft side and countershaft side,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,Mainshaft side and countershaft side,With i-stop,With front suspension tower bar,Without center under cover]	J0302DRX	7.1	Transmission complete (J0101), R&R Shim, Adjust
4TH GEAR AND/OR 4TH GEAR RELATED PARTS, R&R	LHD,Mainshaft side and countershaft side,With i-stop,With front suspension tower bar,With center under cover	J0302ERX	7.2	Transmission complete (J0101), R&R Shim, Adjust
4TH GEAR AND/OR 4TH GEAR RELATED PARTS, R&R	RHD,Mainshaft side and countershaft side,Without i-stop,Without front suspension tower bar	J0302FRX	6.8	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
4TH GEAR AND/OR 4TH GEAR RELATED PARTS, R&R	RHD,Mainshaft side and countershaft side,Without i-stop,With front suspension tower bar	J0302GRX	6.9	Transmission complete (J0101), R&R Shim, Adjust
4TH GEAR AND/OR 4TH GEAR RELATED PARTS, R&R	RHD,Mainshaft side and countershaft side,With i-stop	J0302HRX	7.0	Transmission complete (J0101), R&R Shim, Adjust
MAIN SHAFT, R&R	LHD,Without i-stop,Without front suspension tower bar	J0303ARX	7.2	Transmission complete (J0101), R&R Shim, Adjust
MAIN SHAFT, R&R	LHD,Without i-stop,With front suspension tower bar	J0303BRX	7.3	Transmission complete (J0101), R&R Shim, Adjust
MAIN SHAFT, R&R	[LHD,With i-stop,Without front suspension tower bar]/[LHD,With i-stop,With front suspension tower bar,Without center under cover]	J0303CRX	7.6	Transmission complete (J0101), R&R Shim, Adjust
MAIN SHAFT, R&R	LHD,With i-stop,With front suspension tower bar,With center under cover	J0303DRX	7.7	Transmission complete (J0101), R&R Shim, Adjust
MAIN SHAFT, R&R	RHD,Without i-stop,Without front suspension tower bar	J0303ERX	7.3	Transmission complete (J0101), R&R Shim, Adjust
MAIN SHAFT, R&R	RHD,Without i-stop,With front suspension tower bar	J0303FRX	7.4	Transmission complete (J0101), R&R Shim, Adjust
MAIN SHAFT, R&R	RHD,With i-stop	J0303GRX	7.5	Transmission complete (J0101), R&R Shim, Adjust
1ST GEAR AND/OR 1ST GEAR RELATED PARTS, R&R	LHD,Without i-stop,Without front suspension tower bar	J0304ARX	7.0	Transmission complete (J0101), R&R Shim, Adjust
1ST GEAR AND/OR 1ST GEAR RELATED PARTS, R&R	LHD,Without i-stop,With front suspension tower bar	J0304BRX	7.1	Transmission complete (J0101), R&R Shim, Adjust
1ST GEAR AND/OR 1ST GEAR RELATED PARTS, R&R	LHD,With i-stop,Without front suspension tower bar,Without center under cover	J0304CRX	7.3	Transmission complete (J0101), R&R Shim, Adjust
1ST GEAR AND/OR 1ST GEAR RELATED PARTS, R&R	[LHD,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,With i-stop,With front suspension tower bar,Without center under cover]	J0304DRX	7.4	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
1ST GEAR AND/OR 1ST GEAR RELATED PARTS, R&R	LHD,With i-stop,With front suspension tower bar,With center under cover	J0304ERX	7.5	Transmission complete (J0101), R&R Shim, Adjust
1ST GEAR AND/OR 1ST GEAR RELATED PARTS, R&R	RHD,Without i-stop,Without front suspension tower bar	J0304FRX	7.1	Transmission complete (J0101), R&R Shim, Adjust
1ST GEAR AND/OR 1ST GEAR RELATED PARTS, R&R	RHD,Without i-stop,With front suspension tower bar	J0304GRX	7.2	Transmission complete (J0101), R&R Shim, Adjust
1ST GEAR AND/OR 1ST GEAR RELATED PARTS, R&R	RHD,With i-stop	J0304HRX	7.3	Transmission complete (J0101), R&R Shim, Adjust
COUNTER SHAFT GEAR AND/OR COUNTER SHAFT GEAR RELATED PARTS, R&R	LHD,Without i-stop	J0305ARX	7.1	Transmission complete (J0101), R&R Shim, Adjust
COUNTER SHAFT GEAR AND/OR COUNTER SHAFT GEAR RELATED PARTS, R&R	LHD,With i-stop,Without front suspension tower bar,Without center under cover	J0305BRX	7.4	Transmission complete (J0101), R&R Shim, Adjust
COUNTER SHAFT GEAR AND/OR COUNTER SHAFT GEAR RELATED PARTS, R&R	[LHD,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,With i-stop,With front suspension tower bar]	J0305CRX	7.5	Transmission complete (J0101), R&R Shim, Adjust
COUNTER SHAFT GEAR AND/OR COUNTER SHAFT GEAR RELATED PARTS, R&R	RHD,Without i-stop	J0305DRX	7.2	Transmission complete (J0101), R&R Shim, Adjust
COUNTER SHAFT GEAR AND/OR COUNTER SHAFT GEAR RELATED PARTS, R&R	RHD,With i-stop,Without front suspension tower bar	J0305ERX	7.3	Transmission complete (J0101), R&R Shim, Adjust
COUNTER SHAFT GEAR AND/OR COUNTER SHAFT GEAR RELATED PARTS, R&R	RHD,With i-stop,With front suspension tower bar	J0305FRX	7.4	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	LHD,Mainshaft side,Without i-stop,Without front suspension tower bar	J0309ARX	5.9	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	LHD,Mainshaft side,Without i-stop,With front suspension tower bar	J0309BRX	6.0	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	[LHD,Mainshaft side,With i-stop,Without front suspension tower bar]/[LHD,Mainshaft side,With i-stop,With front suspension tower bar,Without center under cover]	J0309CRX	6.3	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	LHD,Mainshaft side,With i-stop,With front suspension tower bar,With center under cover	J0309DRX	6.4	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	LHD,Countershaft side,Without i-stop,Without front suspension tower bar	J0309ERX	6.4	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	LHD,Countershaft side,Without i-stop,With front suspension tower bar	J0309FRX	6.5	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	LHD,Countershaft side,With i-stop,Without center under cover	J0309GRX	6.8	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	LHD,Countershaft side,With i-stop,With center under cover	J0309HRX	6.9	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	LHD,Mainshaft side and countershaft side,Without i-stop,Without front suspension tower bar	J0309JRX	6.4	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	LHD,Mainshaft side and countershaft side,Without i-stop,With front suspension tower bar	J0309KRX	6.5	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	LHD,Mainshaft side and countershaft side,With i-stop,Without center under cover	J0309LRX	6.8	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	LHD,Mainshaft side and countershaft side,With i-stop,With center under cover	J0309MRX	6.9	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	RHD,Mainshaft side,Without i-stop,Without front suspension tower bar	J0309NRX	6.0	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	RHD,Mainshaft side,Without i-stop,With front suspension tower bar	J0309PRX	6.1	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	RHD,Mainshaft side,With i-stop	J0309QRX	6.2	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	RHD,Countershaft side,Without i-stop	J0309RRX	6.6	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	RHD,Countershaft side,With i-stop,Without front suspension tower bar	J0309SRX	6.7	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	RHD,Countershaft side,With i-stop,With front suspension tower bar	J0309TRX	6.8	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	RHD,Mainshaft side and countershaft side,Without i-stop	J0309URX	6.6	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	RHD,Mainshaft side and countershaft side,With i-stop,Without front suspension tower bar	J0309VRX	6.7	Transmission complete (J0101), R&R Shim, Adjust
REVERSE GEAR AND/OR REVERSE GEAR RELATED PARTS, R&R	RHD,Mainshaft side and countershaft side,With i-stop,With front suspension tower bar	J0309WRX	6.8	Transmission complete (J0101), R&R Shim, Adjust
REVERSE IDLE GEAR AND/OR REVERSE IDLE GEAR RELATED PARTS, R&R	LHD,Without i-stop	J0311ARX	6.0	Transmission complete (J0101), R&R Shim, Adjust
REVERSE IDLE GEAR AND/OR REVERSE IDLE GEAR RELATED PARTS, R&R	LHD,With i-stop,Without front suspension tower bar,Without center under cover	J0311BRX	6.3	Transmission complete (J0101), R&R Shim, Adjust
REVERSE IDLE GEAR AND/OR REVERSE IDLE GEAR RELATED PARTS, R&R	[LHD,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,With i-stop,With front suspension tower bar,Without center under cover]	J0311CRX	6.4	Transmission complete (J0101), R&R Shim, Adjust
REVERSE IDLE GEAR AND/OR REVERSE IDLE GEAR RELATED PARTS, R&R	LHD,With i-stop,With front suspension tower bar,With center under cover	J0311DRX	6.5	Transmission complete (J0101), R&R Shim, Adjust
REVERSE IDLE GEAR AND/OR REVERSE IDLE GEAR RELATED PARTS, R&R	RHD,Without i-stop,Without front suspension tower bar	J0311ERX	6.1	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
REVERSE IDLE GEAR AND/OR REVERSE IDLE GEAR RELATED PARTS, R&R	[RHD,Without i-stop,With front suspension tower bar]/[RHD,With i-stop,Without front suspension tower bar]	J0311FRX	6.2	Transmission complete (J0101), R&R Shim, Adjust
REVERSE IDLE GEAR AND/OR REVERSE IDLE GEAR RELATED PARTS, R&R	RHD,With i-stop,With front suspension tower bar	J0311GRX	6.3	Transmission complete (J0101), R&R Shim, Adjust
5TH GEAR AND/OR 5TH GEAR RELATED PARTS, R&R	LHD,Without i-stop,Without front suspension tower bar	J0312ARX	7.2	Transmission complete (J0101), R&R Shim, Adjust
5TH GEAR AND/OR 5TH GEAR RELATED PARTS, R&R	LHD,Without i-stop,With front suspension tower bar	J0312BRX	7.3	Transmission complete (J0101), R&R Shim, Adjust
5TH GEAR AND/OR 5TH GEAR RELATED PARTS, R&R	[LHD,With i-stop,Without front suspension tower bar]/[LHD,With i-stop,With front suspension tower bar,Without center under cover]	J0312CRX	7.6	Transmission complete (J0101), R&R Shim, Adjust
5TH GEAR AND/OR 5TH GEAR RELATED PARTS, R&R	LHD,With i-stop,With front suspension tower bar,With center under cover	J0312DRX	7.7	Transmission complete (J0101), R&R Shim, Adjust
5TH GEAR AND/OR 5TH GEAR RELATED PARTS, R&R	RHD,Without i-stop,Without front suspension tower bar	J0312ERX	7.3	Transmission complete (J0101), R&R Shim, Adjust
5TH GEAR AND/OR 5TH GEAR RELATED PARTS, R&R	RHD,Without i-stop,With front suspension tower bar	J0312FRX	7.4	Transmission complete (J0101), R&R Shim, Adjust
5TH GEAR AND/OR 5TH GEAR RELATED PARTS, R&R	RHD,With i-stop	J0312GRX	7.5	Transmission complete (J0101), R&R Shim, Adjust
MAIN DRIVE GEAR AND/OR MAIN DRIVE GEAR RELATED PARTS, R&R	LHD,Without i-stop	J0313ARX	7.0	Transmission complete (J0101), R&R Shim, Adjust
MAIN DRIVE GEAR AND/OR MAIN DRIVE GEAR RELATED PARTS, R&R	LHD,With i-stop,Without front suspension tower bar,Without center under cover	J0313BRX	7.3	Transmission complete (J0101), R&R Shim, Adjust
MAIN DRIVE GEAR AND/OR MAIN DRIVE GEAR RELATED PARTS, R&R	[LHD,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,With i-stop,With front suspension tower bar,Without center under cover]	J0313CRX	7.4	Transmission complete (J0101), R&R Shim, Adjust
MAIN DRIVE GEAR AND/OR MAIN DRIVE GEAR RELATED PARTS, R&R	LHD,With i-stop,With front suspension tower bar,With center under cover	J0313DRX	7.5	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
MAIN DRIVE GEAR AND/OR MAIN DRIVE GEAR RELATED PARTS, R&R	RHD,Without i-stop,Without front suspension tower bar	J0313ERX	7.1	Transmission complete (J0101), R&R Shim, Adjust
MAIN DRIVE GEAR AND/OR MAIN DRIVE GEAR RELATED PARTS, R&R	[RHD,Without i-stop,With front suspension tower bar]/[RHD,With i-stop,Without front suspension tower bar]	J0313FRX	7.2	Transmission complete (J0101), R&R Shim, Adjust
MAIN DRIVE GEAR AND/OR MAIN DRIVE GEAR RELATED PARTS, R&R	RHD,With i-stop,With front suspension tower bar	J0313GRX	7.3	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	LHD,Mainshaft side,Without i-stop,Without front suspension tower bar	J0314ARX	6.5	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	LHD,Mainshaft side,Without i-stop,With front suspension tower bar	J0314BRX	6.6	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	LHD,Mainshaft side,With i-stop,Without front suspension tower bar,Without center under cover	J0314CRX	6.8	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	[LHD,Mainshaft side,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,Mainshaft side,With i-stop,With front suspension tower bar,Without center under cover]	J0314DRX	6.9	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	LHD,Mainshaft side,With i-stop,With front suspension tower bar,With center under cover	J0314ERX	7.0	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	LHD,Countershaft side,Without i-stop	J0314FRX	6.4	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	LHD,Countershaft side,With i-stop,Without front suspension tower bar,Without center under cover	J0314GRX	6.7	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	[LHD,Countershaft side,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,Countershaft side,With i-stop,With front suspension tower bar,Without center under cover]	J0314HRX	6.8	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	LHD, Countershaft side, With i-stop, With front suspension tower bar, With center under cover	J0314JRX	6.9	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	LHD, Mainshaft side and countershaft side, Without i-stop, Without front suspension tower bar	J0314KRX	6.5	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	LHD, Mainshaft side and countershaft side, Without i-stop, With front suspension tower bar	J0314LRX	6.6	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	LHD, Mainshaft side and countershaft side, With i-stop, Without front suspension tower bar, Without center under cover	J0314MRX	6.8	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	[LHD, Mainshaft side and countershaft side, With i-stop, Without front suspension tower bar, With center under cover]/[LHD, Mainshaft side and countershaft side, With i-stop, With front suspension tower bar, Without center under cover]	J0314NRX	6.9	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	LHD, Mainshaft side and countershaft side, With i-stop, With front suspension tower bar, With center under cover	J0314PRX	7.0	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	RHD, Mainshaft side, Without i-stop, Without front suspension tower bar	J0314QRX	6.6	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	RHD, Mainshaft side, Without i-stop, With front suspension tower bar	J0314RRX	6.7	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	RHD, Mainshaft side, With i-stop	J0314SRX	6.8	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	RHD, Countershaft side, Without i-stop, Without front suspension tower bar	J0314TRX	6.5	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	[RHD,Countershaft side,Without i-stop,With front suspension tower bar]/[RHD,Countershaft side,With i-stop,Without front suspension tower bar]	J0314URX	6.6	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	RHD,Countershaft side,With i-stop,With front suspension tower bar	J0314VRX	6.7	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	RHD,Mainshaft side and countershaft side,Without i-stop,Without front suspension tower bar	J0314WRX	6.6	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	RHD,Mainshaft side and countershaft side,Without i-stop,With front suspension tower bar	J0314YRX	6.7	Transmission complete (J0101), R&R Shim, Adjust
3RD GEAR AND/OR 3RD GEAR RELATED PARTS, R&R	RHD,Mainshaft side and countershaft side,With i-stop	J0314ZRX	6.8	Transmission complete (J0101), R&R Shim, Adjust
2ND GEAR AND/OR 2ND GEAR RELATED PARTS, R&R	LHD,Without i-stop	J0315ARX	7.1	Transmission complete (J0101), R&R Shim, Adjust
2ND GEAR AND/OR 2ND GEAR RELATED PARTS, R&R	LHD,With i-stop,Without front suspension tower bar,Without center under cover	J0315BRX	7.4	Transmission complete (J0101), R&R Shim, Adjust
2ND GEAR AND/OR 2ND GEAR RELATED PARTS, R&R	[LHD,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,With i-stop,With front suspension tower bar]	J0315CRX	7.5	Transmission complete (J0101), R&R Shim, Adjust
2ND GEAR AND/OR 2ND GEAR RELATED PARTS, R&R	RHD,Without i-stop	J0315DRX	7.2	Transmission complete (J0101), R&R Shim, Adjust
2ND GEAR AND/OR 2ND GEAR RELATED PARTS, R&R	RHD,With i-stop,Without front suspension tower bar	J0315ERX	7.3	Transmission complete (J0101), R&R Shim, Adjust
2ND GEAR AND/OR 2ND GEAR RELATED PARTS, R&R	RHD,With i-stop,With front suspension tower bar	J0315FRX	7.4	Transmission complete (J0101), R&R Shim, Adjust
J04 CHANGE CONTROLS (MANUAL TRANSMISSION)				
SHIFT FORK AND/OR SHIFT ROD [ALL], R&R	LHD,Without i-stop,Without front suspension tower bar	J0401ARX	6.2	Transmission complete (J0101), R&R Shim, Adjust
SHIFT FORK AND/OR SHIFT ROD [ALL], R&R	LHD,Without i-stop,With front suspension tower bar	J0401BRX	6.3	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
SHIFT FORK AND/OR SHIFT ROD [ALL], R&R	[LHD,With i-stop,Without front suspension tower bar]/[LHD,With i-stop,With front suspension tower bar,Without center under cover]	J0401CRX	6.6	Transmission complete (J0101), R&R Shim, Adjust
SHIFT FORK AND/OR SHIFT ROD [ALL], R&R	LHD,With i-stop,With front suspension tower bar,With center under cover	J0401DRX	6.7	Transmission complete (J0101), R&R Shim, Adjust
SHIFT FORK AND/OR SHIFT ROD [ALL], R&R	RHD,Without i-stop,Without front suspension tower bar	J0401ERX	6.3	Transmission complete (J0101), R&R Shim, Adjust
SHIFT FORK AND/OR SHIFT ROD [ALL], R&R	RHD,Without i-stop,With front suspension tower bar	J0401FRX	6.4	Transmission complete (J0101), R&R Shim, Adjust
SHIFT FORK AND/OR SHIFT ROD [ALL], R&R	RHD,With i-stop	J0401GRX	6.5	Transmission complete (J0101), R&R Shim, Adjust
SHIFT ROD END [ALL], R&R	LHD,Without i-stop,Without front suspension tower bar	J0402ARX	5.9	Transmission complete (J0101), R&R Shim, Adjust
SHIFT ROD END [ALL], R&R	LHD,Without i-stop,With front suspension tower bar	J0402BRX	6.0	Transmission complete (J0101), R&R Shim, Adjust
SHIFT ROD END [ALL], R&R	[LHD,With i-stop,Without front suspension tower bar]/[LHD,With i-stop,With front suspension tower bar,Without center under cover]	J0402CRX	6.3	Transmission complete (J0101), R&R Shim, Adjust
SHIFT ROD END [ALL], R&R	LHD,With i-stop,With front suspension tower bar,With center under cover	J0402DRX	6.4	Transmission complete (J0101), R&R Shim, Adjust
SHIFT ROD END [ALL], R&R	RHD,Without i-stop,Without front suspension tower bar	J0402ERX	6.0	Transmission complete (J0101), R&R Shim, Adjust
SHIFT ROD END [ALL], R&R	RHD,Without i-stop,With front suspension tower bar	J0402FRX	6.1	Transmission complete (J0101), R&R Shim, Adjust
SHIFT ROD END [ALL], R&R	RHD,With i-stop	J0402GRX	6.2	Transmission complete (J0101), R&R Shim, Adjust
STEEL BALL AND/OR SPRING [SHIFT FORK ROD] [ALL], R&R	LHD,Without i-stop	J0403ARX	4.9	Transmission complete (J0101), R&R
STEEL BALL AND/OR SPRING [SHIFT FORK ROD] [ALL], R&R	LHD,With i-stop,Without front suspension tower bar,Without center under cover	J0403BRX	5.2	Transmission complete (J0101), R&R

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
STEEL BALL AND/OR SPRING [SHIFT FORK ROD] [ALL], R&R	[LHD,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,With i-stop,With front suspension tower bar]	J0403CRX	5.3	Transmission complete (J0101), R&R
STEEL BALL AND/OR SPRING [SHIFT FORK ROD] [ALL], R&R	RHD,Without i-stop	J0403DRX	5.0	Transmission complete (J0101), R&R
STEEL BALL AND/OR SPRING [SHIFT FORK ROD] [ALL], R&R	RHD,With i-stop,Without front suspension tower bar	J0403ERX	5.1	Transmission complete (J0101), R&R
STEEL BALL AND/OR SPRING [SHIFT FORK ROD] [ALL], R&R	RHD,With i-stop,With front suspension tower bar	J0403FRX	5.2	Transmission complete (J0101), R&R
GEARSHIFT LEVER INNER DUST BOOT, R&R	Without i-stop	J0404ARX	0.3	
GEARSHIFT LEVER INNER DUST BOOT, R&R	With i-stop	J0404BRX	0.4	
GEARSHIFT LEVER, WAVE WASHER AND/OR BUSH, R&R		J0406XRX	0.4	
GEARSHIFT LEVER KNOB AND/OR LOCK NUT, R&R		J0407XRX	0.2	
CHANGE BOOT AND/OR UPPER PLATE, R&R		J0408XRX	0.2	
CHANGE ROD, R&R	LHD,Without i-stop,Without front suspension tower bar	J0409ARX	5.7	Transmission complete (J0101), R&R Shim, Adjust
CHANGE ROD, R&R	LHD,Without i-stop,With front suspension tower bar	J0409BRX	5.8	Transmission complete (J0101), R&R Shim, Adjust
CHANGE ROD, R&R	[LHD,With i-stop,Without front suspension tower bar]/[LHD,With i-stop,With front suspension tower bar,Without center under cover]	J0409CRX	6.1	Transmission complete (J0101), R&R Shim, Adjust
CHANGE ROD, R&R	LHD,With i-stop,With front suspension tower bar,With center under cover	J0409DRX	6.2	Transmission complete (J0101), R&R Shim, Adjust
CHANGE ROD, R&R	RHD,Without i-stop,Without front suspension tower bar	J0409ERX	5.8	Transmission complete (J0101), R&R Shim, Adjust

ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
CHANGE ROD, R&R	RHD,Without i-stop,With front suspension tower bar	J0409FRX	5.9	Transmission complete (J0101), R&R Shim, Adjust
CHANGE ROD, R&R	RHD,With i-stop	J0409GRX	6.0	Transmission complete (J0101), R&R Shim, Adjust
CHANGE ROD OIL SEAL, R&R	LHD,Without i-stop	J0415ARX	5.8	Transmission complete (J0101), R&R Shim, Adjust
CHANGE ROD OIL SEAL, R&R	LHD,With i-stop,Without front suspension tower bar,Without center under cover	J0415BRX	6.1	Transmission complete (J0101), R&R Shim, Adjust
CHANGE ROD OIL SEAL, R&R	[LHD,With i-stop,Without front suspension tower bar,With center under cover]/[LHD,With i-stop,With front suspension tower bar]	J0415CRX	6.2	Transmission complete (J0101), R&R Shim, Adjust
CHANGE ROD OIL SEAL, R&R	RHD,Without i-stop	J0415DRX	5.9	Transmission complete (J0101), R&R Shim, Adjust
CHANGE ROD OIL SEAL, R&R	RHD,With i-stop,Without front suspension tower bar	J0415ERX	6.0	Transmission complete (J0101), R&R Shim, Adjust
CHANGE ROD OIL SEAL, R&R	RHD,With i-stop,With front suspension tower bar	J0415FRX	6.1	Transmission complete (J0101), R&R Shim, Adjust
J05 TRANSMISSION MOUNT (MANUAL TRANSMISSION)				
POWER PLANT FRAME, R&R	Without center under cover	J0503ARX	0.7	
POWER PLANT FRAME, R&R	With center under cover	J0503BRX	0.8	