

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
T00 DIAGNOSIS				
DTC READING BY DIAGNOSTIC TOOL The labor operation for DIAGNOSTIC TOOLS usage (T9999*-*~*) can be applied only when the diagnosis requires the NGS/WDS/PDS/IDS tester to read the Diagnostic Trouble Code for Auto cruise control/Theftdeterrent control system components.		T9999XDX	0.2	
T01 POWER CIRCUIT				
FUSE, R&R		T0102XRX	0.2	
MAIN FUSE, R&R	Without i-stop	T0103ARX	0.2	
MAIN FUSE, R&R	With i-stop	T0103BRX	0.3	
FUSE BLOCK OR PASSENGER JUNCTION BOX, R&R	Fuse block, Without i-stop	T0104ARX	0.4	
FUSE BLOCK OR PASSENGER JUNCTION BOX, R&R	Fuse block, With i-stop	T0104BRX	0.5	
FUSE BLOCK COVER, R&R		T0105XRX	0.2	
MAIN FUSE BLOCK, R&R	Without i-stop	T0106ARX	2.6	
MAIN FUSE BLOCK, R&R	With i-stop	T0106BRX	2.7	
MAIN FUSE BLOCK COVER, R&R		T0107XRX	0.2	
BODY CONTROL MODULE [BCM], R&R	RHD, Without i-stop	T0108ARX	0.8	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	RHD, With i-stop	T0108BRX	0.9	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	LHD, 6MT, Without i-stop	T0108CRX	0.4	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	LHD, 6MT, With i-stop	T0108DRX	0.5	◆Body control module [BCM] configuration
BODY CONTROL MODULE [BCM], R&R	LHD, 6AT	T0108ERX	0.3	◆Body control module [BCM] configuration
ELECTRICAL SUPPLY UNIT [ESU], R&R		T0115XRX	0.6	

## ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
T02 SWITCHES				
HAZARD SWITCH, R&R		T0204XRX	0.3	
CIGAR LIGHTER, R&R	Accessory socket, Without i-stop	T0206ARX	0.2	
CIGAR LIGHTER, R&R	Accessory socket, With i-stop	T0206BRX	0.3	
POWER WINDOW SWITCH, R&R	One side, Without i-stop	T0207ARX	0.2	◆Door trim assembly, R&R
POWER WINDOW SWITCH, R&R	One side, With i-stop	T0207BRX	0.3	◆Door trim assembly, R&R
POWER WINDOW SWITCH, R&R	Both sides, Without i-stop	T0207CRX	0.3	◆Door trim assembly, R&R
POWER WINDOW SWITCH, R&R	Both sides, With i-stop	T0207DRX	0.4	◆Door trim assembly, R&R
REMOTE CONTROL MIRROR SWITCH, R&R	Without i-stop	T0209ARX	0.2	◆Power window switch (T0207), R&R
REMOTE CONTROL MIRROR SWITCH, R&R	With i-stop	T0209BRX	0.3	◆Power window switch (T0207), R&R
CLOCK SPRING, R&R	Without i-stop	T0220ARX	0.3	◆Steering column cover (S0706), R&R
CLOCK SPRING, R&R	With i-stop	T0220BRX	0.4	◆Steering column cover (S0706), R&R
PUSH BUTTON START SWITCH, R&R		T0222XRX	0.6	
T03 EXTERIOR LIGHTING SYSTEM				
HEADLIGHT SET, R&R	One side, Without i-stop	T0301ARX	0.7	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)
HEADLIGHT SET, R&R	One side, With i-stop	T0301BRX	0.8	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)
HEADLIGHT SET, R&R	Both sides	T0301CRX	1.0	◆Front bumper assembly, R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	One side, Without i-stop	T0304ARX	0.7	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	One side, With i-stop	T0304BRX	0.8	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
HEADLIGHT UNIT, R&R	Both sides	T0304CRX	1.0	◆Headlight set (T0301), R&R◆ Headlight, Aim (A0115)
FRONT TURN SIGNAL LIGHT BULB, R&R	One side, Without i-stop	T0317ARX	0.2	
FRONT TURN SIGNAL LIGHT BULB, R&R	One side, With i-stop	T0317BRX	0.3	

## ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
FRONT TURN SIGNAL LIGHT BULB, R&R	Both sides	T0317CRX	0.3	
REAR COMBINATION LIGHT SET, R&R	One side	T0318ARX	0.3	
REAR COMBINATION LIGHT SET, R&R	Both sides,Without i-stop	T0318BRX	0.3	
REAR COMBINATION LIGHT SET, R&R	Both sides,With i-stop	T0318CRX	0.4	
REAR COMBINATION LIGHT UNIT/LENS, R&R	One side,Without i-stop	T0319ARX	0.2	
REAR COMBINATION LIGHT UNIT/LENS, R&R	One side,With i-stop	T0319BRX	0.3	
REAR COMBINATION LIGHT UNIT/LENS, R&R	Both sides,Without i-stop	T0319CRX	0.3	
REAR COMBINATION LIGHT UNIT/LENS, R&R	Both sides,With i-stop	T0319DRX	0.4	
REAR COMBINATION LIGHT BULB, R&R	One side,Without i-stop	T0320ARX	0.2	
REAR COMBINATION LIGHT BULB, R&R	One side,With i-stop	T0320BRX	0.3	
REAR COMBINATION LIGHT BULB, R&R	Both sides,Without i-stop	T0320CRX	0.3	
REAR COMBINATION LIGHT BULB, R&R	Both sides,With i-stop	T0320DRX	0.4	
HIGH MOUNT STOP LIGHT SET, R&R	Convertible top model,Without i-stop	T0323ARX	0.2	
HIGH MOUNT STOP LIGHT SET, R&R	Convertible top model,With i-stop	T0323BRX	0.3	
HIGH MOUNT STOP LIGHT SET, R&R	Retractable hardtop model,Without i- stop	T0323CRX	0.3	
HIGH MOUNT STOP LIGHT SET, R&R	Retractable hardtop model,With i-stop	T0323DRX	0.4	
LICENSE LIGHT SET, R&R	One side	T0327ARX	0.2	
LICENSE LIGHT SET, R&R	Both sides,Without i-stop	T0327BRX	0.2	
LICENSE LIGHT SET, R&R	Both sides,With i-stop	T0327CRX	0.3	

## ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
LICENSE LIGHT BULB, R&R	One side	T0328ARX	0.2	
LICENSE LIGHT BULB, R&R	Both sides,Without i-stop	T0328BRX	0.2	
LICENSE LIGHT BULB, R&R	Both sides,With i-stop	T0328CRX	0.3	
BACKUP LIGHT SWITCH, R&R	Without i-stop	T0330ARX	1.3	
BACKUP LIGHT SWITCH, R&R	With i-stop	T0330BRX	1.4	
LIGHT SWITCH, R&R	Without i-stop	T0333ARX	0.2	◆Steering column cover (S0706), R&R
LIGHT SWITCH, R&R	With i-stop	T0333BRX	0.3	◆Steering column cover (S0706), R&R
BACKUP LIGHT SET, R&R	One side,Without i-stop	T0342ARX	0.3	
BACKUP LIGHT SET, R&R	One side,With i-stop	T0342BRX	0.4	
BACKUP LIGHT SET, R&R	Both sides,Without i-stop	T0342CRX	0.4	
BACKUP LIGHT SET, R&R	Both sides,With i-stop	T0342DRX	0.5	
BACKUP LIGHT UNIT/LENS, R&R	One side,Without i-stop	T0343ARX	0.3	
BACKUP LIGHT UNIT/LENS, R&R	One side,With i-stop	T0343BRX	0.4	
BACKUP LIGHT UNIT/LENS, R&R	Both sides,Without i-stop	T0343CRX	0.4	
BACKUP LIGHT UNIT/LENS, R&R	Both sides,With i-stop	T0343DRX	0.5	
BACKUP LIGHT BULB, R&R	One or both sides	T0344XRX	0.2	
SIDE TURN SIGNAL LIGHT SET, R&R	One or both sides,Without i-stop	T0345ARX	0.2	
SIDE TURN SIGNAL LIGHT SET, R&R	One or both sides,With i-stop	T0345BRX	0.3	
HEADLIGHT AUTO LEVELING SENSOR, R&R		T0354XRX	0.3	
HEADLIGHT AUTO LEVELING CONTROL MODULE, R&R	Without i-stop	T0355ARX	0.3	
HEADLIGHT AUTO LEVELING CONTROL MODULE, R&R	With i-stop	T0355BRX	0.4	
T04 INTERIOR LIGHTING SYSTEM				
INTERIOR LAMP ASSEMBLY, R&R		T0401XRX	0.4	
INTERIOR LAMP LENS, R&R		T0402XRX	0.2	
INTERIOR LAMP BULB, R&R		T0403XRX	0.2	
TRUNK ROOM LAMP LENS, R&R		T0407XRX	0.2	
TRUNK ROOM LAMP BULB, R&R		T0408XRX	0.2	

## ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
T05 WARNING SYSTEM				
OIL PRESSURE SWITCH, R&R		T0504XRX	0.4	
WASHER LEVEL WARNING SWITCH, R&R		T0506XRX	0.3	
PARKING ASSIST SYSTEM, R&R	Rear mount camera	T0512XRX	0.8	
BLIND SPOT MONITORING [BSM], R&R	BSM control module, Right side, Without i-stop	T0513FRX	1.1	◆Rear bumper assembly, R&R◆BSM radar sensor, Aiming
BLIND SPOT MONITORING [BSM], R&R	BSM control module, Right side, With i-stop	T0513GRX	1.2	◆Rear bumper assembly, R&R◆BSM radar sensor, Aiming
BLIND SPOT MONITORING [BSM], R&R	BSM control module, Left side	T0513HRX	1.1	◆Rear bumper assembly, R&R◆BSM radar sensor, Aiming
BLIND SPOT MONITORING [BSM], R&R	BSM control module, Both sides, Without i-stop	T0513BRX	1.1	◆Rear bumper assembly, R&R◆BSM radar sensor, Aiming
BLIND SPOT MONITORING [BSM], R&R	BSM control module, Both sides, With i-stop	T0513CRX	1.2	◆Rear bumper assembly, R&R◆BSM radar sensor, Aiming
BLIND SPOT MONITORING [BSM], R&R	BSM control switch, Without i-stop	T0513DRX	0.2	
BLIND SPOT MONITORING [BSM], R&R	BSM control switch, With i-stop	T0513ERX	0.3	
PARKING SENSOR CONTROL MODULE, R&R		T0514XRX	0.3	
PARKING SENSOR BUZZER, R&R	Without i-stop	T0516ARX	0.2	
PARKING SENSOR BUZZER, R&R	With i-stop	T0516BRX	0.3	
ULTRASONIC SENSOR [REAR], R&R	One, Without i-stop	T0518ARX	0.7	
ULTRASONIC SENSOR [REAR], R&R	One, With i-stop	T0518BRX	0.8	
ULTRASONIC SENSOR [REAR], R&R	Two, Without i-stop	T0518DRX	0.7	
ULTRASONIC SENSOR [REAR], R&R	Two, With i-stop	T0518ERX	0.8	
ULTRASONIC SENSOR [REAR], R&R	Three	T0518FRX	0.8	
ULTRASONIC SENSOR [REAR], R&R	All	T0518CRX	0.8	
FORWARD SENSING CAMERA [FSC], R&R		T0520XRX	0.5	◆FSC, Aiming
LANE DEPARTURE WARNING SYSTEM [LDWS] SWITCH, R&R	Without i-stop	T0521ARX	0.2	
LANE DEPARTURE WARNING SYSTEM [LDWS] SWITCH, R&R	With i-stop	T0521BRX	0.3	

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
<b>T06 INSTRUMENT CLUSTER (METER)</b>				
METER SET HOOD, R&R	Without i-stop	T0602ARX	0.3	
METER SET HOOD, R&R	With i-stop	T0602BRX	0.4	
METER SET AND/OR CENTRAL PROCESSING UNIT [CPU], R&R	Without i-stop	T0603ARX	0.4	◆Meter set hood (T0602), R&R
METER SET AND/OR CENTRAL PROCESSING UNIT [CPU], R&R	With i-stop	T0603BRX	0.5	◆Meter set hood (T0602), R&R
FUEL TANK GAUGE UNIT, R&R	Convertible top model,Without i-stop	T0619ARX	1.3	◆Fuel pump assembly, R&R
FUEL TANK GAUGE UNIT, R&R	Convertible top model,With i-stop	T0619BRX	1.4	◆Fuel pump assembly, R&R
FUEL TANK GAUGE UNIT, R&R	Retractable hardtop model	T0619CRX	1.4	◆Fuel pump assembly, R&R
<b>T08 AUTO CRUISE &amp; RADAR RACONTROL SYSTEM</b>				
AUTO CRUISE CONTROL SWITCH, R&R	Without i-stop	T0805ARX	0.3	
AUTO CRUISE CONTROL SWITCH, R&R	With i-stop	T0805BRX	0.4	
ADJUSTABLE SPEED LIMITER CONTROL SWITCH, R&R	Without i-stop	T0809ARX	0.3	
ADJUSTABLE SPEED LIMITER CONTROL SWITCH, R&R	With i-stop	T0809BRX	0.4	
<b>T09 THEFT DETERRENT SYSTEM</b>				
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Intruder sensor,Without i-stop	T0901ARX	0.4	
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Intruder sensor,With i- stop	T0901BRX	0.5	
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar horn (Horn Hi side),Without i-stop	T0901CRX	0.2	
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar horn (Horn Hi side),With i-stop	T0901DRX	0.3	
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar horn (Horn Lo side)	T0901ERX	0.5	
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar siren,Without i- stop	T0901FRX	0.2	
THEFT DETERRENT CONTROL SYSTEM, R&R	Burglar system,Burglar siren,With i-stop	T0901GRX	0.3	

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
T10 HORN				
HORN RELAY, R&R		T1001XRX	0.2	
HORN, R&R	Horn Hi side, Without i-stop	T1002ARX	0.2	
HORN, R&R	Horn Hi side, With i-stop	T1002BRX	0.3	
HORN, R&R	Horn Lo side	T1002CRX	0.5	
T11 AUDIO SYSTEM				
AUDIO SET, R&R	Without i-stop	T1102ARX	0.3	
AUDIO SET, R&R	With i-stop	T1102BRX	0.4	
TUNER, R&R	Tuner and amp unit (TAU), RHD	T1103ARX	0.3	
TUNER, R&R	Tuner and amp unit (TAU), LHD, Without i-stop	T1103BRX	0.5	
TUNER, R&R	Tuner and amp unit (TAU), LHD, With i-stop	T1103CRX	0.6	
ANTENNA, R&R	Without i-stop	T1106ARX	0.2	
ANTENNA, R&R	With i-stop	T1106BRX	0.3	
REAR ANTENNA FEEDER, R&R	Convertible top model, RHD, Without center display, Without i-stop	T1108ARX	1.4	
REAR ANTENNA FEEDER, R&R	Convertible top model, RHD, Without center display, With i-stop	T1108BRX	1.5	
REAR ANTENNA FEEDER, R&R	Convertible top model, RHD, With center display, Without i-stop	T1108CRX	1.3	
REAR ANTENNA FEEDER, R&R	Convertible top model, RHD, With center display, With i-stop	T1108DRX	1.4	
REAR ANTENNA FEEDER, R&R	Convertible top model, LHD, Without center display, Without i-stop	T1108ERX	1.4	
REAR ANTENNA FEEDER, R&R	Convertible top model, LHD, Without center display, With i-stop	T1108FRX	1.4	
REAR ANTENNA FEEDER, R&R	Convertible top model, LHD, With center display, Without i-stop	T1108GRX	1.5	

## ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
REAR ANTENNA FEEDER, R&R	Convertible top model,LHD,With center display,With i-stop	T1108HRX	1.6	
REAR ANTENNA FEEDER, R&R	Retractable hardtop model,RHD,Without center display,Without i-stop	T1108JRX	1.5	
REAR ANTENNA FEEDER, R&R	Retractable hardtop model,RHD,Without center display,With i-stop	T1108KRX	1.6	
REAR ANTENNA FEEDER, R&R	Retractable hardtop model,RHD,With center display	T1108LRX	1.4	
REAR ANTENNA FEEDER, R&R	Retractable hardtop model,LHD,Without center display,Without i-stop	T1108MRX	1.4	
REAR ANTENNA FEEDER, R&R	Retractable hardtop model,LHD,Without center display,With i-stop	T1108NRX	1.5	
REAR ANTENNA FEEDER, R&R	Retractable hardtop model,LHD,With center display,Without i-stop	T1108PRX	1.6	
REAR ANTENNA FEEDER, R&R	Retractable hardtop model,LHD,With center display,With i-stop	T1108QRX	1.7	
FRONT ANTENNA FEEDER, R&R	RHD	T1109ARX	0.9	
FRONT ANTENNA FEEDER, R&R	LHD	T1109BRX	0.6	
SPEAKER, R&R	Woofer,Without i-stop	T1110ARX	0.5	
SPEAKER, R&R	Woofer,With i-stop	T1110BRX	0.6	
CONDENSER, R&R	Convertible top model,Without i-stop	T1111ARX	0.2	
CONDENSER, R&R	Convertible top model,With i-stop	T1111BRX	0.3	
CONDENSER, R&R	Retractable hardtop model,Without i-stop	T1111CRX	0.3	
CONDENSER, R&R	Retractable hardtop model,With i-stop	T1111DRX	0.4	
CD PLAYER, R&R		T1113XRX	0.6	



## ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
AMPLIFIER, R&R	Convertible top model,Without i-stop	T1115ARX	0.5	
AMPLIFIER, R&R	Convertible top model,With i-stop	T1115BRX	0.6	
AMPLIFIER, R&R	Retractable hardtop model,Without i-stop	T1115CRX	0.3	
AMPLIFIER, R&R	Retractable hardtop model,With i-stop	T1115DRX	0.4	
CAR COMMUNICATION SYSTEM, R&R	Center display	T1117ARX	0.4	
CAR COMMUNICATION SYSTEM, R&R	Connectivity master unit (CMU),Without i-stop	T1117BRX	0.5	
CAR COMMUNICATION SYSTEM, R&R	Connectivity master unit (CMU),With i-stop	T1117FRX	0.6	
CAR COMMUNICATION SYSTEM, R&R	GPS antenna	T1117CRX	0.4	
CAR COMMUNICATION SYSTEM, R&R	Commander switch,Without i-stop	T1117DRX	0.2	
CAR COMMUNICATION SYSTEM, R&R	Commander switch,With i-stop	T1117ERX	0.3	
SPEAKER [FRONT], R&R	Door speaker,One side	T1122ARX	0.3	◆Door trim assembly, R&R
SPEAKER [FRONT], R&R	Door speaker,Both sides	T1122BRX	0.4	◆Door trim assembly, R&R
SPEAKER [REAR], R&R	Headrest speaker,Driver side,Without i-stop	T1123ARX	0.7	◆Front seat back trim (S0905), R&R
SPEAKER [REAR], R&R	Headrest speaker,Driver side,With i-stop	T1123HRX	0.8	◆Front seat back trim (S0905), R&R
SPEAKER [REAR], R&R	Headrest speaker,Passenger side,Without occupant classification sensor,Without i-stop	T1123BRX	0.7	◆Front seat back trim (S0905), R&R
SPEAKER [REAR], R&R	Headrest speaker,Passenger side,Without occupant classification sensor,With i-stop	T1123CRX	0.8	◆Front seat back trim (S0905), R&R
SPEAKER [REAR], R&R	Headrest speaker,Passenger side,With occupant classification sensor,Without i-stop	T1123DRX	0.9	◆Front seat back trim (S0905), R&R
SPEAKER [REAR], R&R	Headrest speaker,Passenger side,With occupant classification sensor,With i-stop	T1123ERX	0.9	◆Front seat back trim (S0905), R&R

## ILLUSTRATION

OPERATION	VARIATION	OPERATION NUMBER	REPAIR TIME	INCLUDES
SPEAKER [REAR], R&R	Headrest speaker,Both sides,Without occupant classification sensor	T1123FRX	1.3	◆Front seat back trim (S0905), R&R
SPEAKER [REAR], R&R	Headrest speaker,Both sides,With occupant classification sensor,Without i-stop	T1123GRX	1.4	◆Front seat back trim (S0905), R&R
SPEAKER [REAR], R&R	Headrest speaker,Both sides,With occupant classification sensor,With i-stop	T1123JRX	1.5	◆Front seat back trim (S0905), R&R
SPEAKER [TWEETER], R&R	One side	T1124ARX	0.2	
SPEAKER [TWEETER], R&R	Both sides,Without i-stop	T1124BRX	0.2	
SPEAKER [TWEETER], R&R	Both sides,With i-stop	T1124CRX	0.3	
INFORMATION DISPLAY, R&R	Indicator unit,Without i-stop	T1125ARX	0.3	
INFORMATION DISPLAY, R&R	Indicator unit,With i-stop	T1125BRX	0.4	
<b>AUXILIARY JACK, R&amp;R</b>	<b>Without i-stop</b>	<b>T1128ARX</b>	<b>0.3</b>	
<b>AUXILIARY JACK, R&amp;R</b>	<b>With i-stop</b>	<b>T1128BRX</b>	<b>0.4</b>	
HANDS-FREE TELEPHONE [HF/TEL] UNIT OR BLUETOOTH UNIT, R&R	Without i-stop	T1129ARX	0.3	
HANDS-FREE TELEPHONE [HF/TEL] UNIT OR BLUETOOTH UNIT, R&R	With i-stop	T1129BRX	0.4	