



0140-101A
PCM

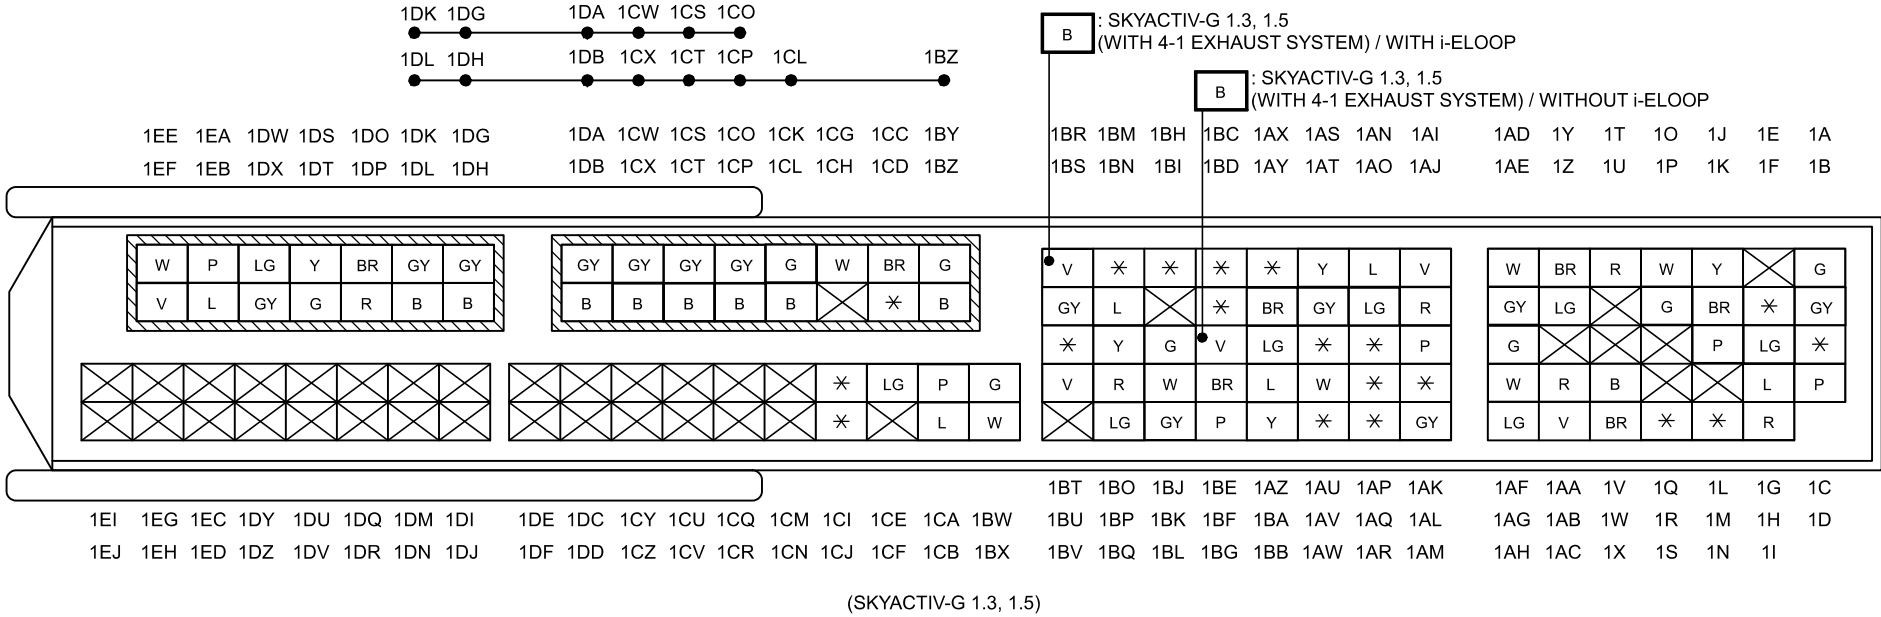


0140-101B
PCM

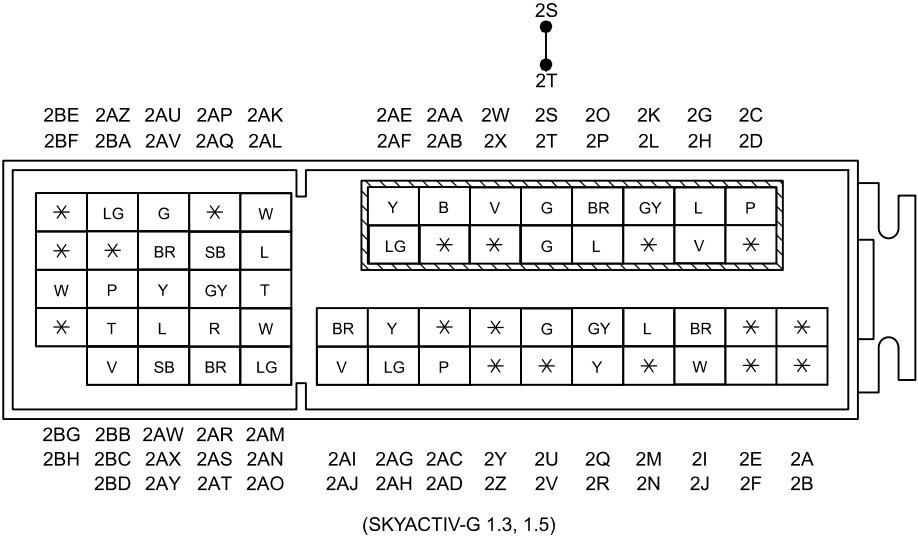

COMMON CONNECTOR LIST


00C-2

0140-201A
PCM

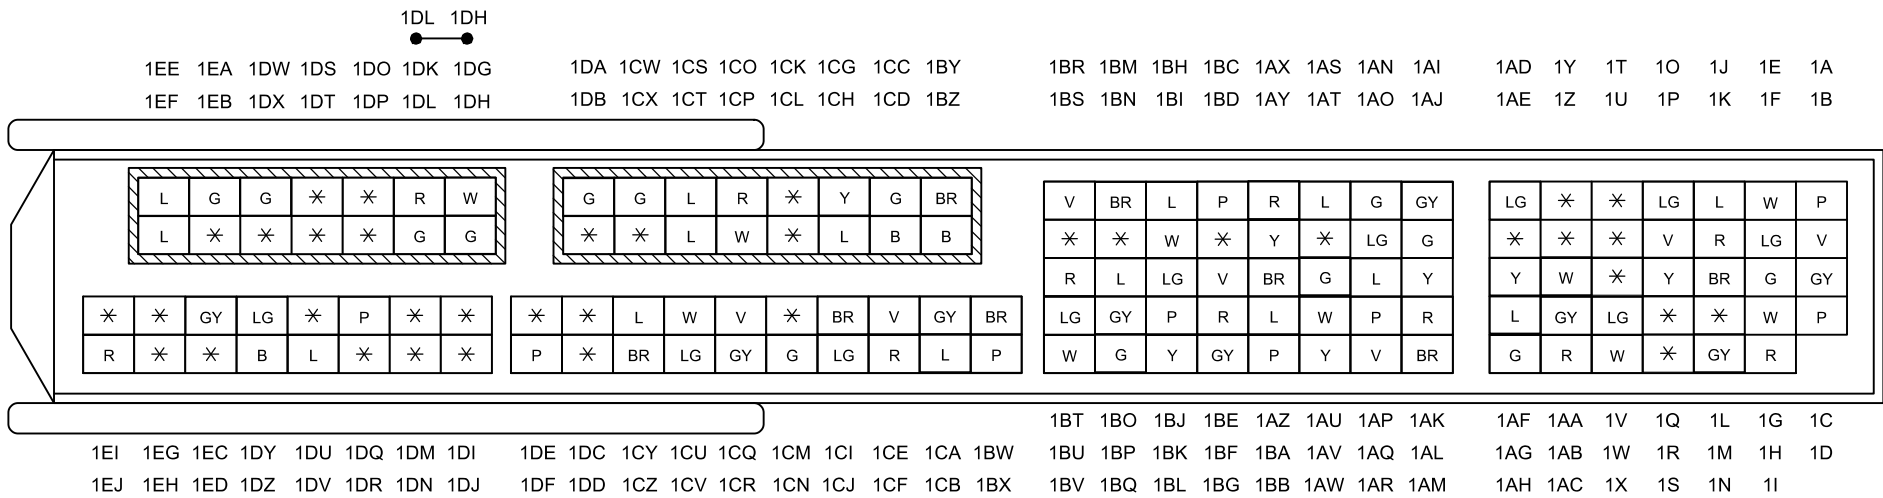



(SKYACTIV-D 1.5)

0140-201B
PCM

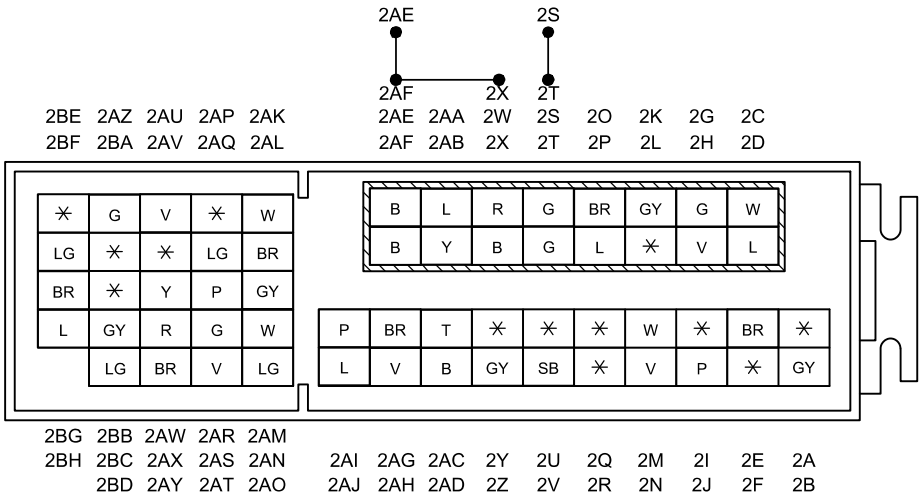


(SKYACTIV-D 1.5)


C-01
FRONT HARNESS-EMISSION HARNESS

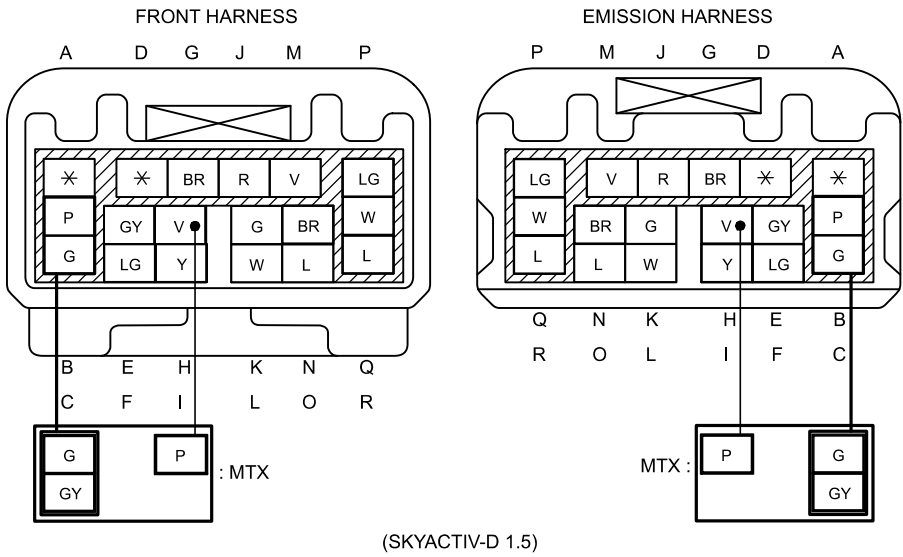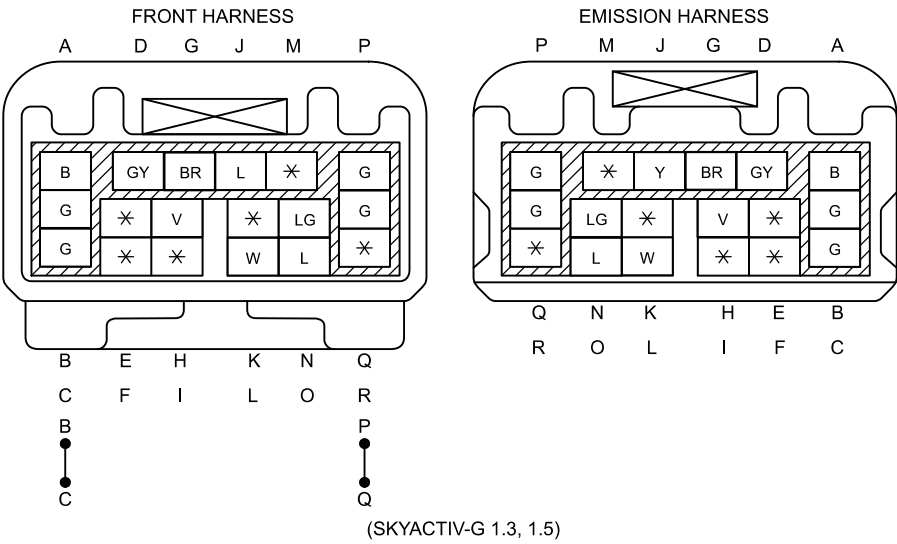


C-02
FRONT HARNESS-EMISSION HARNESS

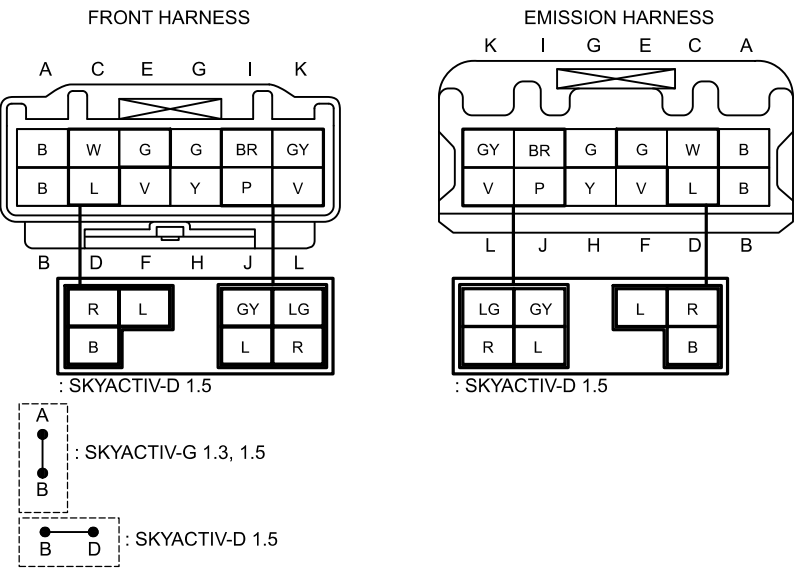


C-03
FRONT HARNESS-EMISSION HARNESS

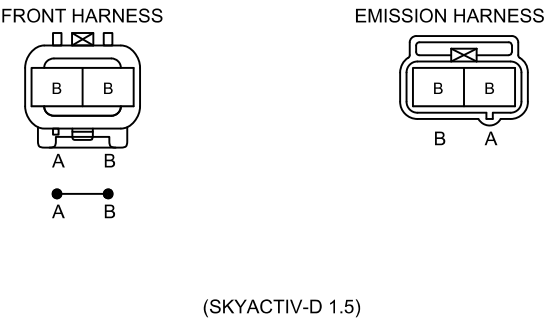

C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

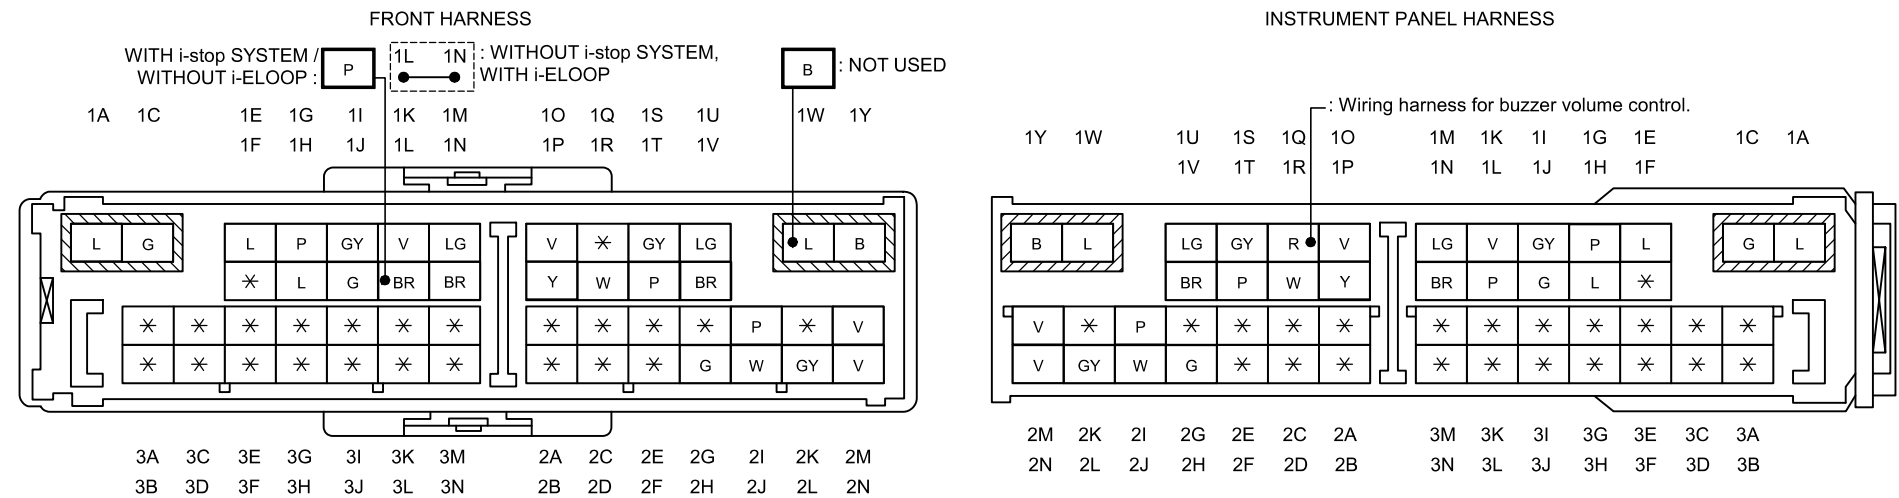


C-05
FRONT HARNESS-REAR HARNESS

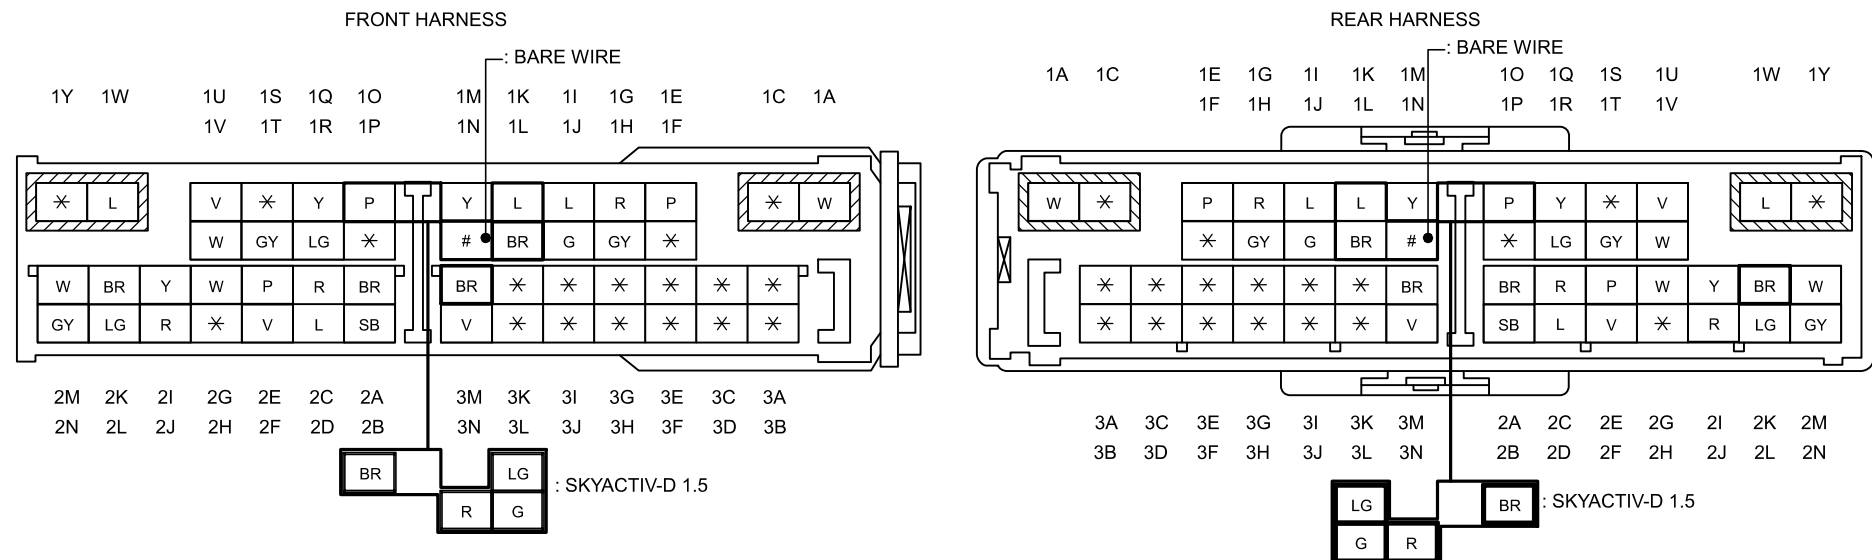


C-06
FRONT HARNESS-REAR HARNESS




C-07
INSTRUMENT PANEL HARNESS-REAR HARNESS

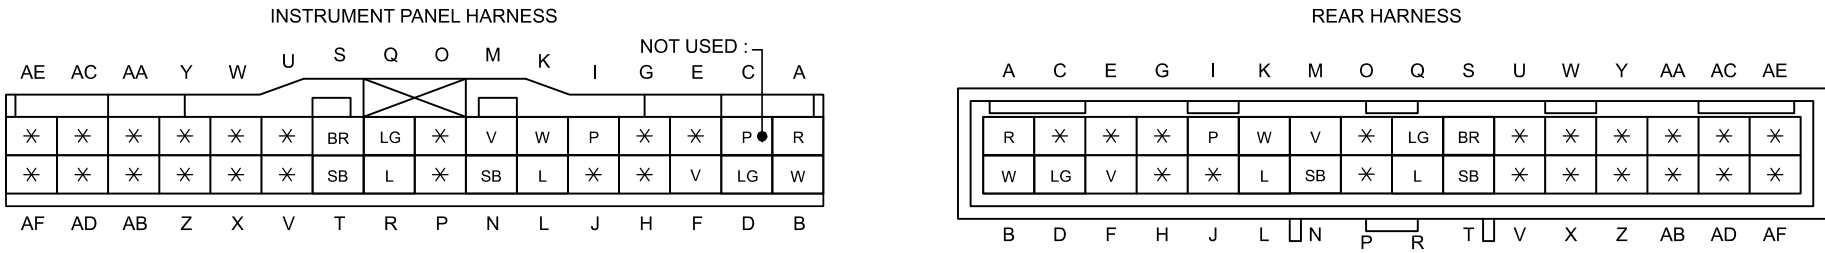


C-08
INSTRUMENT PANEL HARNESS-REAR HARNESS

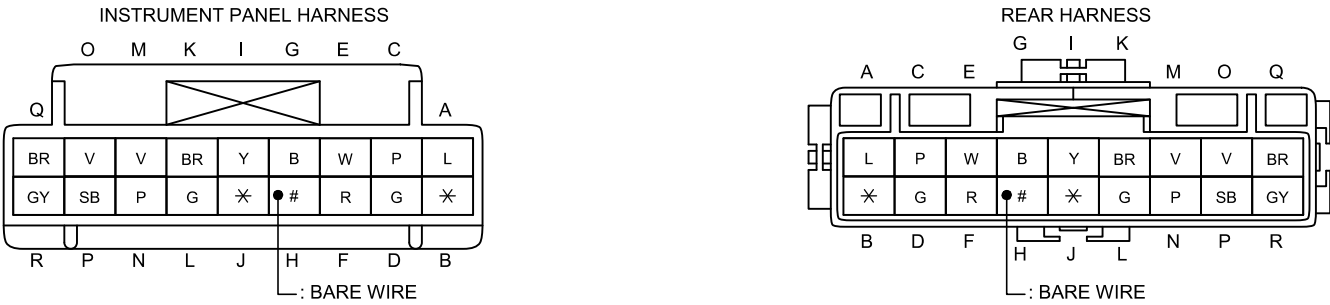


C-09
INSTRUMENT PANEL HARNESS-REAR HARNESS

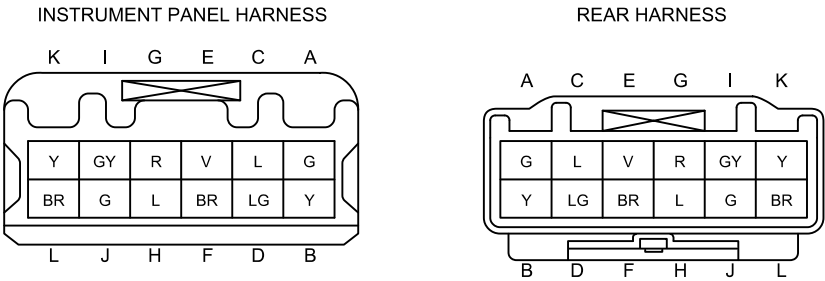


C-10
INSTRUMENT PANEL HARNESS-REAR HARNESS

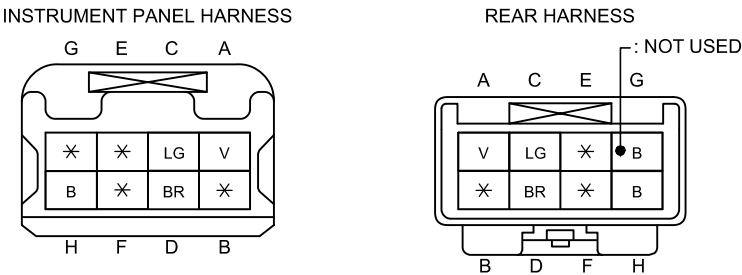


C-11
INSTRUMENT PANEL HARNESS-INTERIOR LIGHT No.2 HARNESS

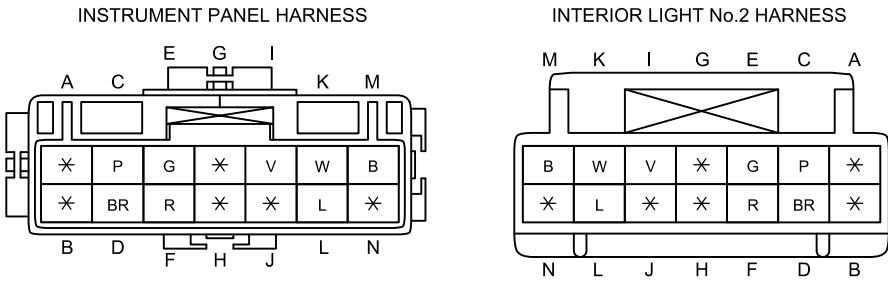


C-12
INSTRUMENT PANEL HARNESS-INTERIOR LIGHT No.2 HARNESS

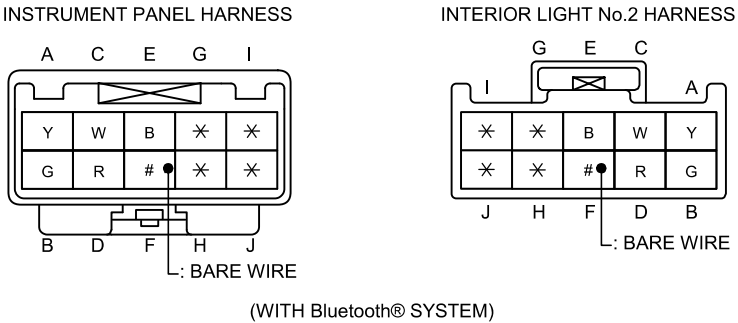



C-13
REAR HARNESS-REAR No.2 HARNESS

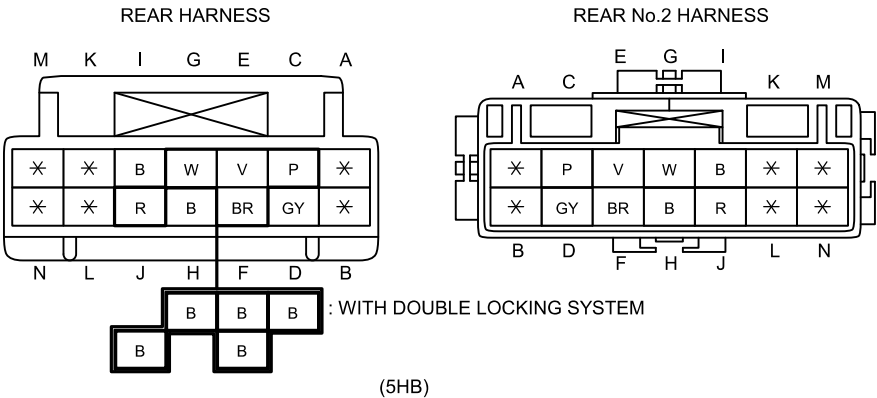



C-14
REAR HARNESS-INTERIOR LIGHT HARNESS

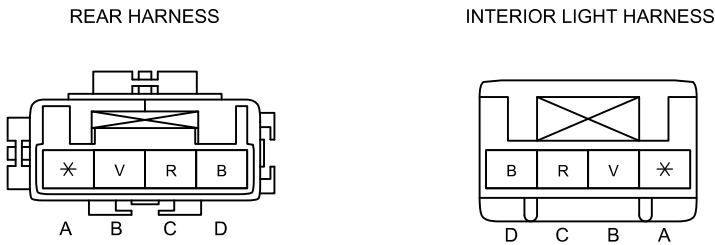



C-15
REAR HARNESS-DOOR No.1 HARNESS

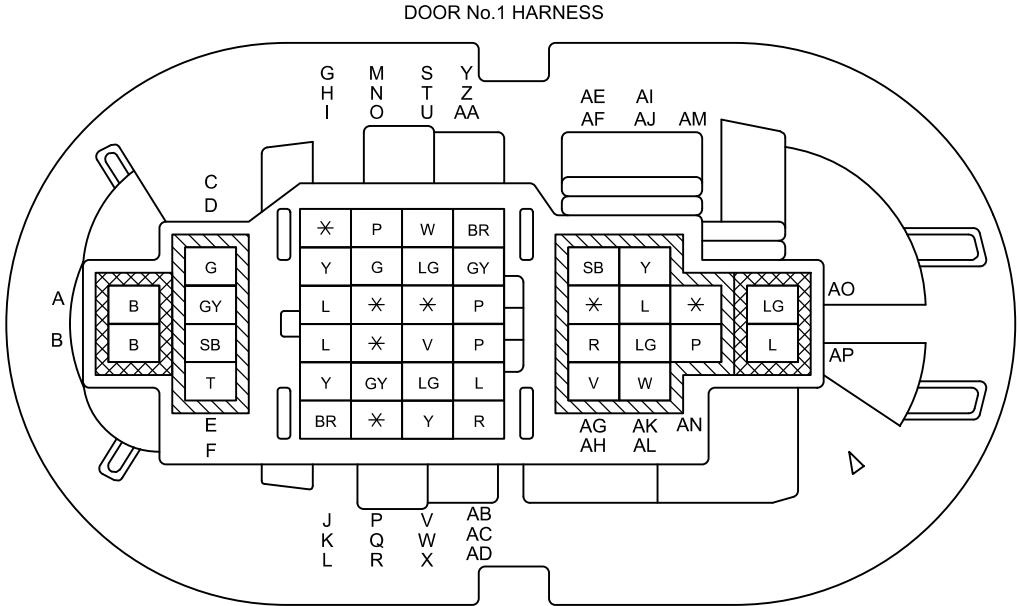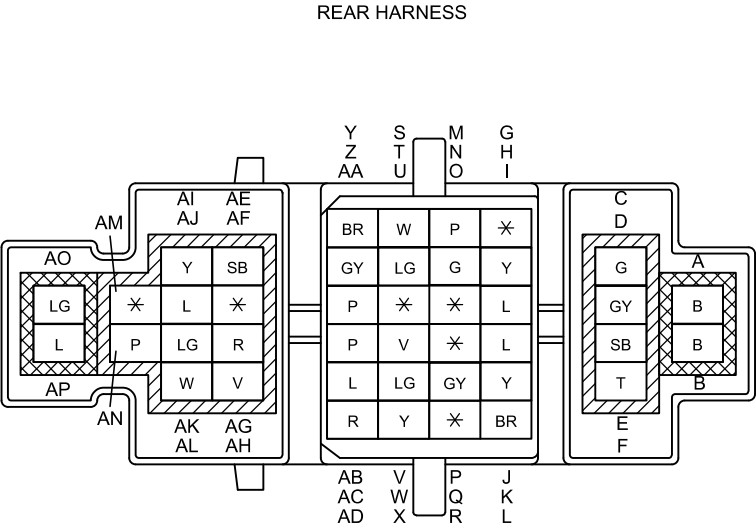


C-16
REAR HARNESS-DOOR No.2 HARNESS

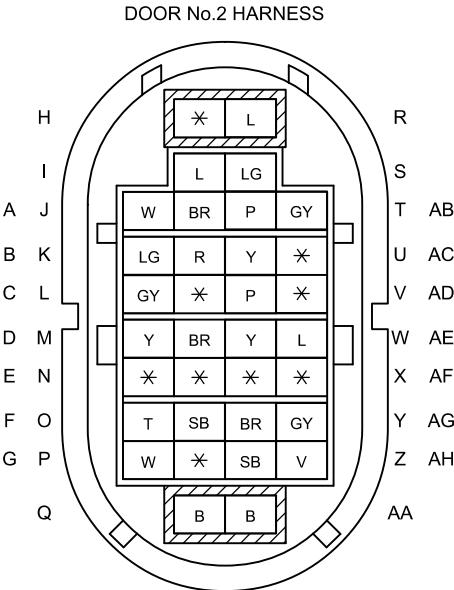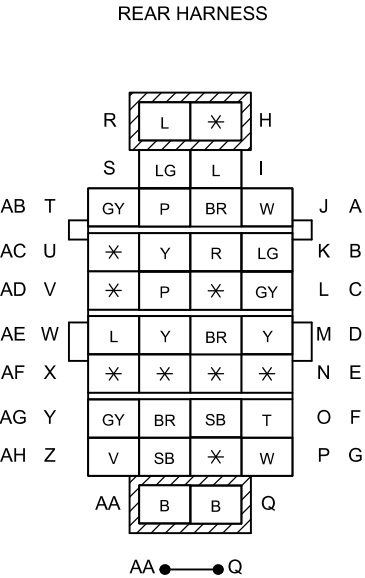


C-17
REAR HARNESS-DOOR No.4 HARNESS

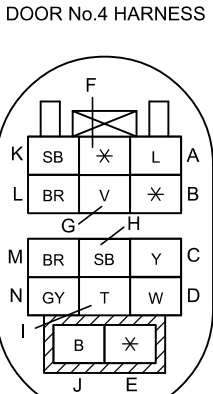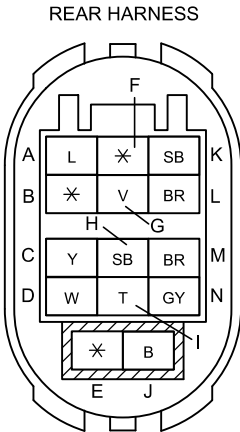


C-18
REAR HARNESS-DOOR No.3 HARNESS

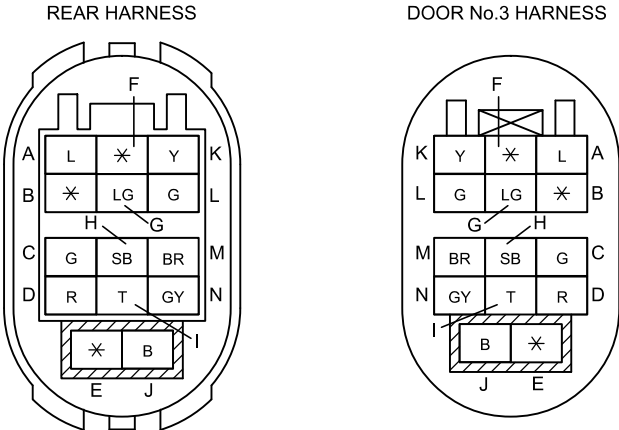


C-19
REAR HARNESS-SHORT CORD

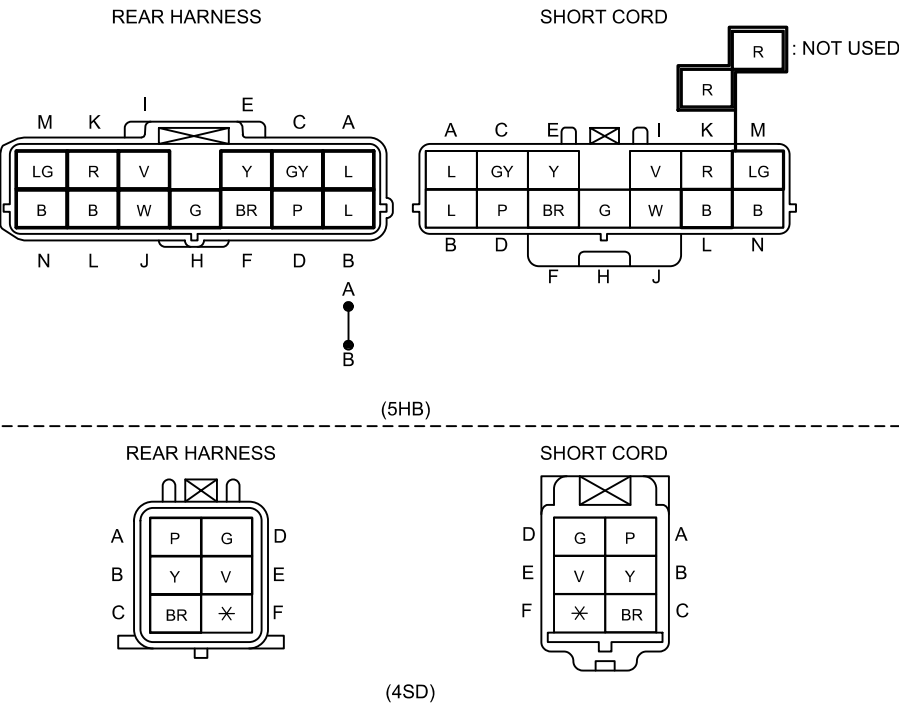


C-20
REAR HARNESS-SHORT CORD

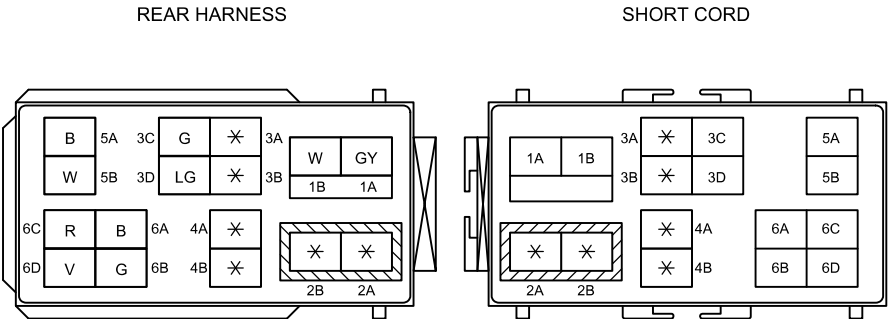


C-21
REAR HARNESS-SHORT CORD

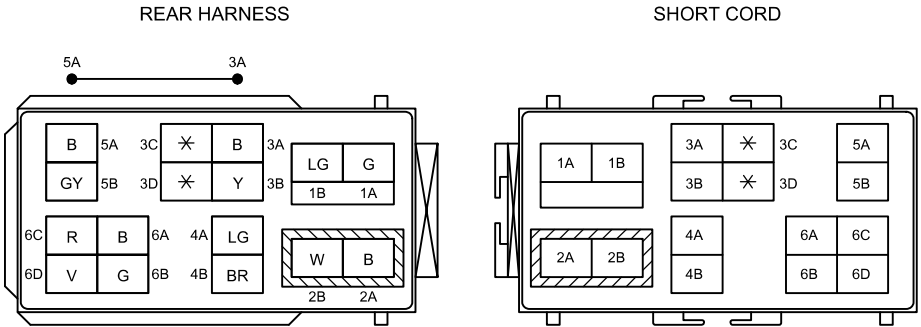


C-22
REAR HARNESS-SHORT CORD

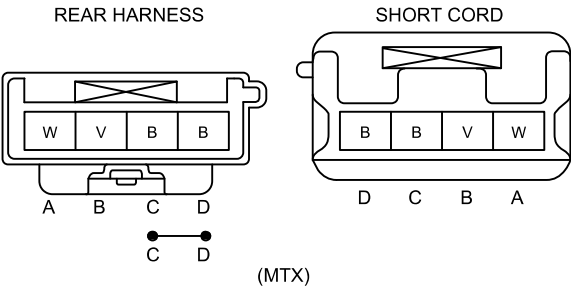


C-23
INTERIOR LIGHT No.2 HARNESS-SHORT CORD

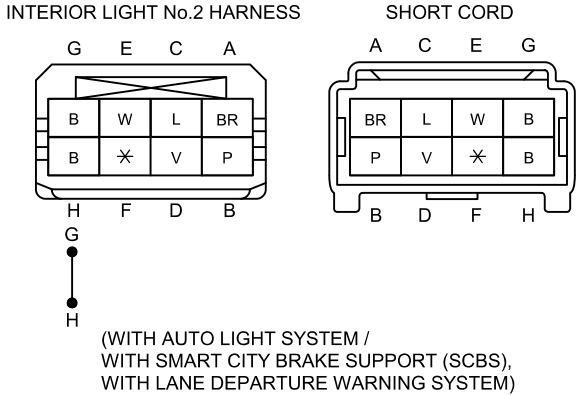


C-24
DOOR No.1 HARNESS-SHORT CORD

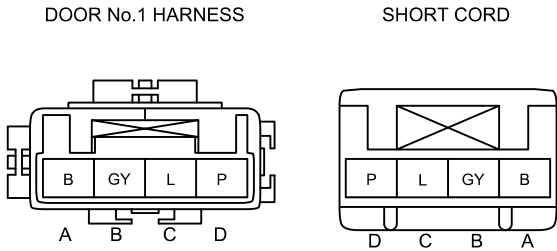


C-25
DOOR No.2 HARNESS-SHORT CORD

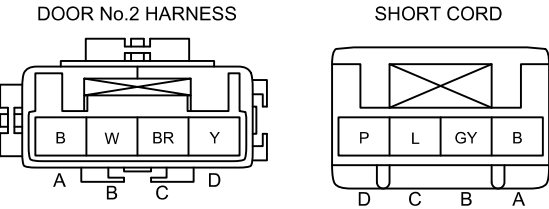


C-26
JOINT CONNECTOR

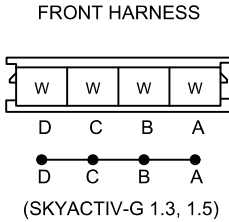


C-27
JOINT CONNECTOR

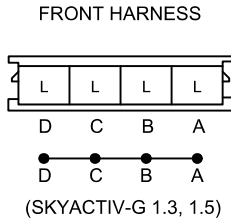


C-28
JOINT CONNECTOR

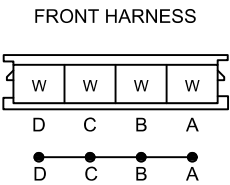


C-29
JOINT CONNECTOR

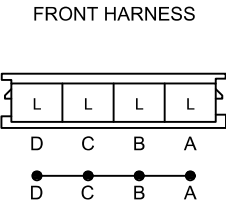


C-30
JOINT CONNECTOR

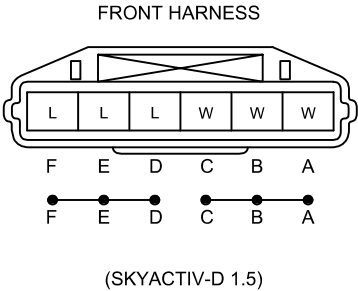

C-31
JOINT CONNECTOR

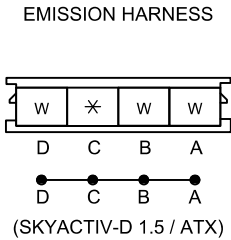


C-32
JOINT CONNECTOR

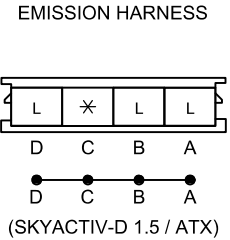


C-33
JOINT CONNECTOR

EMISSION HARNESS

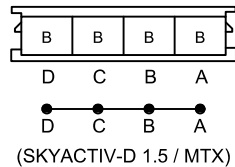


C-34
JOINT CONNECTOR

INSTRUMENT PANEL HARNESS

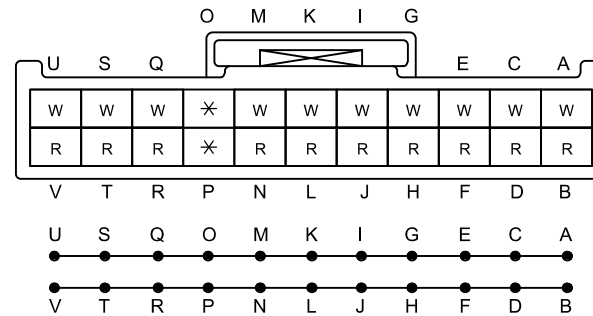


C-35
JOINT CONNECTOR

INSTRUMENT PANEL HARNESS

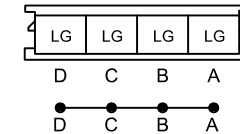


C-36
JOINT CONNECTOR

INSTRUMENT PANEL HARNESS

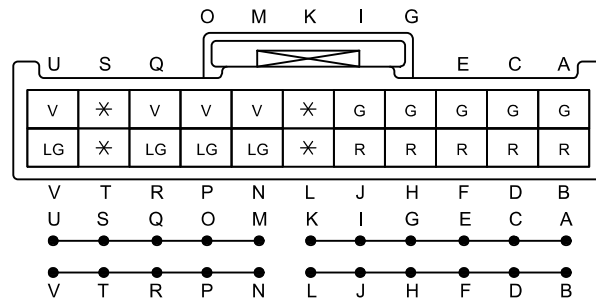


C-37
JOINT CONNECTOR

INSTRUMENT PANEL HARNESS

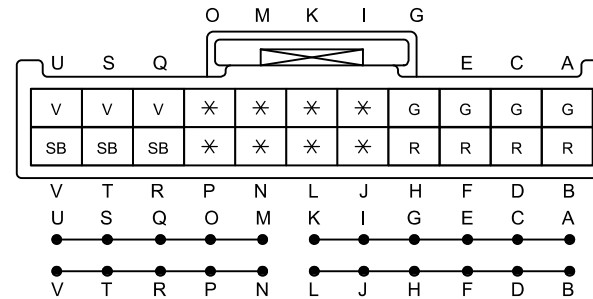


C-38
JOINT CONNECTOR

INSTRUMENT PANEL HARNESS

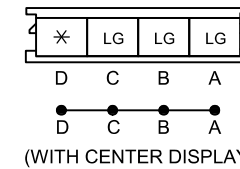


C-39
JOINT CONNECTOR

INSTRUMENT PANEL HARNESS

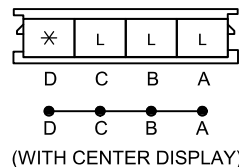


C-40
JOINT CONNECTOR

INSTRUMENT PANEL HARNESS

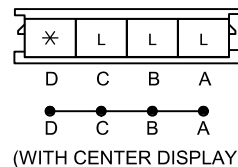


C-41
JOINT CONNECTOR

INSTRUMENT PANEL HARNESS

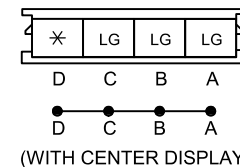

C-42
JOINT CONNECTOR

INSTRUMENT PANEL HARNESS

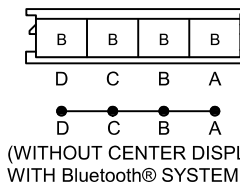

C-43 JOINT CONNECTOR INSTRUMENT PANEL HARNESS B B B B D C B A D C B A (WITHOUT CENTER DISPLAY)	C-44 JOINT CONNECTOR INSTRUMENT PANEL HARNESS M K I G E C A B B B * * * B B B B * B B B N L J H F D B M K I G E C A N L J H F D B (WITH CENTER DISPLAY)	C-45 JOINT CONNECTOR REAR HARNESS O M K I G U S Q E C A * P P P R R R BR BR BR BR G G G G L L L * Y Y Y V T R P N L J H F D B U S Q O M K I G E C A V T R P N L J H F D B V T R P N L J H F D B	
C-46 JOINT CONNECTOR REAR HARNESS * * V V D C B A D C B A (WITH BLIND SPOT MONITORING (BSM) SYSTEM)	C-47 JOINT CONNECTOR REAR HARNESS * * LG LG D C B A D C B A (WITH BLIND SPOT MONITORING (BSM) SYSTEM)	C-48 JOINT CONNECTOR REAR HARNESS * V V V D C B A D C B A (WITH BLIND SPOT MONITORING (BSM) SYSTEM)	C-49 JOINT CONNECTOR REAR HARNESS * SB SB SB D C B A D C B A (WITH BLIND SPOT MONITORING (BSM) SYSTEM)
C-50 JOINT CONNECTOR REAR HARNESS * L L L D C B A D C B A	C-51 JOINT CONNECTOR INTERIOR LIGHT No.2 HARNESS G W W W D C B A D C B A	C-52 JOINT CONNECTOR INTERIOR LIGHT No.2 HARNESS R L L L D C B A D C B A	
C-53 INSTRUMENT PANEL HARNESS-SHORT CORD INSTRUMENT PANEL HARNESS SHORT CORD BR R W B B E D C B A A B C D E (WITHOUT CENTER DISPLAY)	C-54 INSTRUMENT PANEL HARNESS-SHORT CORD INSTRUMENT PANEL HARNESS SHORT CORD G P * B D C B A B * Y L A B C D (WITH CENTER DISPLAY)	C-57 JOINT CONNECTOR FRONT HARNESS V V V V D C B A D C B A	