 


0140-101A
PCM

00C-1




F	F	F	F	F	F	F
F	F	F	F	F	F	F
1EE	1EA	1DW	1DS	1DO	1DK	1DG
1EF	1EB	1DX	1DT	1DP	1DL	1DH

F	F	F	F	F	F	F	F
F	F	F	F	F	F	F	F
1DA	1CW	1CS	1CO	1CK	1CG	1CC	1BY
1DB	1CX	1CT	1CP	1CL	1CH	1CD	1BZ

T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T
1BR	1BM	1BH	1BC	1AX	1AS	1AN	1AI
1BS	1BN	1BI	1BD	1AY	1AT	1AO	1AJ

T	T	T	T	T	T	T
T	T	T	T	T	T	T
1AD	1Y	1T	1O	1J	1E	1A
1AE	1Z	1U	1P	1K	1F	1B

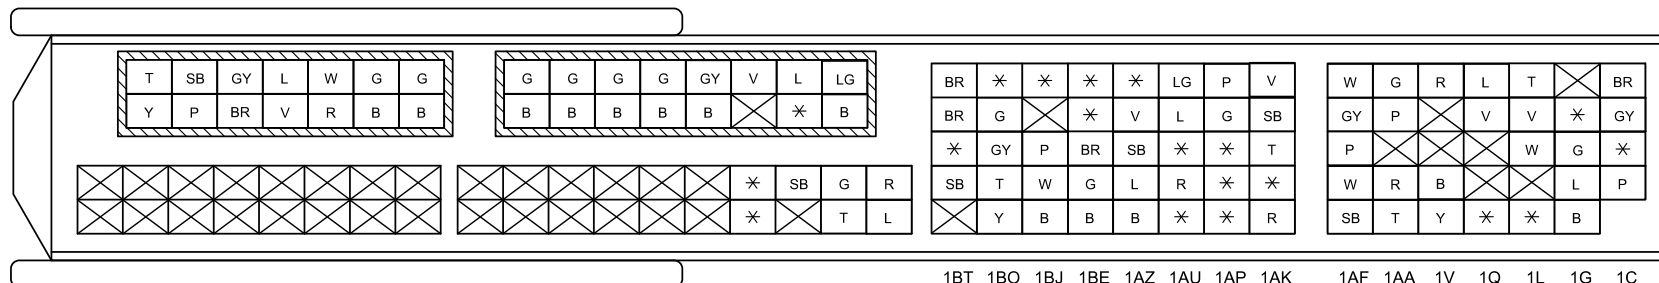

1EI	1EG	1EC	1DY	1DU	1DQ	1DM	1DI
1EJ	1EH	1ED	1DZ	1DV	1DR	1DN	1D.
T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T

[illegible]


1BT	1BO	1BJ	1BE	1AZ	1AU	1AP	1AK
1BU	1BP	1BK	1BF	1BA	1AV	1AQ	1AL
1BV	1BQ	1BL	1BG	1BB	1AW	1AR	1AM
T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T

1AF	1AA	1V	1Q	1L	1G	1C
1AG	1AB	1W	1R	1M	1H	1D
1AH	1AC	1X	1S	1N	1I	
T	T	T	T	T	T	T
T	T	T	T	T	T	T
T	T	T	T	T	T	

0140-101B
PCM

T	T	T	T	T
T	T	T	T	T
2BE	2AZ	2AU	2AP	2AK
2BF	2BA	2AV	2AQ	2AL

F	F	F	F	F	F	F	F
F	F	F	F	F	F	F	F
2AE	2AA	2W	2S	2O	2K	2G	2C
2AF	2AB	2X	2T	2P	2L	2H	2D


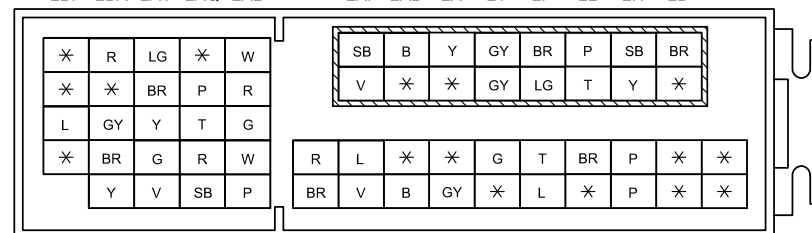


2BG	2BB	2AW	2AR	2AM
2BH	2BC	2AX	2AS	2AN
	2BD	2AY	2AT	2AO
T	T	T	T	T
T	T	T	T	T
	T	T	T	T

[illegible]


0140-201A
PCM

00C-2

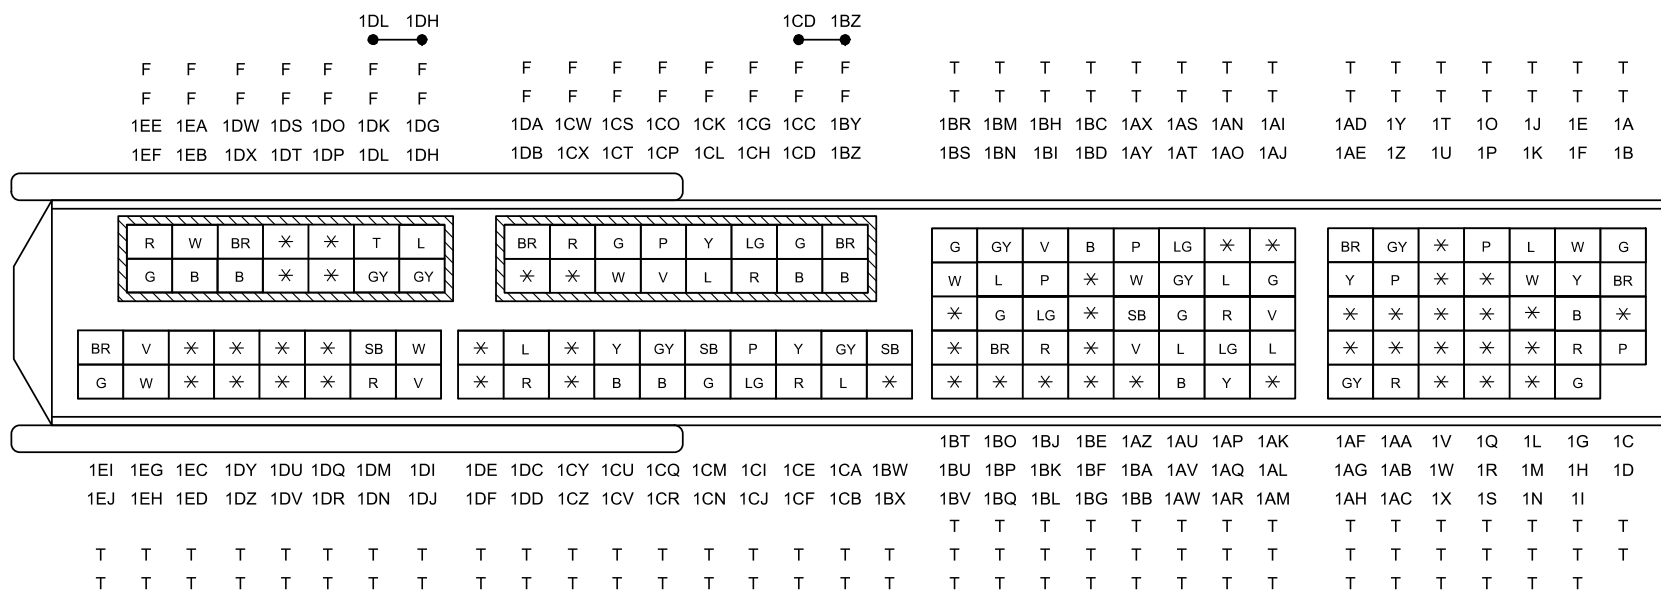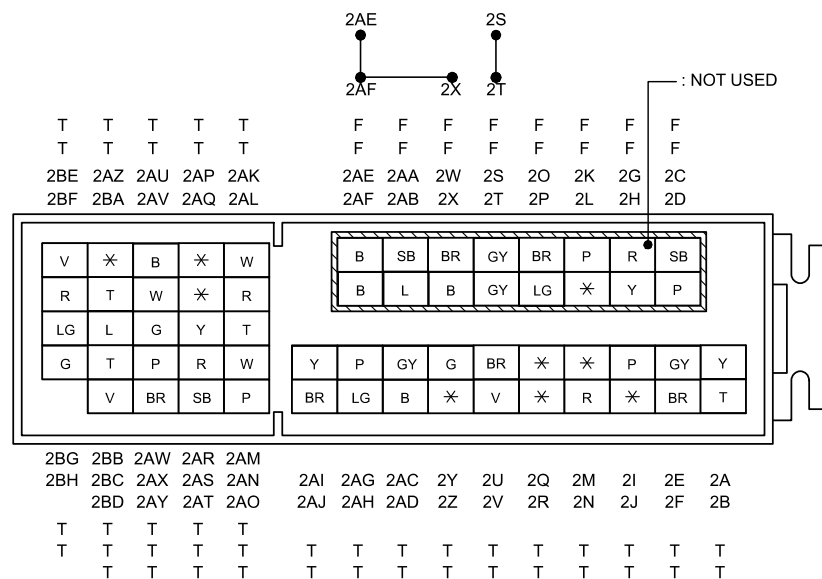0140-201B
PCM


0140-301A
PCM

R	Q	Q	Q	Q	Q	Q	Q	Q	Q	Q	Q	R
R	Q	Q	Q	Q	Q	Q	Q	Q	Q	Q	Q	R
R	Q	Q	Q	Q	Q	Q	Q	Q	Q	Q	Q	R
1BI	1BD	1AY	1AT	1AO	1AJ	1AE	1Z	1U	1P	1K	1F	1A
1BJ	1BE	1AZ	1AU	1AP	1AK	1AF	1AA	1V	1Q	1L	1G	1B
1BK	1BF	1BA	1AQ	1AL	1AG	1AB	1W	1R	1M	1H	1C	

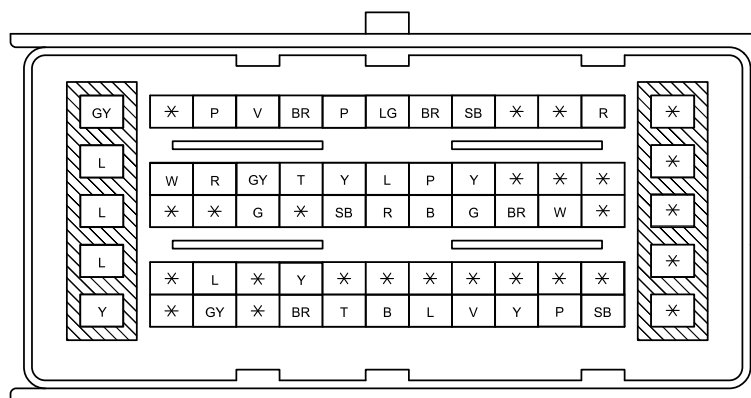[illegible]

0140-301B
PCM

R	Q	Q	Q	Q	Q	Q	Q	Q	Q	Q	R	
R	Q	Q	Q	Q	Q	Q	Q	Q	Q	Q	R	
R	Q	Q	Q	Q	Q	Q	Q	Q	Q	Q	R	
2BI	2BD	2AY	2AT	2AO	2AJ	2AE	2Z	2U	2P	2K	2F	2A
2BJ	2BE	2AZ	2AU	2AP	2AK	2AF	2AA	2V	2Q	2L	2G	2B
2BK	2BF	2BA	2AV	2AQ	2AL	2AG	2AB	2W	2R	2M	2H	2C

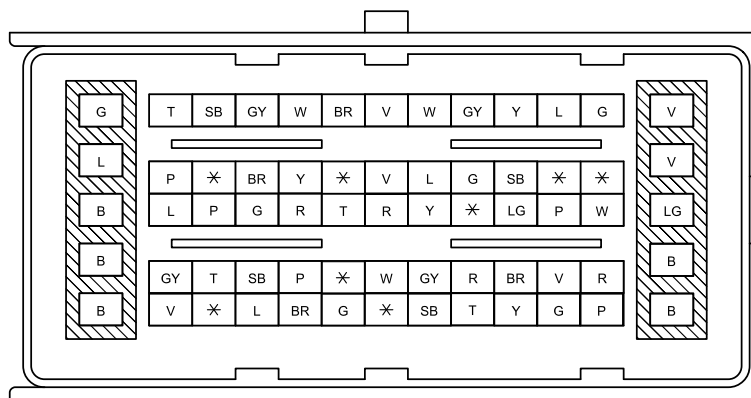[illegible]

0140-401A
PCM

0140-401A
PCM





F	F	F	F	F	F	F
F	F	F	F	F	F	F
1EE	1EA	1DW	1DS	1DO	1DK	1DG
1EF	1EB	1DX	1DT	1DP	1DL	1DH

F	F	F	F	F	F	F	F
F	F	F	F	F	F	F	F
1DA	1CW	1CS	1CO	1CK	1CG	1CC	1BY
1DB	1CX	1CT	1CP	1CL	1CH	1CD	1BZ

T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T
1BR	1BM	1BH	1BC	1AX	1AS	1AN	1AI
1BS	1BN	1BI	1BD	1AY	1AT	1AO	1AJ

T	T	T	T	T	T	T
T	T	T	T	T	T	T
1AD	1Y	1T	1O	1J	1E	1A
1AE	1Z	1U	1P	1K	1F	1B

  

T	W	V	B	P	LG	R	V
✱	✱	Y	✱	BR	✱	P	LG
R	G	P	W	G	R	W	SB
P	BR	R	L	GY	V	LG	G
V	L	LG	GY	B	W	SB	W

LG	✖	✖	✖	L	W	G
✖	✖	✖	P	W	Y	BR
R	V	✖	SB	B	BR	GY
W	SB	W	✖	✖	R	Y
B	P	Y	✖	Y	G	

✖	✖	B	B	✖	B	✖	✖
L	✖	✖	G	L	✖	✖	✖


✖	✖	L	Y	SB	✖	P	GY	V	SB
B	✖	R	B	GY	R	LG	R	L	W

1EI	1EG	1EC	1DY	1DU	1DQ	1DM	1DI
1EJ	1EH	1ED	1DZ	1DV	1DR	1DN	1DJ
T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T

[illegible]


1BT	1BO	1BJ	1BE	1AZ	1AU	1AP	1AK
1BU	1BP	1BK	1BF	1BA	1AV	1AQ	1AL
1BV	1BQ	1BL	1BG	1BB	1AW	1AR	1AM
T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T

1AF	1AA	1V	1Q	1L	1G	1C
1AG	1AB	1W	1R	1M	1H	1D
1AH	1AC	1X	1S	1N	1I	
T	T	T	T	T	T	T
T	T	T	T	T	T	T
T	T	T	T	T	T	

 0140-401B
PCM0140-401B
PCM

T	T	T	T	T
T	T	T	T	T
2BE	2AZ	2AU	2AP	2AK
2BF	2BA	2AV	2AQ	2AL

F	F	F	F	F	F	F	F
F	F	F	F	F	F	F	F
2AE	2AA	2W	2S	2O	2K	2G	2C
2AF	2AB	2X	2T	2P	2L	2H	2D


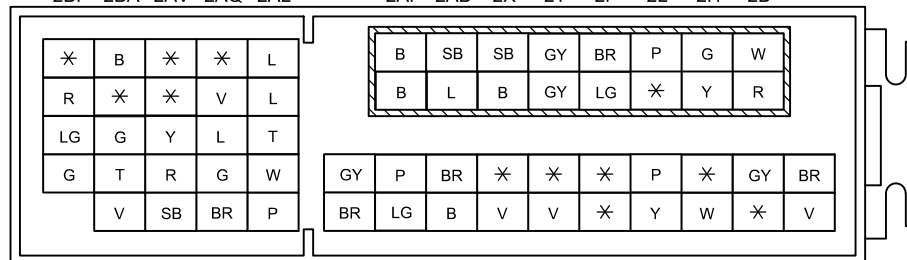


2BG	2BB	2AW	2AR	2AM
2BH	2BC	2AX	2AS	2AN
	2BD	2AY	2AT	2AO


T	T	T	T	T
T	T	T	T	T
	T	T	T	T

[illegible]


C-01
FRONT HARNESS-EMISSION HARNESS

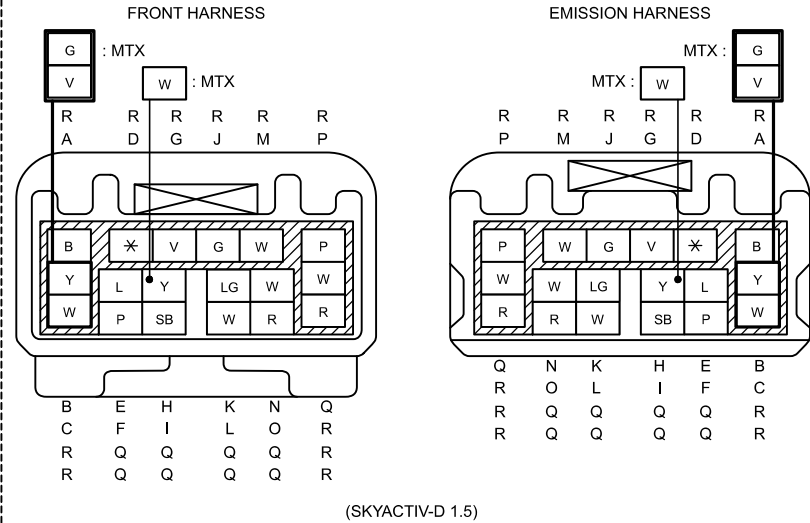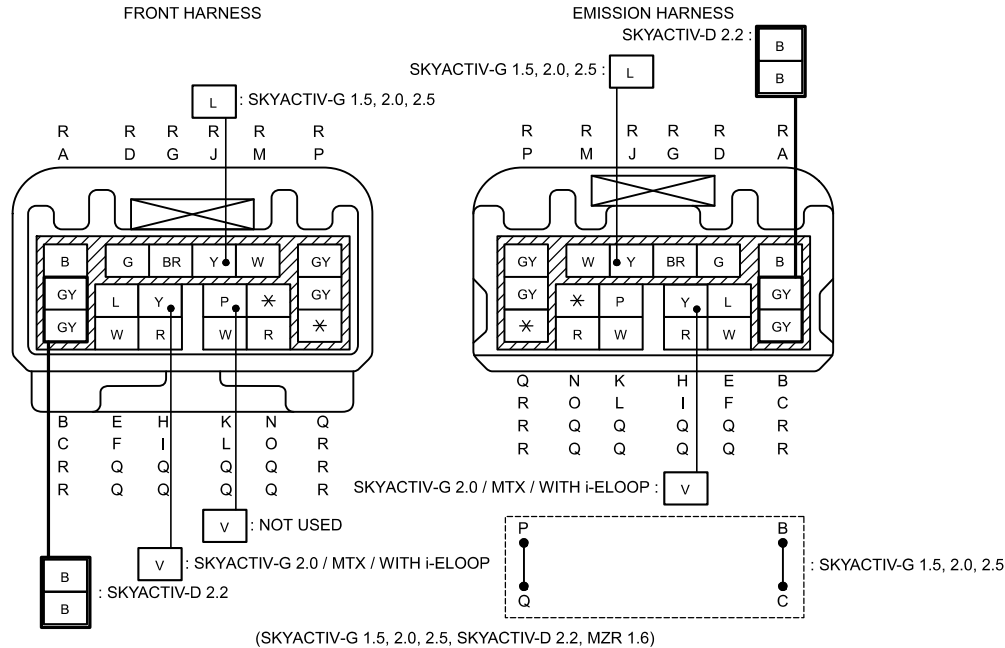


C-02
FRONT HARNESS-EMISSION HARNESS

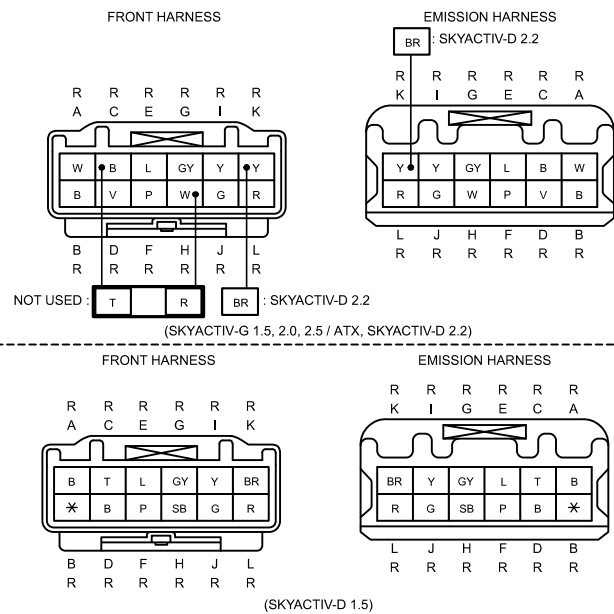

C-03
FRONT HARNESS-INSTRUMENT PANEL HARNESS




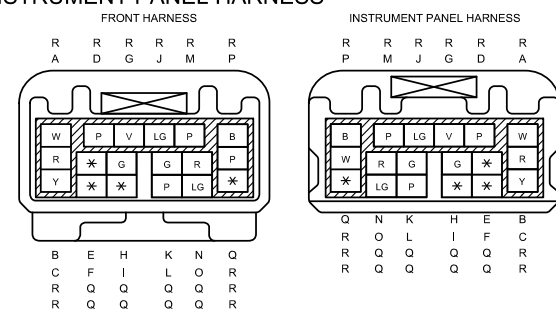


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

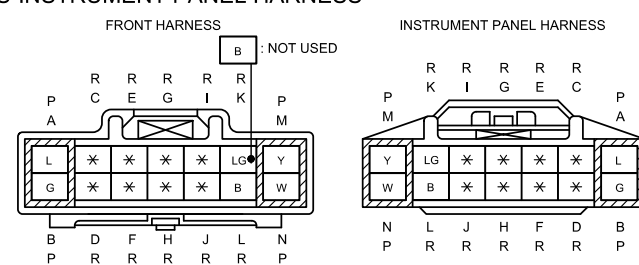



COMMON CONNECTOR LIST

00C-6

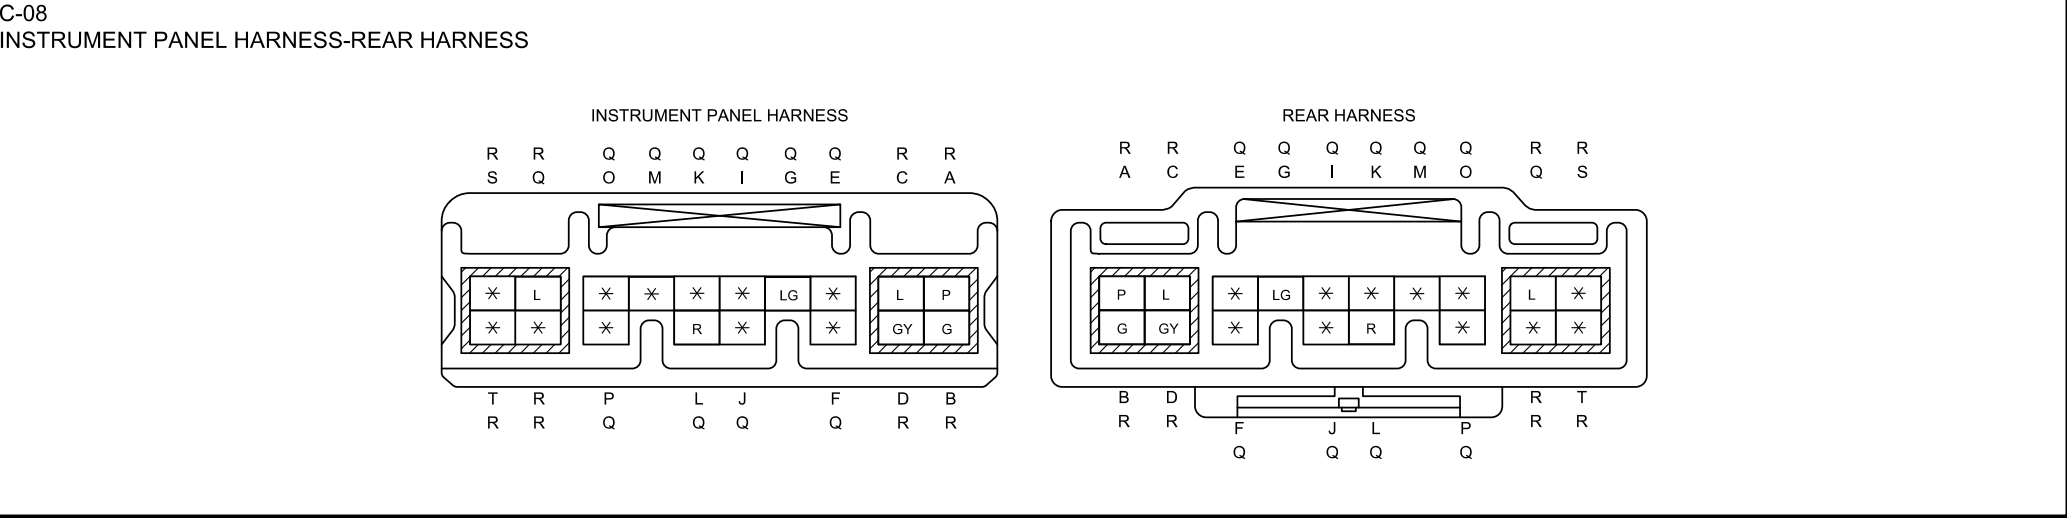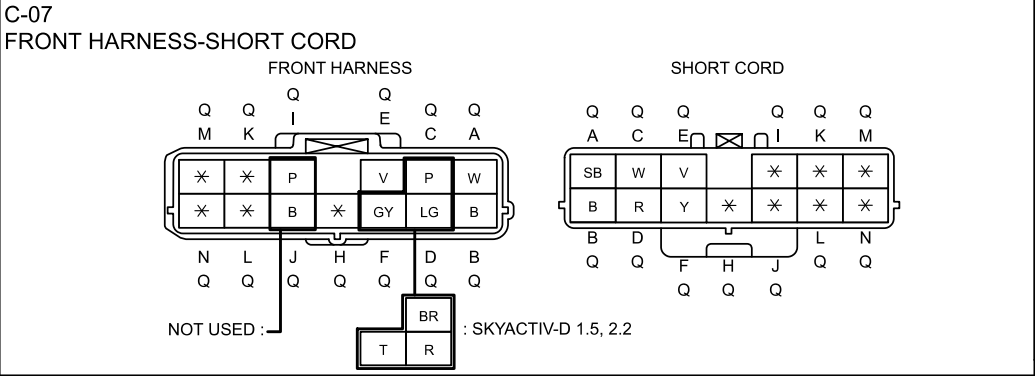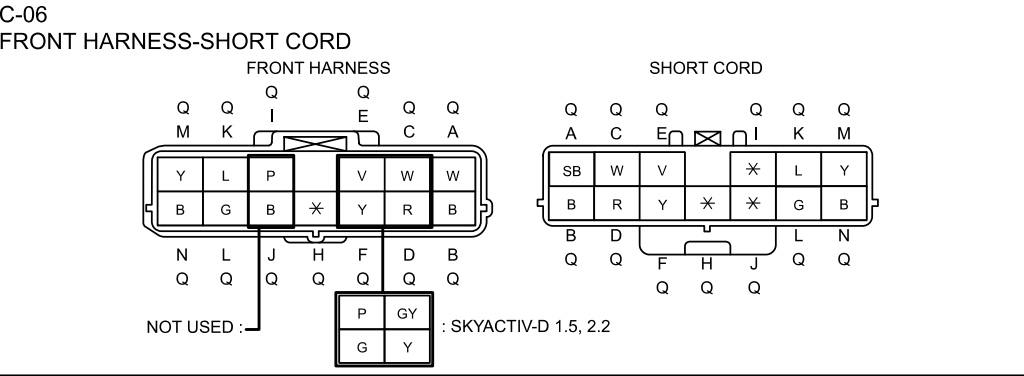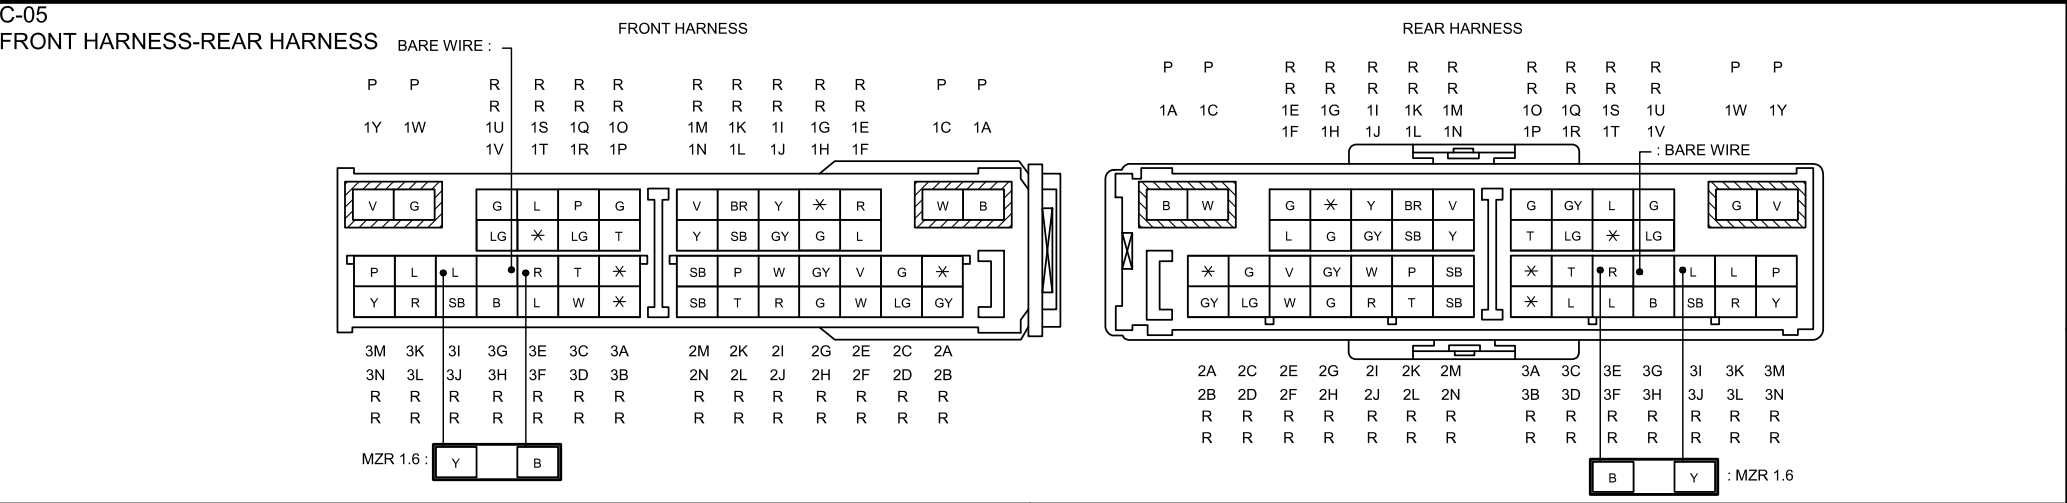



C-09

INSTRUMENT PANEL HARNESS-REAR HARNESS

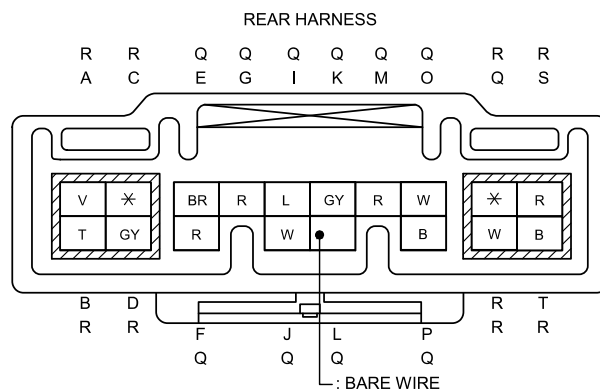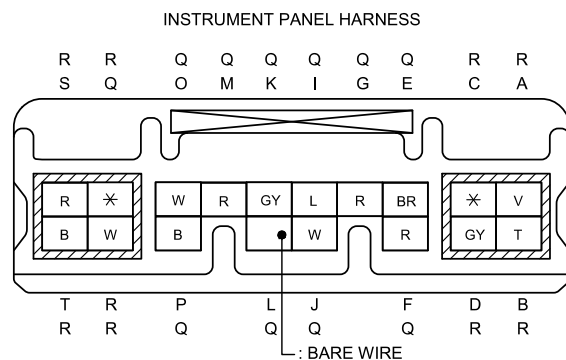



C-10

INSTRUMENT PANEL HARNESS-REAR HARNESS

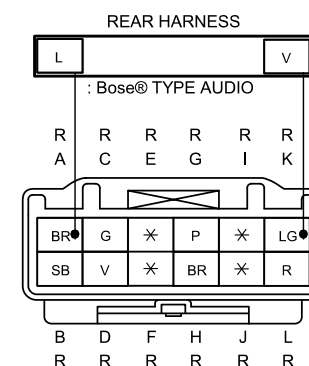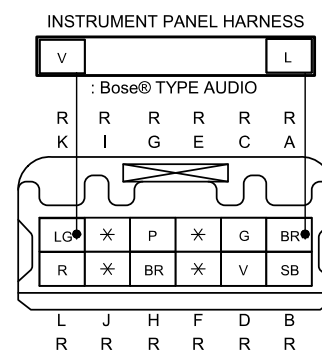

C-11



INSTRUMENT PANEL HARNESS-REAR HARNESS

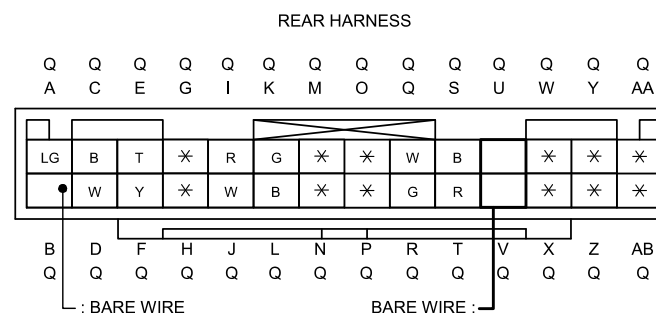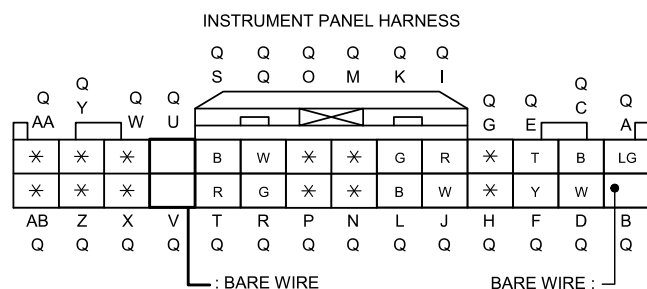

(Bose® TYPE AUDIO)



C-12

INSTRUMENT PANEL HARNESS-INTERIOR LIGHT No.2 HARNESS

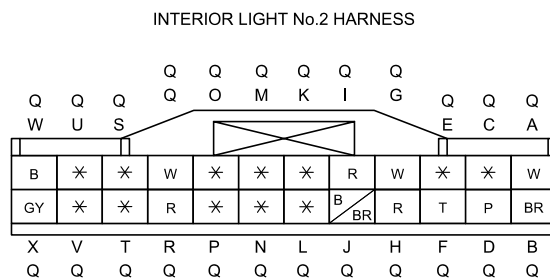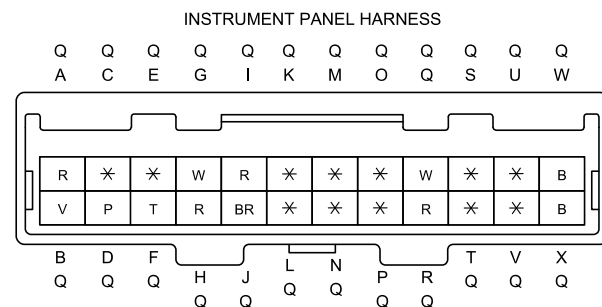

C-13

INSTRUMENT PANEL HARNESS-INTERIOR LIGHT No.2 HARNESS

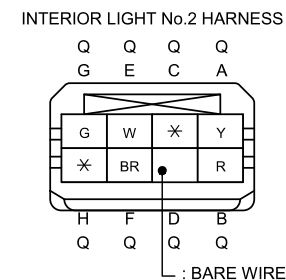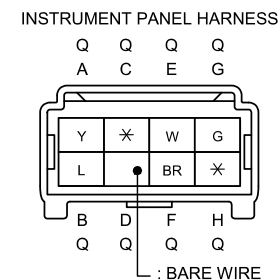


(WITH Bluetooth® SYSTEM)

COMMON CONNECTOR LIST


00C-8

C-14
INSTRUMENT PANEL HARNESS-SHORT CORD

INSTRUMENT PANEL HARNESS

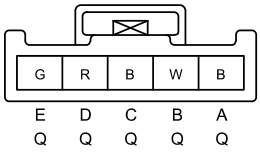


SHORT CORD

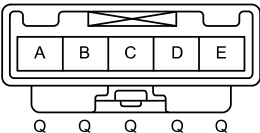


(WITHOUT CENTER DISPLAY)

C-15
INSTRUMENT PANEL HARNESS-SHORT CORD

INSTRUMENT PANEL HARNESS

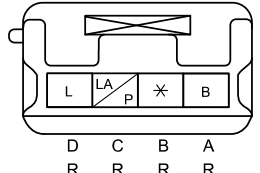


SHORT CORD

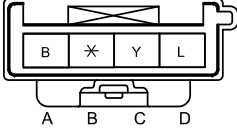


(WITH CENTER DISPLAY)

C-16
REAR HARNESS-REAR No.2 HARNESS

REAR HARNESS

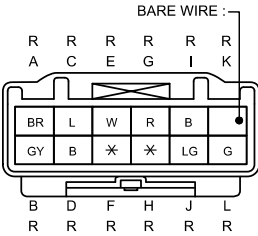


REAR No.2 HARNESS

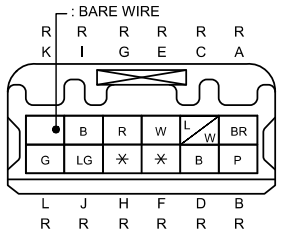


(4SD)

REAR HARNESS

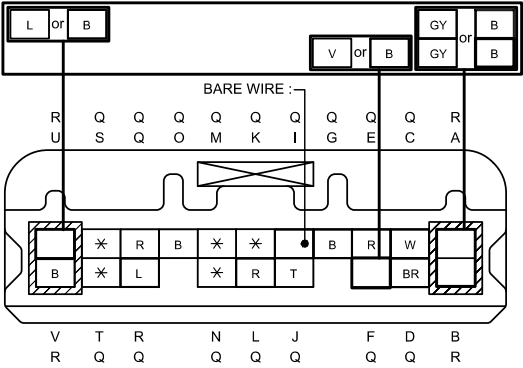

REAR No.2 HARNESS

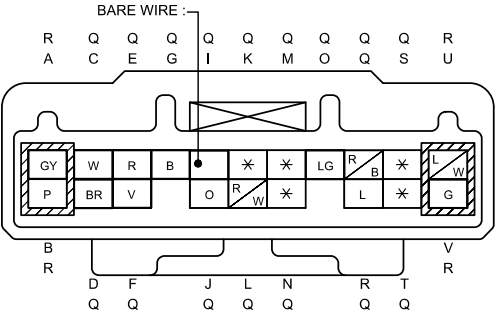


(5HB)


: There are 2 types of wire colors.

C-17
REAR HARNESS-REAR No.2 HARNESS

 REAR HARNESS




REAR No.2 HARNESS

 


(5HB)

C-18
REAR HARNESS-INTERIOR LIGHT HARNESS

REAR HARNESS

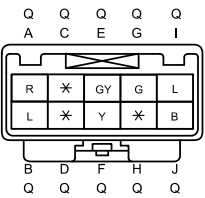


INTERIOR LIGHT HARNESS

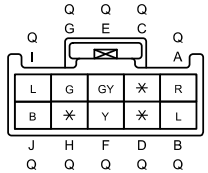


(4SD)

REAR HARNESS

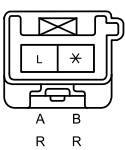

A B
R R

 INTERIOR LIGHT HARNESS




B A
R R


(5HB)

C-21
REAR HARNESS-DOOR No.2 HARNESS

C-22
REAR HARNESS-DOOR No.4 HARNESS

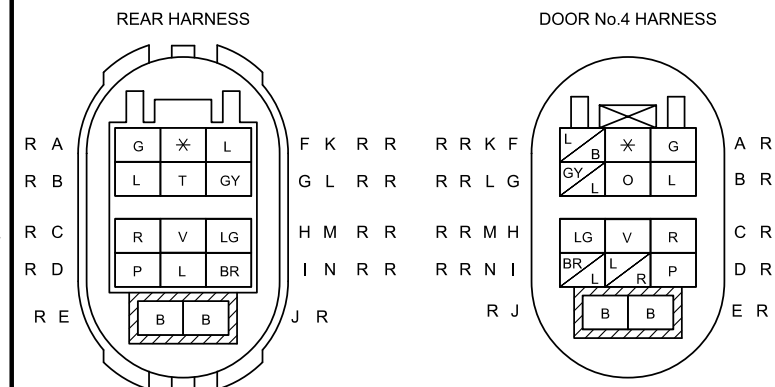


C-24
REAR HARNESS-SHORT CORD

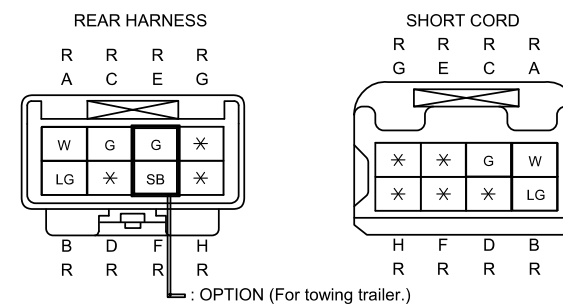


COMMON CONNECTOR LIST

00C-12




C-33
JOINT BOX No.2

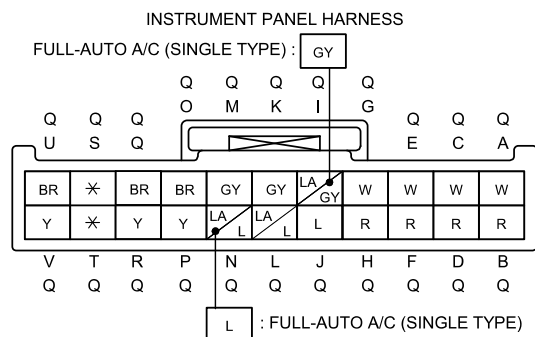



C-34
JOINT BOX No.2

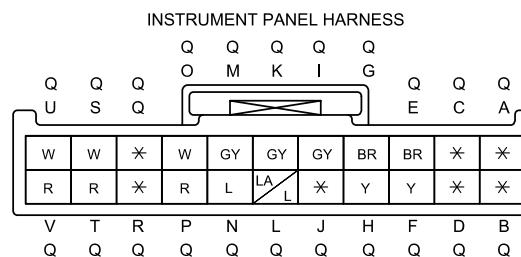


C-35
JOINT CONNECTOR

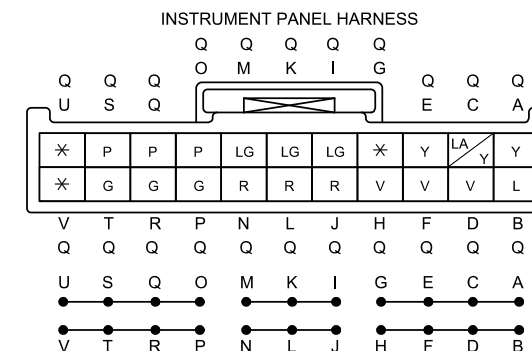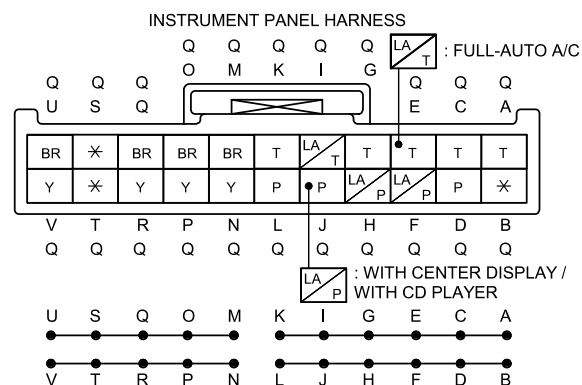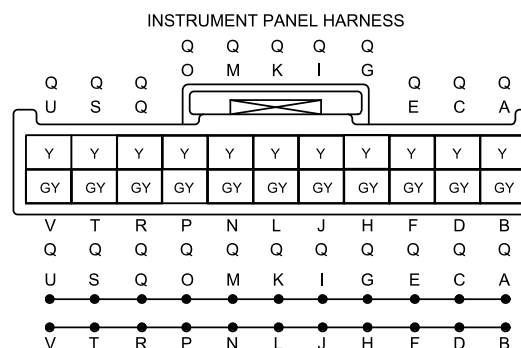C-36
JOINT CONNECTORC-37
JOINT CONNECTOR


C-38
JOINT CONNECTOR

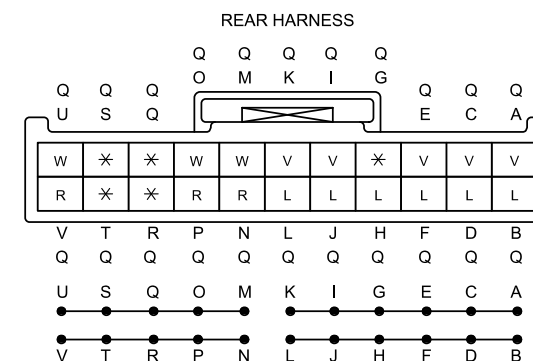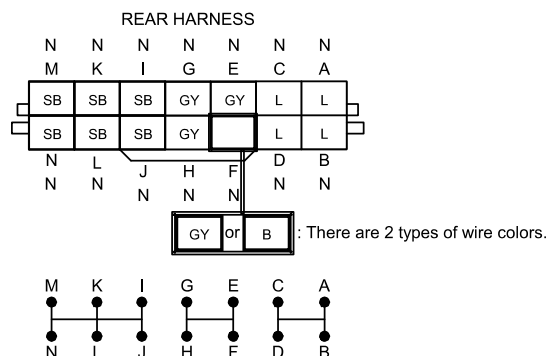C-39
JOINT CONNECTOR

C-40
JOINT CONNECTOR

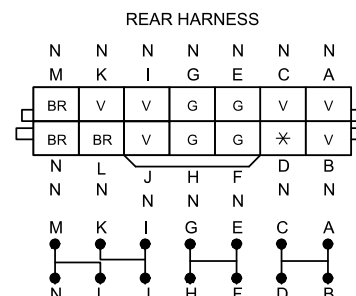

C-41
JOINT CONNECTOR

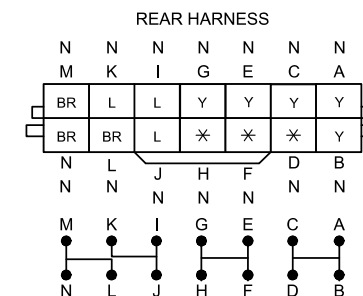

C-43
REAR HARNESS-SHORT CORD

REAR HARNESS

SHORT CORD

(5HB / Bose® TYPE AUDIO)

C-44
REAR HARNESS-SHORT CORD

REAR HARNESS

SHORT CORD

(5HB / Bose® TYPE AUDIO)

C-45
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

REAR HARNESS

(Bose® TYPE AUDIO)

C-47
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

EMISSION HARNESS

(SKYACTIV-D 1.5, 2.2)

C-48
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

REAR HARNESS

: TYPE FOR SUPPLYING POWER FROM BATTERY

C-49
REAR HARNESS-SHORT CORD

REAR HARNESS

SHORT CORD

(MTX)

C-51
JOINT BOX No.1

FRONT HARNESS

V : WITHOUT i-stop SYSTEM

Q Q Q Q Q Q Q Q Q
M K I G E C A
T Y * P Y R L
T BR R * GY R W
N L J H F D B
Q Q Q Q Q Q Q Q Q

C-52
JOINT BOX No.1

FRONT HARNESS

Q Q Q Q Q
O M K I G E C A
Q Q Q
U S Q
BR P T W Y * R L R * SB
BR P R W R GY LG SB Y Y
V T R P N L J H F D B
Q Q

L : NOT USED

C-53
JOINT BOX No.1

INSTRUMENT PANEL HARNESS

Q Q Q
U S E C A
R * P P Y
R Y W R P GY GY P P P Y
V T R P N L J H F D B
Q Q

C-54
JOINT BOX No.1

INSTRUMENT PANEL HARNESS

Q Q Q Q Q Q Q Q Q
O M K I G E C A
R * T Y P LG G SB Y
BR Y BR SB T L Y R SB
R P N L J H F D B
Q Q

C-55
JOINT BOX No.1

REAR HARNESS

Q Q Q
U S E C A
LG GY * W Y
SB W * L GY Y * SB T * R
V T R P N L J H F D B
Q Q


C-56
JOINT BOX No.1

REAR HARNESS

Q Q Q Q Q
O M K I G E C A
Q Q Q
U S Q
Y LG LG LG SB GY R W * * P
G GY * W T * * W Y *
V T R P N L J H F D B
Q Q


C-57

FRONT HARNESS-REAR HARNESS

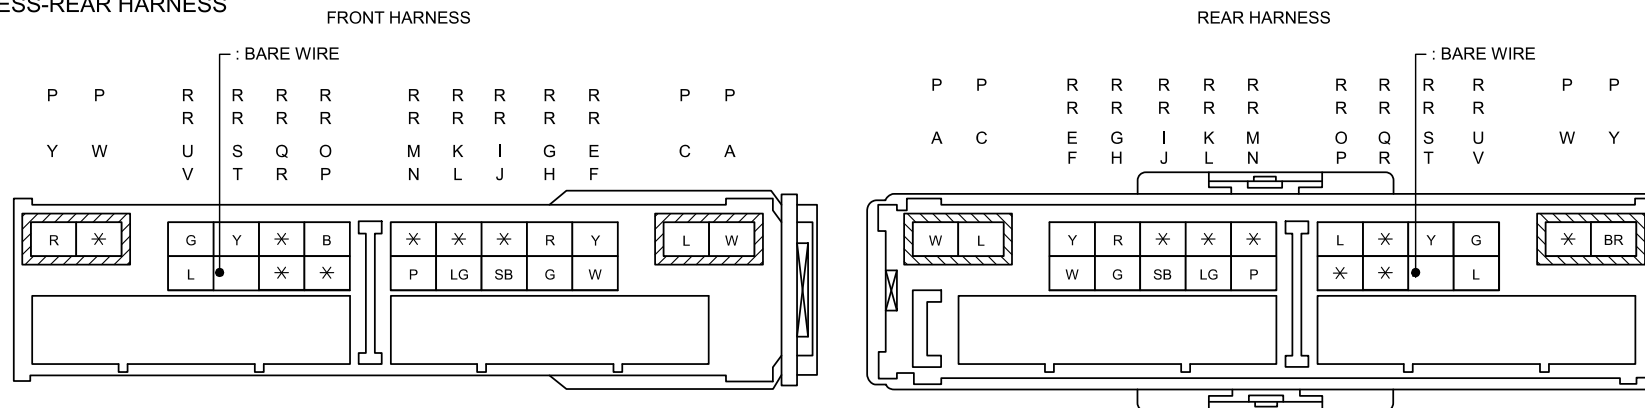


C-58

FRONT HARNESS-INSTRUMENT PANEL HARNESS

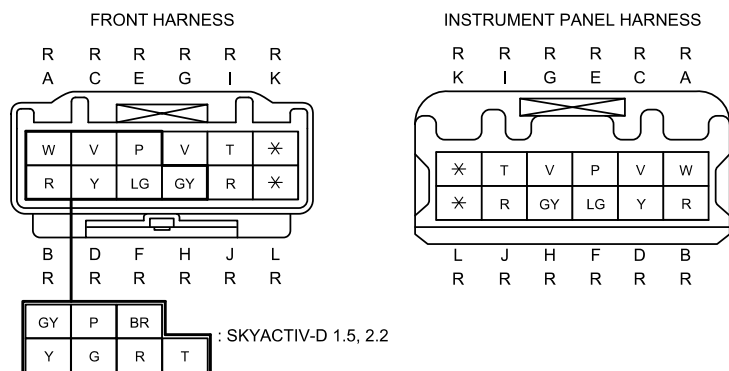


C-59

INSTRUMENT PANEL HARNESS-REAR HARNESS

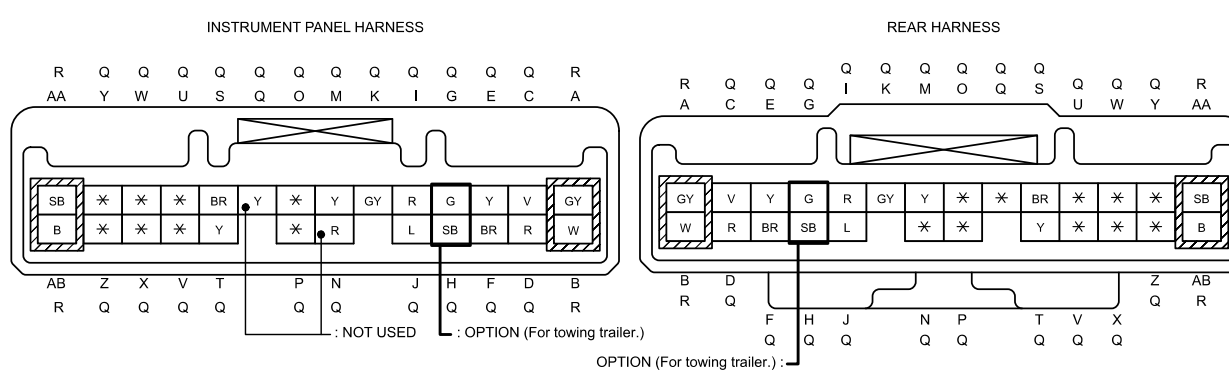


C-60

JOINT CONNECTOR

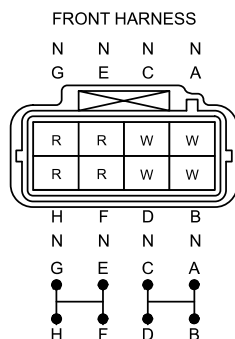

C-61

JOINT CONNECTOR

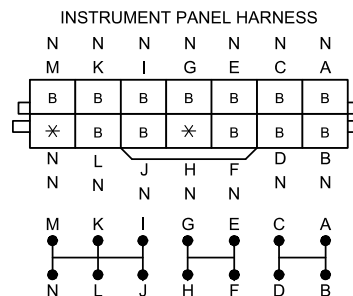

C-62

JOINT CONNECTOR

