

WARNING

Servicing a vehicle can be dangerous. If you have not received service-related training, the risks of injury, property damage, and failure of servicing increase. The recommended servicing procedures for the vehicle in this workshop manual were developed with Mazda-trained technicians in mind. This manual may be useful to non-Mazda trained technicians, but a technician with our service-related training and experience will be at less risk when performing service operations. However, all users of this manual are expected at least to know general safety procedures.

This manual contains “Warnings” and “Cautions” applicable to risks not normally encountered in a general technician’s experience. They should be followed to reduce the risk of injury and the risk that improper service or repair may damage the vehicle or render it unsafe. It is also important to understand that the “Warnings” and “Cautions” are not exhaustive. It is impossible to warn of all the hazardous consequences that might result from failure to follow the procedures.

The procedures recommended and described in this manual are effective methods of performing service and repair. Some require tools specifically designed for a specific purpose. Persons using procedures and tools which are not recommended by Mazda Motor Corporation must satisfy themselves thoroughly that neither personal safety nor safety of the vehicle will be jeopardized.

The contents of this manual, including drawings and specifications, are the latest available at the time of printing, and Mazda Motor Corporation reserves the right to change the vehicle designs and alter the contents of this manual without notice and without incurring obligation.

Parts should be replaced with genuine Mazda replacement parts or with parts which match the quality of genuine Mazda replacement parts. Persons using replacement parts of lesser quality than that of genuine Mazda replacement parts must satisfy themselves thoroughly that neither personal safety nor safety of the vehicle will be jeopardized.

Mazda Motor Corporation is not responsible for any problems which may arise from the use of this manual. The cause of such problems includes but is not limited to insufficient service-related training, use of improper tools, use of replacement parts of lesser quality than that of genuine Mazda replacement parts, or not being aware of any revision of this manual.

Mazda6

Wiring Diagram

FOREWORD

This wiring diagram incorporates the wiring schematics of the Mazda6 and available optional equipment. Actual vehicle wiring may vary slightly depending on optional equipment or local specifications, or both.

For proper repair and maintenance, a thorough familiarization with this manual is important, and it should always be kept in a handy place for quick and easy reference.

All the contents of this manual, including drawings and specifications, are the latest available at the time of printing.

As modifications affecting repair or maintenance occur, relevant information supplementary to this volume will be made available at Mazda dealers. This manual should be kept up-to-date.

Mazda Motor Corporation reserves the right to alter the specifications and contents of this manual without obligation or advance notice.

All rights reserved. No part of this book may be reproduced or used in any form or by any means, electronic or mechanical-including photocopying and recording and the use of any kind of information storage and retrieval system-without permission in writing.

Mazda Motor Corporation
HIROSHIMA, JAPAN

APPLICATION:

This manual is applicable to vehicles beginning with the Vehicle Identification Numbers (VIN) shown on the following page.

CONTENTS

TITLE	SECTION
GENERAL INFORMATION	00
ENGINE	01
SUSPENSION	02
DRIVELINE/AXLE	03
BRAKES	04
TRANSMISSION/ TRANSAXLE	05
STEERING	06
HEATER, VENTILATION & AIR CONDITIONING (HVAC)	07
RESTRAINTS	08
BODY & ACCESSORIES	09
ALPHABETICAL INDEX	AI

©2010 Mazda Motor Corporation
PRINTED IN AUSTRALIA. JANUARY 2010
5831-1A-10A

**VEHICLE IDENTIFICATION NUMBERS (VIN)
(CHASSIS NUMBERS)**

JM0 GH102200 200001-
JM0 GH105200 200001-
JM0 GH10F200 200001-

SYSTEM INDEX

00 GENERAL INFORMATION

R READING WIRING DIAGRAMS

VEHICLE IDENTIFICATION NUMBER (VIN) CODE	2
VEHICLE IDENTIFICATION NUMBERS (VIN)	3
CONTENTS OF WIRING DIAGRAMS	4
GROUND POINTS	5
SYSTEM CIRCUIT DIAGRAM/ CONNECTOR DIAGRAM	6
ROUTING DIAGRAM	8
HARNESS SYMBOLS	9
WIRING COLOR CODE	9
SYMBOLS	9
SERVICE WARNING AND CAUTION FOR VEHICLES WITH SRS AIR BAG SYSTEM	12
SERVICE WARNING FOR VEHICLES WITH DISCHARGE HEADLIGHTS	12
ABBREVIATIONS USED IN THIS MANUAL	12

P ELECTRICAL SYSTEM GENERAL PROCEDURES

POWER, GROUND & COMMON CONNECTOR

E ELECTRICAL WIRING SCHEMATIC	18
F FUSE BOX	22
C COMMON CONNECTOR LIST	26
G GROUND POINT	38

DATA LINK CONNECTOR

D DATA LINK CONNECTOR	44
-----------------------------	----

01 ENGINE

12 COOLING SYSTEM

MZR 2.0	52
MZR 2.5 / ATX, MZR-CD 2.2	56
MZR 2.5 / MTX	62

14 FUEL SYSTEM

17 CHARGING SYSTEM

MZR 2.0, MZR 2.5	70
MZR-CD 2.2	72

19 STARTING SYSTEM

20 CRUISE CONTROL SYSTEM

40 CONTROL SYSTEM

MZR 2.0, MZR 2.5	78
MZR-CD 2.2	104

04 BRAKES

15 DYNAMIC STABILITY CONTROL

05 TRANSMISSION/TRANSAXLE

17 AUTOMATIC TRANSAXLE

AUTOMATIC TRANSAXLE CONTROL SYSTEM	138
--	-----

18 AUTOMATIC TRANSAXLE SHIFT MECHANISM

KEY INTERLOCK SYSTEM	150
SHIFT-LOCK SYSTEM	150

06 STEERING

13 ELECTRIC POWER STEERING (EPS)

07 HEATER, VENTILATION & AIR CONDITIONING (HVAC)

40 CONTROL SYSTEM

HEATER AND AIR CONDITIONER SYSTEM MANUAL A/C	156
AUTO A/C	164
A/C COMPRESSOR CONTROL	174

08 RESTRAINTS

10 AIR BAG SYSTEM

AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION)	176
--	-----

09 BODY & ACCESSORIES

12 GLASS/WINDOWS/MIRRORS

REAR WINDOW DEFROSTER	186
POWER OUTER MIRROR	190
AUTO DIMMING MIRROR	194
POWER WINDOW SYSTEM	196

13 SEATS

MEMORY POWER SEAT	208
-------------------------	-----

14 SECURITY AND LOCKS

POWER DOOR LOCK SYSTEM	220
IMMOBILIZER SYSTEM	226
KEYLESS ENTRY SYSTEM	228
LIFTGATE AUTO CLOSURE SYSTEM	230

15 SUNROOF

18 LIGHTING SYSTEMS

HEADLIGHT	236
LICENSE PLATE LIGHT	244
PARKING LIGHT	244
TAILLIGHT	244
FOG LIGHT	248
TURN AND HAZARD WARNING LIGHT	252
BACK-UP LIGHT	256
BRAKE LIGHT	260
HIGH-MOUNT BRAKE LIGHT	260
INTERIOR LIGHT	266
MAP LIGHT	266
TRUNK COMPARTMENT LIGHT	268
CARGO COMPARTMENT LIGHT	270
COURTESY LIGHT	272
VANITY MIRROR ILLUMINATION	272
HEADLIGHT AUTO LEVELING SYSTEM	274
AFS (ADAPTIVE FRONT LIGHTING SYSTEM)	274
ILLUMINATION LIGHT	280
STEERING ANGLE SENSOR	288

19 WIPER/WASHER SYSTEM

WINDSHIELD WIPER AND WASHER	290
REAR WIPER AND WASHER	294
HEADLIGHT CLEANER	296

20 ENTERTAINMENT

ACCESSORY SOCKET	298
AUDIO SYSTEM WITHOUT Bose® TYPE AUDIO	300
WITH Bose® TYPE AUDIO	312
Bluetooth SYSTEM	332
CAR-NAVIGATION SYSTEM	340

21 POWER SYSTEM

22 INSTRUMENTATION/DRIVER INFO.

INSTRUMENT CLUSTER	346
HORN	364
INFORMATION DISPLAY	366
PARKING SENSOR SYSTEM	370

40 CONTROL SYSTEM

BCM (BODY CONTROL MODULE)	380
---------------------------------	-----

AI ALPHABETICAL INDEX


ALPHABETICAL INDEX	422
--------------------------	-----

Two digits (section ID) indicated in front of each title are commonly used with the Workshop Manual.

00R

Reading Wiring Diagrams

VEHICLE IDENTIFICATION NUMBER (VIN) CODE

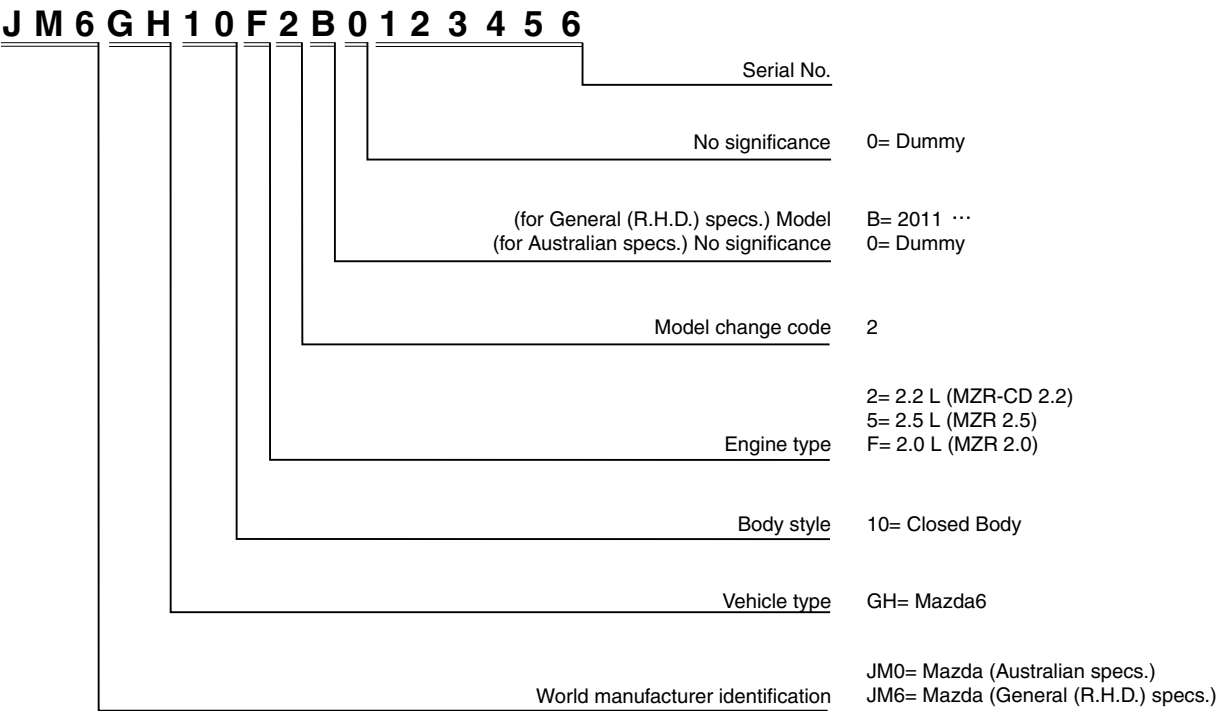


VEHICLE IDENTIFICATION NUMBERS (VIN)

JM0 GH102200 200001-
JM0 GH105200 200001-
JM0 GH10F200 200001-

CONTENTS OF WIRING DIAGRAMS

- This manual comprises the sections shown below.

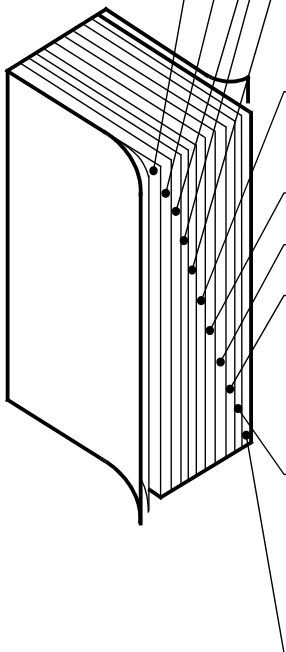
	GENERAL INFORMATION	R	Reading wiring diagrams	A how-to on using and reading wiring diagrams, using test equipment, checking harness and connectors, and finding trouble spots
		P	Electrical system general procedures	
		E	Electrical wiring schematic	Shows main fuses and other fuses for each system
		00	F Fuse box complete wiring system	Shows internal circuits and connectors
		J	Joint box/Junction box complete wiring system	
		C	Common connector list	Shows connectors common throughout system
		G	Ground point	Ground routes from and to the battery
		D	Data link connector	
	ENGINE	01	12 Cooling system 14 Fuel system 17 Charging system 18 Ignition system 19 Starting system 20 Cruise control system 40 Control system	Shows circuit and connector diagrams and component and connector location diagrams
	SUSPENSION	02	12 Wheel and tires	
	DRIVELINE/AXLE	03	18 4-Wheel drive	
	BRAKES	04	13 Antilock brake system	
			14 Traction control system	
			15 Dynamic stability control	
			18 Dynamic stability control/ Roll stability control	
	TRANSMISSION/TRANSAXLE	05	13 Automatic transmission	
			14 Automatic transmission shift mechanism	
			17 Automatic transaxle	
			18 Automatic transaxle shift mechanism	
	STEERING	06	13 Electric power steering (EPS) 14 Power steering	
	HEATER, VENTILATION & AIR CONDITIONING (HVAC)	07	40 Control system	
	RESTRAINTS	08	10 Air bag system	
			11 Seat belt	
	BODY & ACCESSORIES	09	12 Glass/Windows/Mirrors	
			13 Seats	
			14 Security and locks	
			15 Sunroof	
			16 Exterior trim	
			18 Lighting systems	
			19 Wiper/Washer system	
			20 Entertainment	
			21 Power systems	
		22	Instrumentation/Driver info.	
		40	Control system	
	AI		Alphabetical Index	Gives page number of circuit diagram for each component

Depending on the vehicle model, the actual sections may be different.

00R



- This shows ground points of the harness.

00G-a

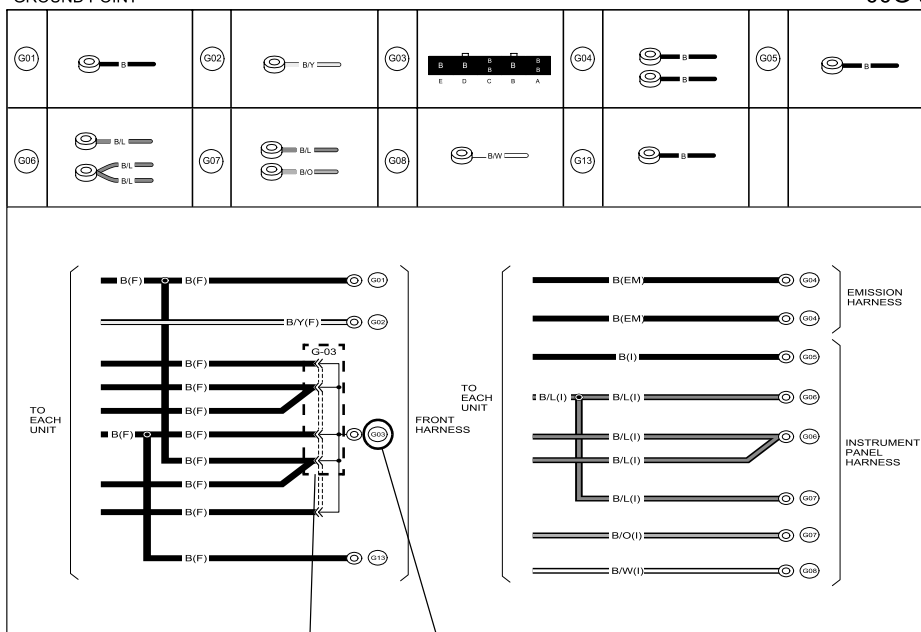


On vehicle

To circuit

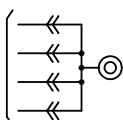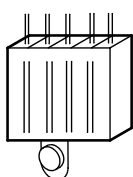

The ground connection numbers in system circuit diagrams correspond to those in the ground point diagram.

0918-2

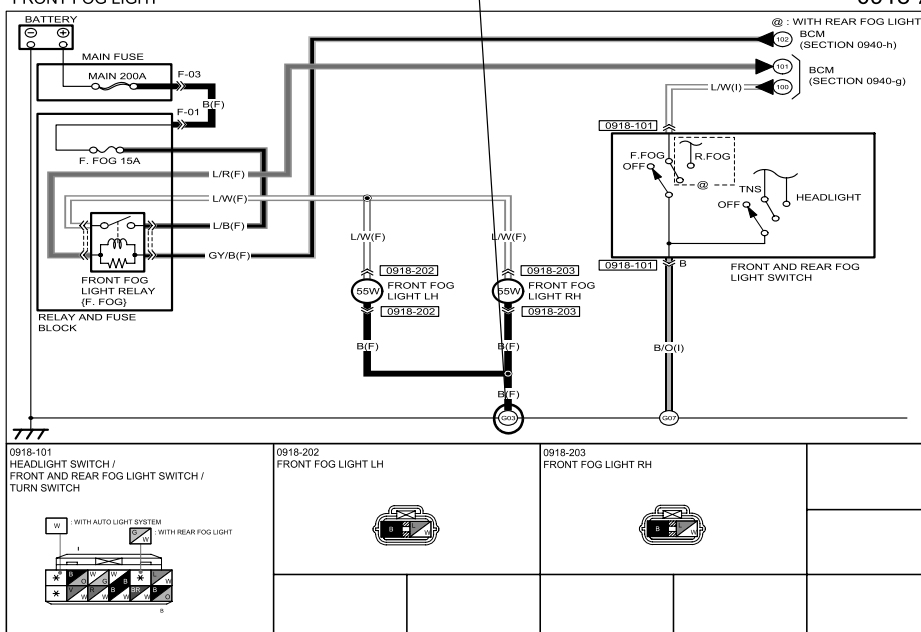

SYSTEM CIRCUIT DIAGRAM/CONNECTOR DIAGRAM

- These diagrams show the circuits for each system, from the power supply to the ground. The power supply side is on the upper part of the page, the ground side on the lower part. The diagrams describe circuits with the ignition switch off.

Below is an explanation of the various points in the diagram.

System name


The number indicates that the circuit continues to the related system diagram.

Connector code

The prefix letter indicates the system in which the connector is used.

- F: Fuse box connectors
J: Joint box/Junction box connectors
C: Common connectors
G: Ground point connectors
D: Data link connector
- 0112: Cooling system connectors
0114: Fuel system connectors
0117: Charging system connectors
0118: Ignition system connectors
0119: Starting system connectors
0120: Cruise control system connectors
0140: Engine control system connectors
0212: Wheel and tires connectors
0318: 4-Wheel drive connectors
0413: Antilock brake system connectors
0414: Traction control system connectors
0415: Dynamic stability control connectors
0418: Dynamic stability control/Roll stability control connectors
0513: Automatic transmission connectors
0514: Automatic transmission shift mechanism connectors
0517: Automatic transaxle connectors
0518: Automatic transaxle shift mechanism connectors
0613: Electric power steering (EPS) connectors
0614: Power steering connectors
0740: Heater, ventilation & air conditioning (HVAC) control system connectors
0810: Air bag system connectors
0811: Seat belt connectors
0912: Glass/Windows/Mirrors connectors
0913: Seats connectors
0914: Security and locks connectors
0915: Sunroof connectors
0916: Exterior trim connectors
0918: Lighting systems connectors
0919: Wiper/Washer system connectors
0920: Entertainment connectors
0921: Power systems
0922: Instrumentation/Driver info. Connectors
0940: Control system

POWER DOOR LOCK SYSTEM (WITH ADVANCED KEYLESS AI

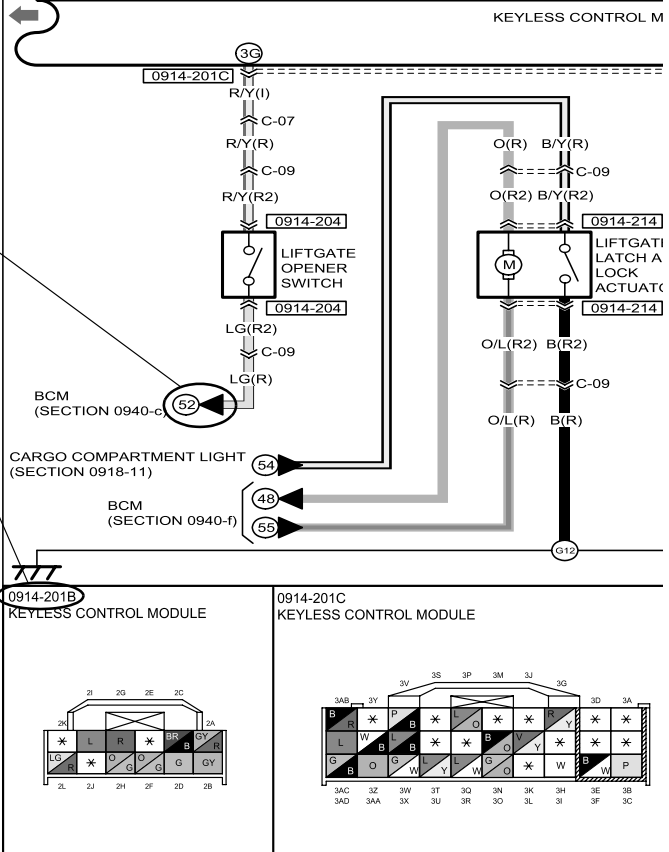

Indicates shielded wire.*

- * Shielded wire :
Prevents signal disturbances from electrical interference.
Wire is covered by a metal meshing for grounding.

Multiplex communication

Indicates communication with connected parts. Signals are transmitted back and forth between connected parts.

Current symbol

Current flows in the direction of the arrow.

System code


Wire color code (harness symbol)

- Two-color wires are indicated by a two-letter symbol. The first indicates the base color of the wire, the second the color of the stripe. For example:


W/R is a white wire with a red strip

BR/Y is a brown wire with a yellow strip

Symbol
(Example)

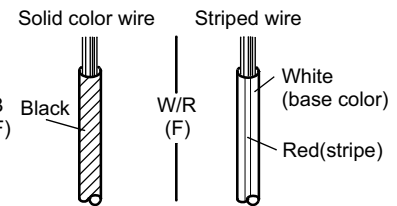

- The harness symbol is in () following the harness symbols (refer to P-9).

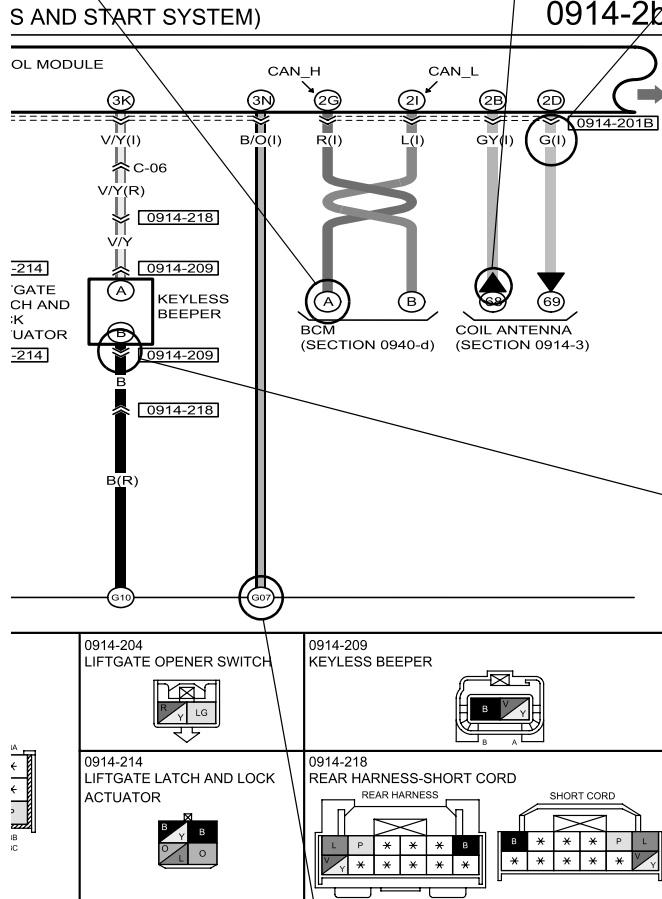


Connector symbols

- Male and female connectors are represented as follows in the circuit and connector diagrams.

		Circuit diagram symbol	Connector diagram symbol
Male			
Female			

- Like connectors are linked by dashed lines between the connector symbols.
- Connector diagrams show connectors on the harness side. The terminal indicates the view from the harness side.

(Example)

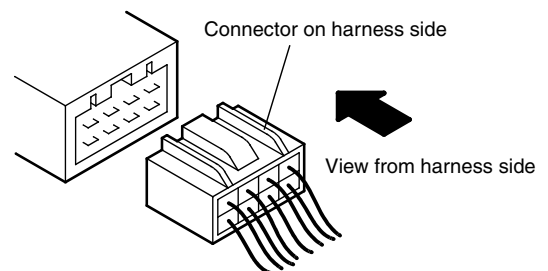

- Colors for connectors except white are given in locations.
- Unused terminals are indicated by *.


Ground numbers

A harness ground is represented differently than a unit ground.

Types of grounds	Symbol
Harness	
Unit	
Sensor	

ROUTING DIAGRAM

- The routing diagram shows where electrical components are on the system circuit diagram by call out line and connector symbols.

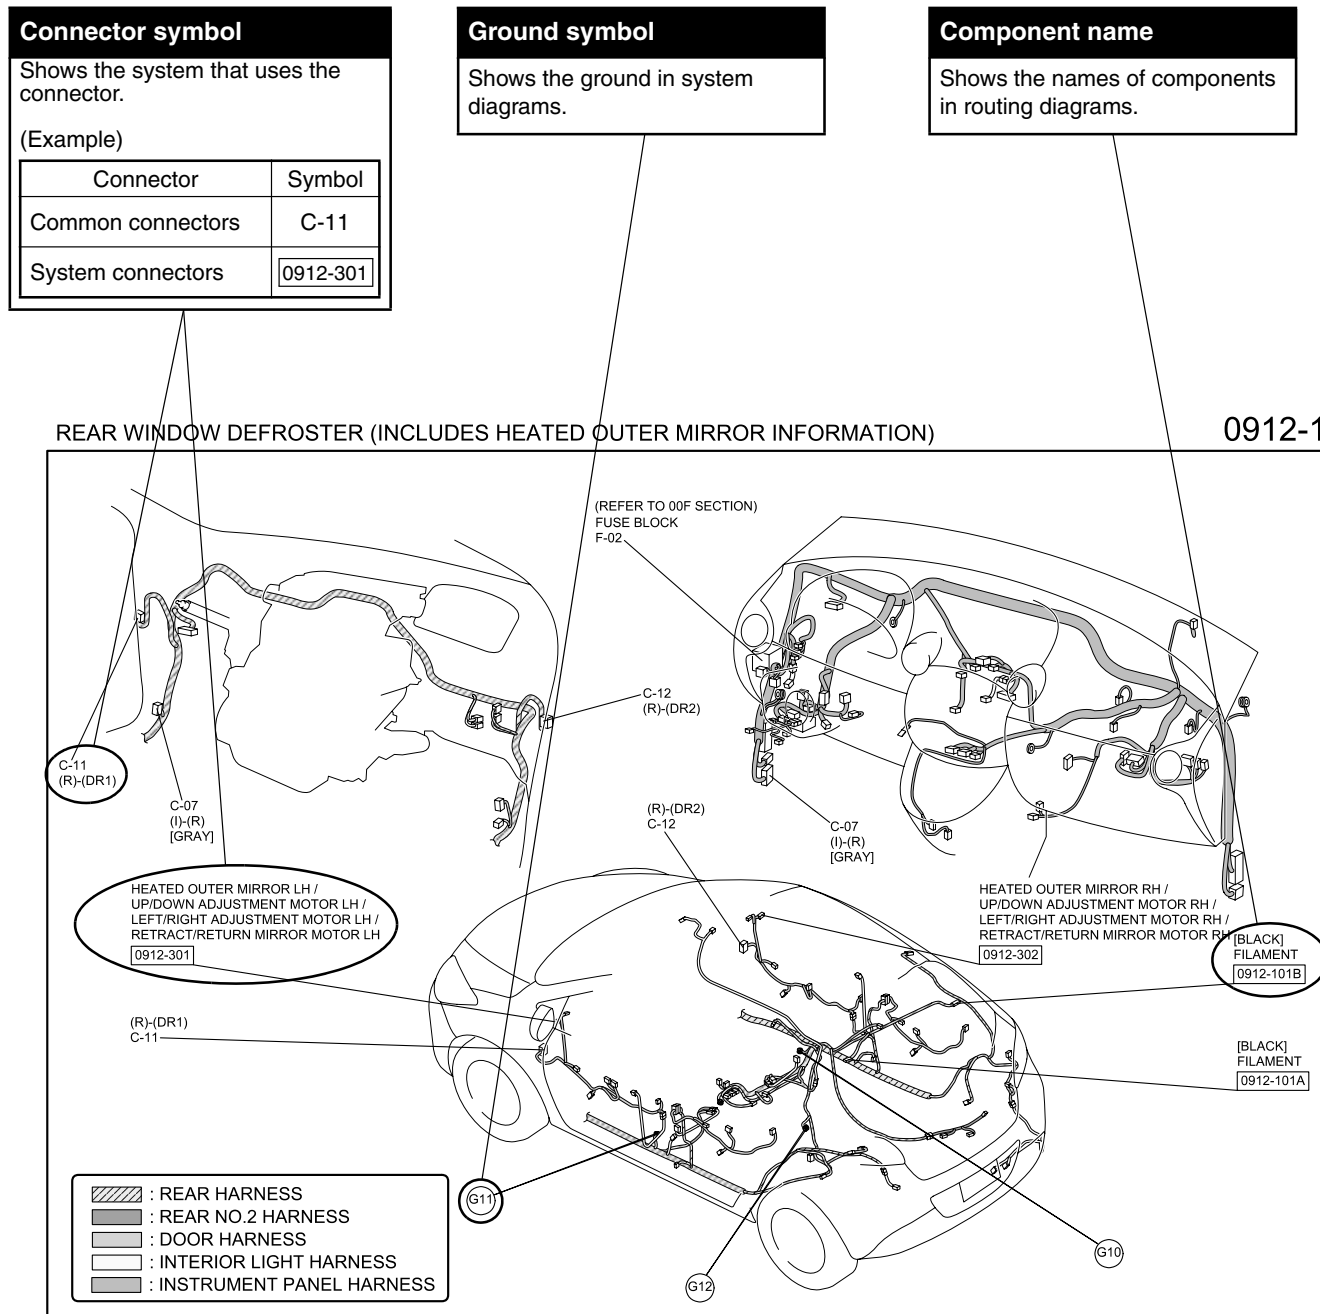



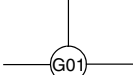
 
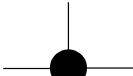

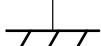

HARNESS SYMBOLS


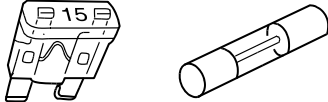
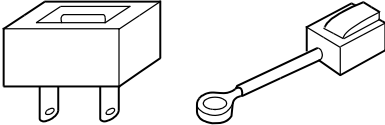



 
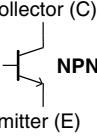
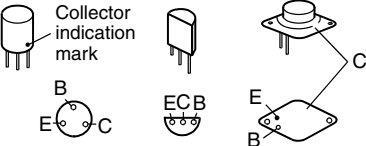
 
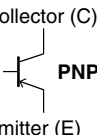
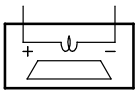
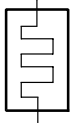
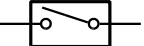
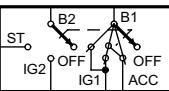









DESCRIPTION OF HARNESS	SYMBOL	DESCRIPTION OF HARNESS	SYMBOL
FRONT HARNESS	(F)	DOOR No. 1 HARNESS	(DR1)
FRONT No. 2 HARNESS	(F2)	DOOR No. 2 HARNESS	(DR2)
ENGINE HARNESS	(E)	DOOR No. 3 HARNESS	(DR3)
DASH HARNESS	(D)	DOOR No. 4 HARNESS	(DR4)
REAR HARNESS	(R)	FLOOR HARNESS	(FR)
REAR No. 2 HARNESS	(R2)	INTERIOR LIGHT HARNESS	(IN)
REAR No. 3 HARNESS	(R3)	A/C HARNESS	(AC)
INSTRUMENT PANEL HARNESS	(I)	INJECTION HARNESS	(INJ)
EMISSION HARNESS	(EM)	HAND BRAKE HARNESS	(HB)
EMISSION No. 2 HARNESS	(EM2)		
EMISSION No. 3 HARNESS	(EM3)		

 



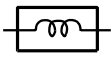
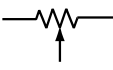
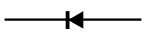
 


 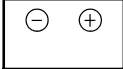


 

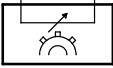

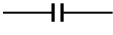
WIRING COLOR CODE







COLOR	CODE	COLOR	CODE
BLACK	B	ORANGE	O
BLUE	L	PINK	P
BROWN	BR	RED	R
DARK BLUE	DL	SKY BLUE	SB
DARK GREEN	DG	TAN	T
GRAY	GY	VIOLET	V
GREEN	G	WHITE	W
LIGHT BLUE	LB	YELLOW	Y
LIGHT GREEN	LG		

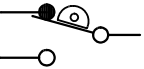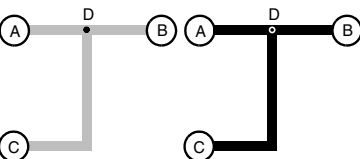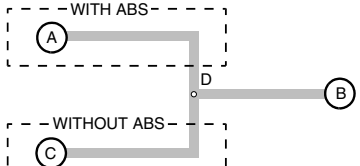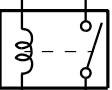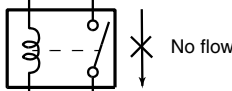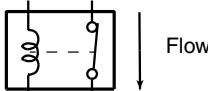SYMBOLS

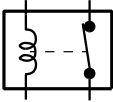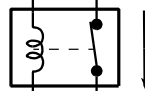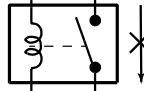Symbol	Meaning	Symbol	Meaning
Battery 	<ul style="list-style-type: none"> Generates electricity through chemical reaction. Supplies direct current to circuits. 	Light 	<ul style="list-style-type: none"> Emits light and generates heat when current flows through filament.
Ground (1) 	<ul style="list-style-type: none"> Connecting point to vehicle body or other ground wire where current flows from positive to negative terminal of battery. Ground (1) indicates a ground point to body through wire harness. 		
Ground (2) 	<ul style="list-style-type: none"> Ground (2) indicates point where component is grounded directly to body. 	Resistance 	<ul style="list-style-type: none"> A resistor with a constant value. Mainly used to protect electrical components in circuits by maintaining rated voltage.
Ground (3) 	Remarks <ul style="list-style-type: none"> Current will not flow through a circuit if ground is faulty. 	Motor 	<ul style="list-style-type: none"> Converts electrical energy into mechanical energy.

Symbol	Meaning	Symbol	Meaning
Fuse 	<ul style="list-style-type: none"> Melts when current flow exceeds that specified for circuit, interrupts current flow. <p>Precautions</p> <ul style="list-style-type: none"> Do not replace with fuses exceeding specified capacity. <p><Blade type> <Tube type></p>  <p><Cartridge type> <Fusible link></p> 	Pump 	<ul style="list-style-type: none"> Pulls in and discharges gases and liquids.
Fuse (For high current fuse)/ Fusible link 		Cigarette lighter 	<ul style="list-style-type: none"> Electrical coil that generates heat.
		Accessory socket 	<ul style="list-style-type: none"> Interior power supply.
Transistor (1)  <p>Collector (C) Base (B) NPN Emitter (E)</p>	<ul style="list-style-type: none"> Electrical switching component. Turns on when voltage is applied to the base (B). <p>Collector indication mark</p> 	Horn 	<ul style="list-style-type: none"> Generates sound when current flows.
Transistor (2)  <p>Collector (C) Base (B) PNP Emitter (E)</p>	<ul style="list-style-type: none"> Reading code. <p>2 S C 828 A — Revision mark</p> <p>Semiconductor Number of terminals</p> <p>A: High-frequency PNP B: Low-frequency PNP C: High-frequency NPN D: Low-frequency NPN</p>	Speaker 	
		Heater 	<ul style="list-style-type: none"> Generates heat when current flows.
Switch (1)  <p>Normally open</p>	<ul style="list-style-type: none"> Allows or breaks current flow by opening and closing circuits. 	Ignition switch 	<ul style="list-style-type: none"> Turning ignition key switches circuit to operate various component. <p>(NOTE) Ignition switch is called engine switch on diesel vehicles.</p>
Switch (2)  <p>Normally closed</p>		Harness Connection  <p>When circuit C-D is connected to circuit A-B, the connection D is indicated by a black dot.</p>	
Autostop switch 	<ul style="list-style-type: none"> Automatically shuts off circuit when certain conditions are met. 	Selection  <p>Diversion point D for the different circuits according to the vehicle's specification is indicated by a white dot.</p>	<p>For vehicles with ABS, use the A-B circuit.</p> <p>WITH ABS</p>  <p>For vehicles without ABS, use the C-B circuit.</p> <p>WITHOUT ABS</p> 
Relay (1)  <p>Normally open</p>	<ul style="list-style-type: none"> Current flowing through coil produces electromagnetic force causing contact to open or close. <p>No current to coil</p>  <p>Current to coil</p> 		

Symbol	Meaning	Symbol	Meaning
Relay (2)  Normally closed	<ul style="list-style-type: none"> Current flowing through coil produces electromagnetic force causing contact to close. <div> No current to coil  Flow </div> <div> Current to coil  No flow </div>		
Sensor (1) 	<ul style="list-style-type: none"> Detects characteristics such as intake manifold vacuum and airflow amount according to resistance variation. 	Solenoid 	<ul style="list-style-type: none"> Current flowing through coil generates electromagnetic force to operate plungers.
Sensor (2) 	<ul style="list-style-type: none"> Detects resistance variation according to operation of other parts. 	Diode 	<ul style="list-style-type: none"> Known as a semiconductor rectifier, the diode allows current flow in one direction only. <div> Cathode(K)  Anode(A) ← Flow of electric current </div> <div>  A  A  A </div>
Sensor (3) 	<ul style="list-style-type: none"> A resistor whose resistance variation according to temperature variation. When temperature increases, resistance decreases. 	Light-emitting diode (LED) 	<ul style="list-style-type: none"> A diode that lights when current flows. Unlike ordinary bulbs, the diode does not generate heat when lit. <div> Cathode(K)  Anode(A) ← Flow of current </div> <div>  Cathode(K) Anode(A) ← Flow of current </div>
Sensor (4) 	<ul style="list-style-type: none"> Detects pulse signals from rotating object. 	Reference diode (Zener diode) 	<ul style="list-style-type: none"> Allows current to flow in one direction up to a certain voltage; allows current to flow in the other direction once that voltage is exceeded.
Capacitor 	<ul style="list-style-type: none"> Component that temporarily stores electrical charge. 		

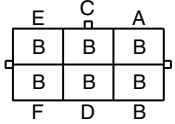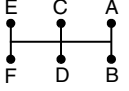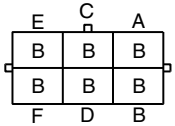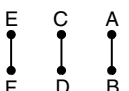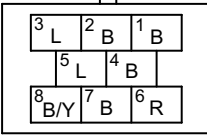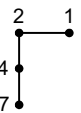Symbol	Meaning
Extent of the change in the wiring position (1) <div>   </div>	<ul style="list-style-type: none"> The wiring position can be exchanged freely within the connector.
Extent of the change in the wiring position (2) <div>   </div>	<ul style="list-style-type: none"> The wiring position can be exchanged according to the following combinations only. Between A and B, Between C and D, Between E and F
Extent of the change in the wiring position (3) <div>   </div>	<ul style="list-style-type: none"> The wiring position can be exchanged according to the following combinations only. Between 1, 2, 4 and 7. The wiring positions may be indicated by numbers for some connectors.

SERVICE WARNING AND CAUTION FOR VEHICLES WITH SRS AIR BAG SYSTEM

If the SRS air bag system inspection is not performed correctly in accordance with the workshop manual procedures it could cause the system to operate (deploy) accidentally, resulting in injury.

Always follow the service warnings and cautions in the workshop manual when performing the SRS air bag system-related inspection or servicing.

SERVICE WARNING FOR VEHICLES WITH DISCHARGE HEADLIGHTS

If the discharge headlight inspection and servicing is not done using the correct procedures in the workshop manual, it could result in electrical shock.

Always follow the service warnings and cautions in the workshop manual when performing the discharge headlight-related inspection or servicing.

ABBREVIATIONS USED IN THIS MANUAL

3GR	THIRD GEAR
4GR	FOURTH GEAR
A	AMPERE
A/C	AIR CONDITIONING
A/F	AIR FUEL RATIO
AAS	AUTO ADJUSTING SUSPENSION
ABS	ANTILOCK BRAKE SYSTEM
ACC	ACCESSORIES
ACV	AIR CONTROL VALVE
ADD	ADDITIONAL
AIS	AIR INJECTION SYSTEM
ALL	AUTOMATIC LOAD LEVELING
AM	AMPLITUDE MODULATION
AMP	AMPLIFIER
ANT	ANTENNA
ASV	AIR SUPPLY VALVE
AT	AUTOMATIC TRANSMISSION
ATX	AUTOMATIC TRANSAXLE
B+	BATTERY POSITIVE VOLTAGE
BAC	BYPASS AIR CONTROL
BTN	BRAKE TAIL NUMBER
CAN	CONTROLLER AREA NETWORK
CIGAR	CIGARETTE
CIS	CONTINUOUS FUEL INJECTION SYSTEM
CKP	CRANKSHAFT POSITION SENSOR
CM	CONTROL MODULE
CMP	CAMSHAFT POSITION SENSOR
COMBI	COMBINATION
CON	CONDITIONER
CONT	CONTROL
CPU	CENTRAL PROCESSING UNIT
DEF	DEFROSTER
DI	DISTRIBUTOR IGNITION
DLC	DATA LINK CONNECTOR
DLI	DISTRIBUTORLESS IGNITION
DOHC	DOUBLE-OVERHEAD CAMSHAFT
DRL	DAYTIME RUNNING LIGHT
DSC	DYNAMIC STABILITY CONTROL

DTC	DIAGNOSTIC TROUBLE CODE(S)
DTM	DIAGNOSTIC TEST MODE
ECPS	ELECTRONICALLY CONTROLLED POWER STEERING
ECT	ENGINE CONTROL TEMPERATURE
EGR	EXHAUST GAS RECIRCULATION
EHPAS	ELECTRO HYDRAULIC POWER ASSIST STEERING
EI	ELECTRONIC IGNITION
ELEC	ELECTRIC
ELR	EMERGENCY LOCKING RETRACTOR
ET	ELECTRONIC THROTTLE
ETC	ELECTRONIC THROTTLE CONTROL
EPS	ELECTRIC POWER STEERING
EVAP	EVAPORATIVE EMISSION
F	FRONT
F/I	FUEL INJECTOR
FICB	FAST-IDLE CAM BREAKER
FM	FREQUENCY MODULATION
FP	FUEL PUMP
FPR	FUEL PUMP RELAY
GEN	GENERATOR
GND	GROUND
H/D	HEATER/DEFROSTER
HEAT	HEATER
HI	HIGH
HO2S	HEATED OXYGEN SENSOR
HS	HIGH SPEED
HU	HYDRAULIC UNIT
IAC	IDLE AIR CONTROL
IAT	INTAKE AIR TEMPERATURE
IG	IGNITION
ILLUMI	ILLUMINATION
INT	INTERMITTENT
JB	JOINT BOX
KS	KNOCK SENSOR
LCD	LIQUID CRYSTAL DISPLAY
LF	LEFT FRONT
LH	LEFT HAND

Reading Wiring Diagrams

00R

LO	LOW
LR	LEFT REAR
M	MOTOR
MAF	MASS AIR FLOW
MAP	MANIFOLD ABSOLUTE PRESSURE
MFI	MULTIPOINT FUEL INJECTION
MID	MIDDLE
MIL	MALFUNCTION INDICATOR LAMP
MIN	MINUTE
MIX	MIXTURE
MPX	MULTIPLEX
MS	MIDDLE SPEED
MT	MANUAL TRANSMISSION
MTX	MANUAL TRANSAXLE
N	NEUTRAL
NC	NORMALLY CLOSED
NO	NORMALLY OPEN
O2S	OXYGEN SENSOR
OBD	ON-BOARD DIAGNOSTIC
O/D	OVER DRIVE
OFF	SWITCH OFF
ON	SWITCH ON
OSC	OSCILLATOR
P	POWER
P/S	POWER STEERING
PCM	POWERTRAIN CONTROL MODULE
PJB	PASSENGER JUNCTION BOX
PNP	PARK/NEUTRAL POSITION
PRC	PRESSURE REGULATOR CONTROL
PRG	PURGE SOLENOID VALVE
PSP	POWER STEERING PRESSURE
PTC	POSITIVE TEMPERATURE COEFFICIENT HEATER
PWM	PULSE WIDTH MODULATION
QSS	QUICK-START SYSTEM
R	REAR
REC	RECIRCULATION
RES	REAR ENTERTAINMENT SYSTEM
RF	RIGHT FRONT
RH	RIGHT HAND
RPM	REVOLUTIONS PER MINUTE
RR	RIGHT REAR
RSC	ROLL STABILITY CONTROL
SAS	SOPHISTICATED AIR BAG SENSOR
SFI	SEQUENTIAL MULTIPOINT FUEL INJECTION
SOL	SOLENOID
SPV	SPIRIT VALVE
ST	START

SW	SWITCH
TC	TURBOCHARGER
TCC	TORQUE CONVERTER CLUTCH
TCM	TRANSMISSION(TRANSAXLE) CONTROL MODULE
TCS	TRACTION CONTROL SYSTEM
TEMP	TEMPERATURE
TFT	TRANSAXLE FLUID TEMPERATURE
TICS	TRIPLE INDUCTION CONTROL SYSTEM
TNS	TAIL NUMBER SIDE LIGHTS
TP	THROTTLE POSITION SENSOR
TPMS	TIRE PRESSURE MONITORING SYSTEM
TR	TRANSMISSION(TRANSAXLE) RANGE
TWS	TOTAL WIRING SYSTEM
V	VOLT
VAF	VOLUME AIR FLOW SENSOR
VENT	VENTILATION
VICS	VARIABLE INERTIA CHARGING SYSTEM
VOL	VOLUME
VR	VOLTAGE REGULATOR
VRIS	VARIABLE RESONANCE INDUCTION SYSTEM
VSS	VEHICLE SPEED SENSOR
VTCS	VARIABLE TUMBLE CONTROL SYSTEM
W	WATT(S)
WOT	WIDE OPEN THROTTLE


00P Electrical System General Procedures

ELECTRICAL PARTS

B6U000000006W03

Battery Cable


- Before disconnecting connectors or removing electrical parts, disconnect the negative battery cable.

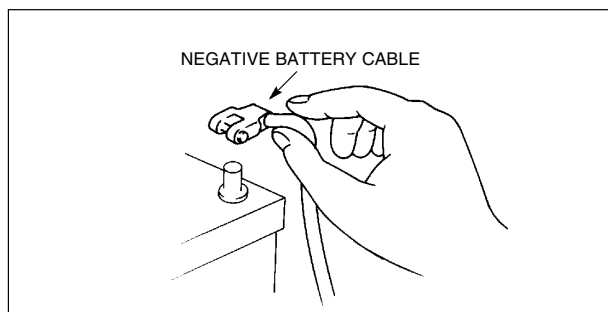

WGIWXX0007E

Wiring Harness


- To remove the wiring harness from the clip in the engine room, pry up the hook of the clip using a flathead screwdriver.

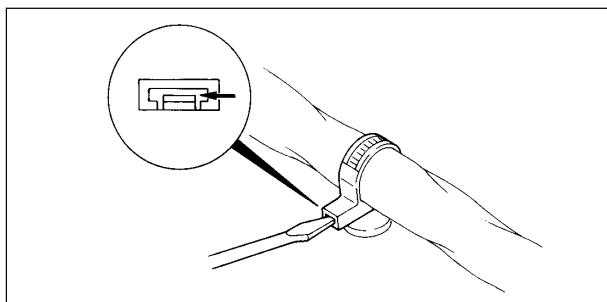

WGIWXX0039E

Caution

- Do not remove the Harness protective tape. Otherwise, the wires could rub against the body, which could result in water penetration and electrical shorting.

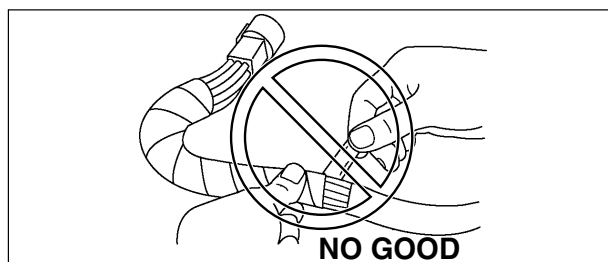


WGIWXX0040E

CONNECTORS


Disconnecting Connectors

- When disconnecting connector, grasp the connectors, not the wires.

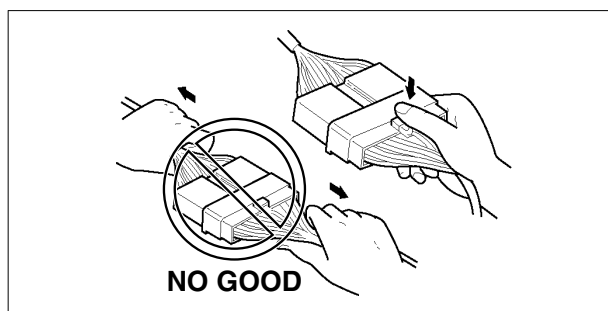

WGIWXX0041E


- Connectors can be disconnected by pressing or pulling the lock lever as shown.

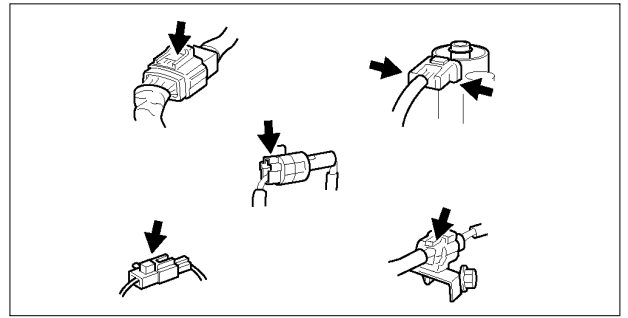

WGIWXX0042E

Locking Connector


- When locking connectors, listen for a click indicating they are securely locked.

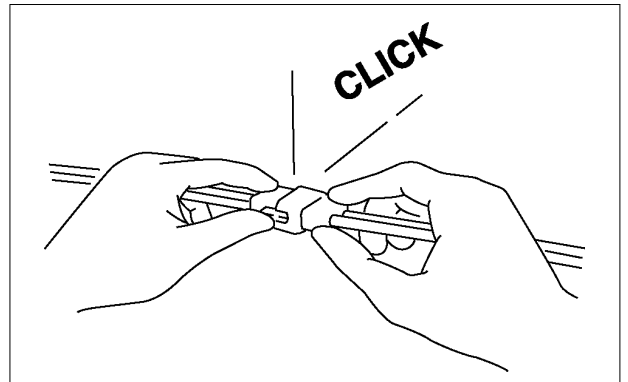

X3U000WB1

Inspection

- When a tester is used to inspect for continuity or measuring voltage, insert the tester probe from the wiring harness side.

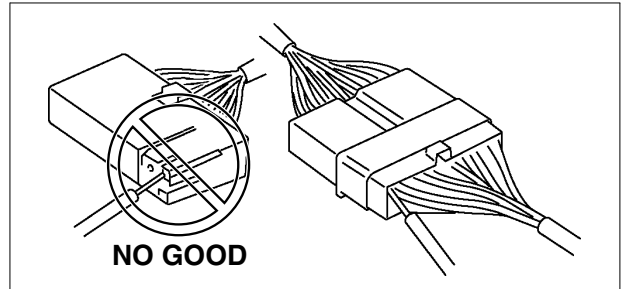


WGIWXX0044E

- Inspect the terminals of waterproof connectors from the connector side since they cannot be accessed from the wiring harness side.

Caution

- To prevent damage to the terminal, wrap a thin wire around the tester probe before inserting into terminal.

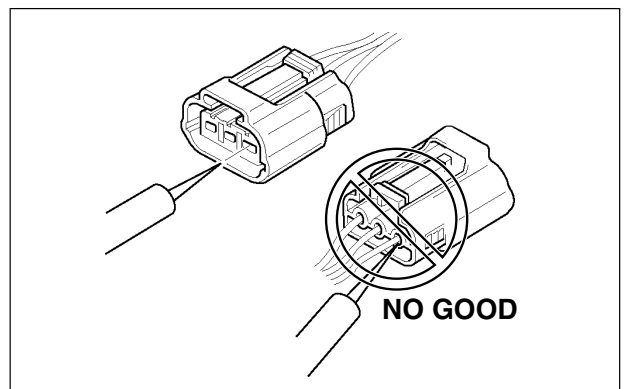


WGIWXX0045E

00P Electrical System General Procedures

Terminals

Inspection


- Pull lightly on individual wires to verify that they are secured in the terminal.

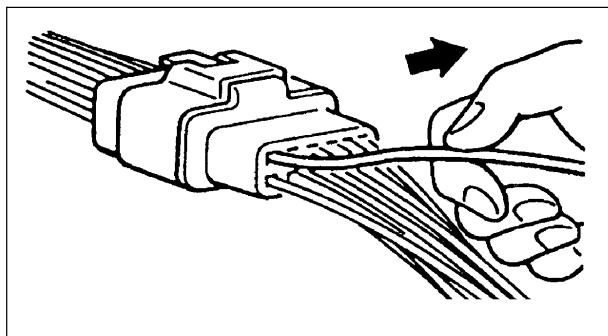

X3U000WB4

Replacement


- Use the appropriate tools to remove a terminal as shown. When installing a terminal, be sure to insert it until it locks securely.
- Insert a thin piece of metal from the terminal side of the connector and with the terminal locking tab pressed down, pull the terminal out from the connector.

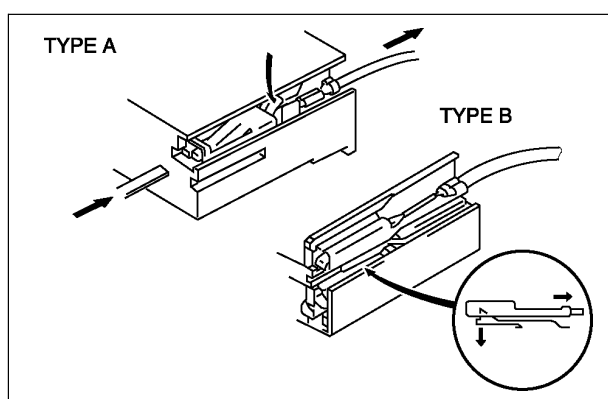

X3U000WB5

Sensors, Switches, And Relays

- Handle sensors, switches, and relays carefully. Do not drop them or strike them against other objects.

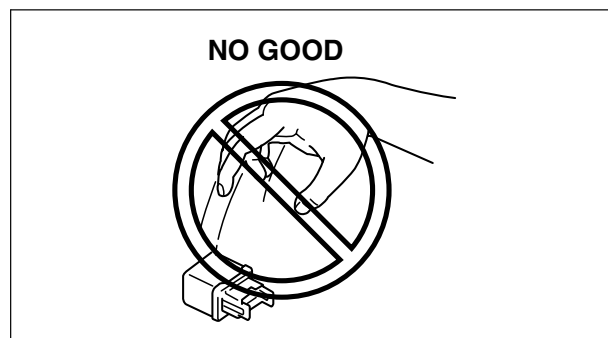


X3U000WB6

Fuse


Replacement

- When replacing a fuse, be sure to replace it with one of the same capacity. If a fuse fails again, the circuit probably has a short and the wiring should be inspected.
- Be sure the negative battery terminal is disconnected before replacing a main fuse.

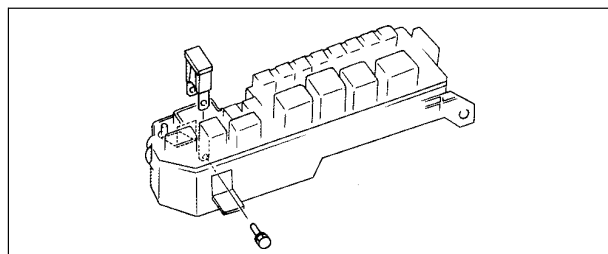

YMU000WA1

- When replacing a pullout fuse, use the fuse puller.

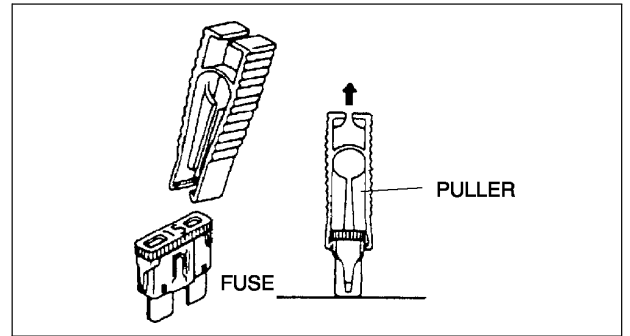

YMU000WAK


ELECTRICAL TROUBLESHOOTING TOOLS

Jumper Wire

- A jumper wire is used to create a temporary circuit. Connect the jumper wire between the terminals of a circuit to bypass a switch.

Caution


- **Do not connect a jumper wire from the power source line to a body ground. This may cause burning or other damage to wiring harnesses or electronic components.**

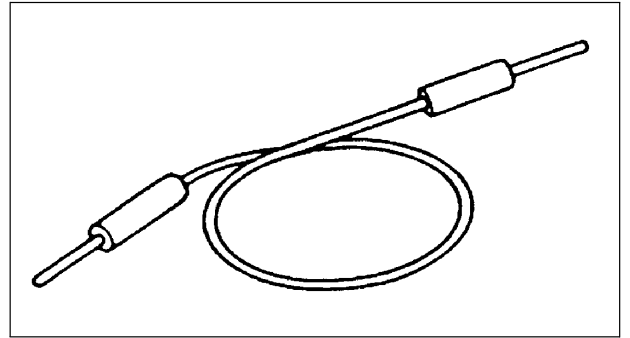

X3U000WBB

Voltmeter

- The DC voltmeter is used to measure circuit voltage. A voltmeter with a range of **15 V or more** is used by connecting the positive (+) probe (red lead wire) to the point where voltage will be measured and the negative (-) probe (black lead wire) to a body ground.

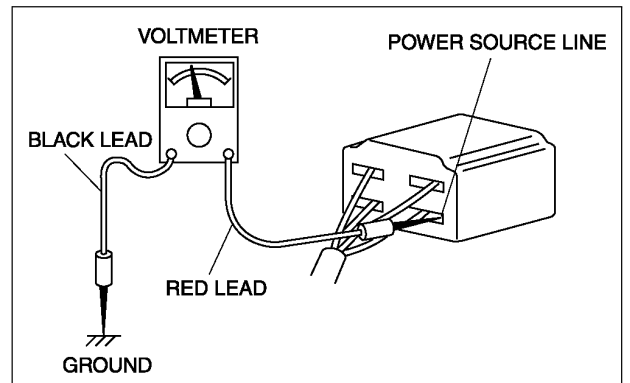


X3U000WBC

Ohmmeter

- The ohmmeter is used to measure the resistance between two points in a circuit and to inspect for continuity and short circuits.

Caution

- **Do not connect the ohmmeter to any circuit where voltage is applied. This will damage the ohmmeter.**

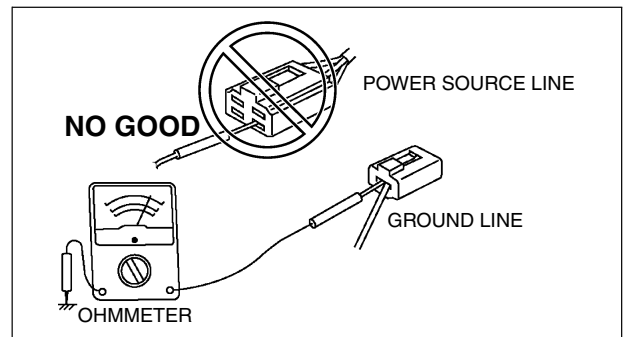


YMU000WAL

ELECTRICAL WIRING SCHEMATIC


00E-1a


18

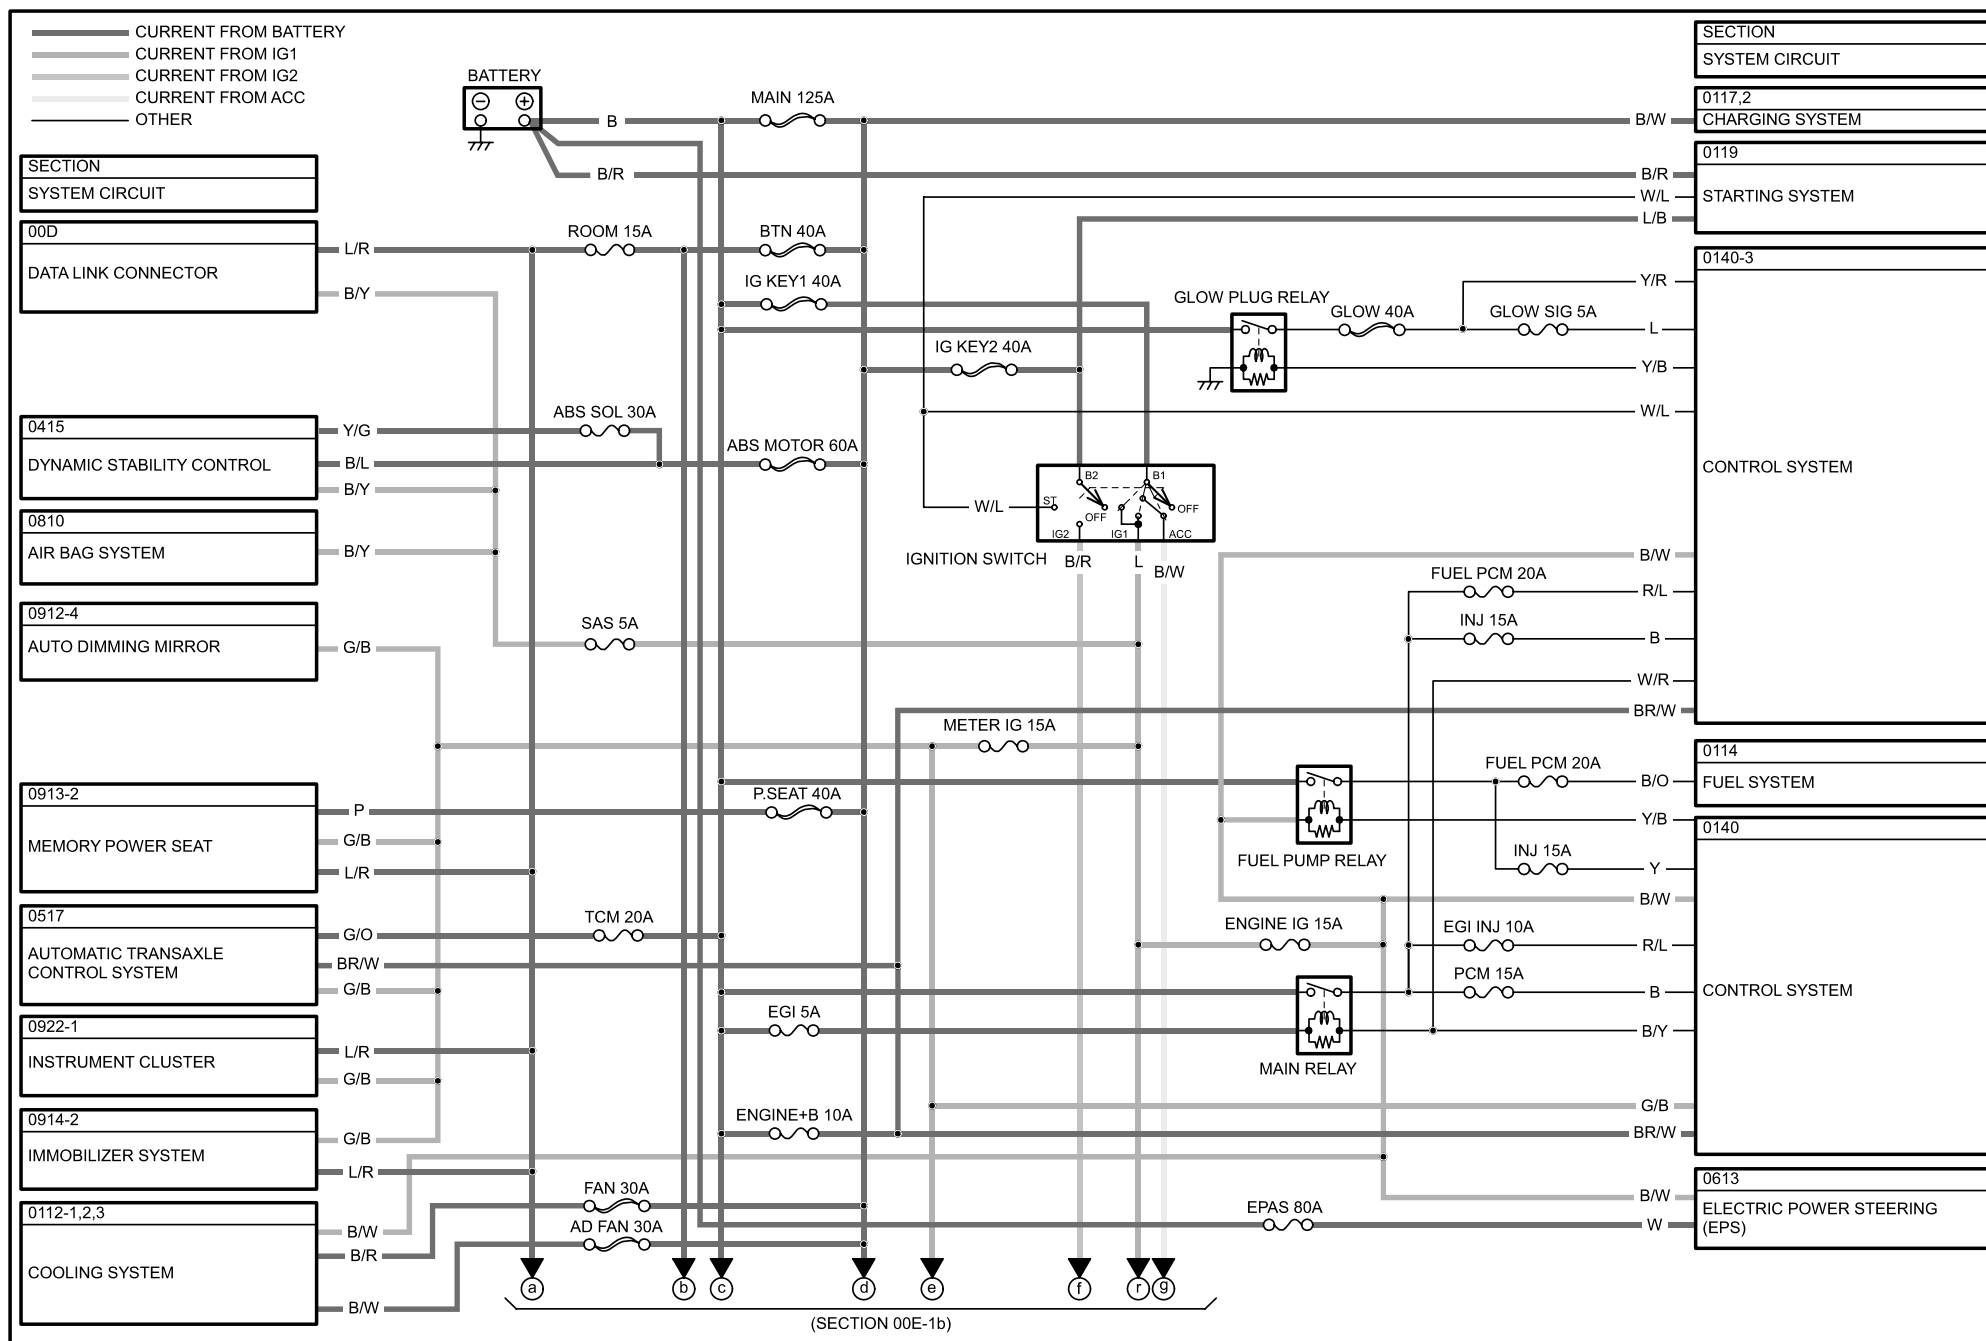

ELECTRICAL WIRING SCHEMATIC

00E-1b

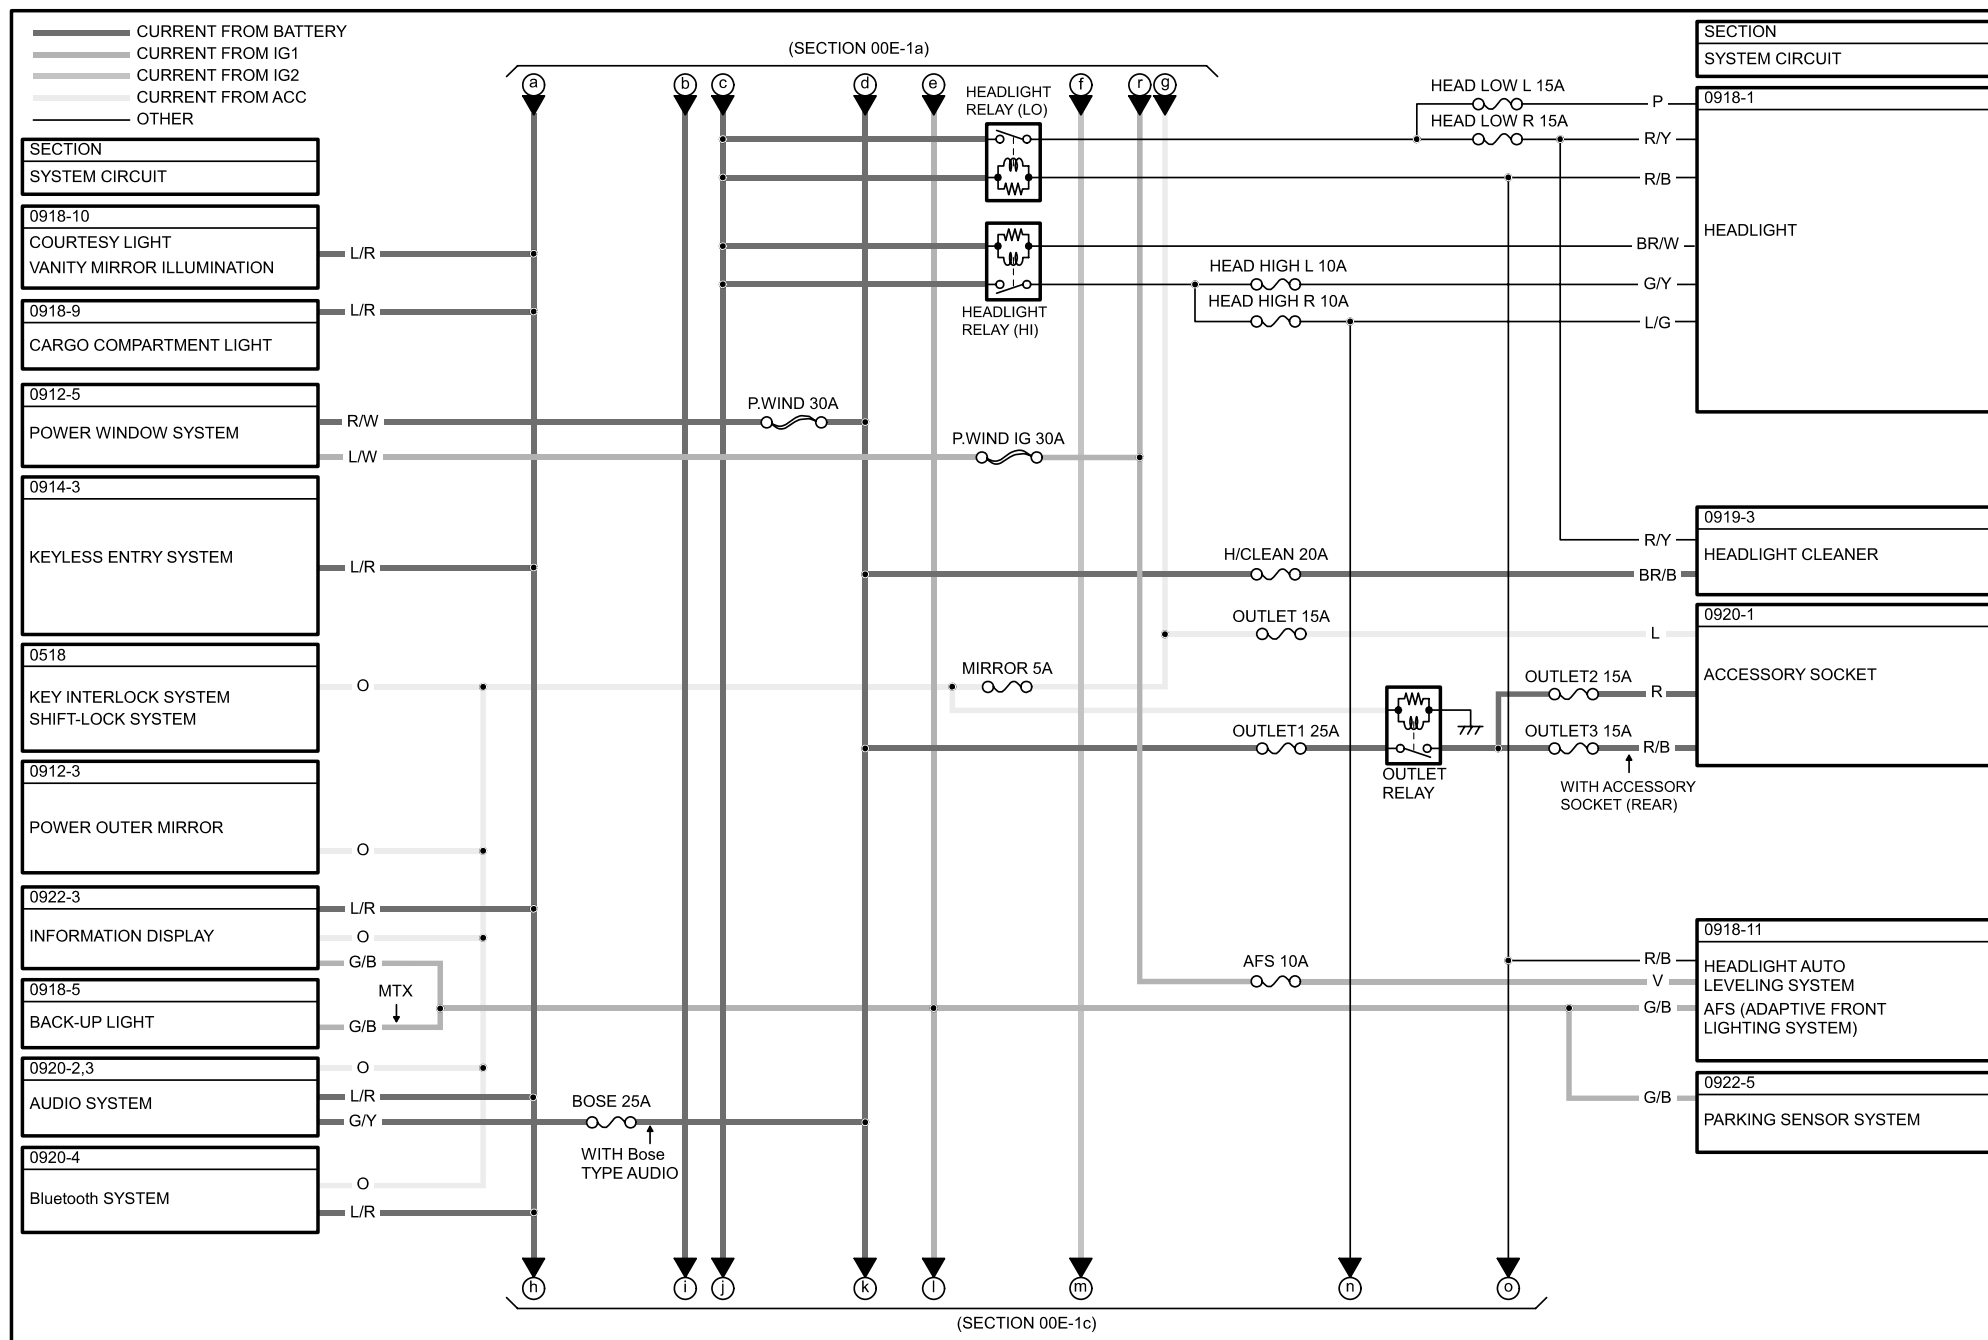

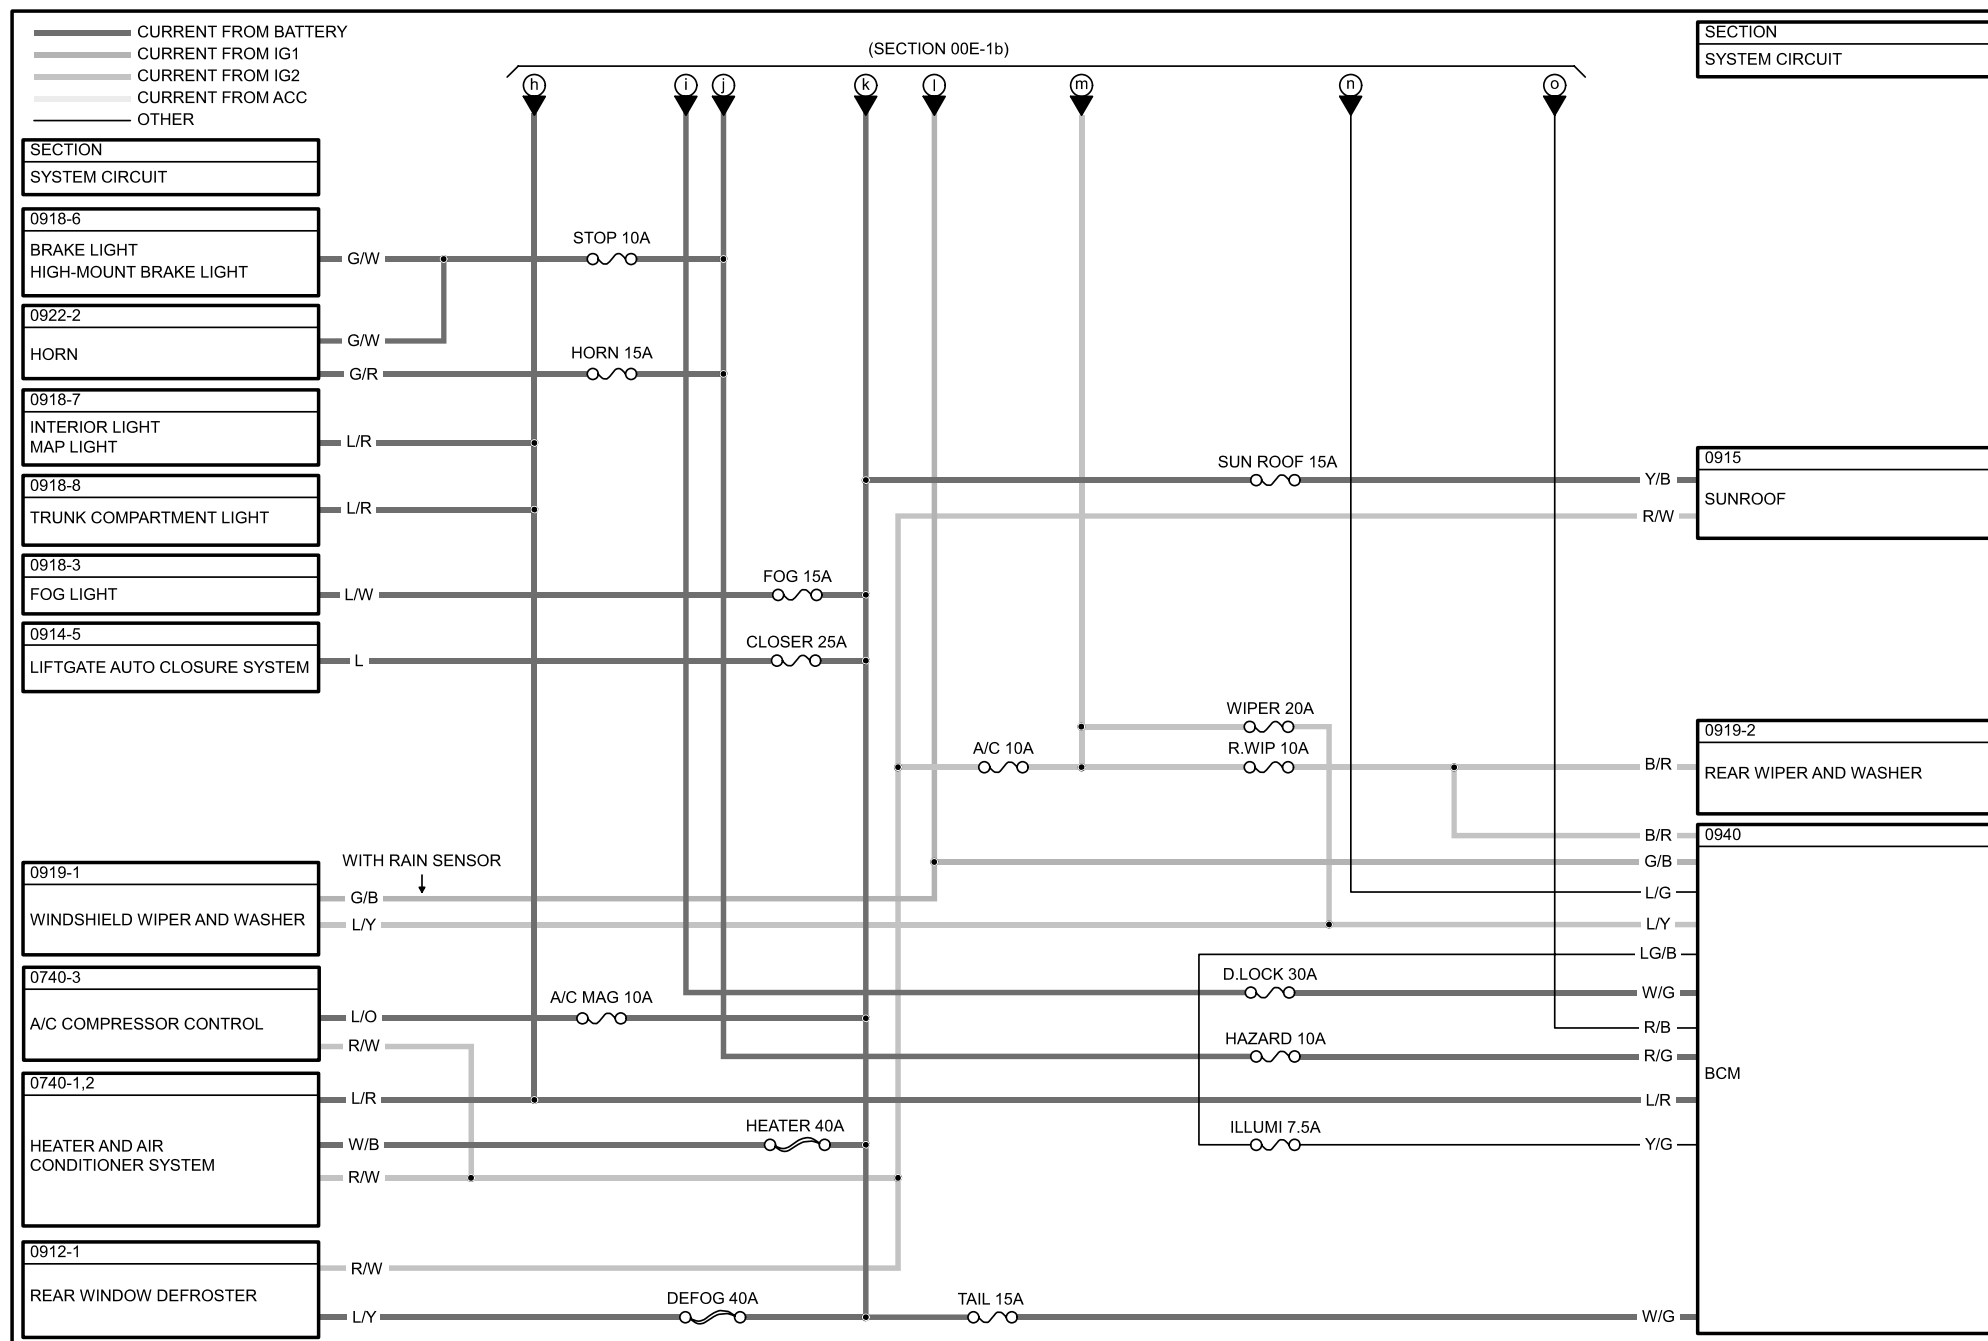

**THIS PAGE INTENTIONALLY
LEFT BLANK**



NO.	FUSE NAME	FUSE RATING	NO.	FUSE NAME	FUSE RATING
1	BTN	40A	26	ENGINE+B	10A
2	IG KEY2	40A	27	<STEERING LOCK>	<10A>
3	P.WIND	30A	28	(TCM) <F.WARMER>	(20A)
4	*	*	29	HAZARD	10A
5	HEATER	40A	30	EGI	5A
6	(P.SEAT)	(40A)	31	HORN	15A
7	DEFOG	40A	32	STOP	10A
8	<PRECRASH>	<50A>	33	*	*
9	AD FAN	30A	34	<INJ>	<20A>
10	<AUX> <HEATER>	<20A>	35	IG KEY1	40A
11	FAN	30A	36	*	*
12	ABS MOTOR	60A	37	(GLOW SIG)	(5A)
13	MAIN	125A	38	HEAD HIGH L	10A
14	*	*	39	HEAD HIGH R	10A
15	(CLOSER)	(25A)	40	HEAD LOW L	15A
16	(FOG)	(15A)	41	HEAD LOW R	15A
17	(H/CLEAN)	(20A)	42	ABS SOL	30A
18	(BOSE)	(25A)	43	<M.DEF>	<7.5A>
19	TAIL	15A	44	OUTLET2	15A
20	<SEAT WARM>	<20A>	45	(OUTLET3)	(15A)
21	(SUN ROOF)	(15A)	46	(GLOW)	(40A)
22	*	*	47	(PCM)	(15A)
23	<DEICER>	<15A>	48	(EGI INJ)	(10A)
24	OUTLET1	25A	49	FUEL PCM	20A
25	A/C MAG	10A	50	INJ	15A

< > : NOT USED
 () : IF EQUIPPED


NO.	RELAY NAME	NO.	RELAY NAME
(R1)	A/C RELAY {A/C RELAY}	(R10)	STARTER RELAY {STARTER RELAY}
(R2)	MAIN RELAY ← MZR 2.0, MZR 2.5 {EGI MAIN <GLOW> RELAY} GLOW PLUG RELAY ← MZR-CD 2.2 {<EGI MAIN> GLOW RELAY}	(R11)	* {BURGLAR DEICER RELAY}
(R3)	HEADLIGHT RELAY (HI) {HEAD HIGH RELAY}	(R12)	(COOLING FAN RELAY NO.4 {AD FAN#3 <BURGLAR> RELAY})
(R4)	FUEL PUMP RELAY ← MZR 2.0, MZR 2.5 {<EGI MAIN> FUEL PUMP RELAY} MAIN RELAY ← MZR-CD 2.2 {EGI MAIN <FUEL PUMP> RELAY}	(R13)	COOLING FAN RELAY NO.1 {FAN RELAY}
(R5)	HEADLIGHT RELAY (LO) {HEAD LOW RELAY}	(R14)	HORN RELAY {HORN RELAY}
(R6)	(AT MAIN RELAY {AT MAIN <STARTER2> RELAY})	(R15)	BLOWER RELAY {HEATER RELAY}
(R7)	FRONT FOG LIGHT RELAY {FOG RELAY}	(R16)	REAR WINDOW DEFROSTER RELAY {DEFOG RELAY}
(R8)	(COOLING FAN RELAY NO.2 {FAN#2 RELAY})	(R17)	COOLING FAN RELAY NO.2 {COOLING FAN RELAY NO.3] {AD FAN RELAY}
(R9)	OUTLET RELAY {OUTLET RELAY}	(R18)	* {BACK INJ RELAY}

{ } : NAME INDICATED ON FUSE BOX COVER
 [] : MZR 2.5, MZR-CD 2.2
 < > : NOT USED
 () : IF EQUIPPED

FUSE BOX

00F-2

F-02
FUSE BLOCK

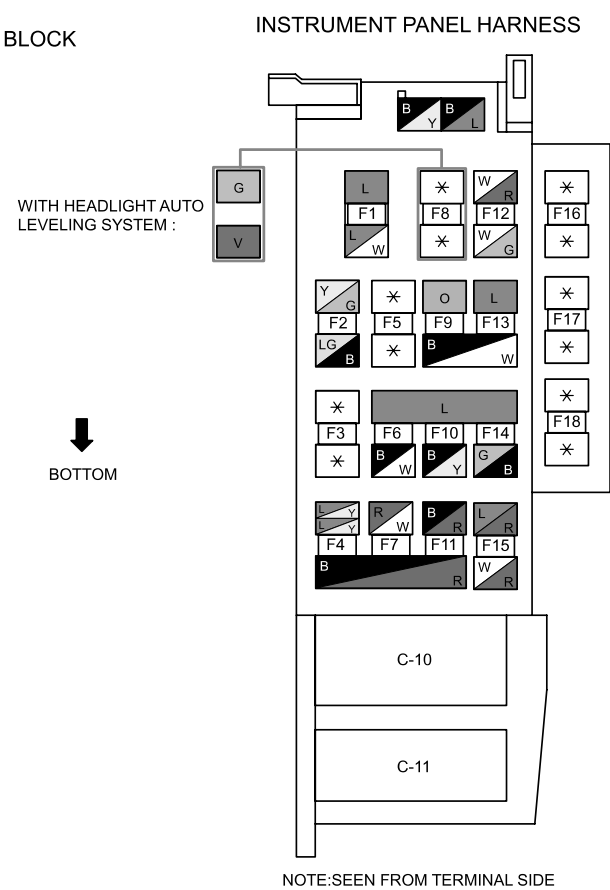


NO.	FUSE NAME	FUSE RATING	NO.	FUSE NAME	FUSE RATING
F1	P.WIND IG	30A	F10	SAS	5A
F2	ILLUMI	7.5A	F11	(R.WIP)	(10A)
F3	*	*	F12	D.LOCK	30A
F4	WIPER	20A	F13	OUTLET	15A
F5	<CIGAR>	<15A>	F14	METER IG	15A
F6	ENGINE IG	15A	F15	ROOM	15A
F7	A/C	10A	F16	SPARE	*
F8	(AFS)	(10A)	F17	SPARE	*
F9	MIRROR	5A	F18	SPARE	*

() : IF EQUIPPED
< > : NOT USED

F-03
MAIN FUSE

ENGINE HARNESS

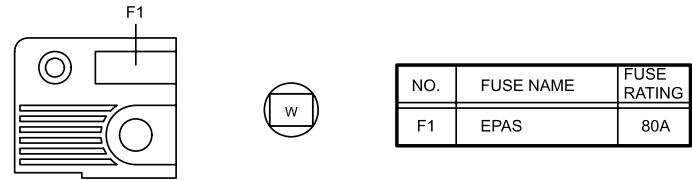


NO.	FUSE NAME	FUSE RATING
F1	EPAS	80A

**THIS PAGE INTENTIONALLY
LEFT BLANK**

COMMON CONNECTOR LIST


00C-1

C-01 IGNITION SWITCH

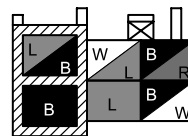


C-02 FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

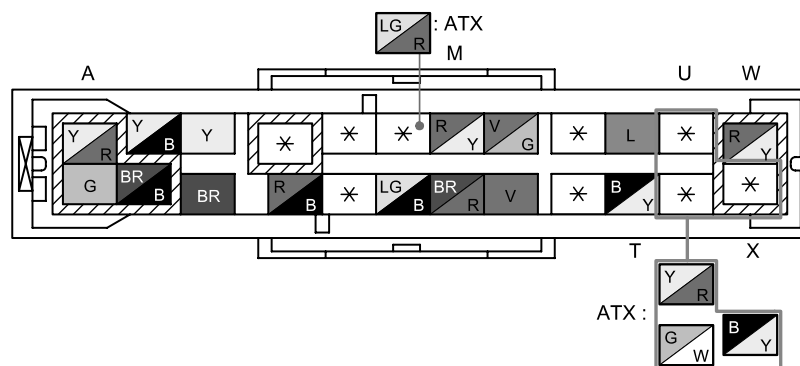


ENGINE HARNESS

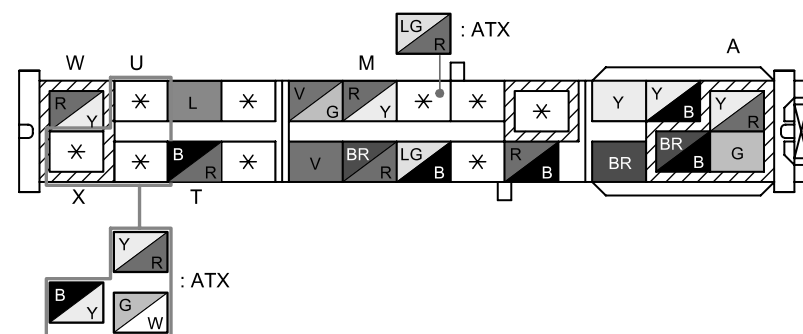


(MZR 2.0, MZR 2.5)

FRONT HARNESS

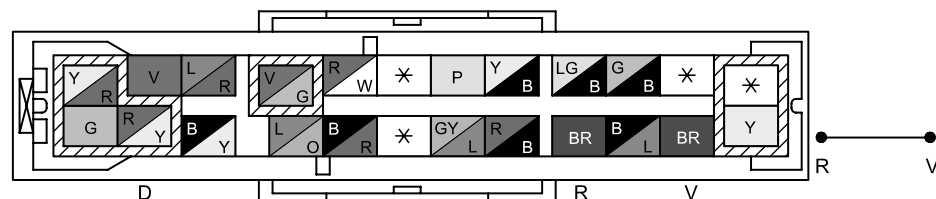


(MZR-CD 2.2)

ENGINE HARNESS

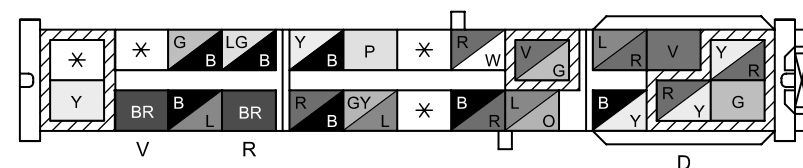


C-03 FRONT HARNESS-INJECTION HARNESS

FRONT HARNESS

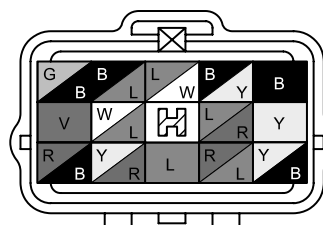

INJECTION HARNESS

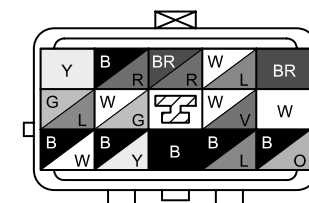


(MZR 2.0, MZR 2.5)


COMMON CONNECTOR LIST

00C-2


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

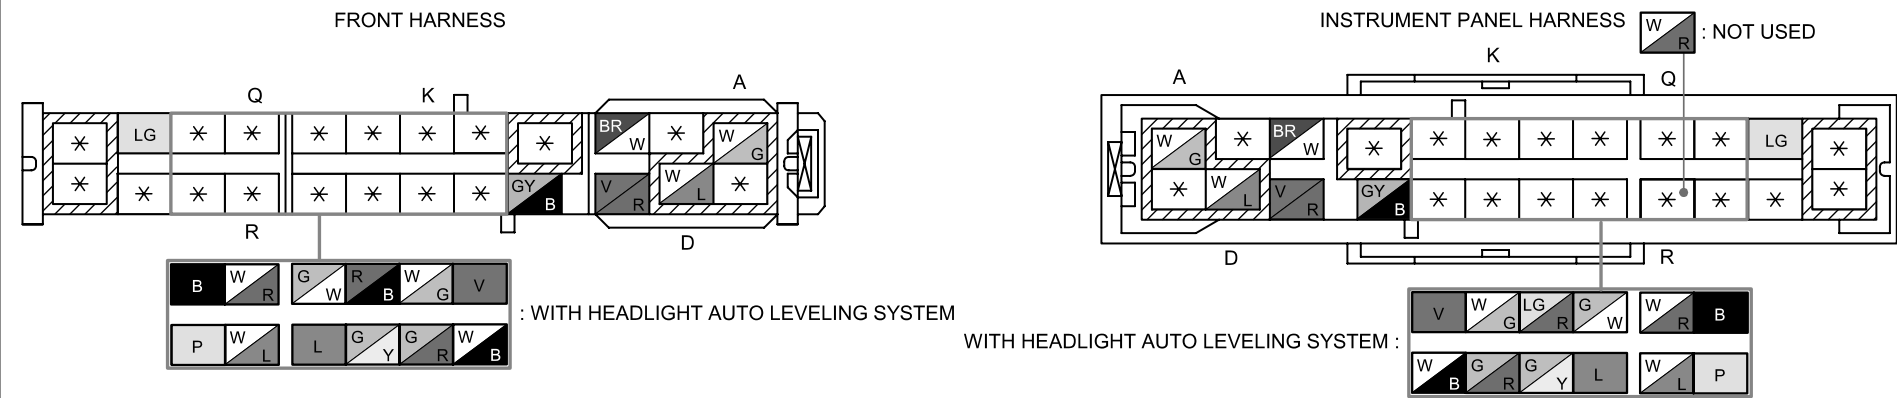


C-05
FRONT HARNESS-INSTRUMENT PANEL HARNESS

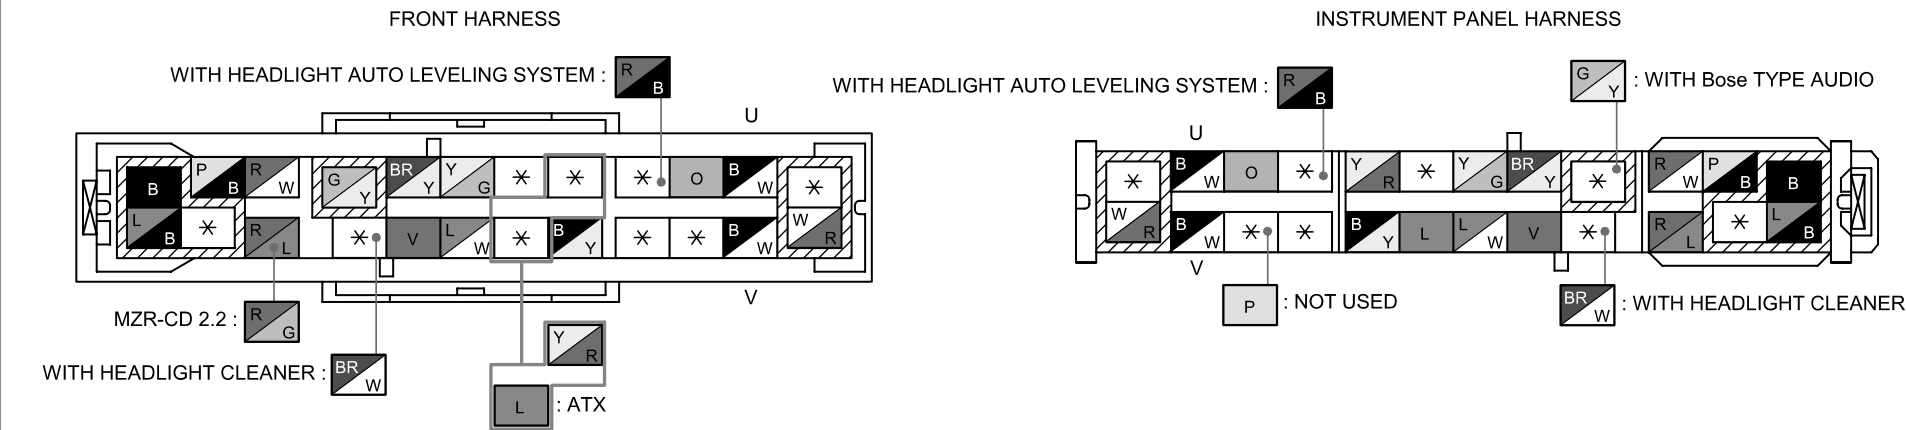


FRONT HARNESS

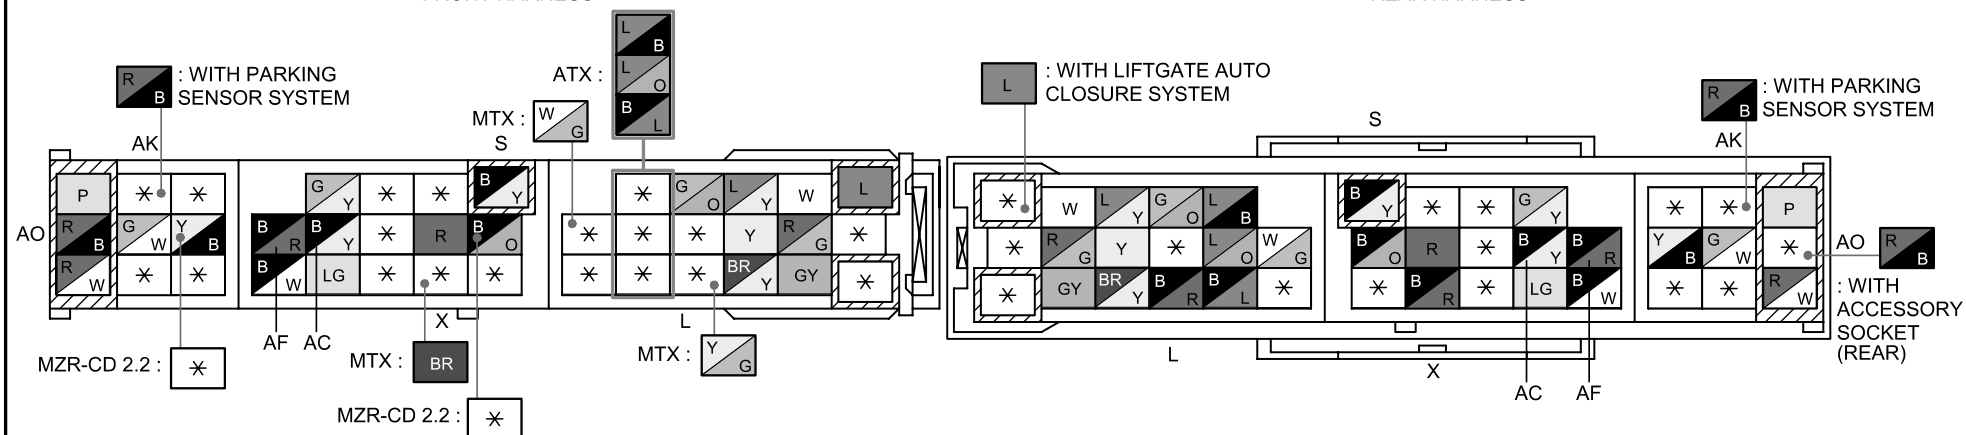


FRONT HARNESS

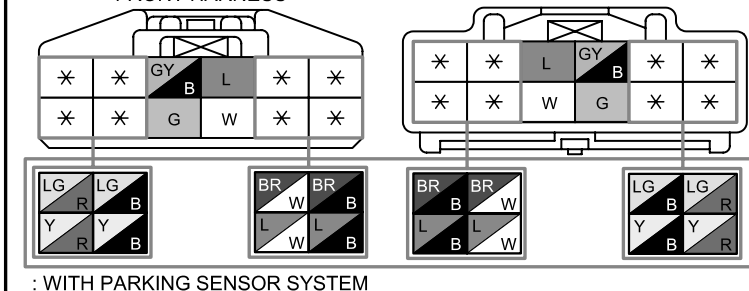


FRONT HARNESS

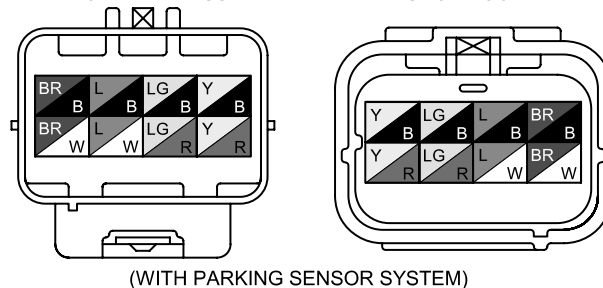


FRONT HARNESS

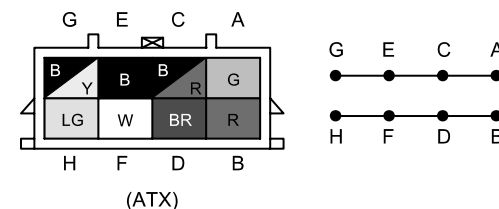

INSTRUMENT PANEL HARNESS

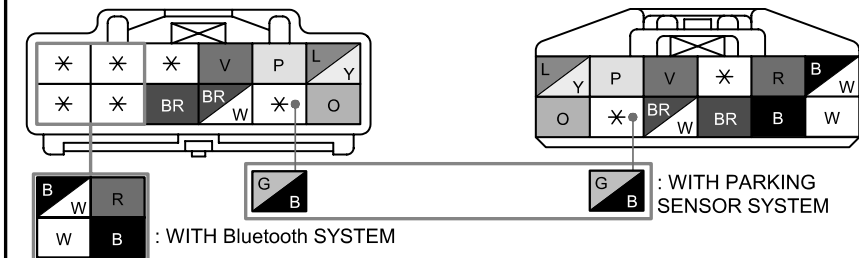

INSTRUMENT PANEL HARNESS

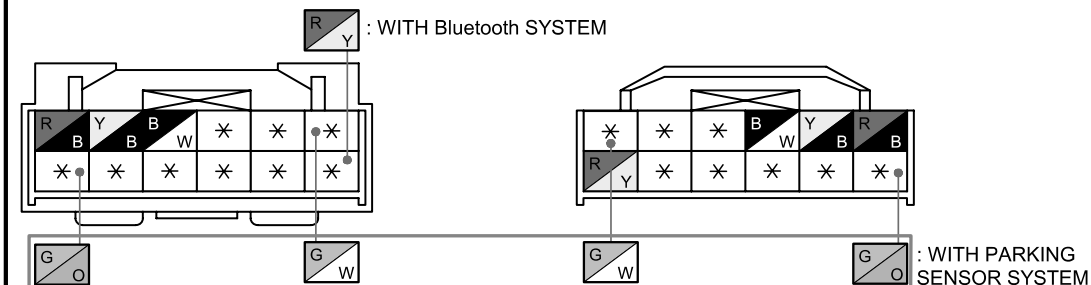


COMMON CONNECTOR LIST

00C-4


C-12

INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

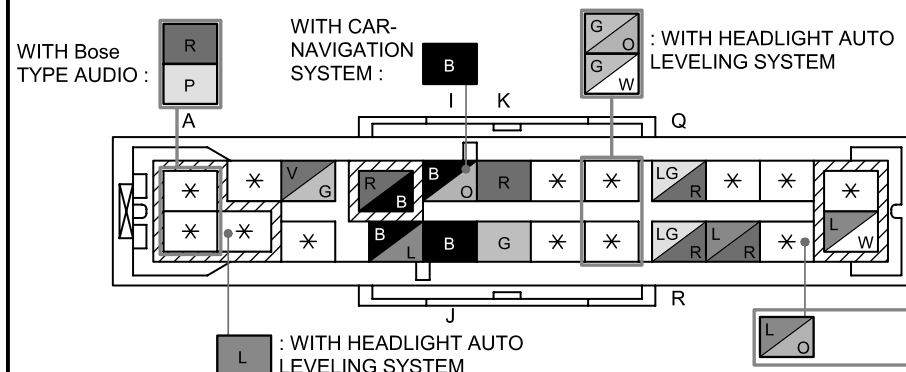


REAR HARNESS

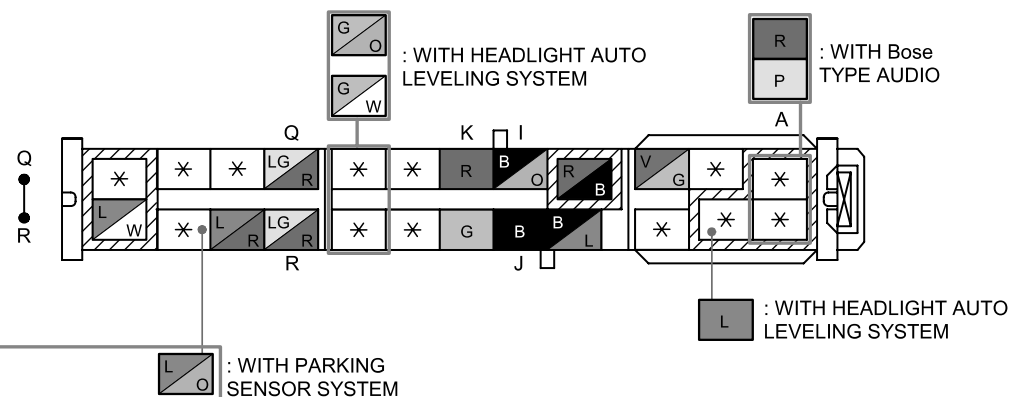


C-13

INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

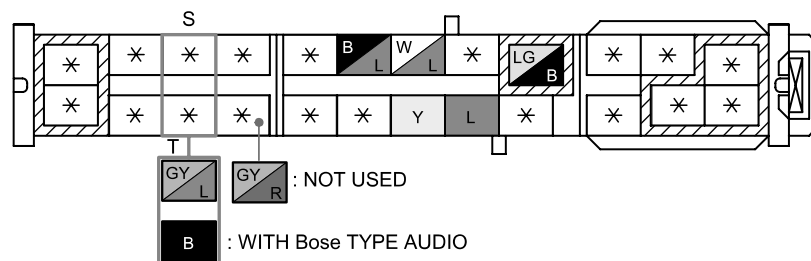


REAR HARNESS

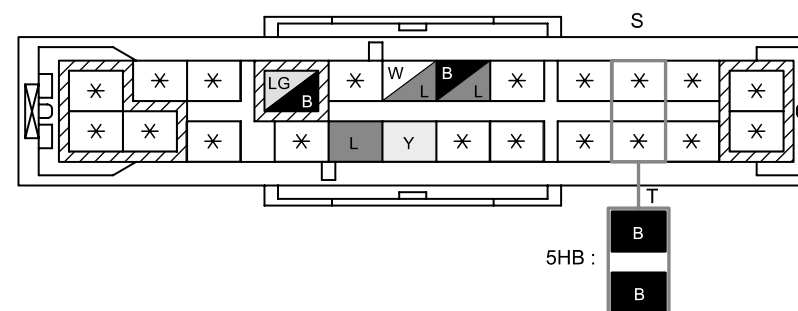


C-15

INSTRUMENT PANEL HARNESS-FLOOR HARNESS







INSTRUMENT PANEL HARNESS

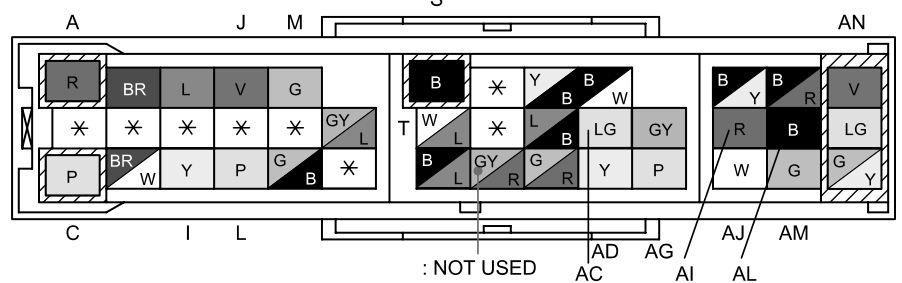

FLOOR HARNESS

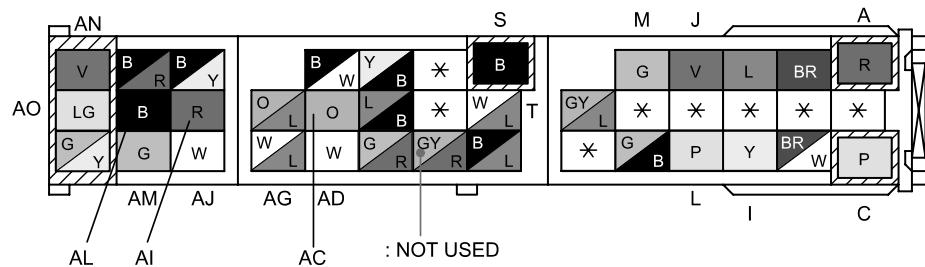


(WITH Bose TYPE AUDIO)

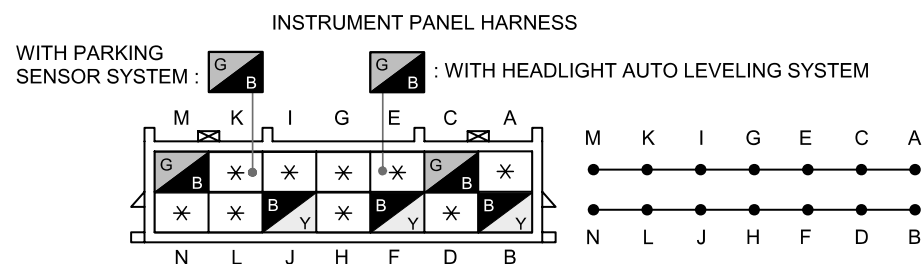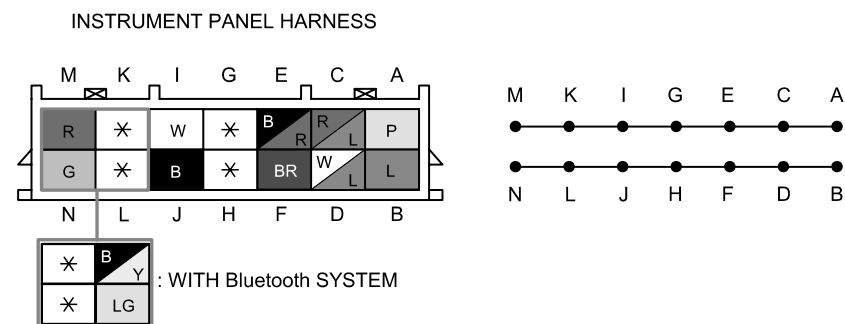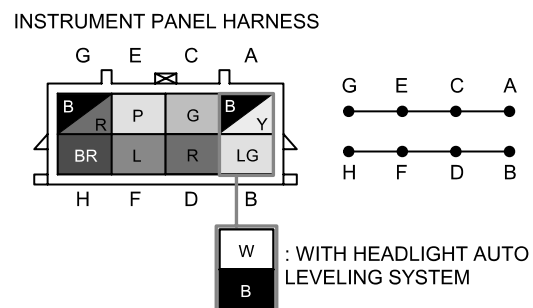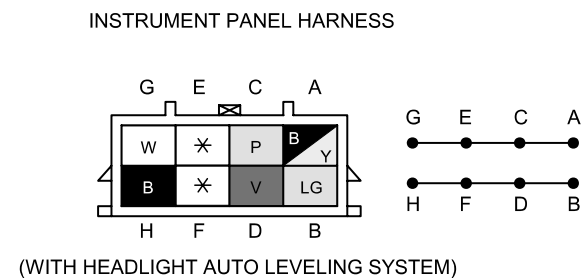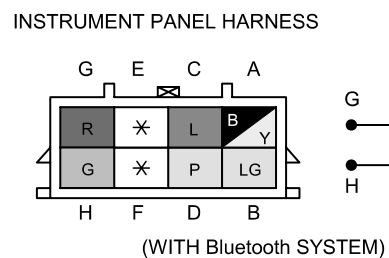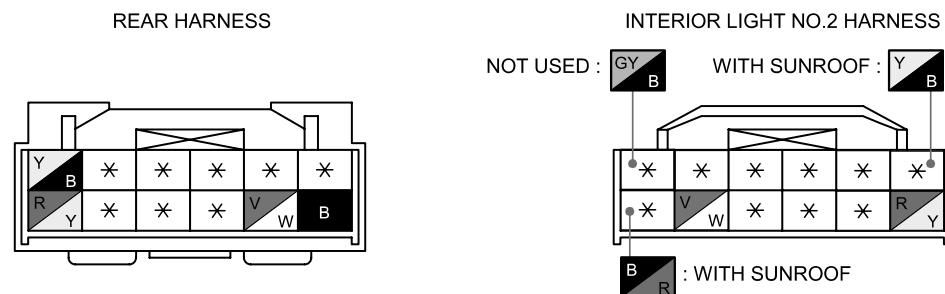C-16
JOINT CONNECTORC-17
JOINT CONNECTORC-18
JOINT CONNECTORC-19
JOINT CONNECTORC-20
JOINT CONNECTORC-21
REAR HARNESS-INTERIOR LIGHT NO.2 HARNESS


COMMON CONNECTOR LIST

00C-6


C-22 REAR HARNESS-INTERIOR LIGHT NO.2 HARNESS

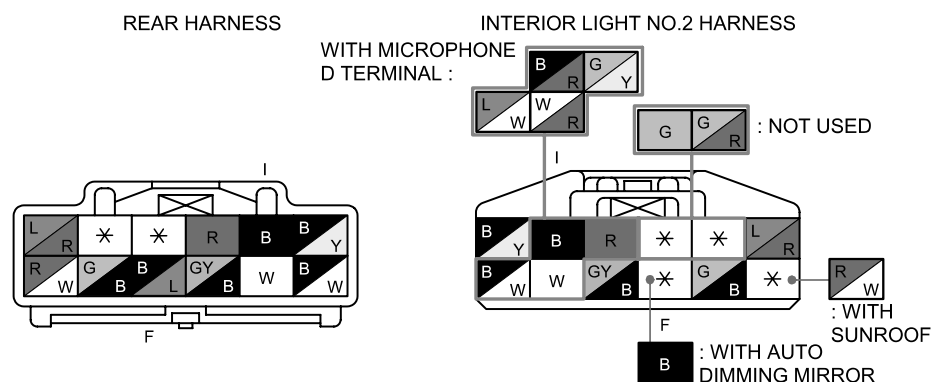


C-23 REAR HARNESS-REAR NO.5 HARNESS

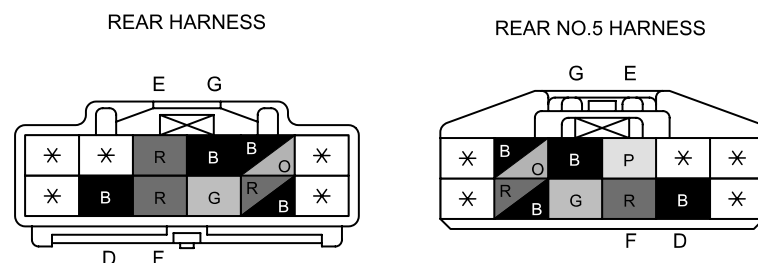


C-24 REAR HARNESS-SHORT CORD

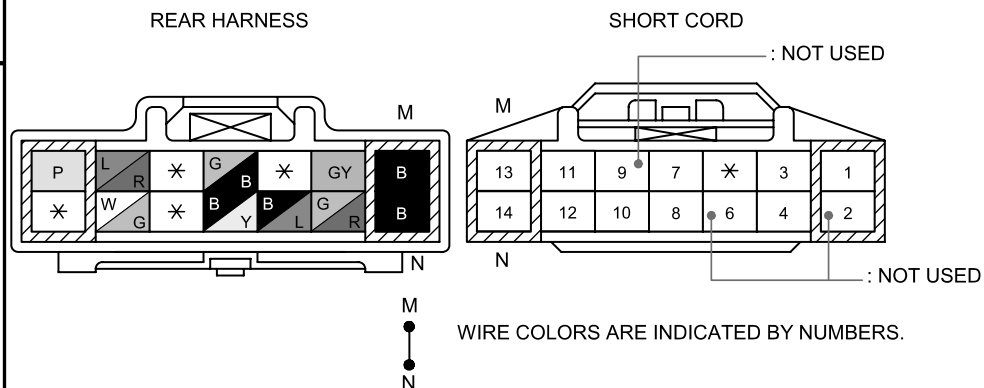


C-25 REAR HARNESS-SHORT CORD

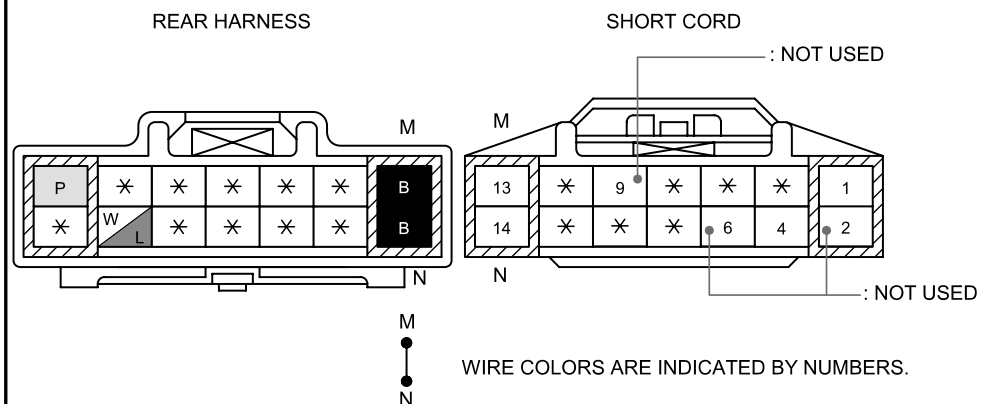

C-27 REAR HARNESS-REAR NO.4 HARNESS

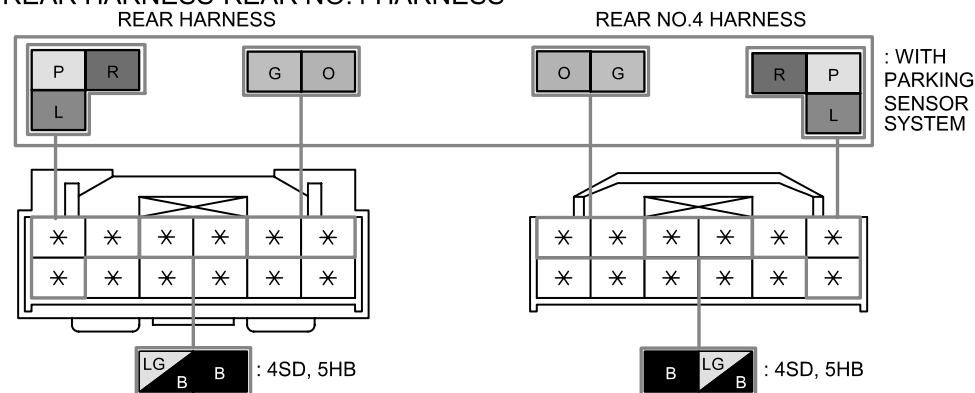

C-26 REAR HARNESS-SHORT CORD

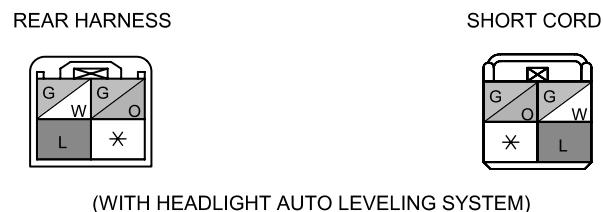


C-29

REAR HARNESS-DOOR NO.1 HARNESS

REAR HARNESS


DOOR NO.1 HARNESS

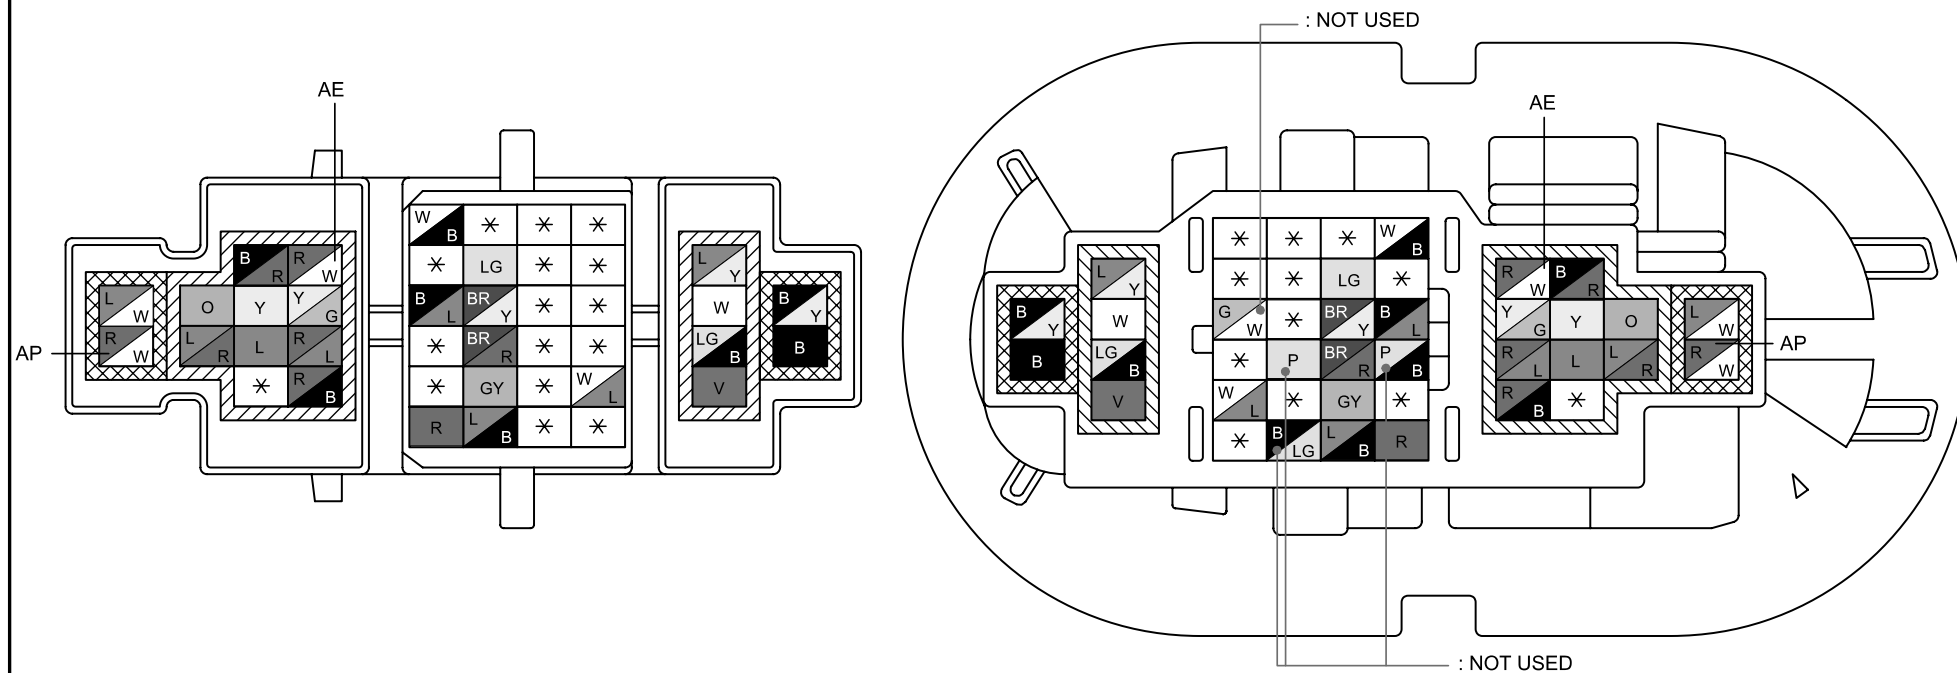


C-30

REAR HARNESS-DOOR NO.2 HARNESS

REAR HARNESS

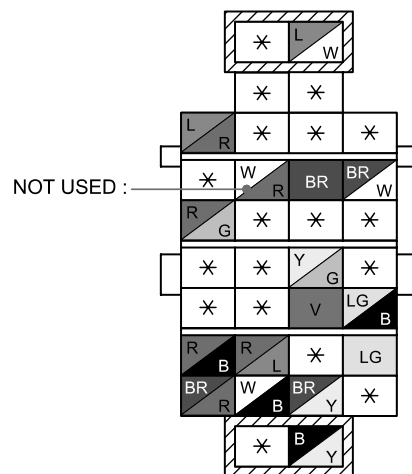


DOOR NO.2 HARNESS

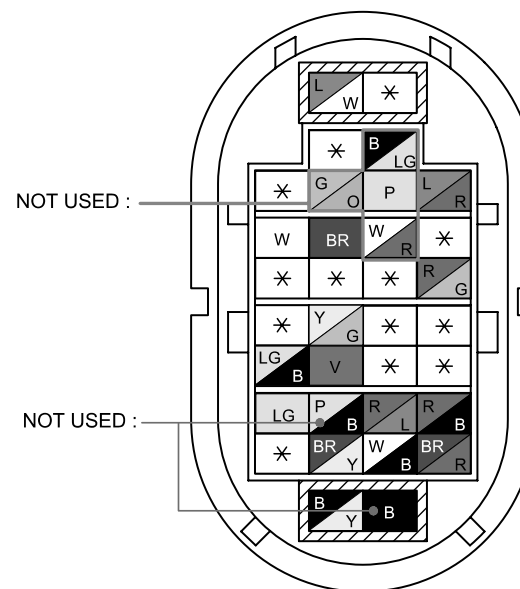


C-31

REAR HARNESS-DOOR NO.4 HARNESS

REAR HARNESS

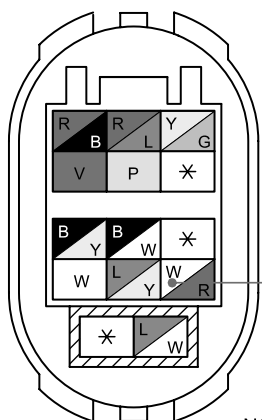


DOOR NO.4 HARNESS

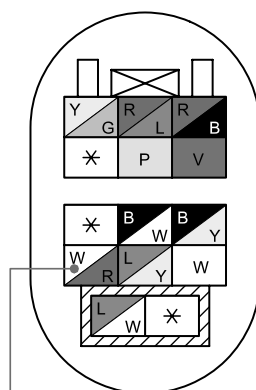


C-32

REAR HARNESS-DOOR NO.3 HARNESS

REAR HARNESS

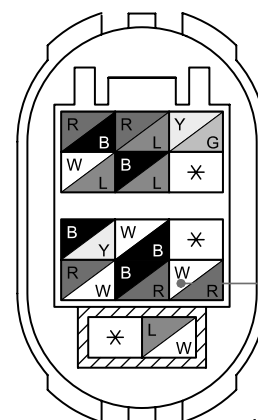


DOOR NO.3 HARNESS

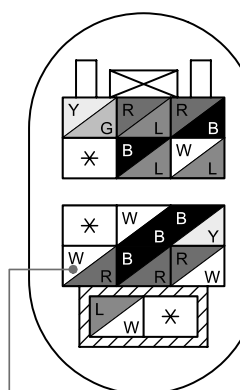


C-34

REAR HARNESS-INTERIOR LIGHT HARNESS

REAR HARNESS

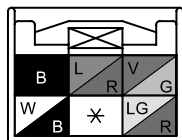

INTERIOR LIGHT HARNESS

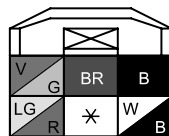


(4SD, WAGON)


C-35

REAR HARNESS-REAR NO.2 HARNESS

REAR HARNESS

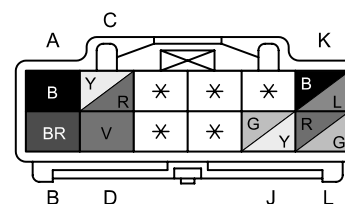

REAR NO.2 HARNESS

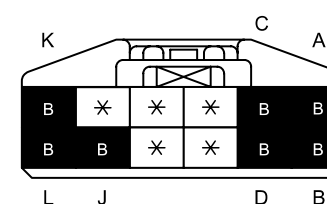


(4SD)


C-36

REAR HARNESS-REAR NO.3 HARNESS

REAR HARNESS

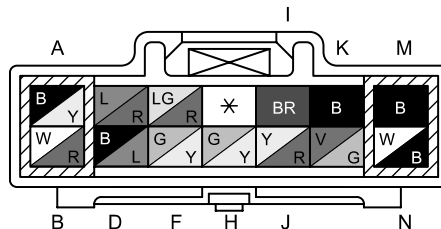

REAR NO.3 HARNESS

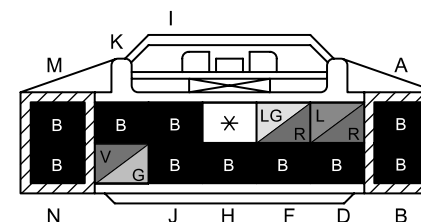


(5HB)


C-37

REAR HARNESS-REAR NO.3 HARNESS

REAR HARNESS

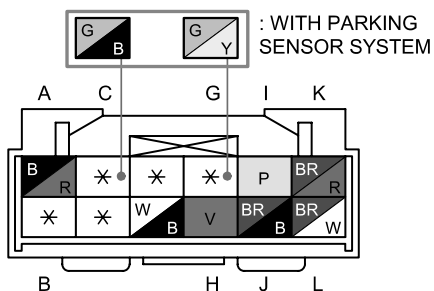

REAR NO.3 HARNESS

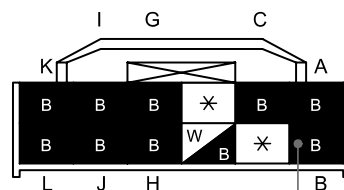


(5HB)

: NOT USED


C-38

REAR HARNESS-REAR NO.3 HARNESS

 REAR HARNESS



REAR NO.3 HARNESS

 


(5HB)


COMMON CONNECTOR LIST

00C-10


C-39
REAR HARNESS-SHORT CORD

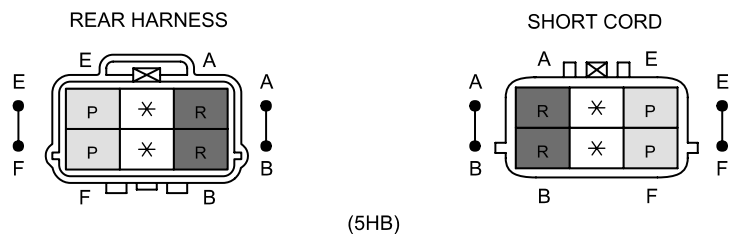


C-40
SHORT CONNECTOR

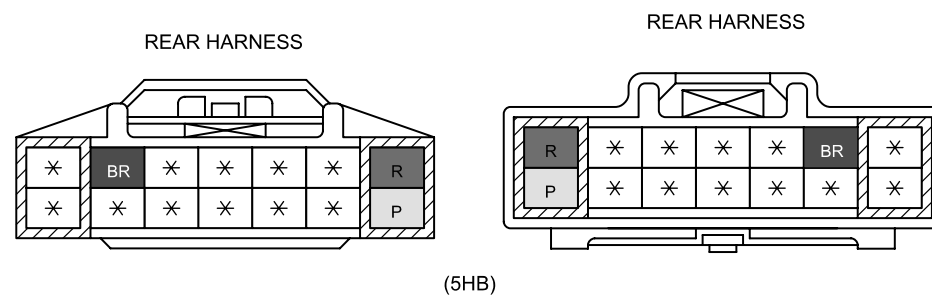


C-41
REAR NO.2 HARNESS-REAR NO.3 HARNESS

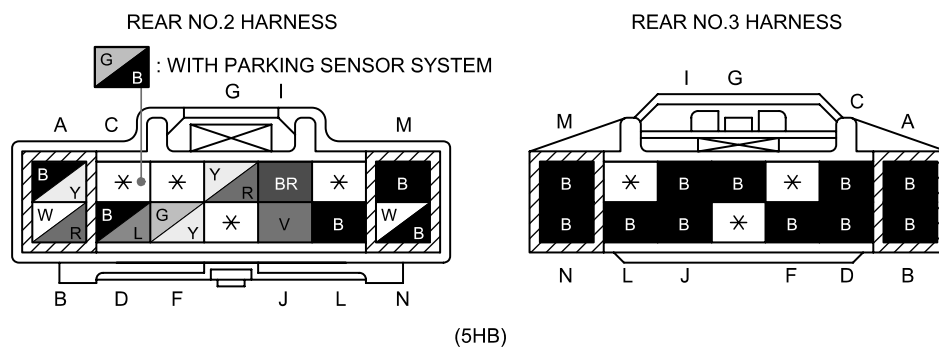


C-42
REAR NO.2 HARNESS-REAR NO.3 HARNESS

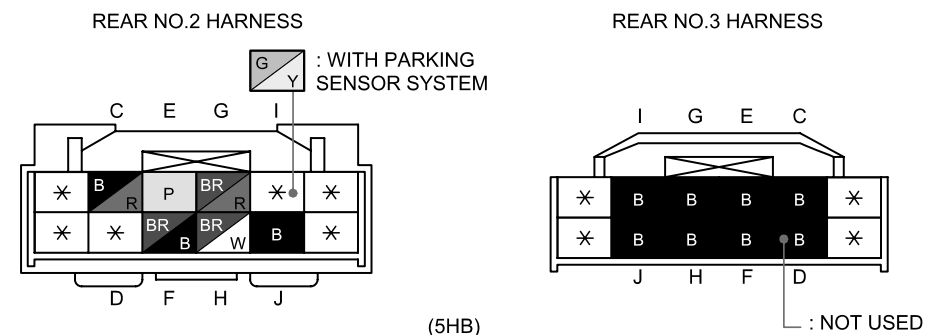

C-43
REAR NO.3 HARNESS-INTERIOR LIGHT HARNESS

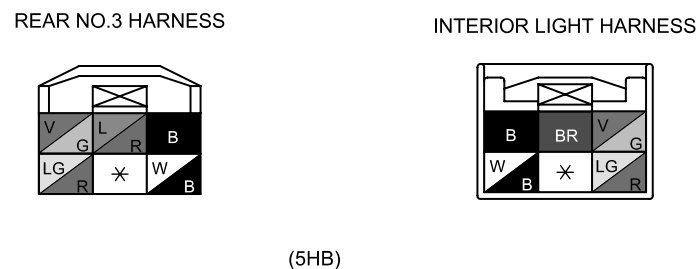


C-44
FRONT HARNESS-SHORT CORD

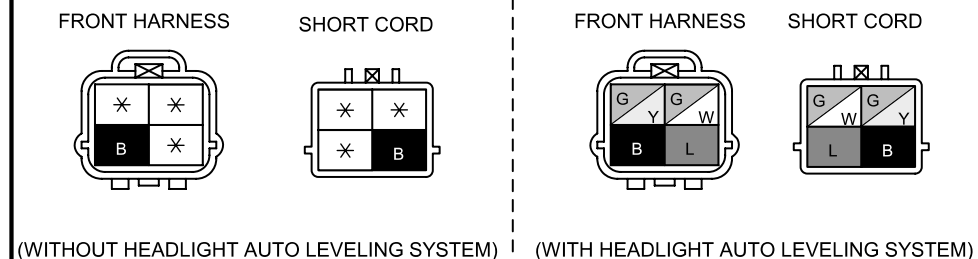


C-47
 REAR NO.4 HARNESS-SHORT CORD

REAR NO.4 HARNESS

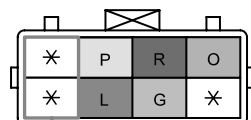


SHORT CORD

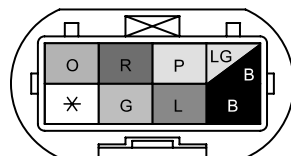


(WITH PARKING SENSOR SYSTEM)

C-48
 REAR HARNESS-SHORT CORD

 REAR HARNESS




SHORT CORD

 

(5HB)


C-50
 REAR HARNESS-REAR NO.2 HARNESS

REAR HARNESS

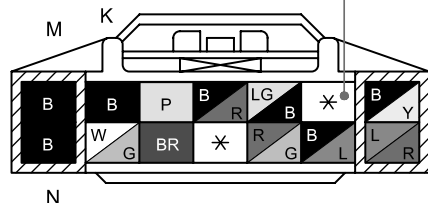WITH PARKING
SENSOR SYSTEM :

(WAGON)


REAR NO.2 HARNESS

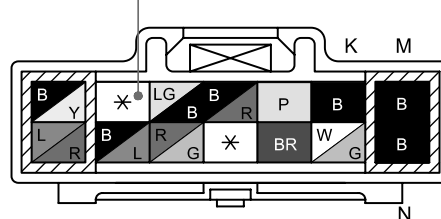: WITH PARKING
SENSOR SYSTEM


N

C-51
 REAR HARNESS-REAR NO.2 HARNESS


REAR HARNESS

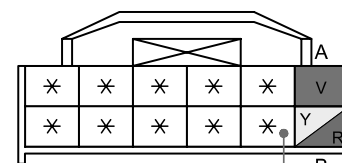WITH PARKING
SENSOR SYSTEM :

(WAGON)

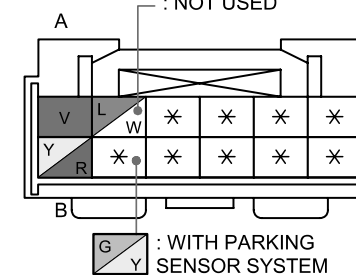REAR NO.2 HARNESS
: NOT USED: WITH PARKING
SENSOR SYSTEM
C-52
 JOINT CONNECTOR


REAR HARNESS

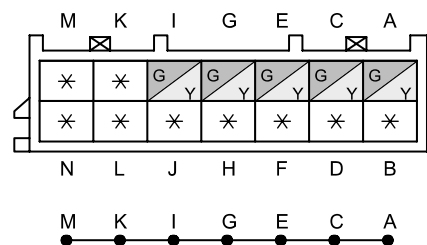


(WAGON)

C-61
FRONT HARNESS-SHORT CORD

FRONT HARNESS

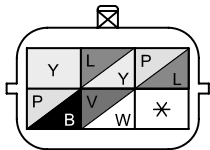


SHORT CORD

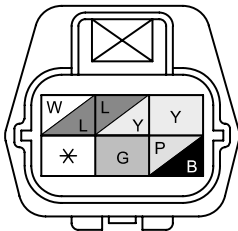


(MZR-CD 2.2)

C-65
FRONT HARNESS-SHORT CORD

FRONT HARNESS


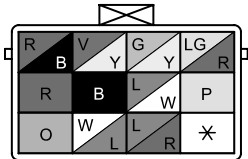


SHORT CORD


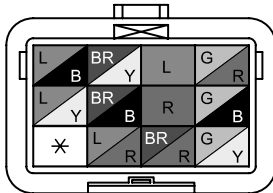



(MZR-CD 2.2)



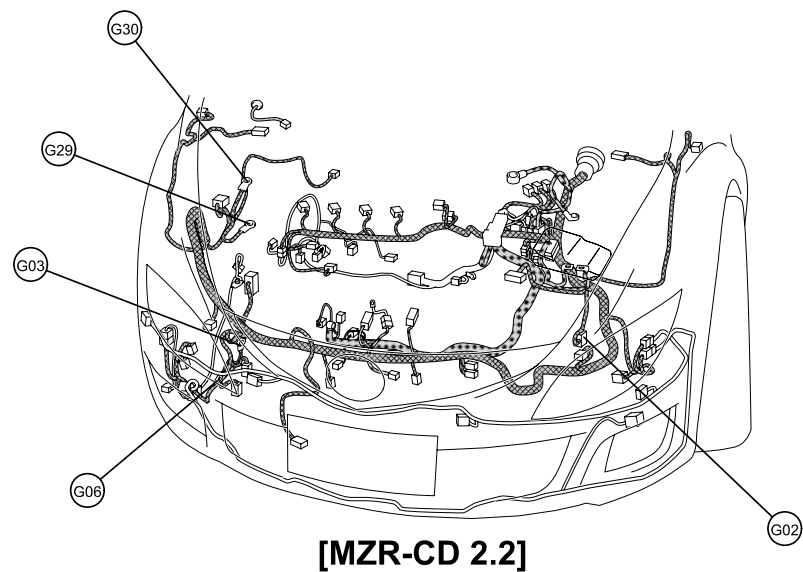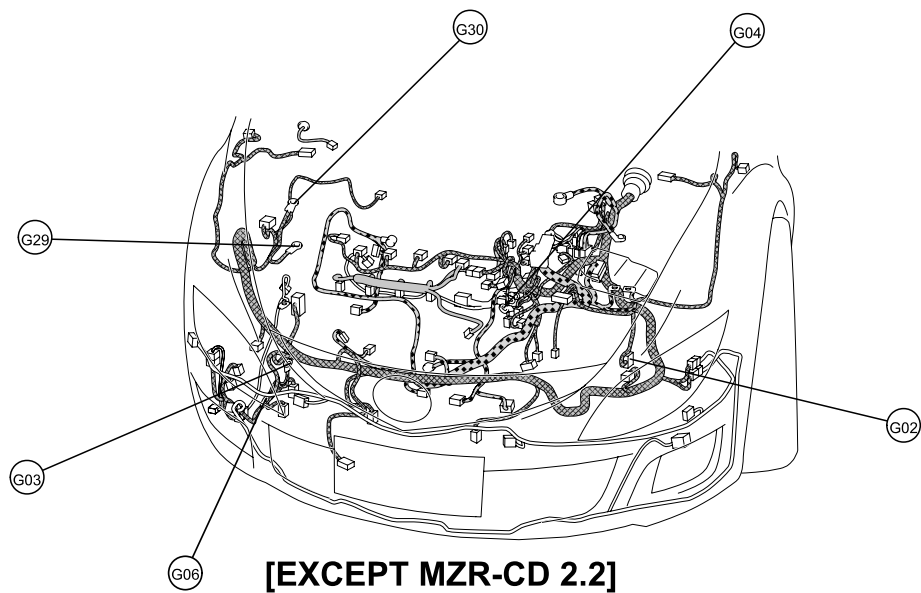



	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

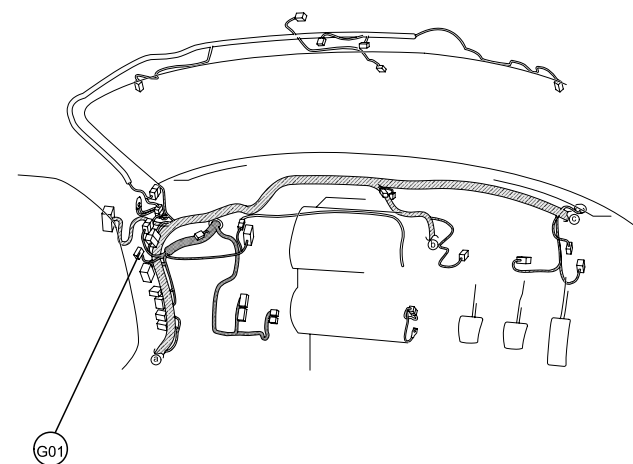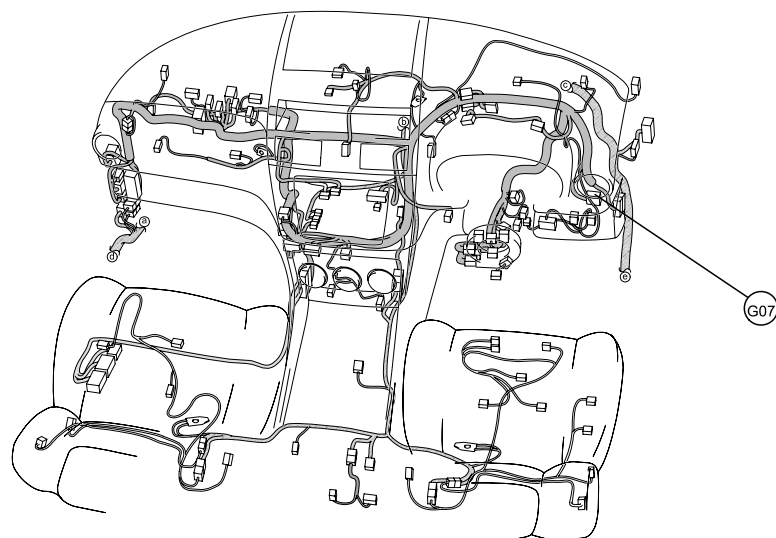


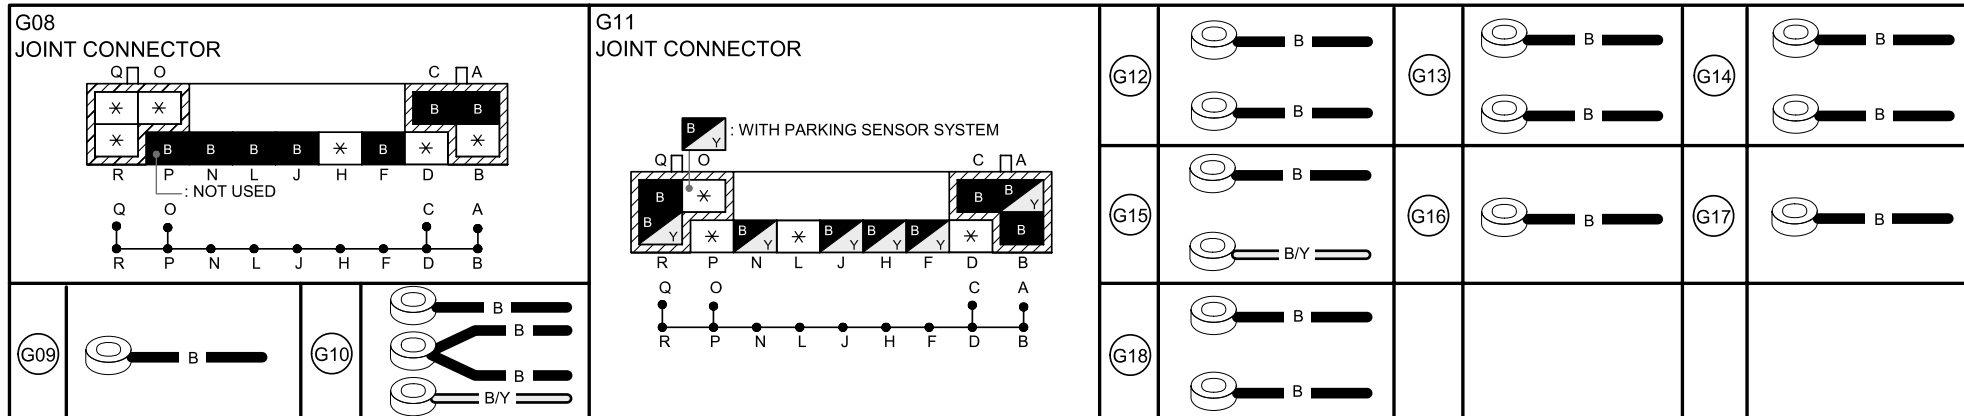



@2 : WITH PARKING SENSOR SYSTEM

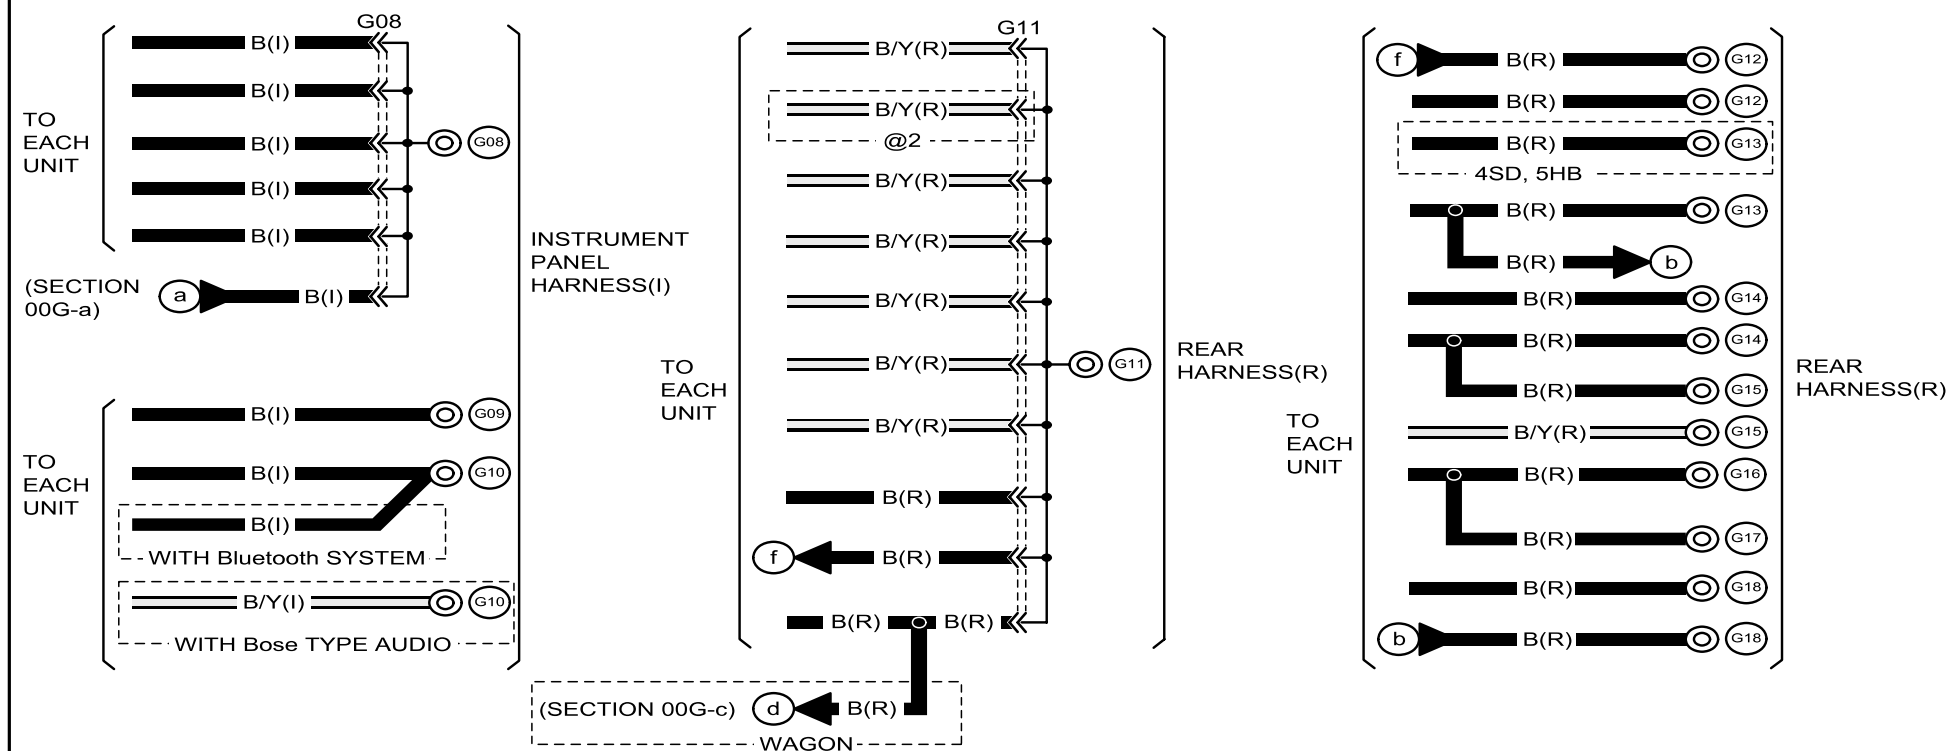


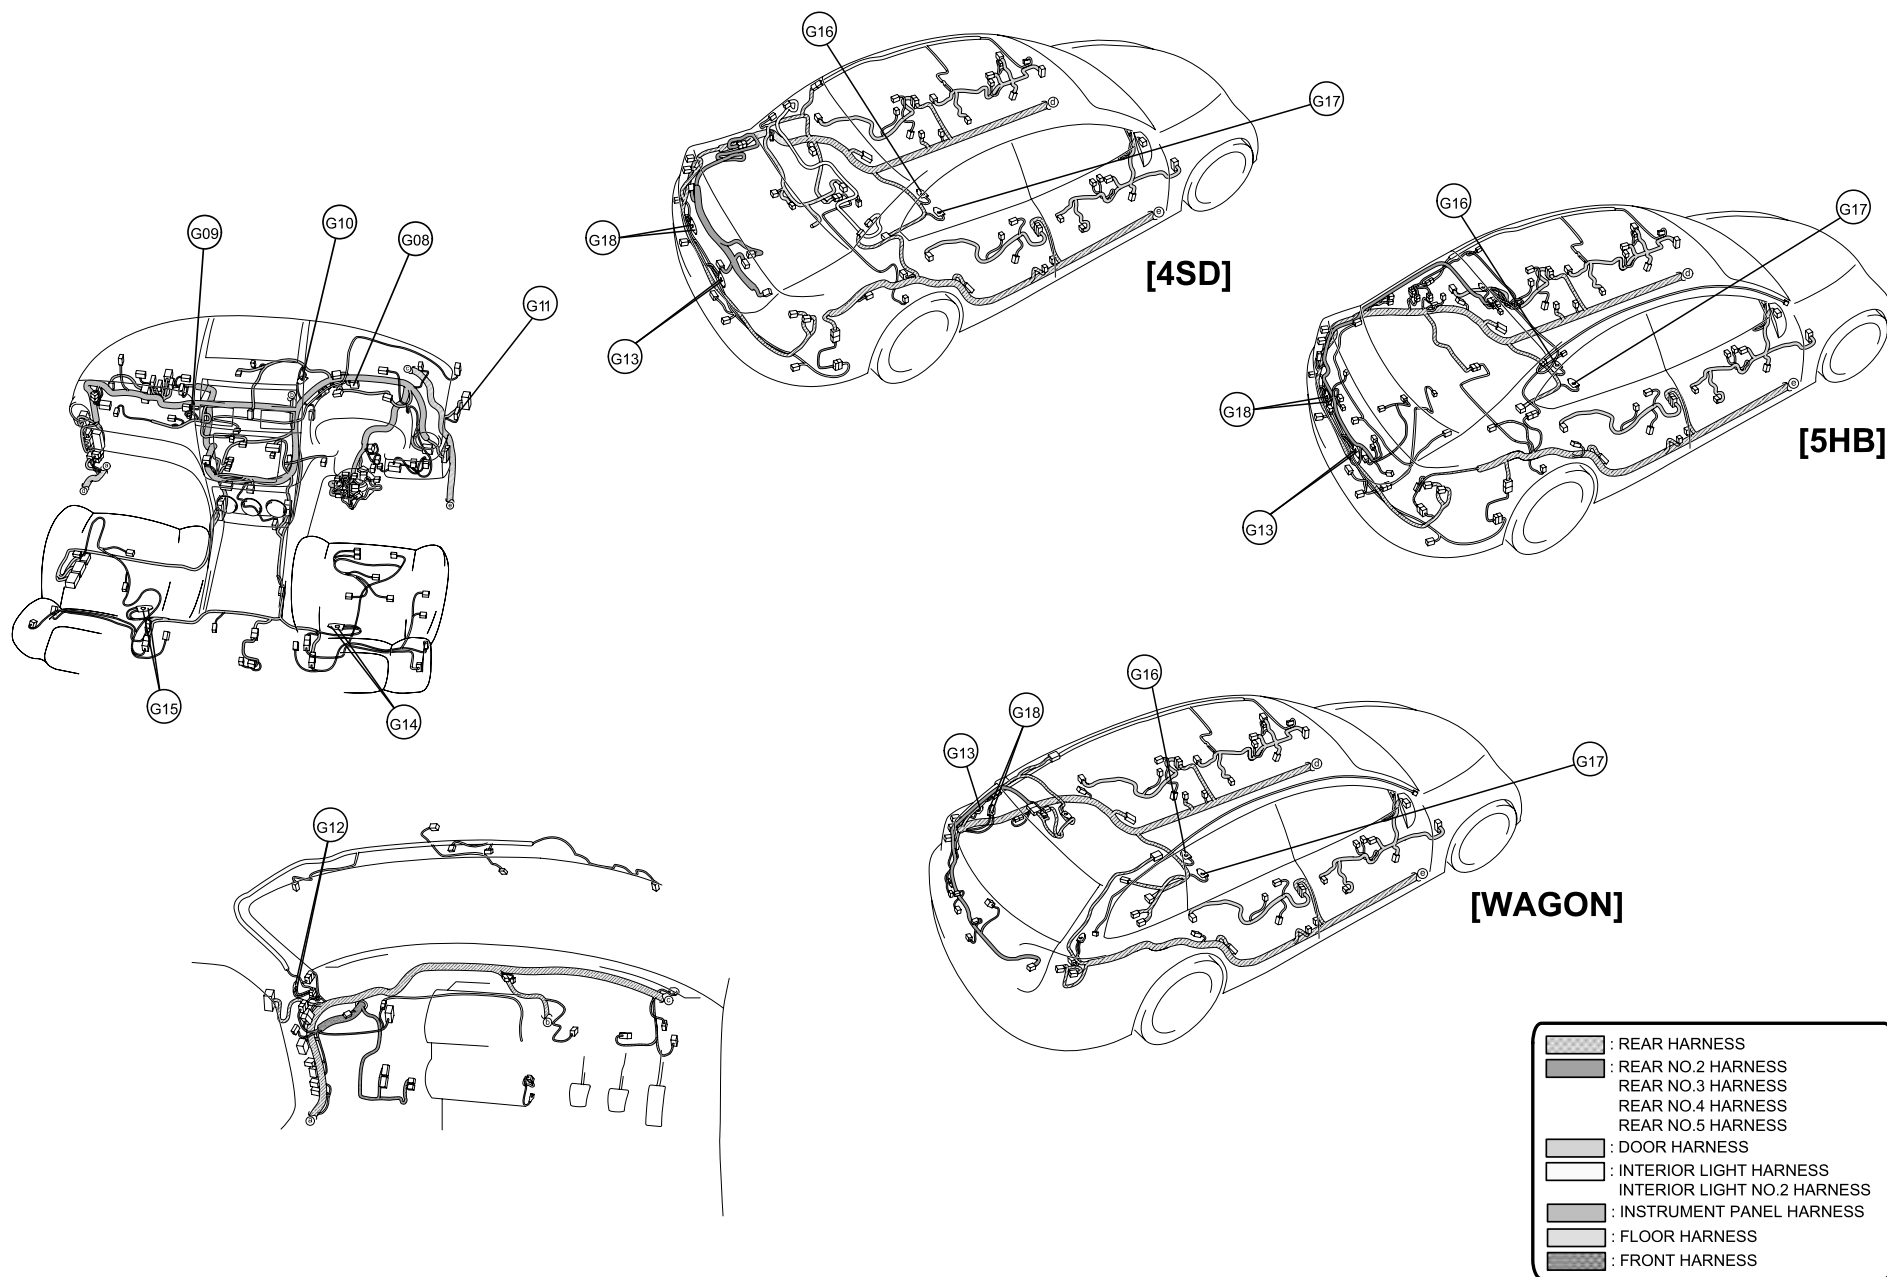


G19		G20		G22		G23		G24		G25		G26	
G27													

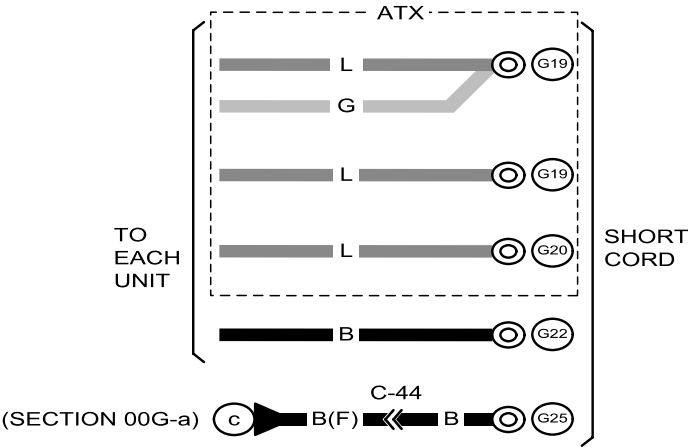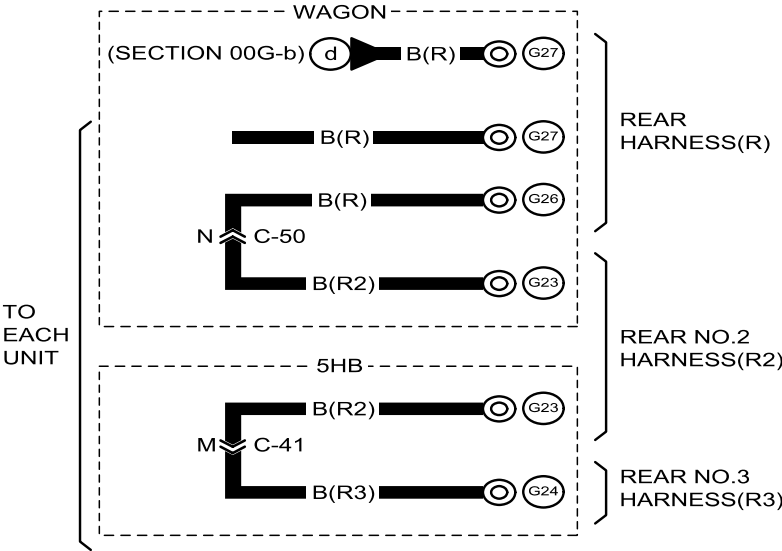

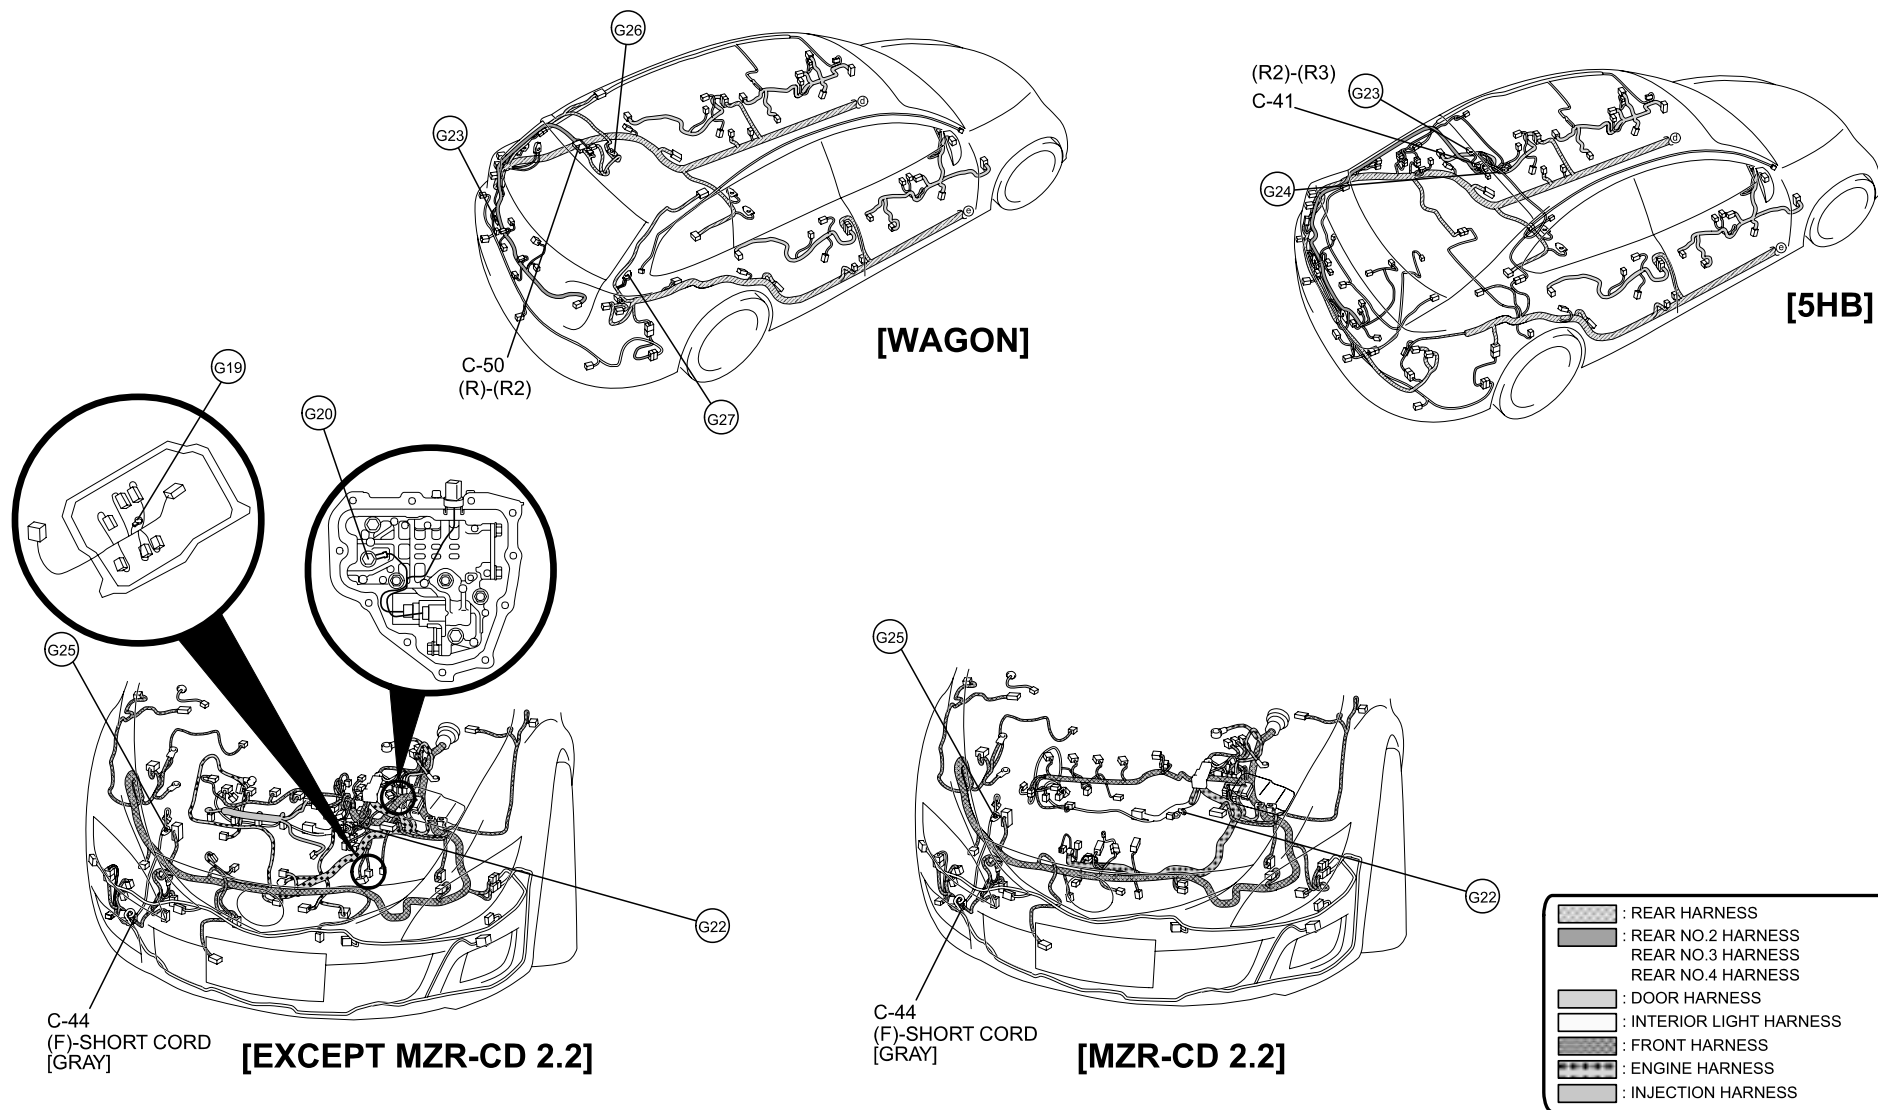

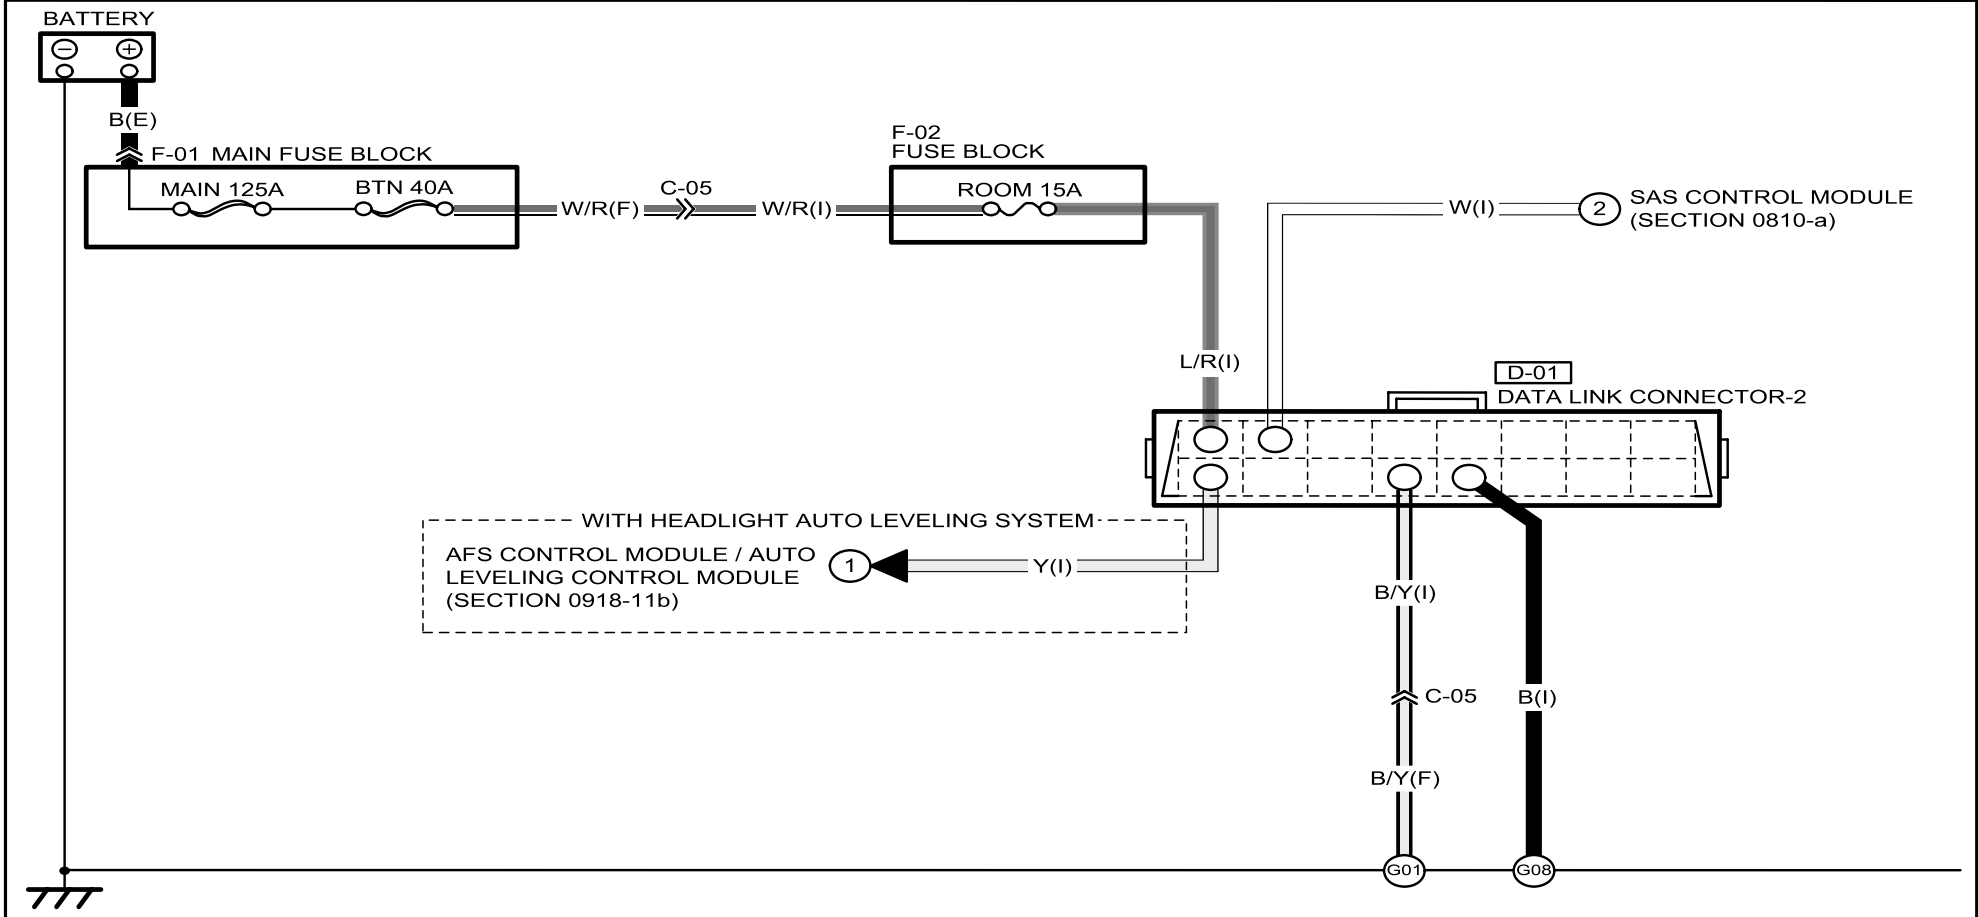


D-01 DATA LINK CONNECTOR-2						

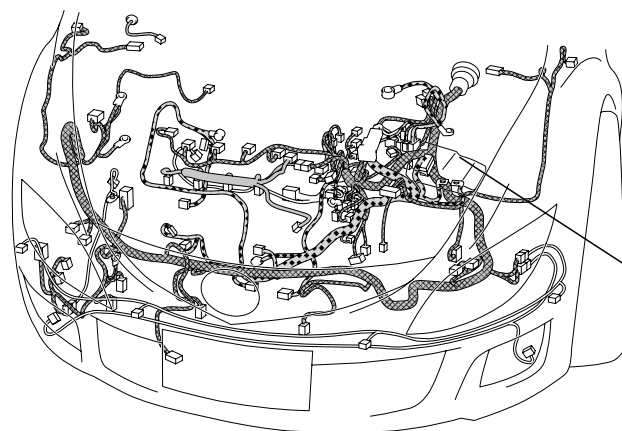

[EXCEPT MZR-CD 2.2]

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

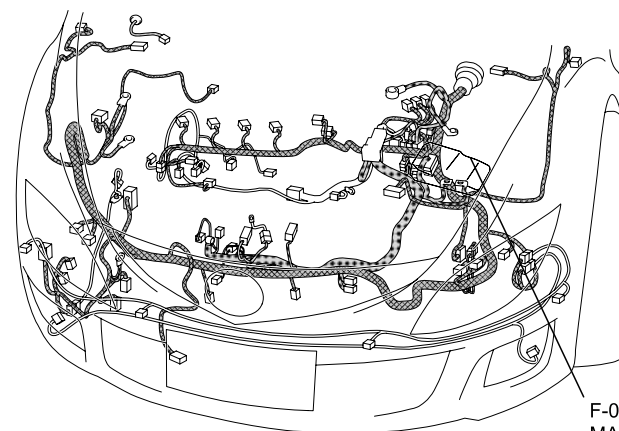


[MZR-CD 2.2]

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

[GRAY]
(F)-(I)
C-05


F-02
FUSE BLOCK
(REFER TO 00F SECTION)

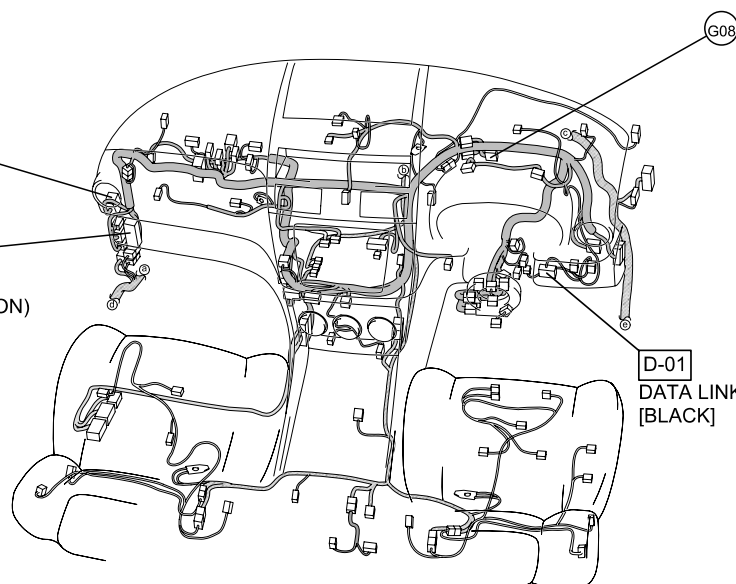


D-01
DATA LINK CONNECTOR-2
[BLACK]

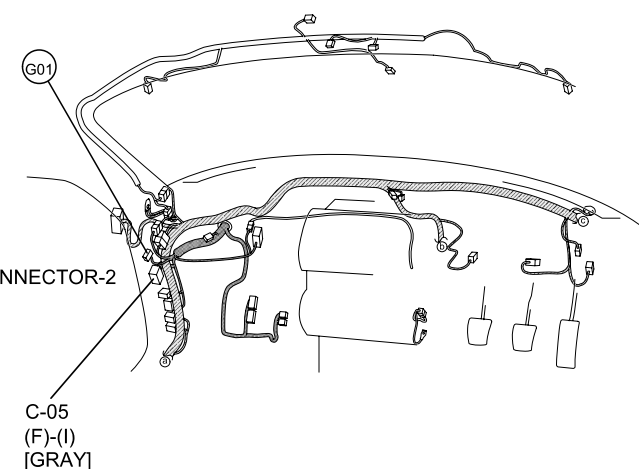


C-05
(F)-(I)
[GRAY]

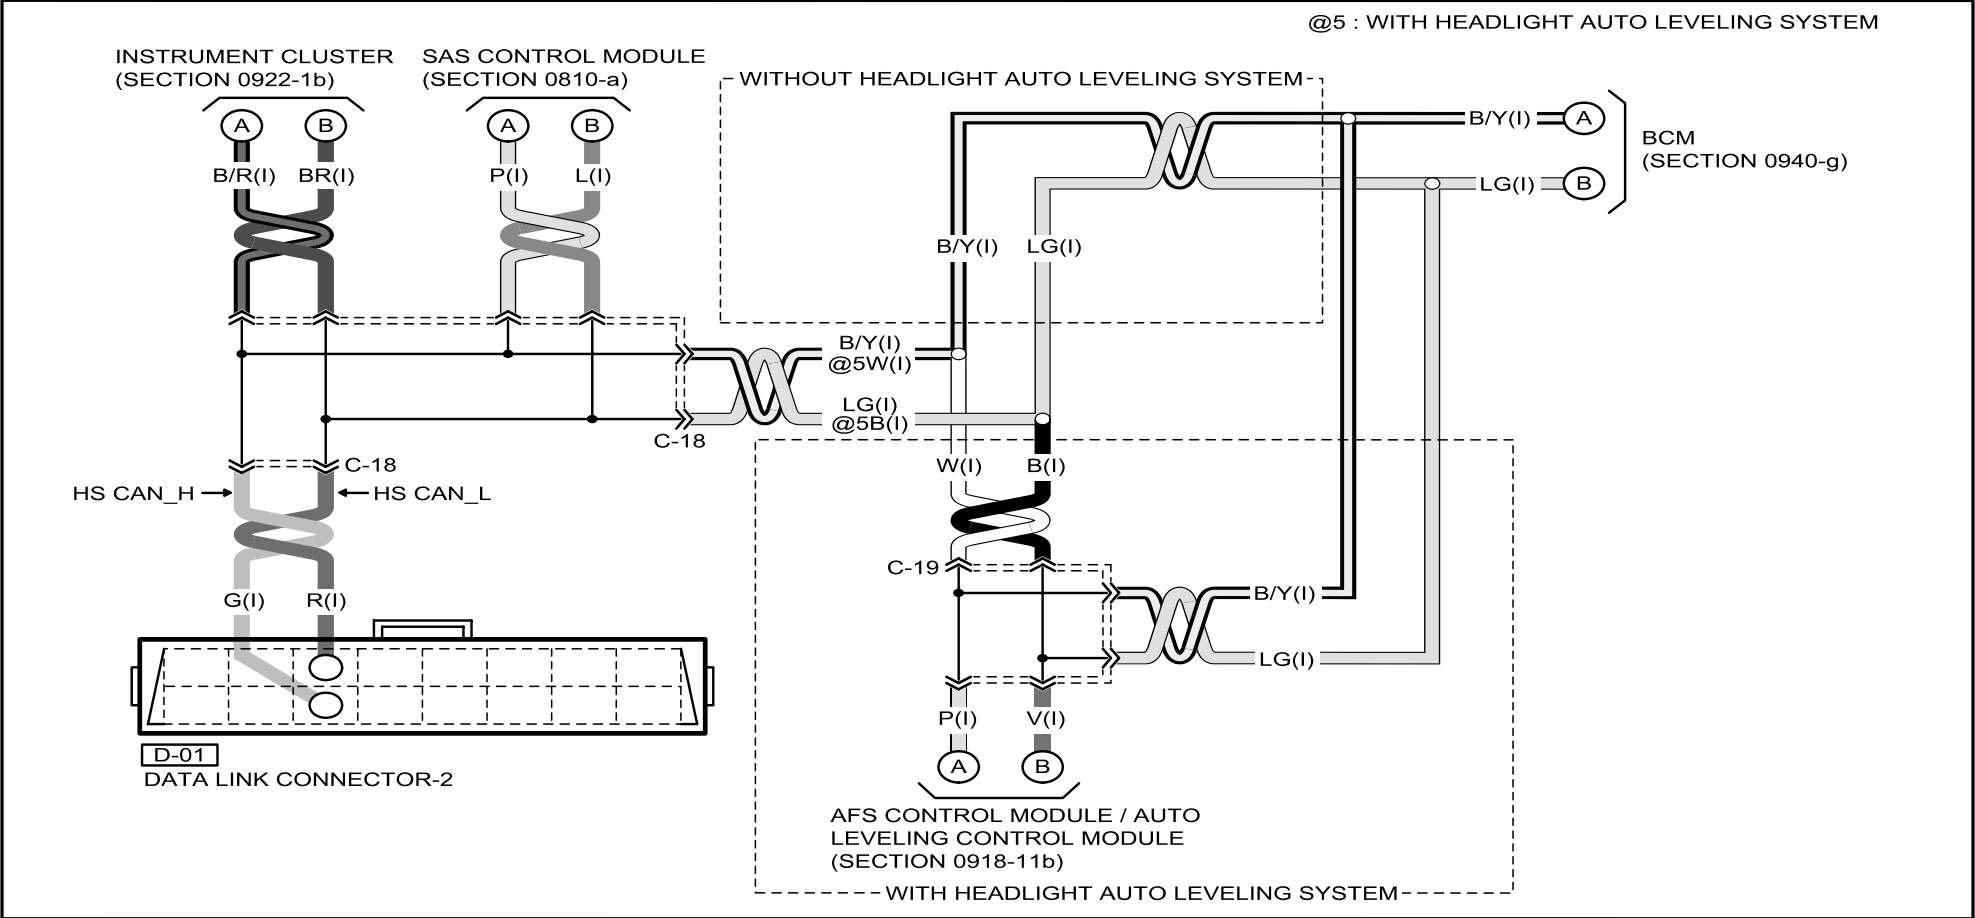


<p>D-01 DATA LINK CONNECTOR-2</p> <p>Y : WITH HEADLIGHT AUTO LEVELING SYSTEM</p> <p>NOTE : SEEN FROM TERMINAL SIDE</p>					

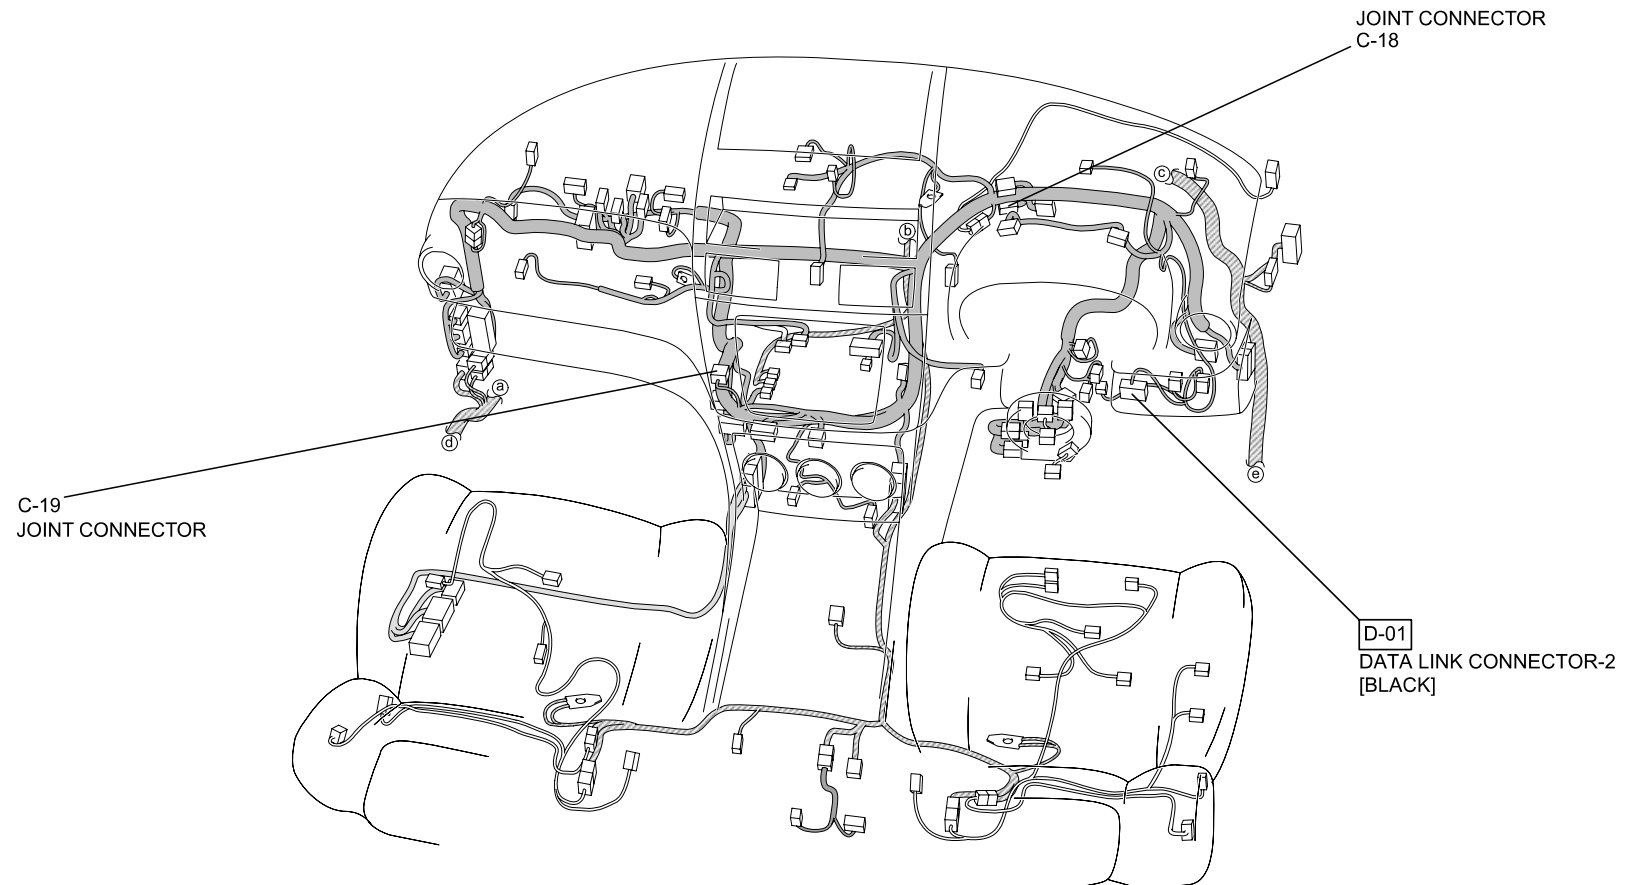

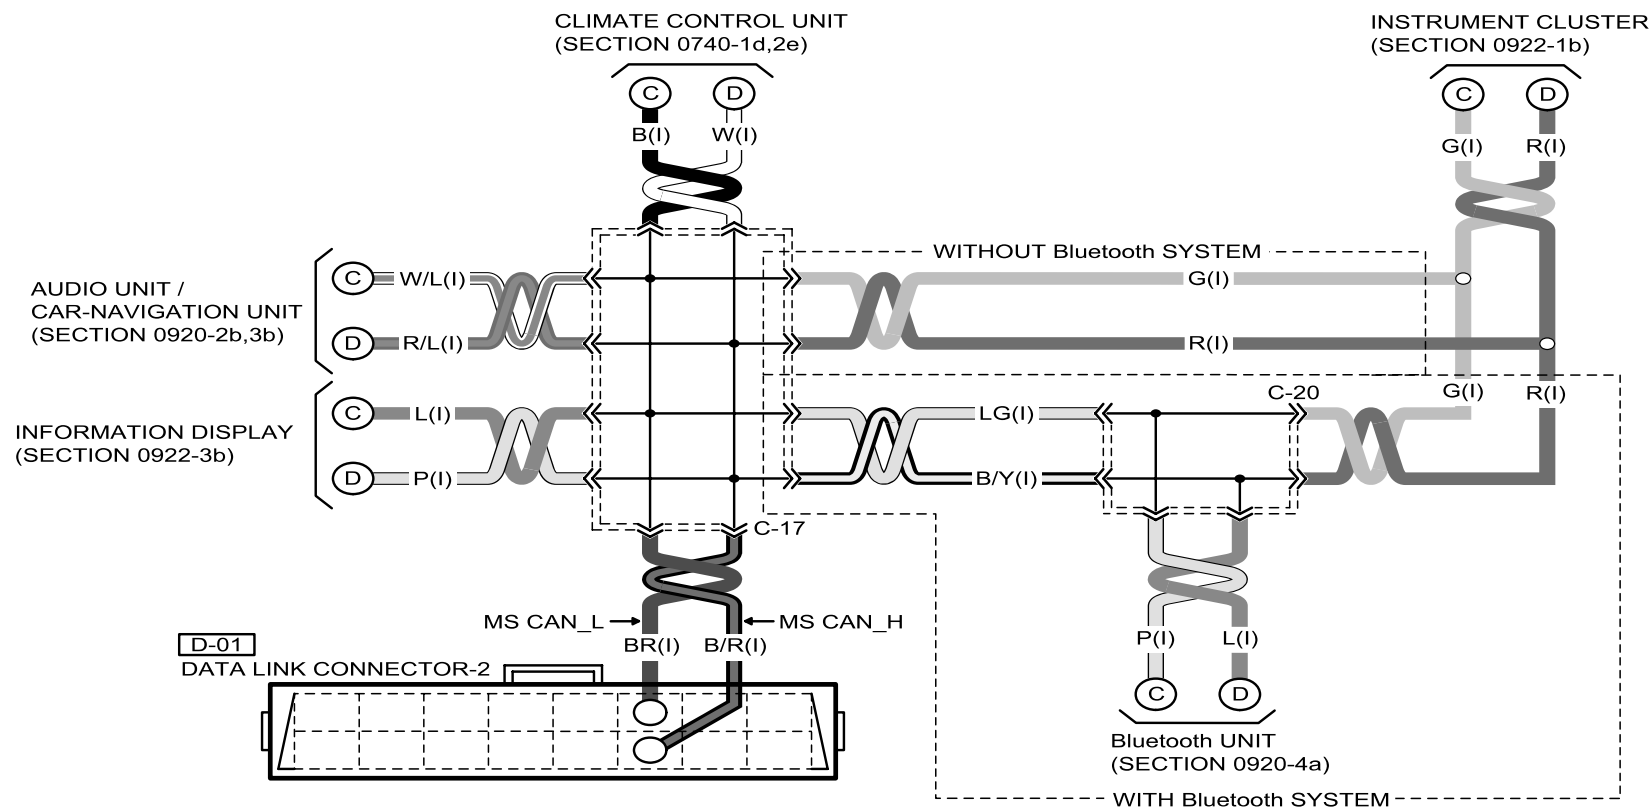



D-01	DATA LINK CONNECTOR-2
------	-----------------------

 


Y : WITH HEADLIGHT AUTO LEVELING SYSTEM

NOTE : SEEN FROM TERMINAL SIDE

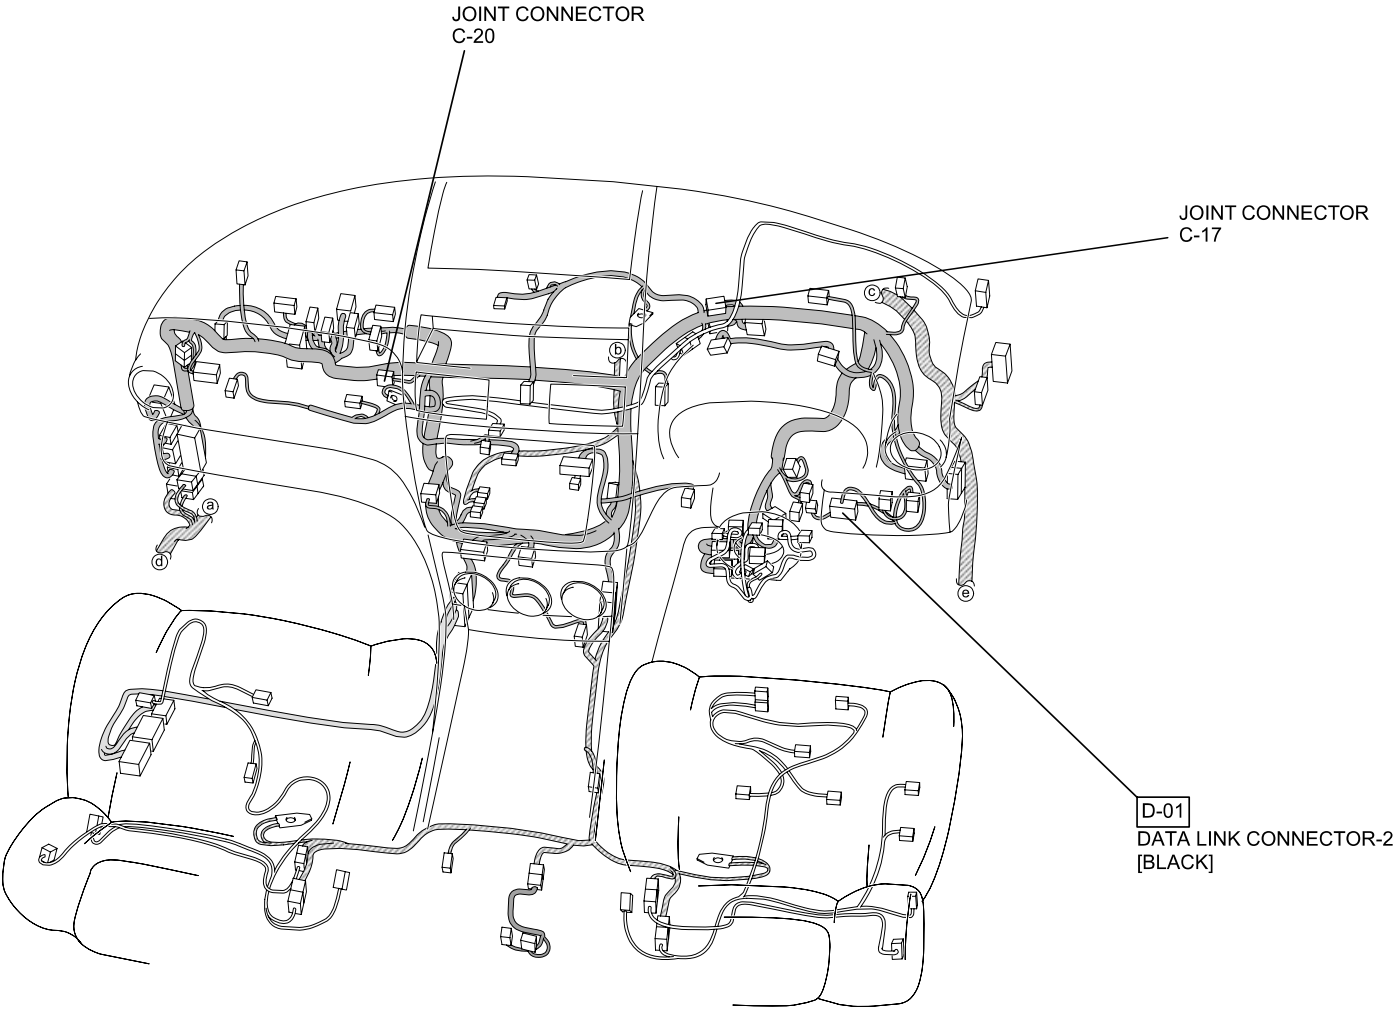


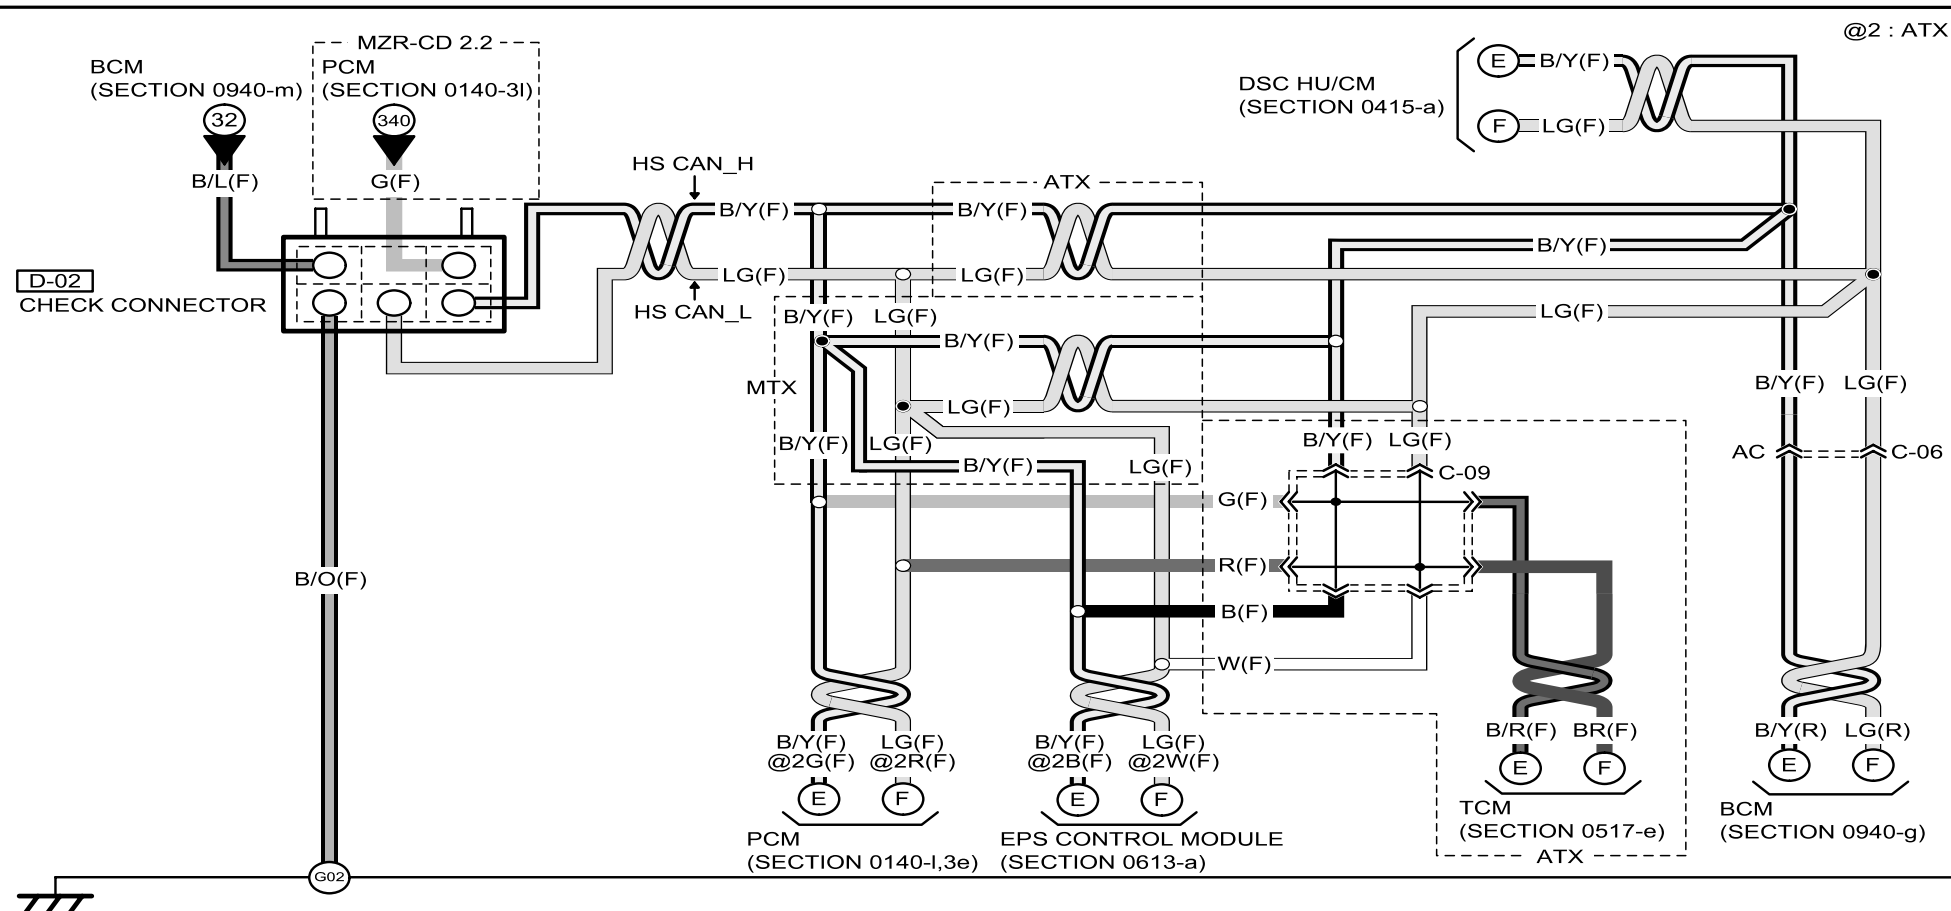


D-02
CHECK CONNECTOR



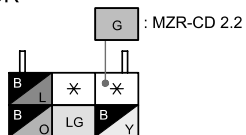


NOTE : SEEN FROM TERMINAL SIDE

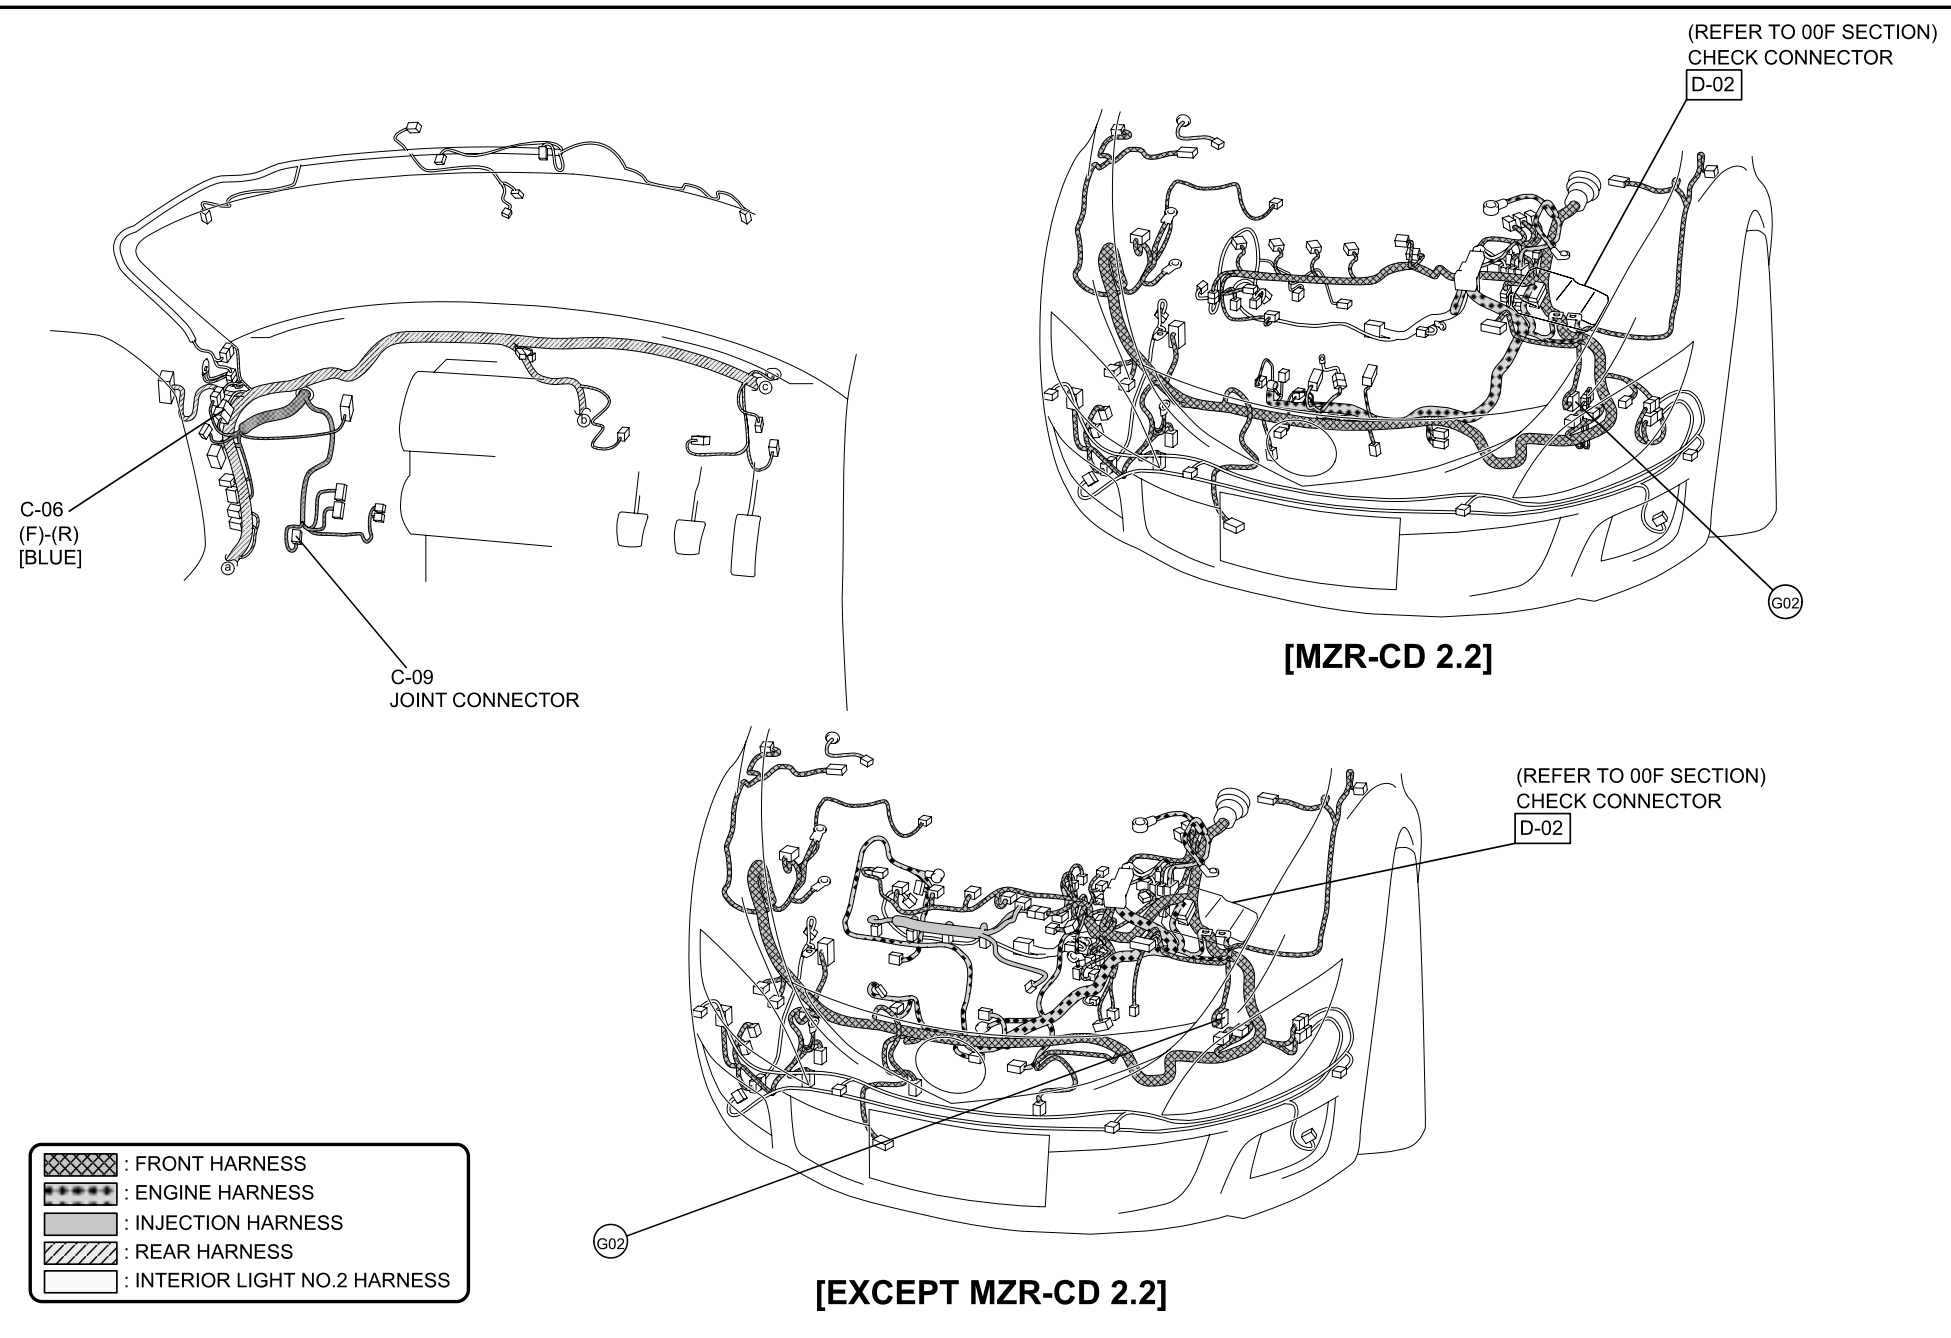

52

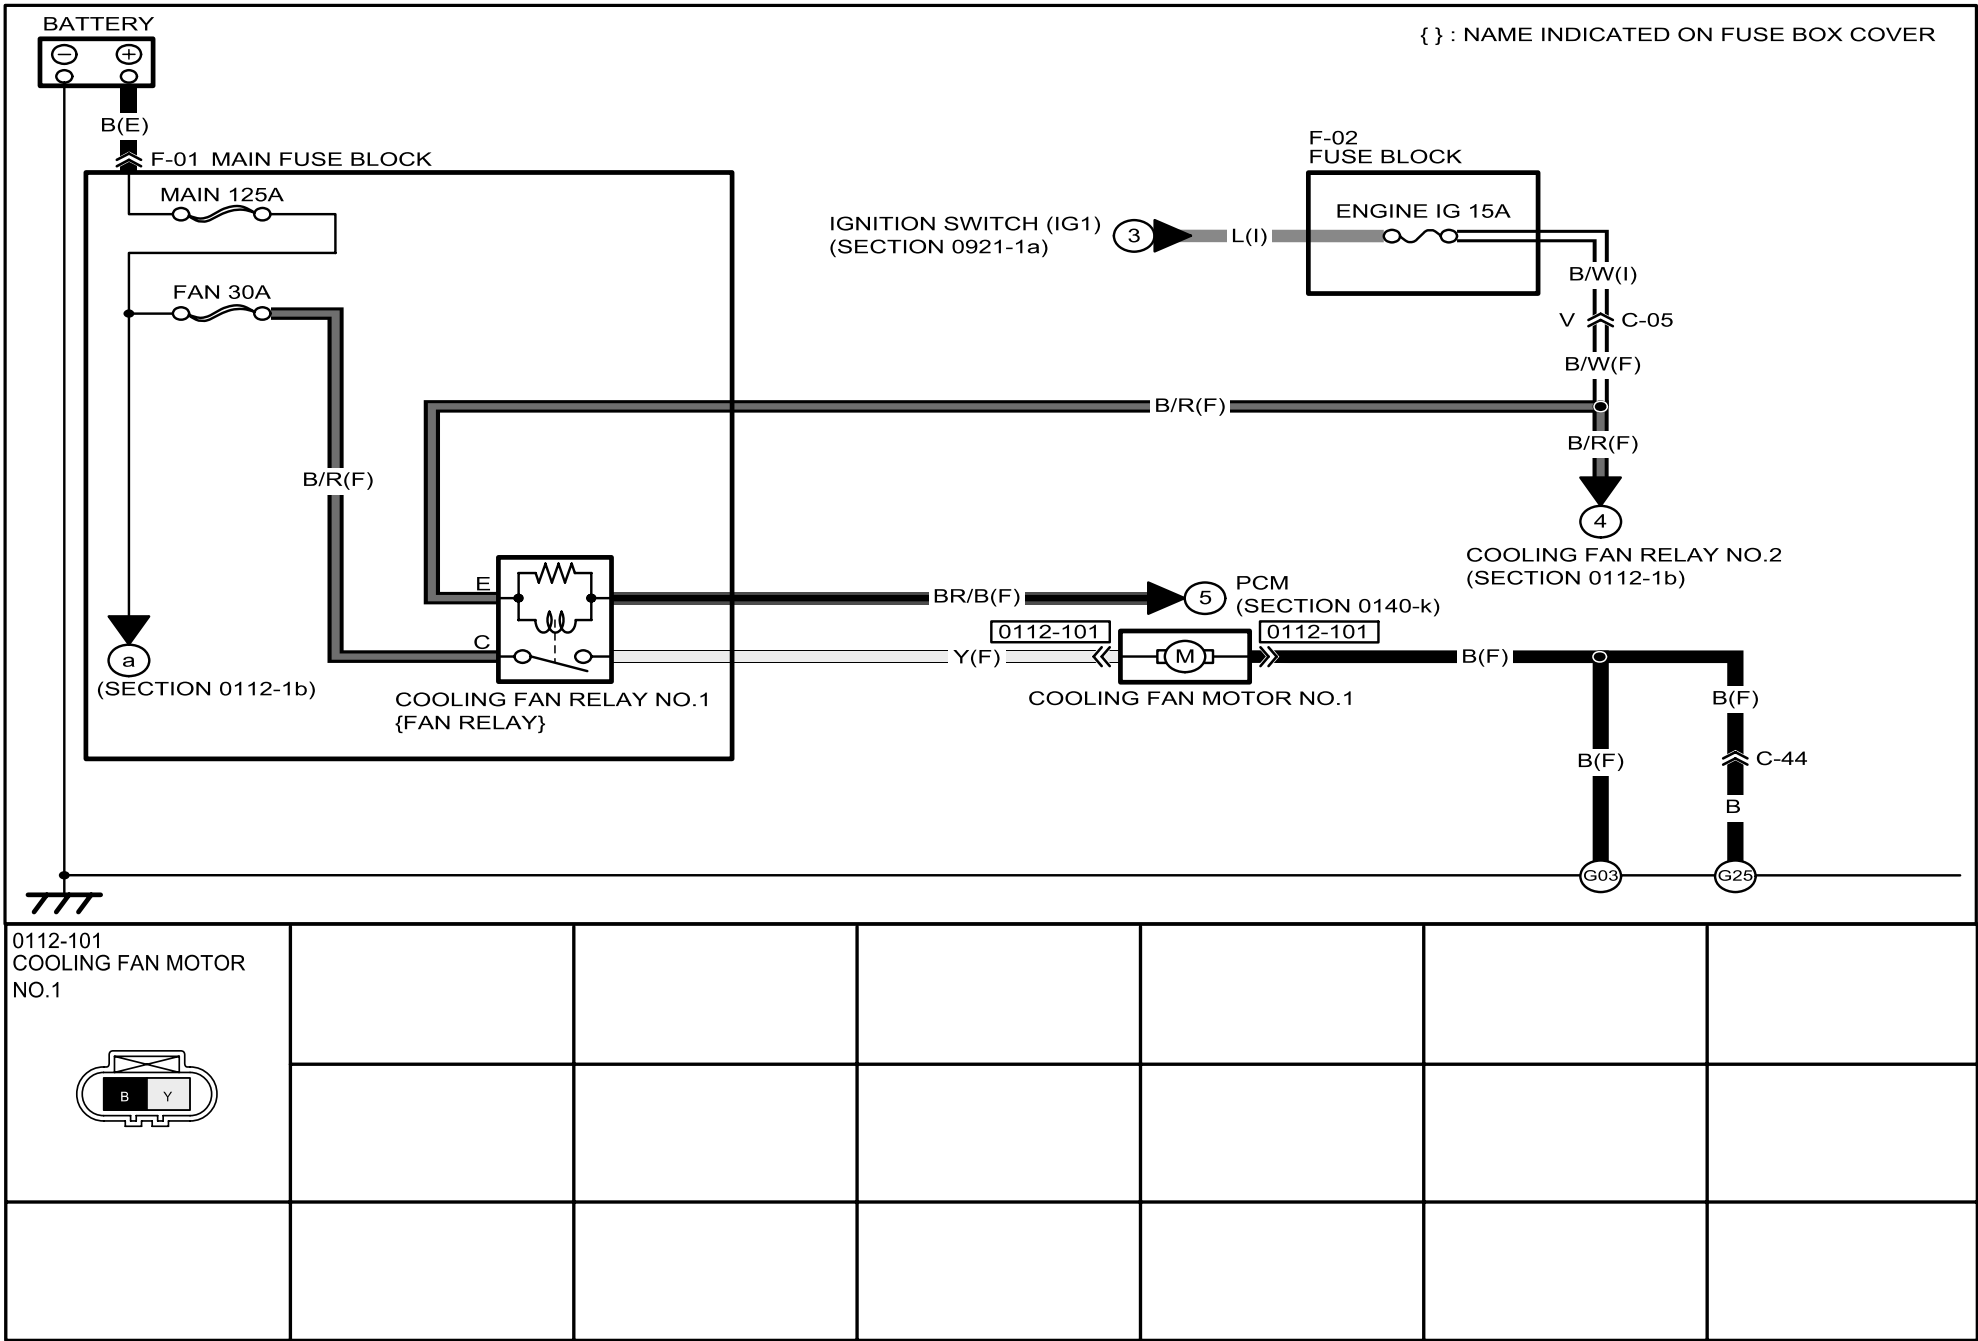

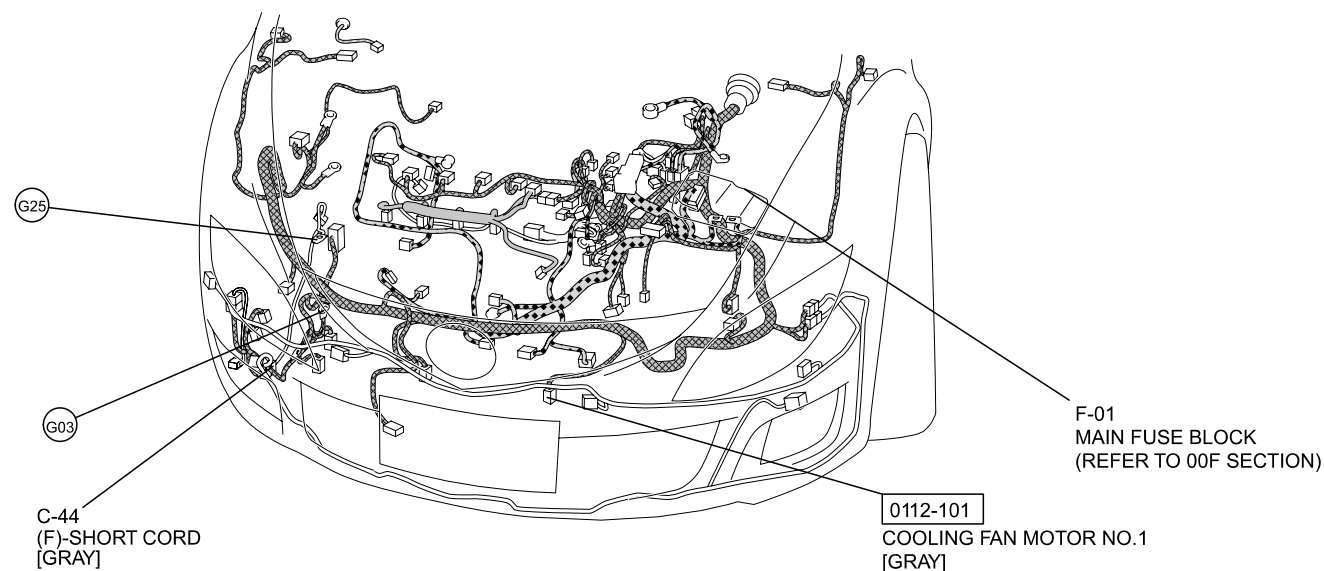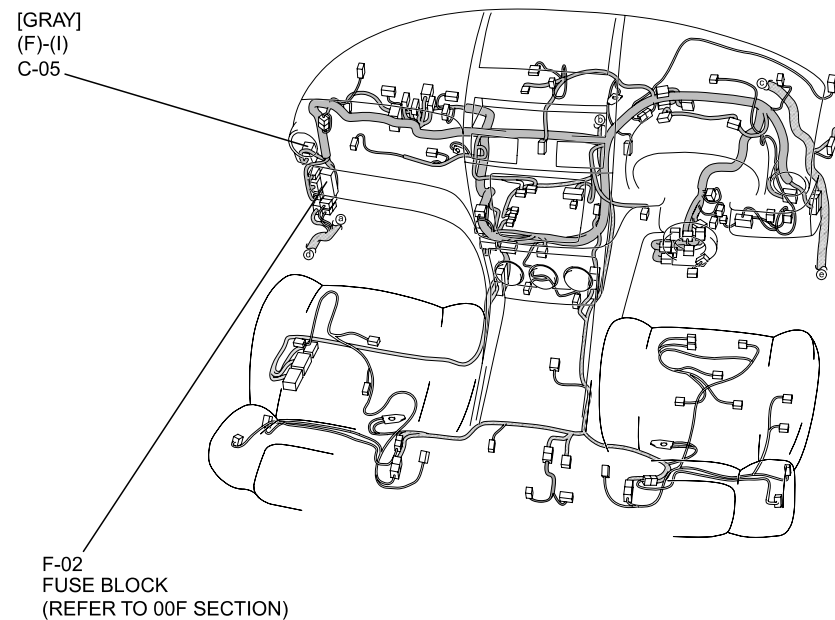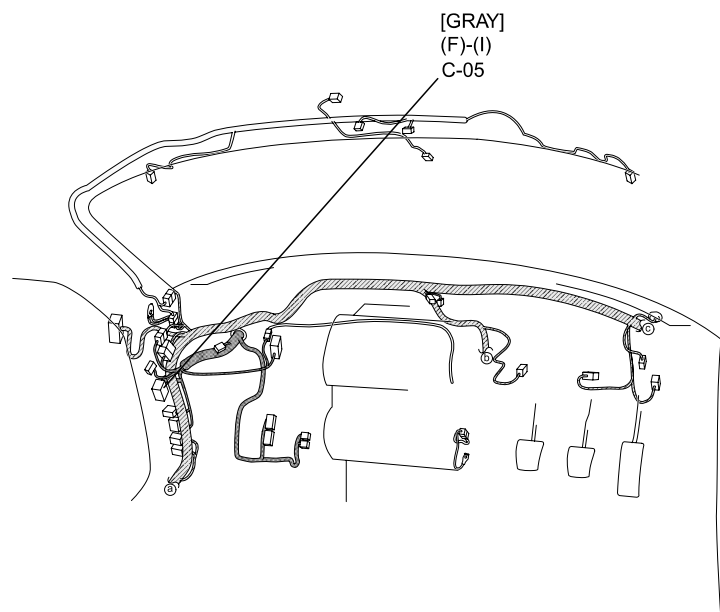

	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

{ } : NAME INDICATED ON FUSE BOX COVER

F-01 MAIN FUSE BLOCK

(SECTION 0112-1a)



IGNITION SWITCH (IG1)
(SECTION 0112-1a)



B/R(F)

COOLING FAN MOTOR NO.2

0112-102


0112-102



L(F)

B(F)

COOLING FAN RELAY NO.2
{AD FAN RELAY}

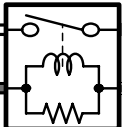

W/R(F)

PCM
(SECTION 0140-k)



B(F)

B(F)

 
C-44


B


G03

G25


0112-102
COOLING FAN MOTOR
NO.2




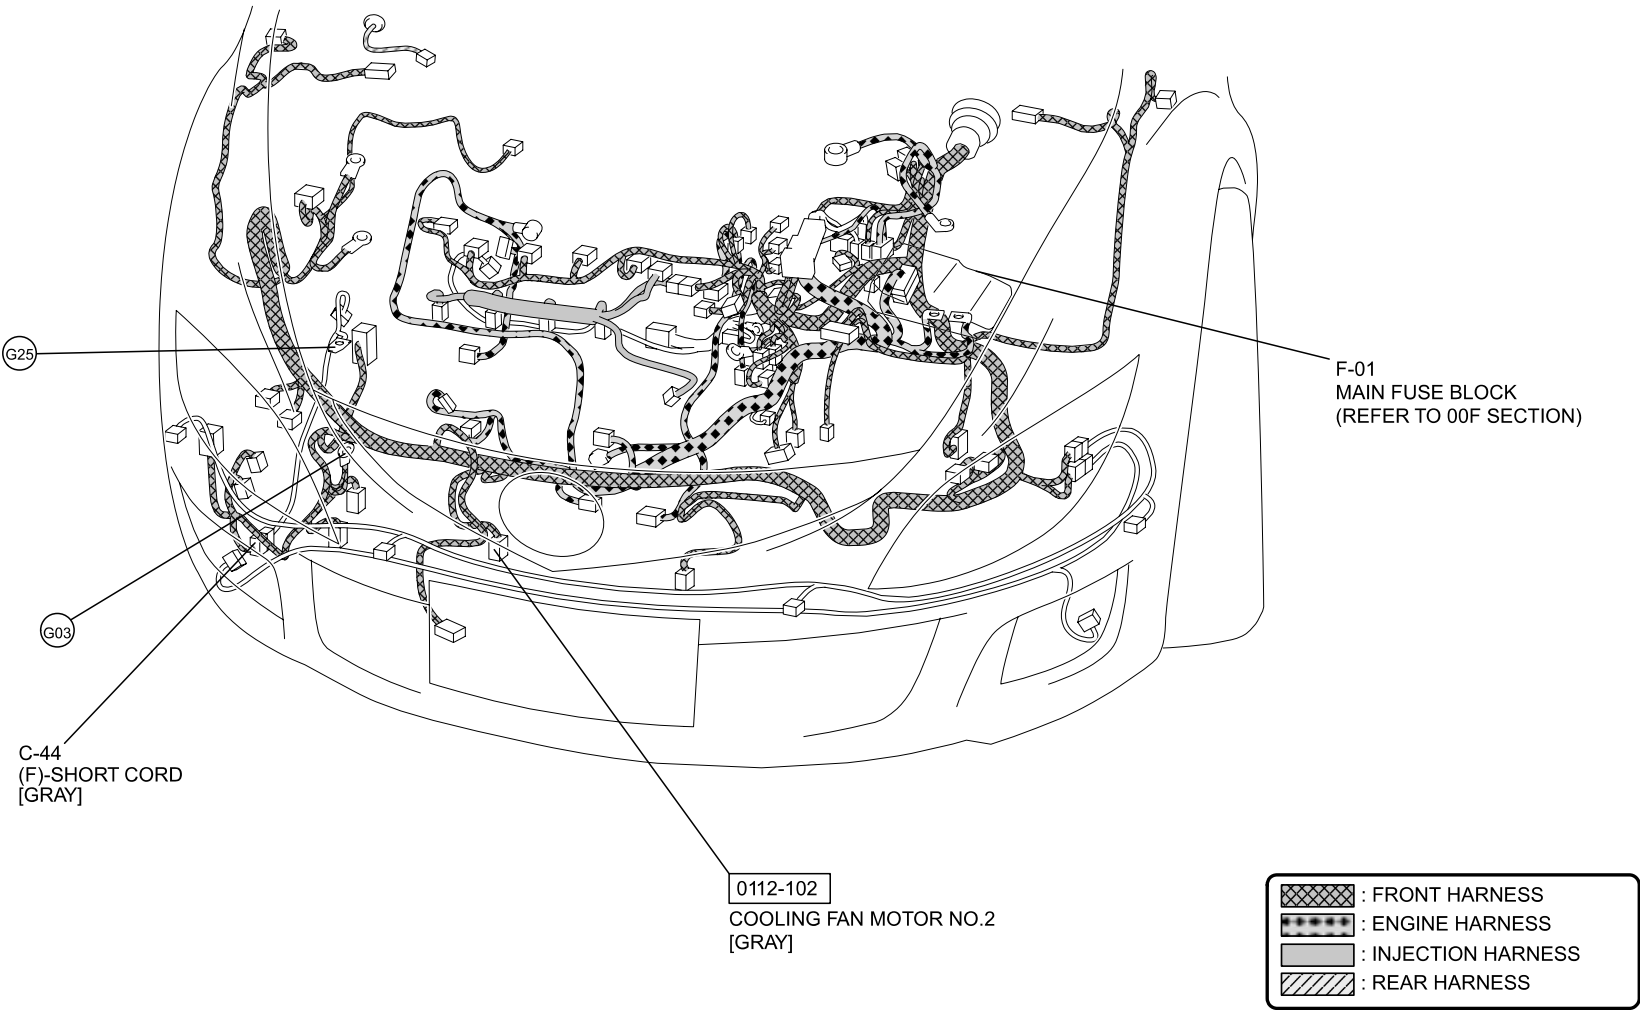

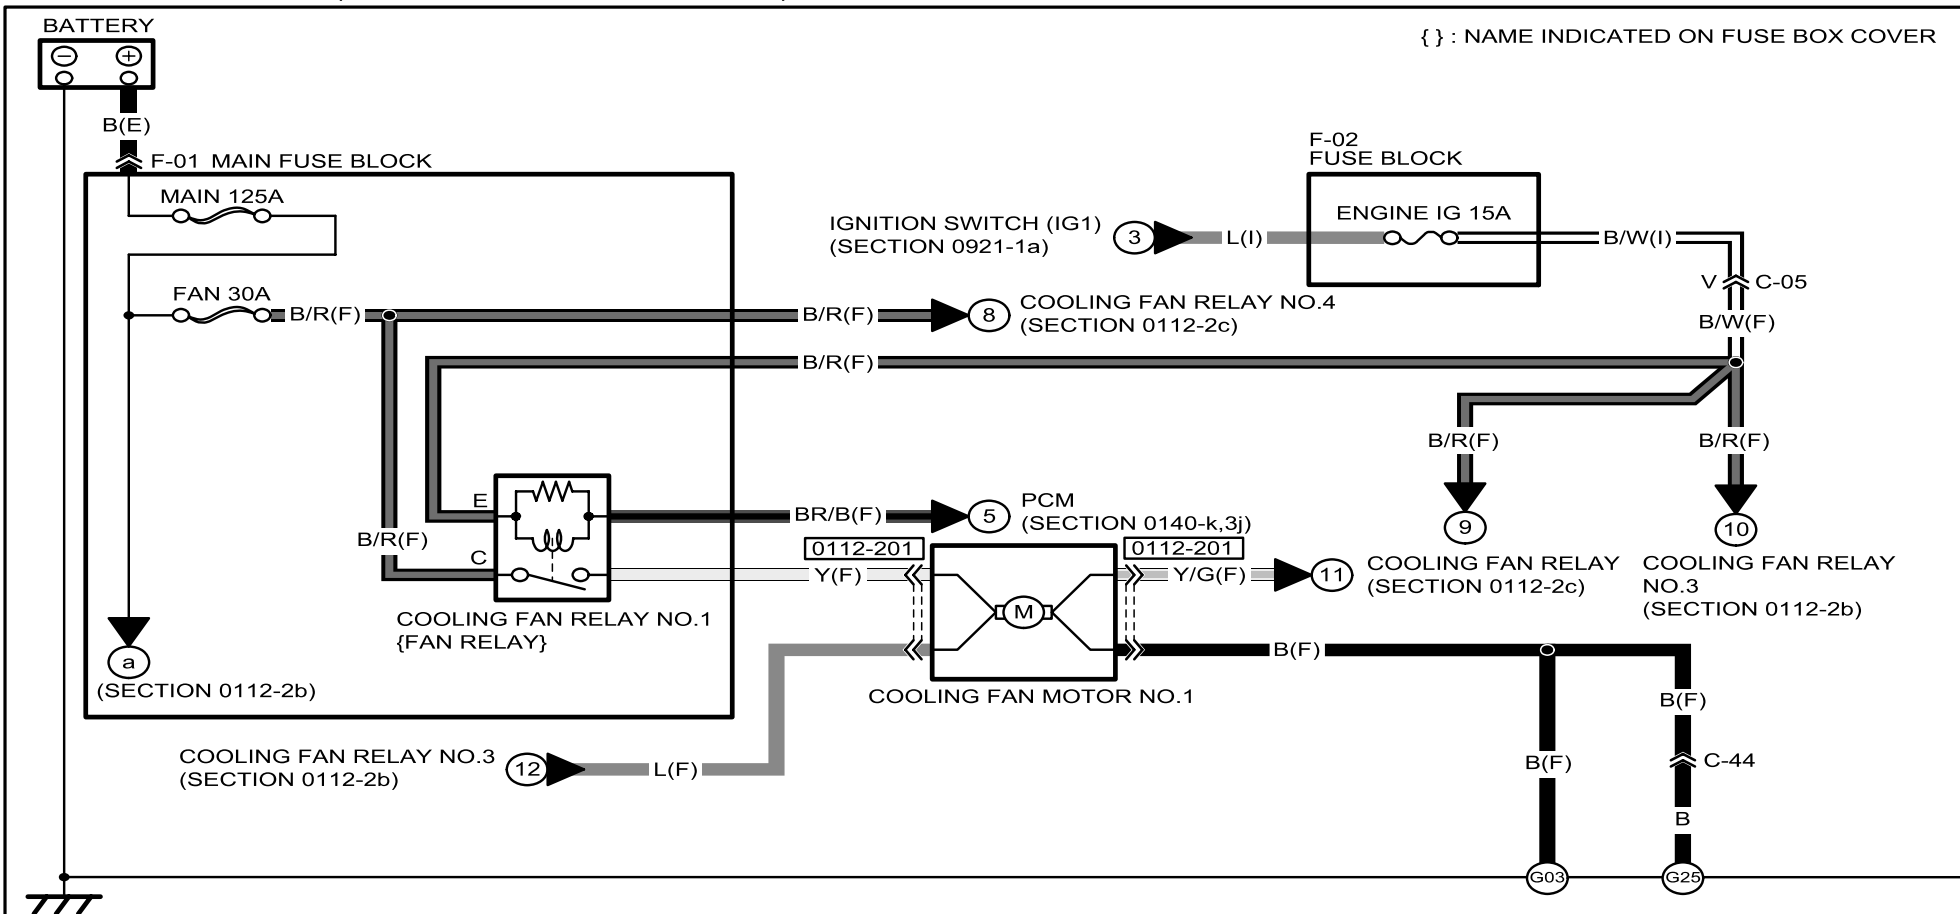


0112-201
COOLING FAN MOTOR NO.1

 


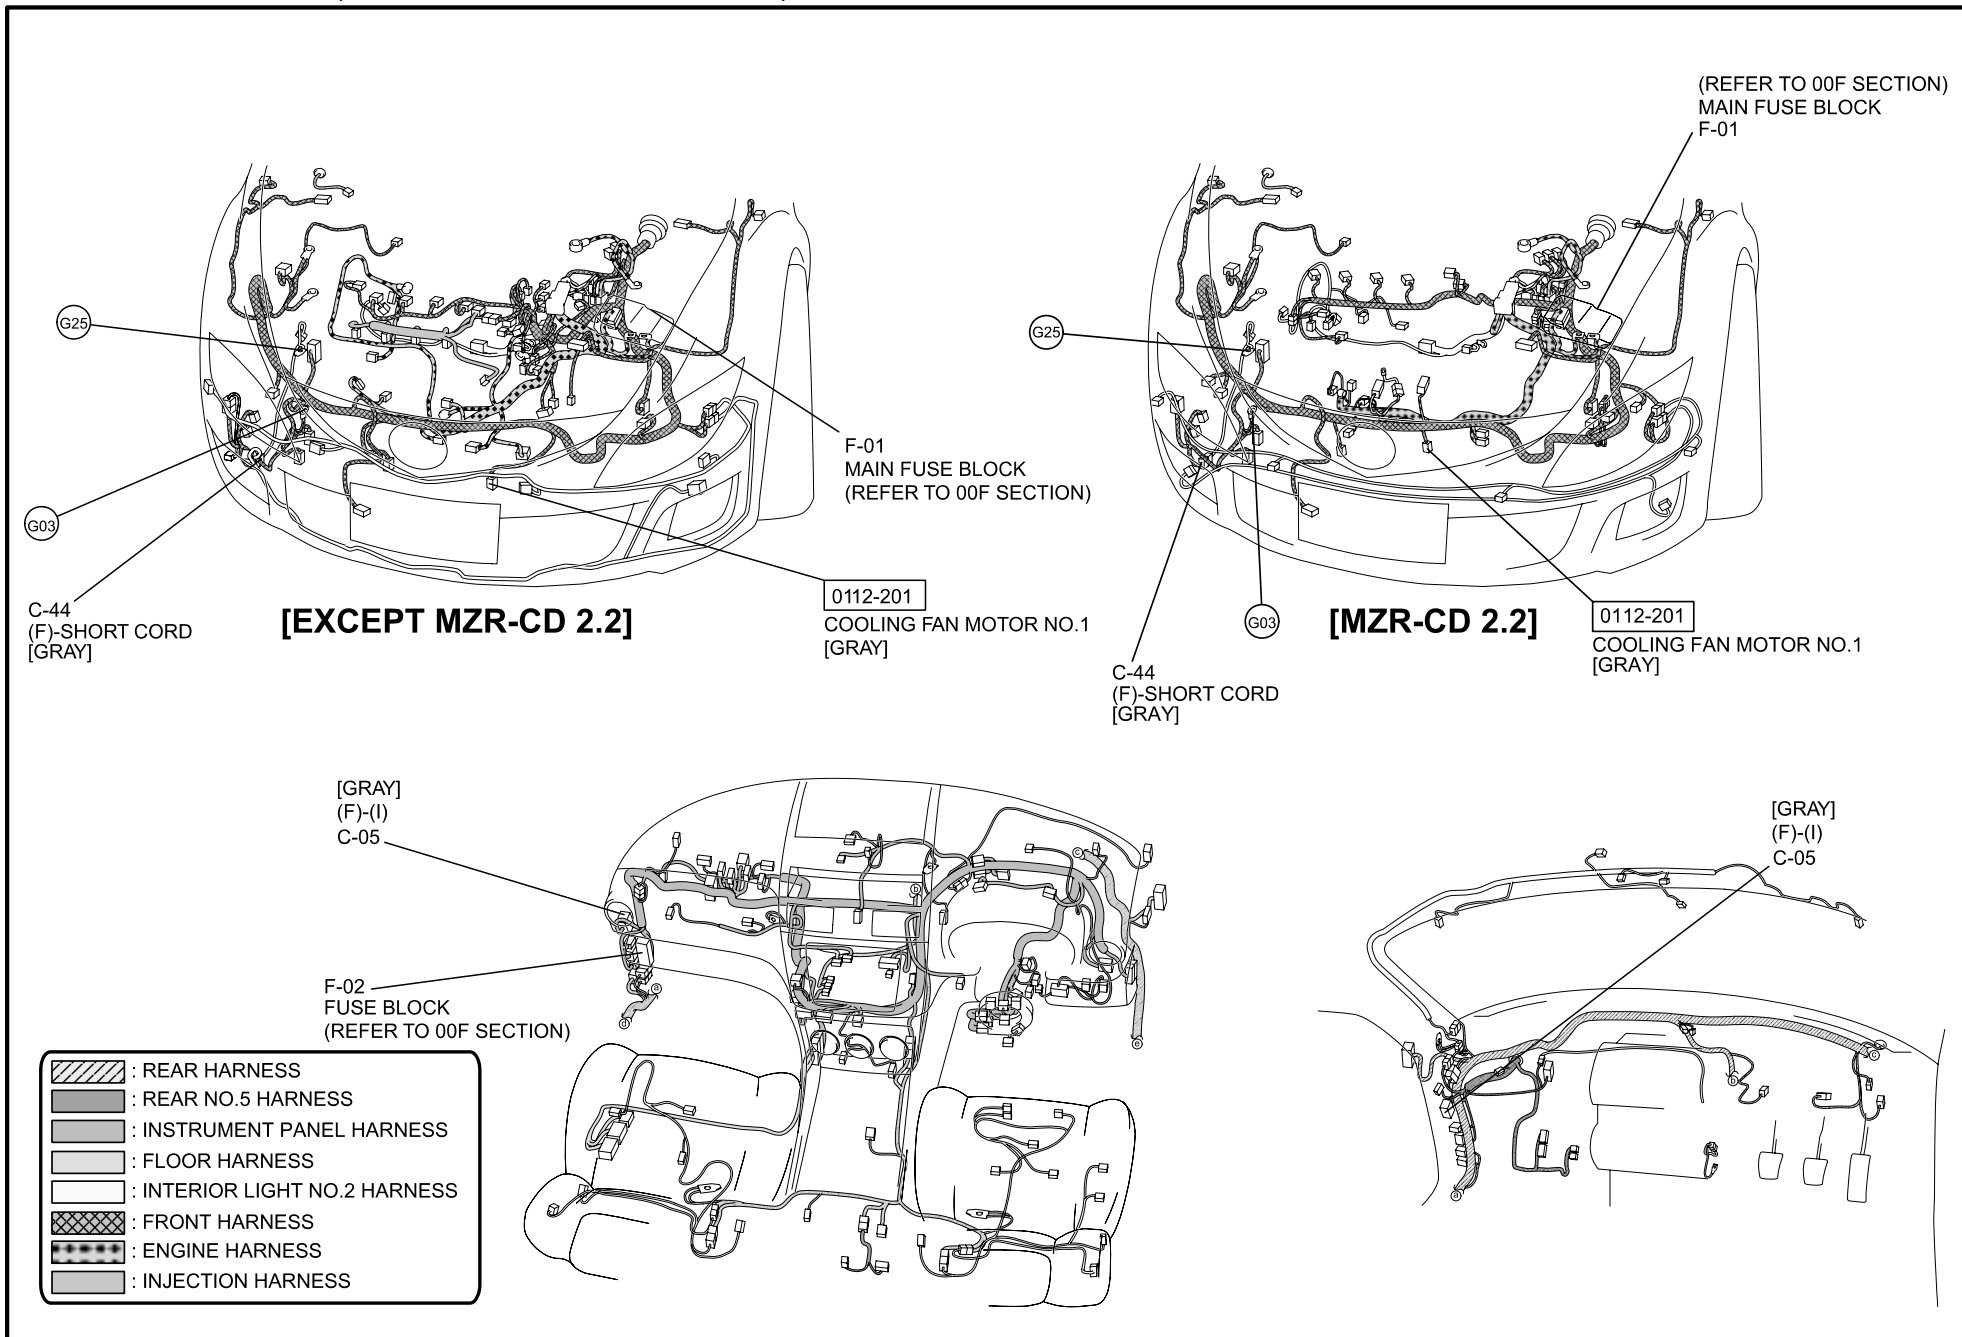


{ } : NAME INDICATED ON FUSE BOX COVER

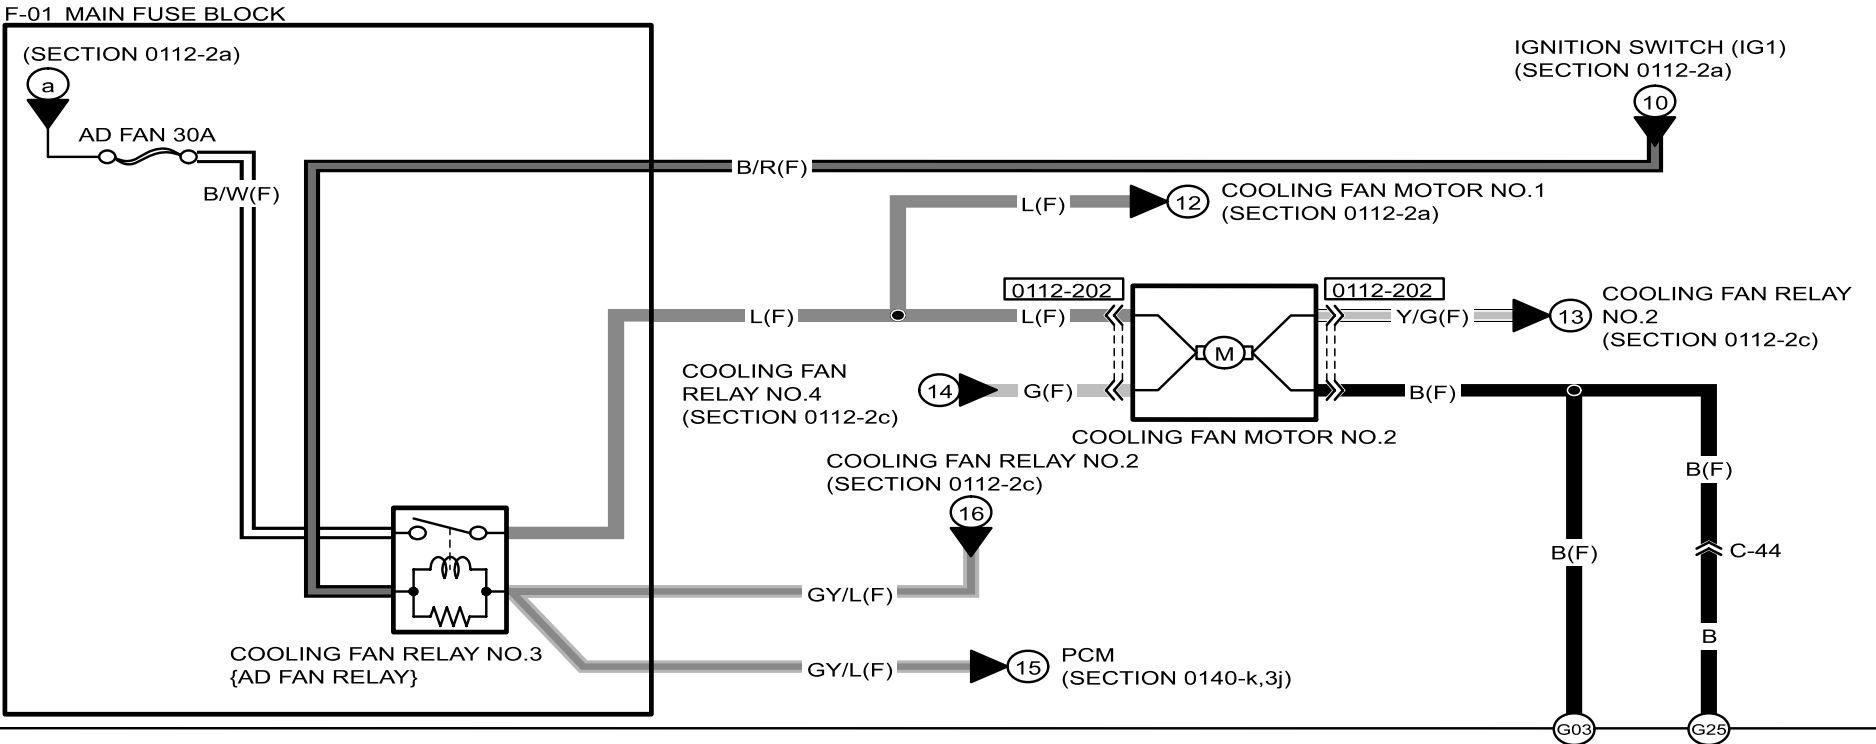



0112-202
COOLING FAN MOTOR
NO.2

 

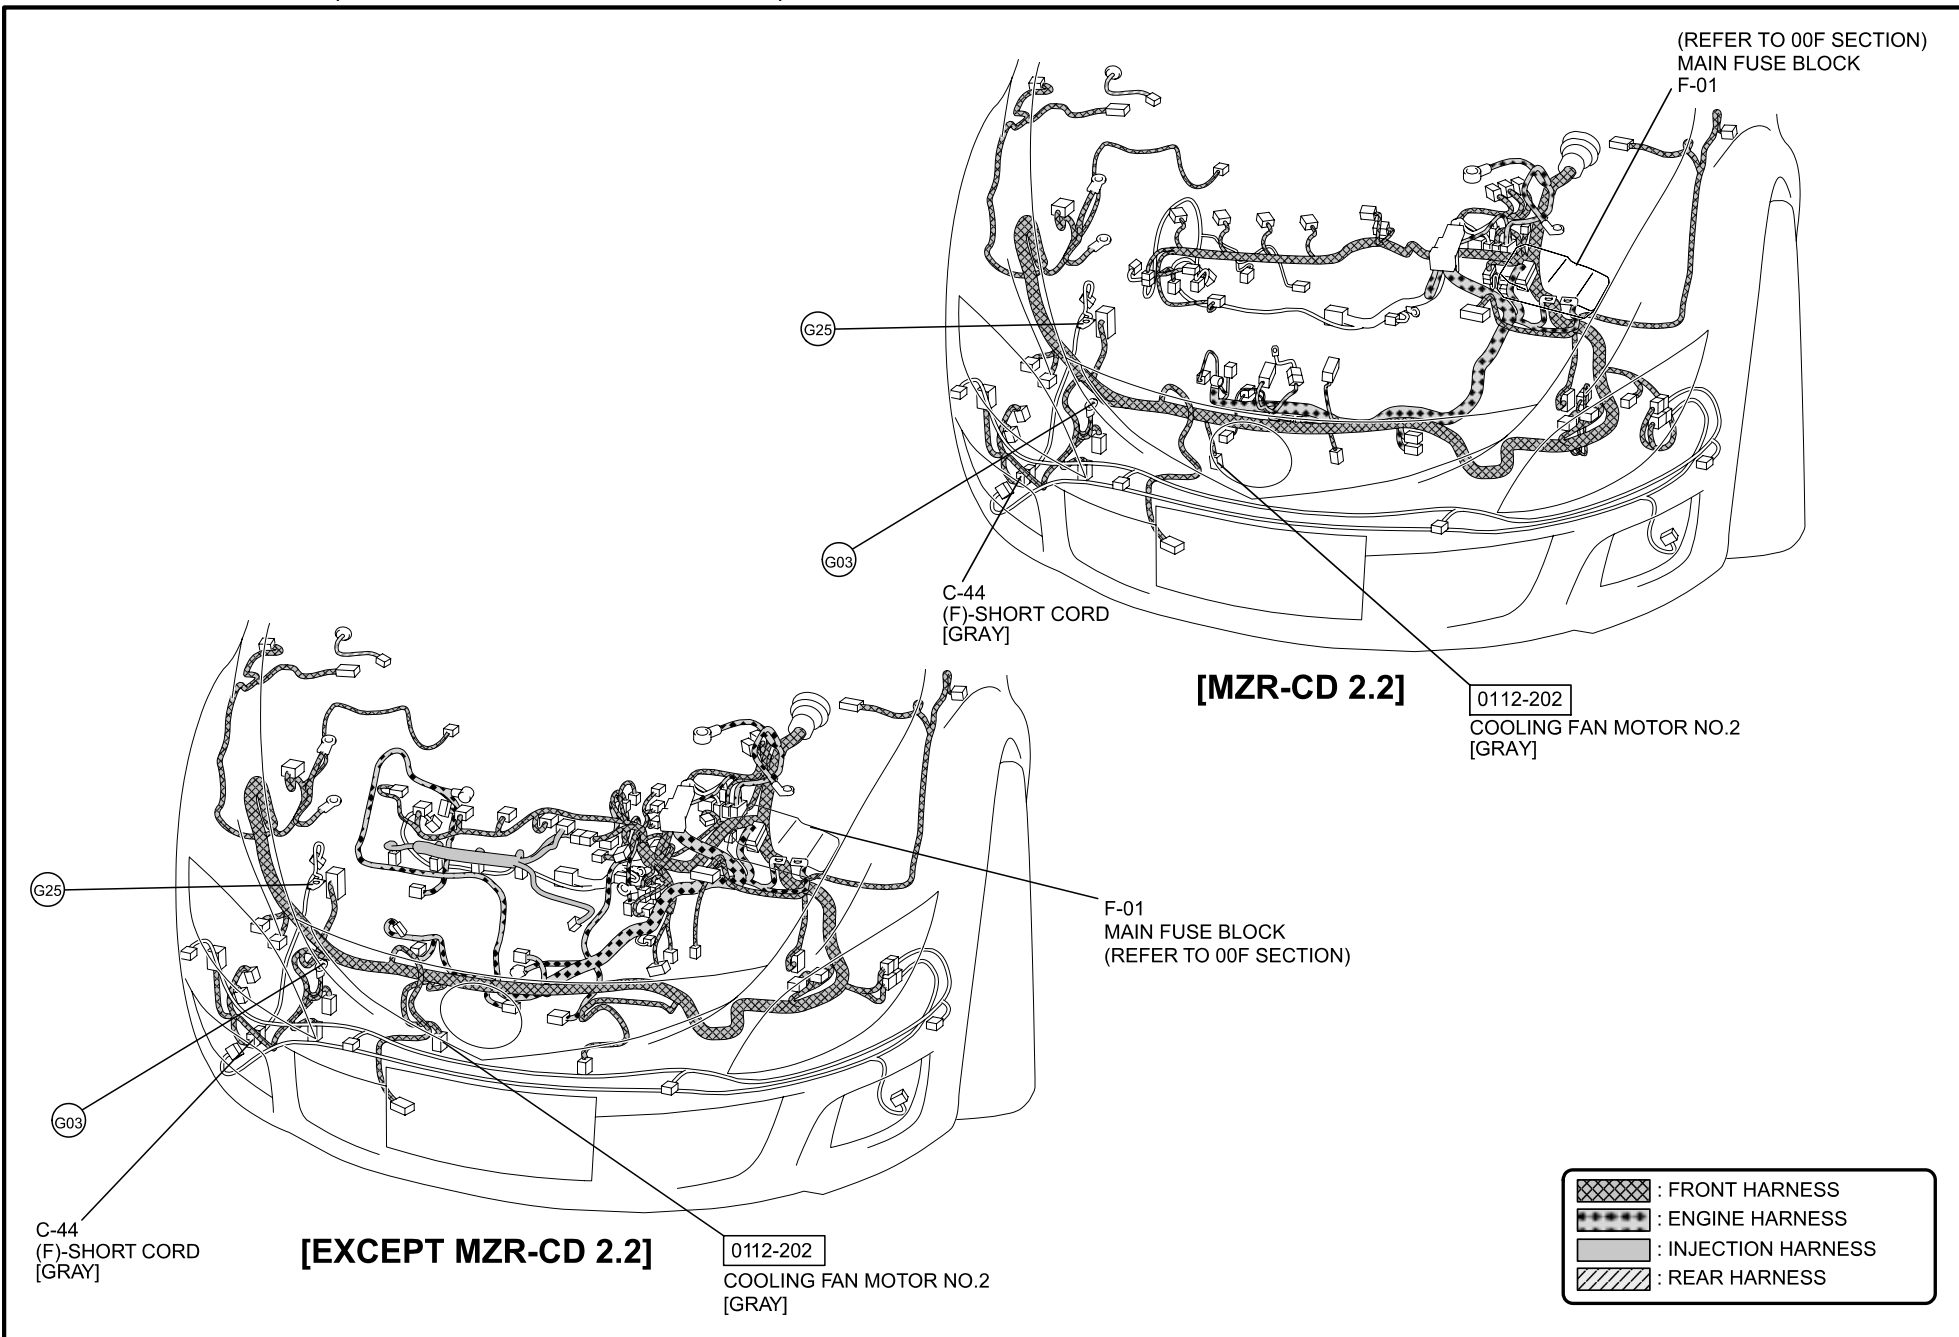


{ } : NAME INDICATED ON FUSE BOX COVER
< > : NOT USED

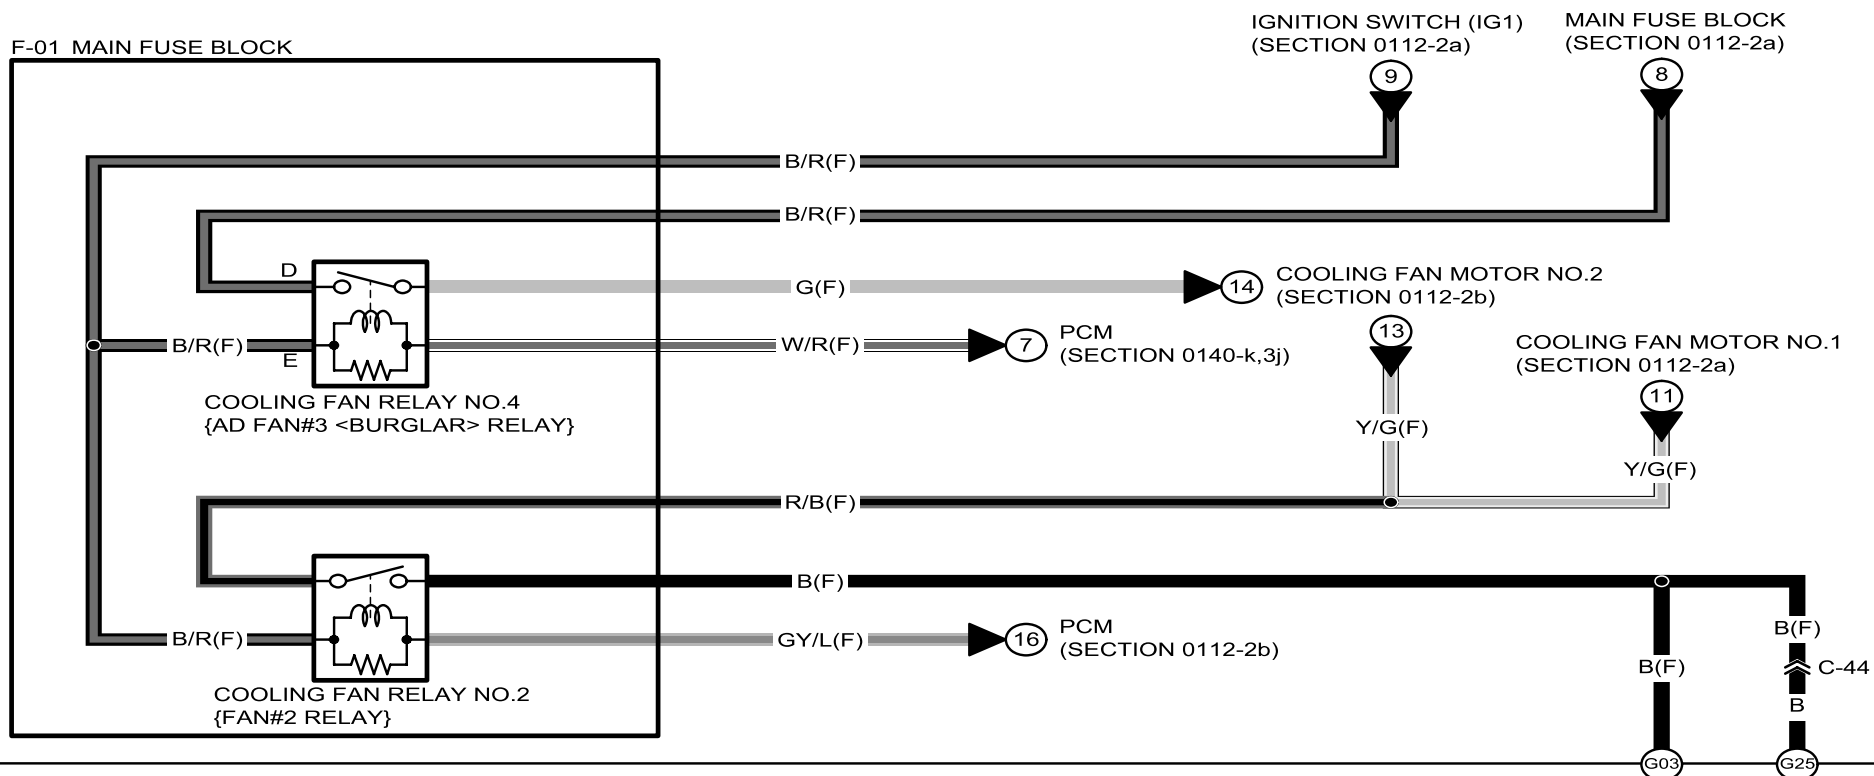

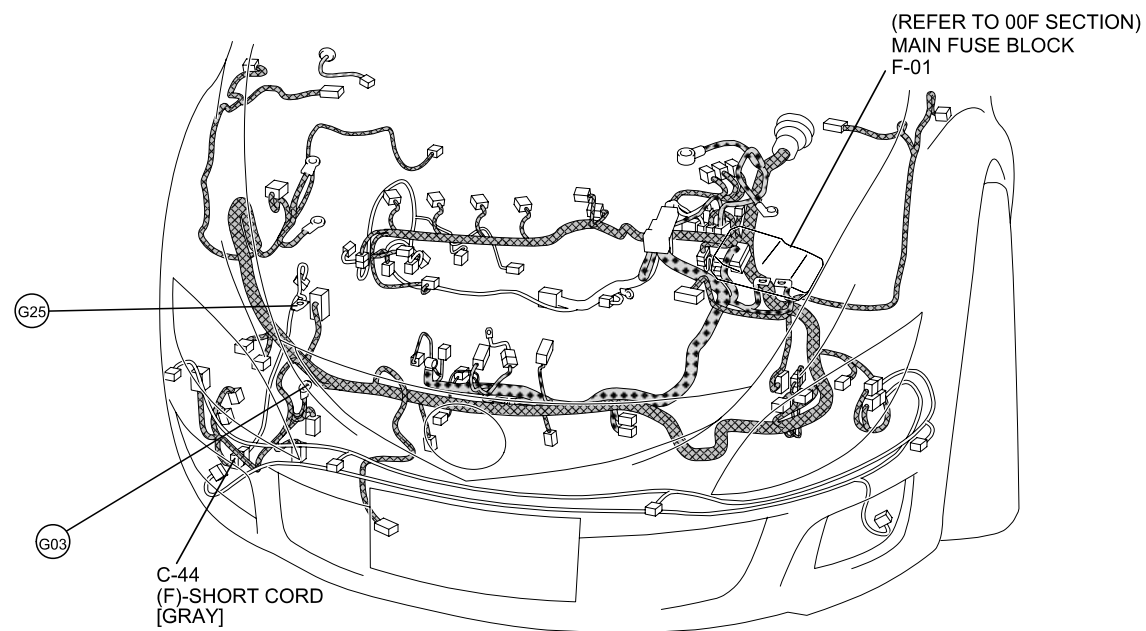


[MZR-CD 2.2]

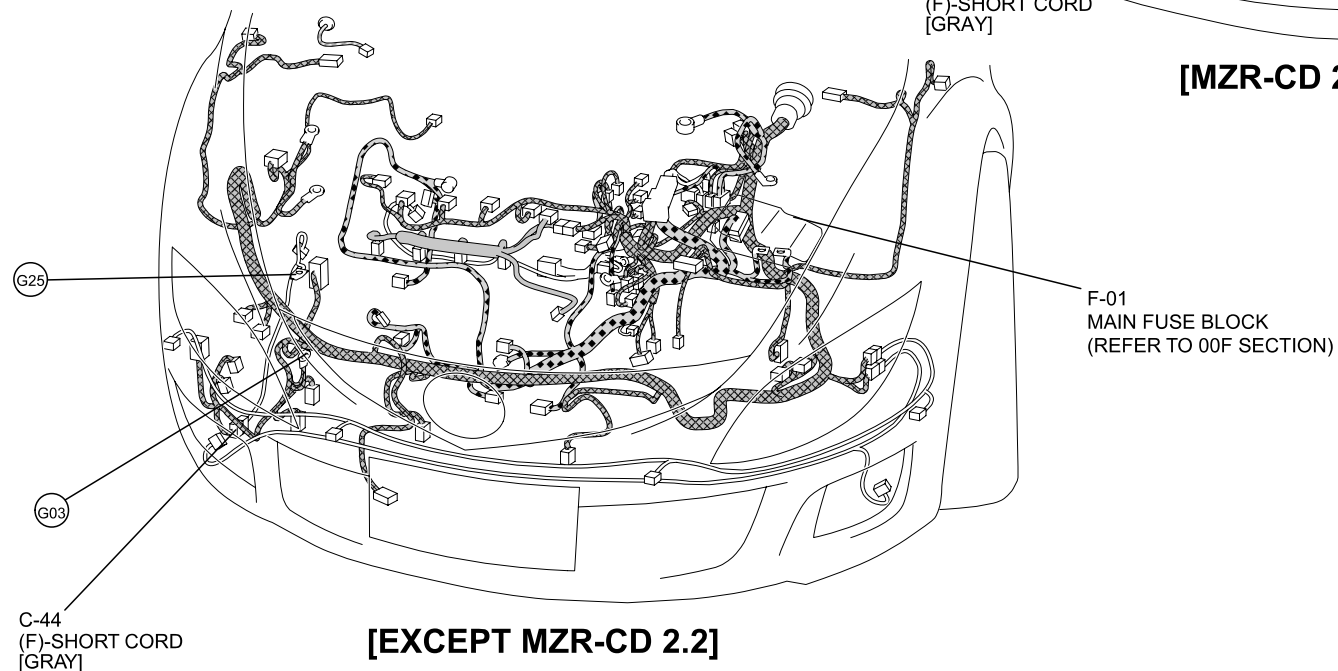


[EXCEPT MZR-CD 2.2]


	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS
	: REAR HARNESS

62

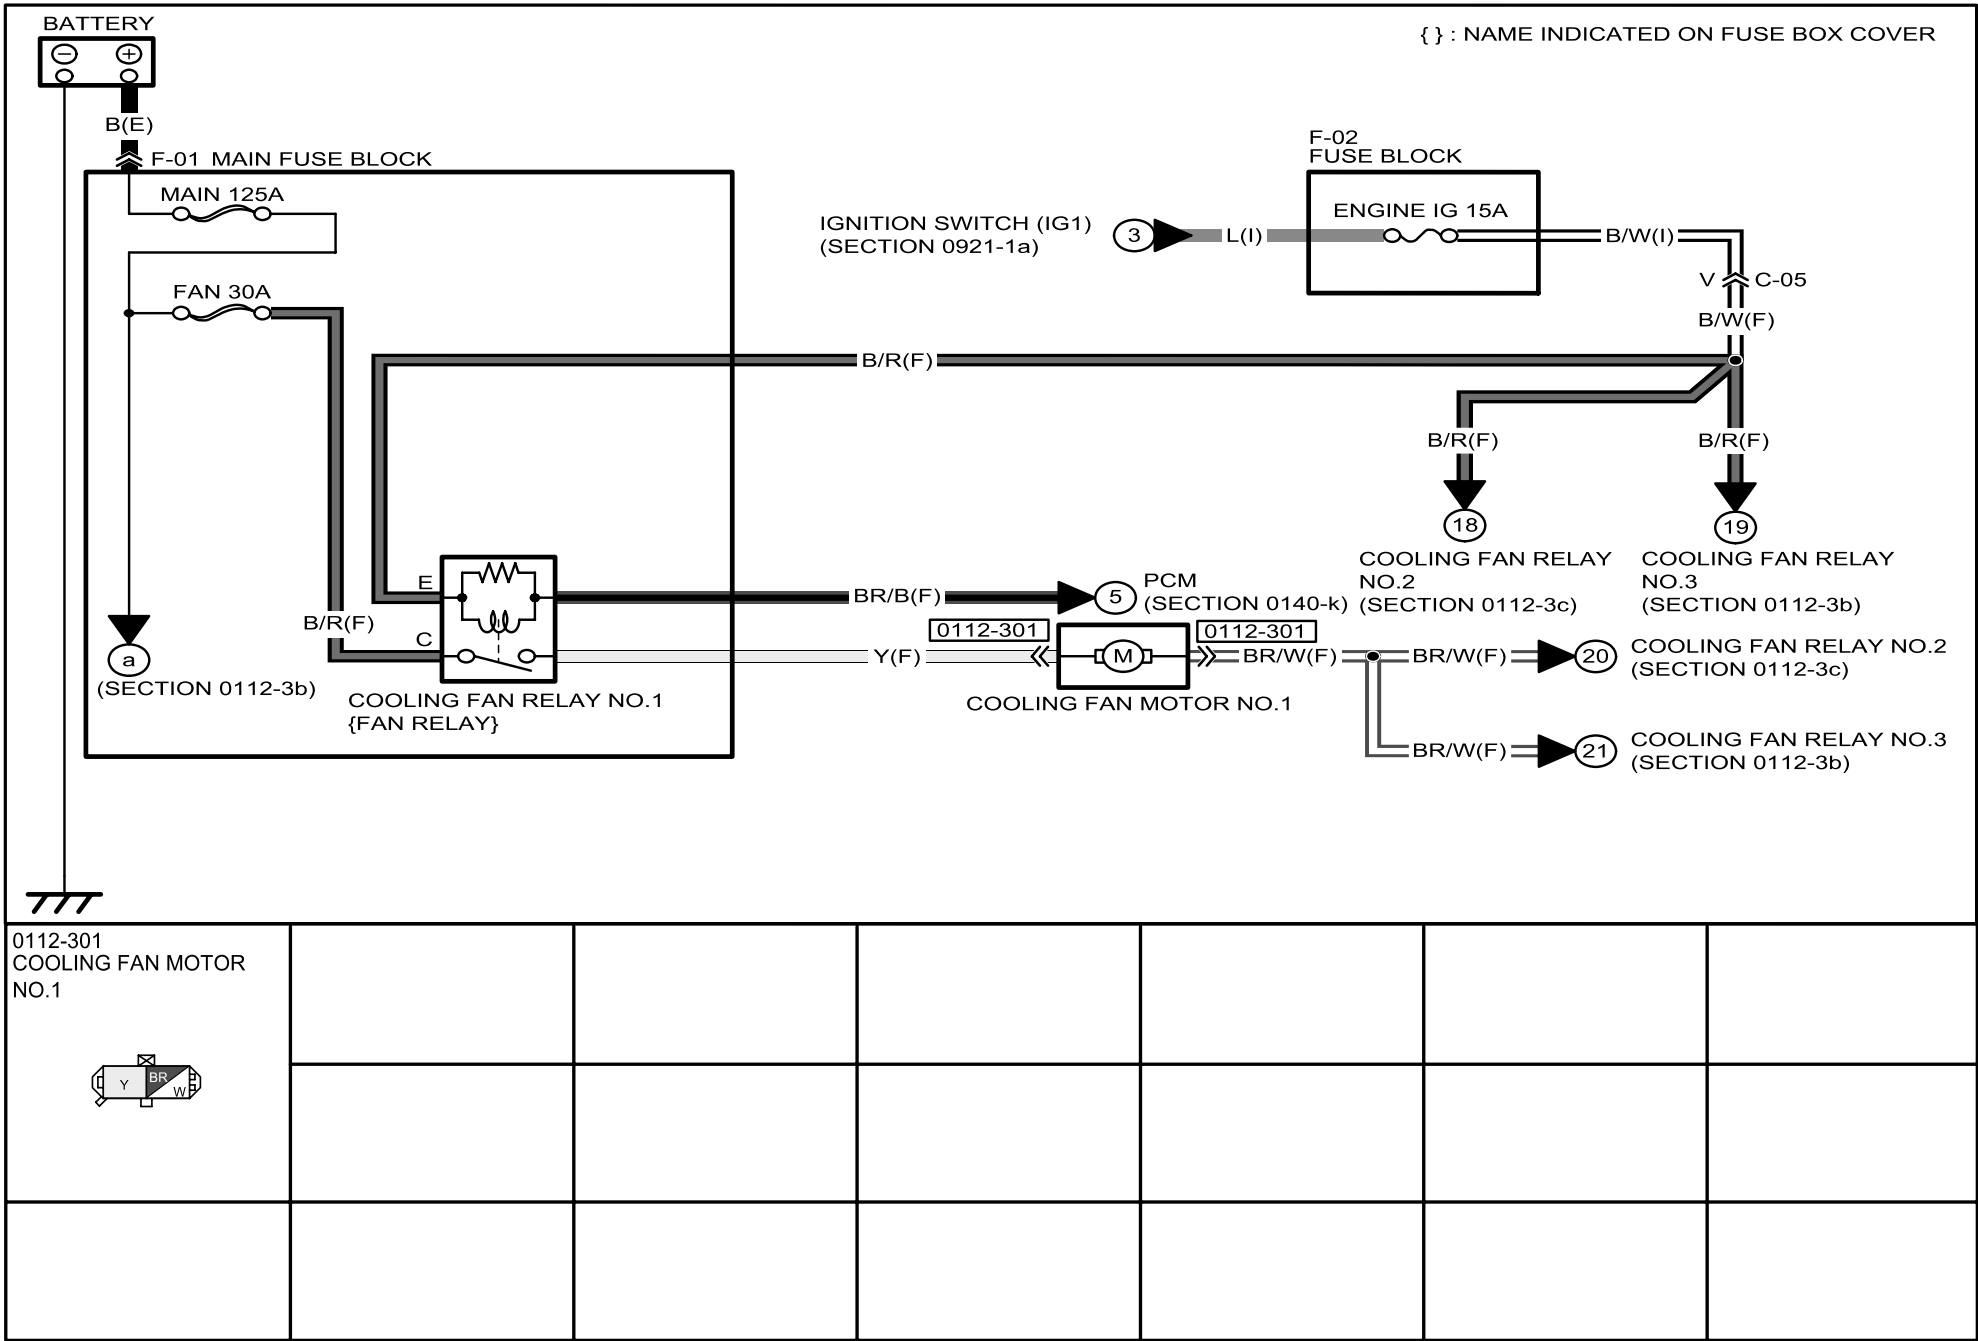

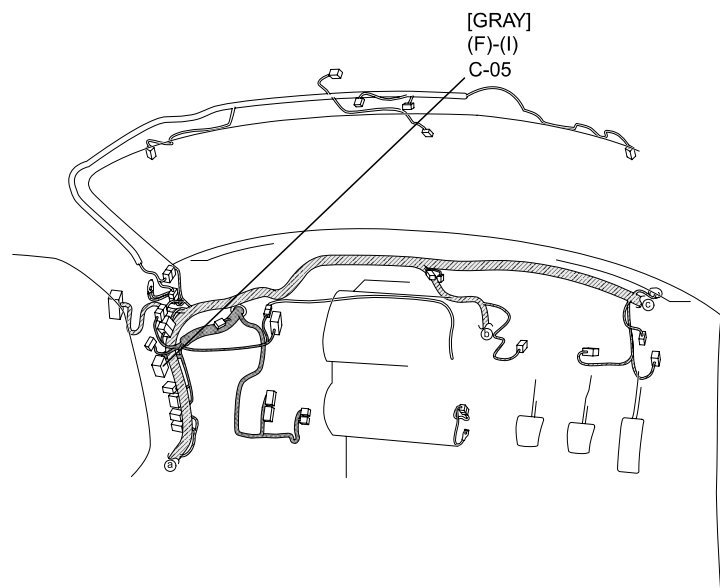


[GRAY]
(F)-(I)
C-05

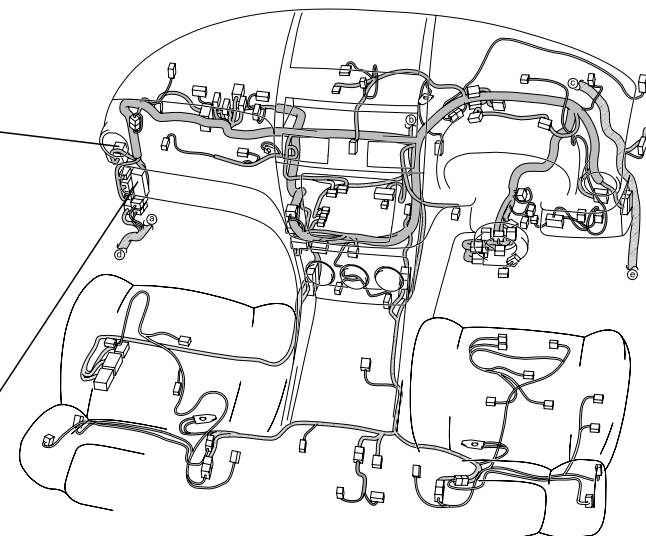

F-02
FUSE BLOCK
(REFER TO 00F SECTION)


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

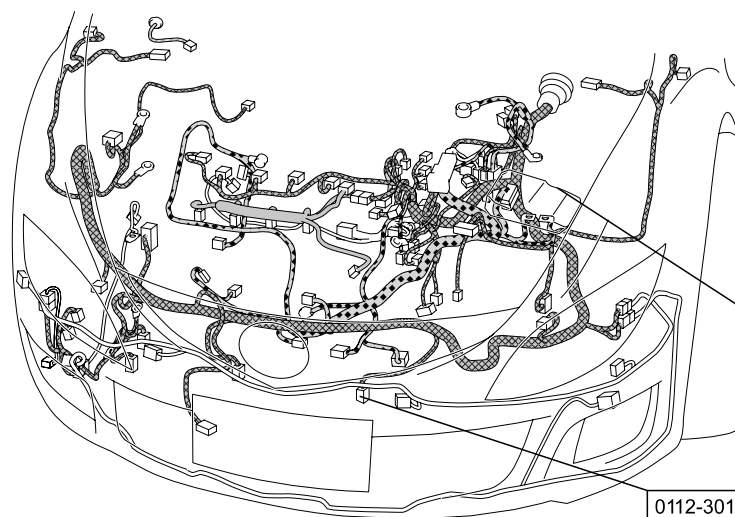


F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

0112-301
COOLING FAN MOTOR NO.1
[GRAY]

{ } : NAME INDICATED ON FUSE BOX COVER

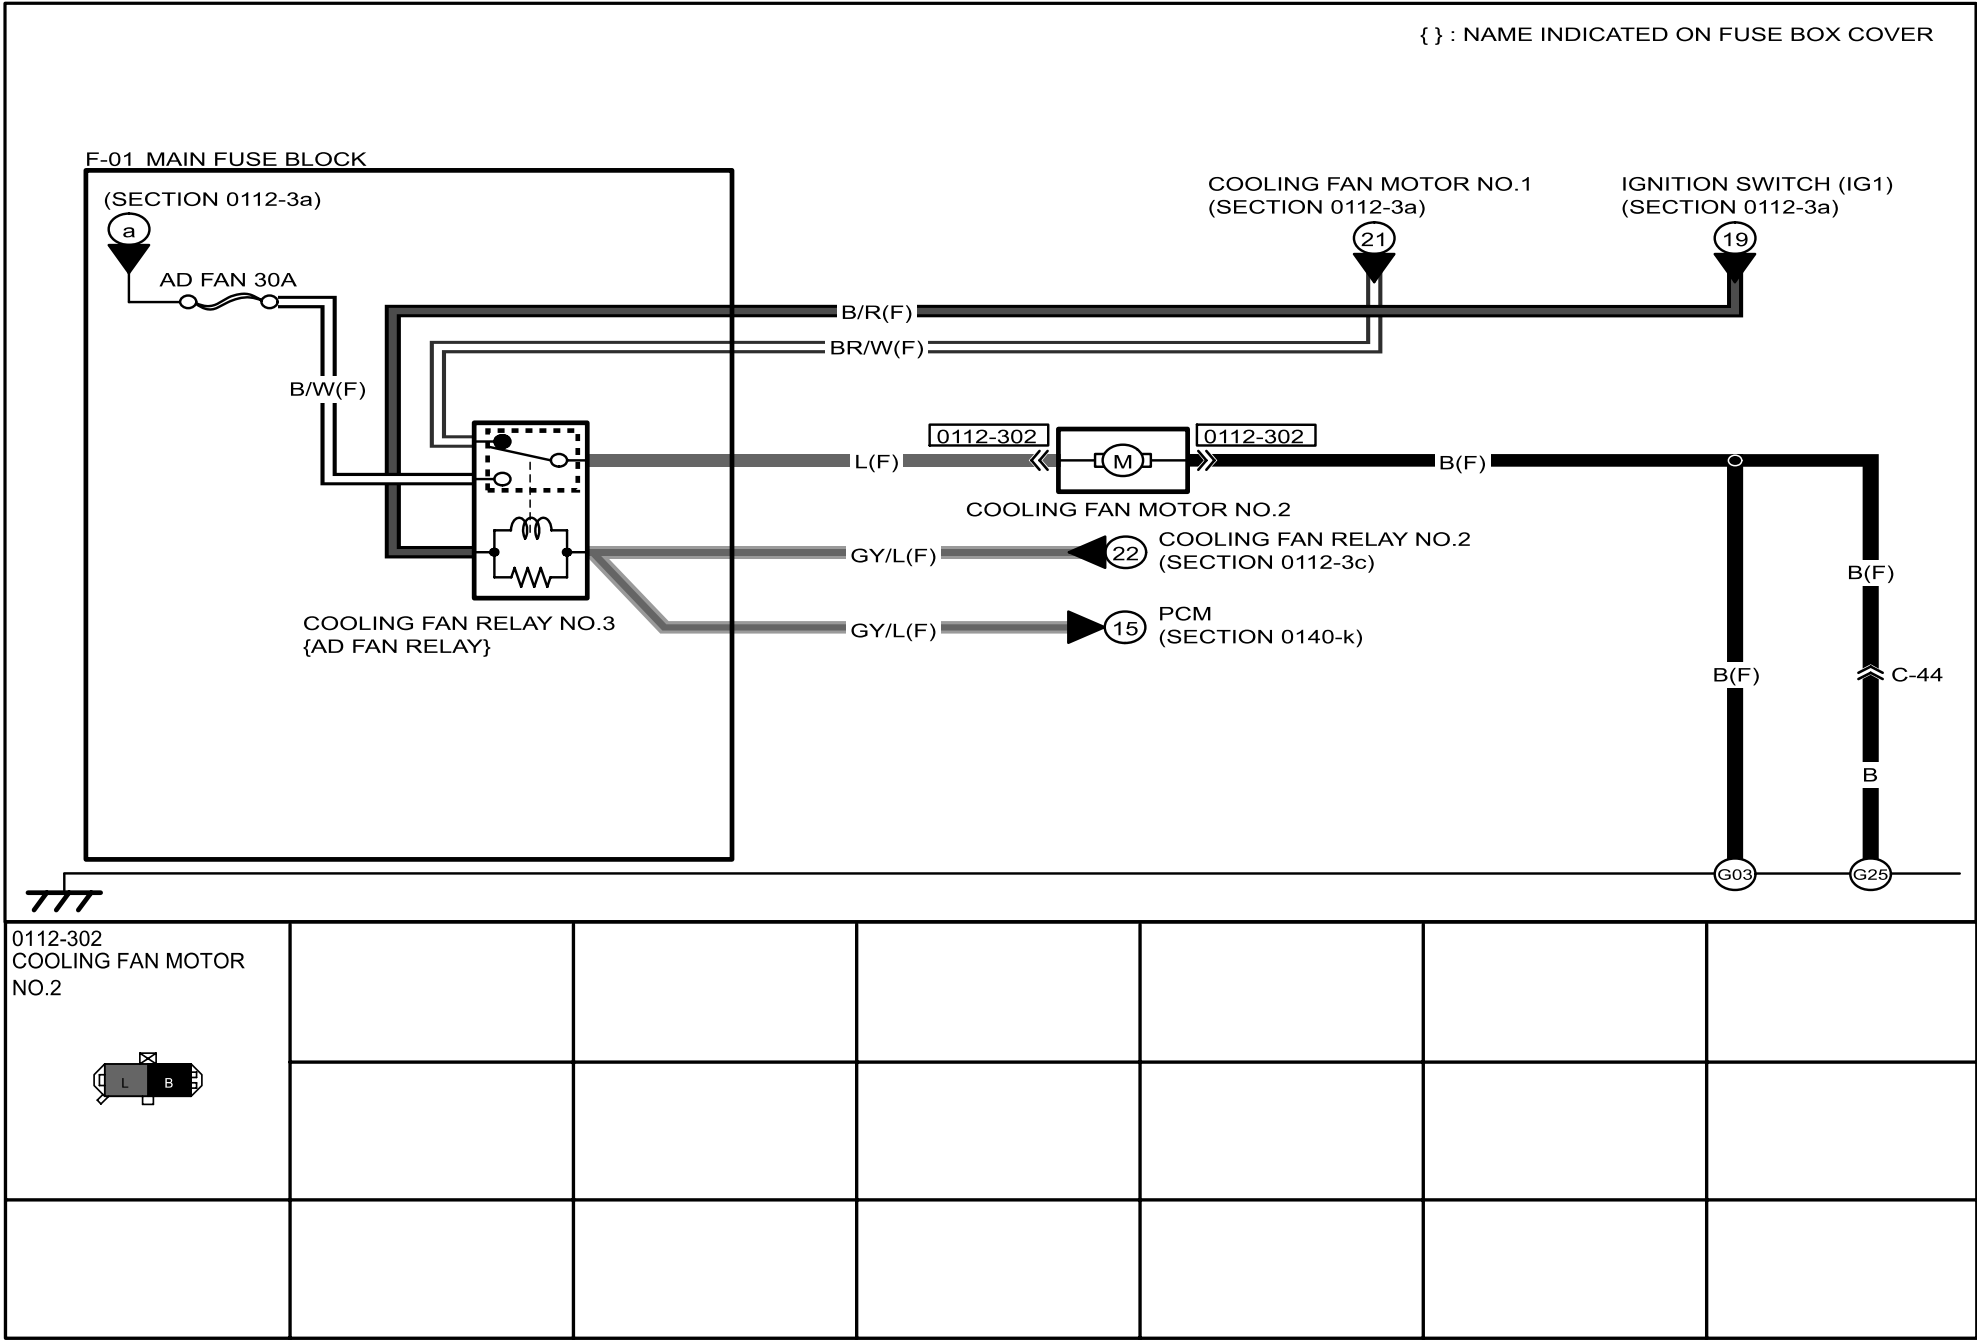




Mazda6 Wiring Diagram (5831-1A-10A)

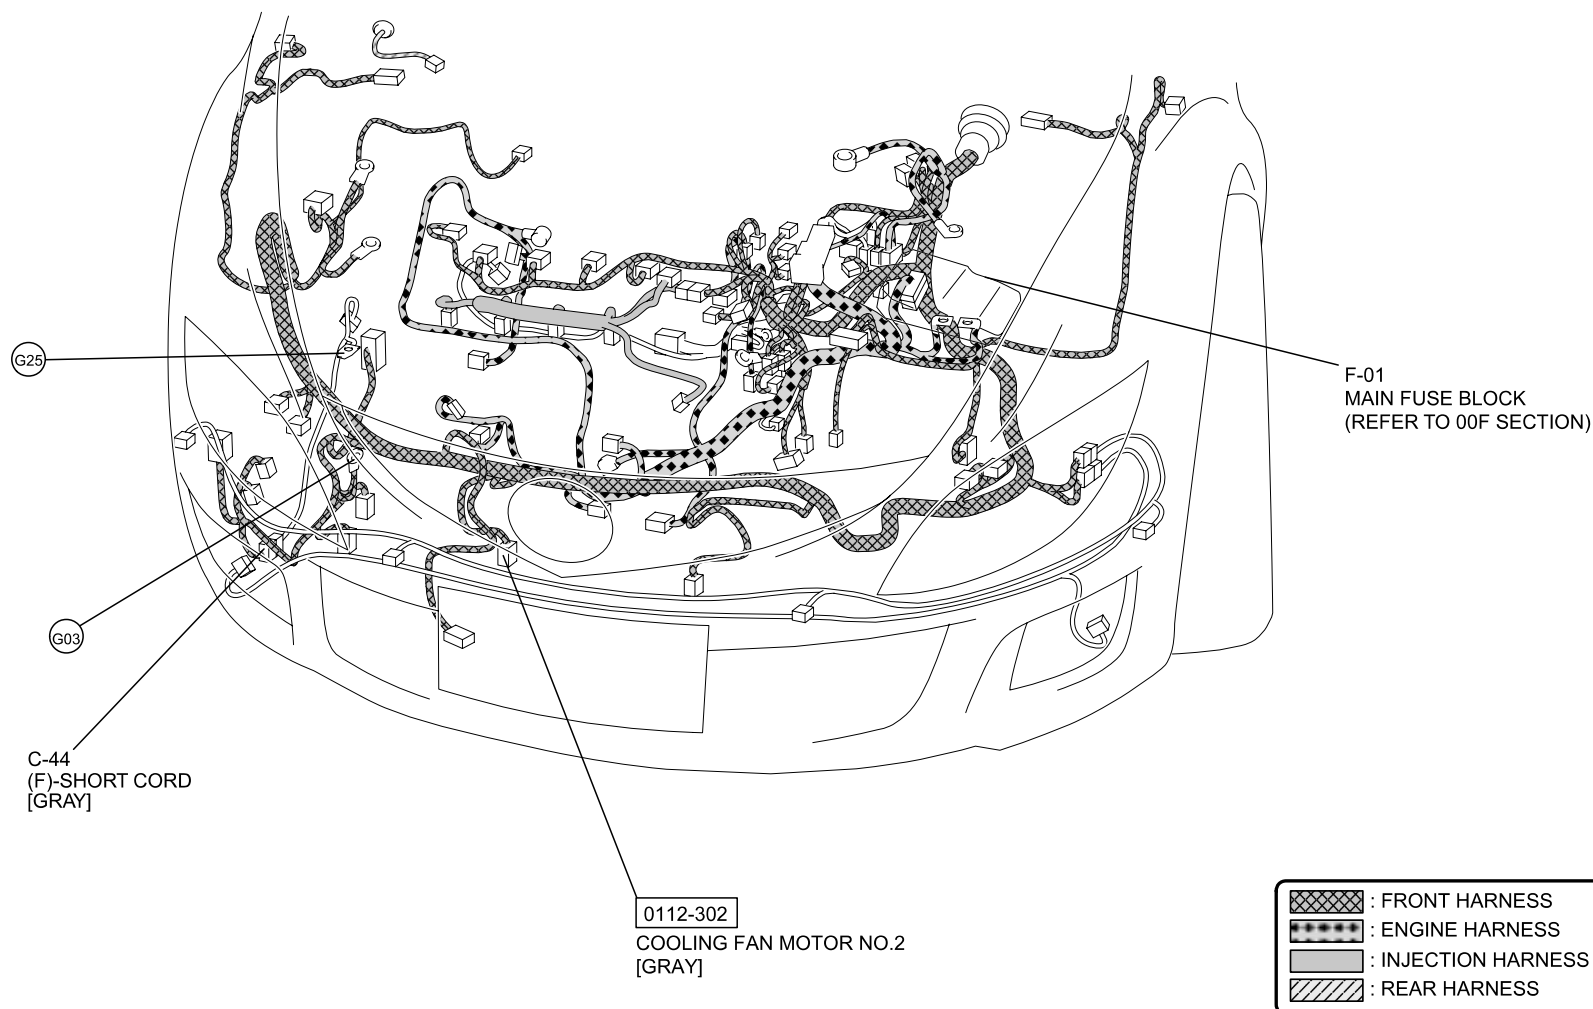


66

{ } : NAME INDICATED ON FUSE BOX COVER

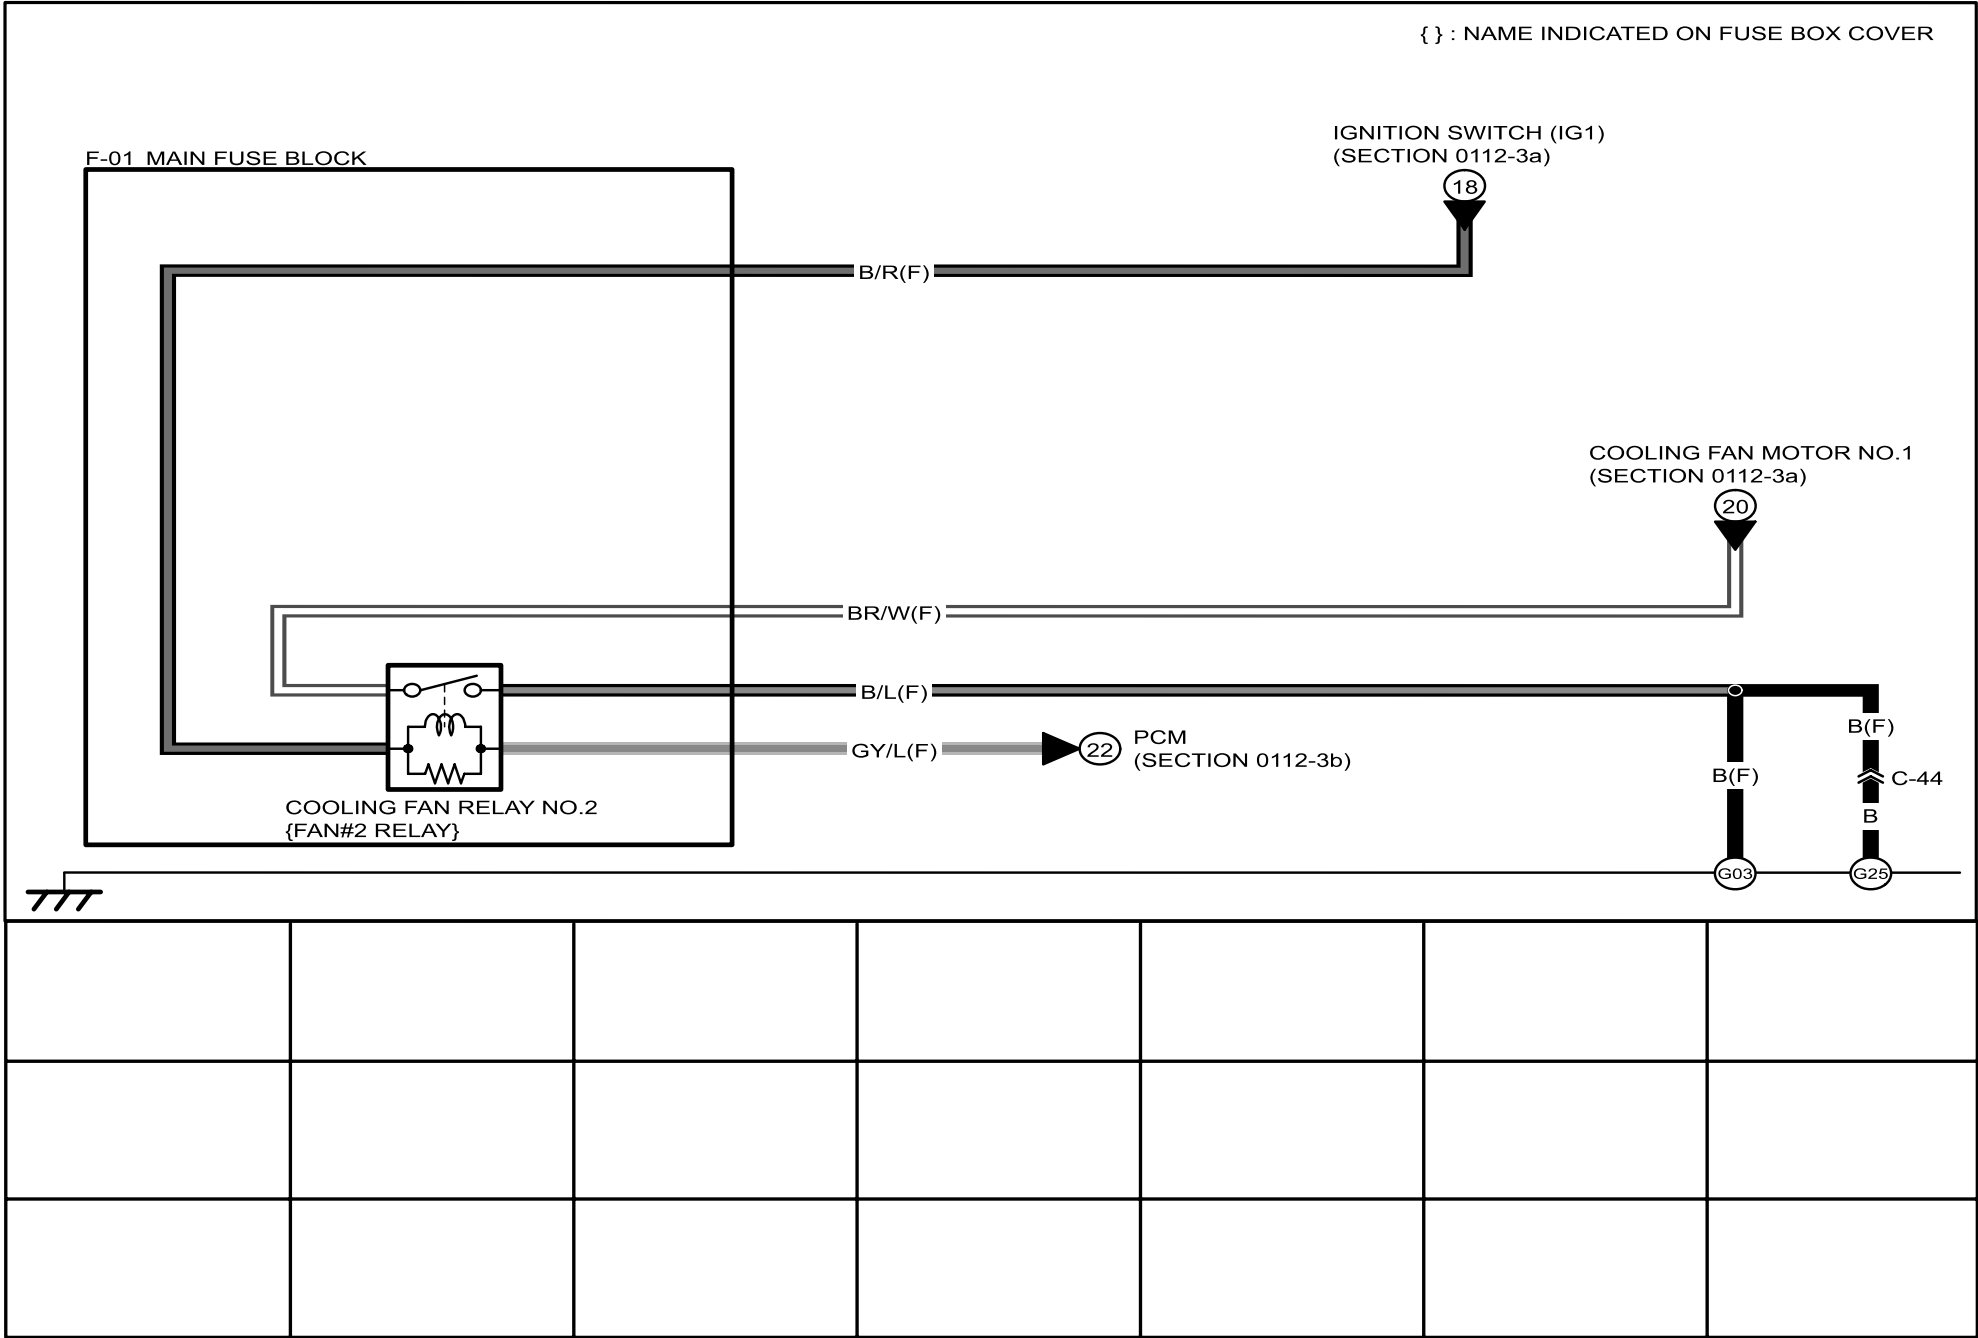

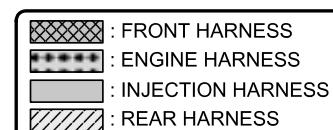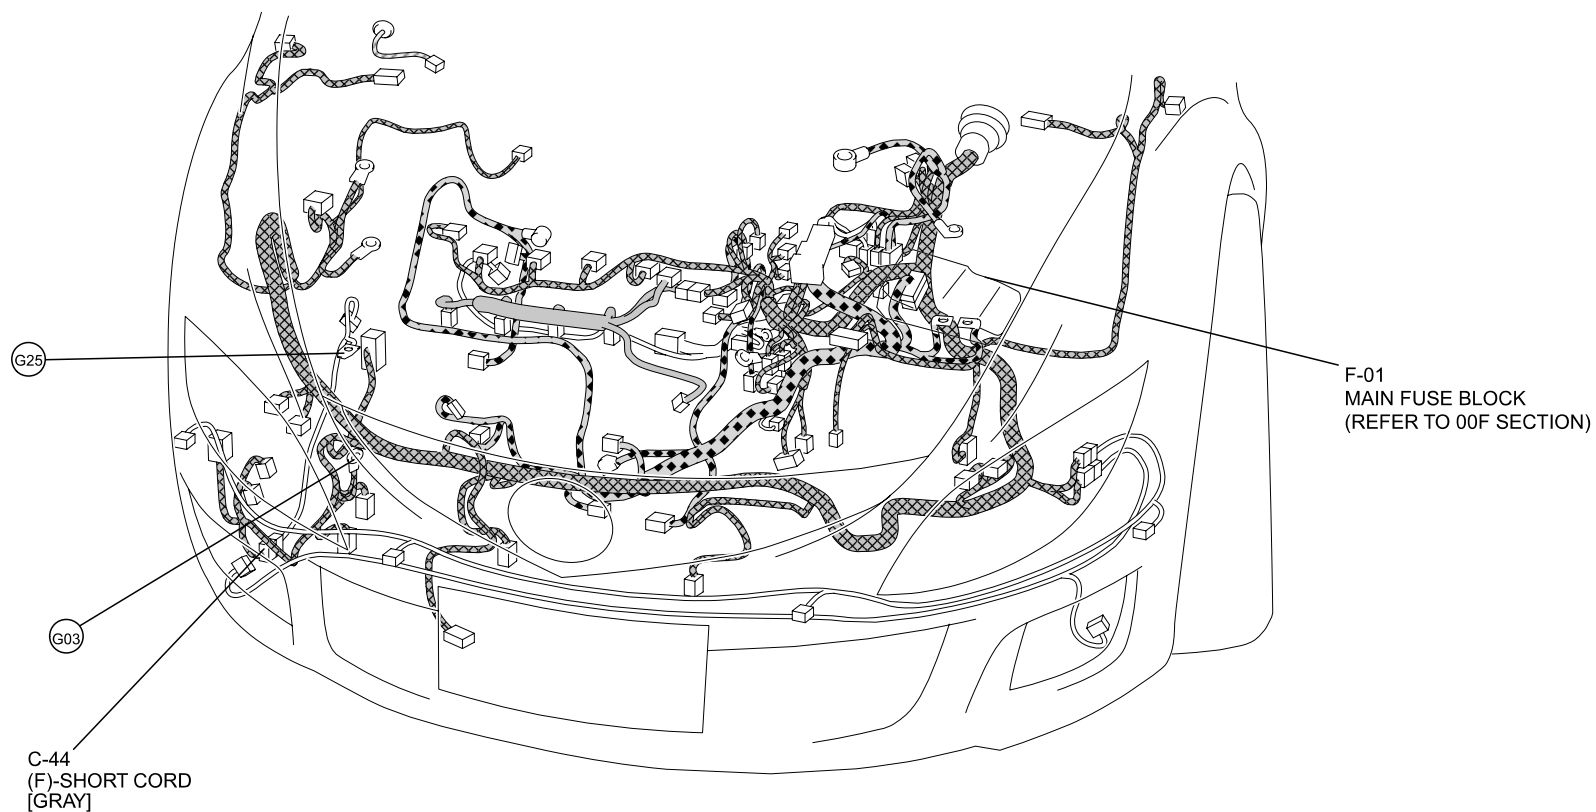

88

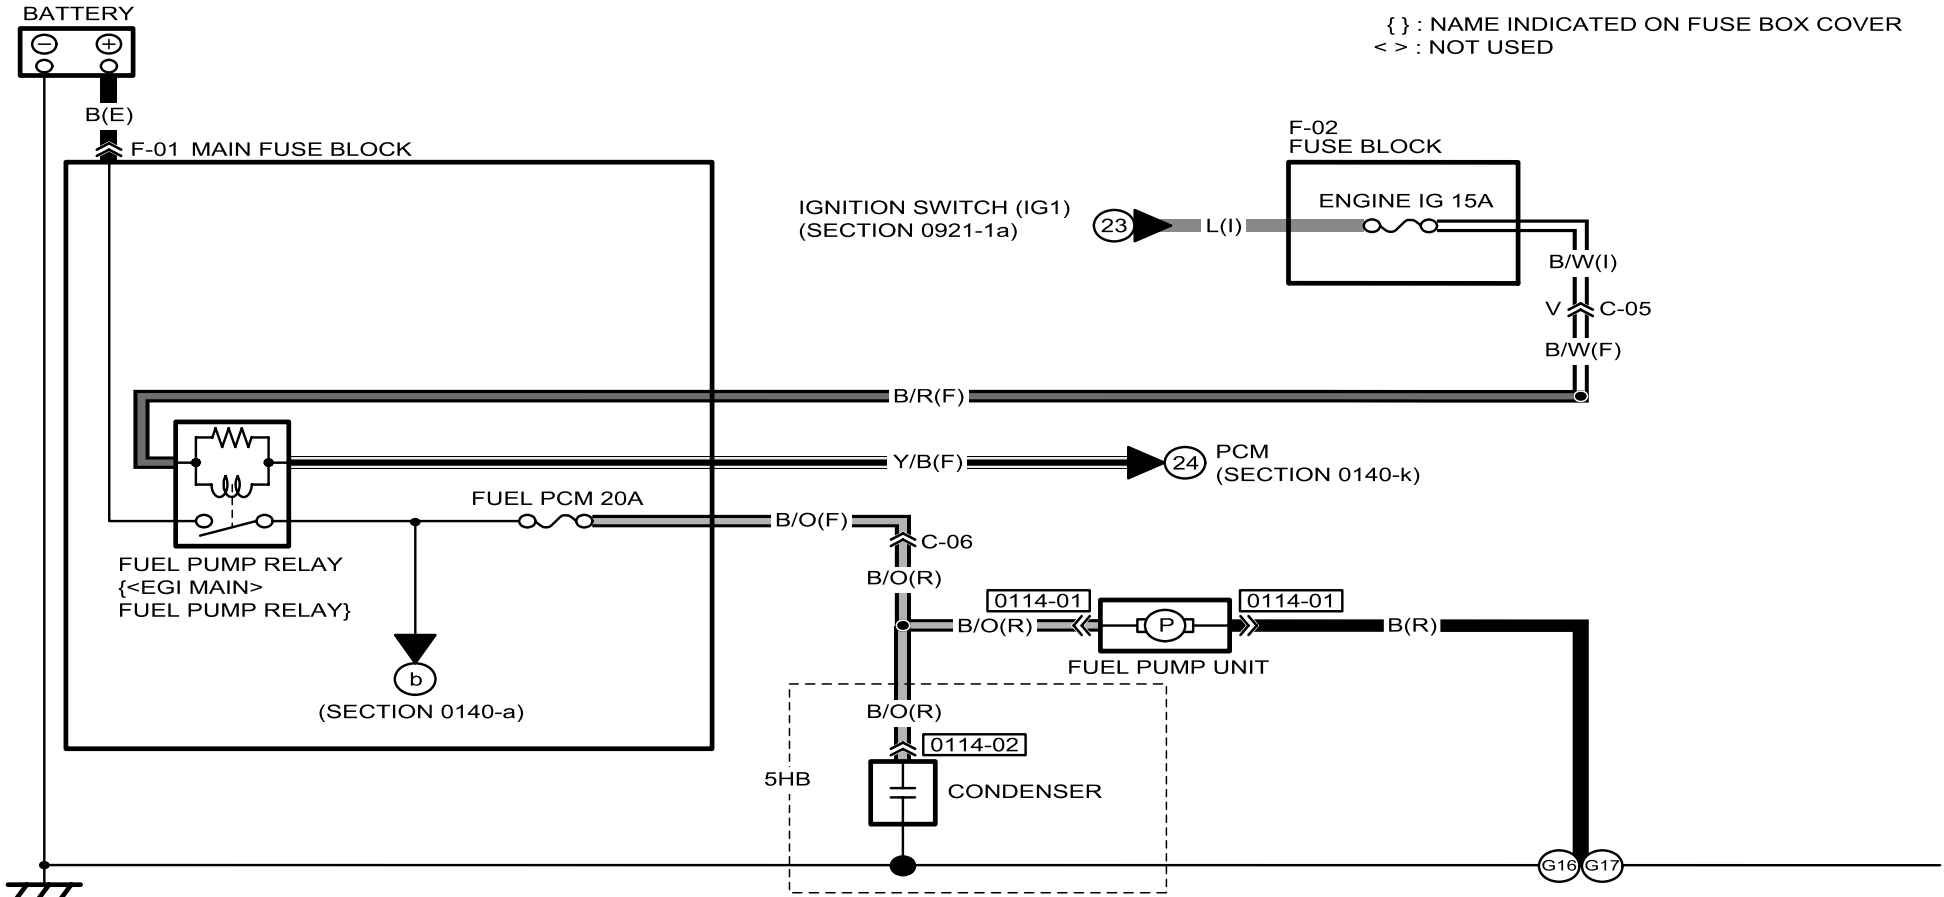


0114-01
FUEL PUMP UNIT /
FUEL GAUGE SENDER UNIT




0114-02
CONDENSER




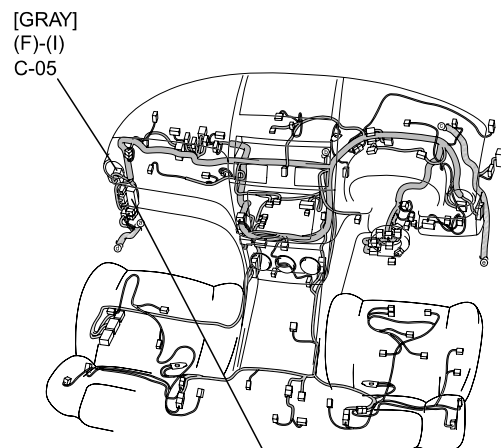

F-02
FUSE BLOCK
(REFER TO 00F SECTION)

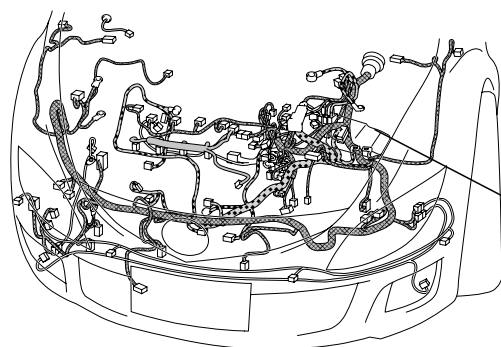


F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

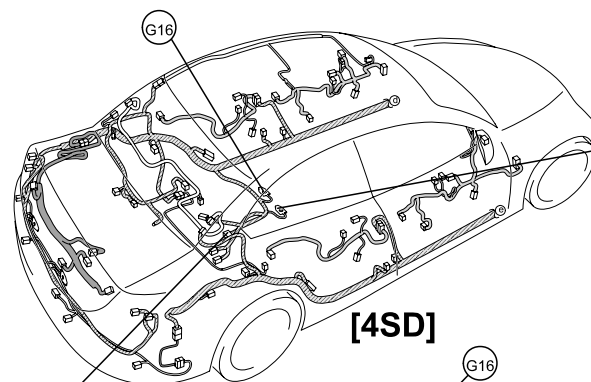


[4SD]

0114-01
FUEL PUMP UNIT /
FUEL GAUGE SENDER UNIT
[BLACK]

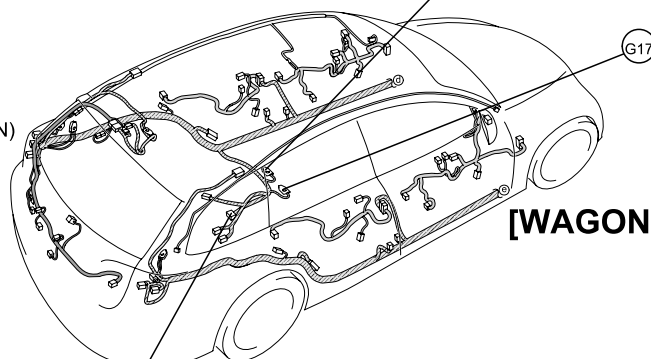


[WAGON]

0114-01
FUEL PUMP UNIT /
FUEL GAUGE SENDER UNIT
[BLACK]

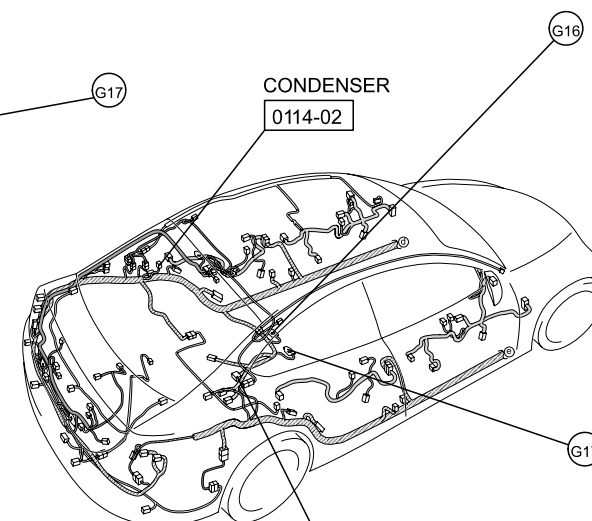

[5HB]

0114-01
FUEL PUMP UNIT /
FUEL GAUGE SENDER UNIT
[BLACK]

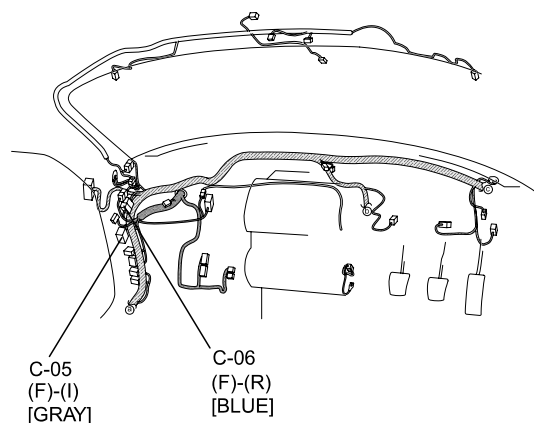




C-05
(F)-(I)
[GRAY]


C-06
(F)-(R)
[BLUE]


[Pattern]	: REAR HARNESS
[Pattern]	: REAR NO.2 HARNESS
[Pattern]	: REAR NO.3 HARNESS
[Pattern]	: REAR NO.4 HARNESS
[Pattern]	: REAR NO.5 HARNESS
[Pattern]	: DOOR HARNESS
[Pattern]	: INTERIOR LIGHT HARNESS
[Pattern]	: INTERIOR LIGHT NO.2 HARNESS
[Pattern]	: INSTRUMENT PANEL HARNESS
[Pattern]	: FLOOR HARNESS
[Pattern]	: FRONT HARNESS
[Pattern]	: ENGINE HARNESS
[Pattern]	: INJECTION HARNESS

70

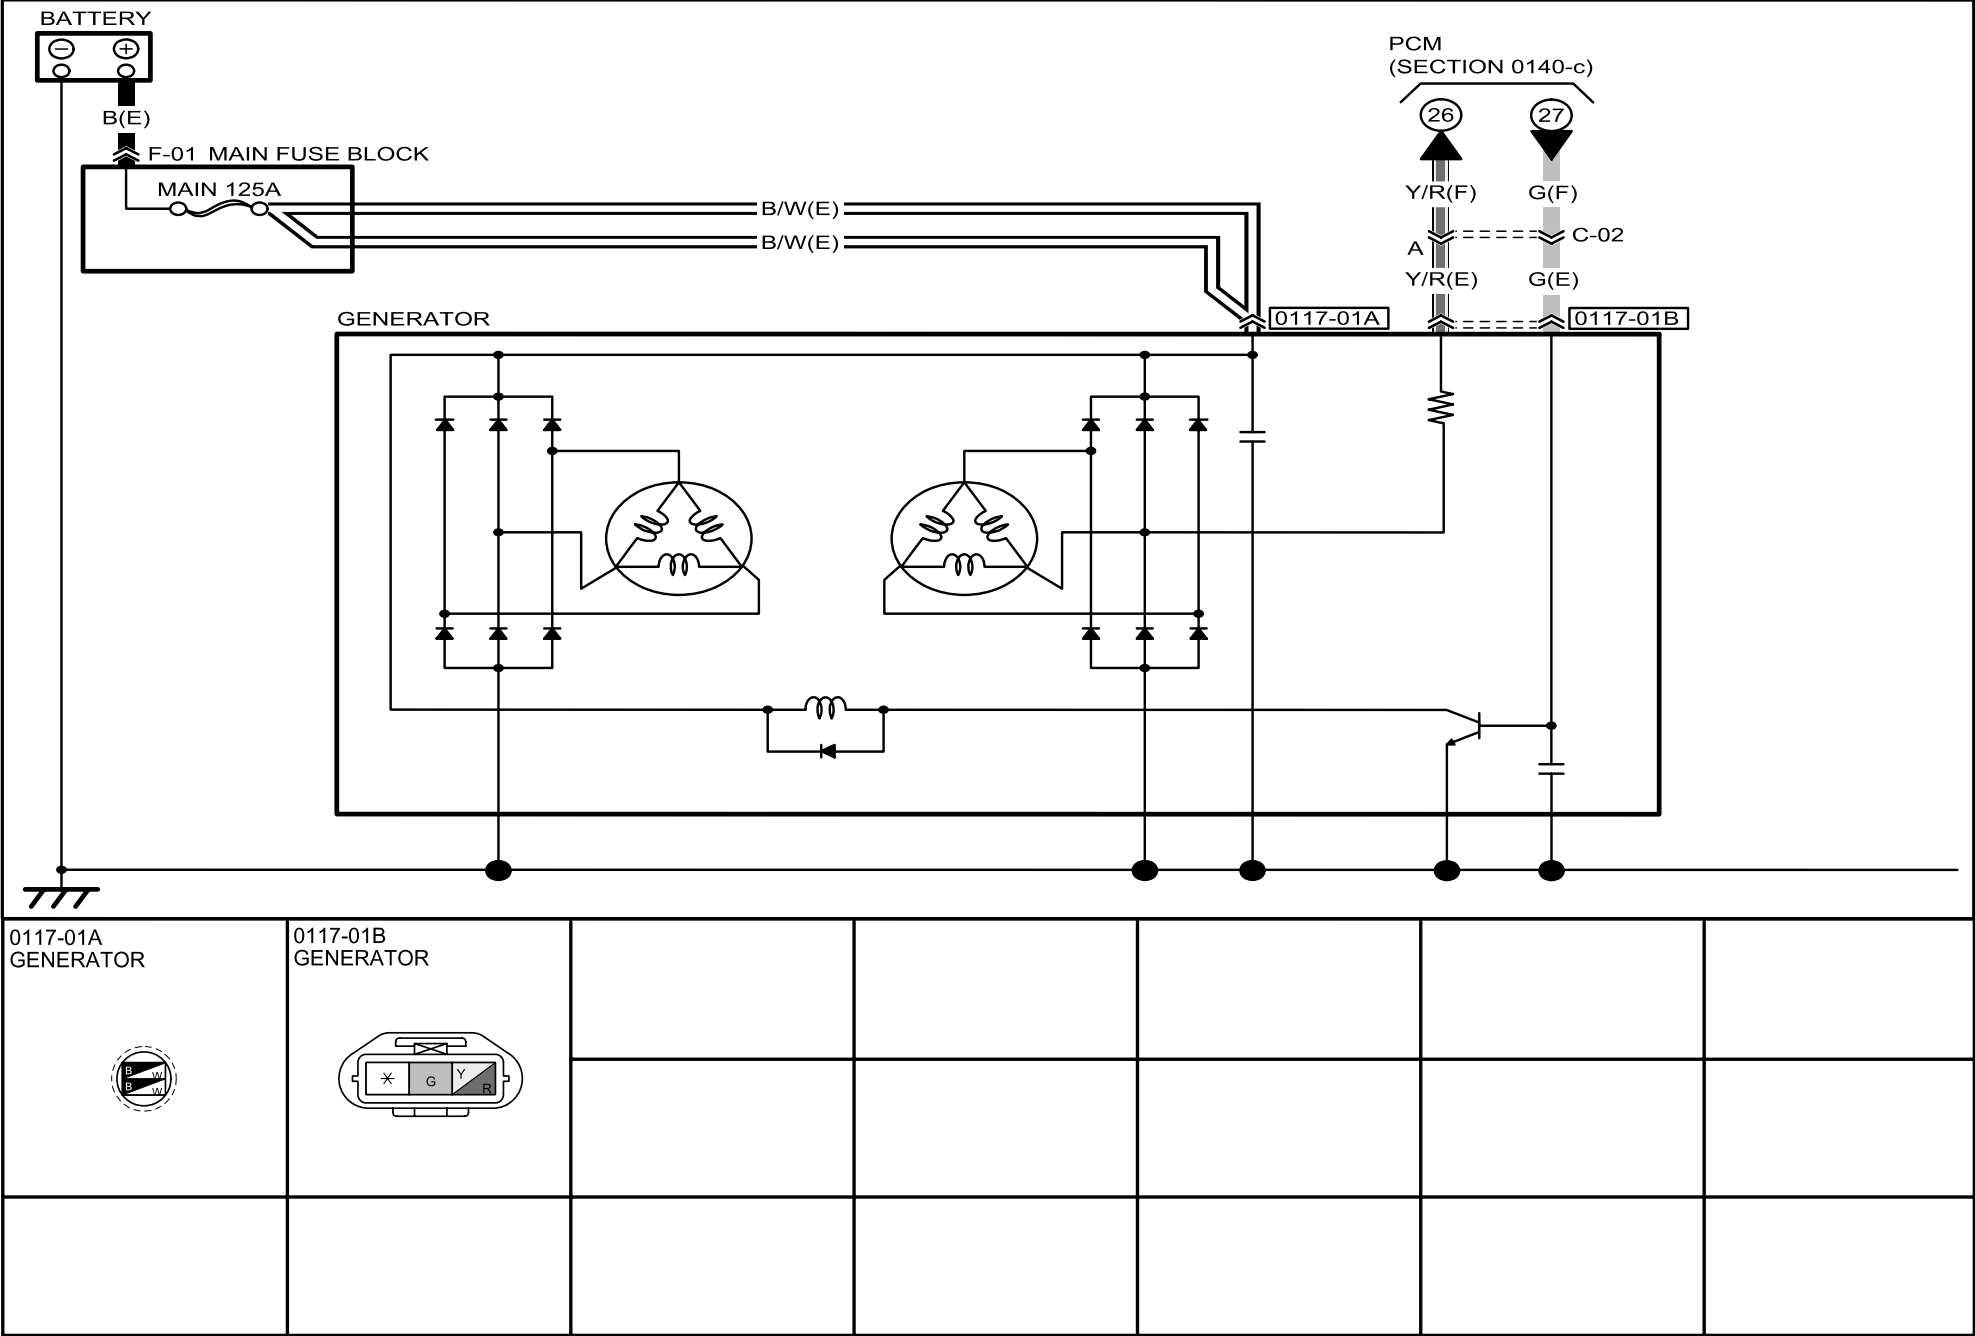


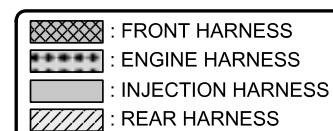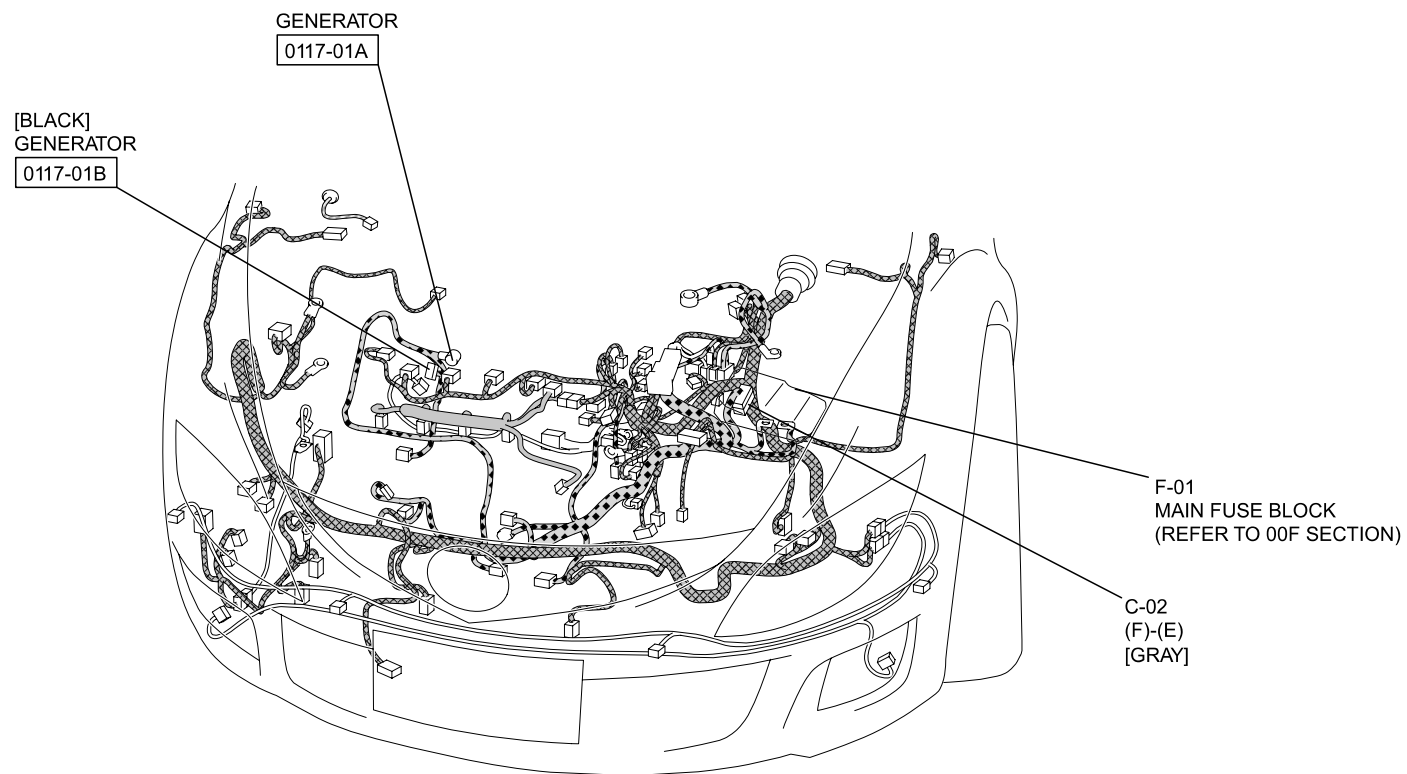

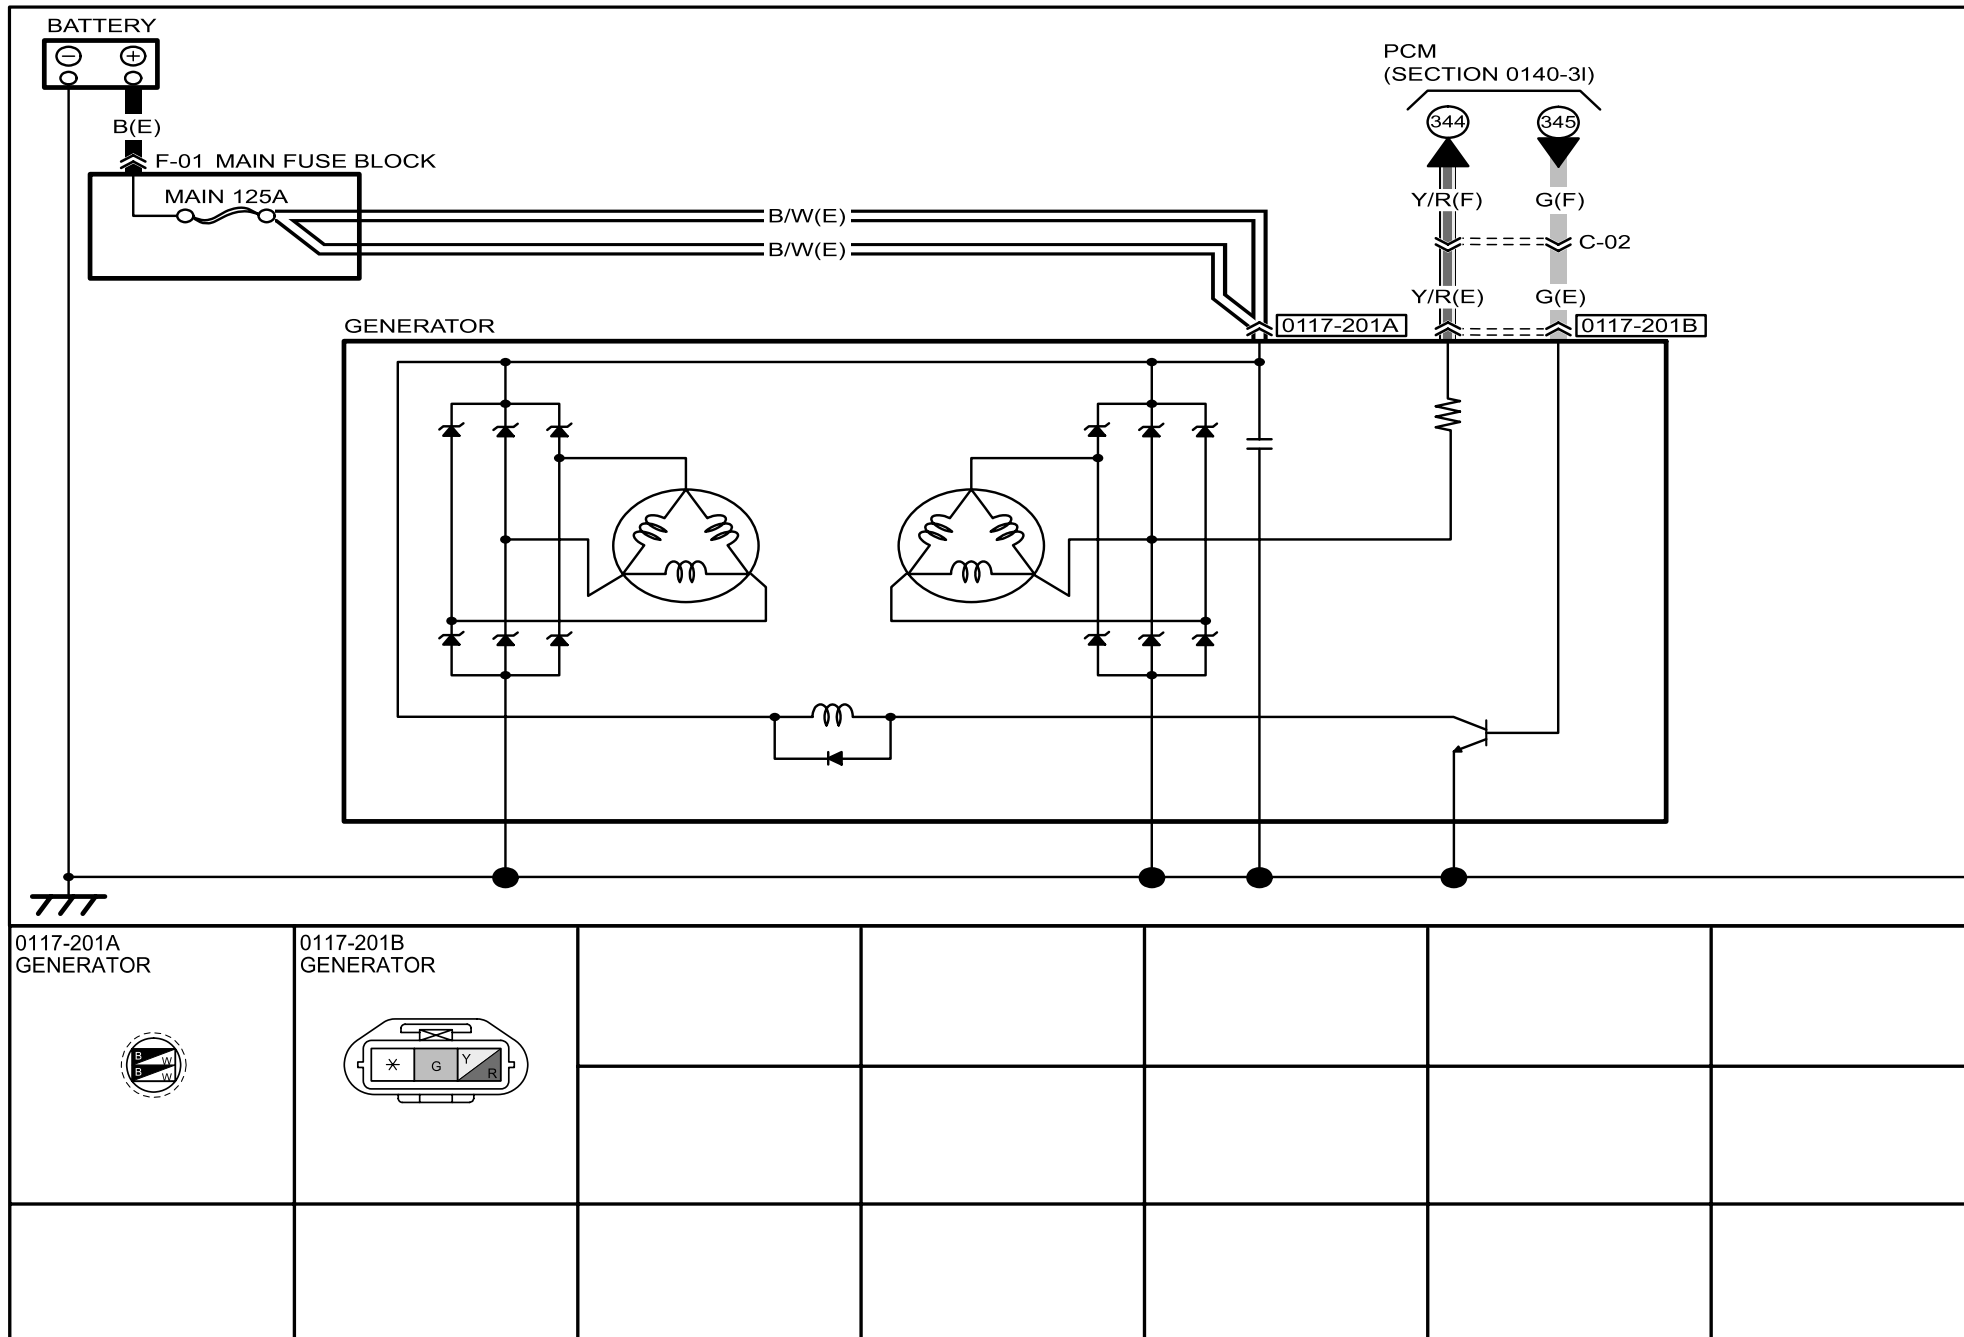

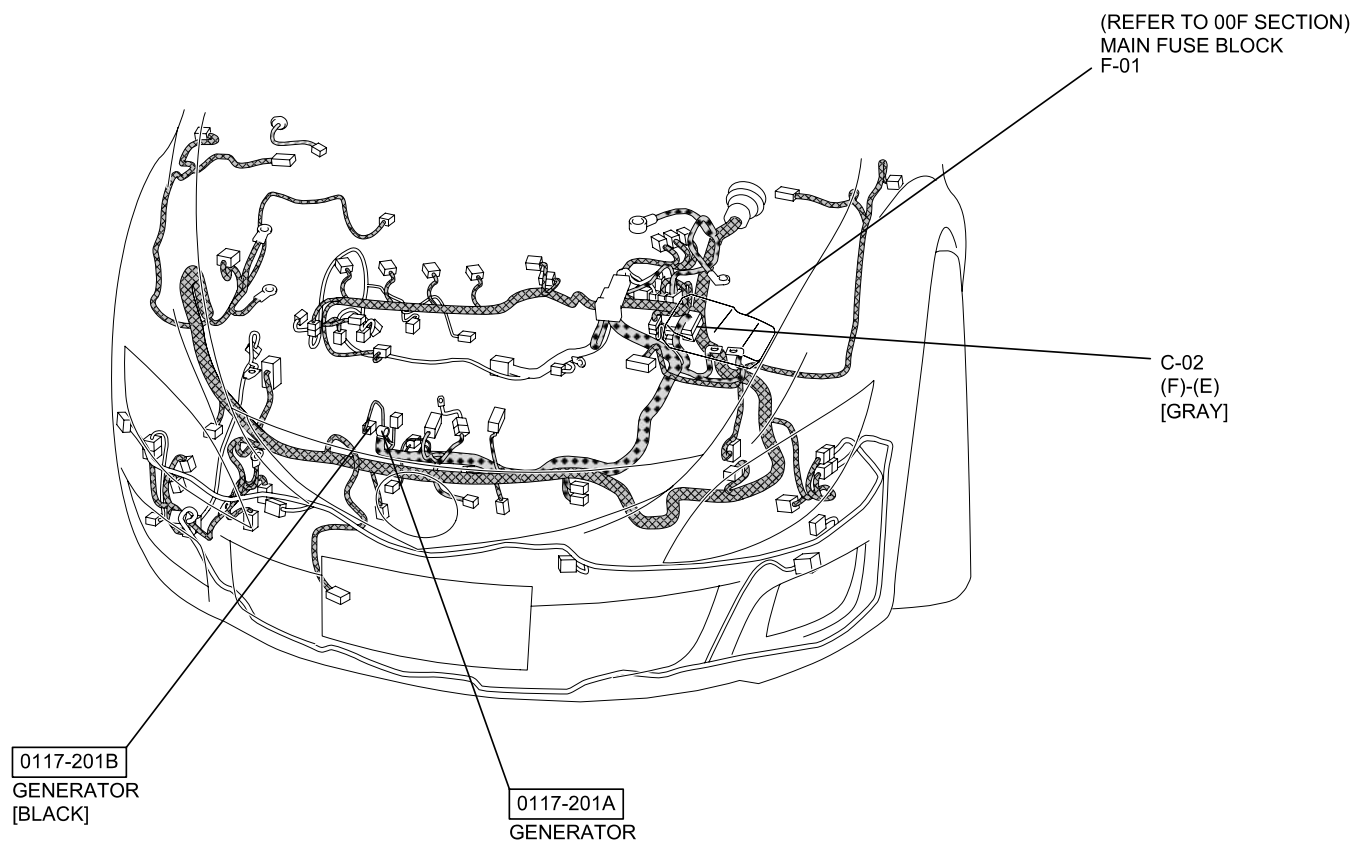

	: FRONT HARNESS
	: ENGINE HARNESS
	: REAR HARNESS

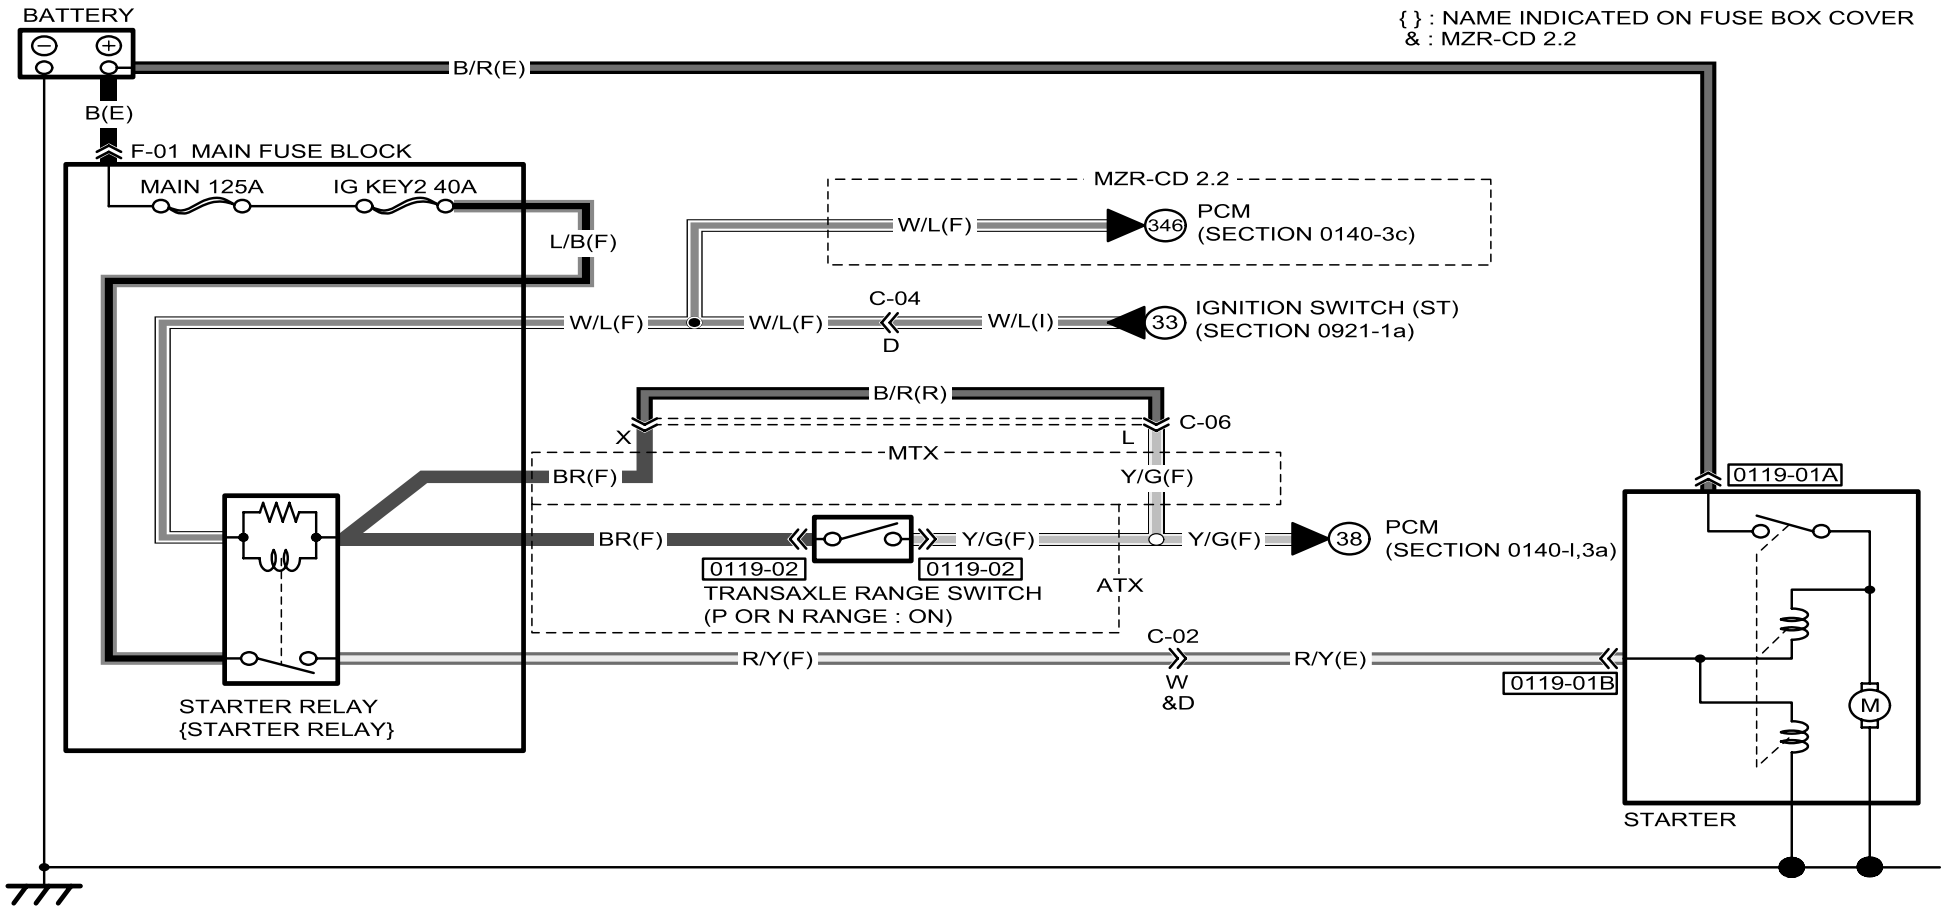


0119-01A
STARTER





0119-01B
STARTER



 0119-02
TRANSAXLE RANGE SWITCH



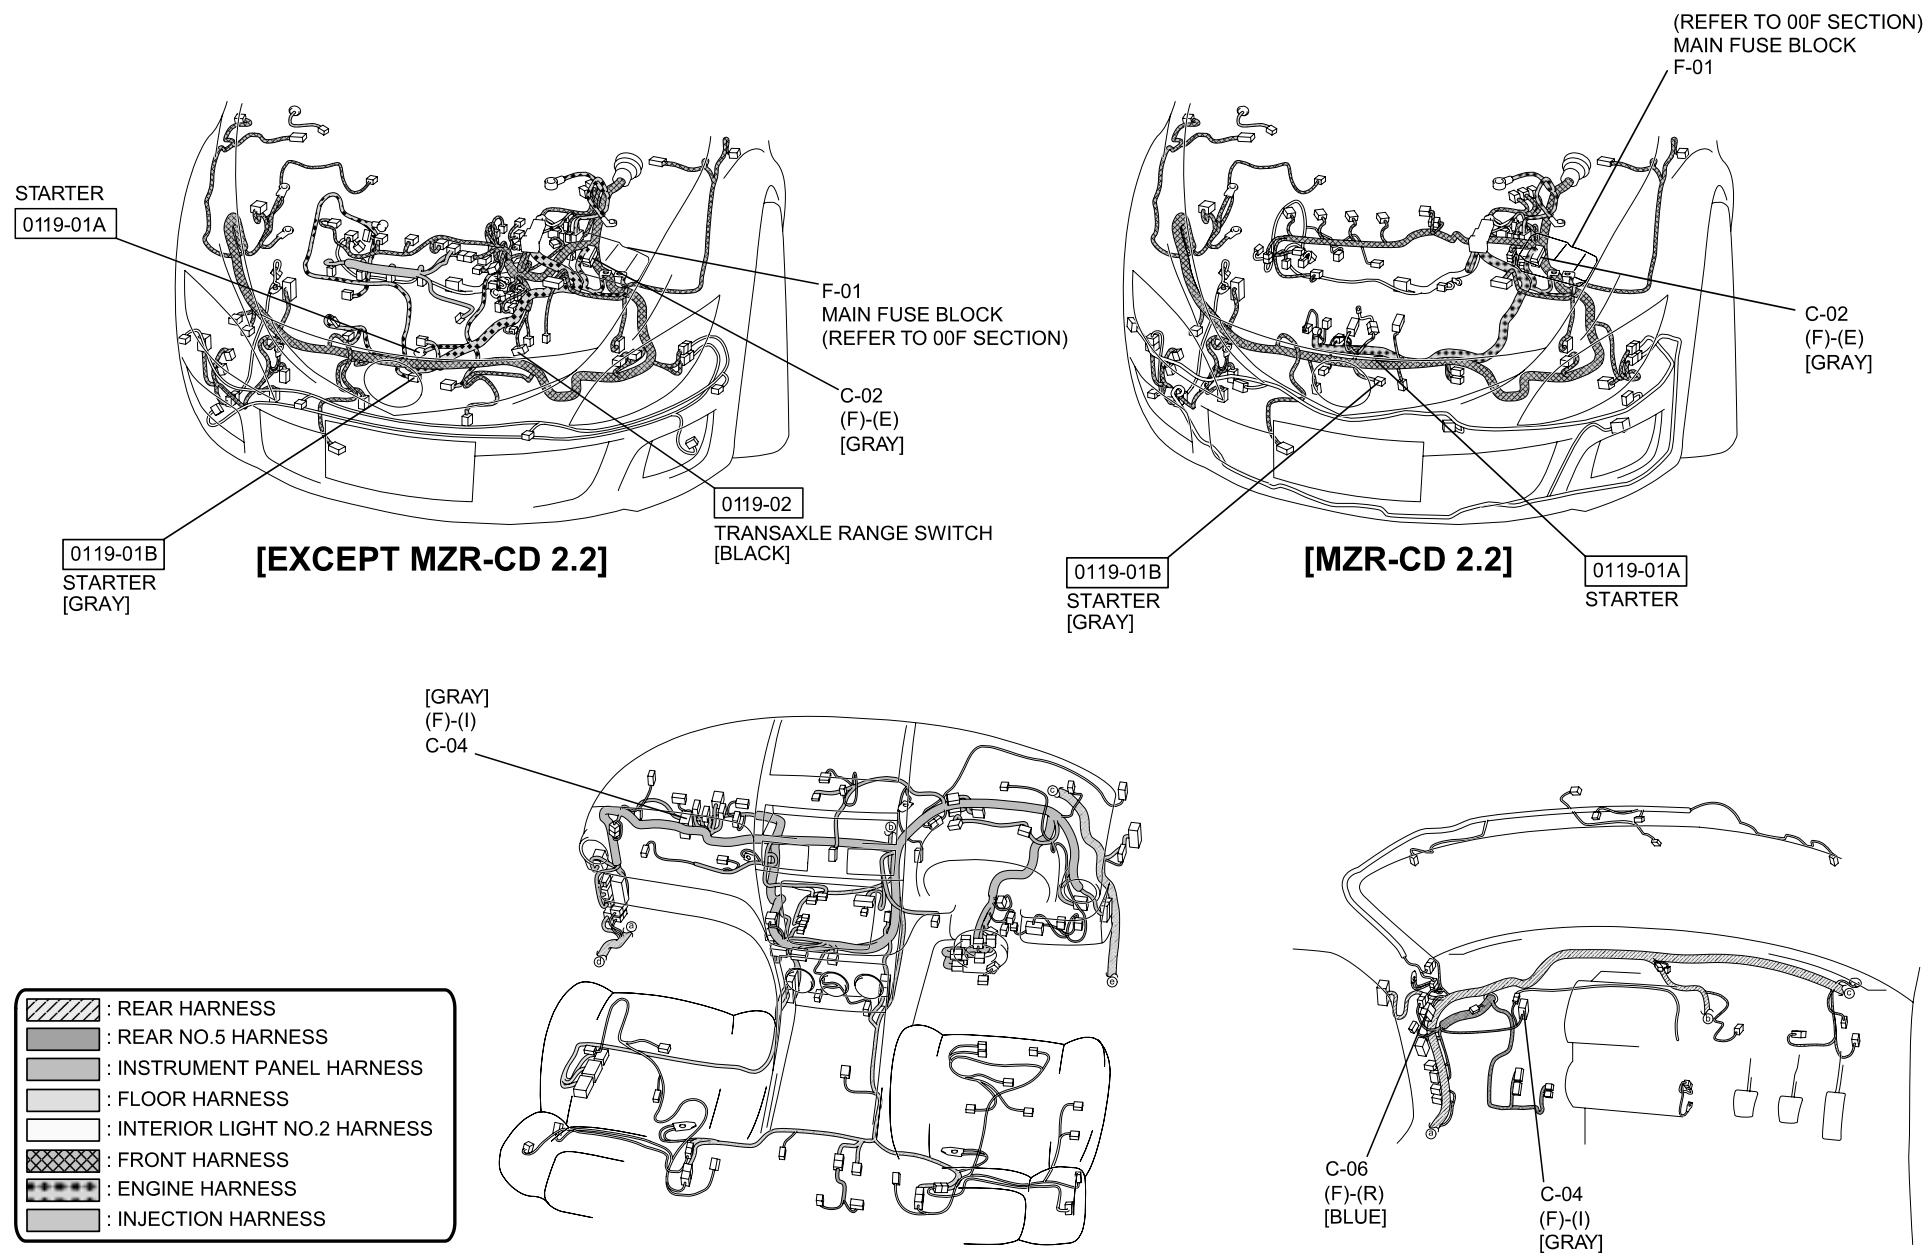


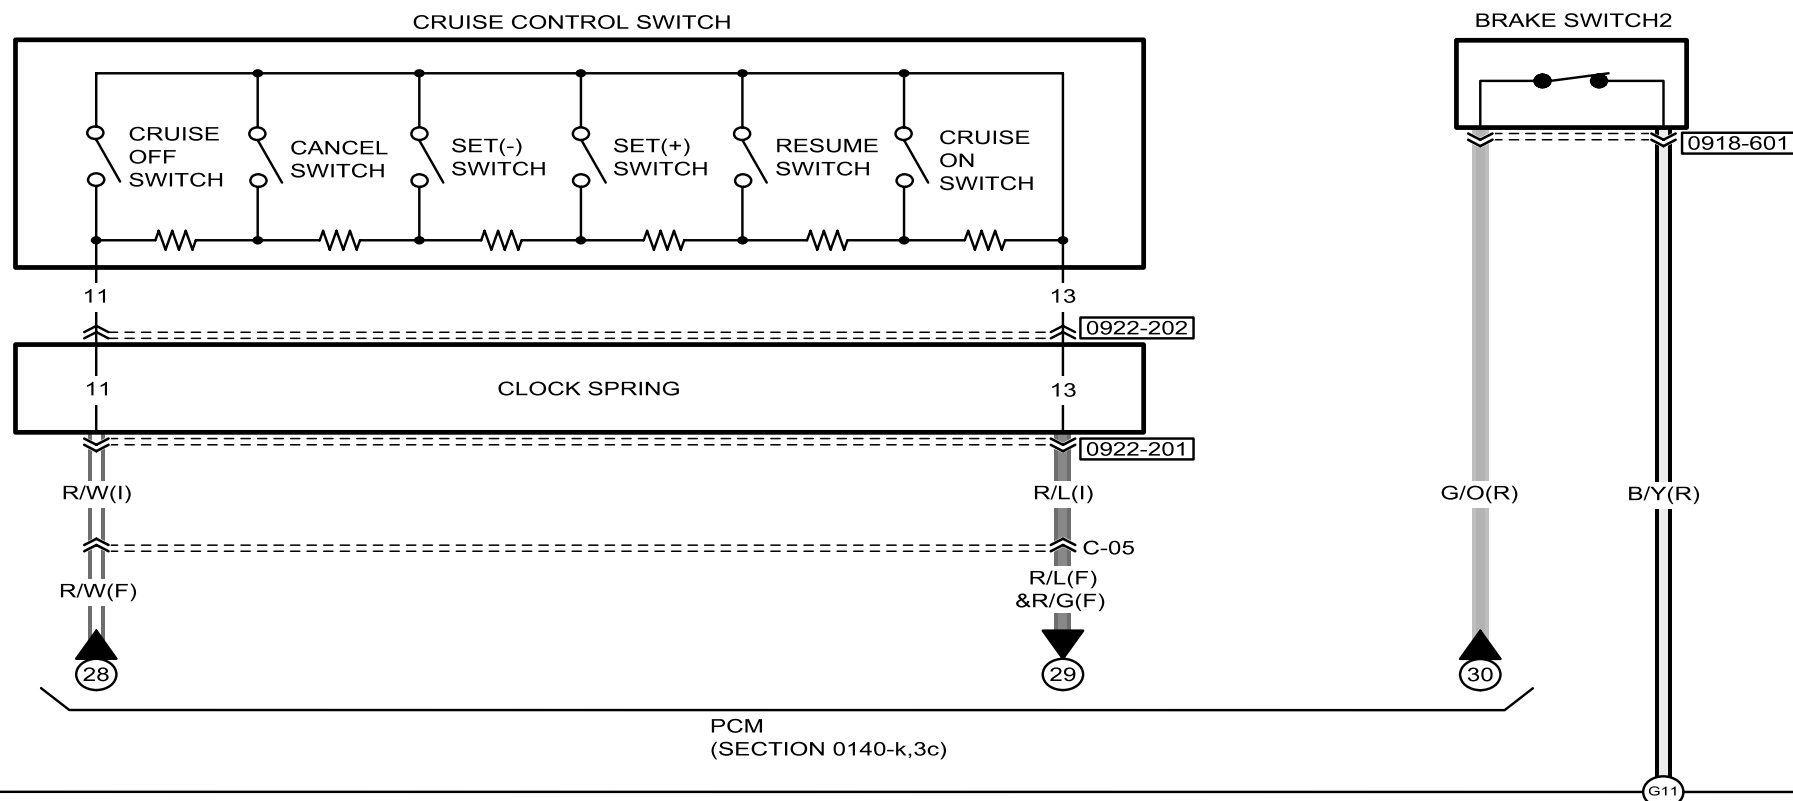


0918-601
BRAKE SWITCH2 /
BRAKE SWITCH



0922-201
CLOCK SPRING

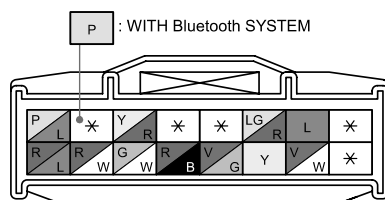

0922-202
CRUISE CONTROL SWITCH /
STEERING SWITCH ILLUMINATION /
CRUISE CONTROL SWITCH ILLUMINATION /
STEERING SWITCH /
CLOCK SPRING

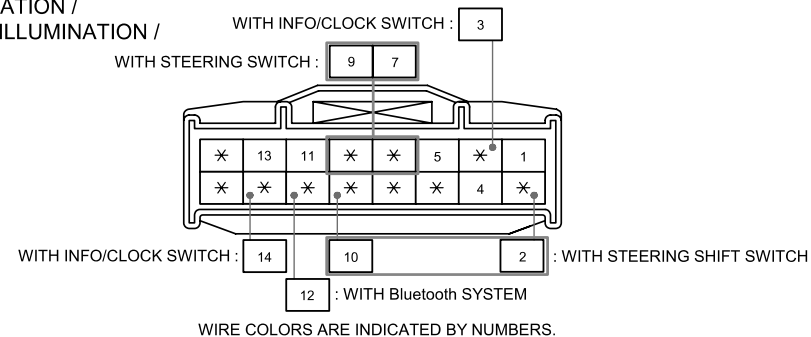







[GRAY]
(F)-(I)
C-05

G11


[GRAY]
(F)-(I)
C-05



0922-201
CLOCK SPRING

0922-202
CRUISE CONTROL SWITCH /
STEERING SWITCH ILLUMINATION /
CRUISE CONTROL SWITCH ILLUMINATION /
STEERING SWITCH /
CLOCK SPRING


	: FRONT HARNESS
	: REAR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS


0918-601
BRAKE SWITCH2 / BRAKE SWITCH

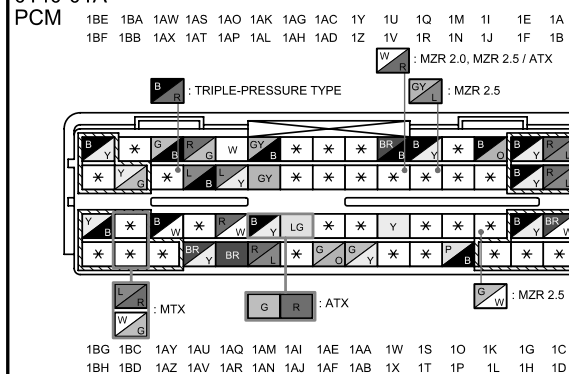

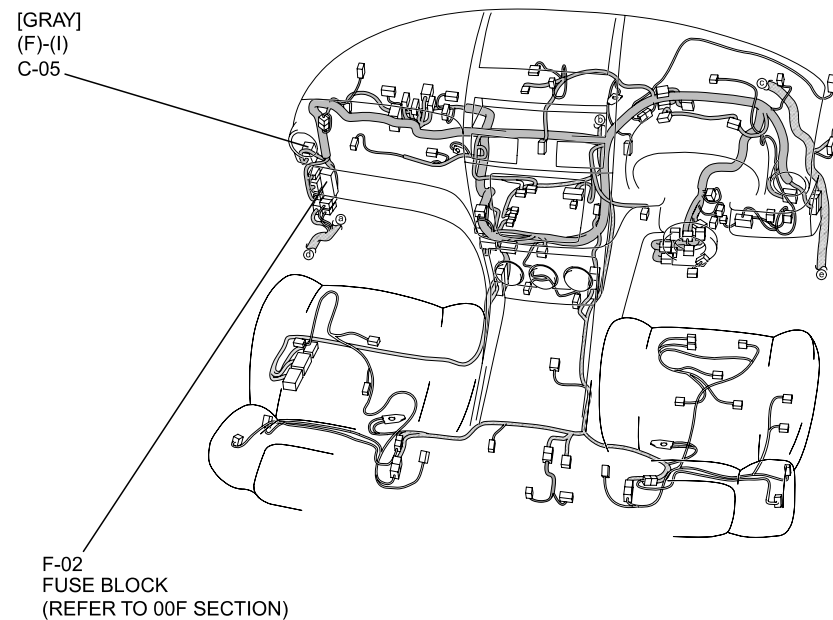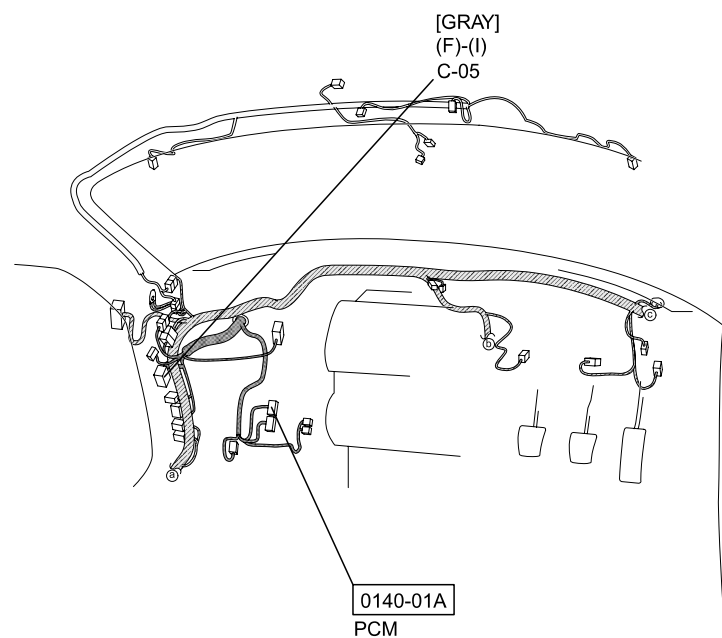


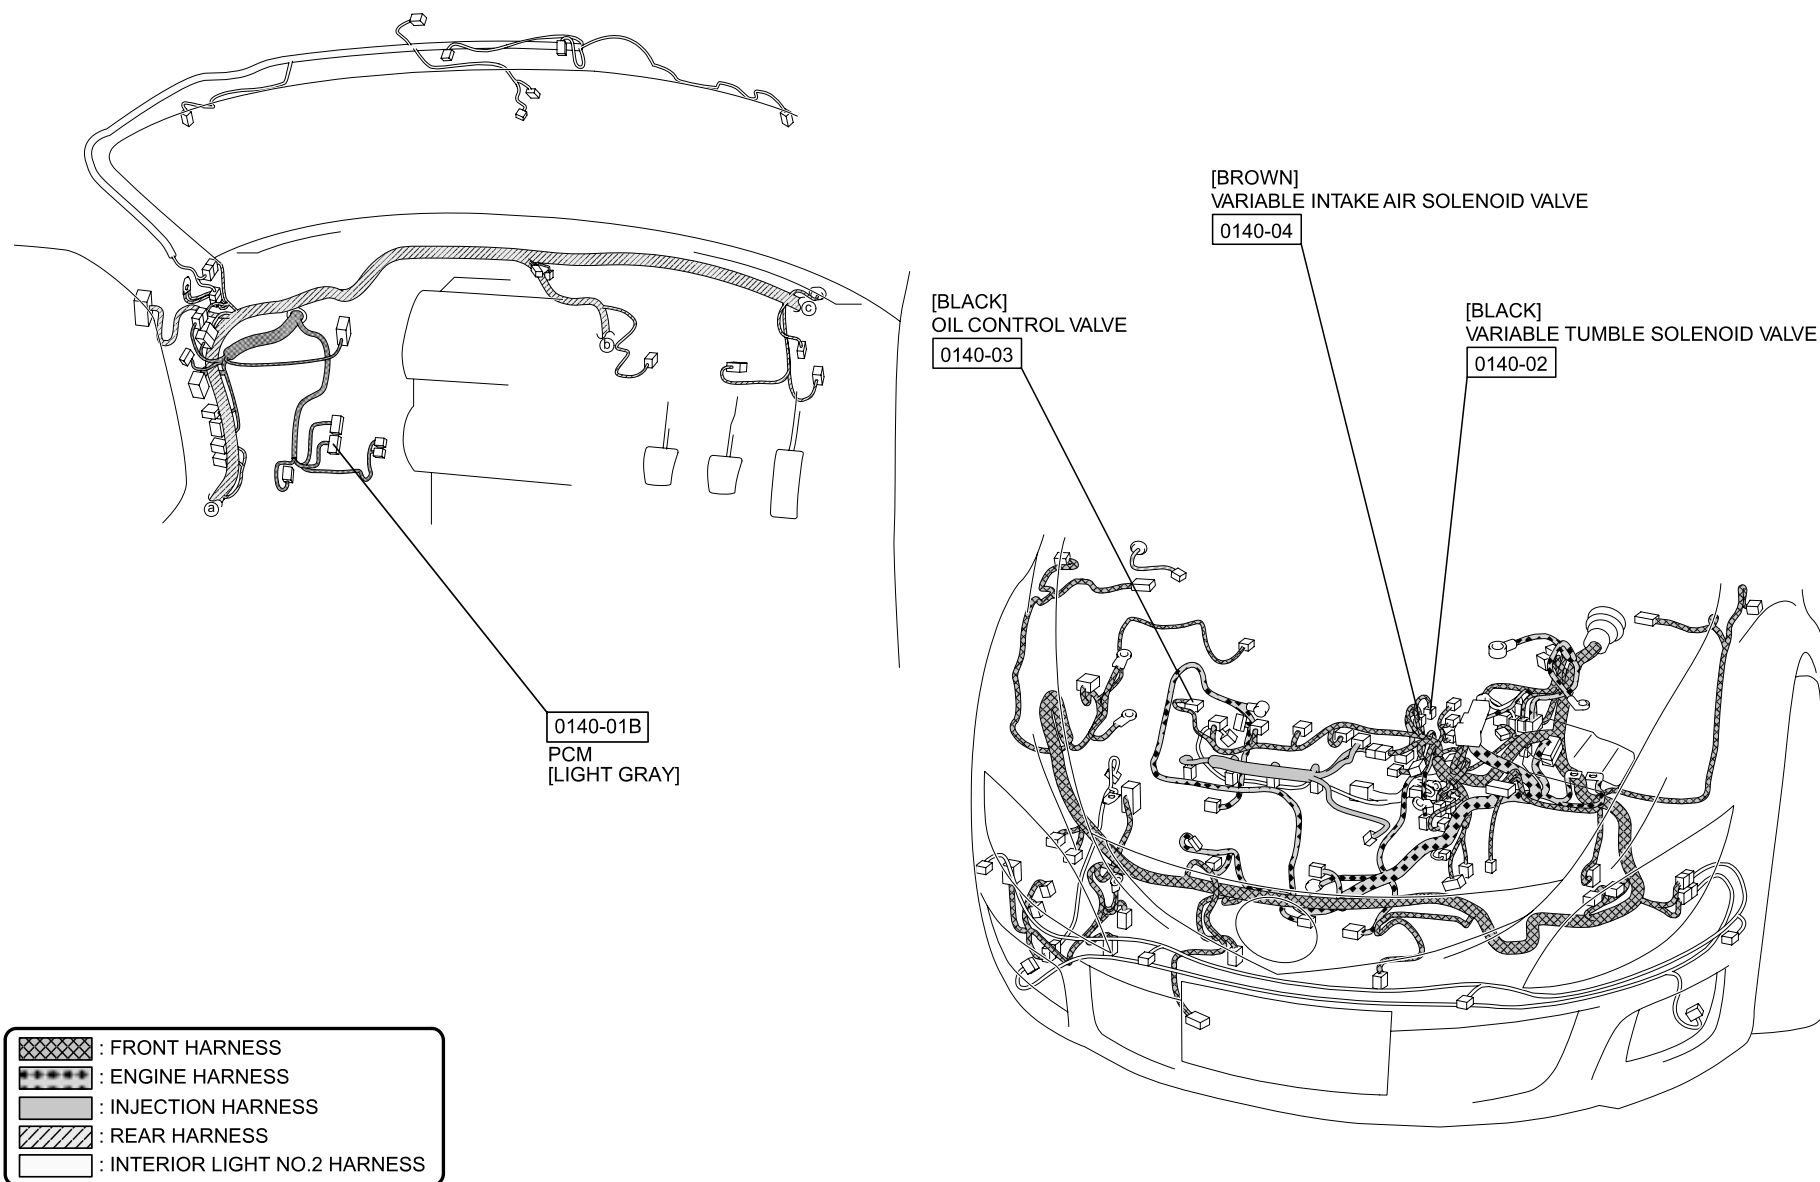
	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

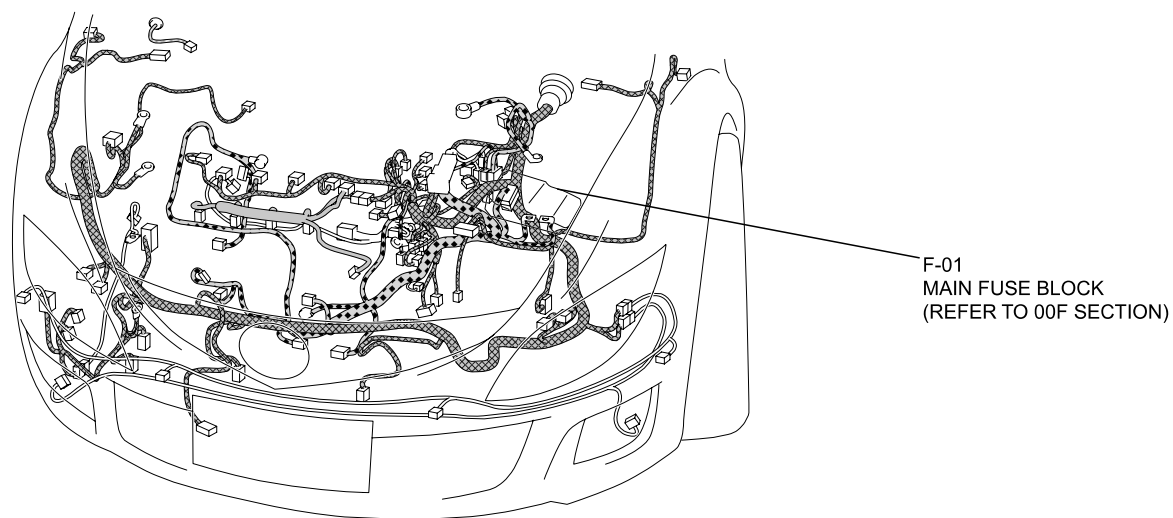


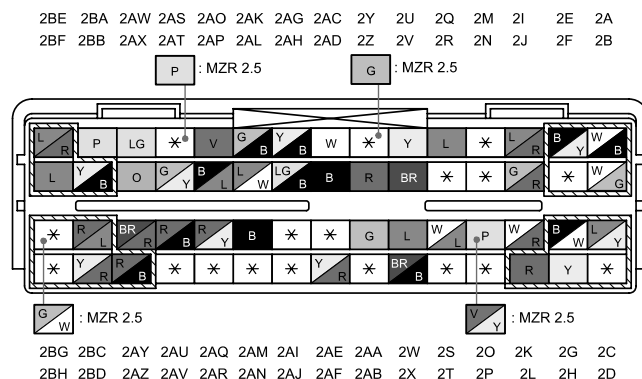


A diagram of a battery with a rectangular body and a terminal on top. The body is divided into three sections: two black sections on the left and right, each labeled 'B', and a white triangular section on the right labeled 'Y'.

 : MZR 2.5




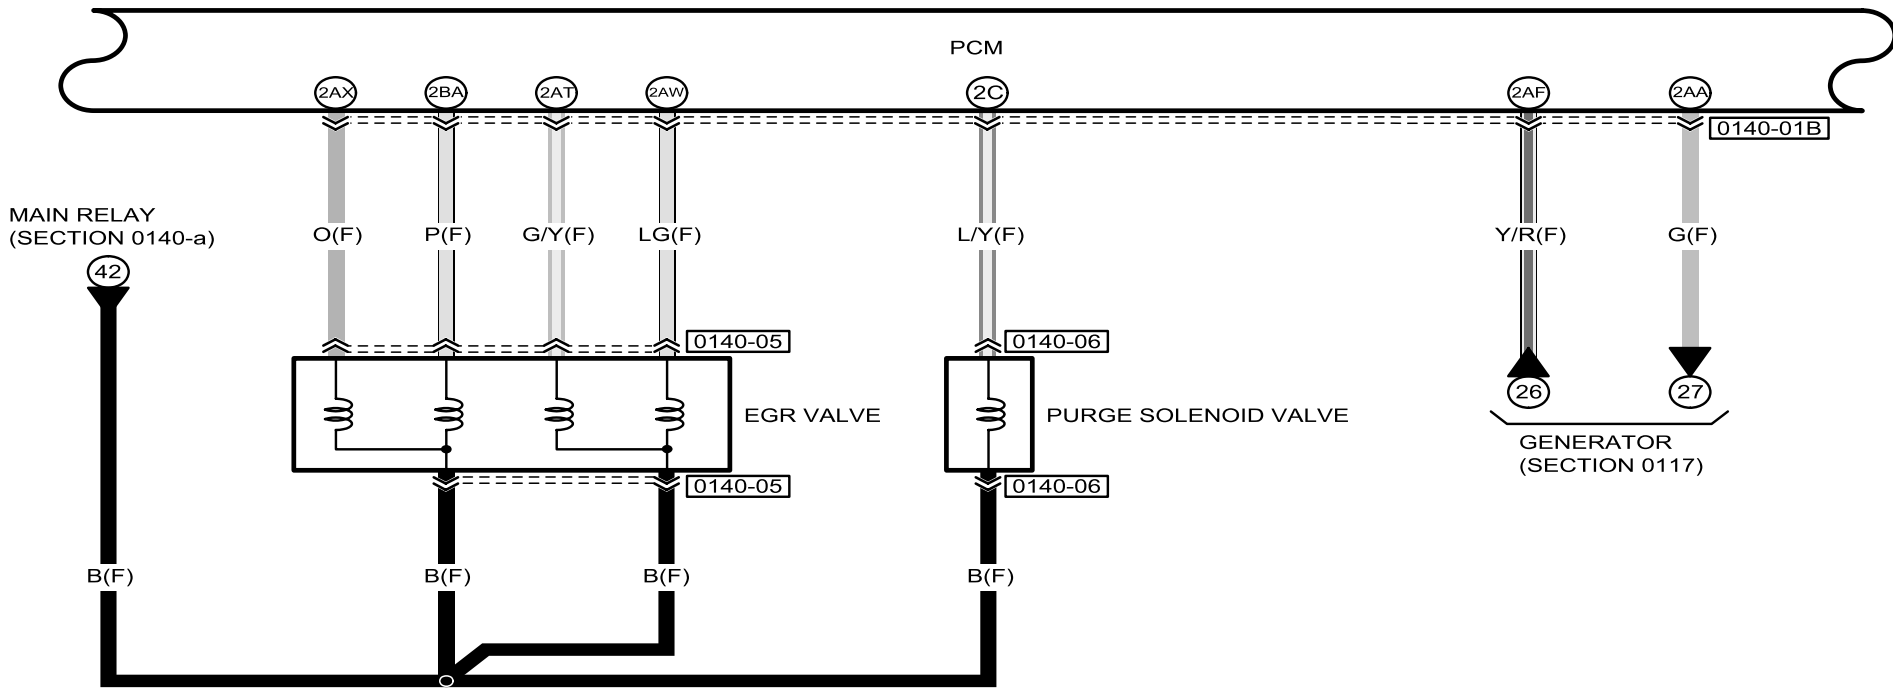


0140-01B
PCM

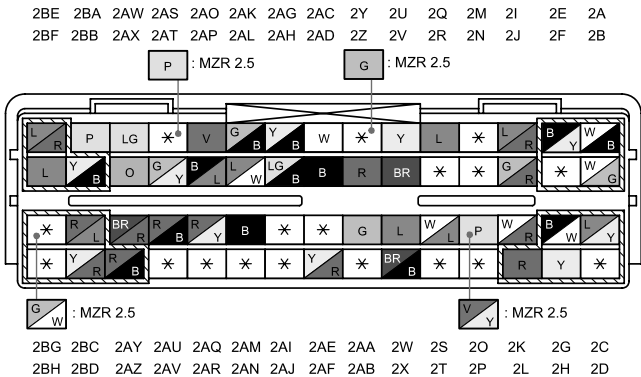




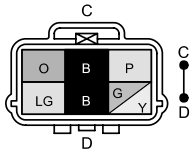


0140-05
EGR VALVE

 


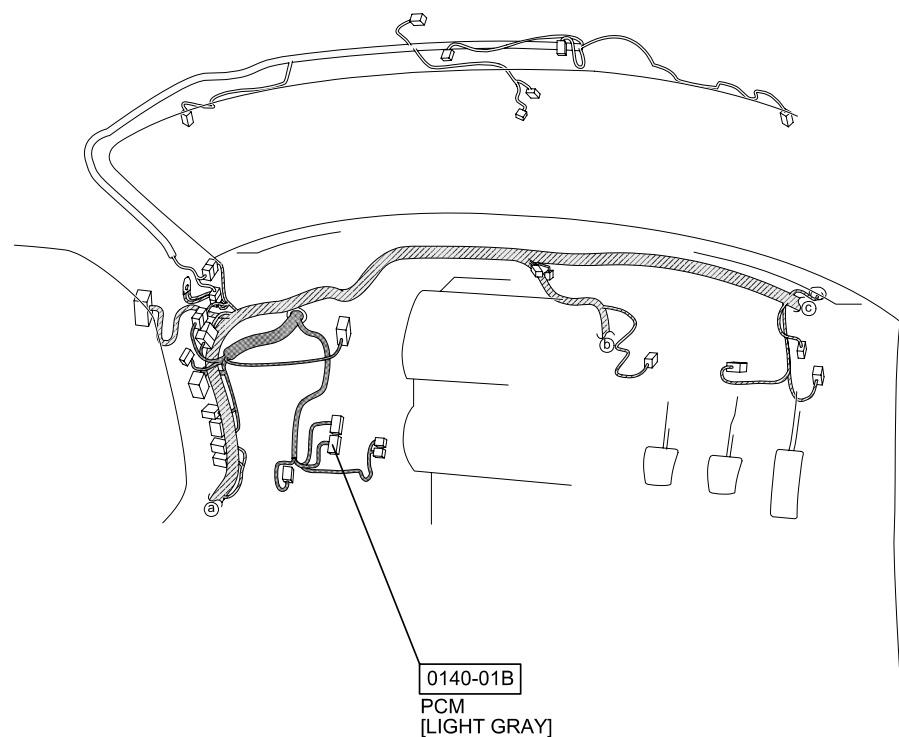
0140-06
PURGE SOLENOID VALVE






	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS
	: REAR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS

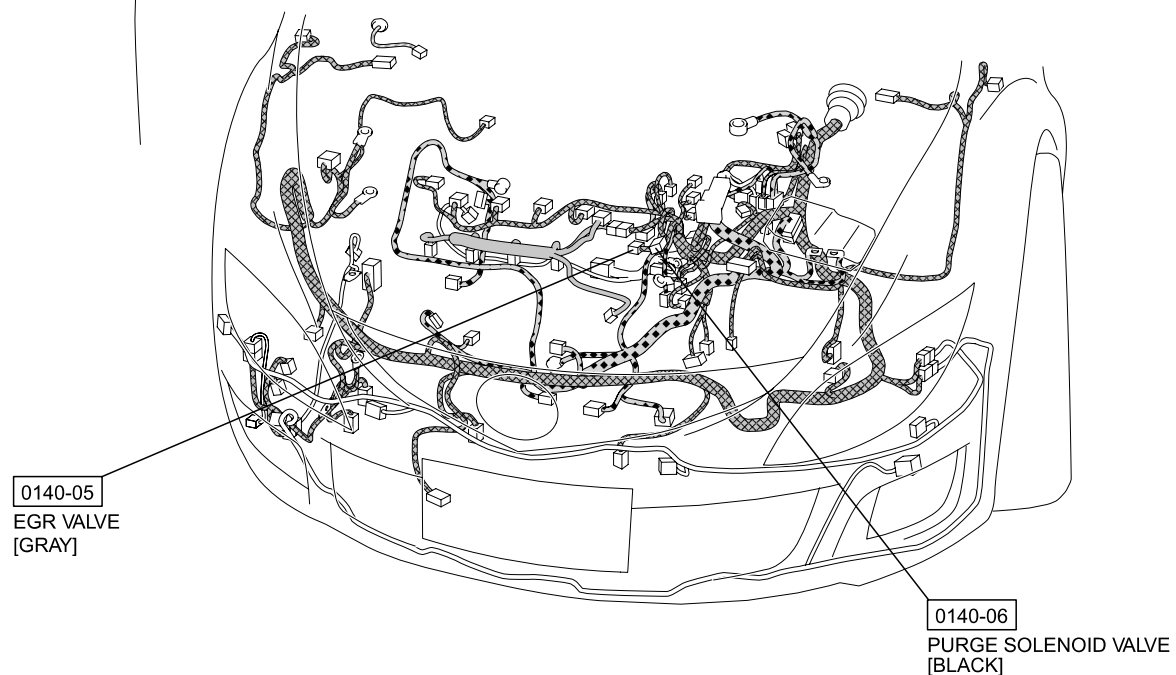

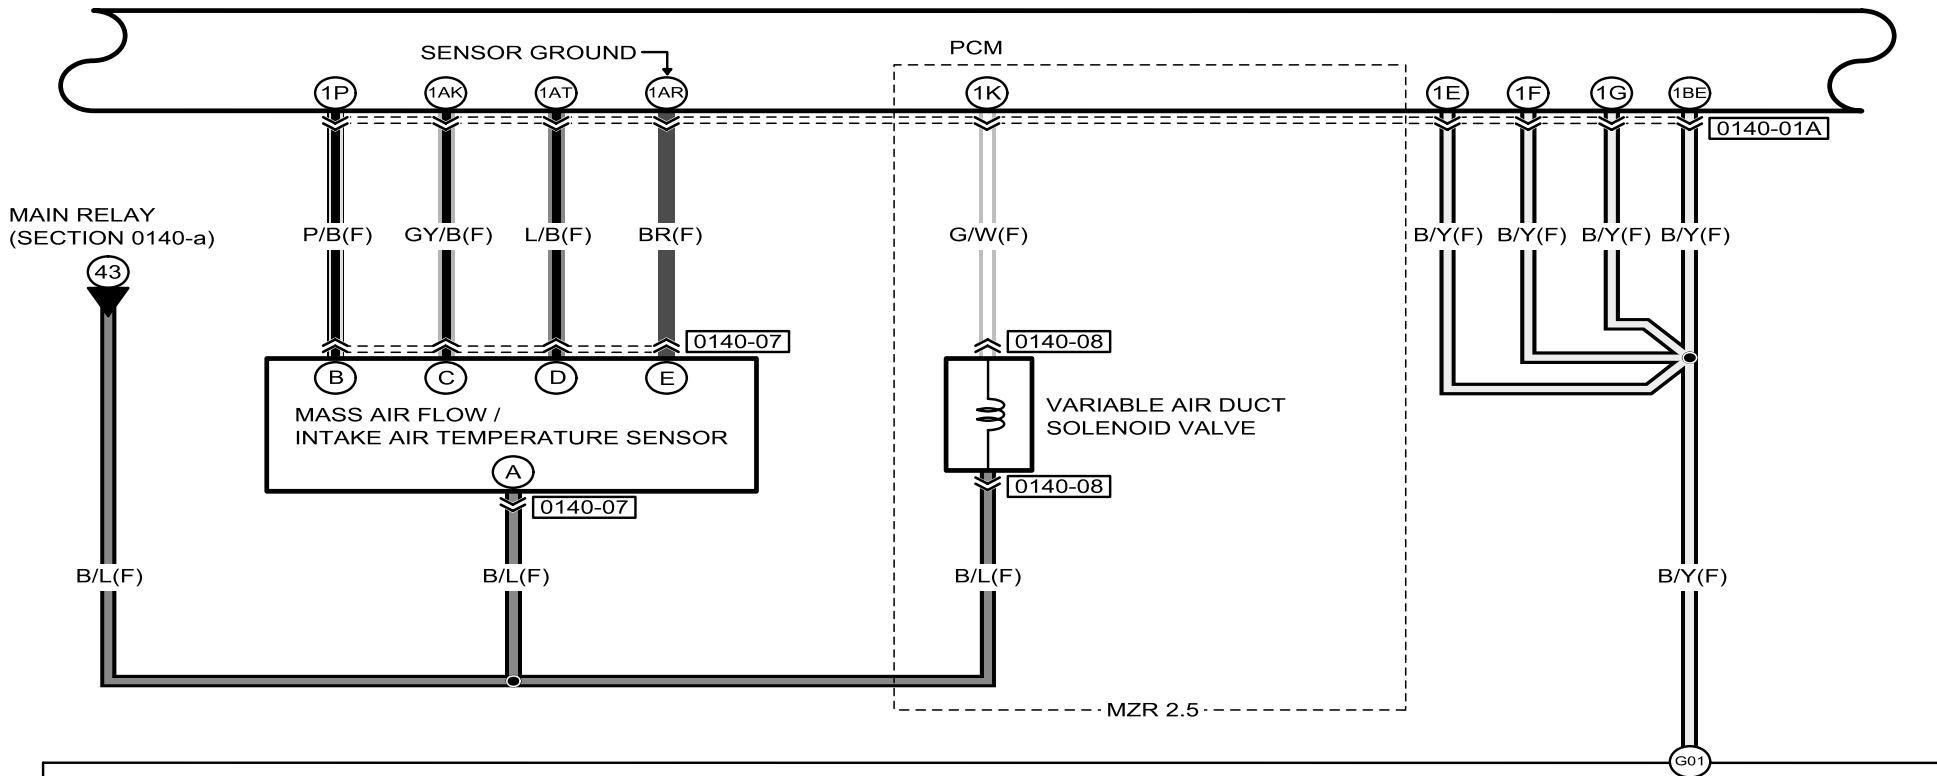


0140-01A
PCM

1BE 1BA 1AW 1AS 1AO 1AK 1AG 1AC 1Y 1U 1Q 1M 1I 1E 1A
1BF 1BB 1AX 1AT 1AP 1AL 1AH 1AD 1Z 1V 1R 1N 1J 1F 1B

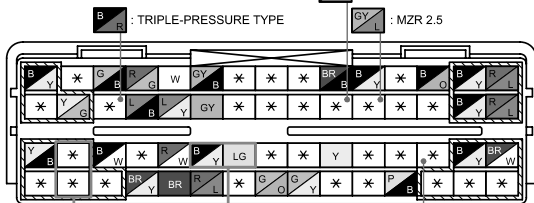

 
1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C
1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D




 
 
0140-07
MASS AIR FLOW /
INTAKE AIR TEMPERATURE SENSOR





0140-08
VARIABLE AIR DUCT
SOLENOID VALVE

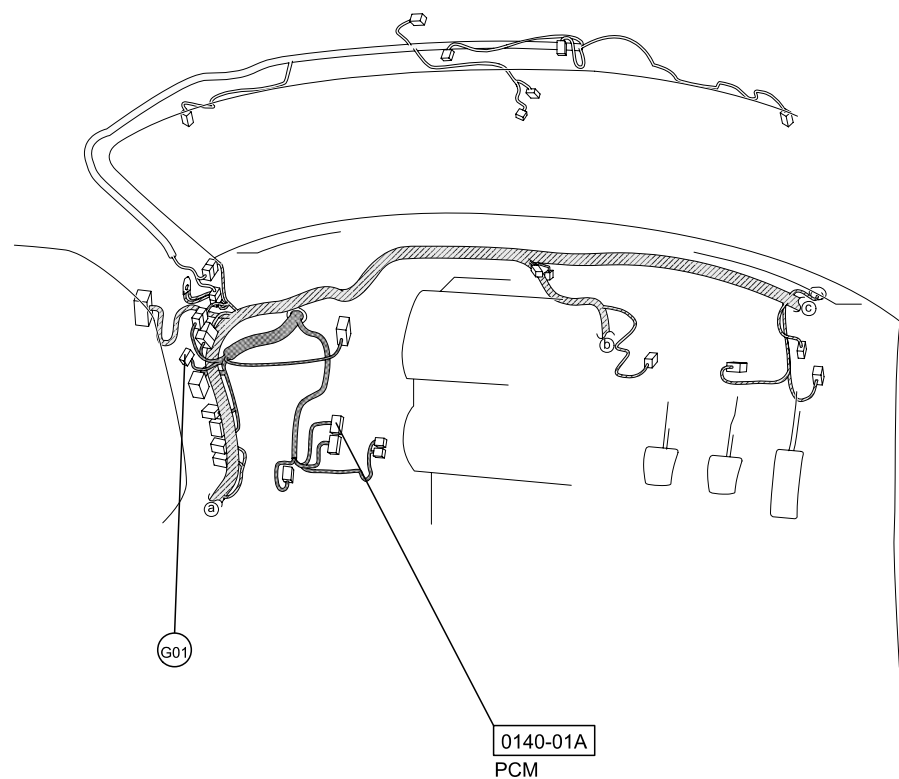




-  : FRONT HARNESS
-  : ENGINE HARNESS
-  : INJECTION HARNESS
-  : REAR HARNESS
-  : INTERIOR LIGHT NO.2 HARNESS

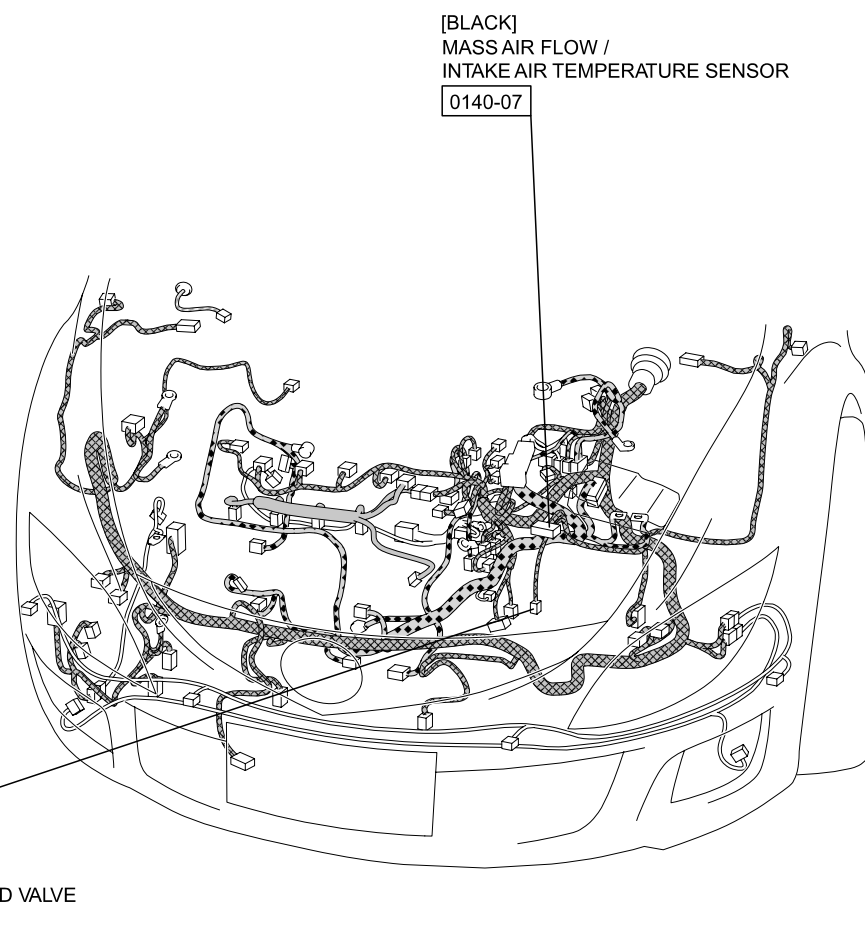

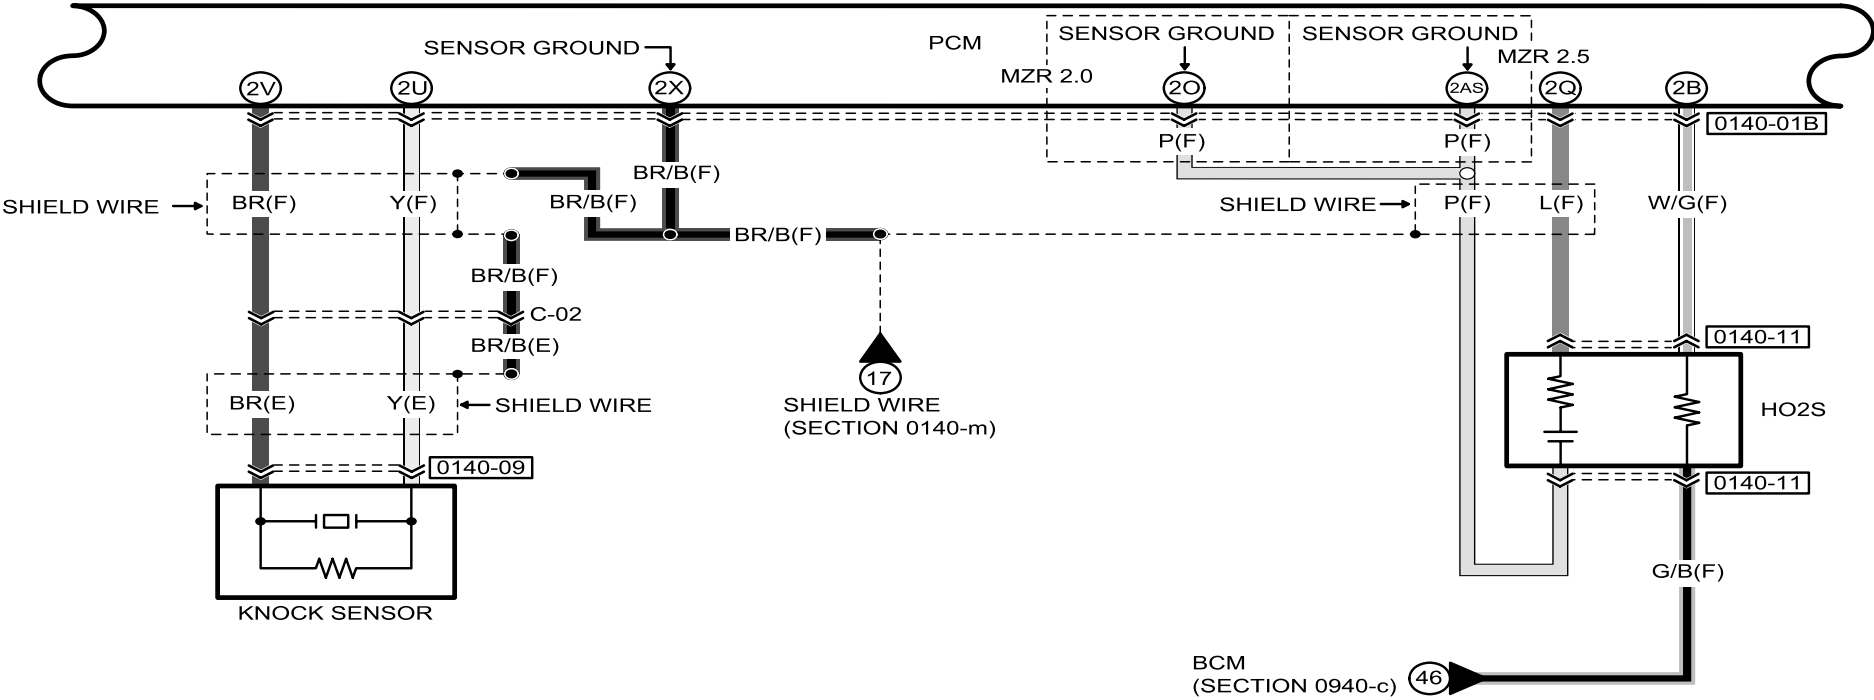

0140-01B
PCM

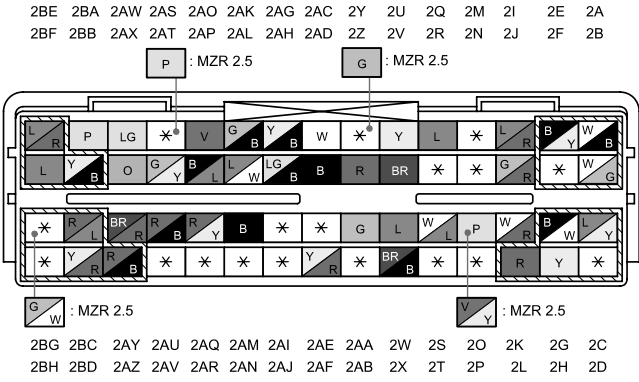


0140-09
KNOCK SENSOR




0140-11
HO2S




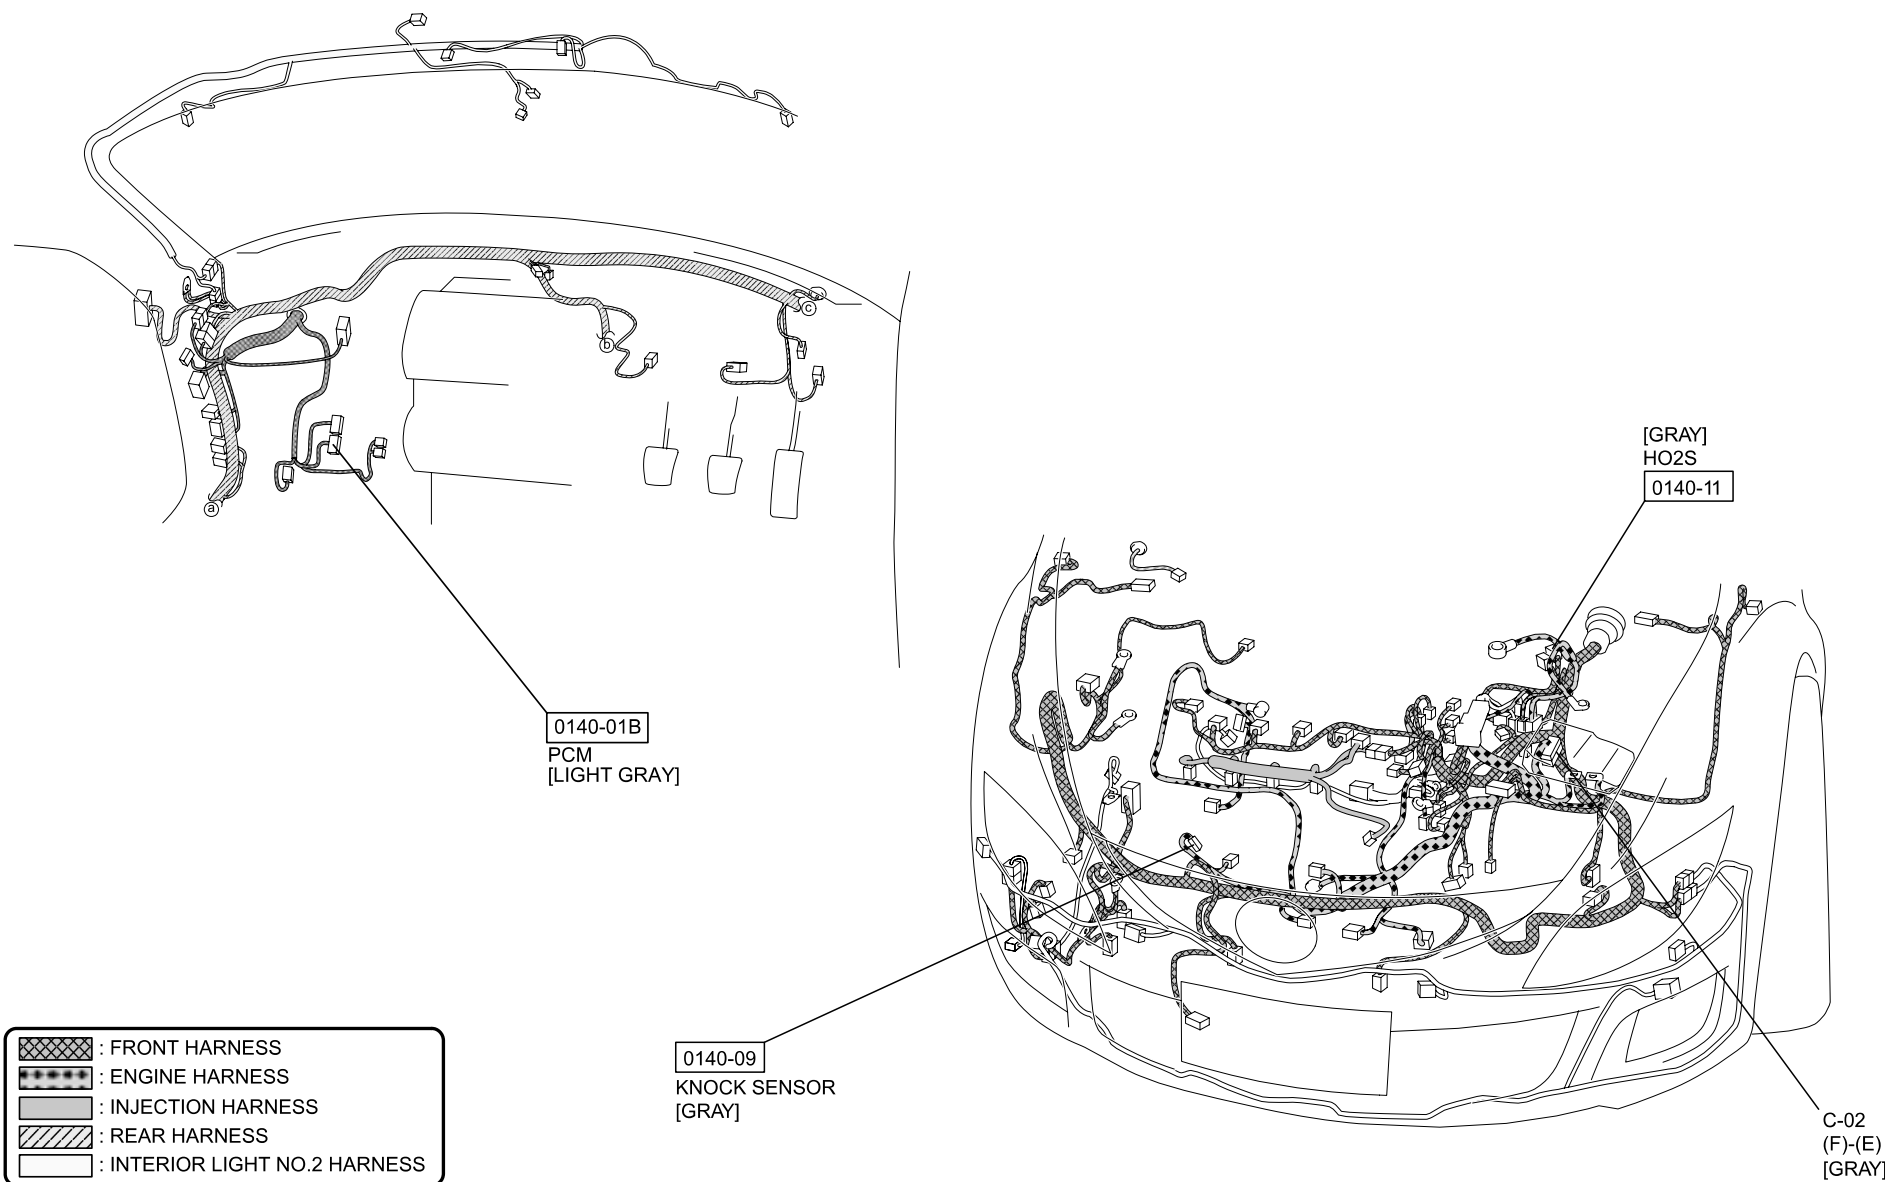

88

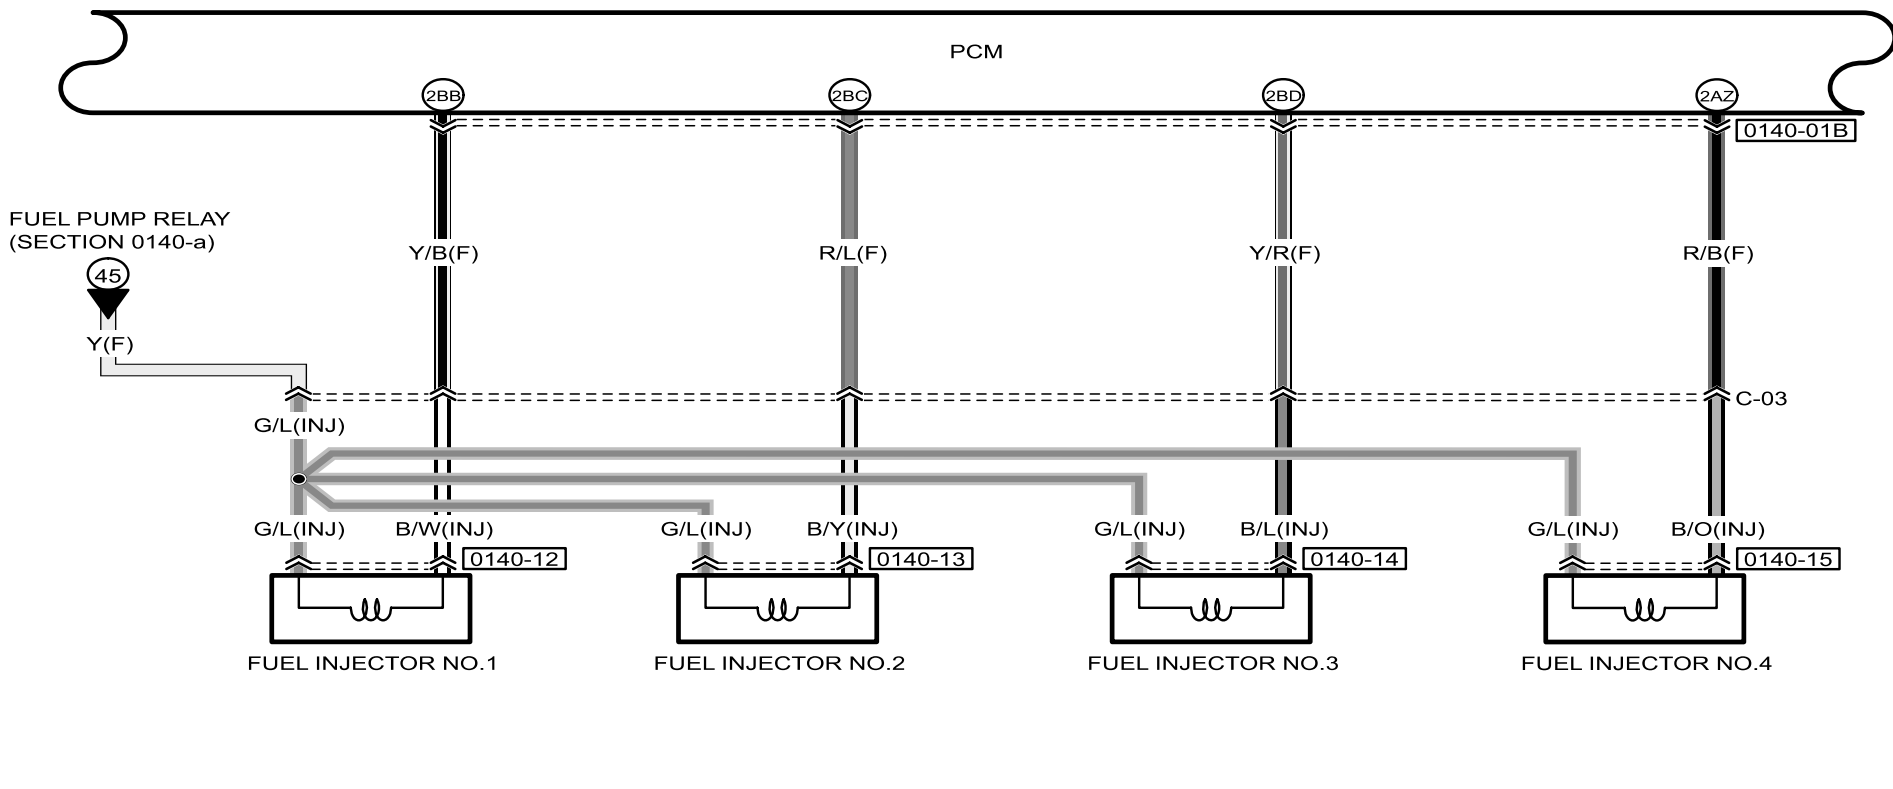

0140-01B
PCM

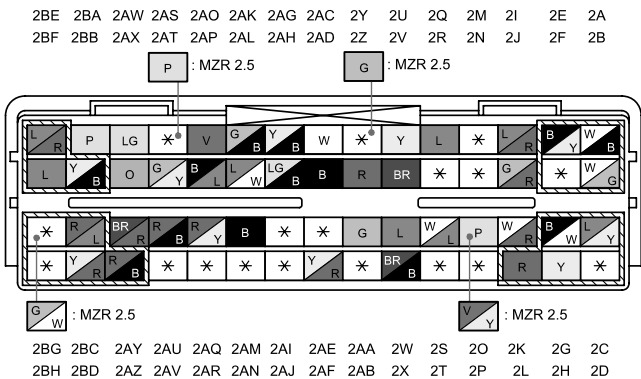

0140-12
FUEL INJECTOR NO.1



0140-13
FUEL INJECTOR NO.2




0140-14
FUEL INJECTOR NO.3



0140-15
FUEL INJECTOR NO.4



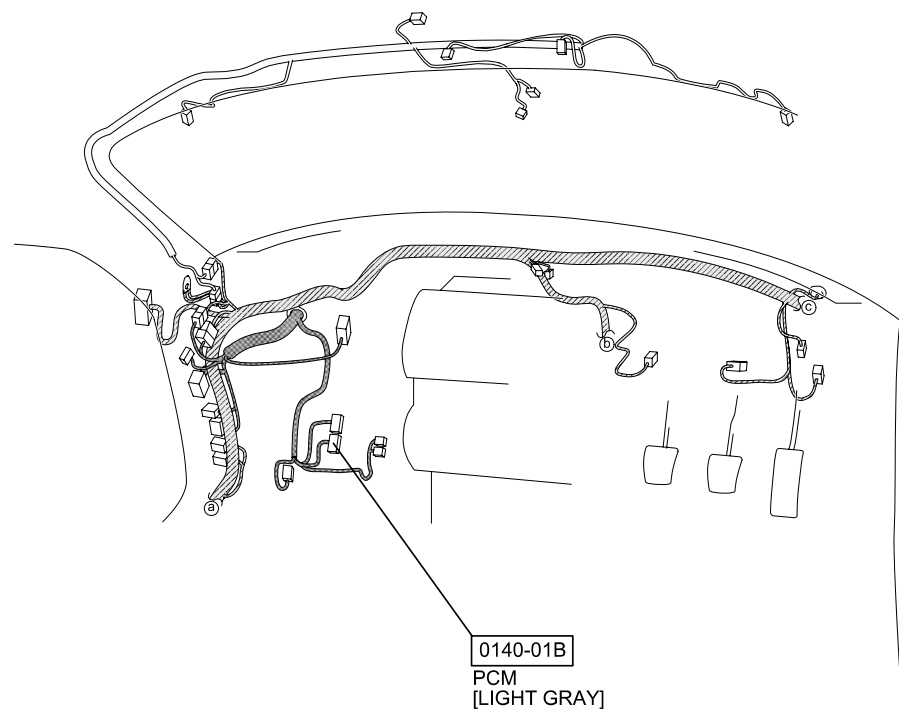

	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS
	: REAR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS


0140-12
FUEL INJECTOR NO.1


0140-13
FUEL INJECTOR NO.2

FUEL INJECTOR NO.3
0140-14


(INJ)[DARK GRAY]
(F)[GRAY]
(F)-(INJ)
C-03

0140-15
FUEL INJECTOR NO.4

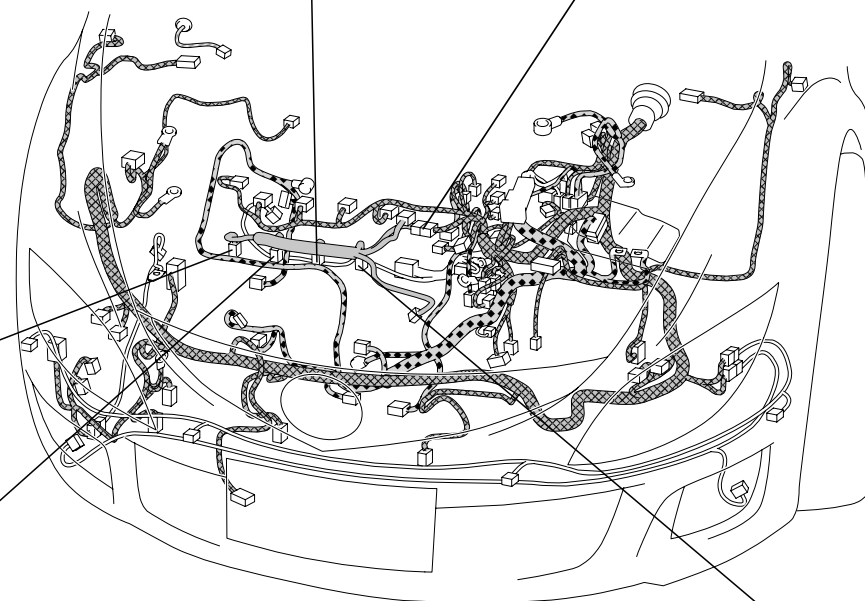


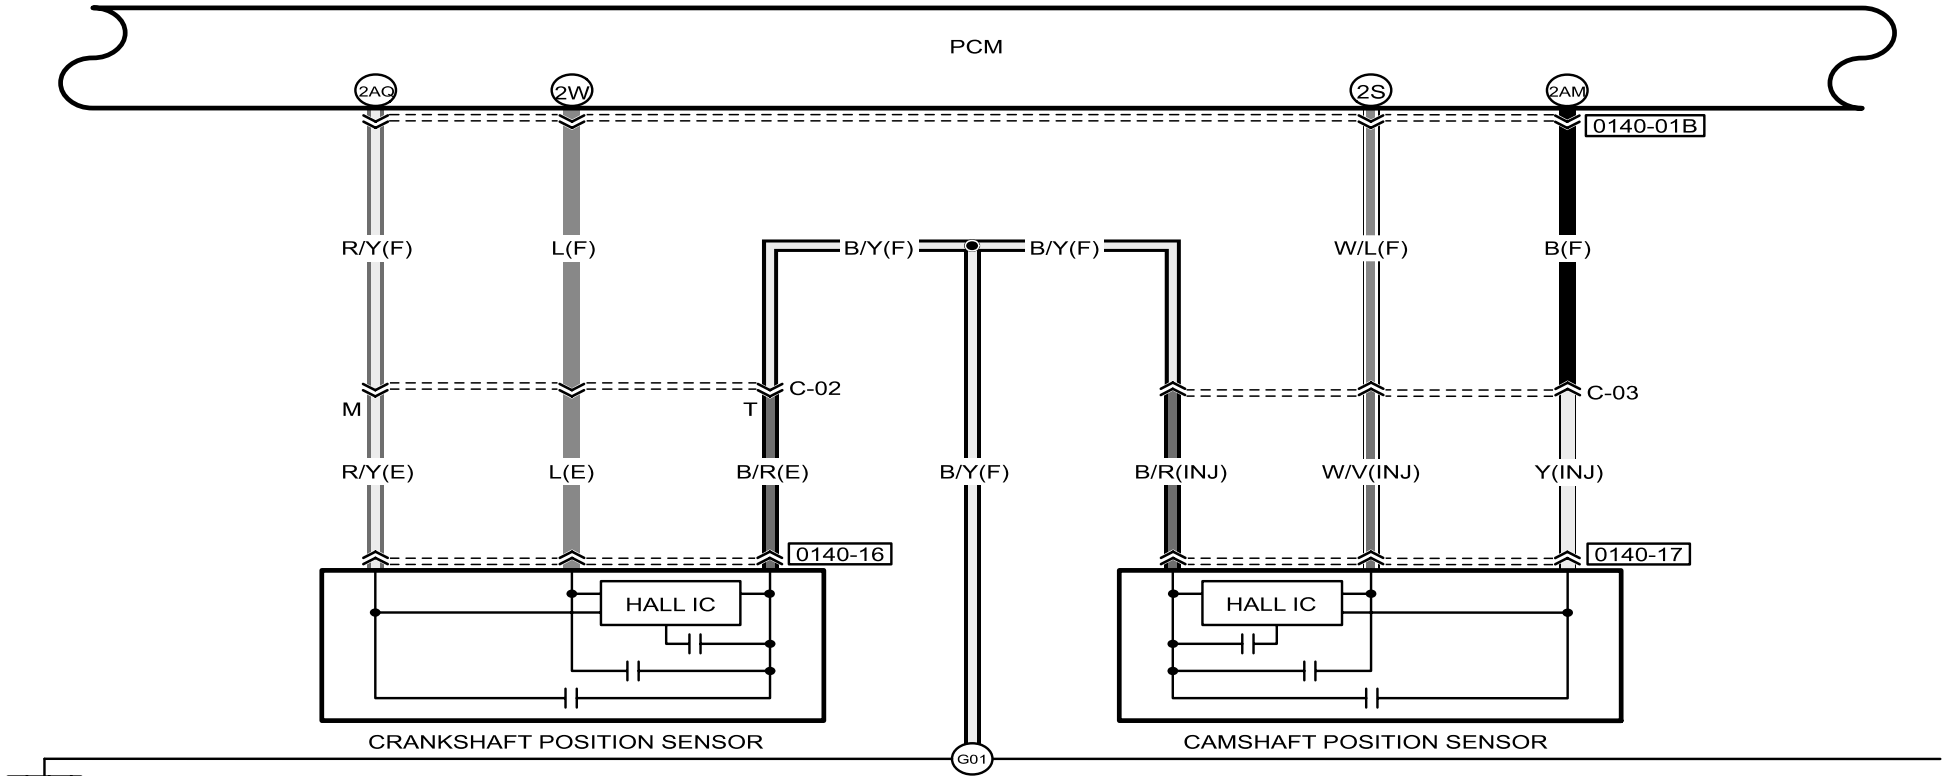


0140-01B
PCM



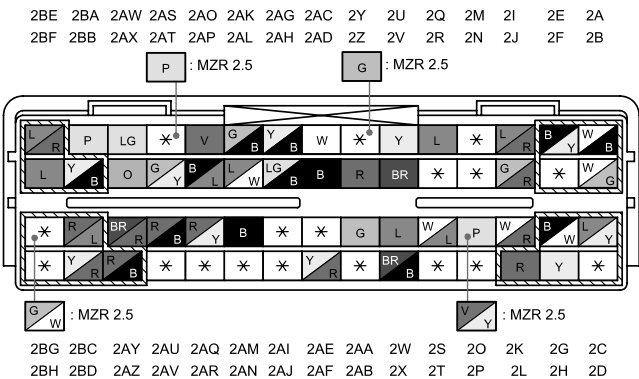



0140-16
CRANKSHAFT POSITION
SENSOR

 

0140-17
CAMSHAFT POSITION
SENSOR

 

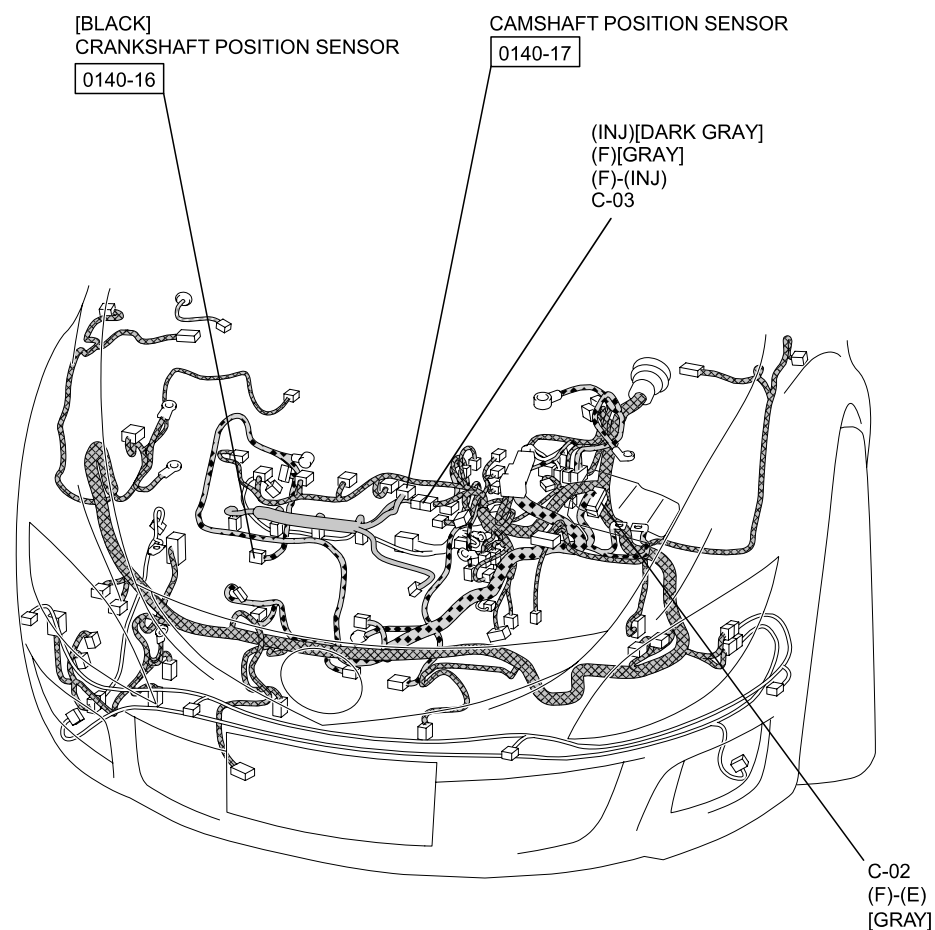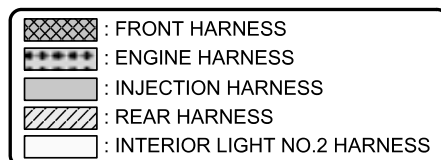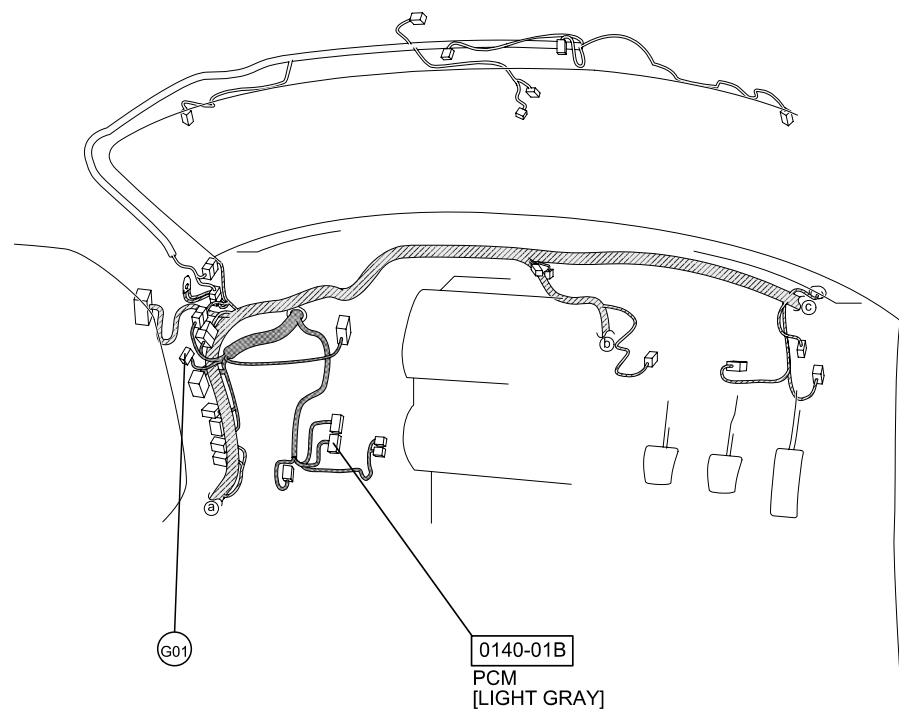


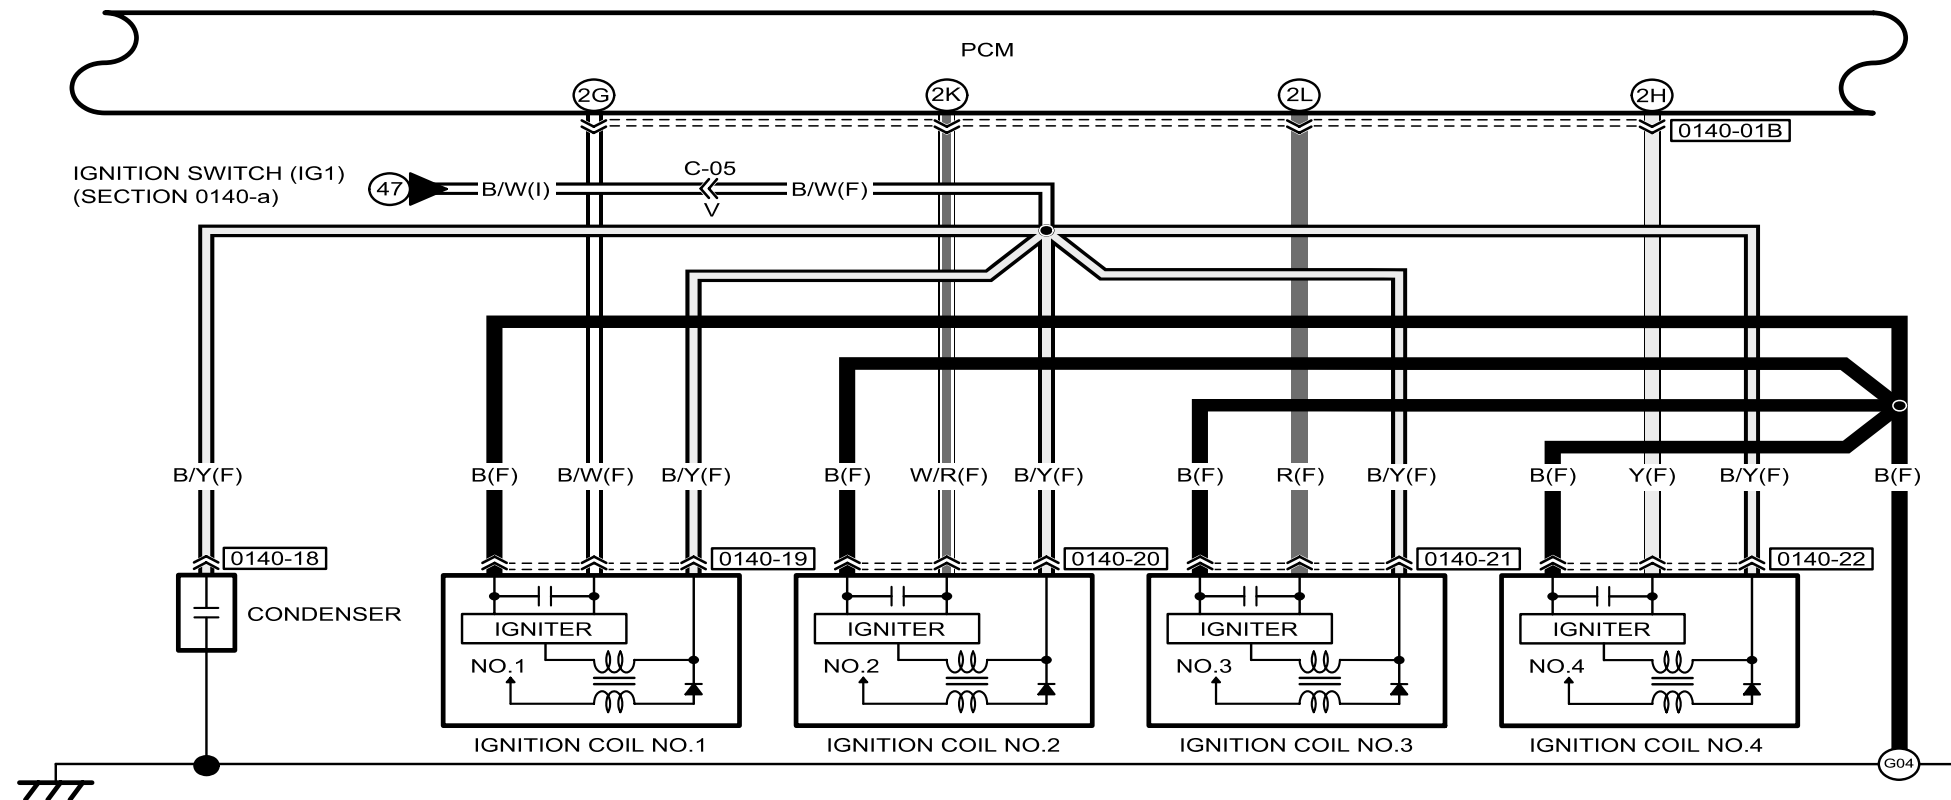0140-01B
PCM

2BE 2BA 2AW 2AS 2AO 2AK 2AG 2AC 2Y 2U 2Q 2M 2I 2E 2A
2BF 2BB 2AX 2AT 2AP 2AL 2AH 2AD 2Z 2V 2R 2N 2J 2F 2B

P : MZR 2.5






G : MZR 2.5

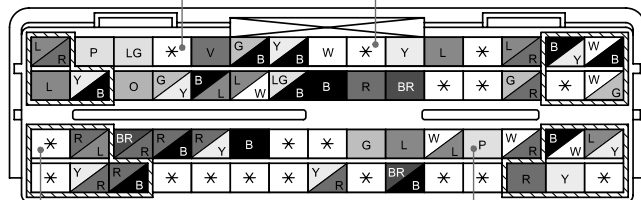



G : MZR 2.5

V : MZR 2.5

     
2BG 2BC 2AY 2AU 2AQ 2AM 2AI 2AE 2AA 2W 2S 2O 2K 2G 2C
2BH 2BD 2AZ 2AV 2AR 2AN 2AJ 2AF 2AB 2X 2T 2P 2L 2H 2D

0140-18
CONDENSER0140-19
IGNITION COIL NO.10140-20
IGNITION COIL NO.20140-21
IGNITION COIL NO.30140-22
IGNITION COIL NO.4

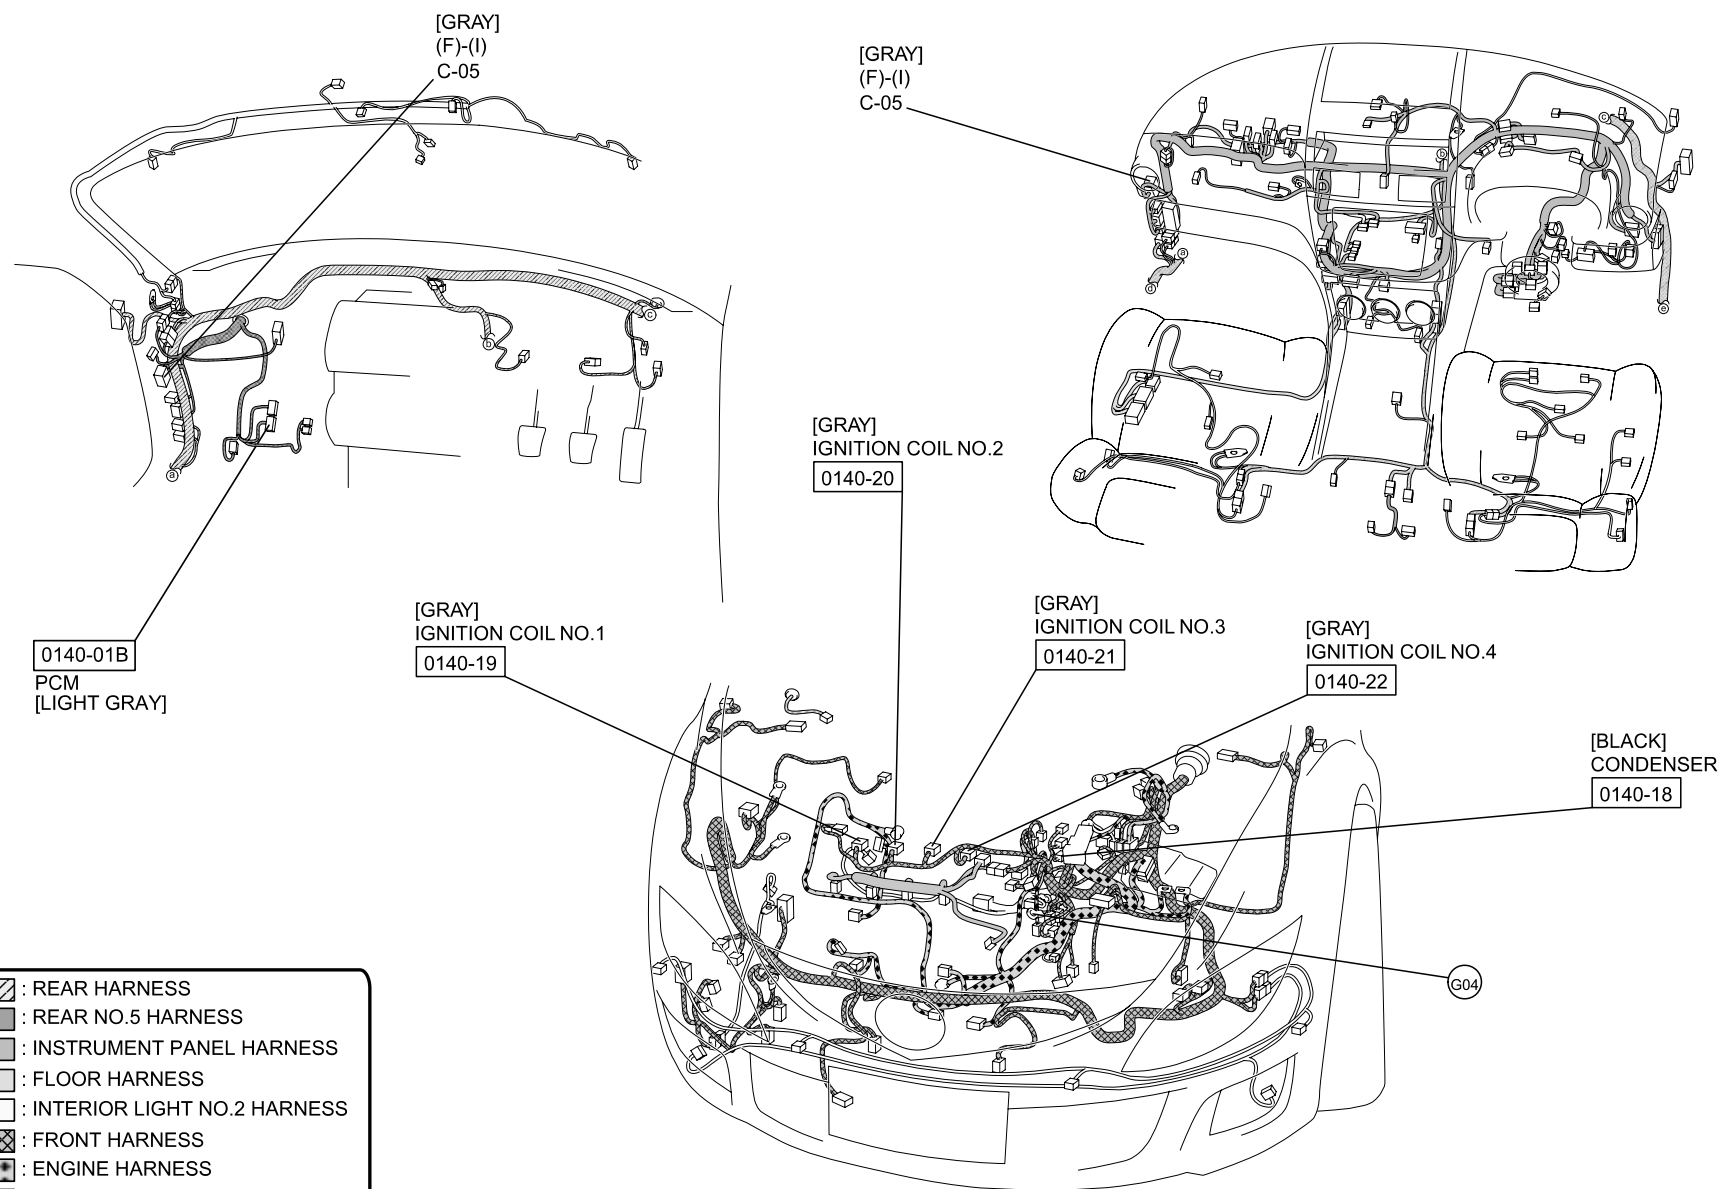


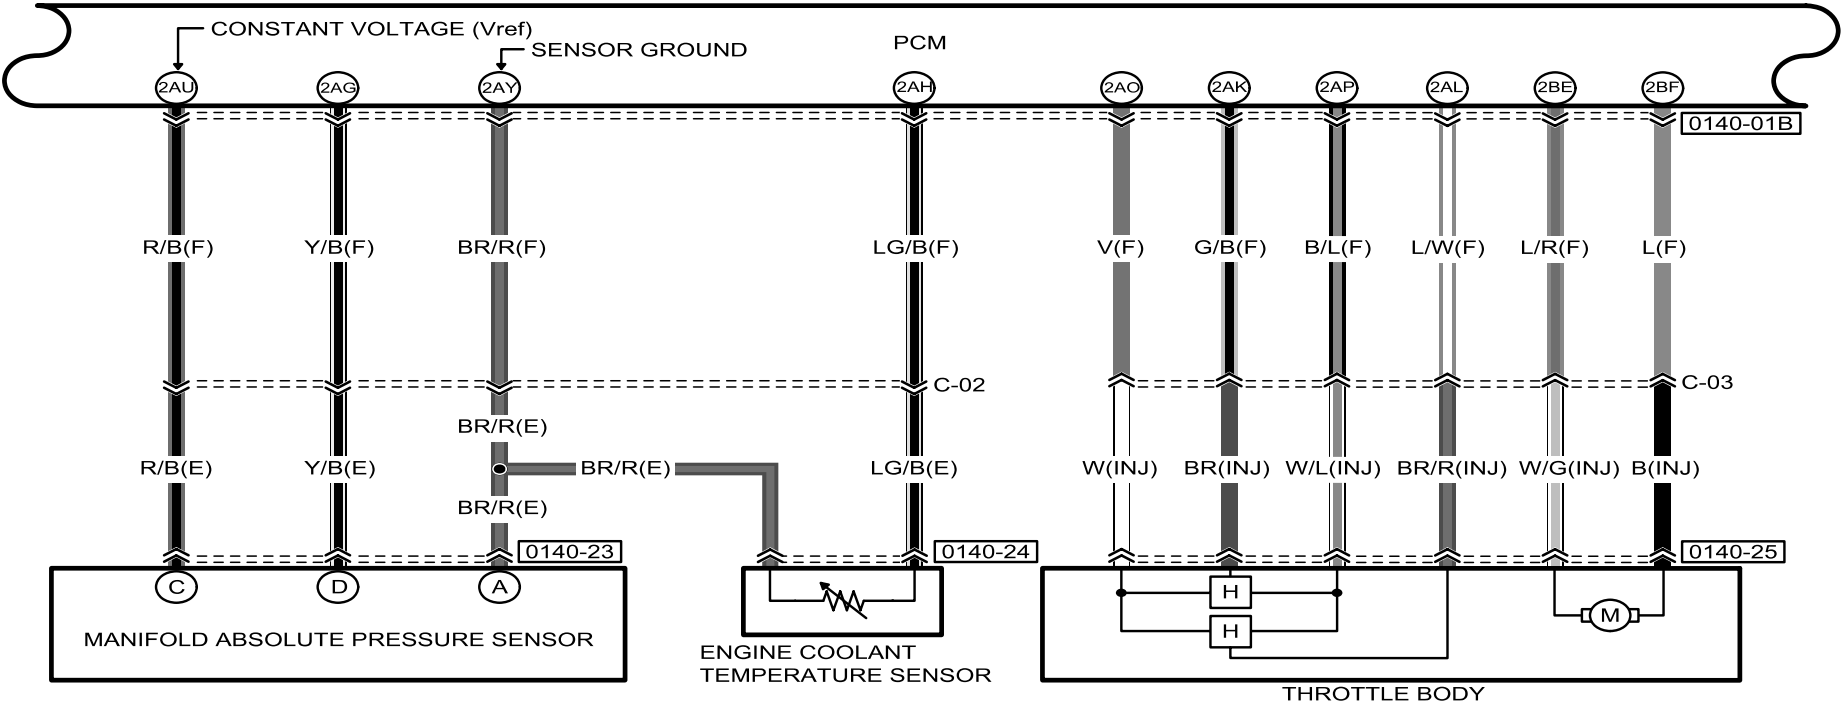


0140-01B
PCM

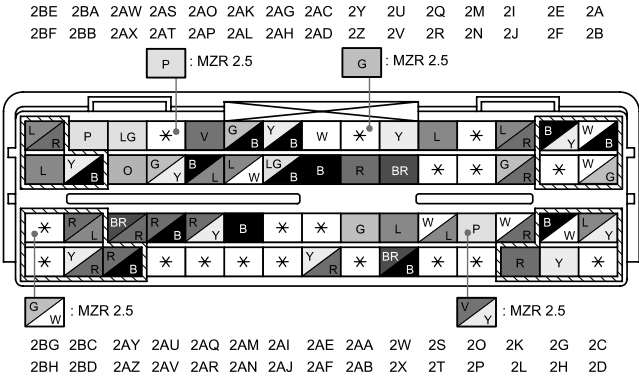

 
0140-23
MANIFOLD ABSOLUTE
PRESSURE SENSOR




 
0140-24
ENGINE COOLANT
TEMPERATURE SENSOR




0140-25
THROTTLE BODY

 

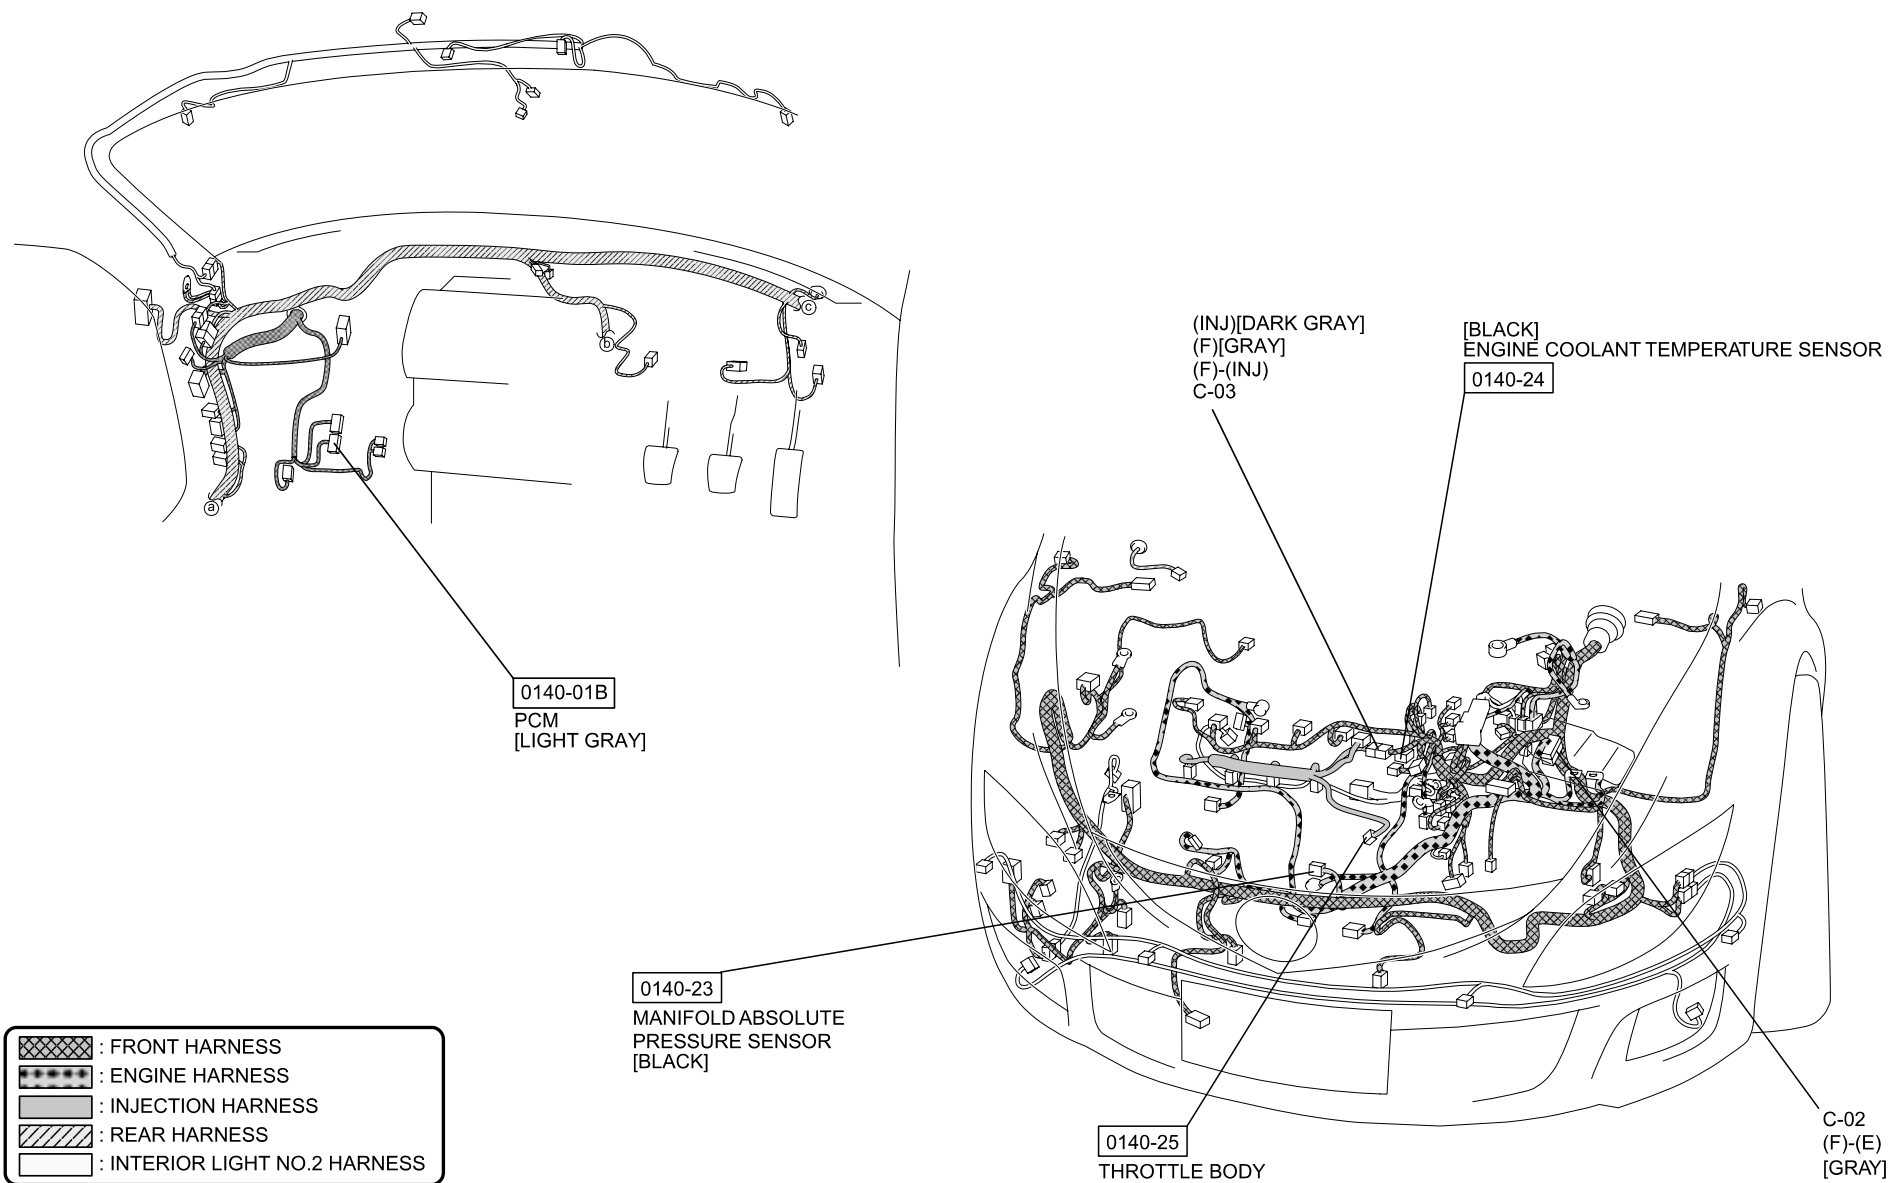


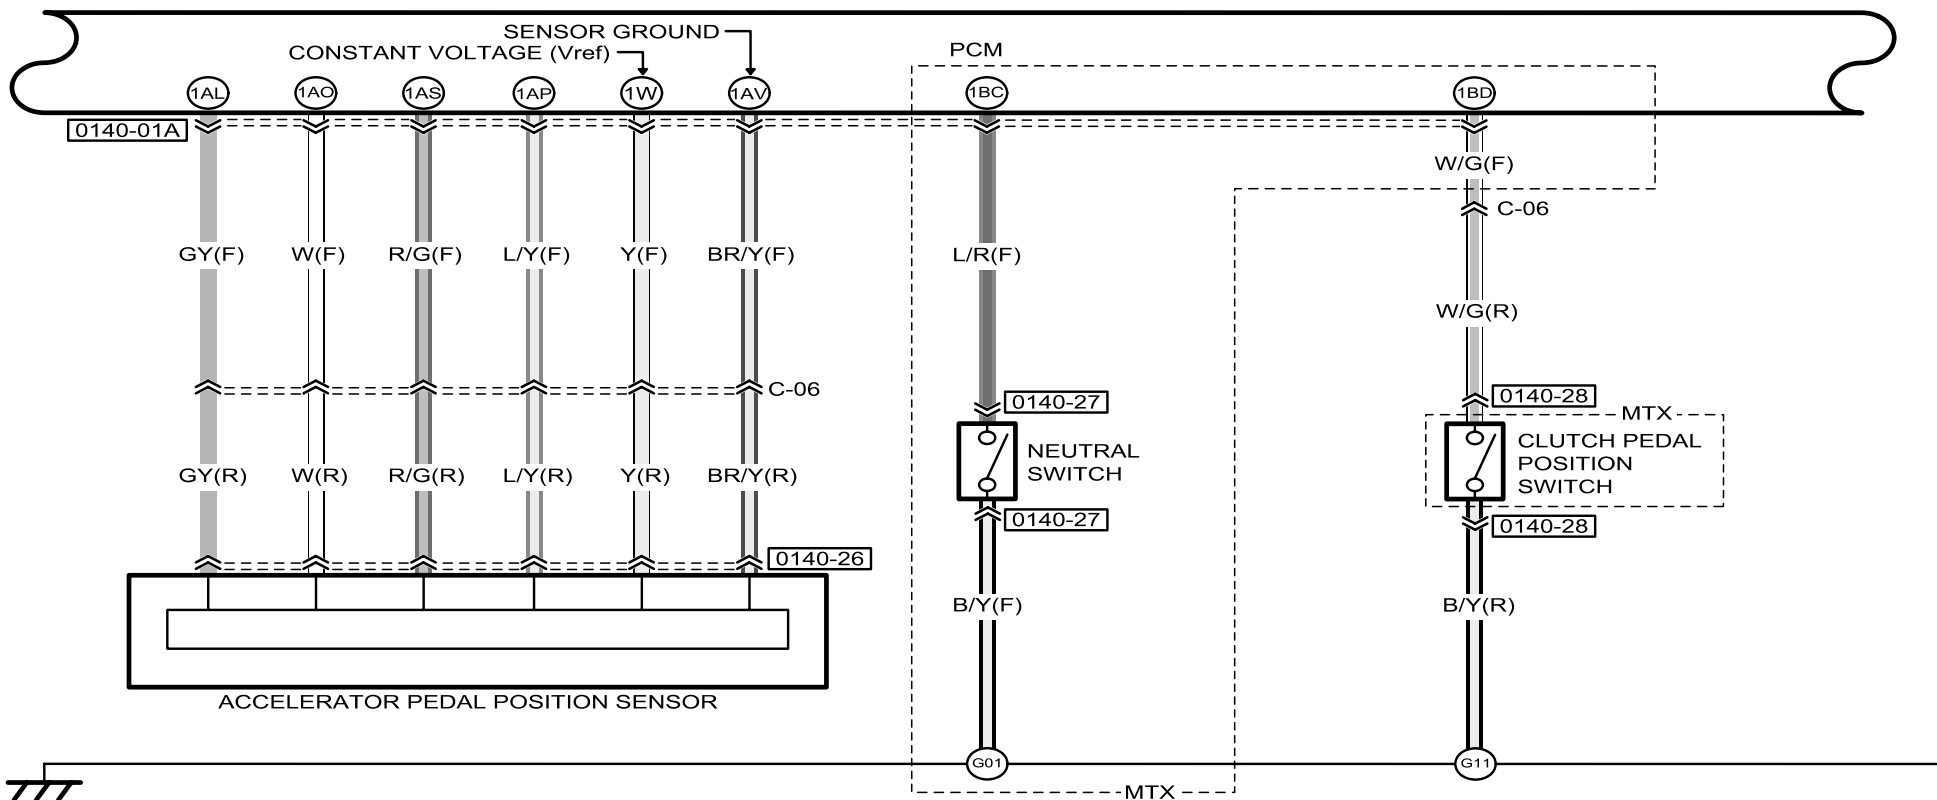


0140-01A
PCM

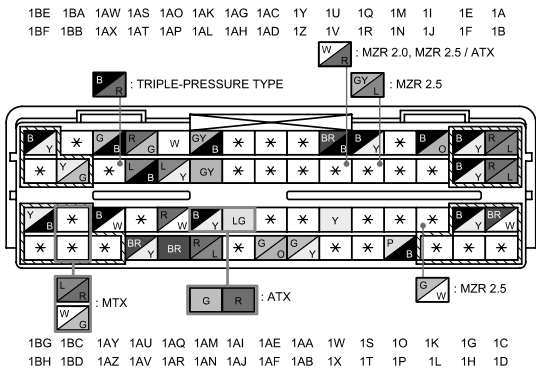

 
0140-26
ACCELERATOR PEDAL POSITION SENSOR






0140-27
NEUTRAL SWITCH

 




0140-28
CLUTCH PEDAL POSITION SWITCH

 

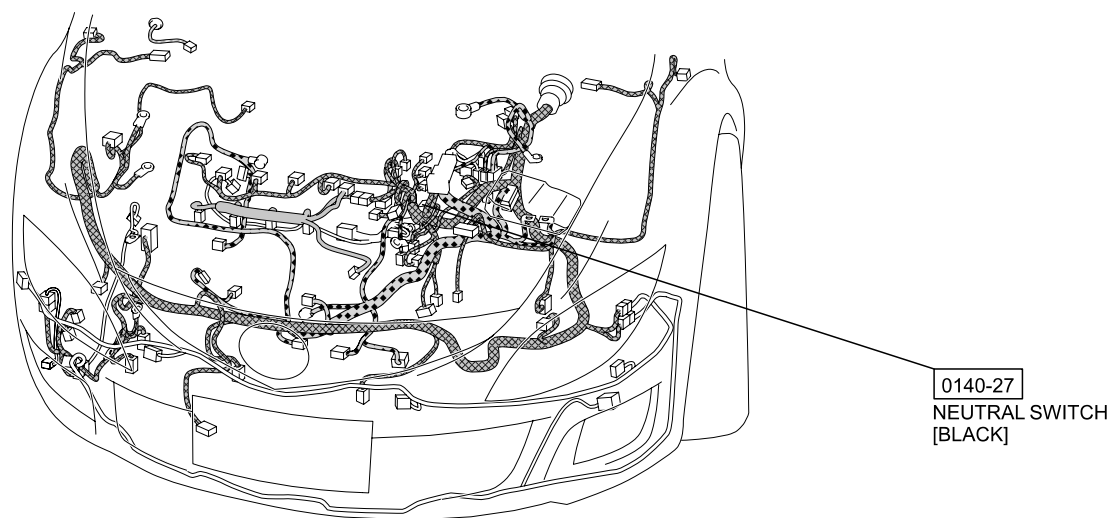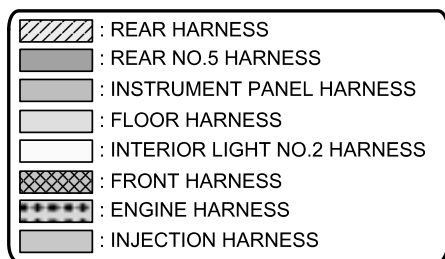
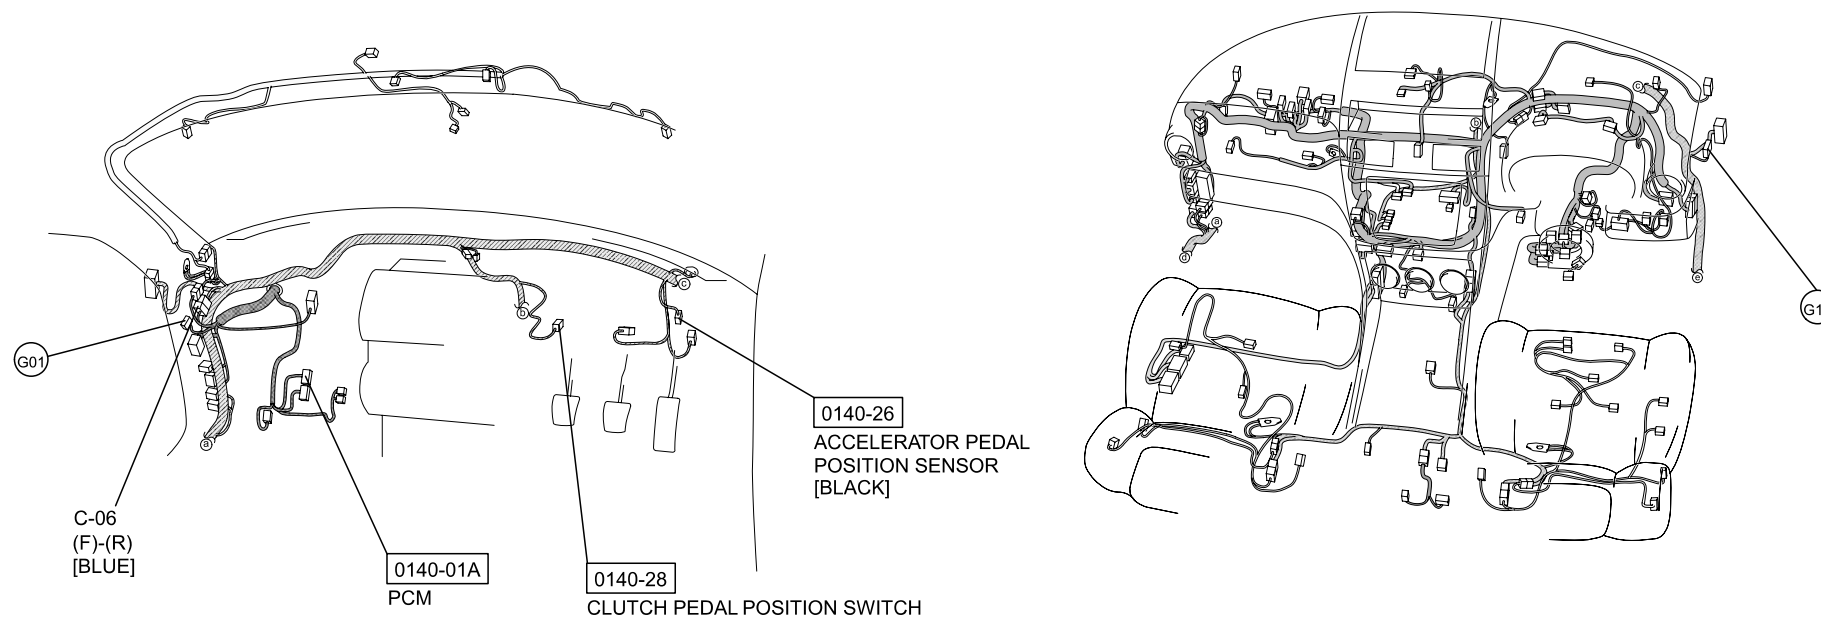



98

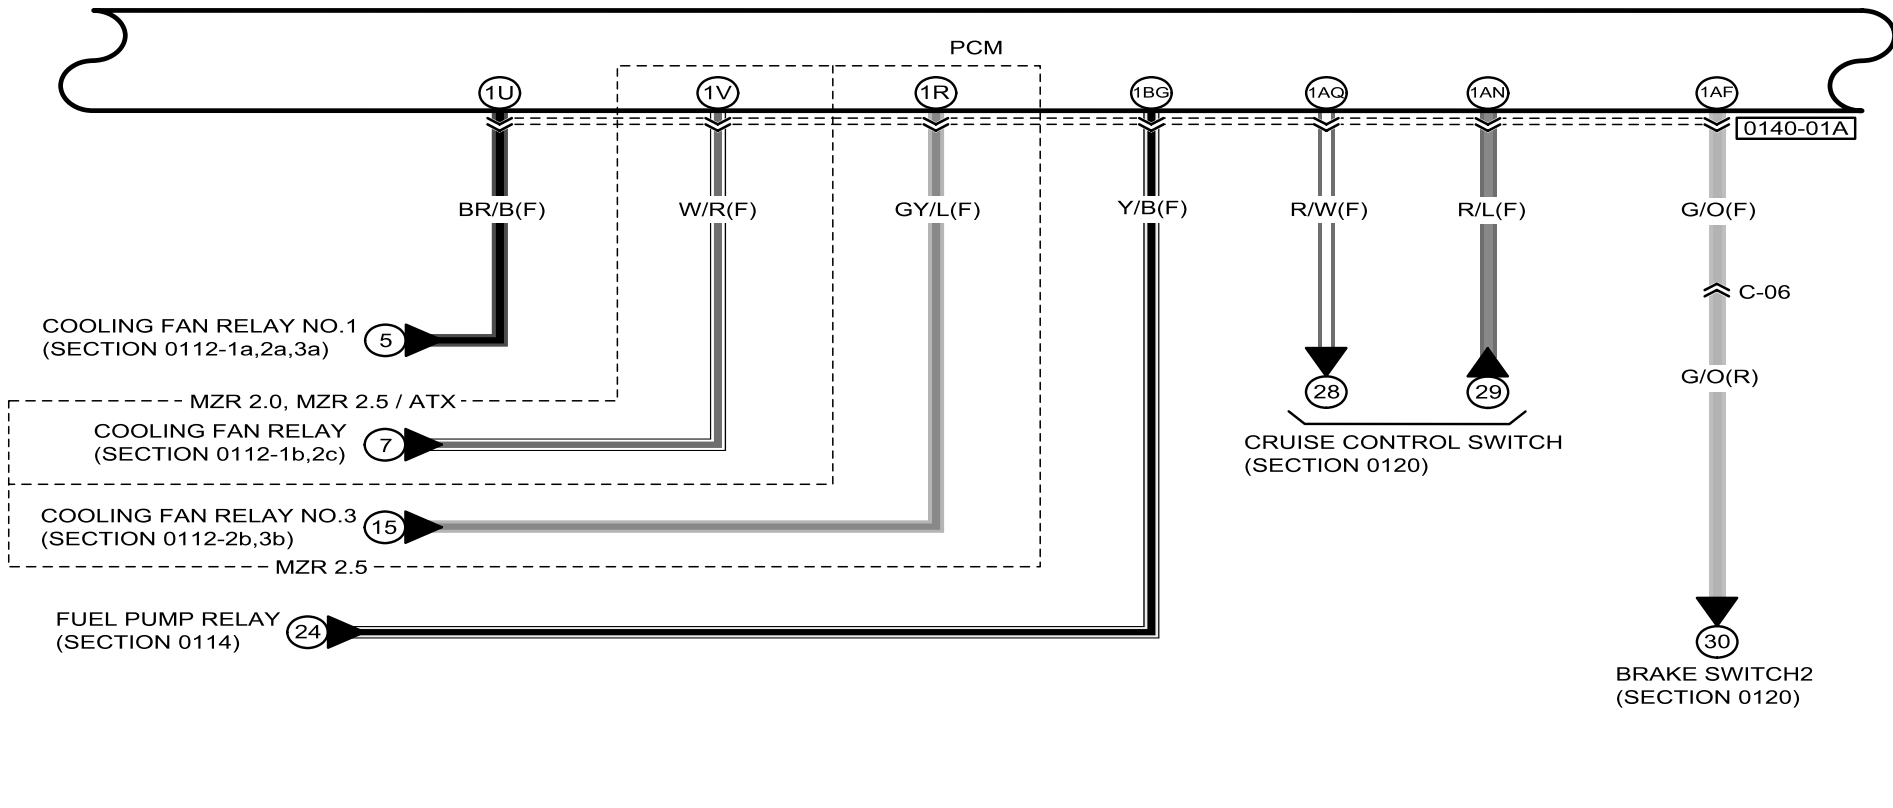

 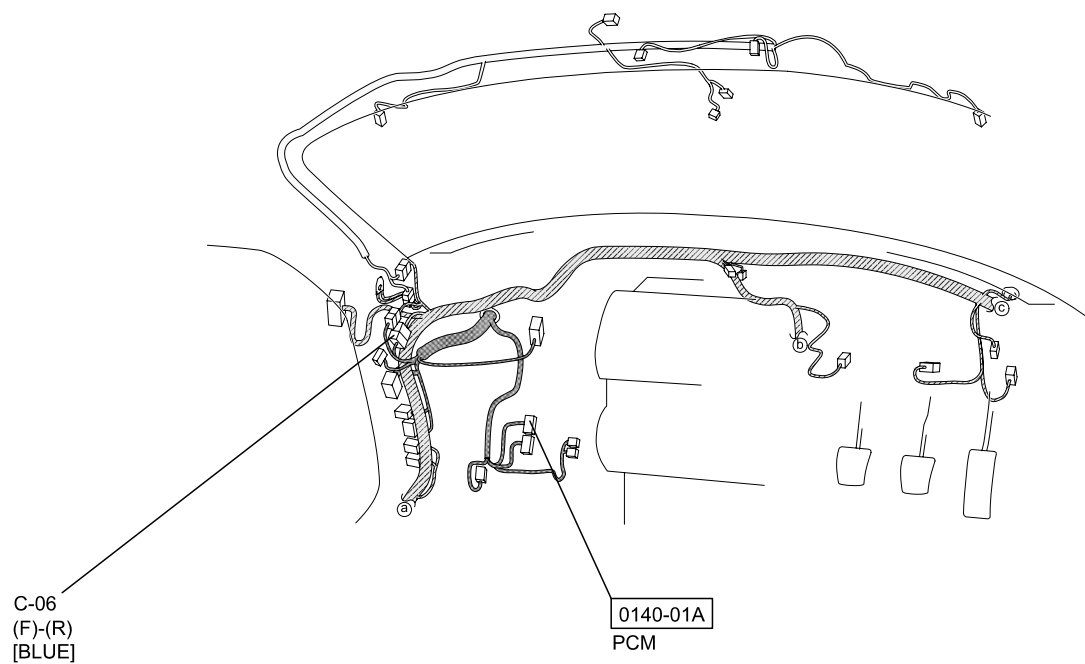


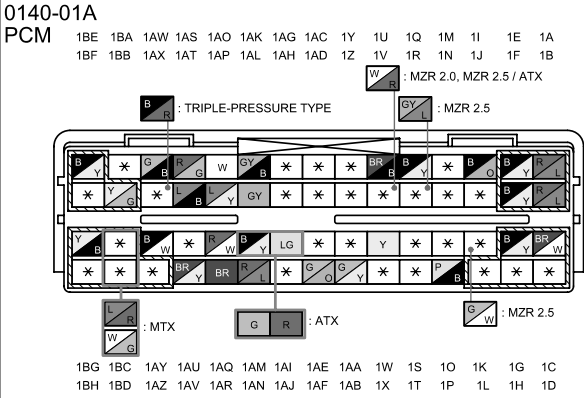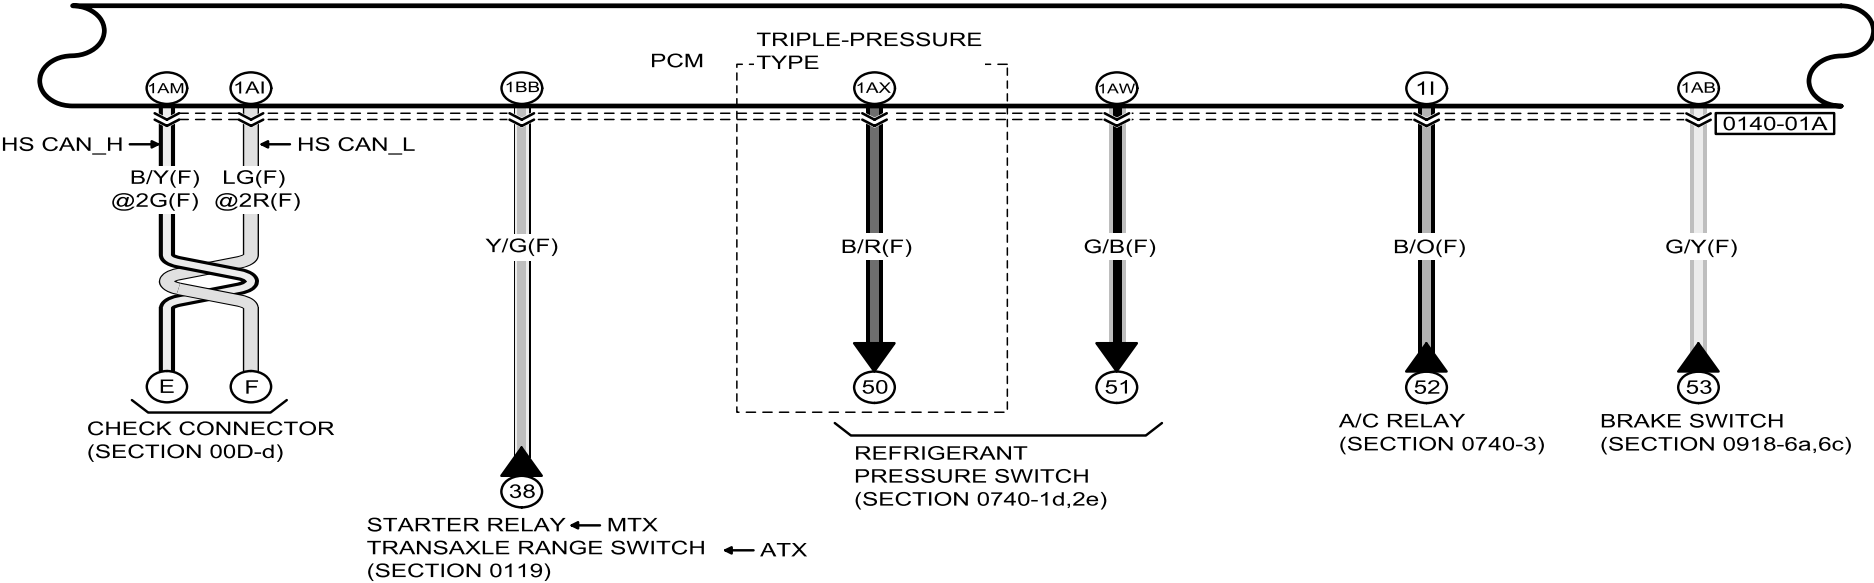


@2 : ATX

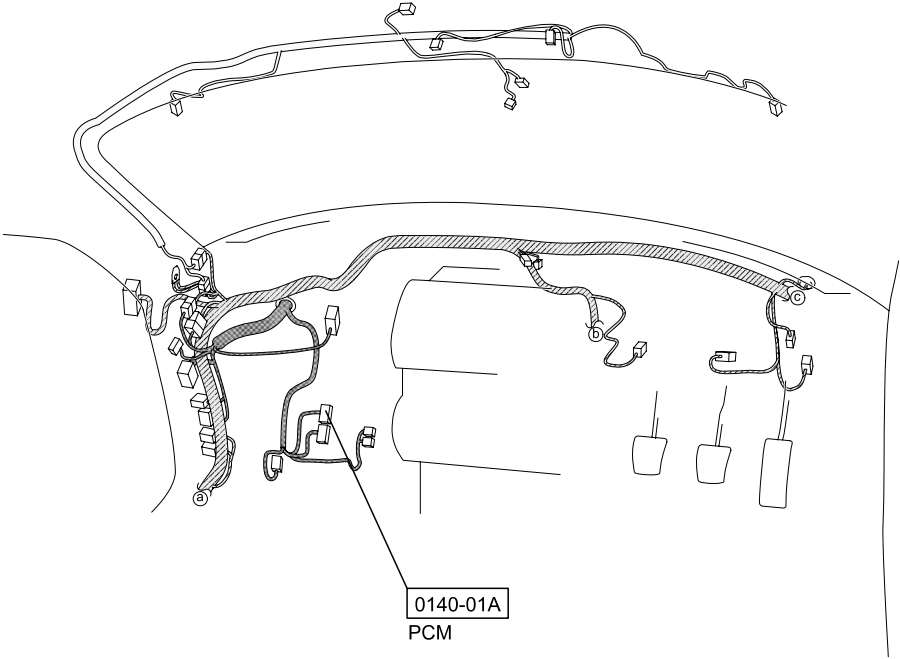


 


-  : FRONT HARNESS
-  : REAR HARNESS
-  : INTERIOR LIGHT NO.2 HARNESS

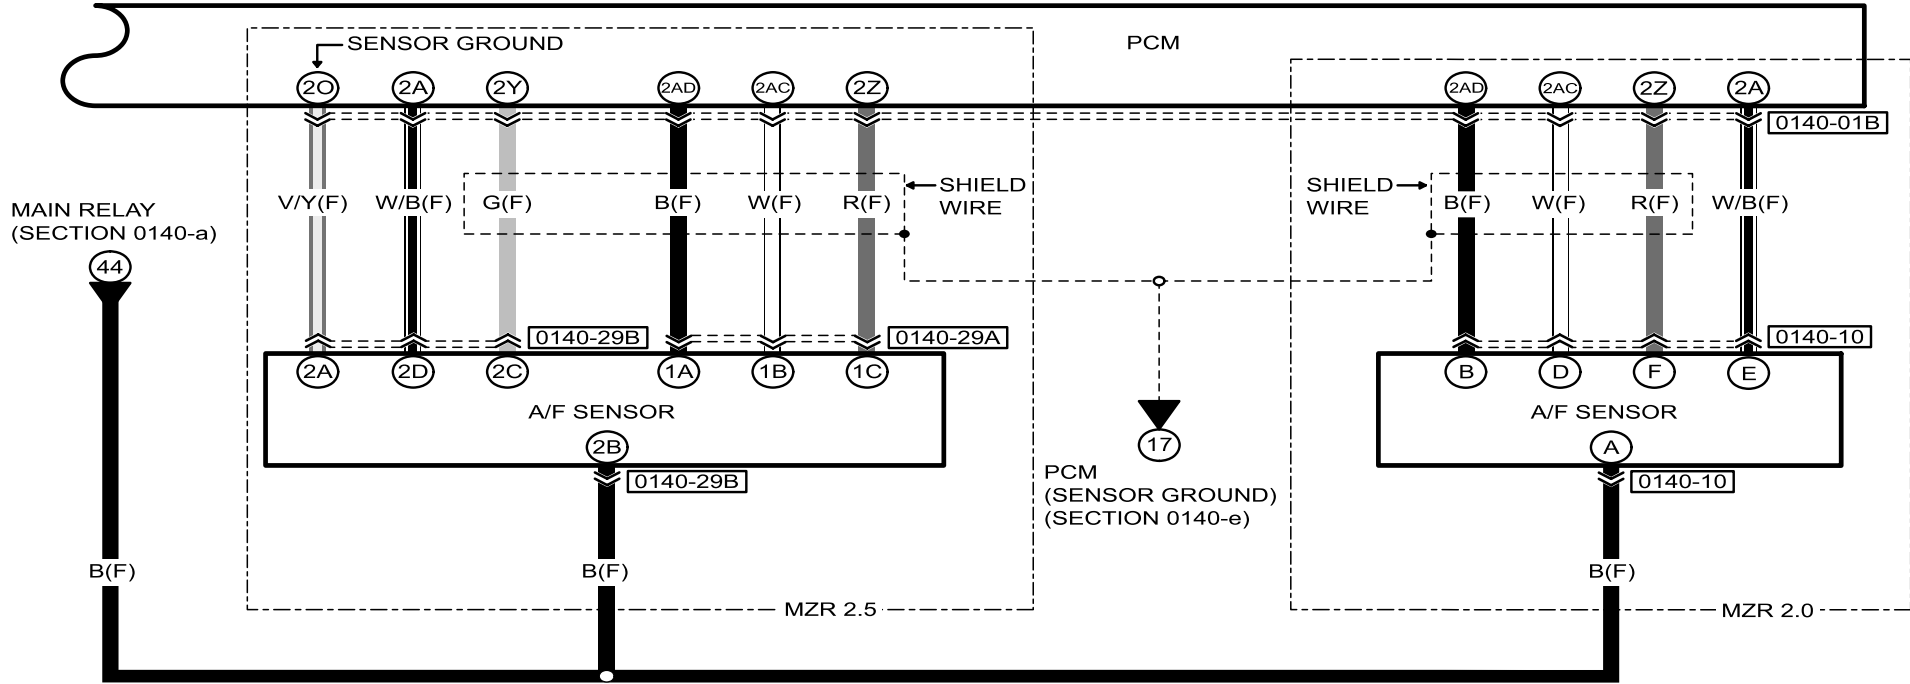


0140-01B
PCM

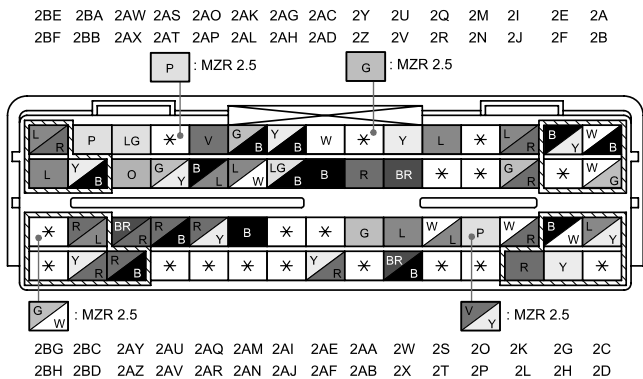


0140-10
A/F SENSOR



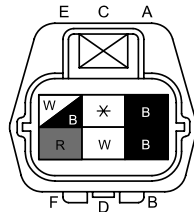



0140-29A
A/F SENSOR

 




0140-29B
A/F SENSOR

 


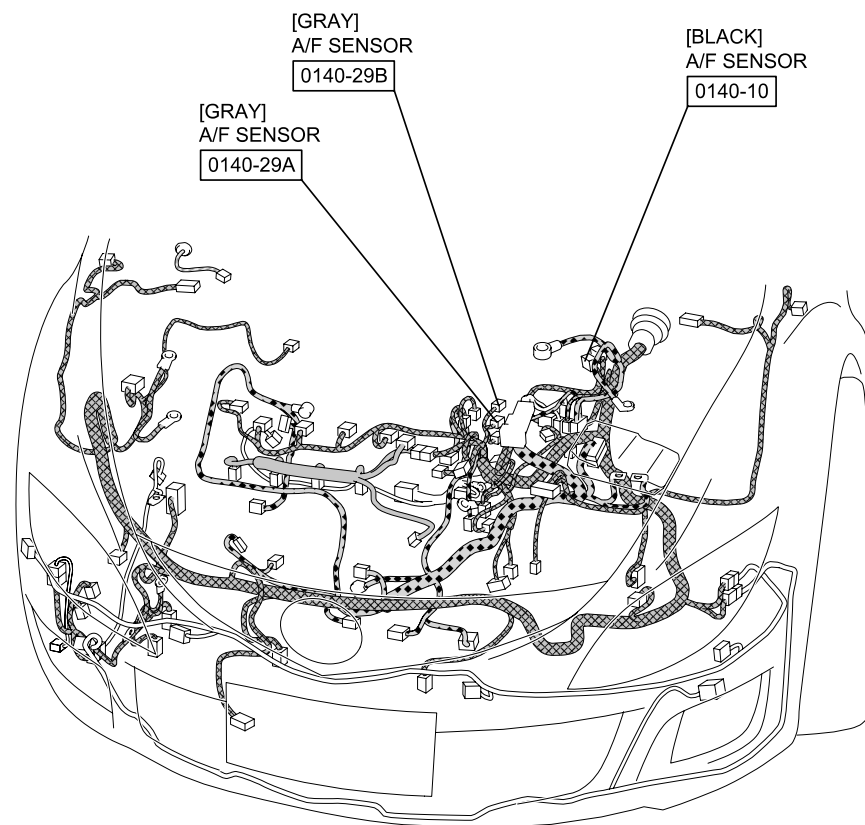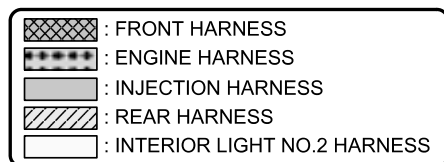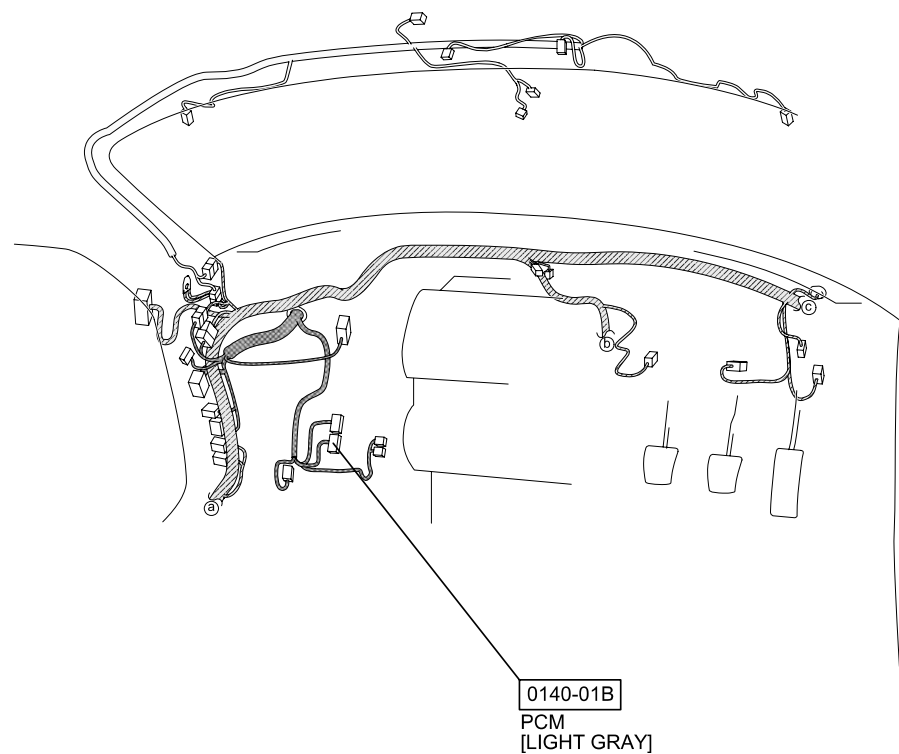


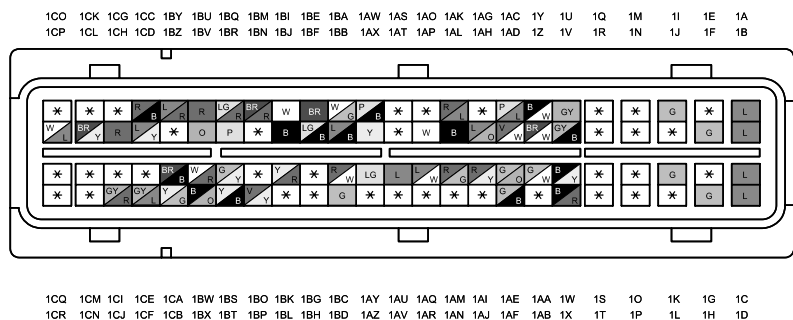


B

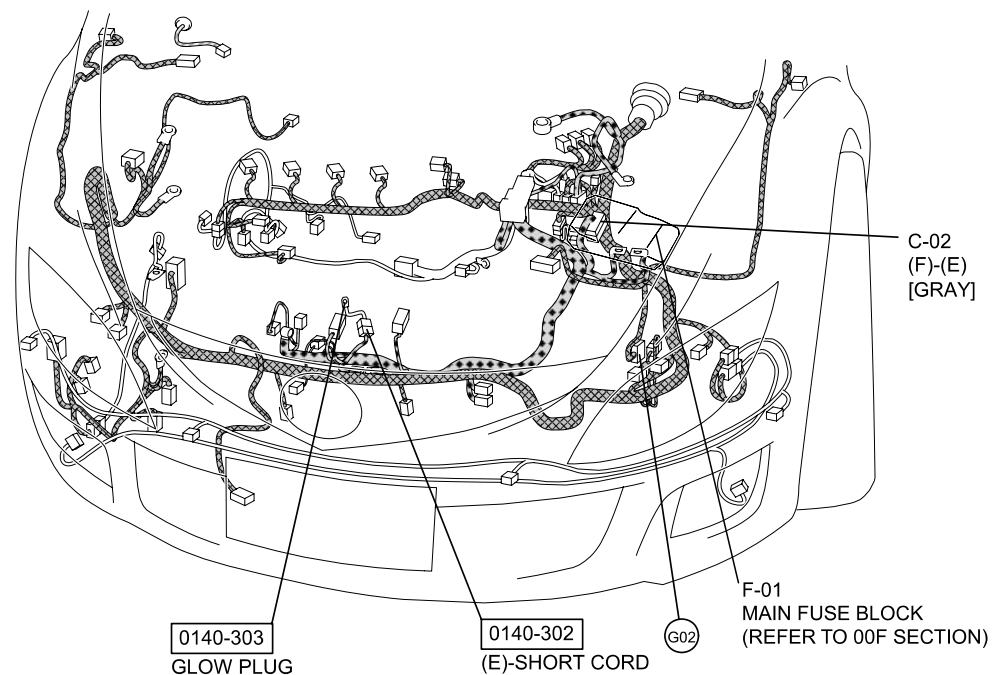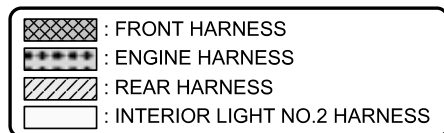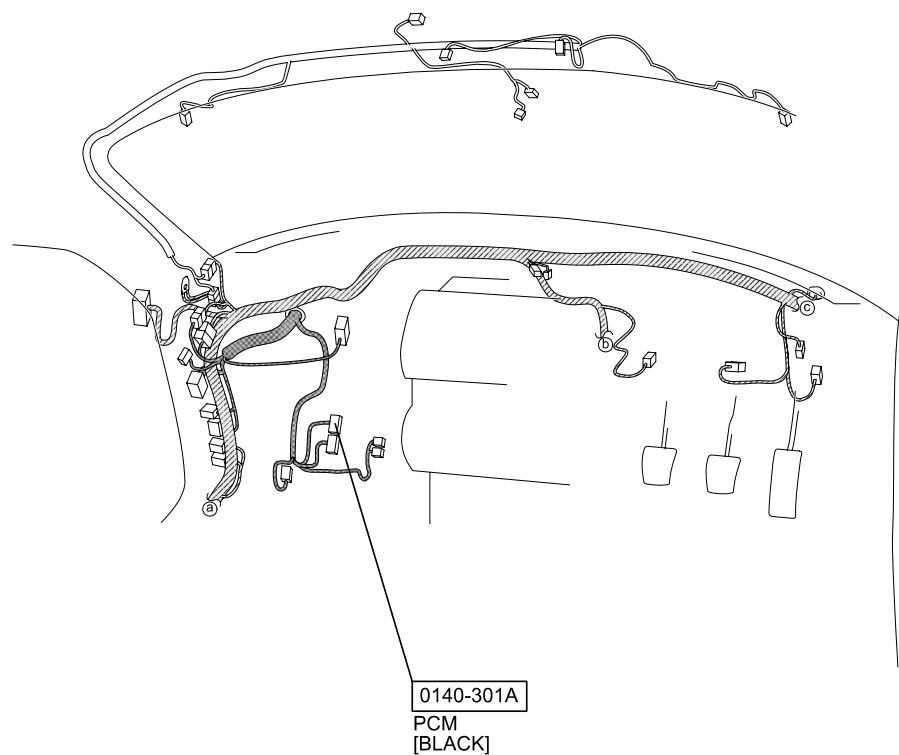


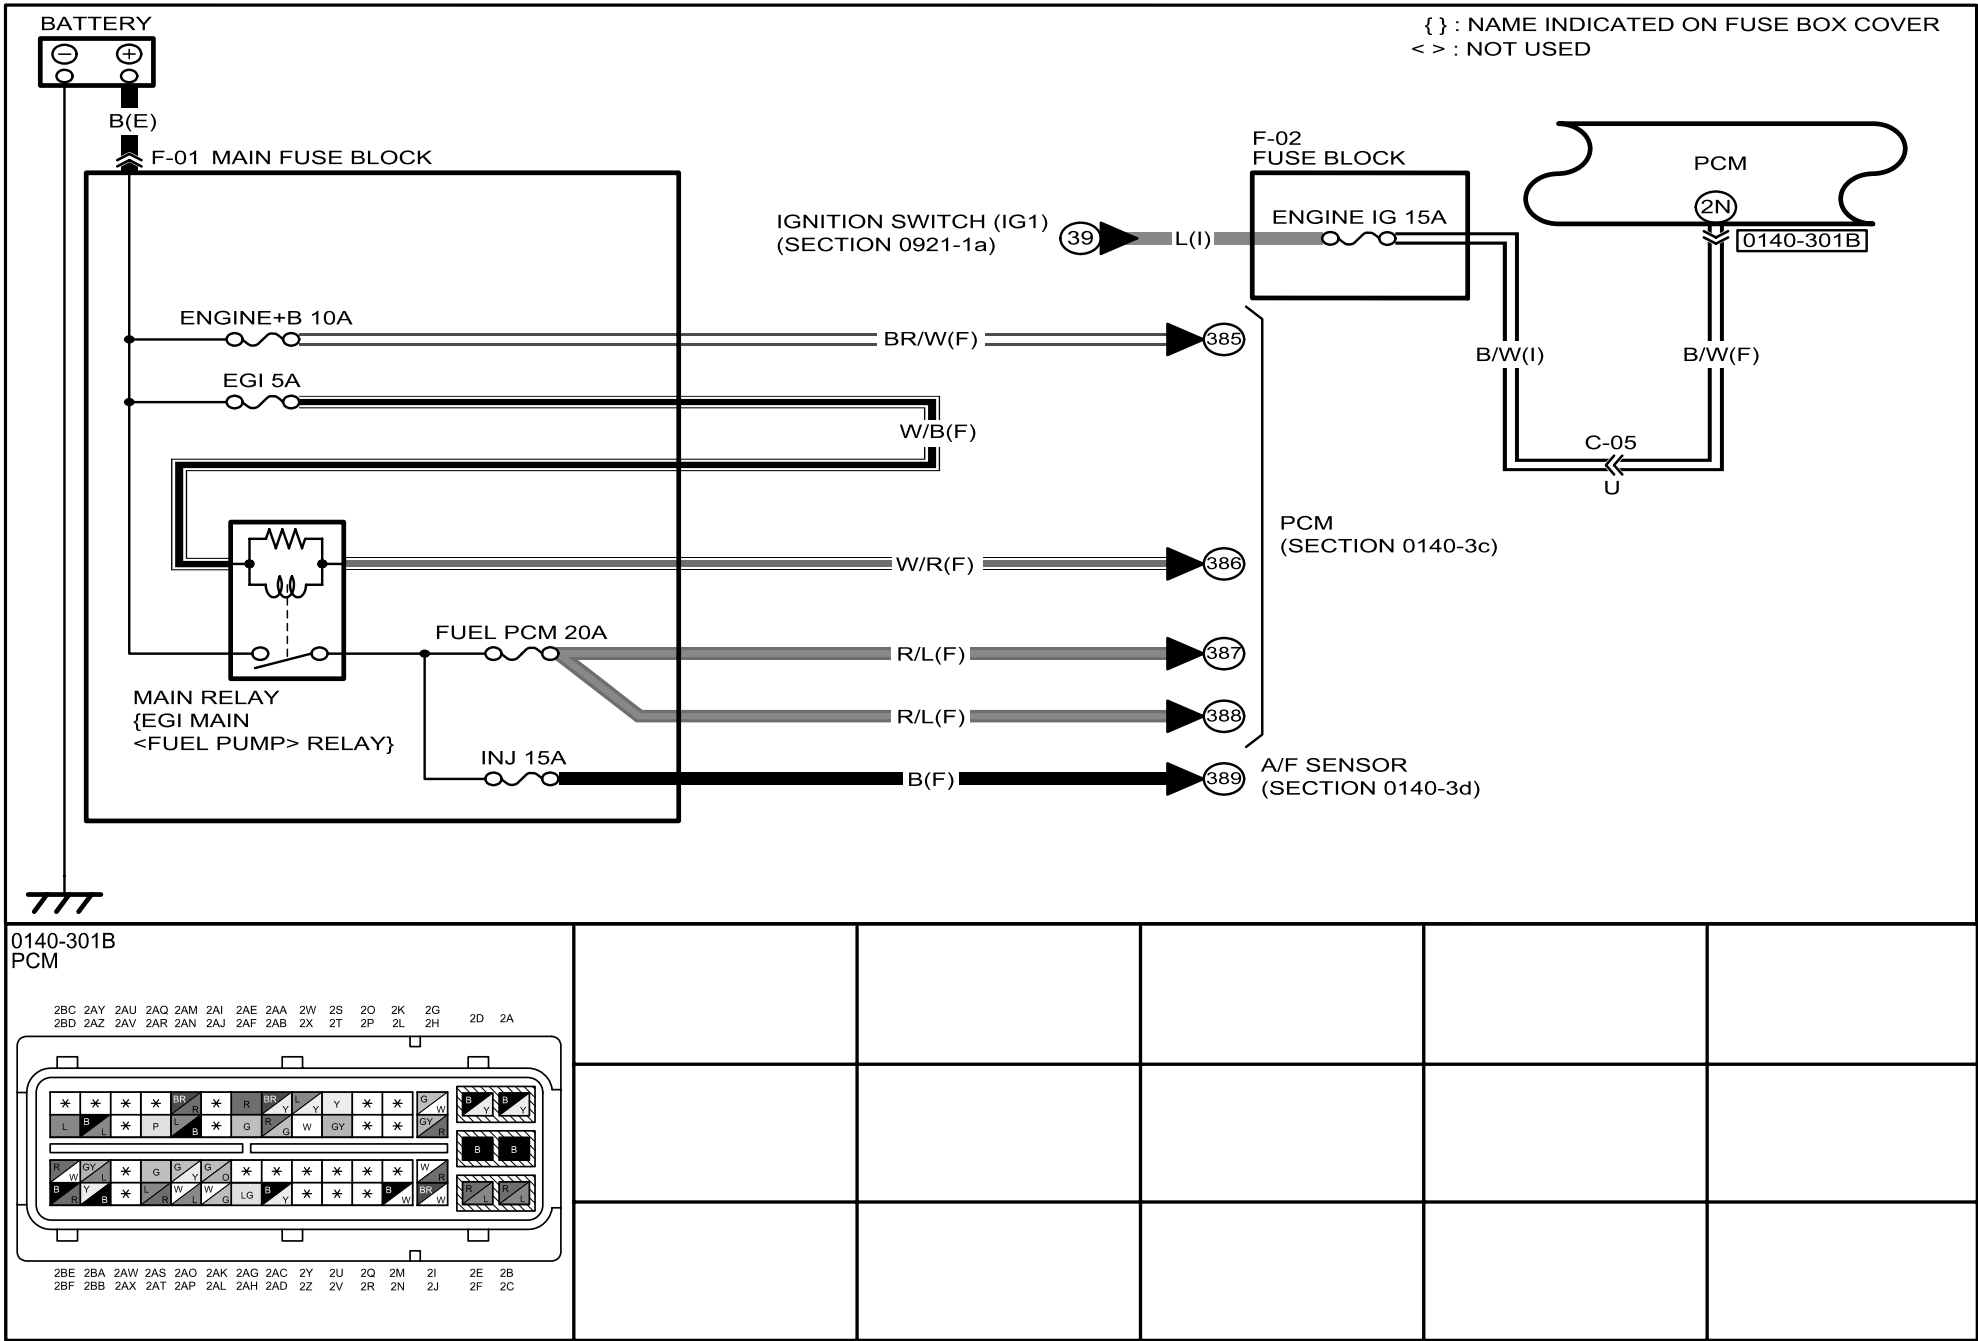

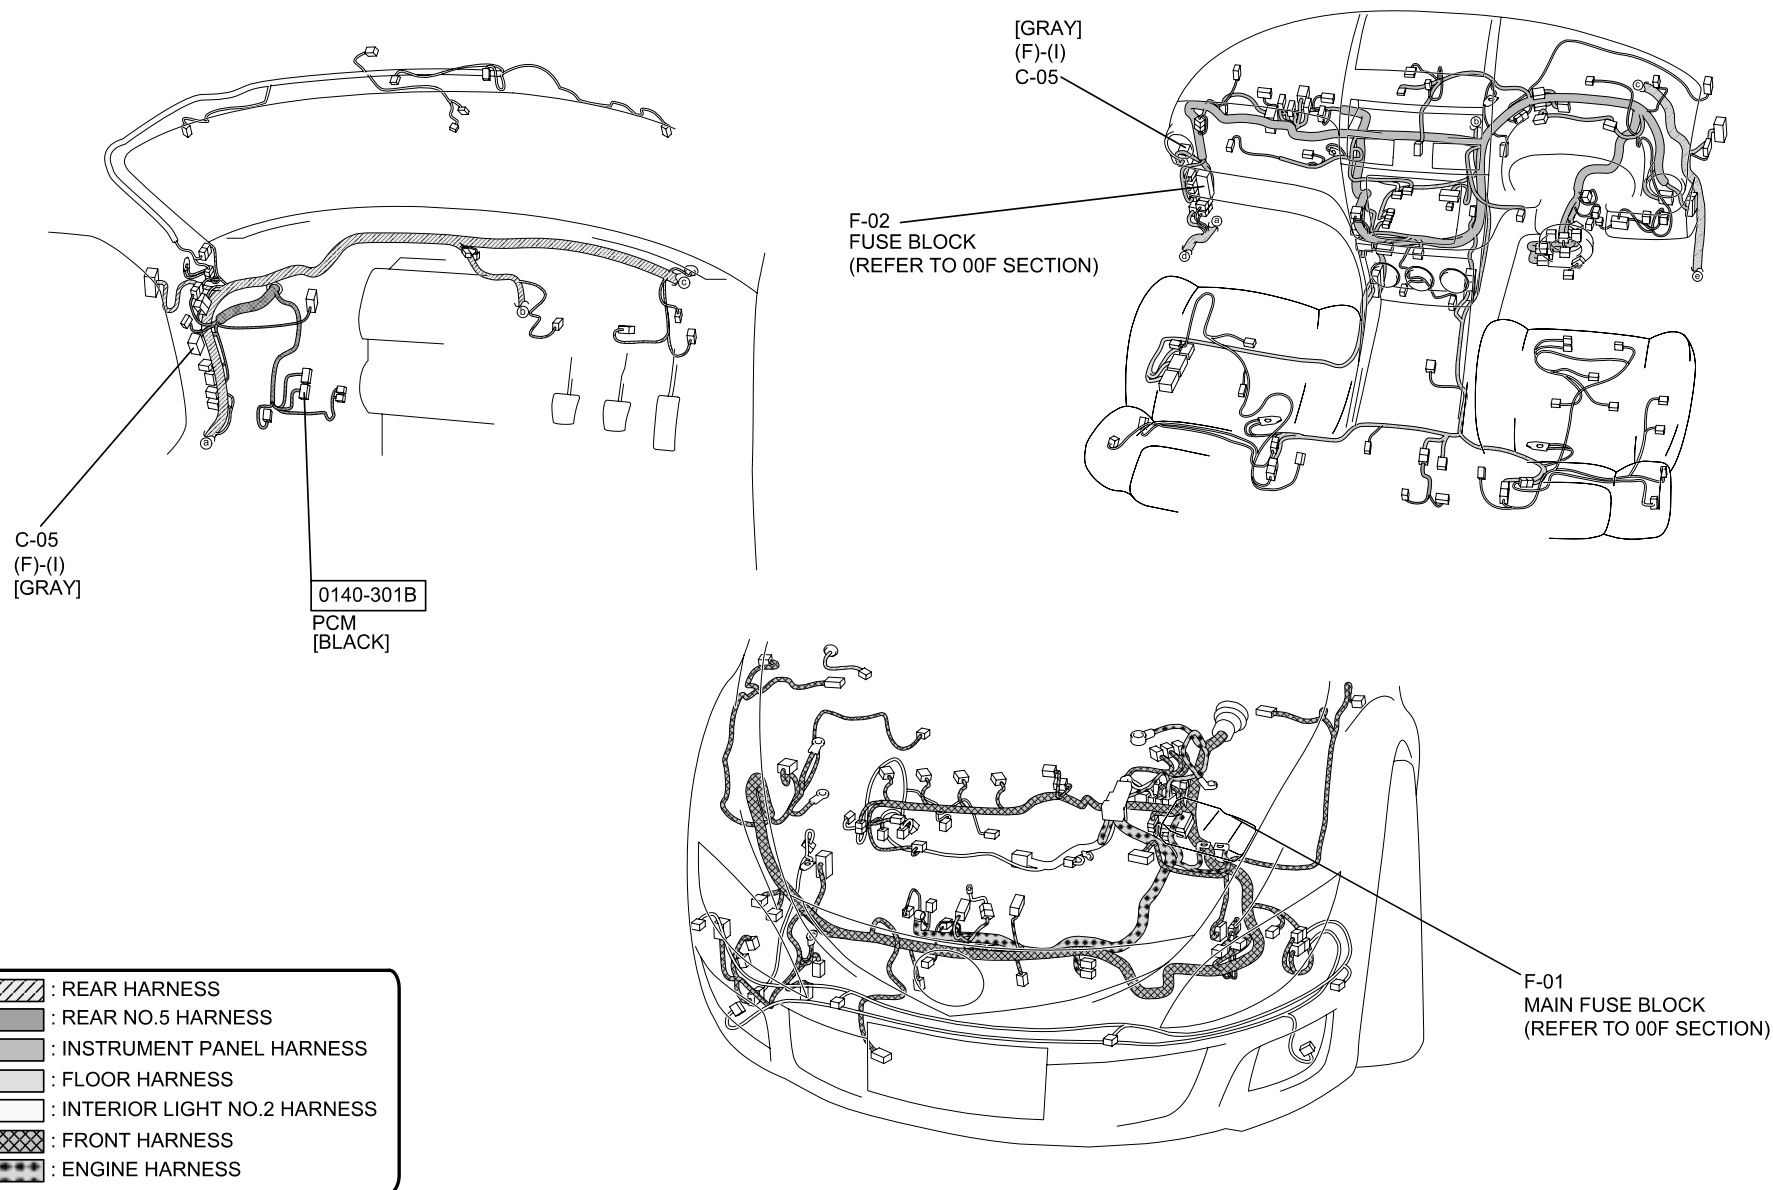



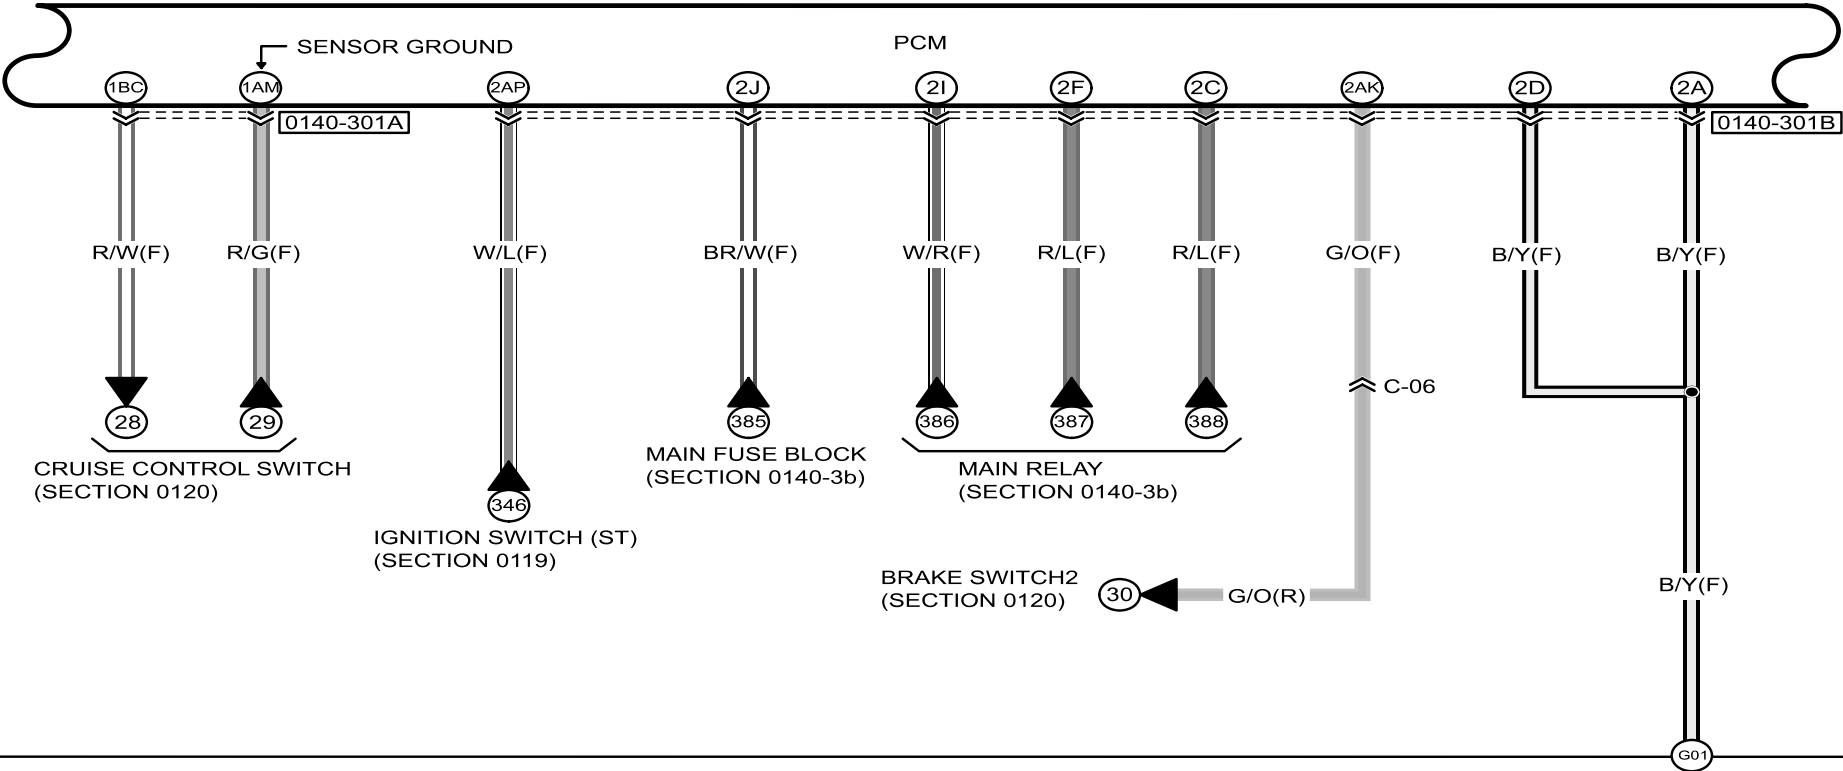









0140-301A
PCM



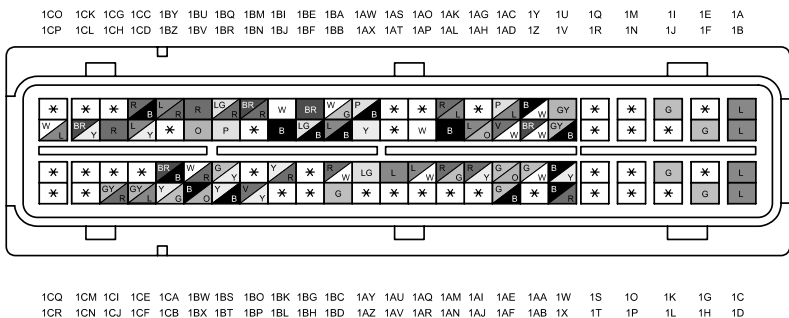



0140-301B
PCM

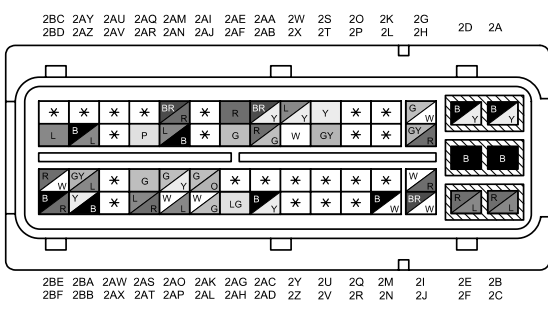

 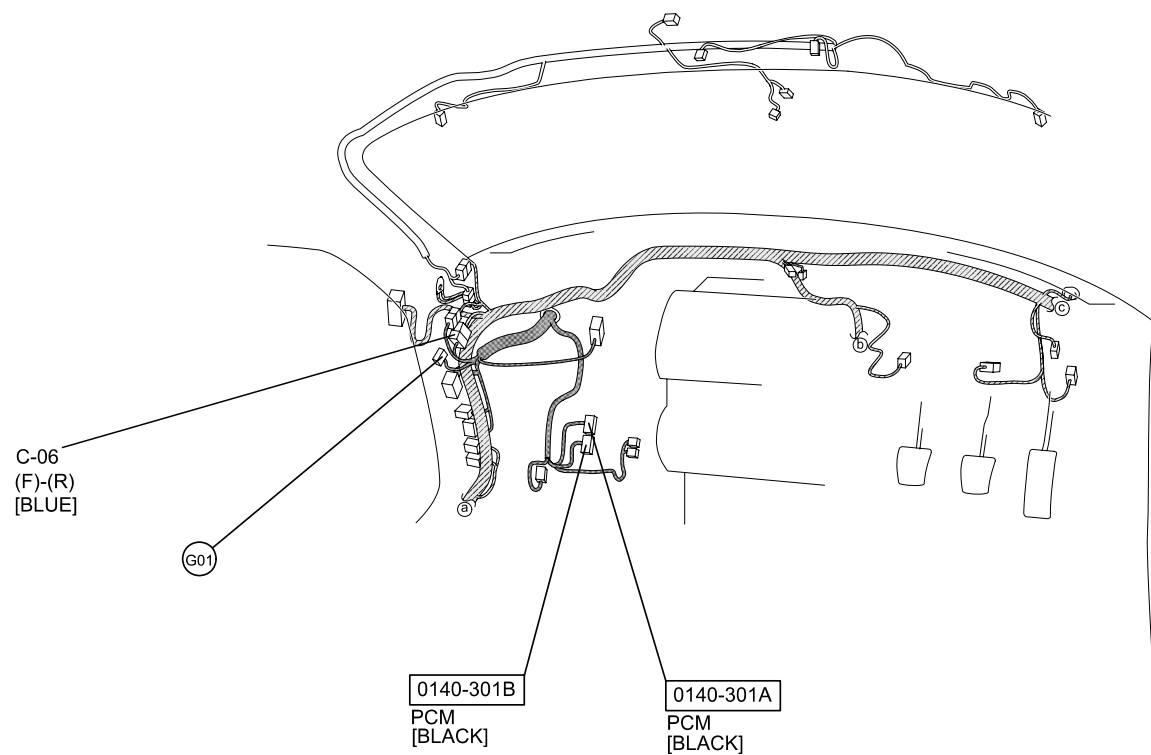


   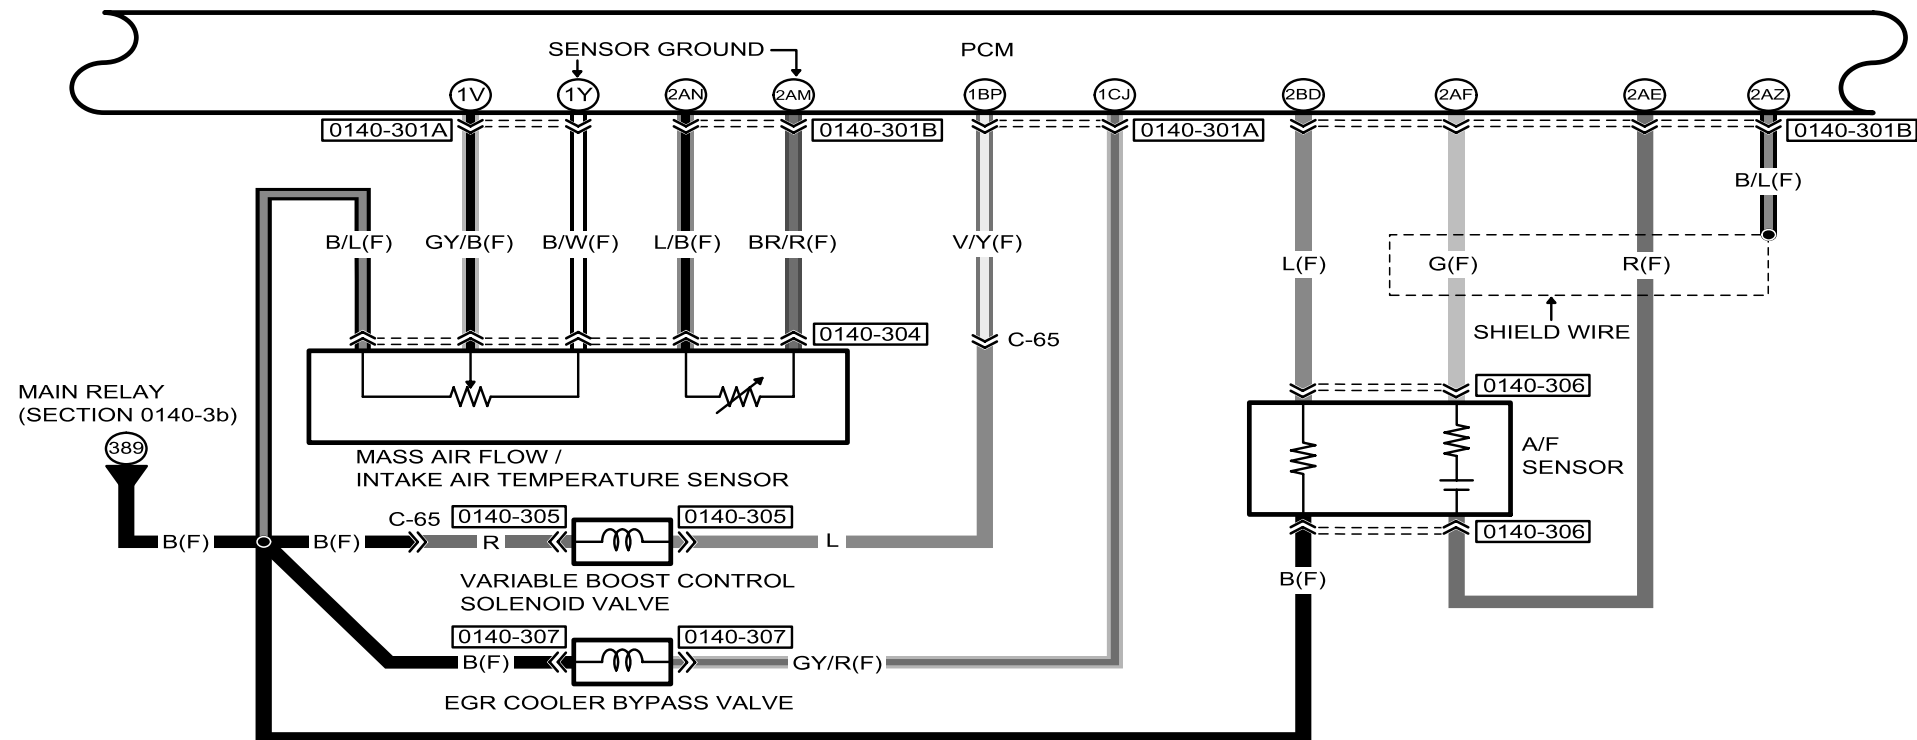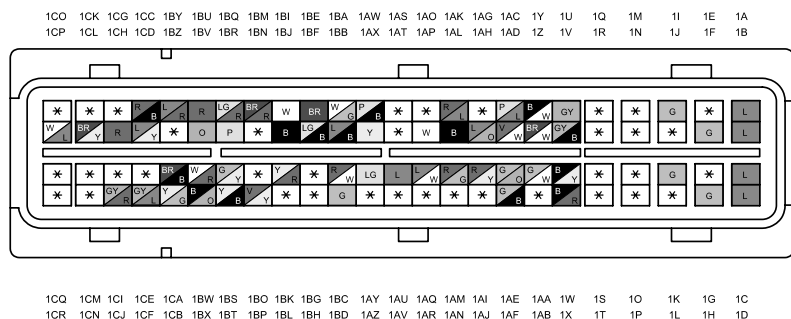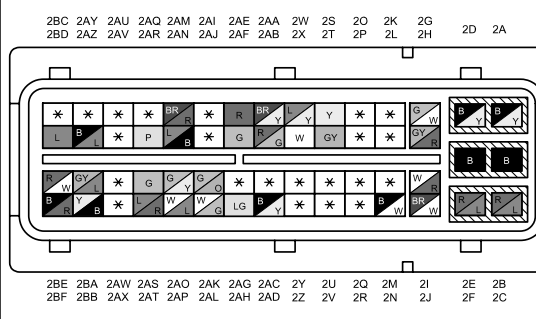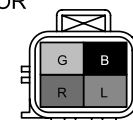0140-301A
PCM0140-301B
PCM0140-304
MASS AIR FLOW /
INTAKE AIR
TEMPERATURE SENSOR0140-305
VARIABLE BOOST
CONTROL SOLENOID
VALVE0140-306
A/F SENSOR0140-307
EGR COOLER BYPASS
VALVE

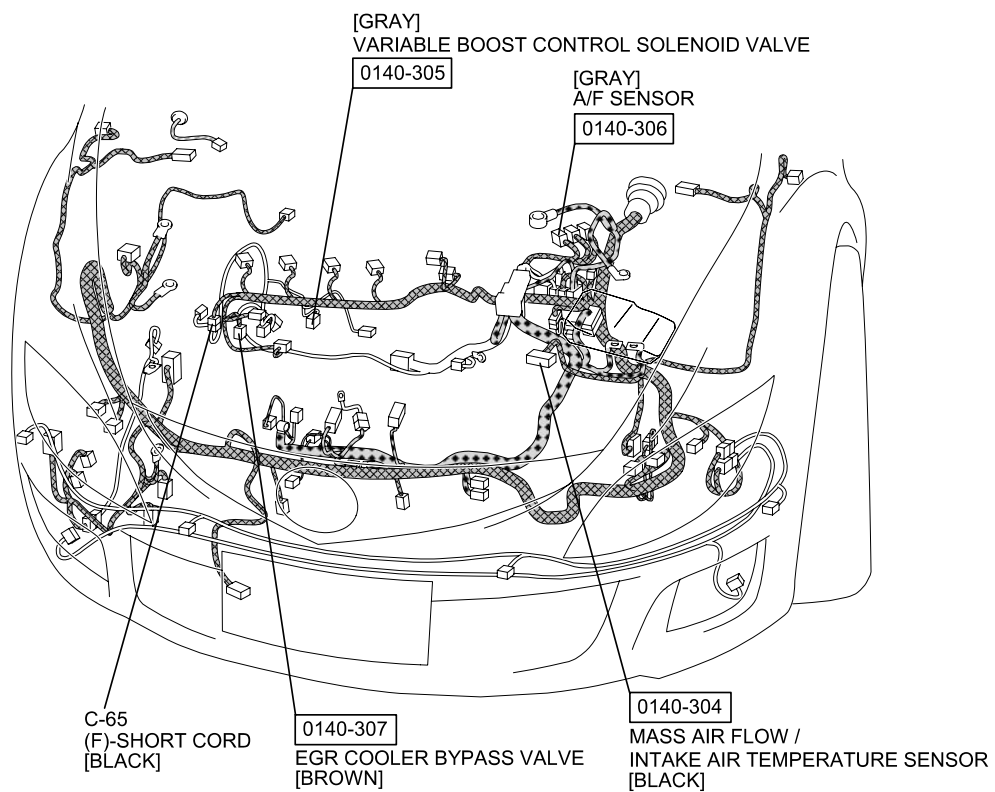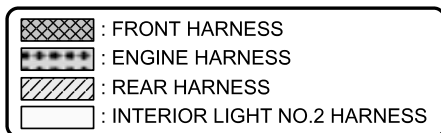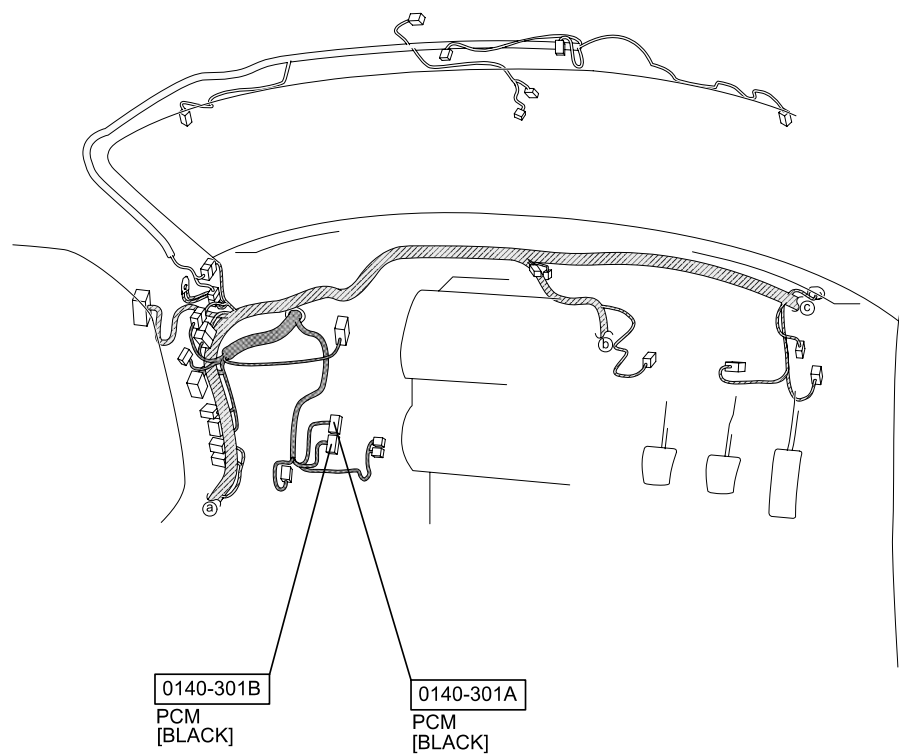



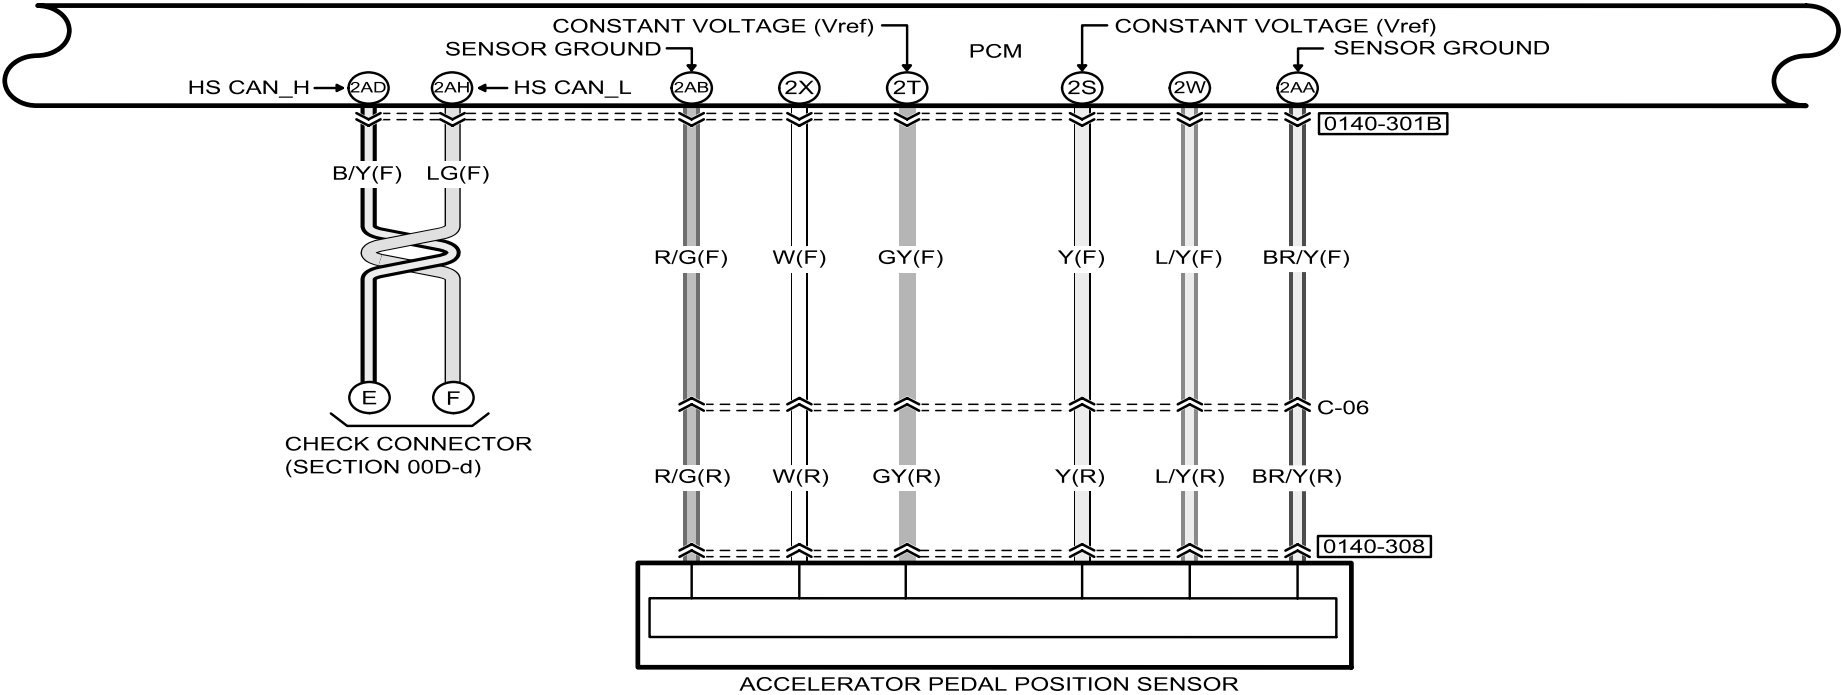



0140-301B
PCM

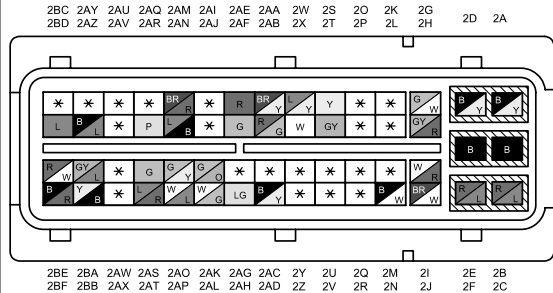

  
0140-308
ACCELERATOR PEDAL POSITION SENSOR



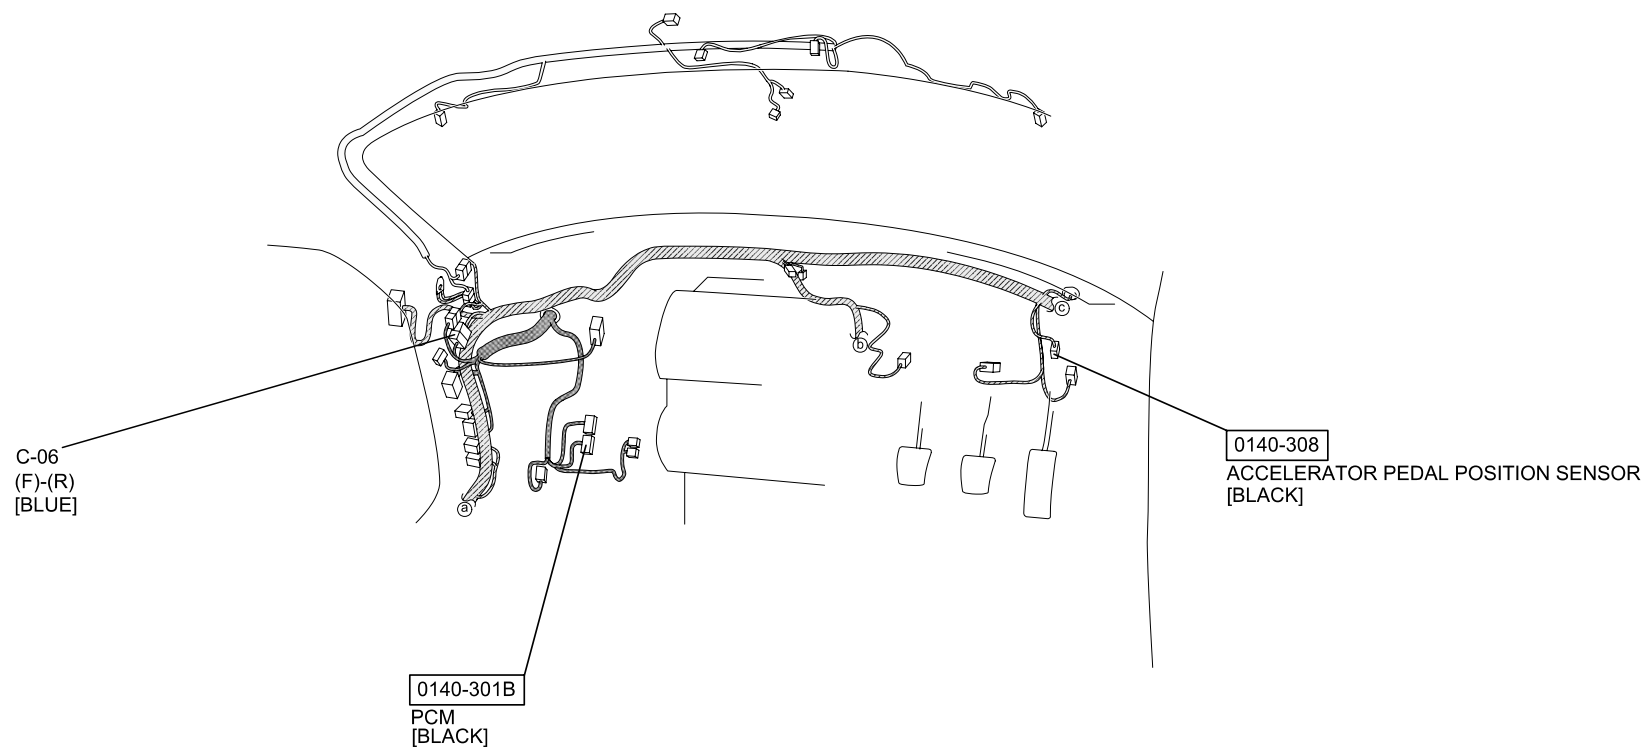


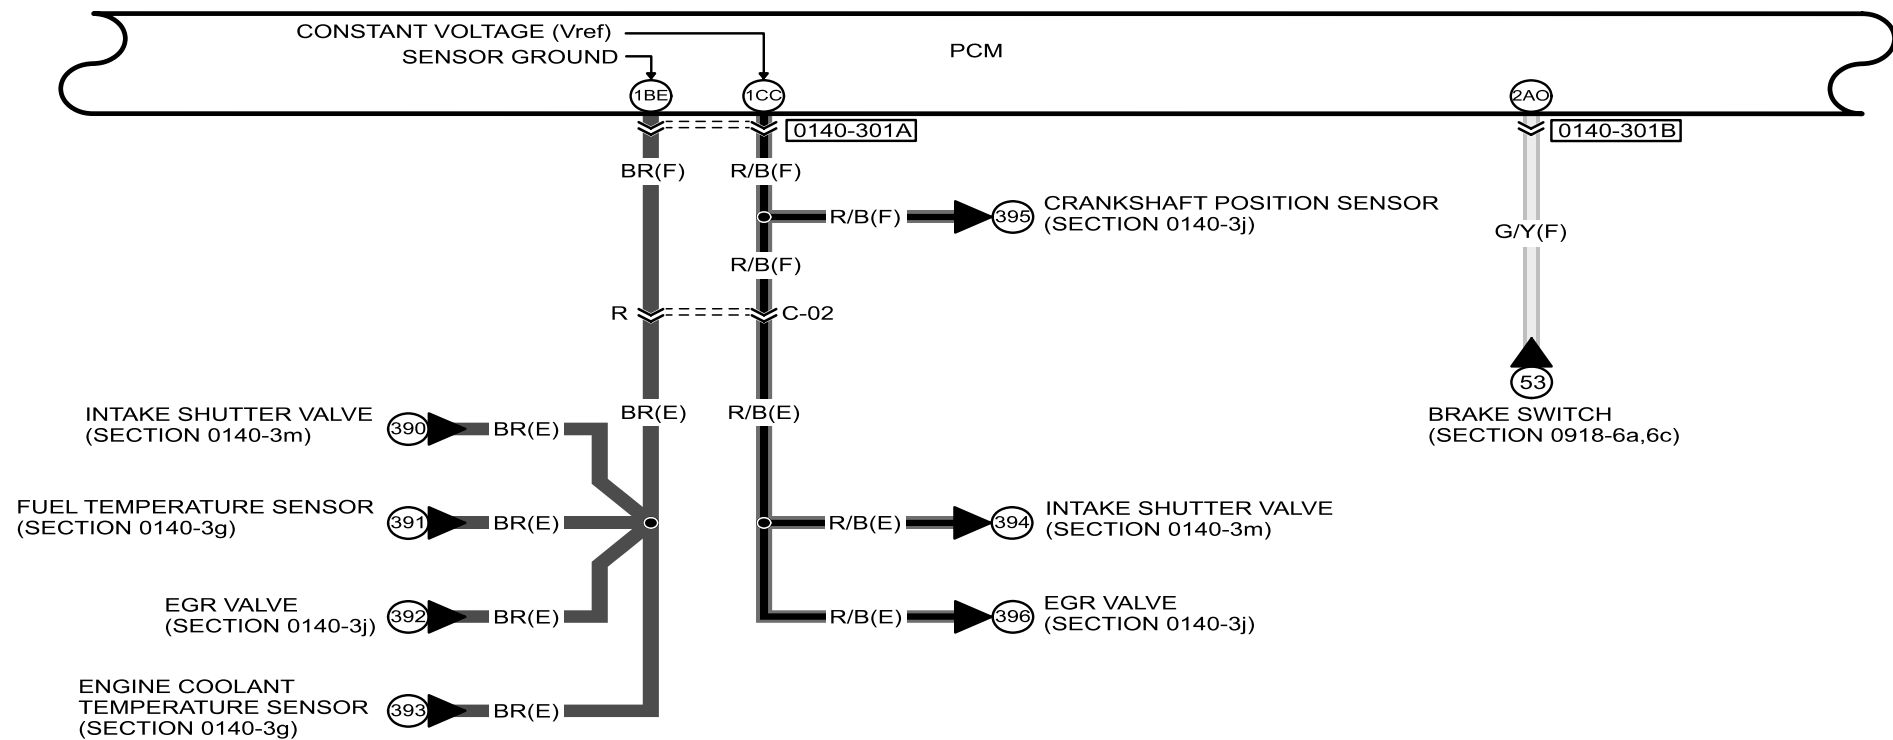






0140-301A
PCM



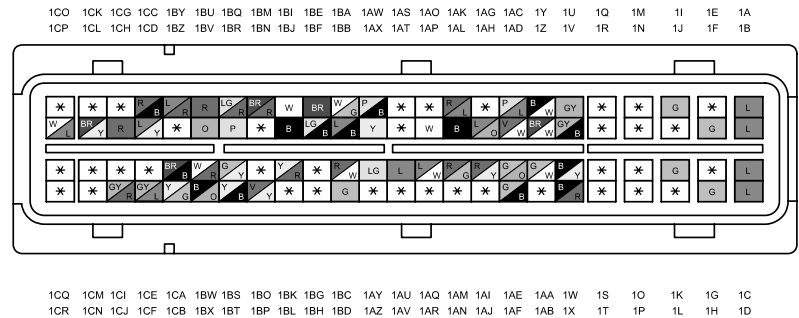



0140-301B
PCM

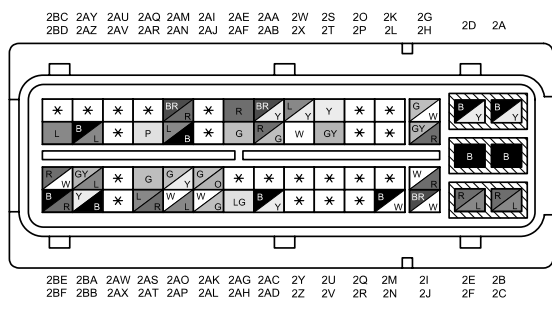

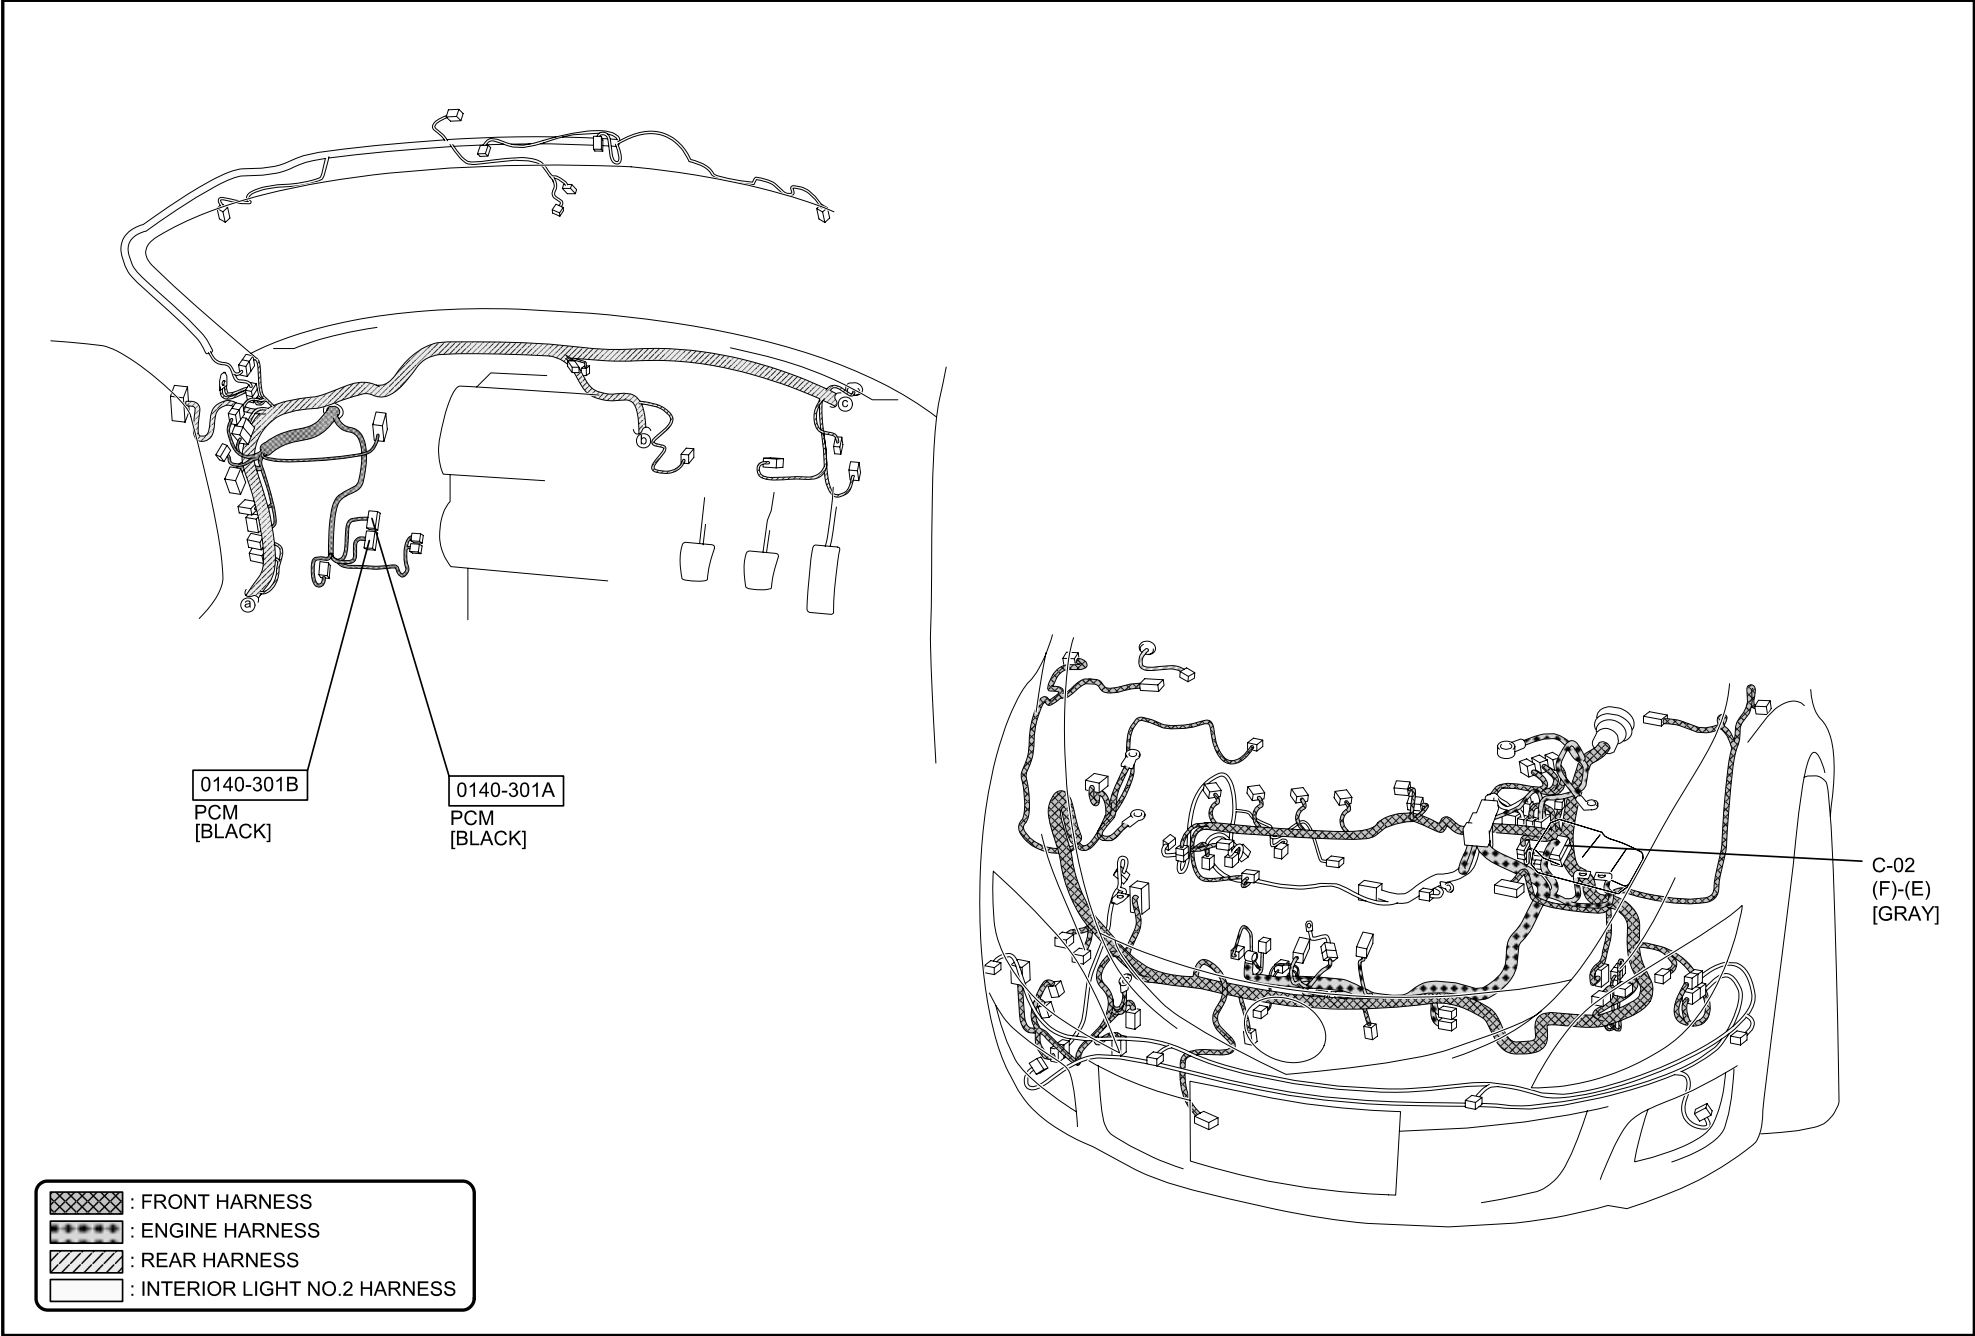


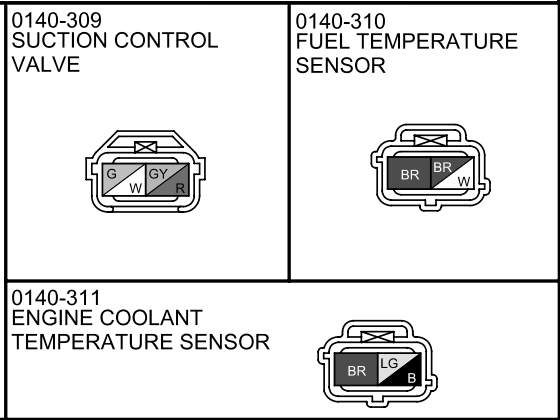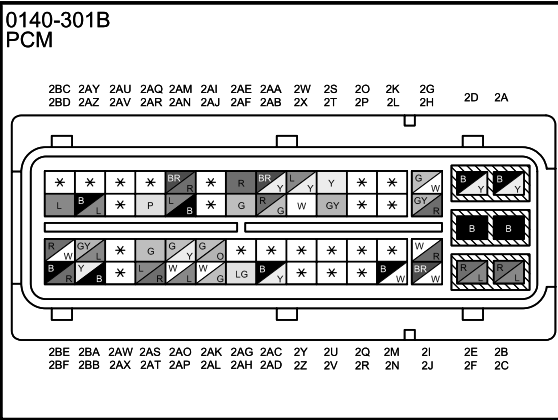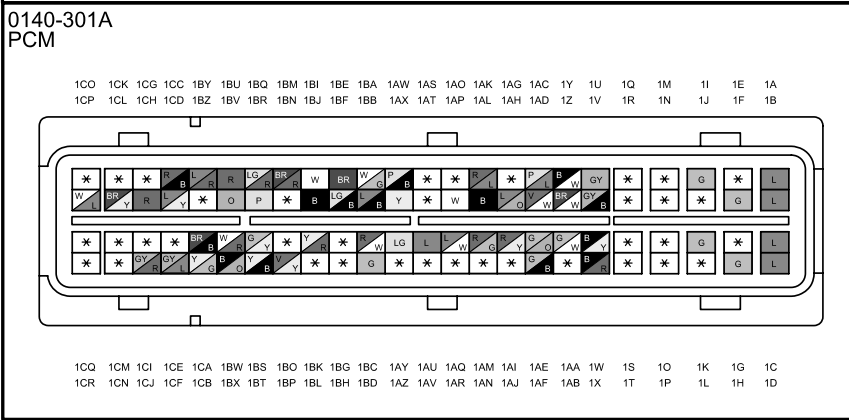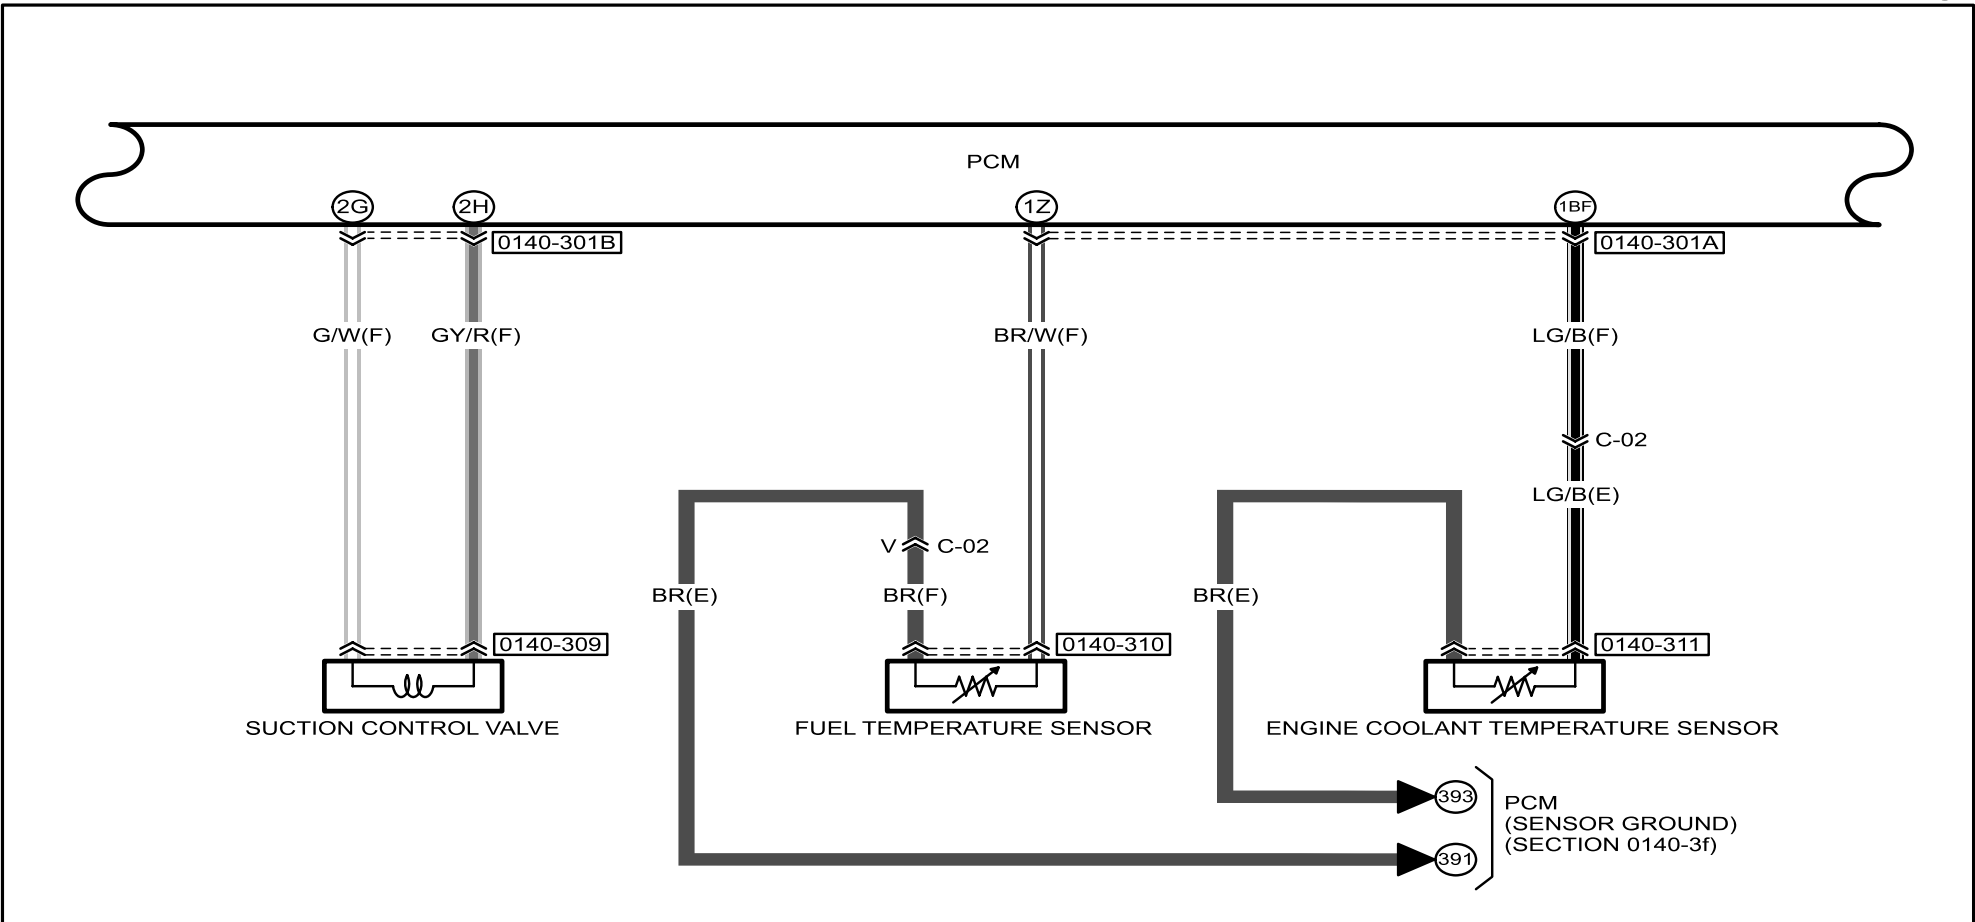

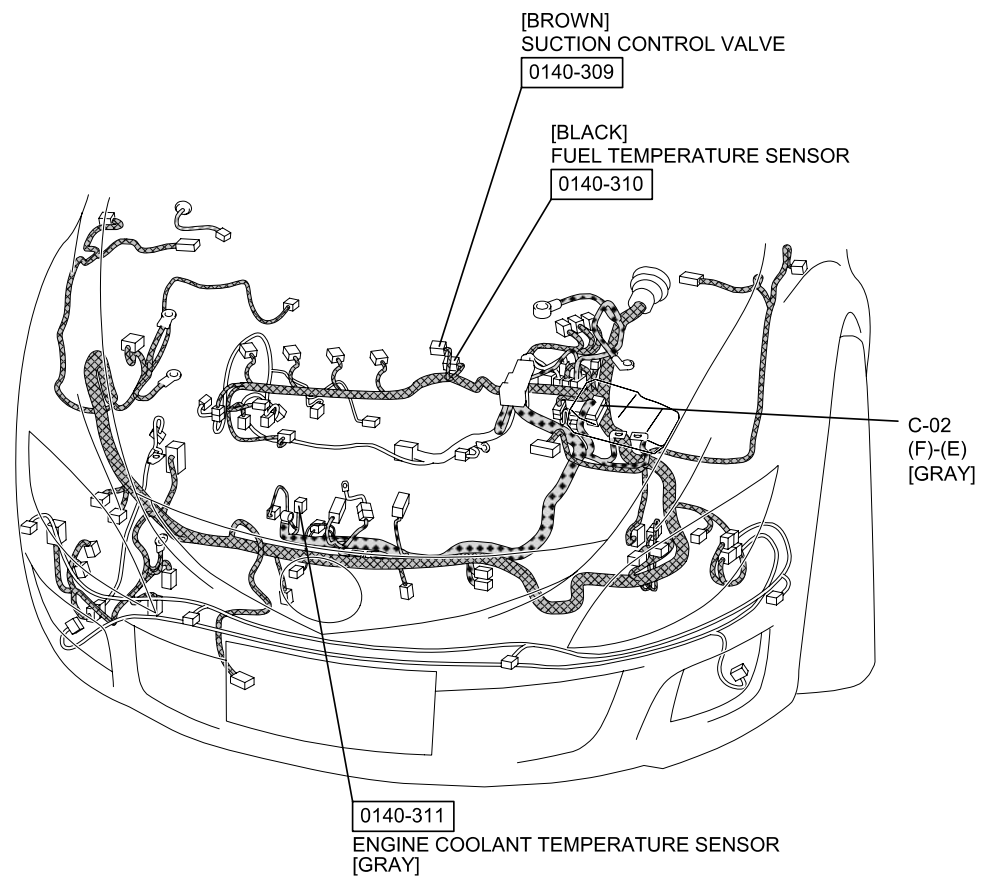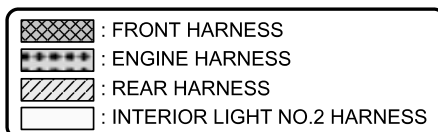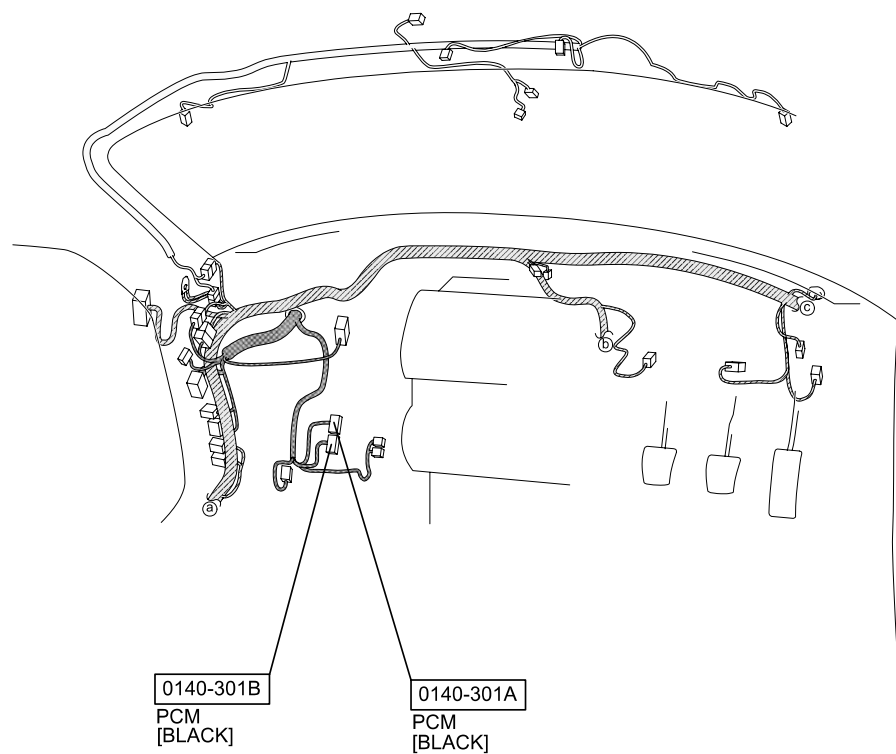


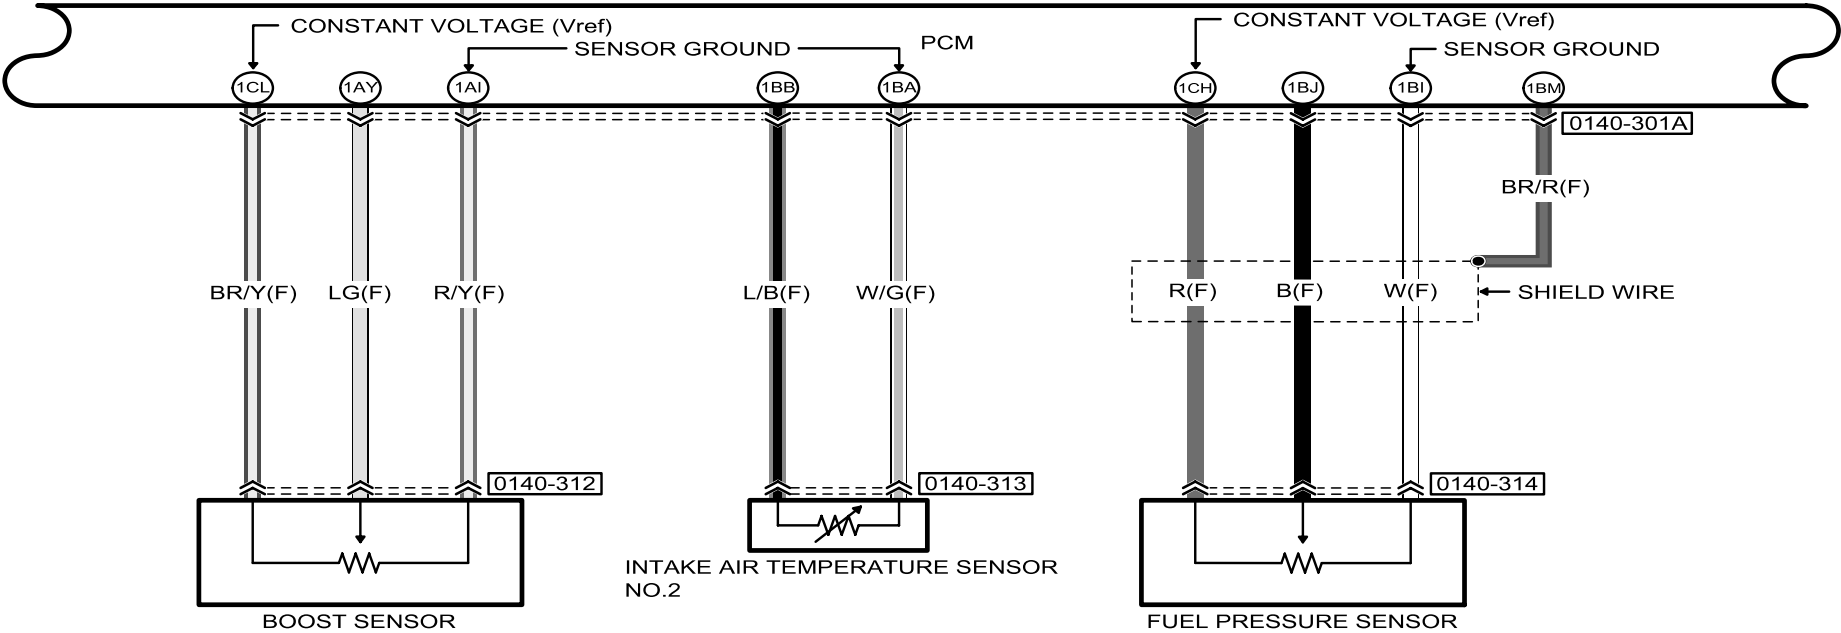

0140-301A
PCM

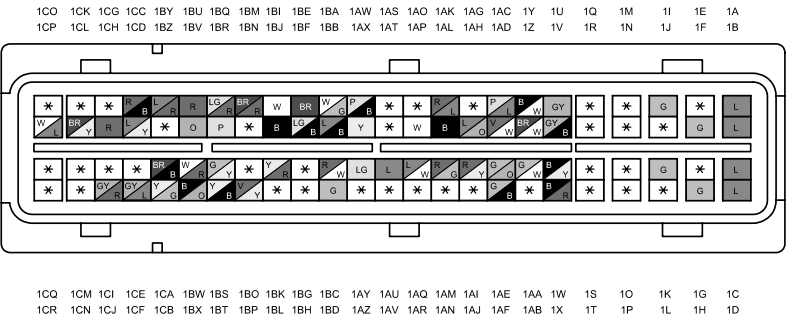


0140-312
BOOST SENSOR


 


0140-313
INTAKE AIR
TEMPERATURE SENSOR
NO.2




 
0140-314
FUEL PRESSURE SENSOR




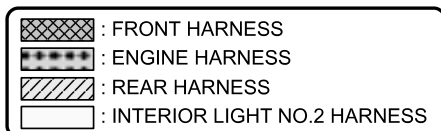
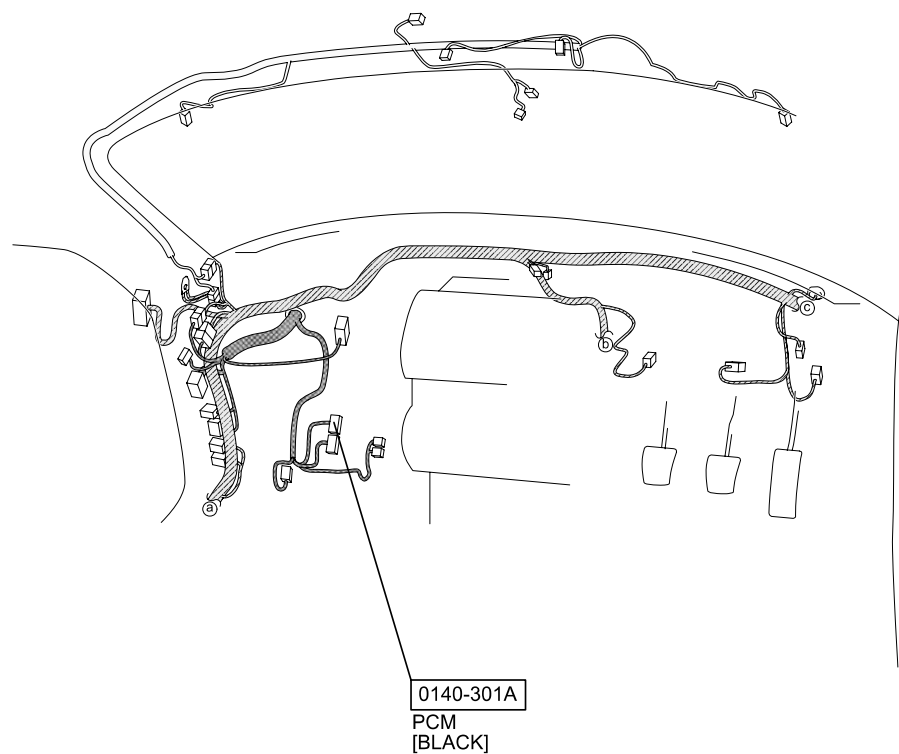




[BLACK]
FUEL PRESSURE SENSOR
0140-314

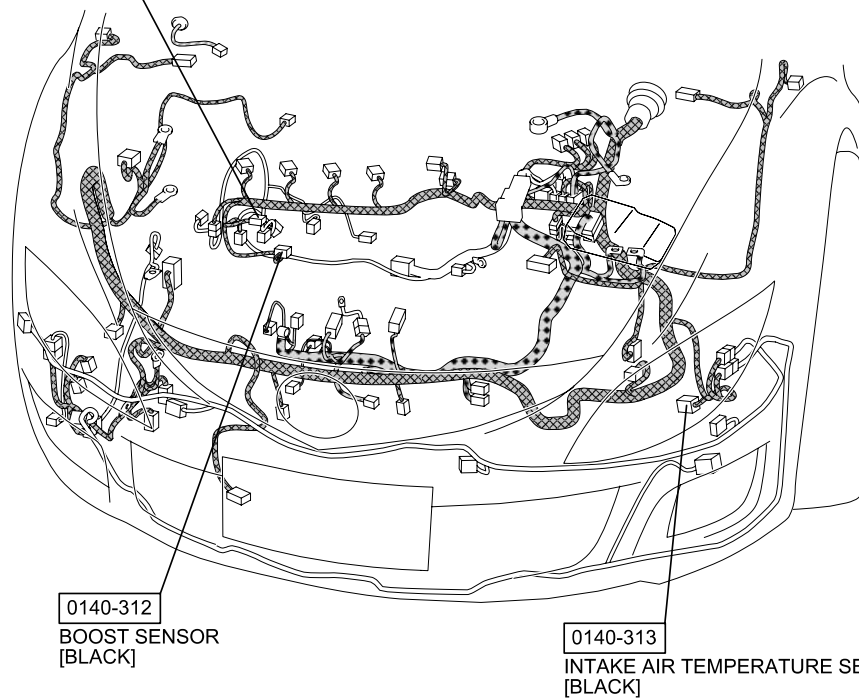

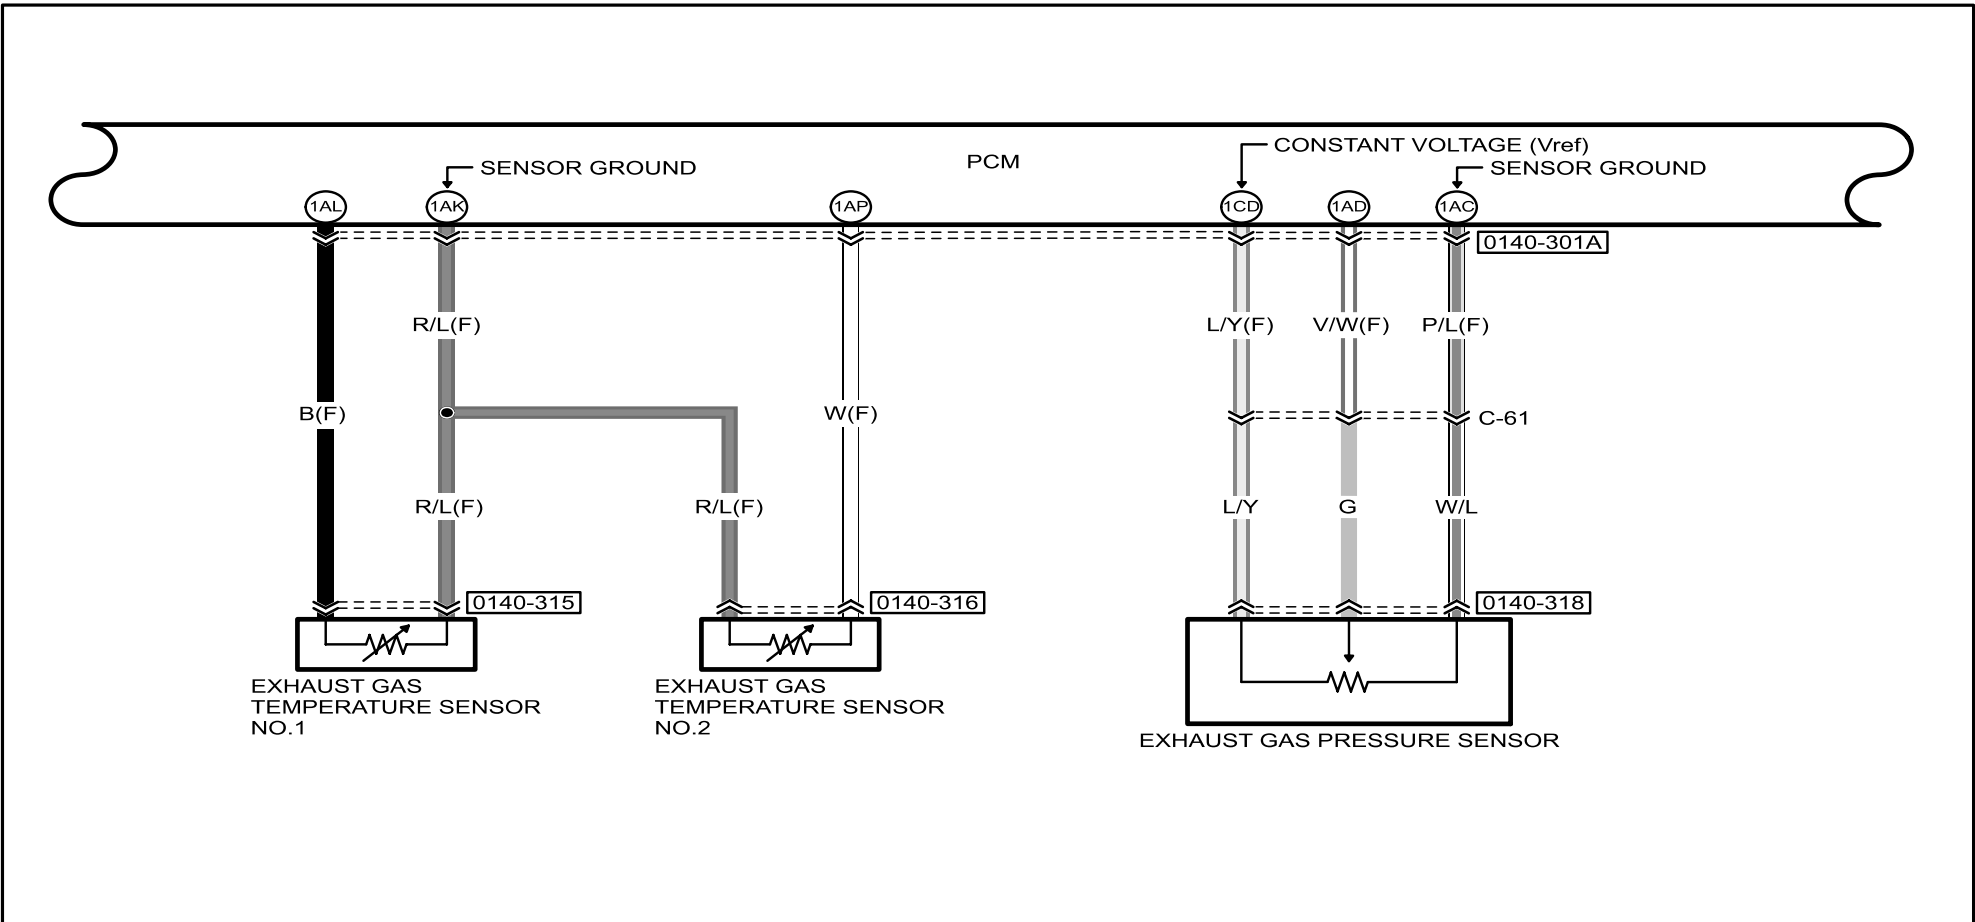


<p>0140-301A PCM</p> <p>1CQ 1CK 1CG 1CC 1BY 1BU 1BQ 1BM 1BI 1BE 1BA 1AW 1AS 1AO 1AK 1AG 1AC 1Y 1U 1Q 1M 1I 1E 1A 1CP 1CL 1CH 1CD 1BZ 1BV 1BR 1BN 1BJ 1BF 1BB 1AX 1AT 1AP 1AL 1AH 1AD 1Z 1V 1R 1N 1J 1F 1B</p> <p>1CQ 1CM 1CI 1CE 1CA 1BW 1BS 1BO 1BK 1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C 1CR 1CN 1CJ 1CF 1CB 1BX 1BT 1BP 1BL 1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D</p>	<p>0140-315 EXHAUST GAS TEMPERATURE SENSOR NO.1</p>	<p>0140-316 EXHAUST GAS TEMPERATURE SENSOR NO.2</p>	<p>0140-318 EXHAUST GAS PRESSURE SENSOR</p>	
--	---	---	---	--

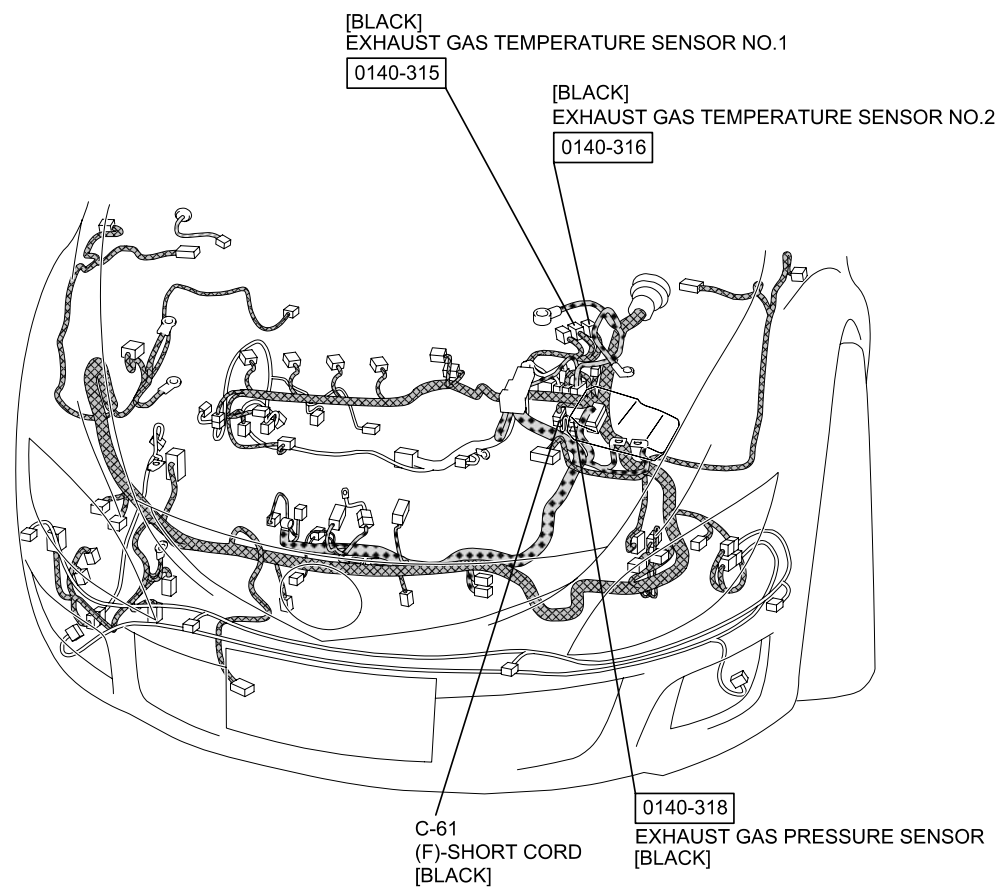
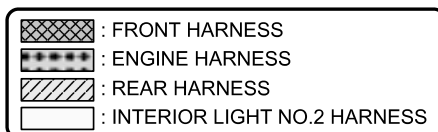
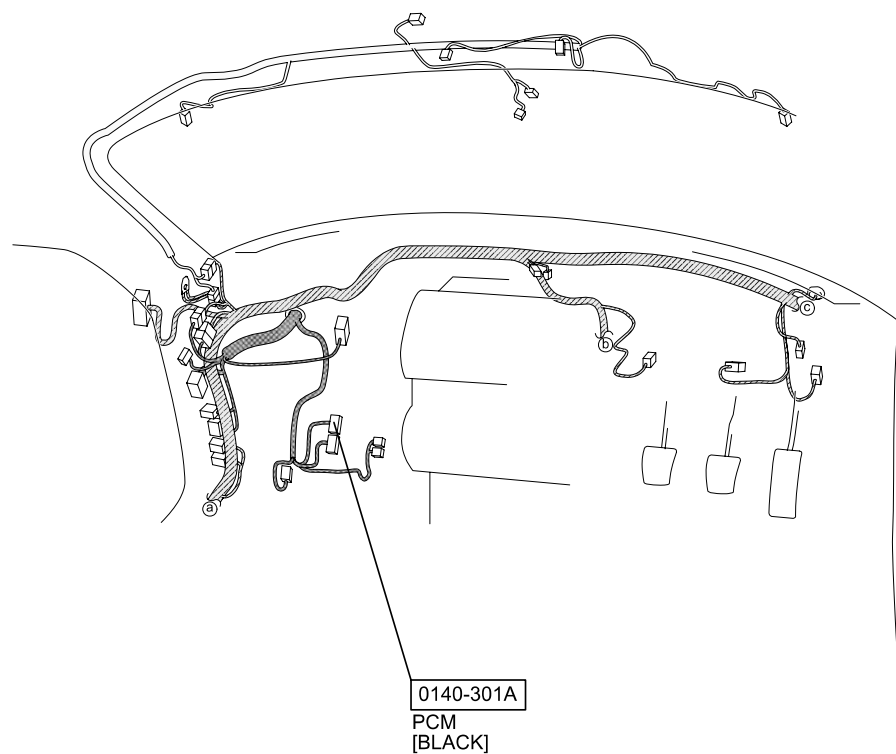


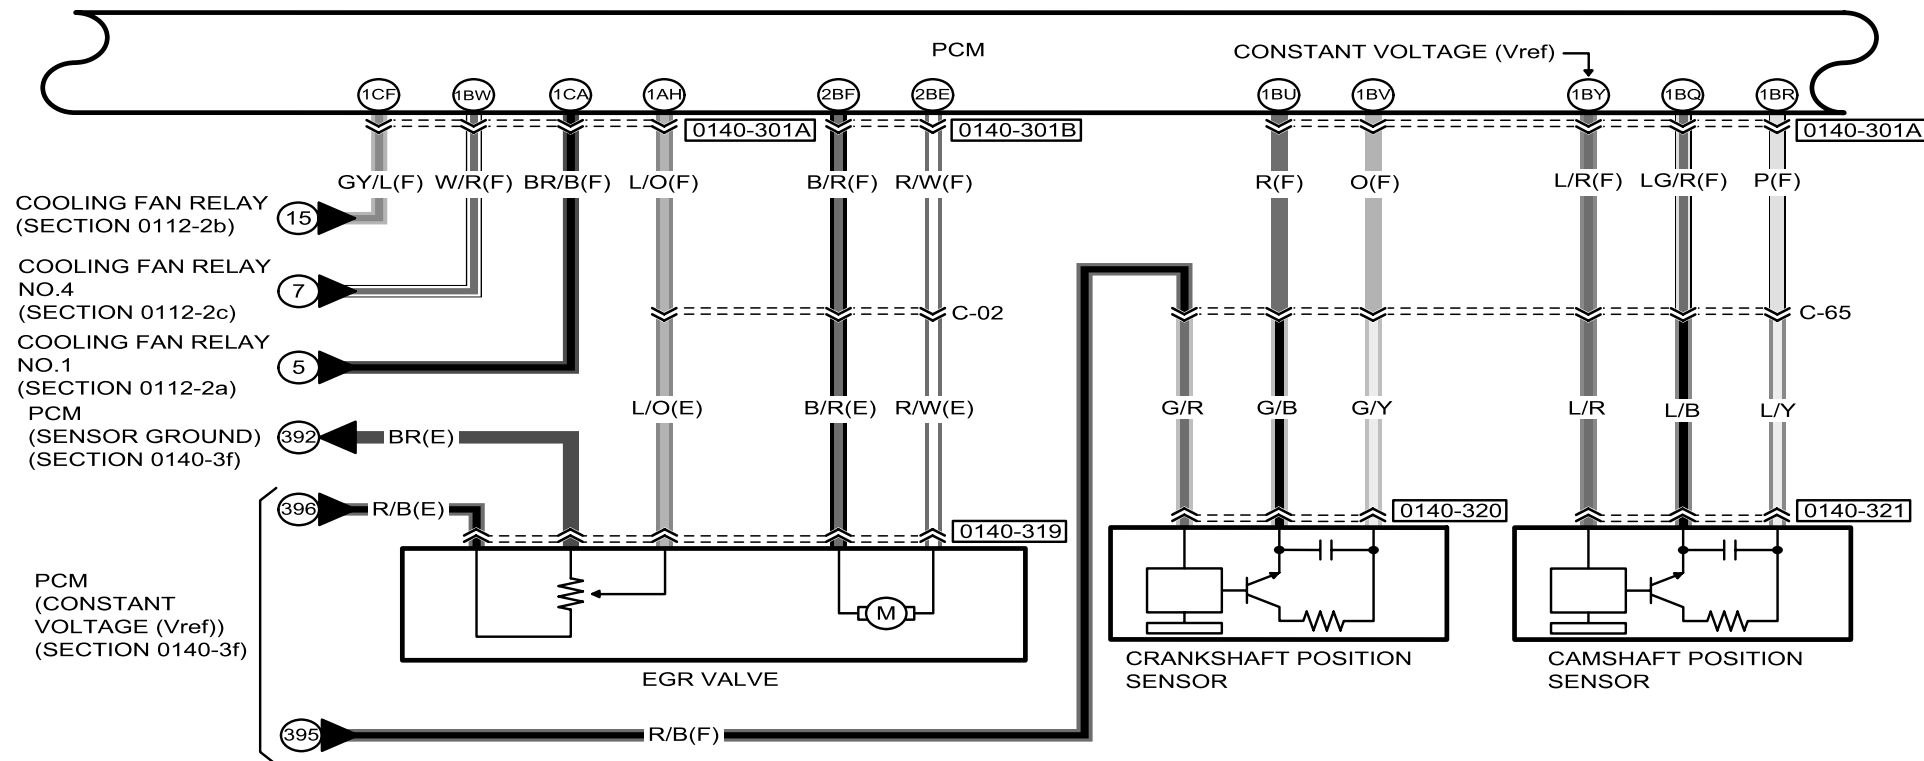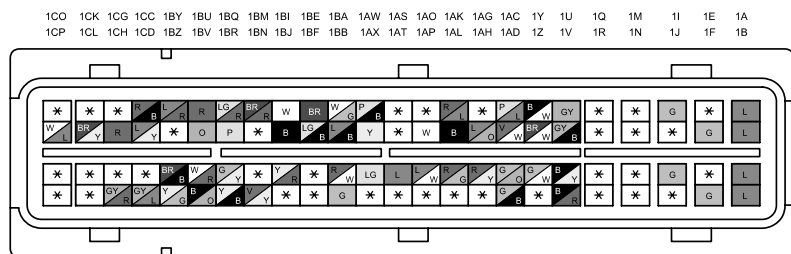
0140-301A
PCM


1CQ 1CM 1CI 1CE 1CA 1BW 1BS 1BO 1BK 1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C
1CR 1CN 1CJ 1CF 1CB 1BX 1BT 1BP 1BL 1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D

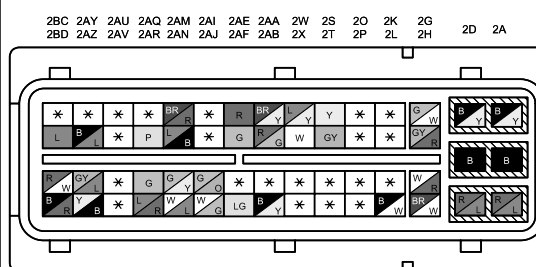0140-301B
PCM

   
2BC 2AY 2AU 2AQ 2AM 2AI 2AE 2AA 2W 2S 2O 2K 2G 2D 2A
2BD 2AZ 2AV 2AR 2AN 2AJ 2AF 2AB 2X 2T 2P 2L 2H 2A

0140-319
EGR VALVE0140-320
CRANKSHAFT POSITION
SENSOR0140-321
CAMSHAFT POSITION SENSOR

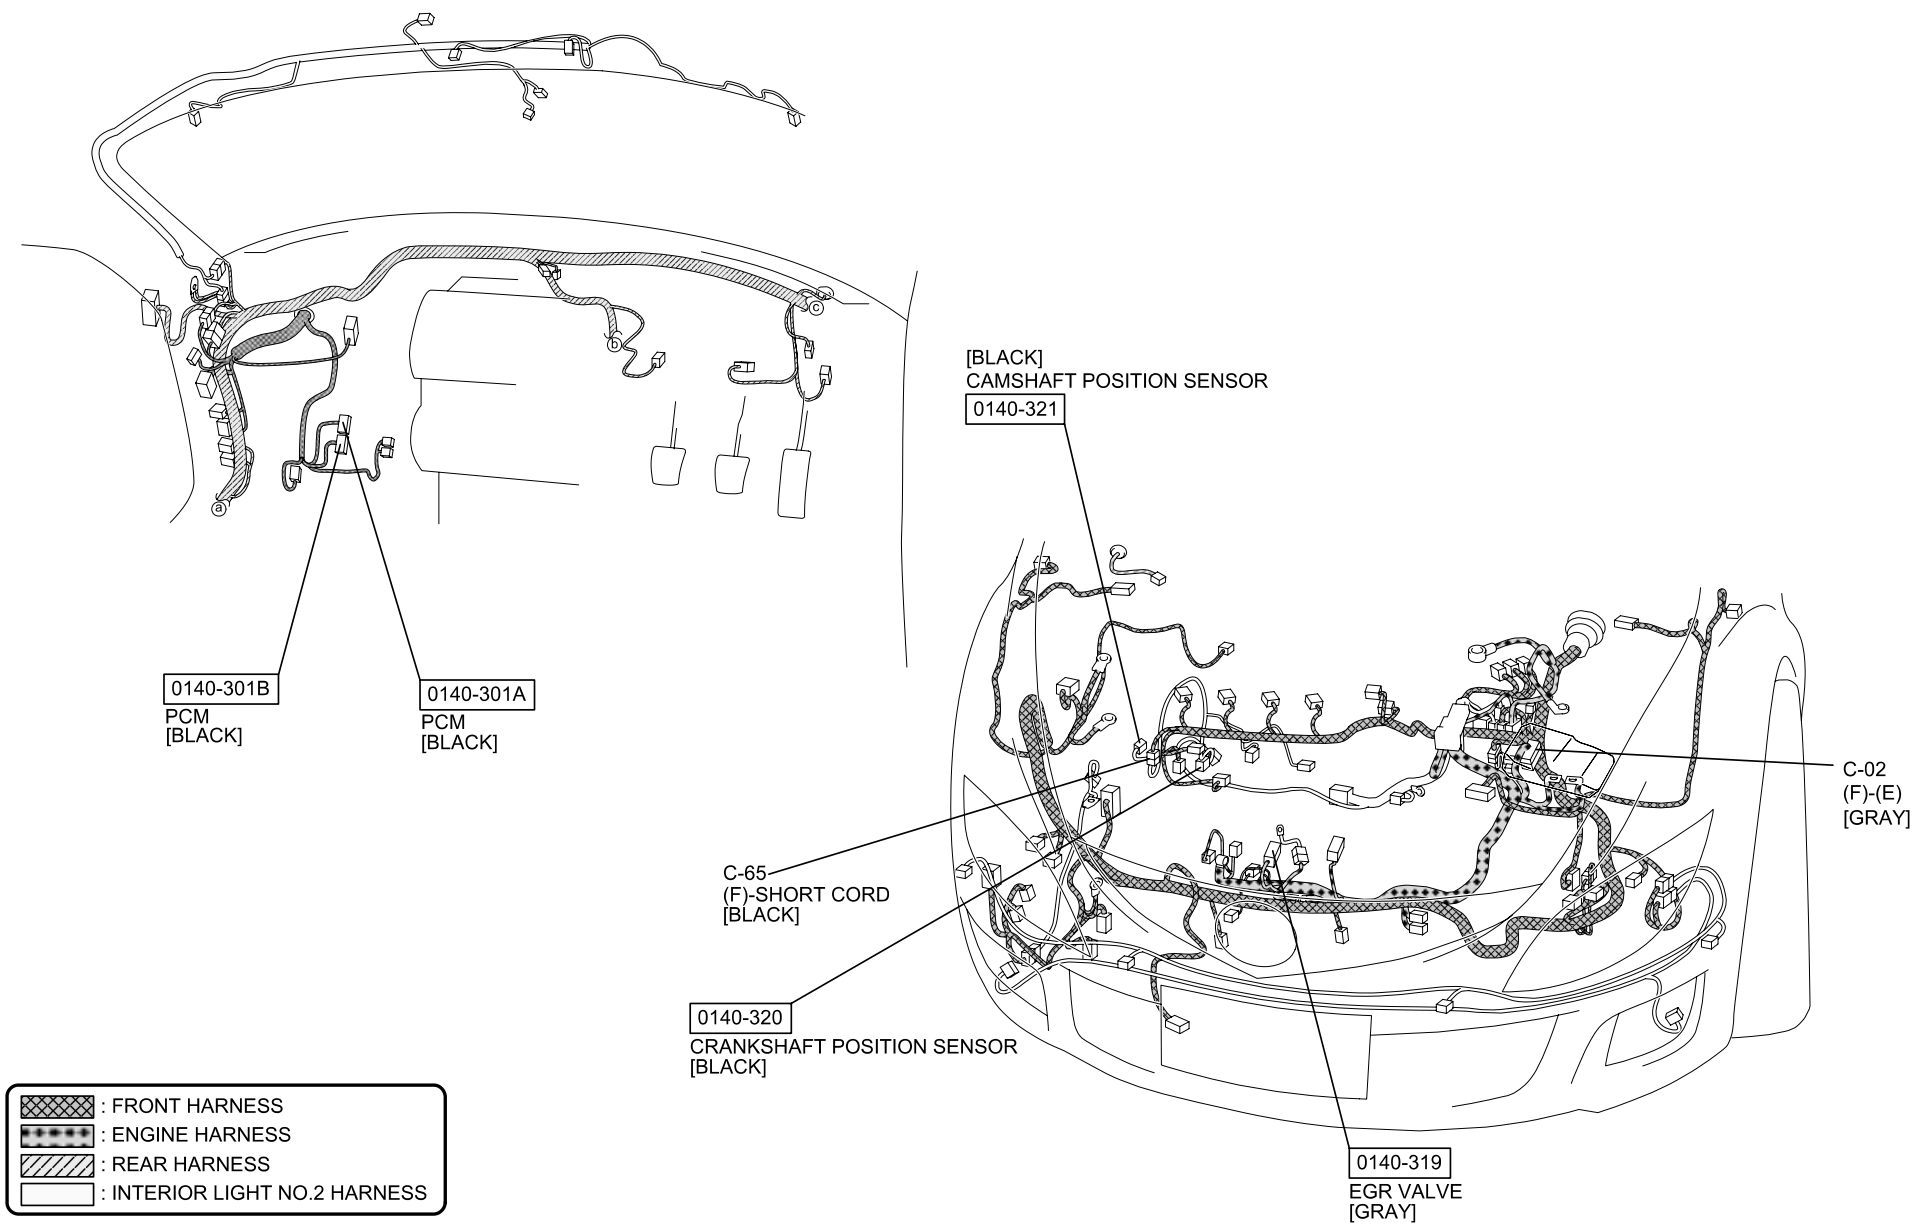

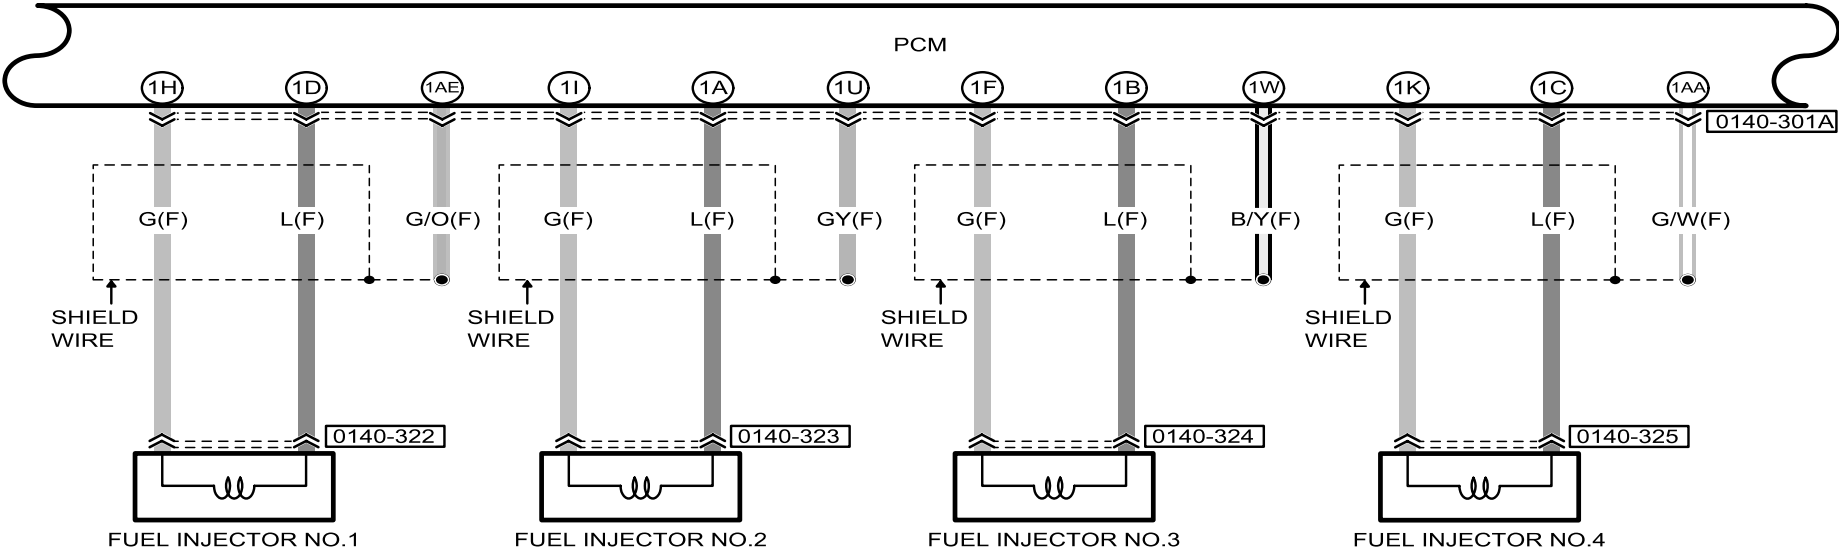


0140-301A
PCM

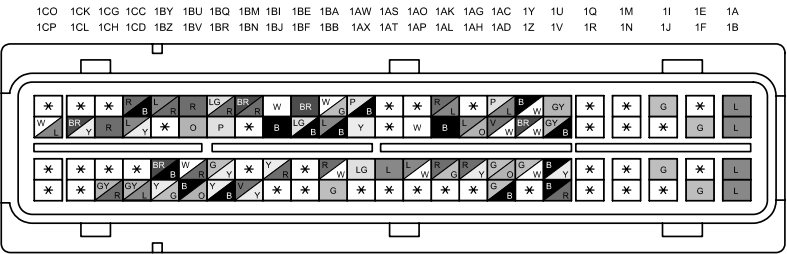


1CQ 1CM 1CI 1CE 1CA 1BW 1BS 1BO 1BK 1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C
1CR 1CN 1CJ 1CF 1CB 1BX 1BT 1BP 1BL 1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D

 
0140-322
FUEL INJECTOR NO.1




0140-323
FUEL INJECTOR NO.2


 


0140-324
FUEL INJECTOR NO.3

 


0140-325
FUEL INJECTOR NO.4

 


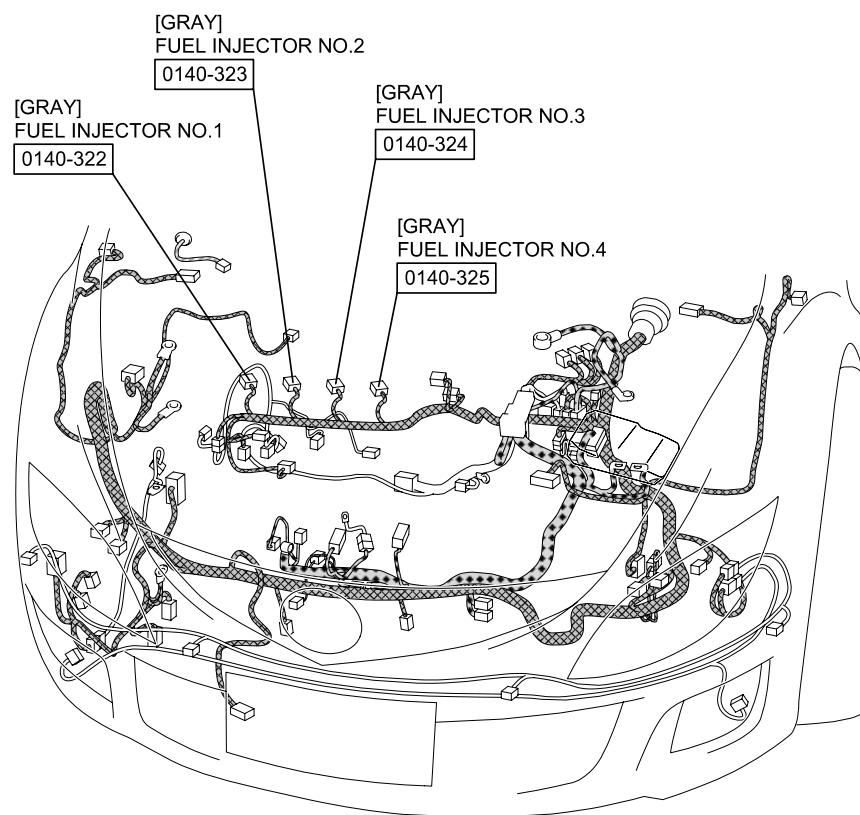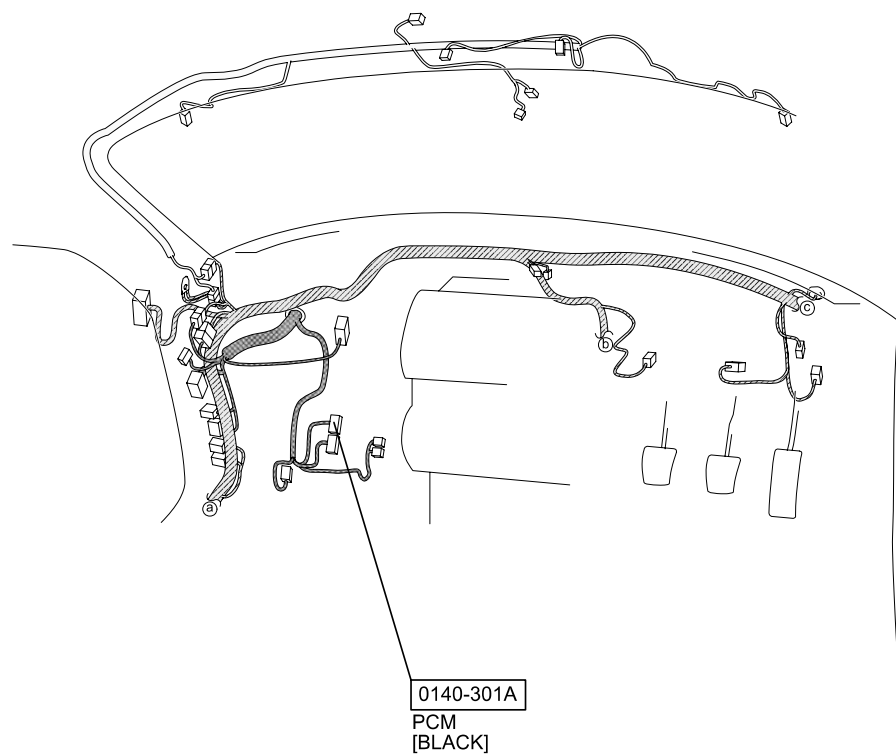


	: FRONT HARNESS
	: ENGINE HARNESS
	: REAR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS

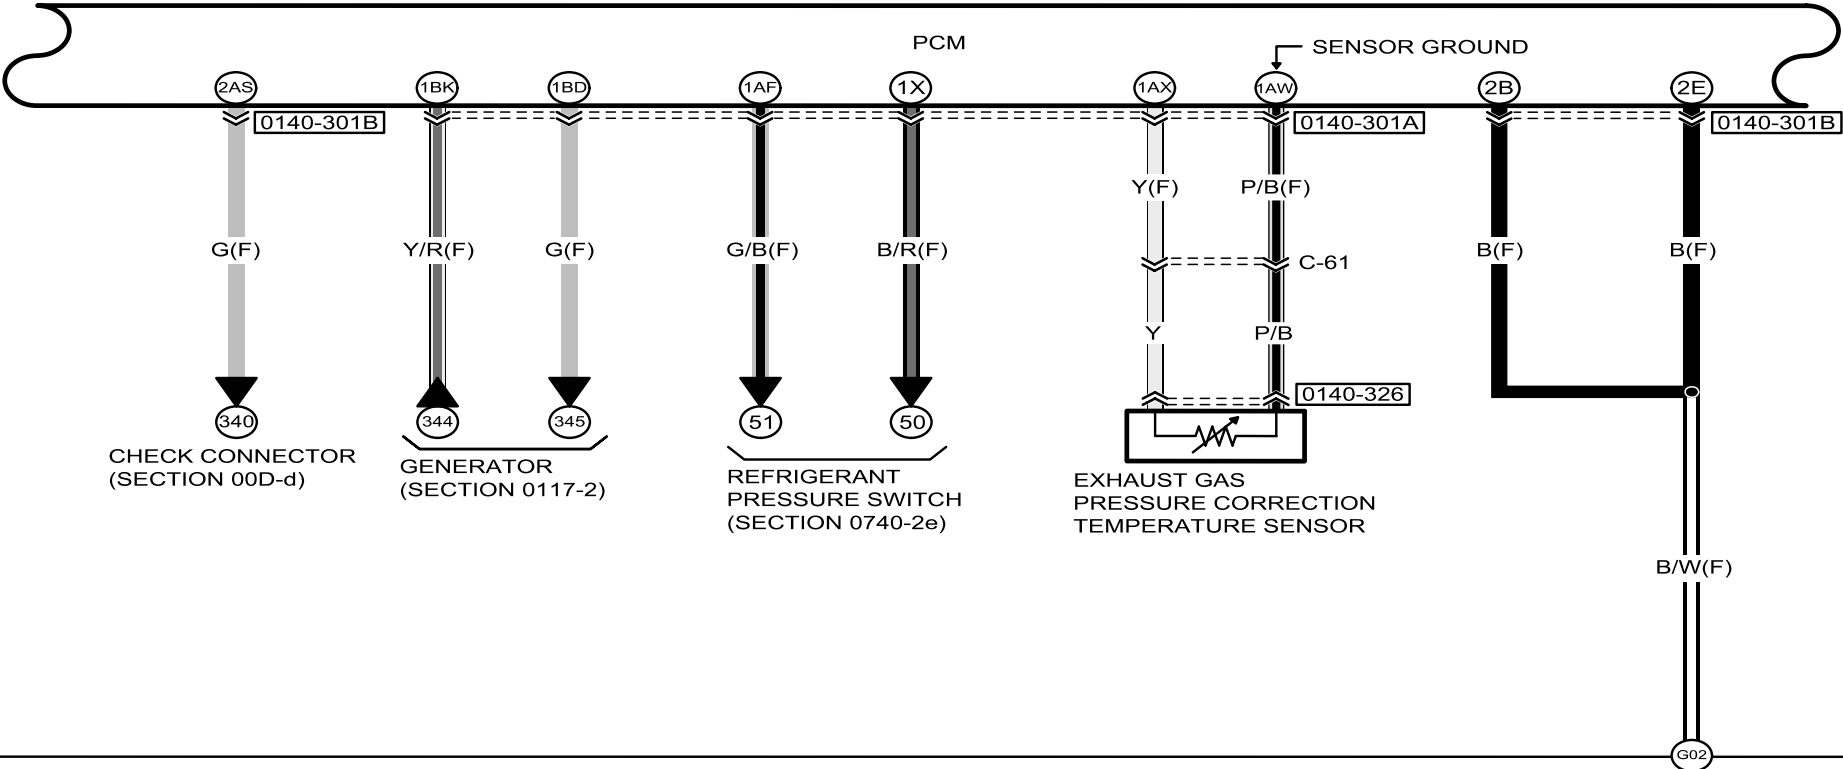


0140-301A
PCM



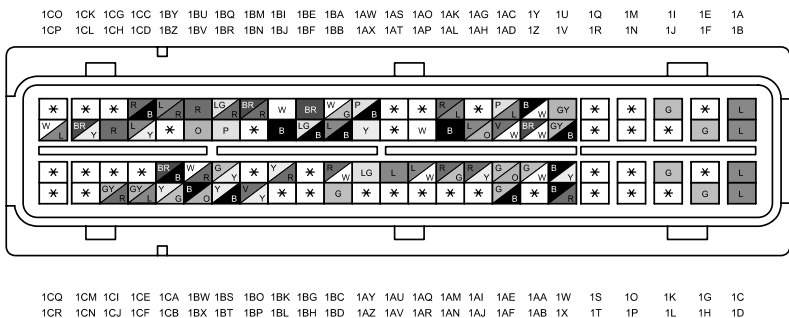



0140-301B
PCM

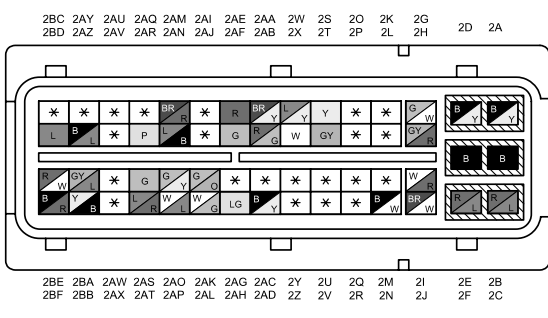

 
0140-326
EXHAUST GAS
PRESSURE CORRECTION
TEMPERATURE SENSOR



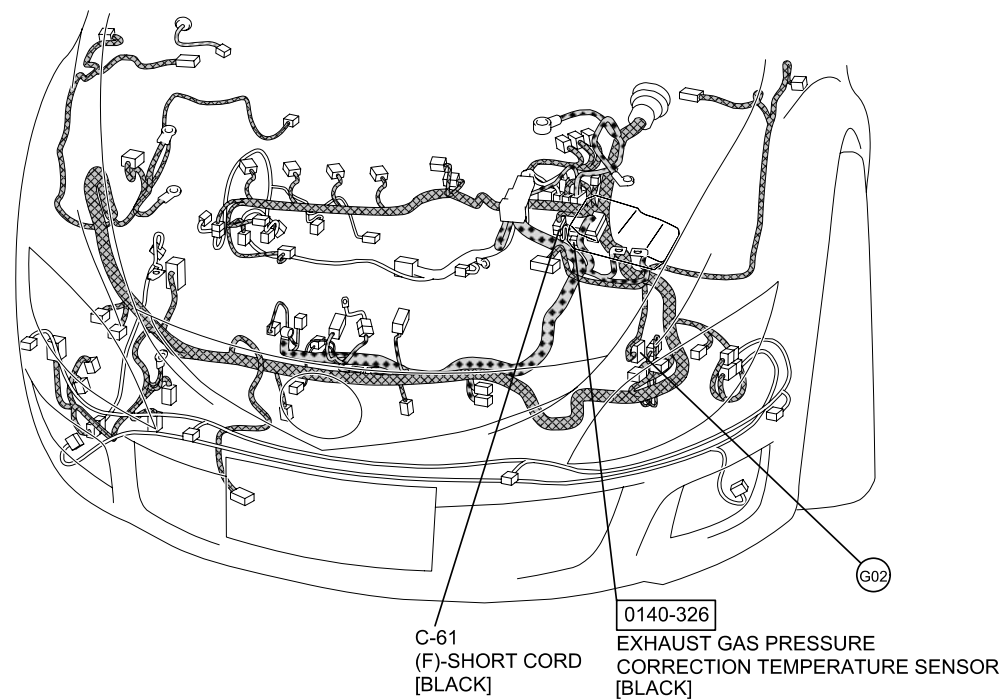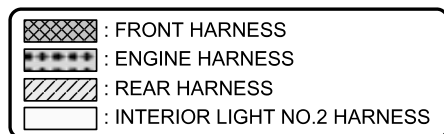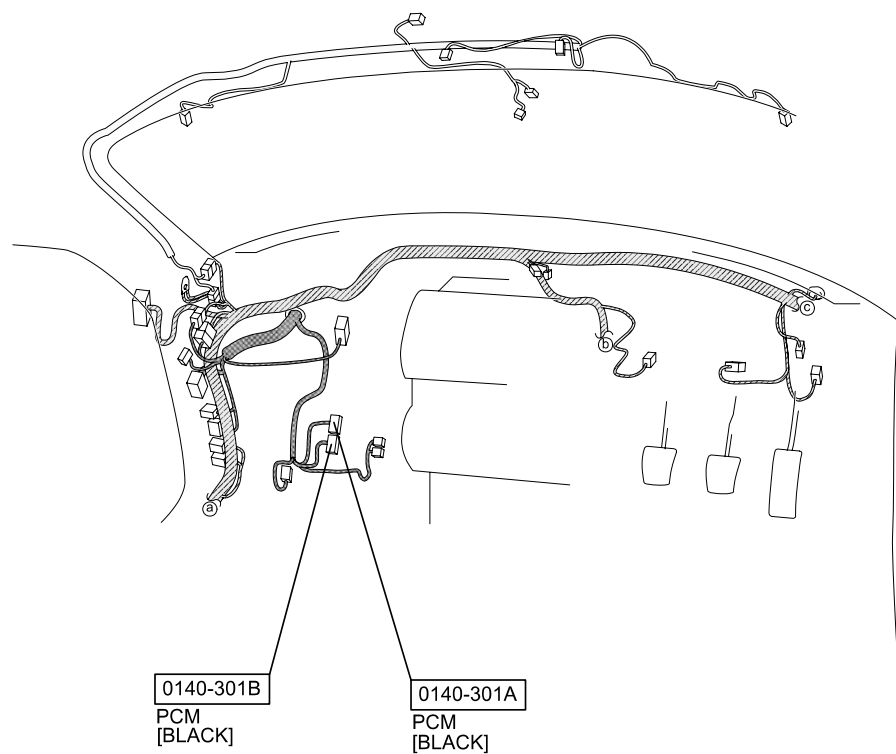




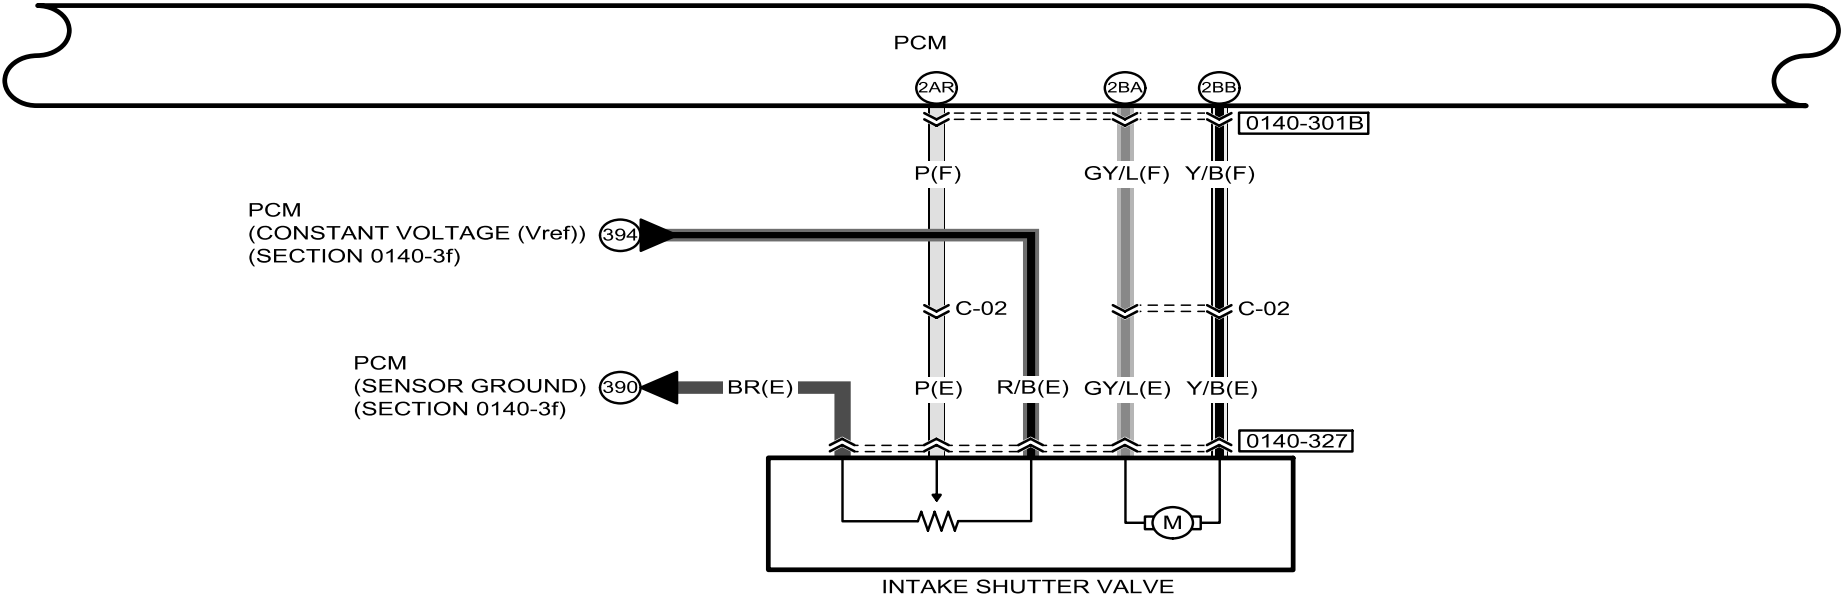



0140-301B
PCM

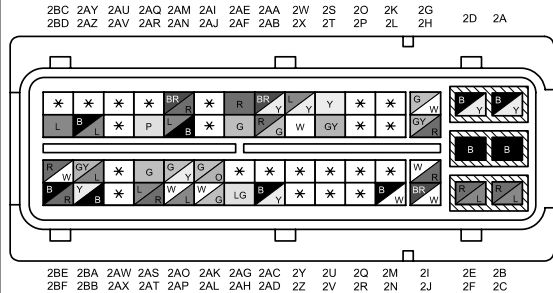


0140-327
INTAKE SHUTTER VALVE

 

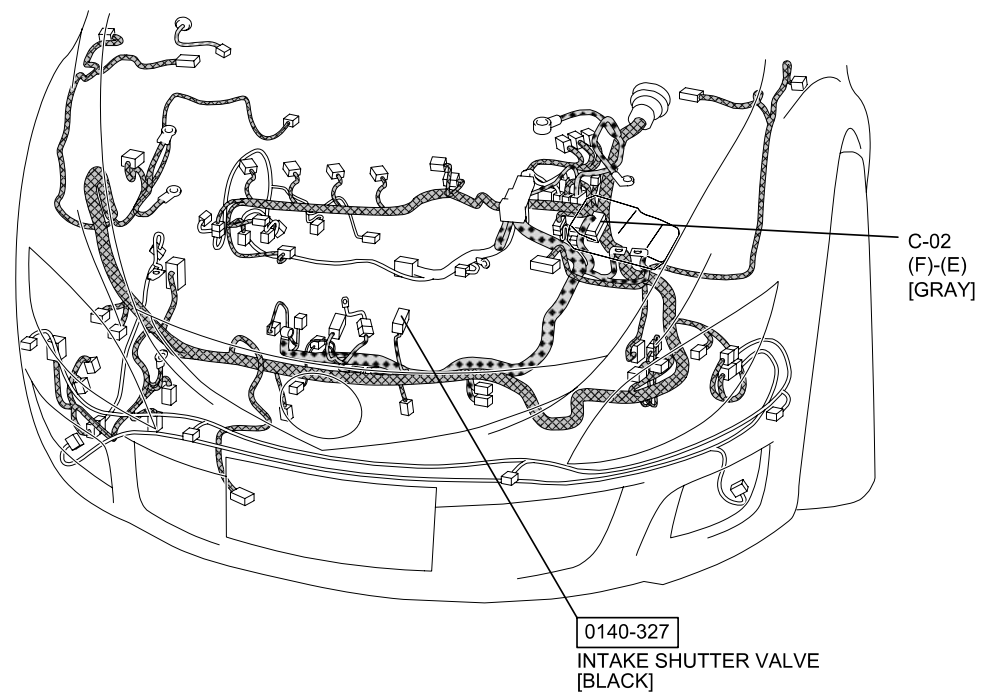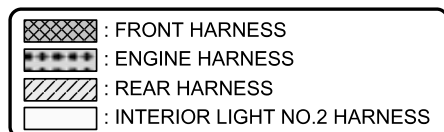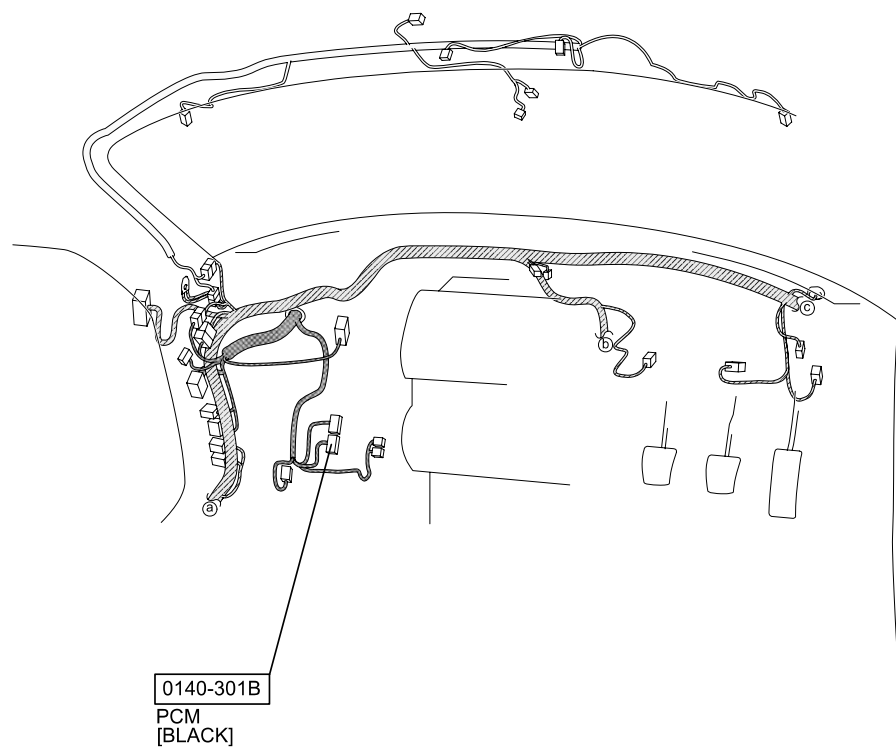


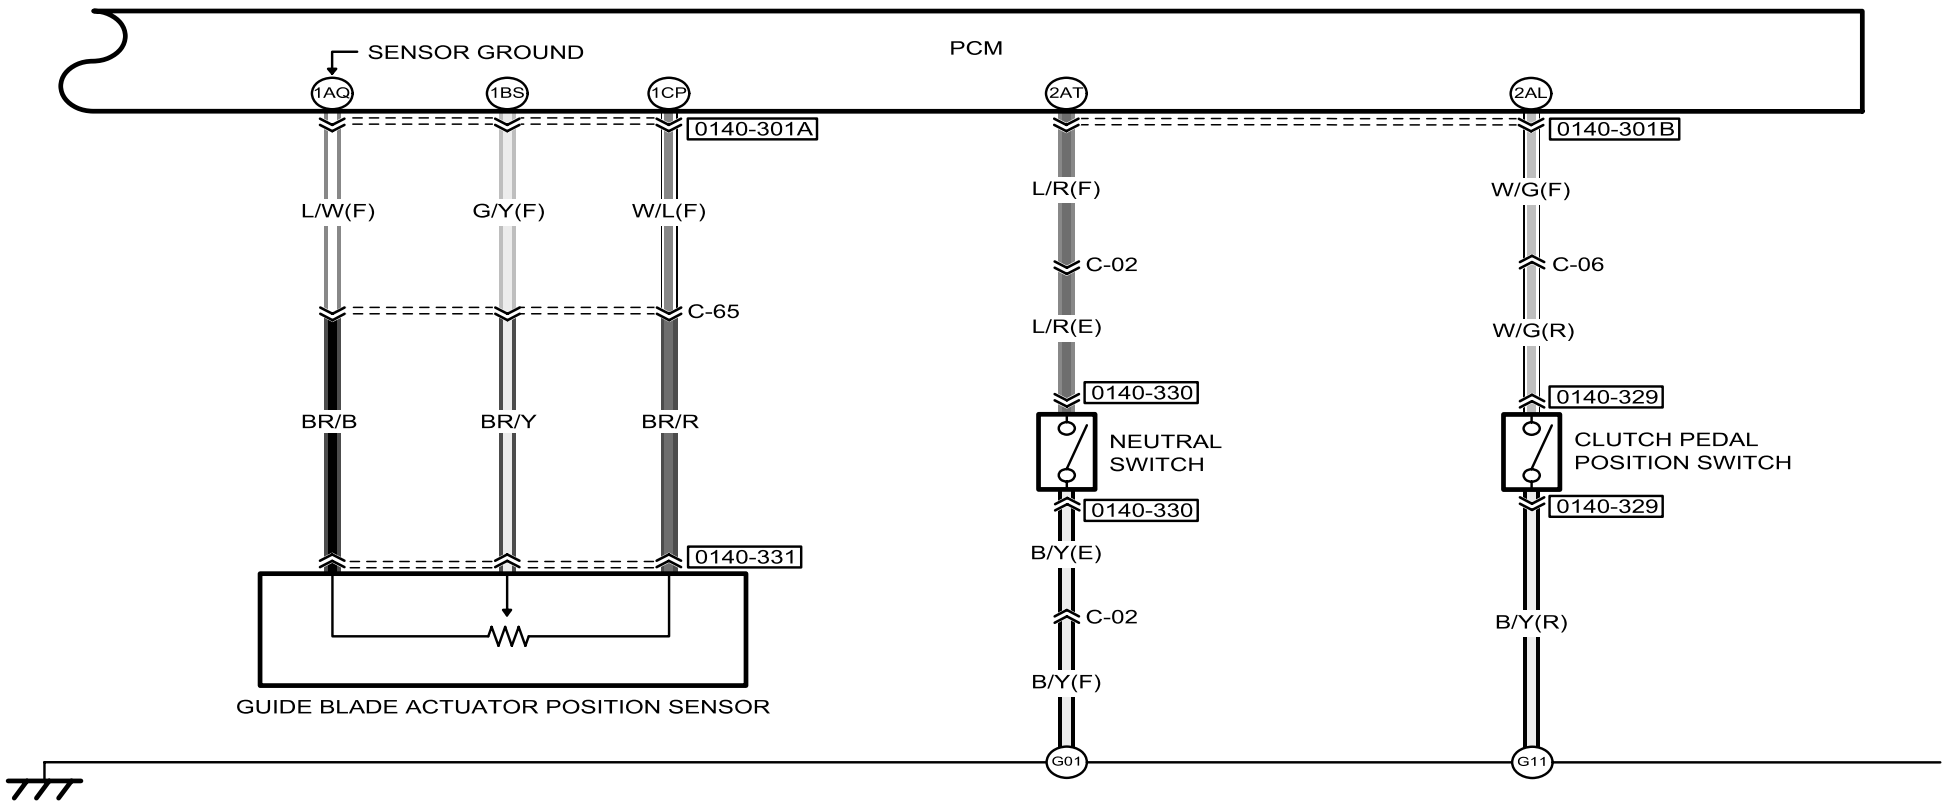


0140-301A
PCM

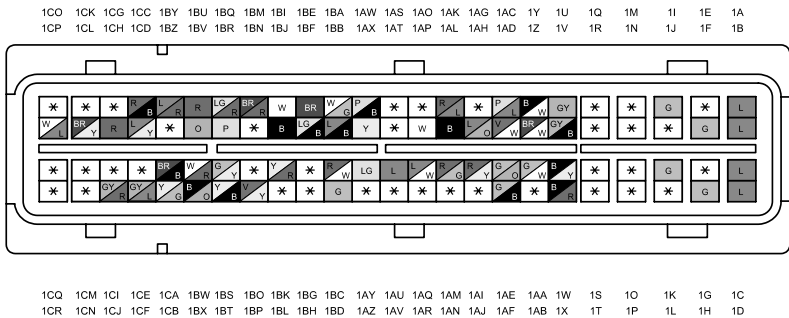


0140-301B
PCM

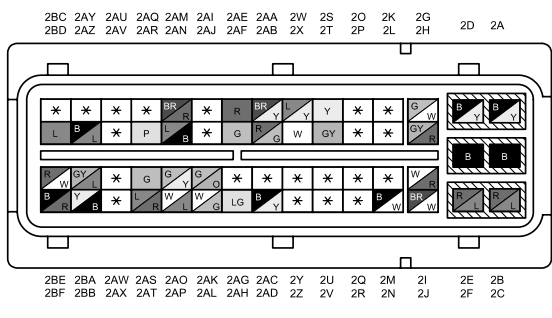


0140-329
CLUTCH PEDAL
POSITION SWITCH



 


0140-330
NEUTRAL SWITCH

 


 0140-331
GUIDE BLADE ACTUATOR
POSITION SENSOR




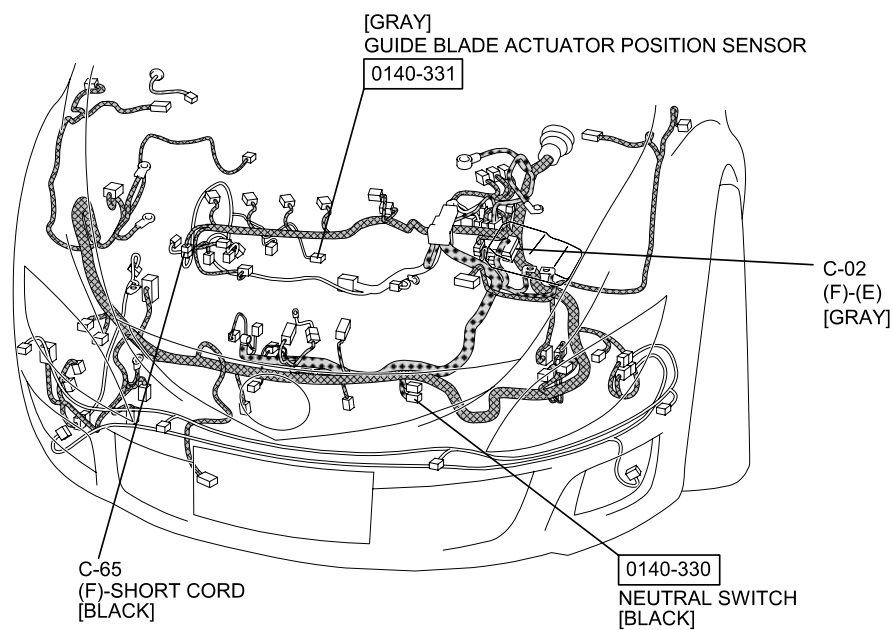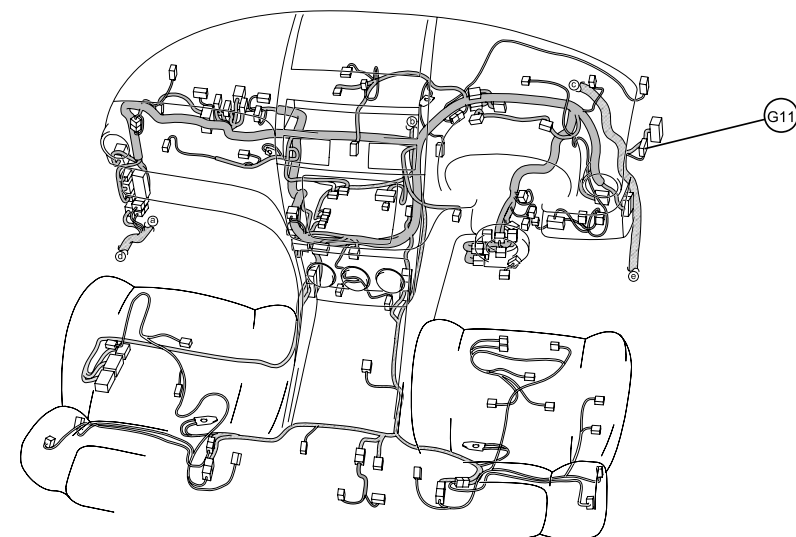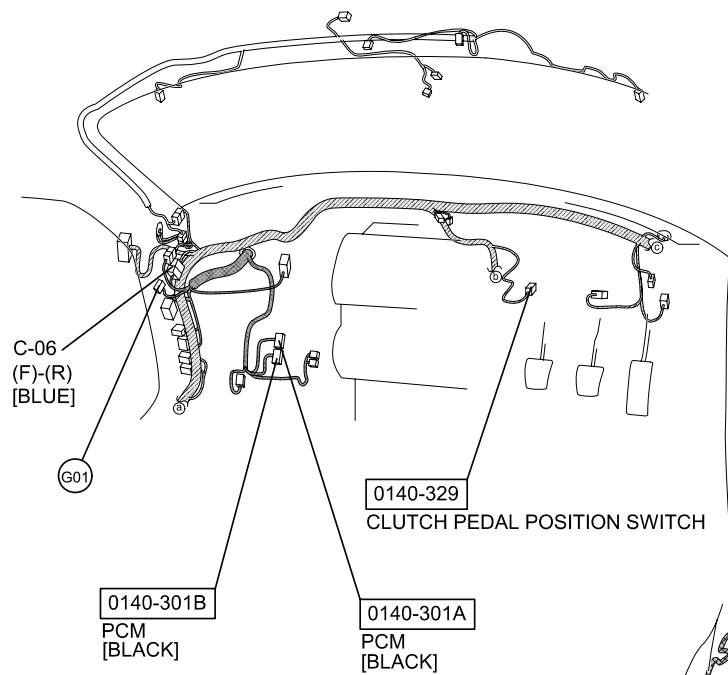


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS

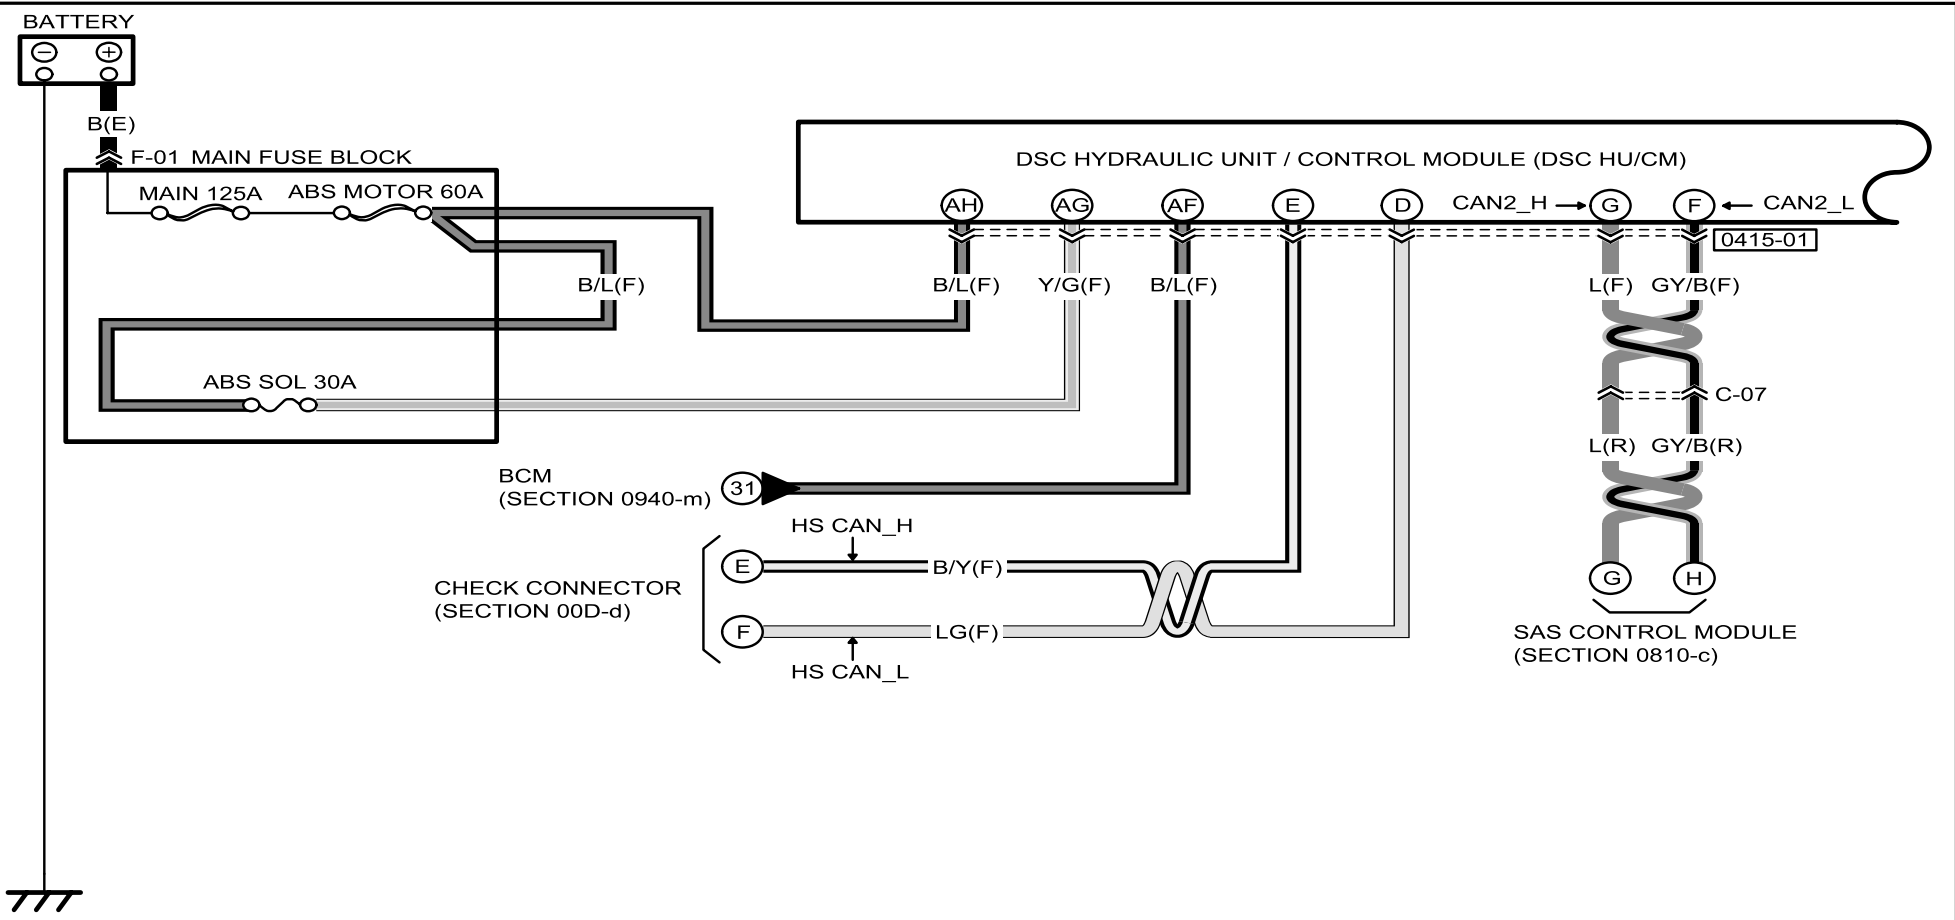

0415-01
DSC HU/CM

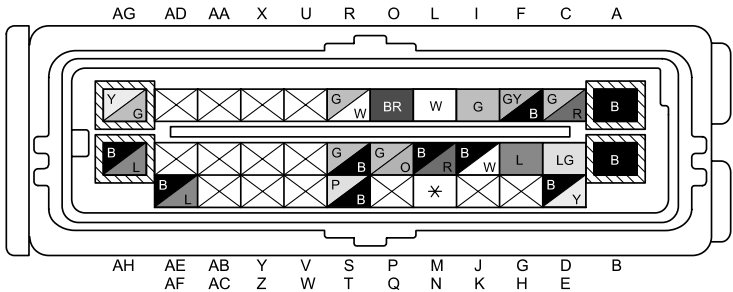


[GRAY]
DSC HU/CM
0415-01

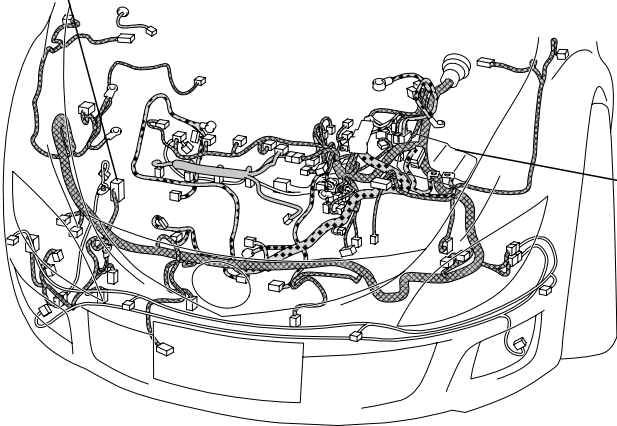

[EXCEPT MZR-CD 2.2]


[GRAY]
DSC HU/CM
0415-01

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

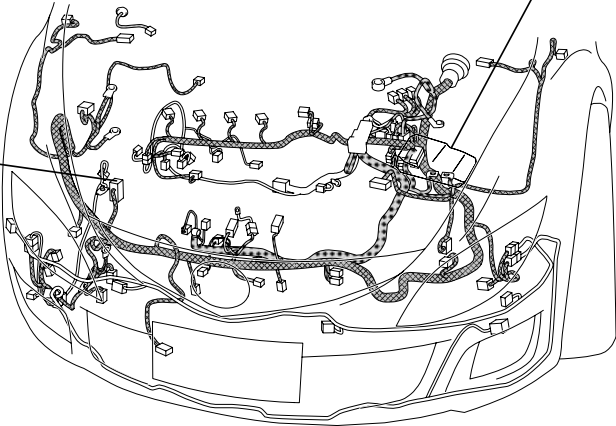


[MZR-CD 2.2]


(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01

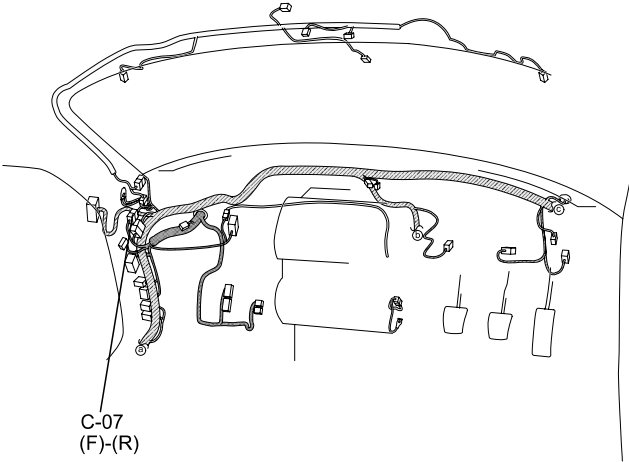


- [Hatched pattern] : REAR HARNESS
- [White box] : INTERIOR LIGHT NO.2 HARNESS
- [Cross-hatched pattern] : FRONT HARNESS
- [Dotted pattern] : ENGINE HARNESS
- [Solid gray box] : INJECTION HARNESS

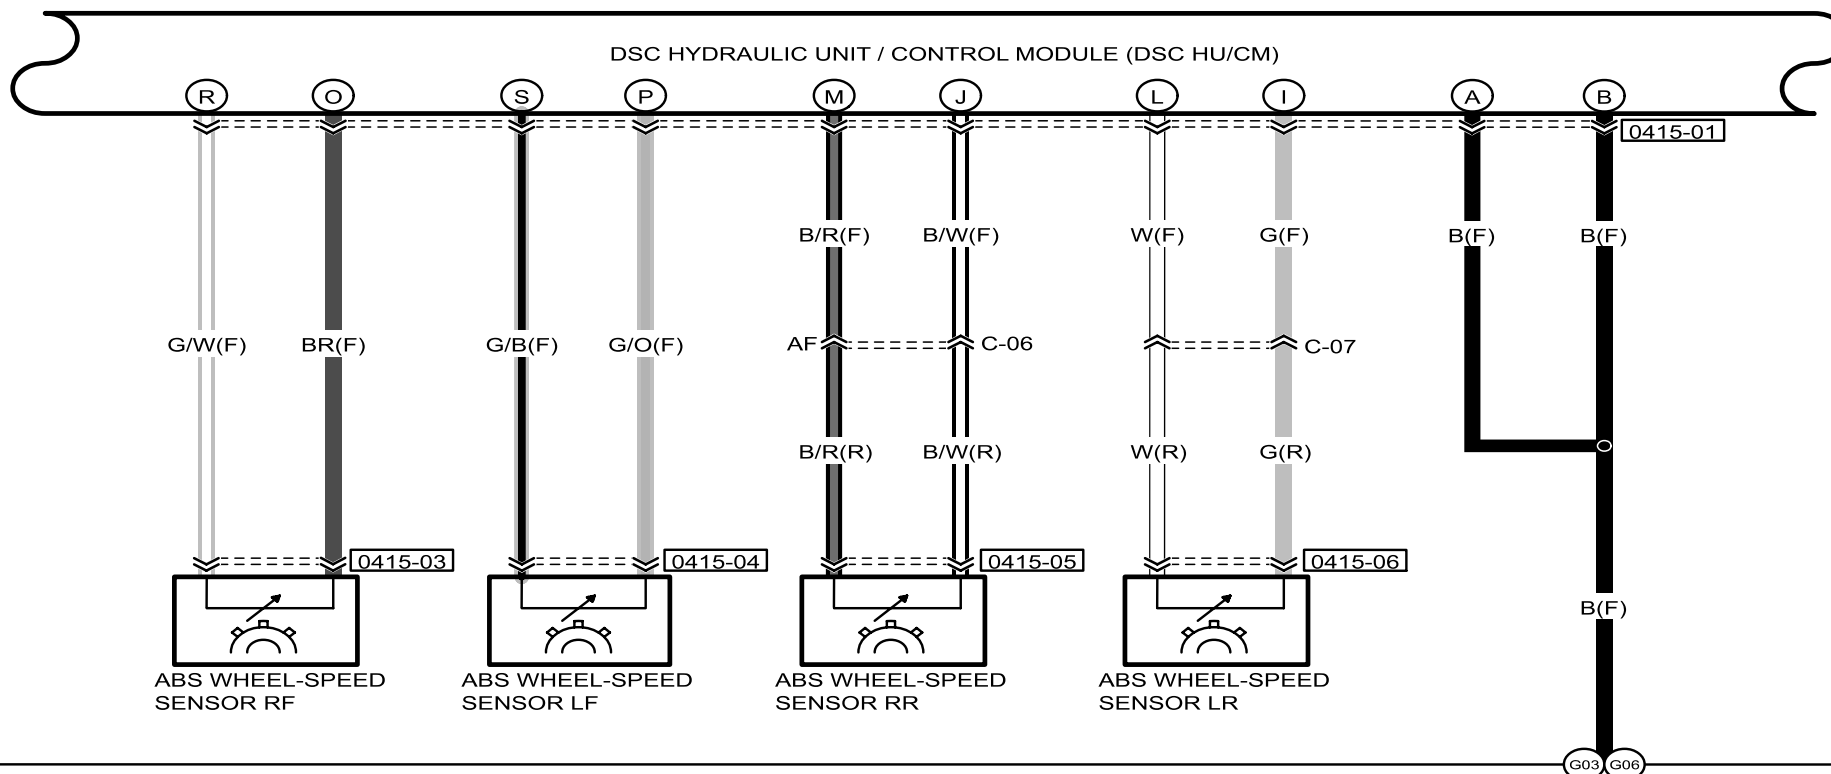


0415-01
DSC HU/CM

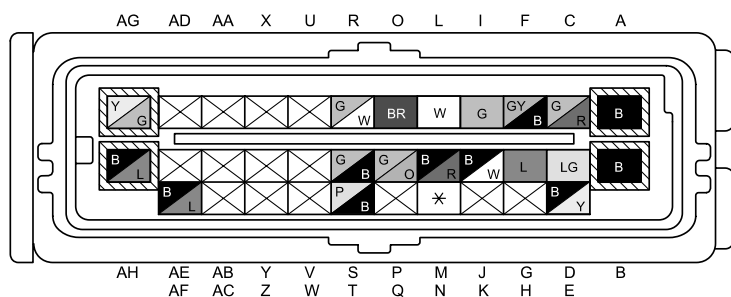


0415-03
ABS WHEEL-SPEED
SENSOR RF

 


0415-04
ABS WHEEL-SPEED
SENSOR LF






 


0415-05
ABS WHEEL-SPEED
SENSOR RR

 


0415-06	ABS WHEEL-SPEED SENSOR LR
---------	------------------------------

 


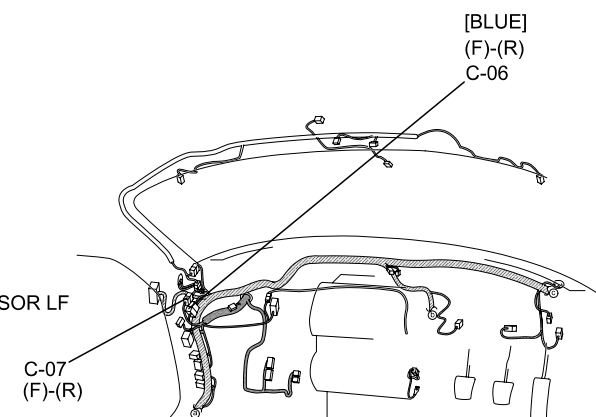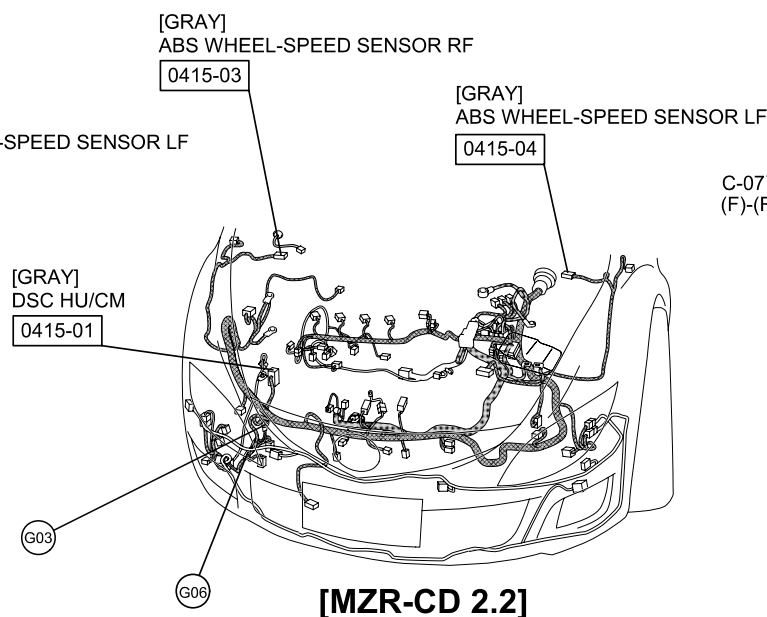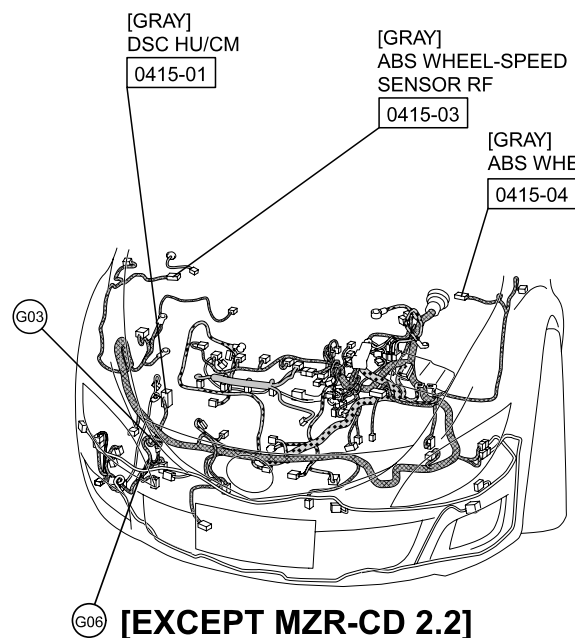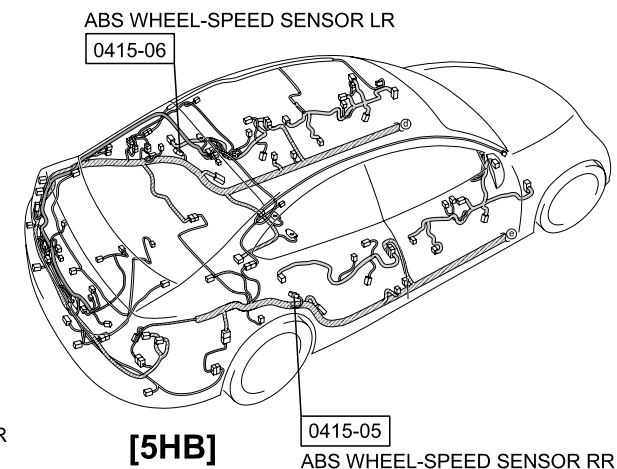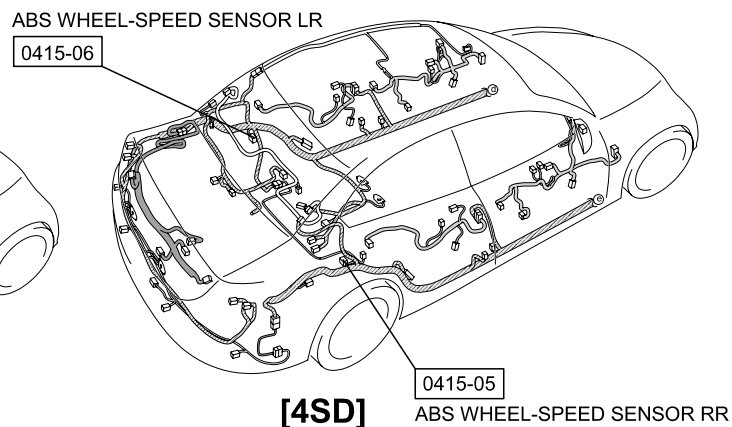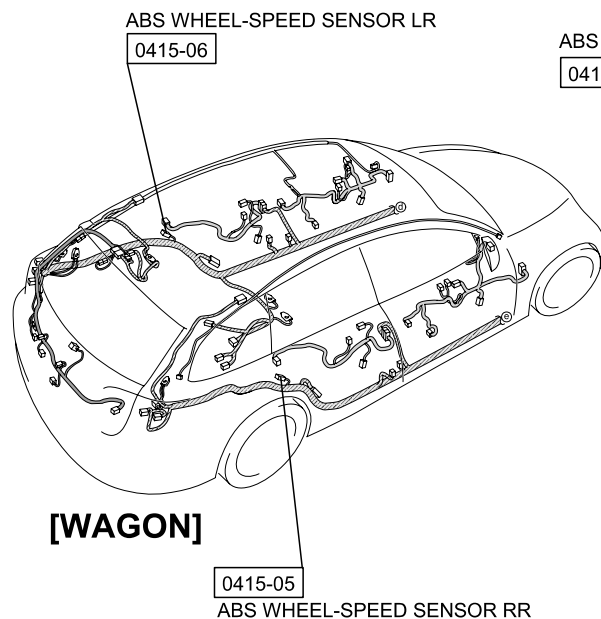


	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.3 HARNESS
	: REAR NO.4 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

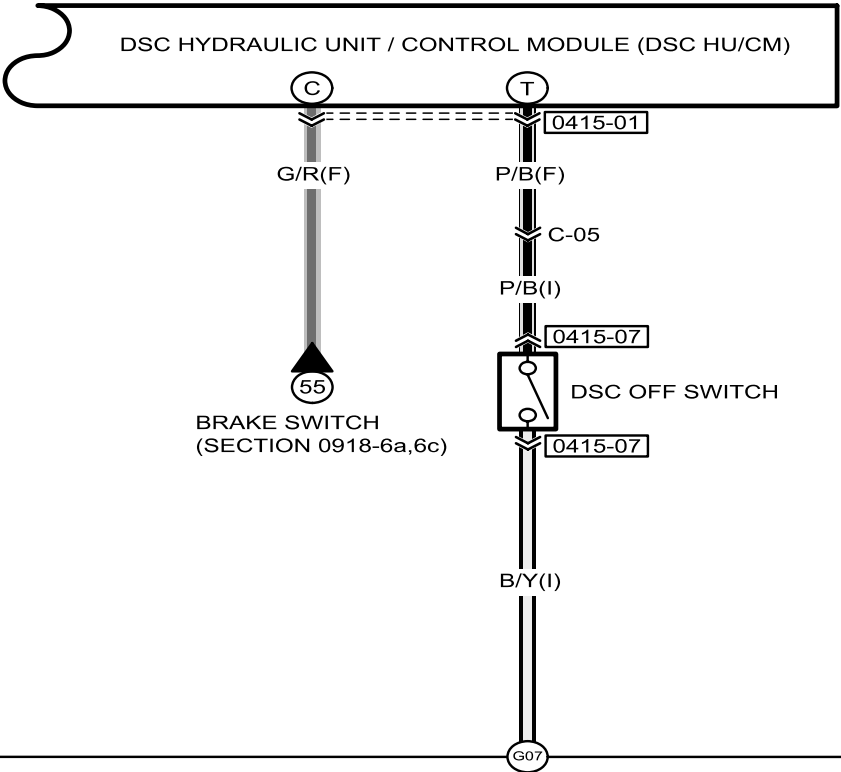


0415-01
DSC HU/CM

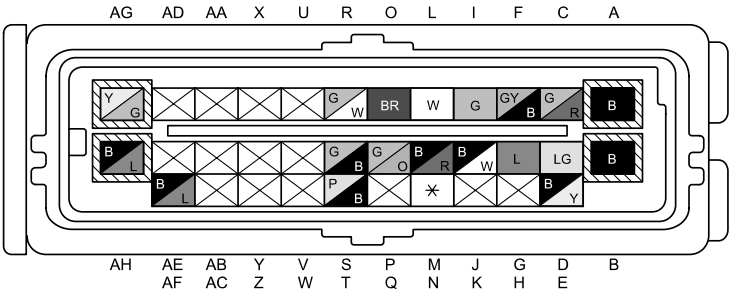

0415-07
DSC OFF SWITCH /
AFS OFF SWITCH /
DSC OFF SWITCH ILLUMINATION /
AFS OFF SWITCH ILLUMINATION

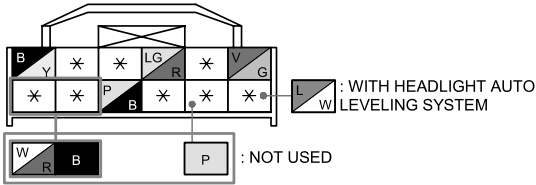


[GRAY]
DSC HU/CM
0415-01

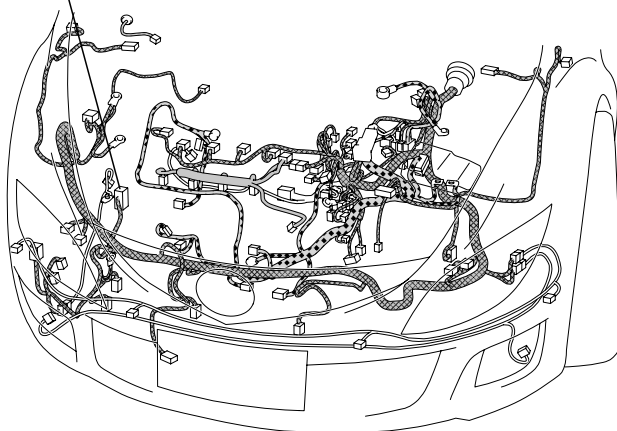


[EXCEPT MZR-CD 2.2]

[GRAY]
DSC HU/CM
0415-01

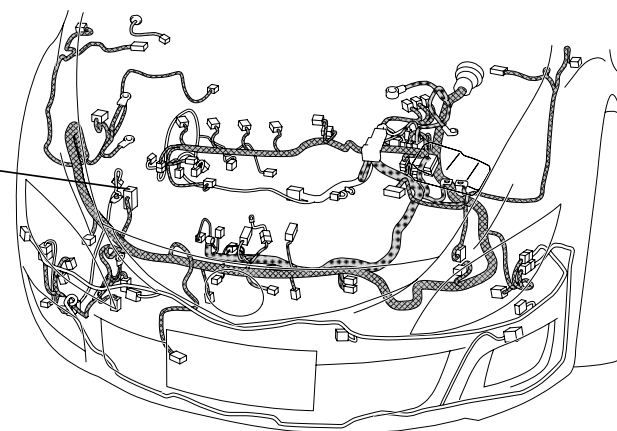


[MZR-CD 2.2]

[GRAY]
(F)-(I)
C-05

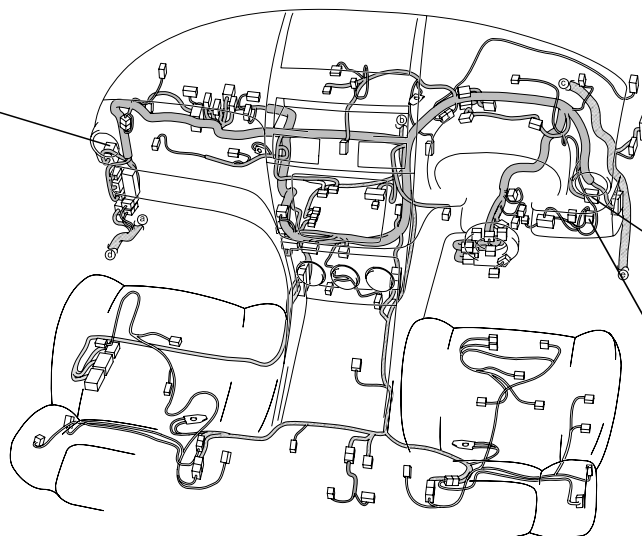


[GRAY]
(F)-(I)
C-05

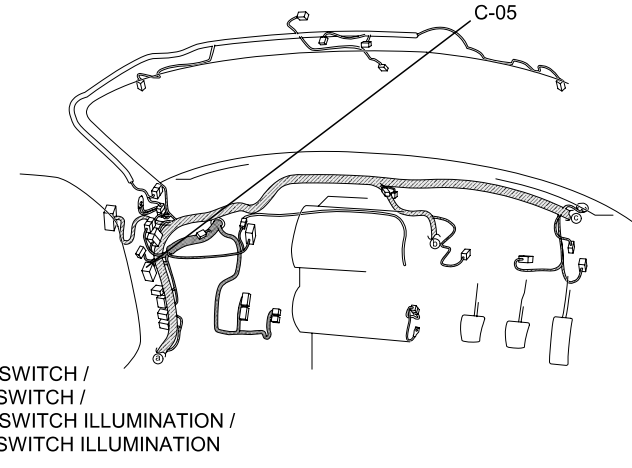


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

0415-07


DSC OFF SWITCH /
AFS OFF SWITCH /
DSC OFF SWITCH ILLUMINATION /
AFS OFF SWITCH ILLUMINATION

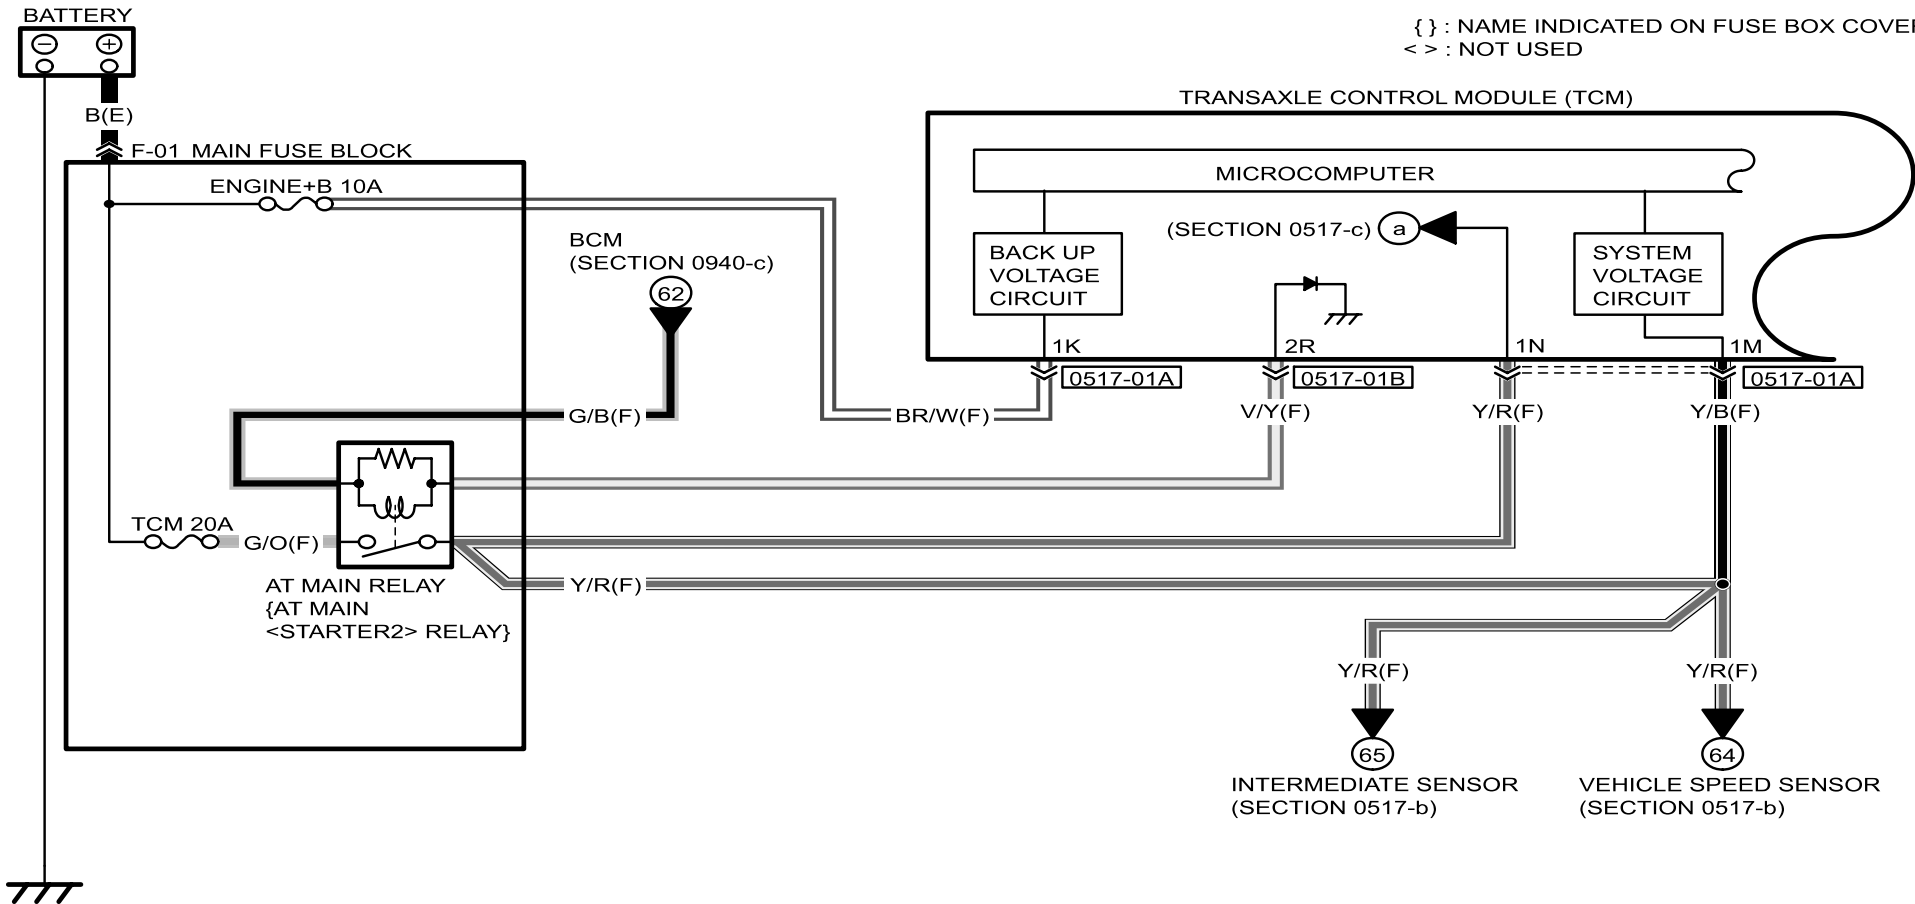


0517-01A
TCM

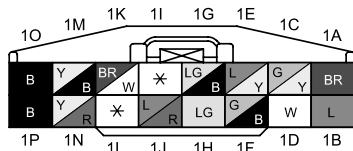



0517-01B
TCM


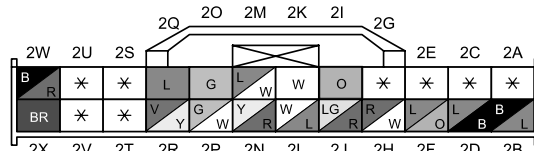


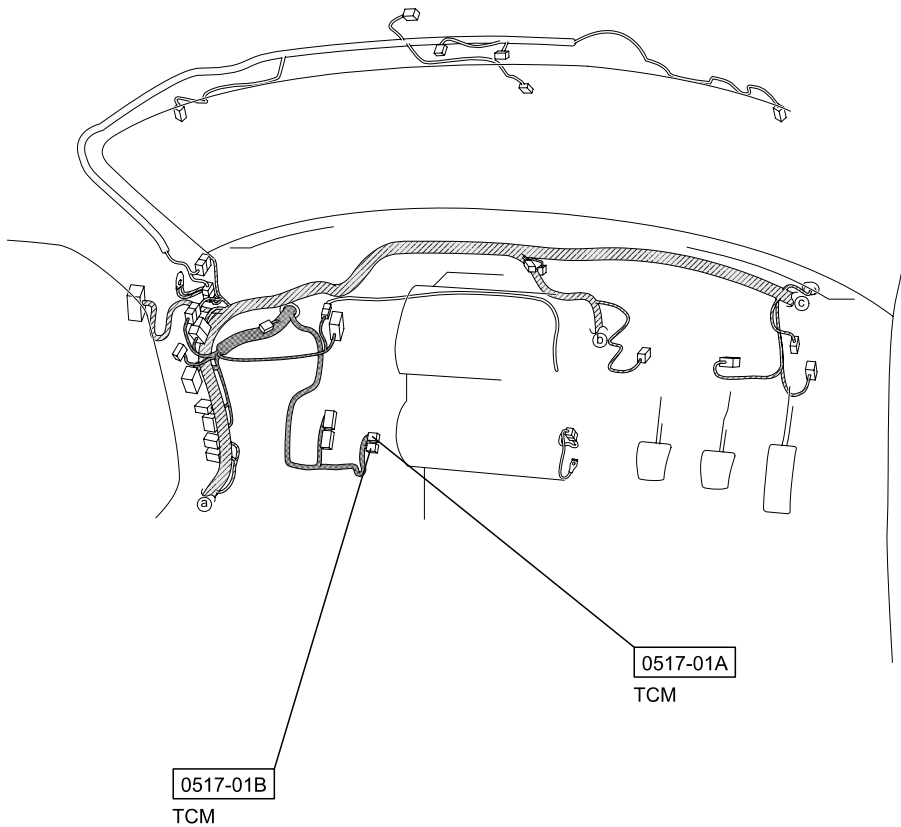


- : FRONT HARNESS
- : ENGINE HARNESS
- : INJECTION HARNESS
- : REAR HARNESS
- : INTERIOR LIGHT NO.2 HARNESS





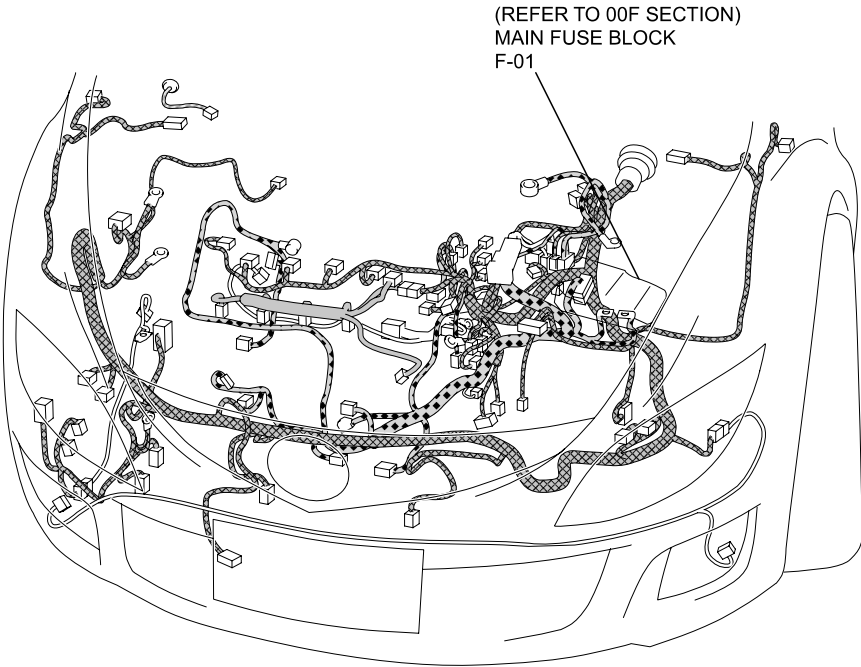


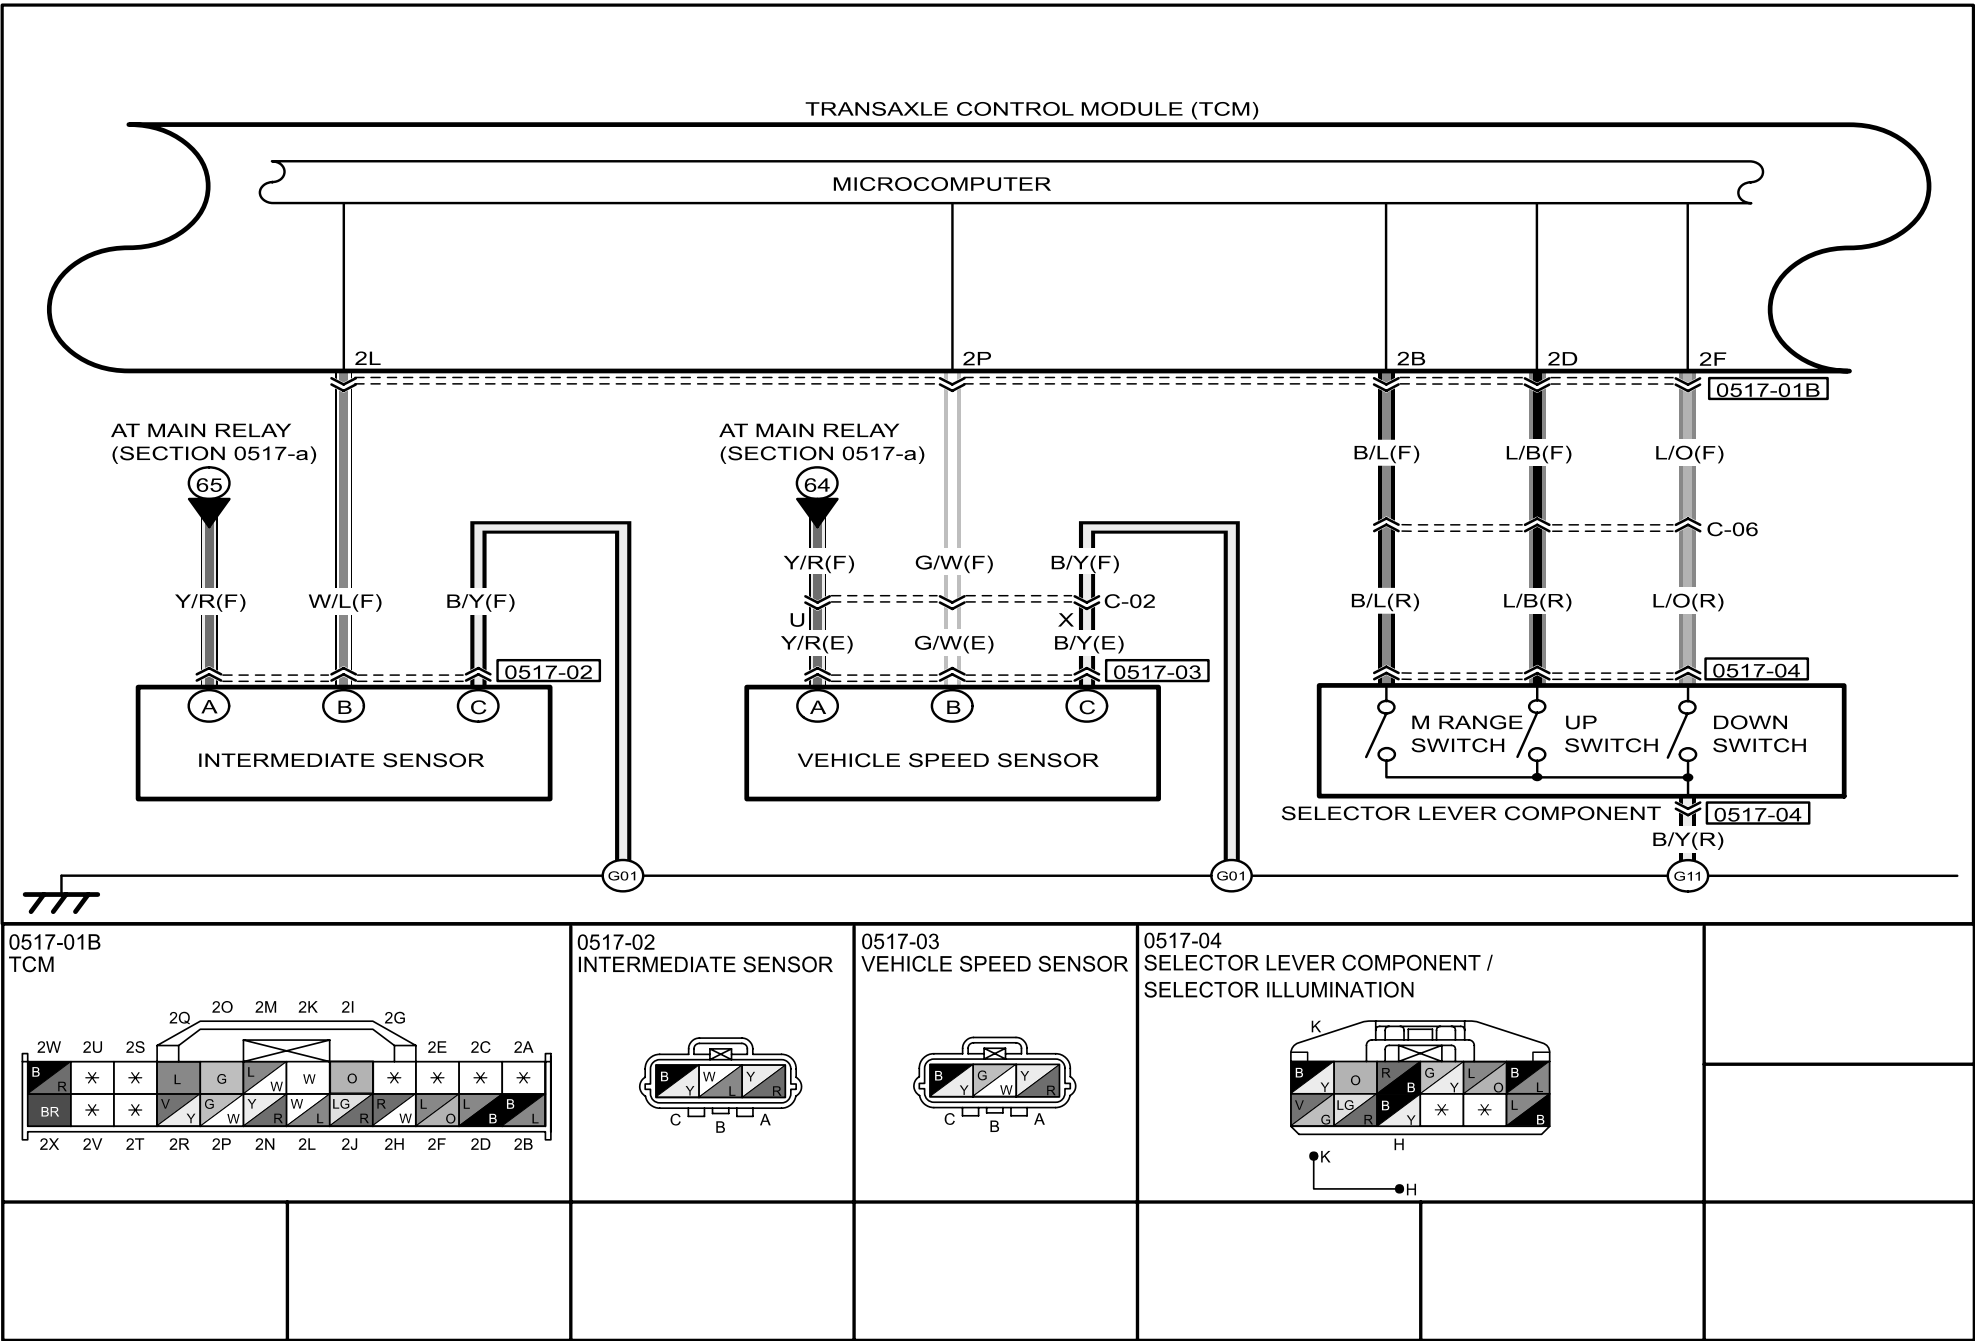


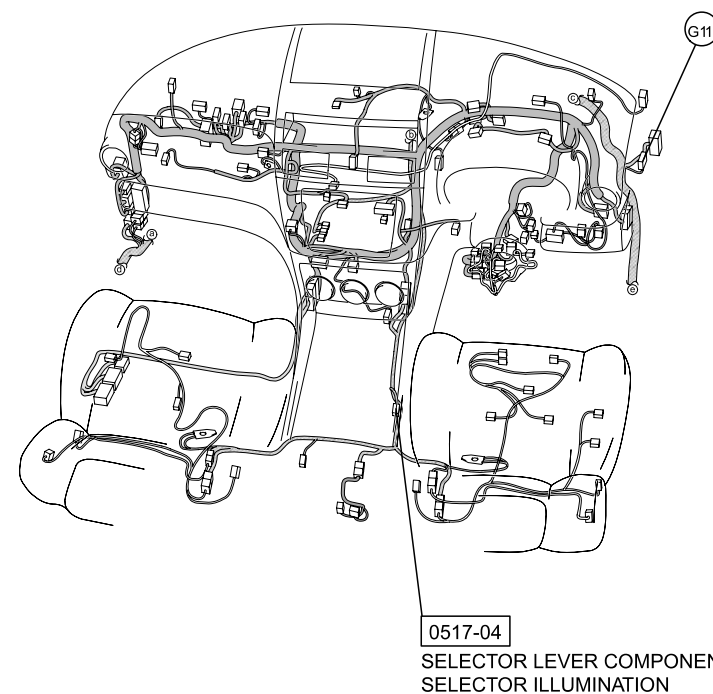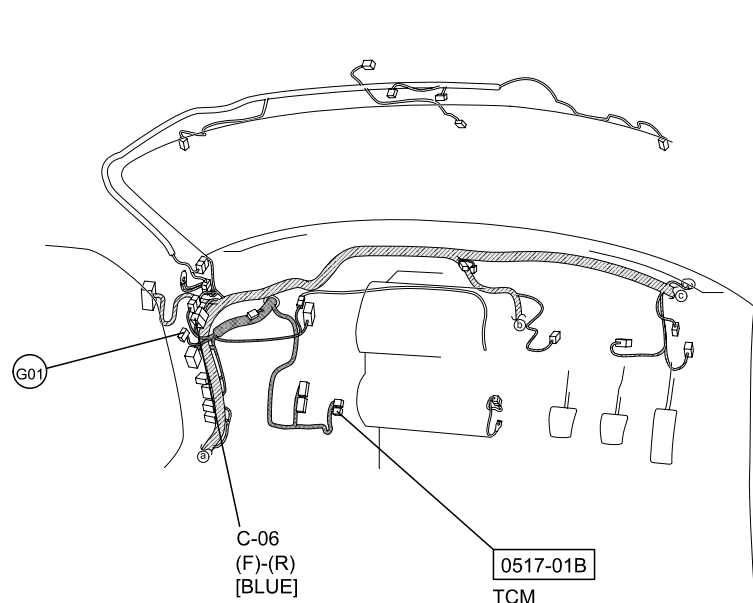

	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

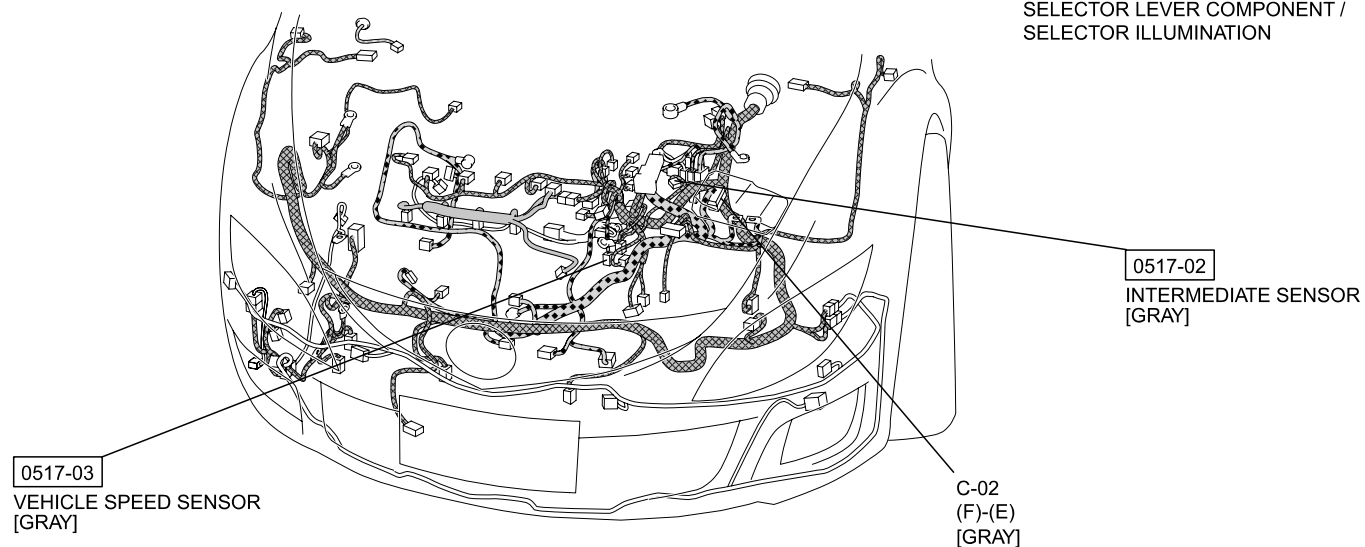

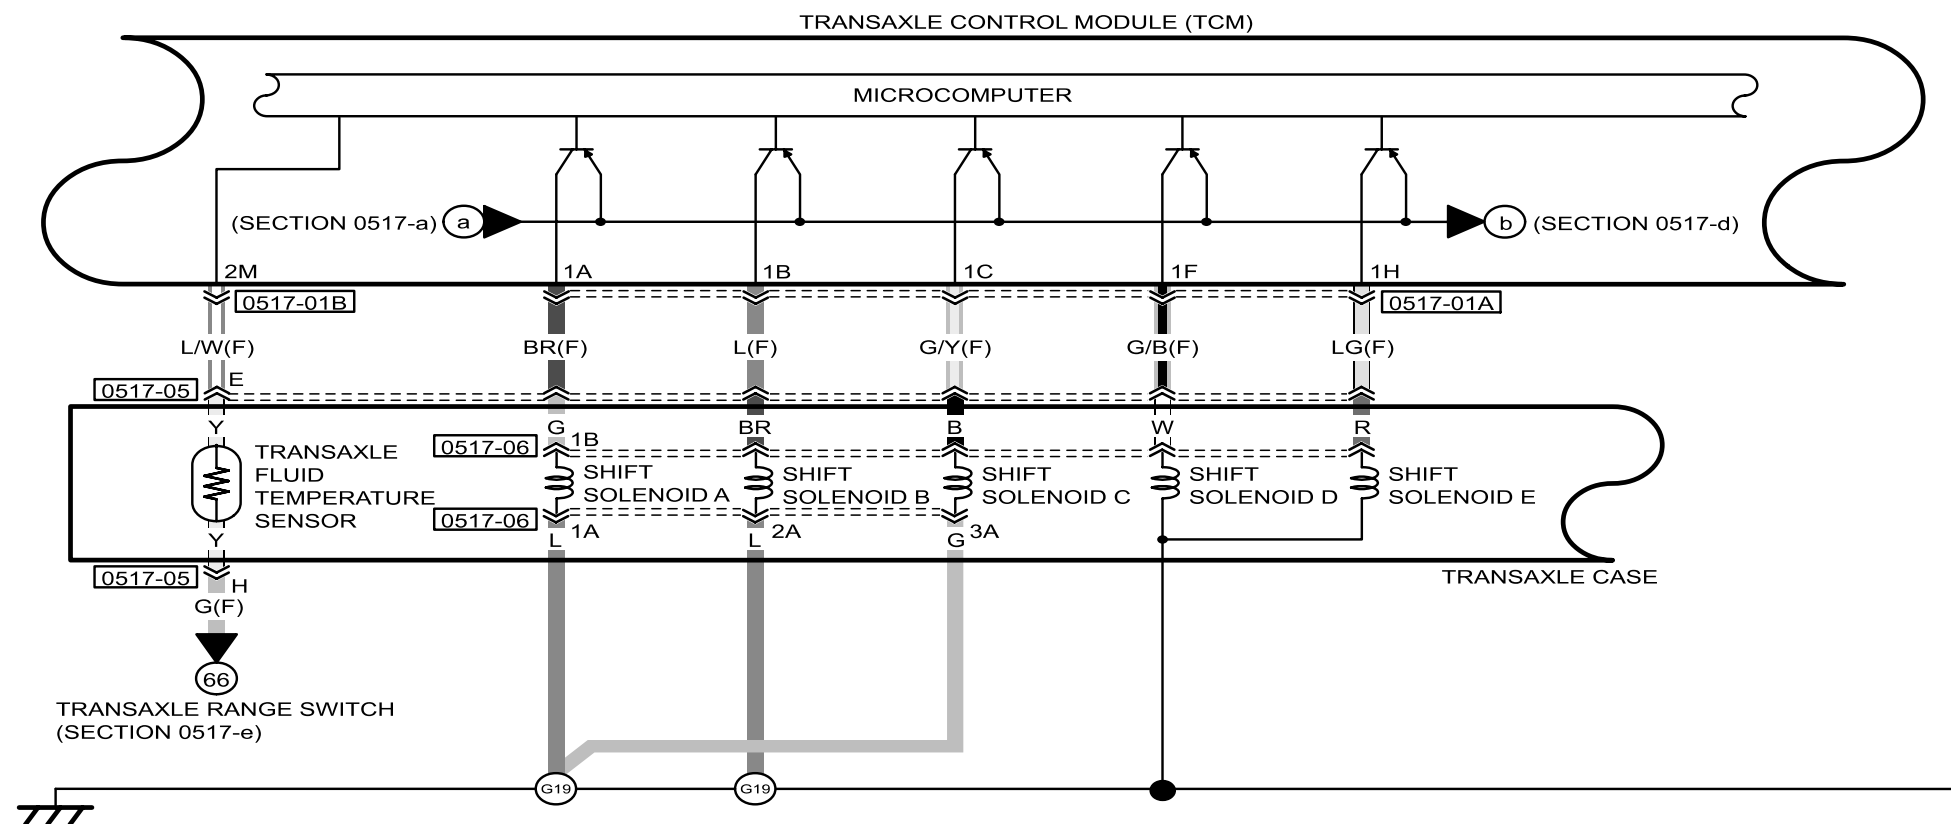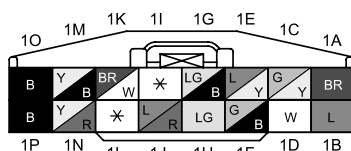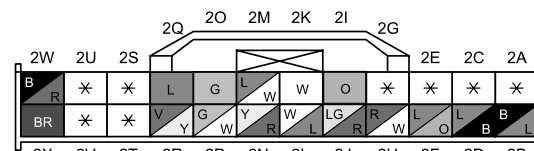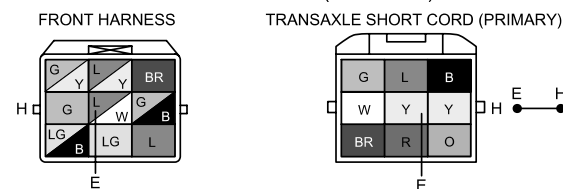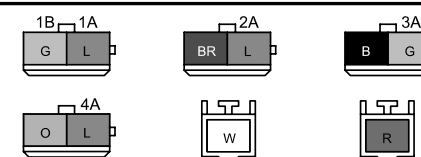0517-01A
TCM0517-01B
TCM0517-05
FRONT HARNESS-TRANSAXLE SHORT CORD (PRIMARY)0517-06
SOLENOID VALVE
(TRANSAXLE SHORT
CORD (PRIMARY))

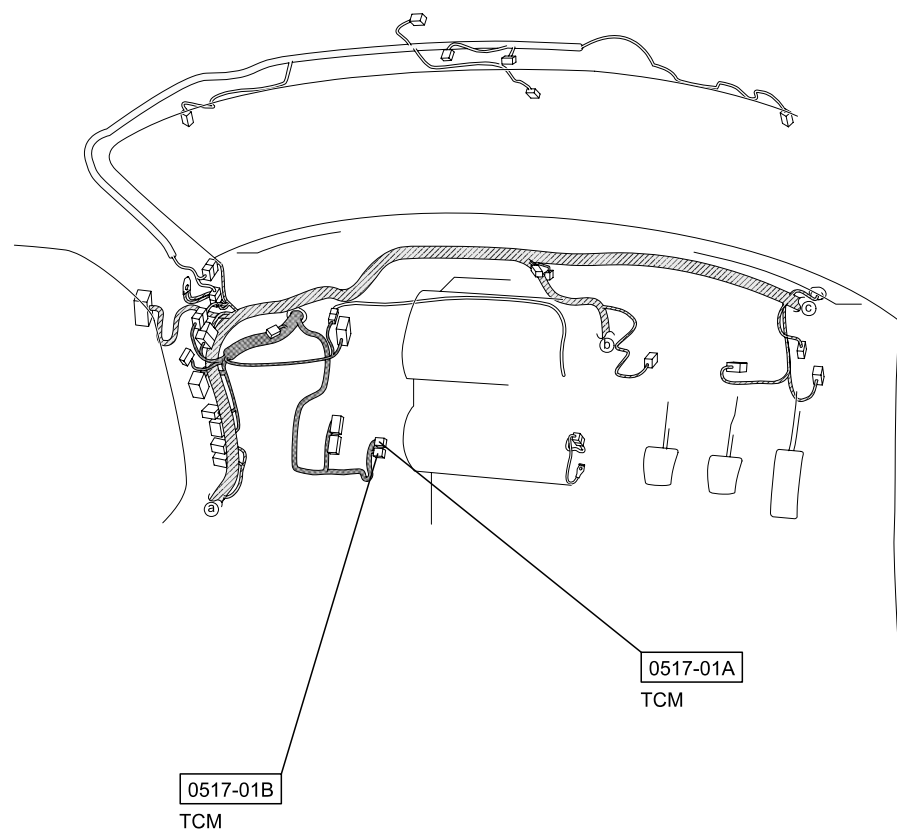

(F)[BLACK]
(F)-TRANSAXLE
SHORT CORD
(PRIMARY)


0517-05





 


 
(F)[BLACK]
(F)-TRANSAXLE
SHORT CORD
(PRIMARY)


0517-05


SOLENOID VALVE
(TRANSAXLE SHORT CORD (PRIMARY))

0517-06

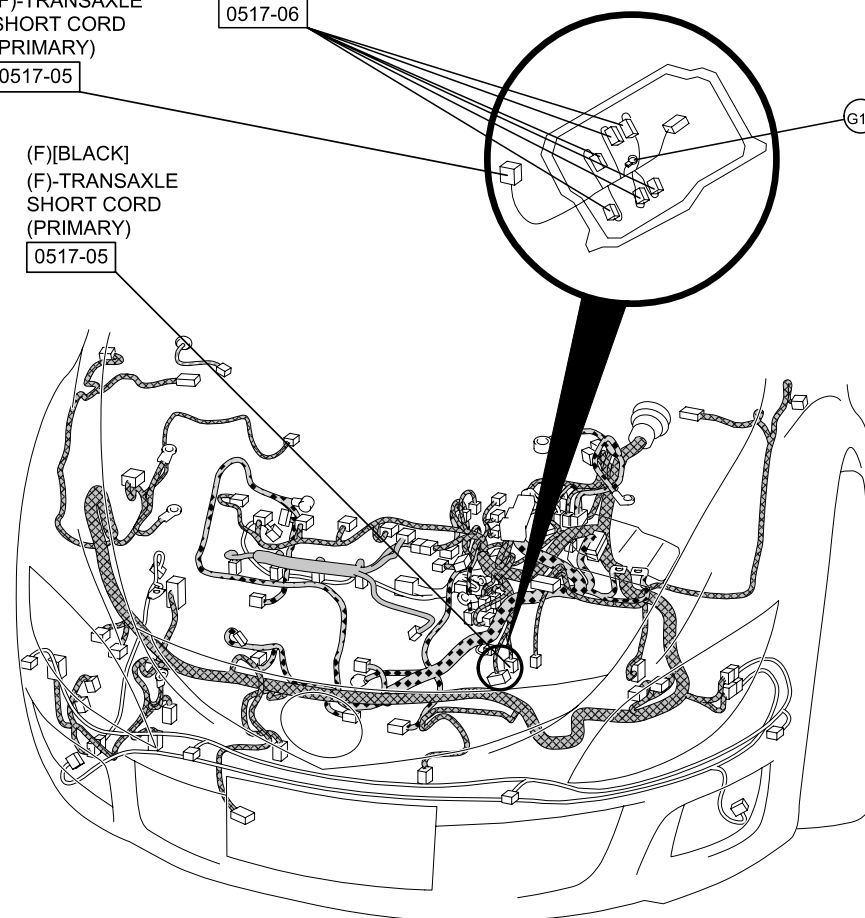


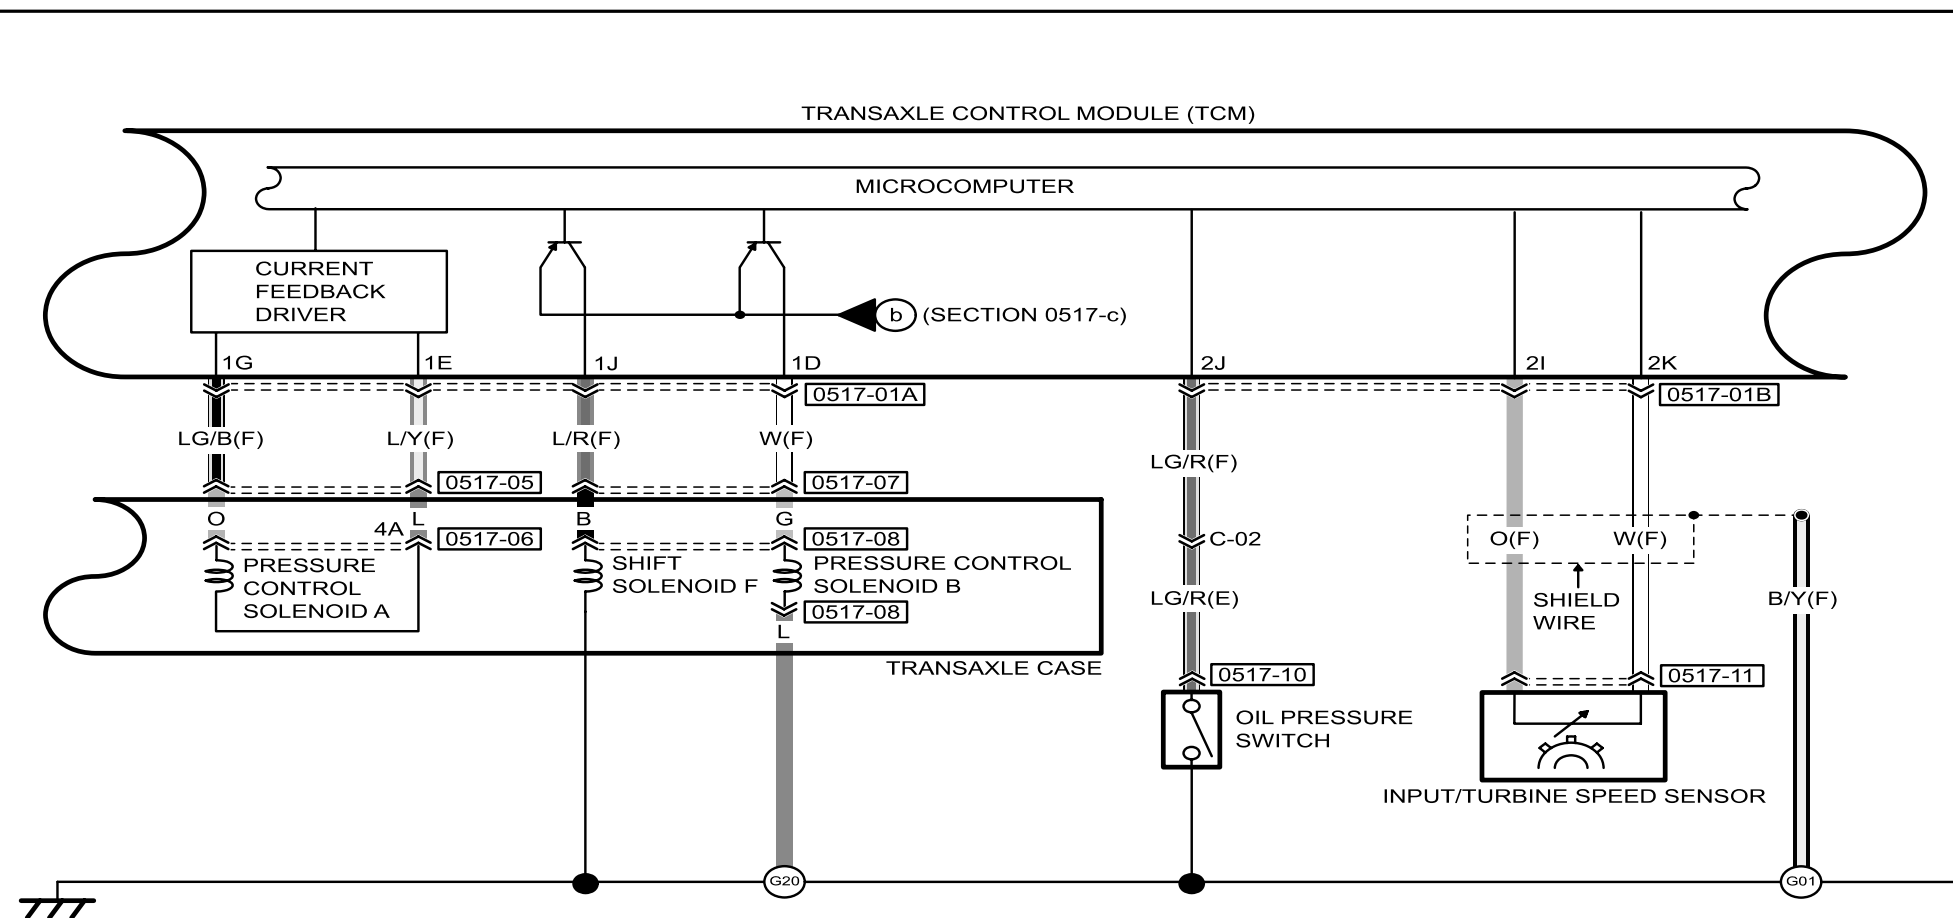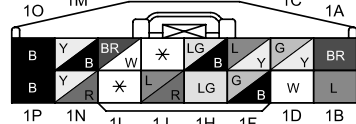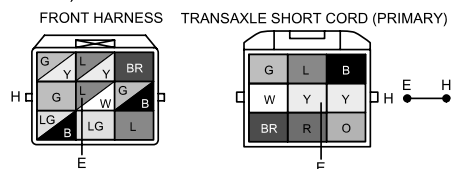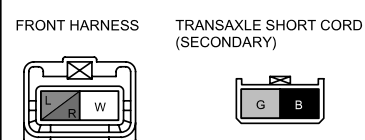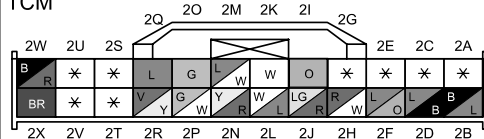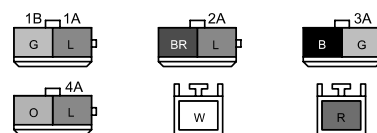0517-01A
TCM0517-05
FRONT HARNESS-TRANSAXLE SHORT CORD (PRIMARY)0517-07
FRONT HARNESS-TRANSAXLE SHORT CORD (SECONDARY)0517-08
SOLENOID VALVE (TRANSAXLE SHORT CORD (SECONDARY))0517-10
OIL PRESSURE SWITCH0517-01B
TCM0517-06
SOLENOID VALVE (TRANSAXLE SHORT CORD (PRIMARY))0517-11
INPUT/TURBINE SPEED SENSOR

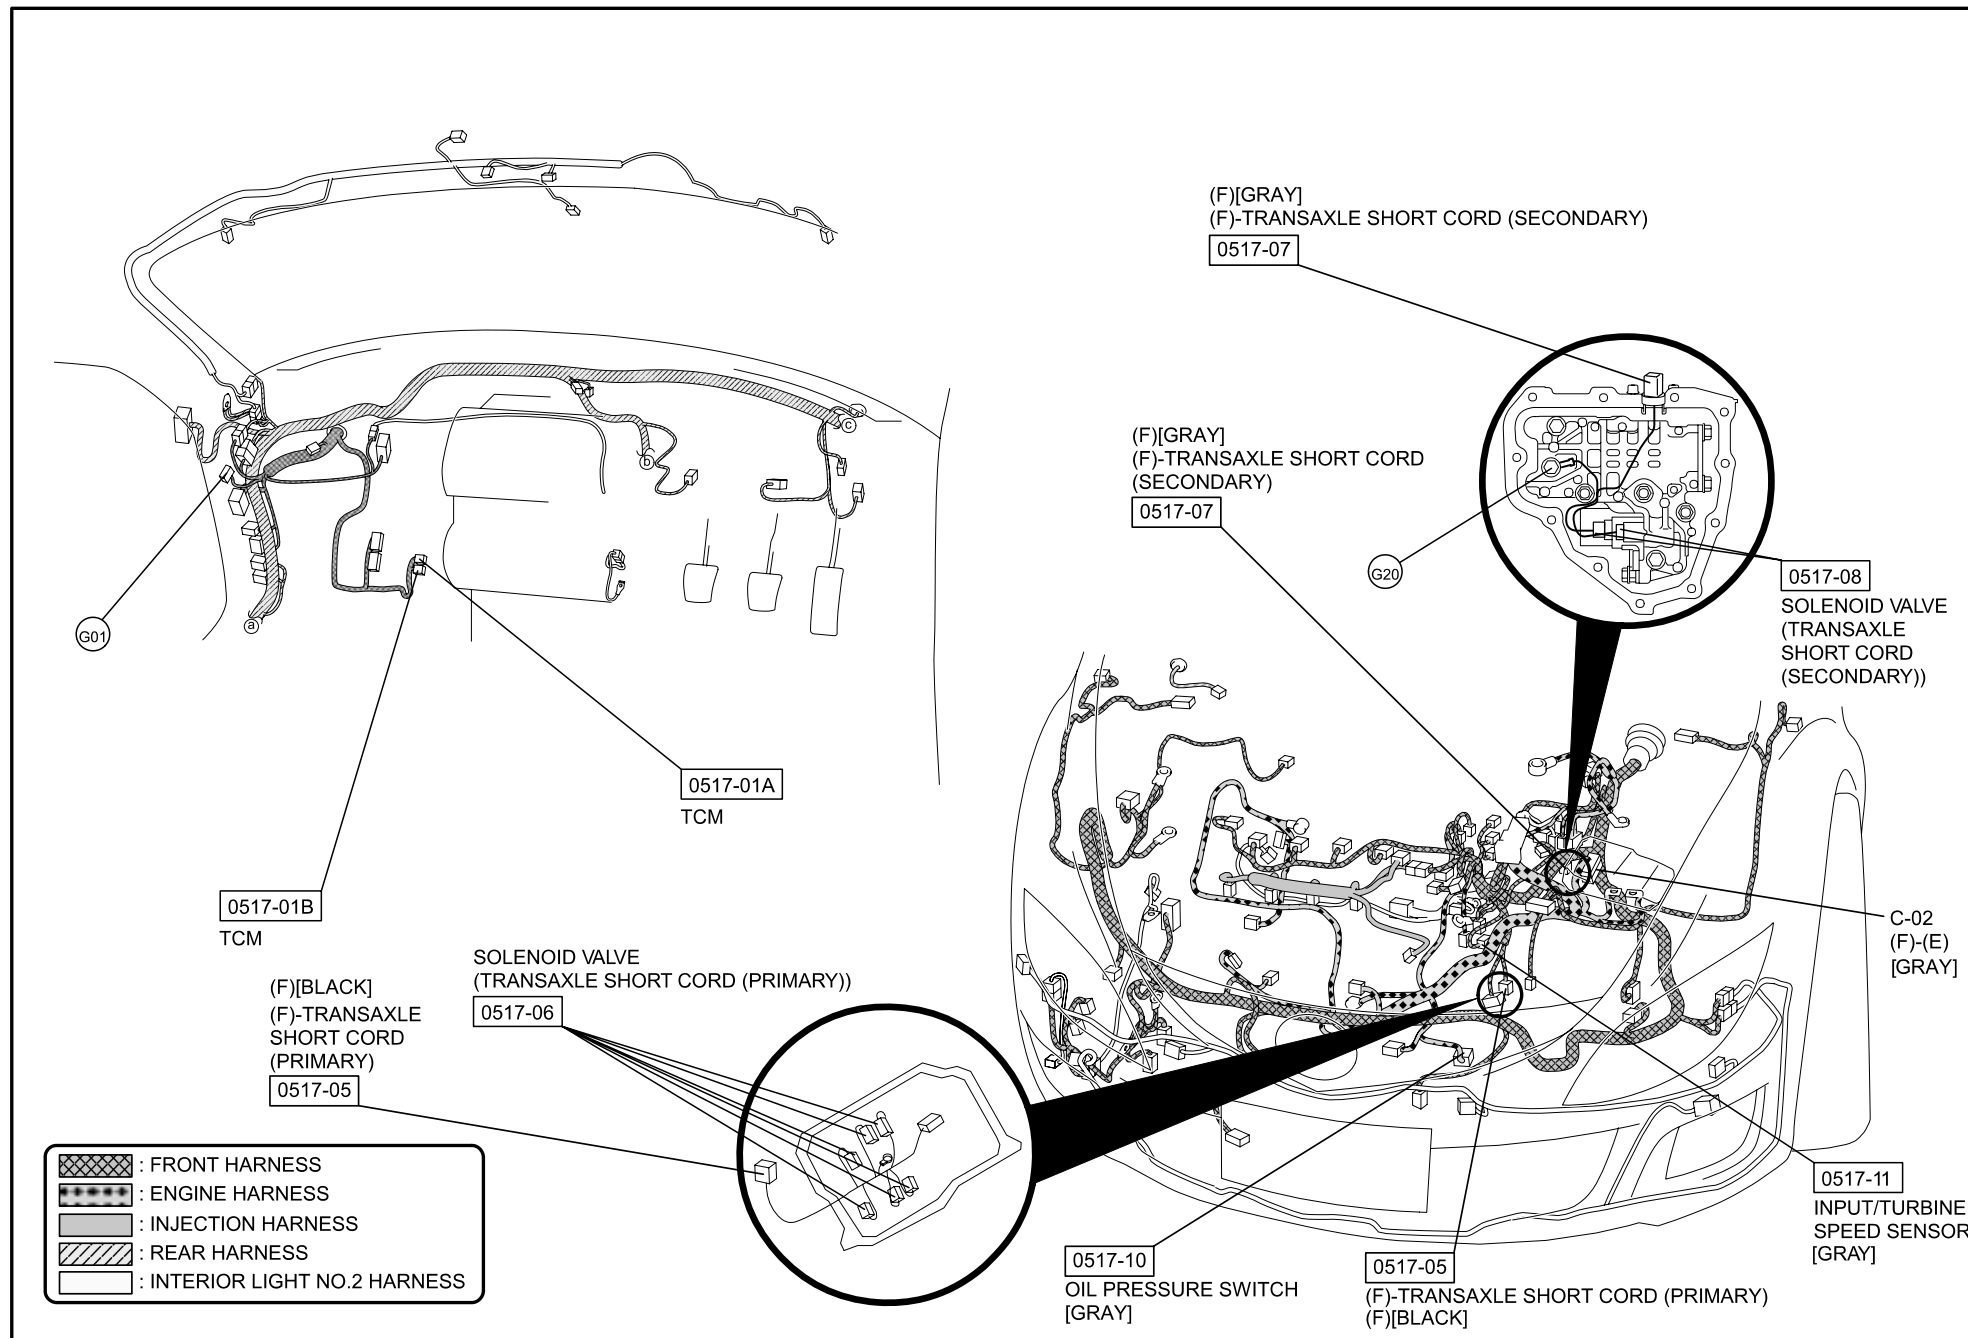


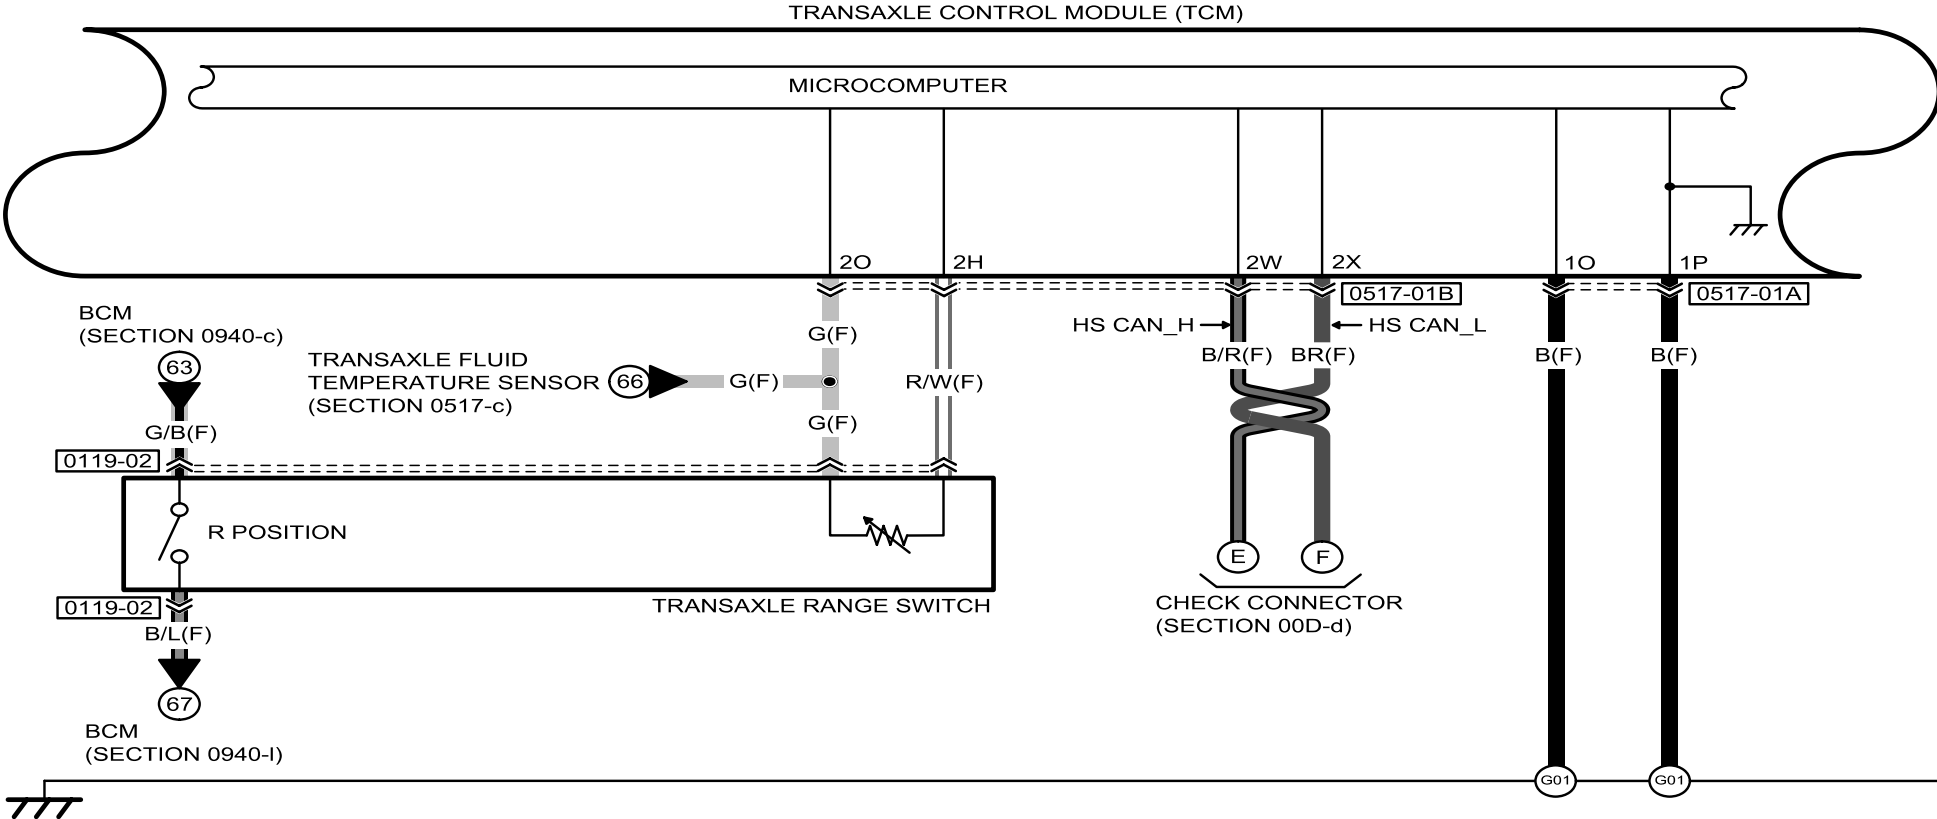


0517-01A
TCM



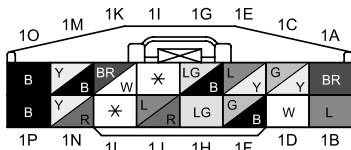



0517-01B
TCM

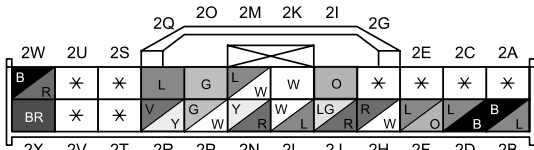


0119-02
TRANSAXLE RANGE SWITCH

 


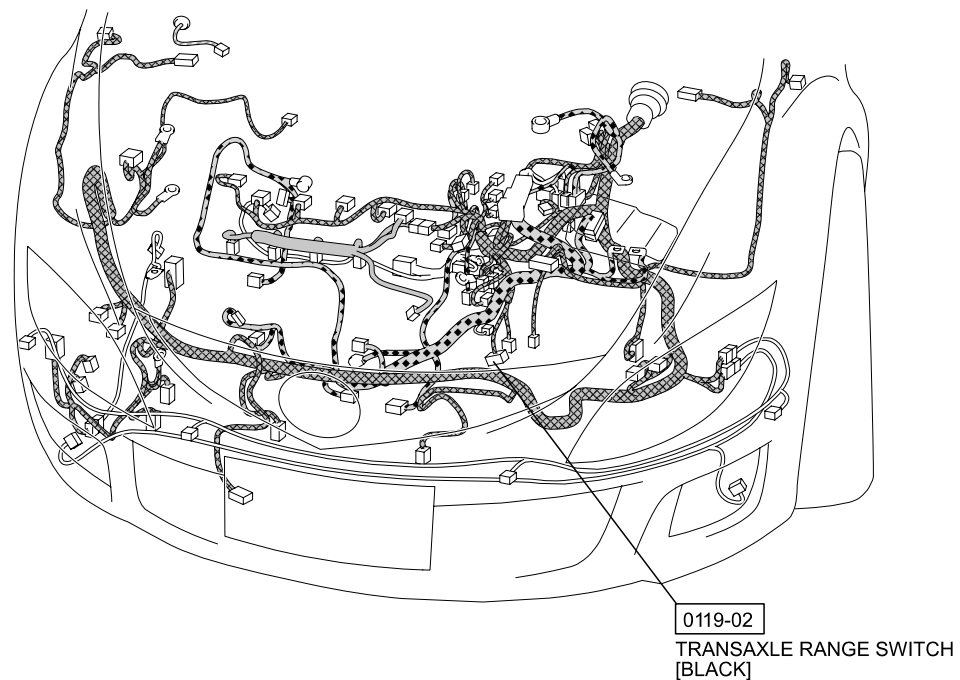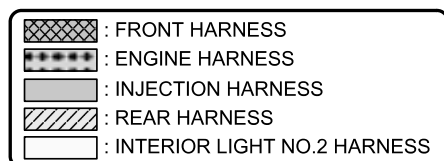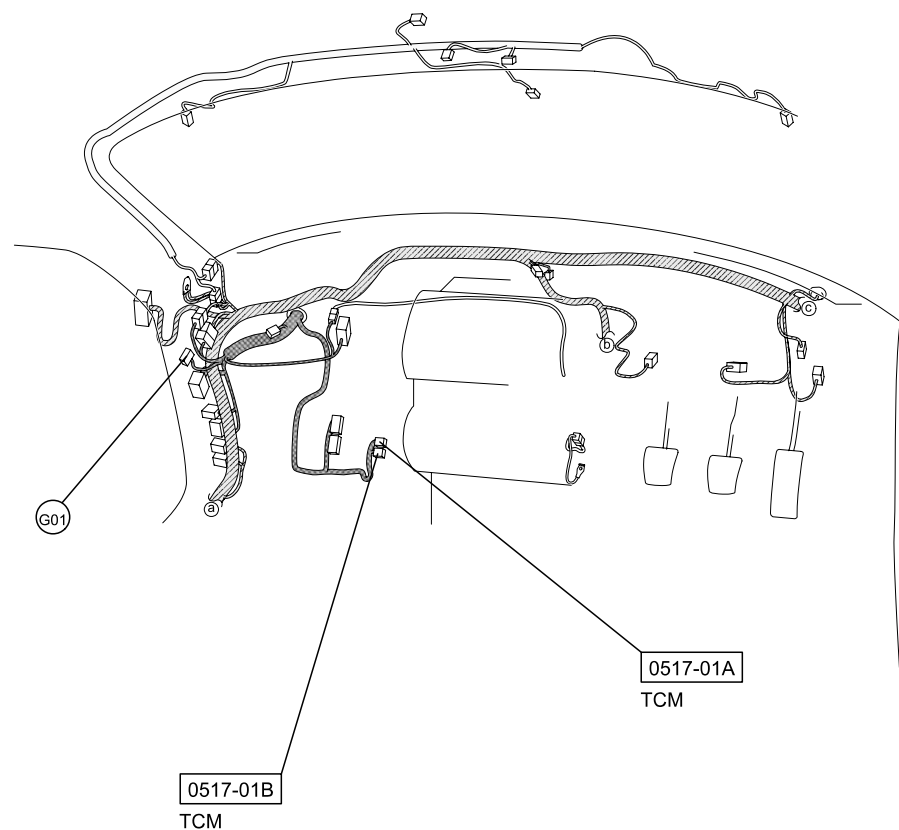

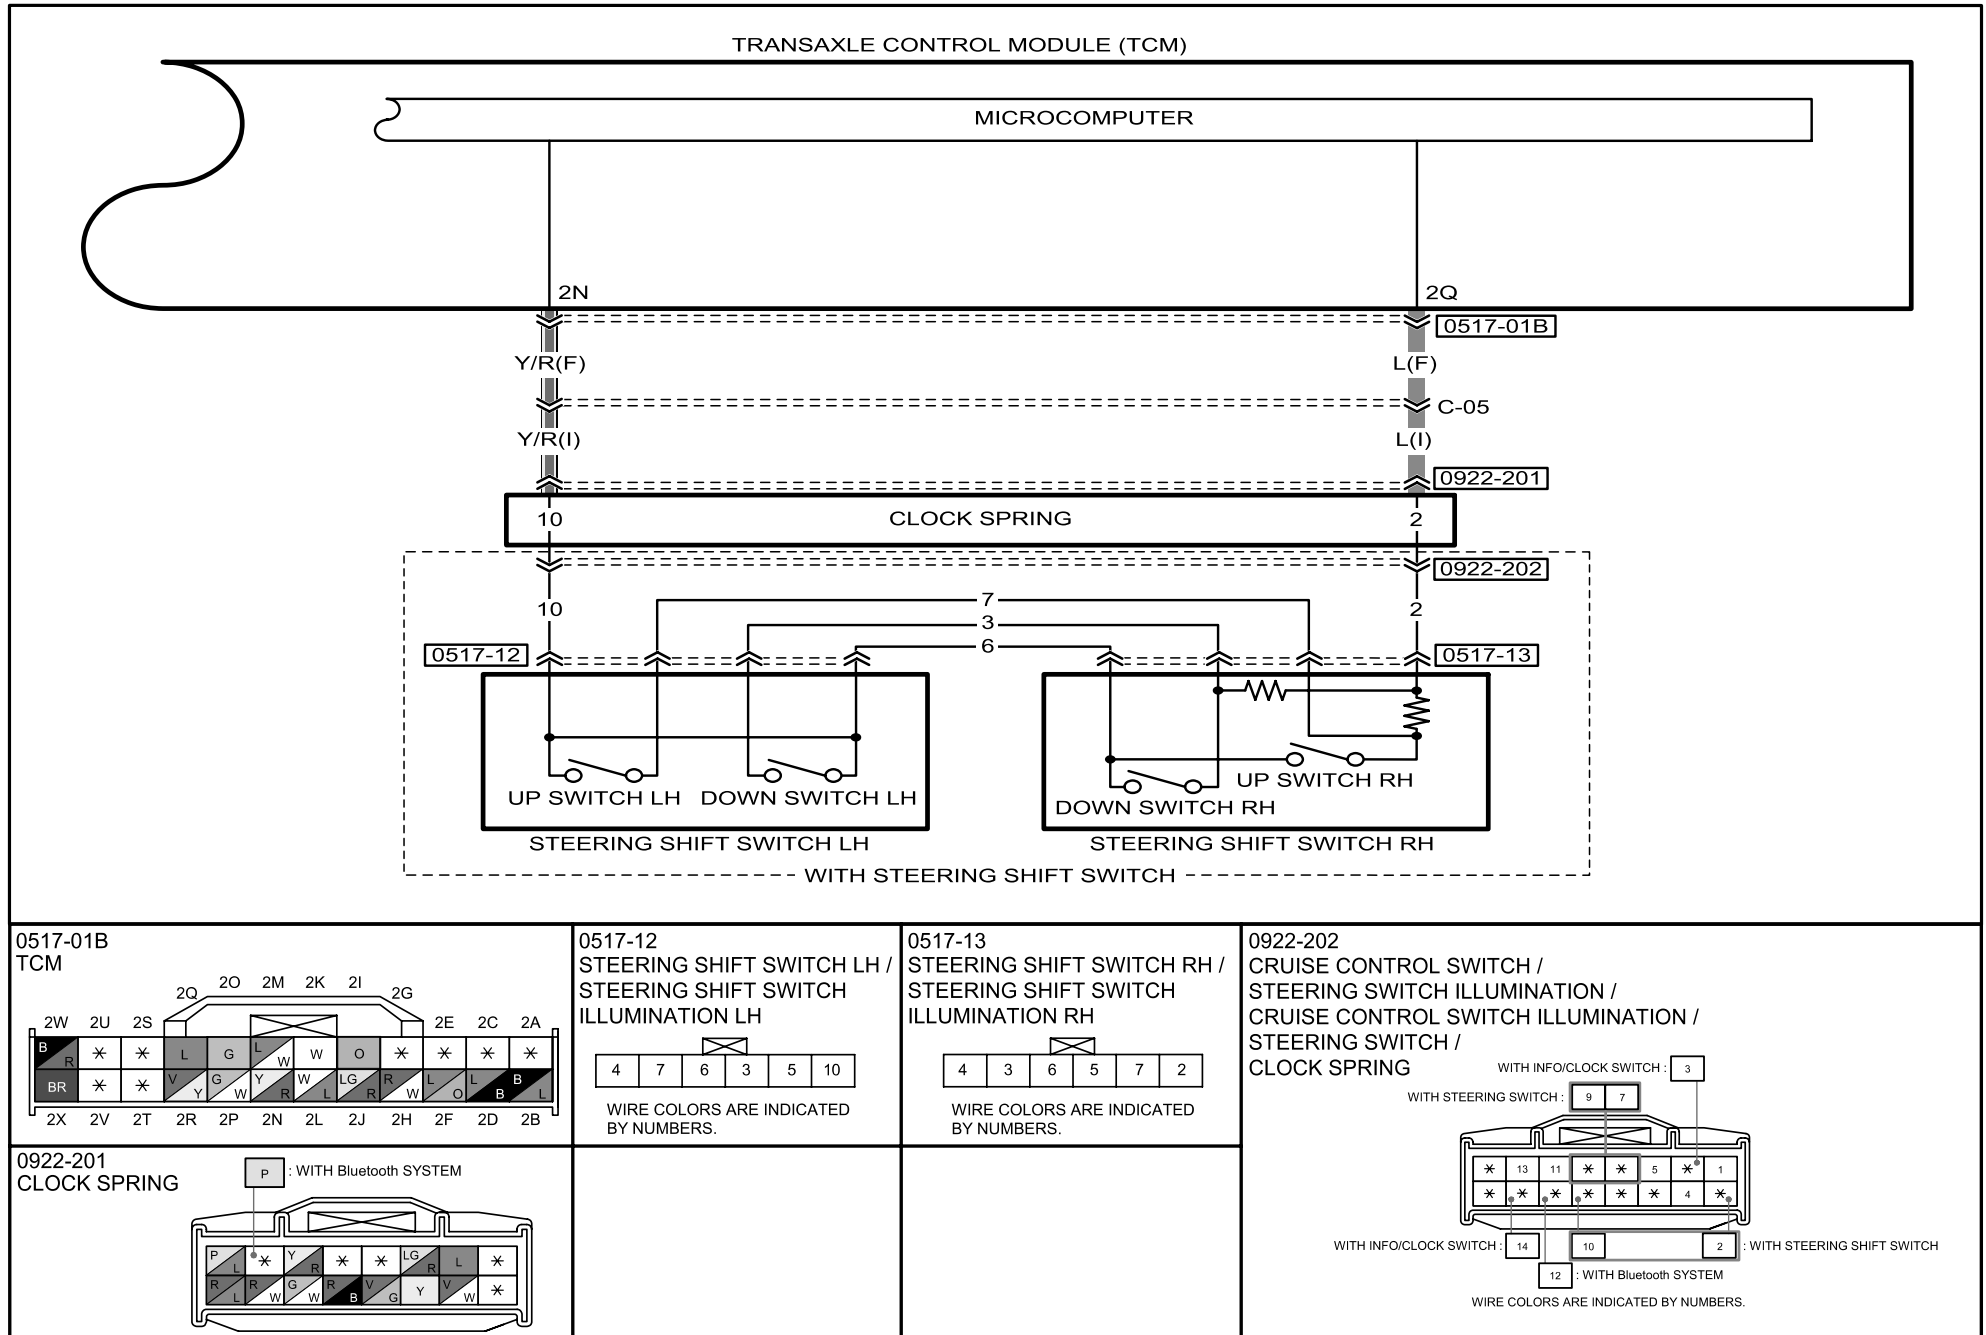

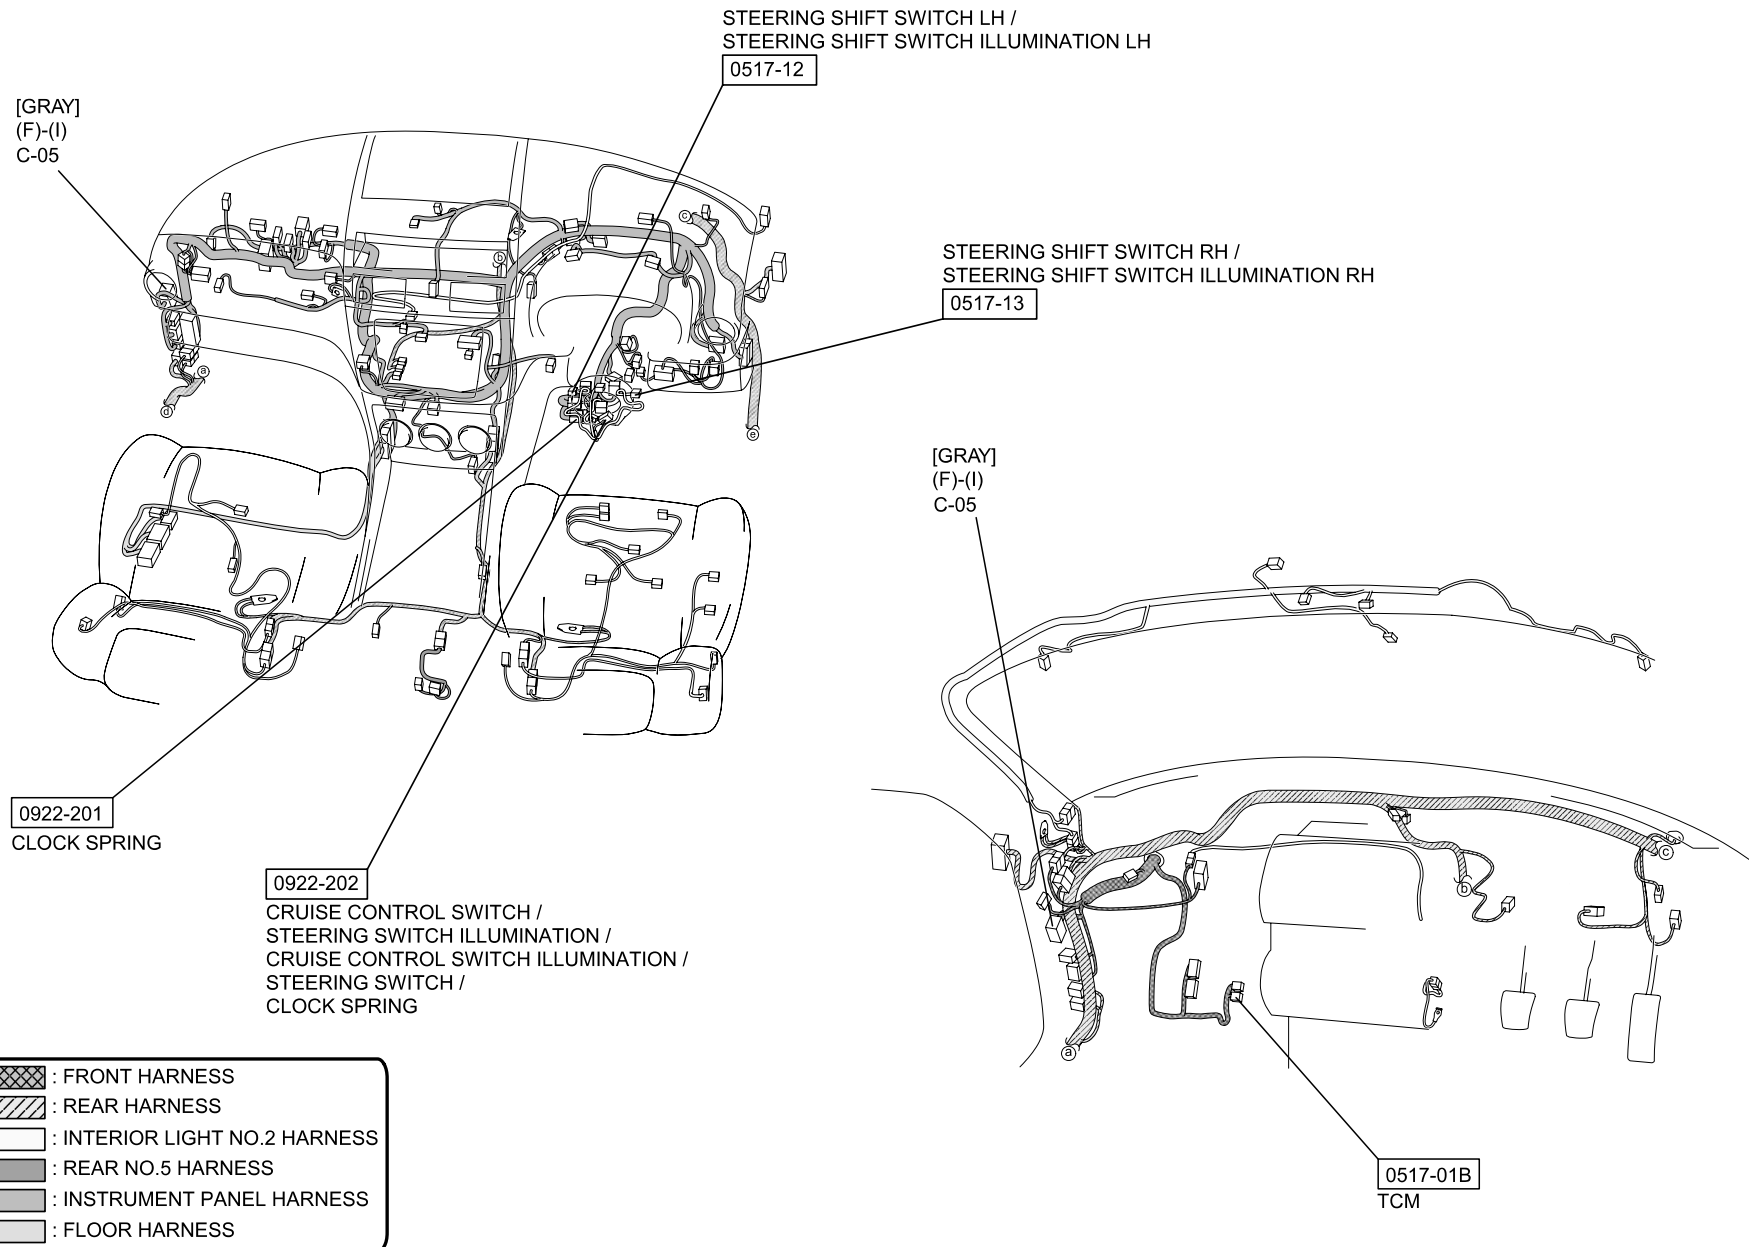

150

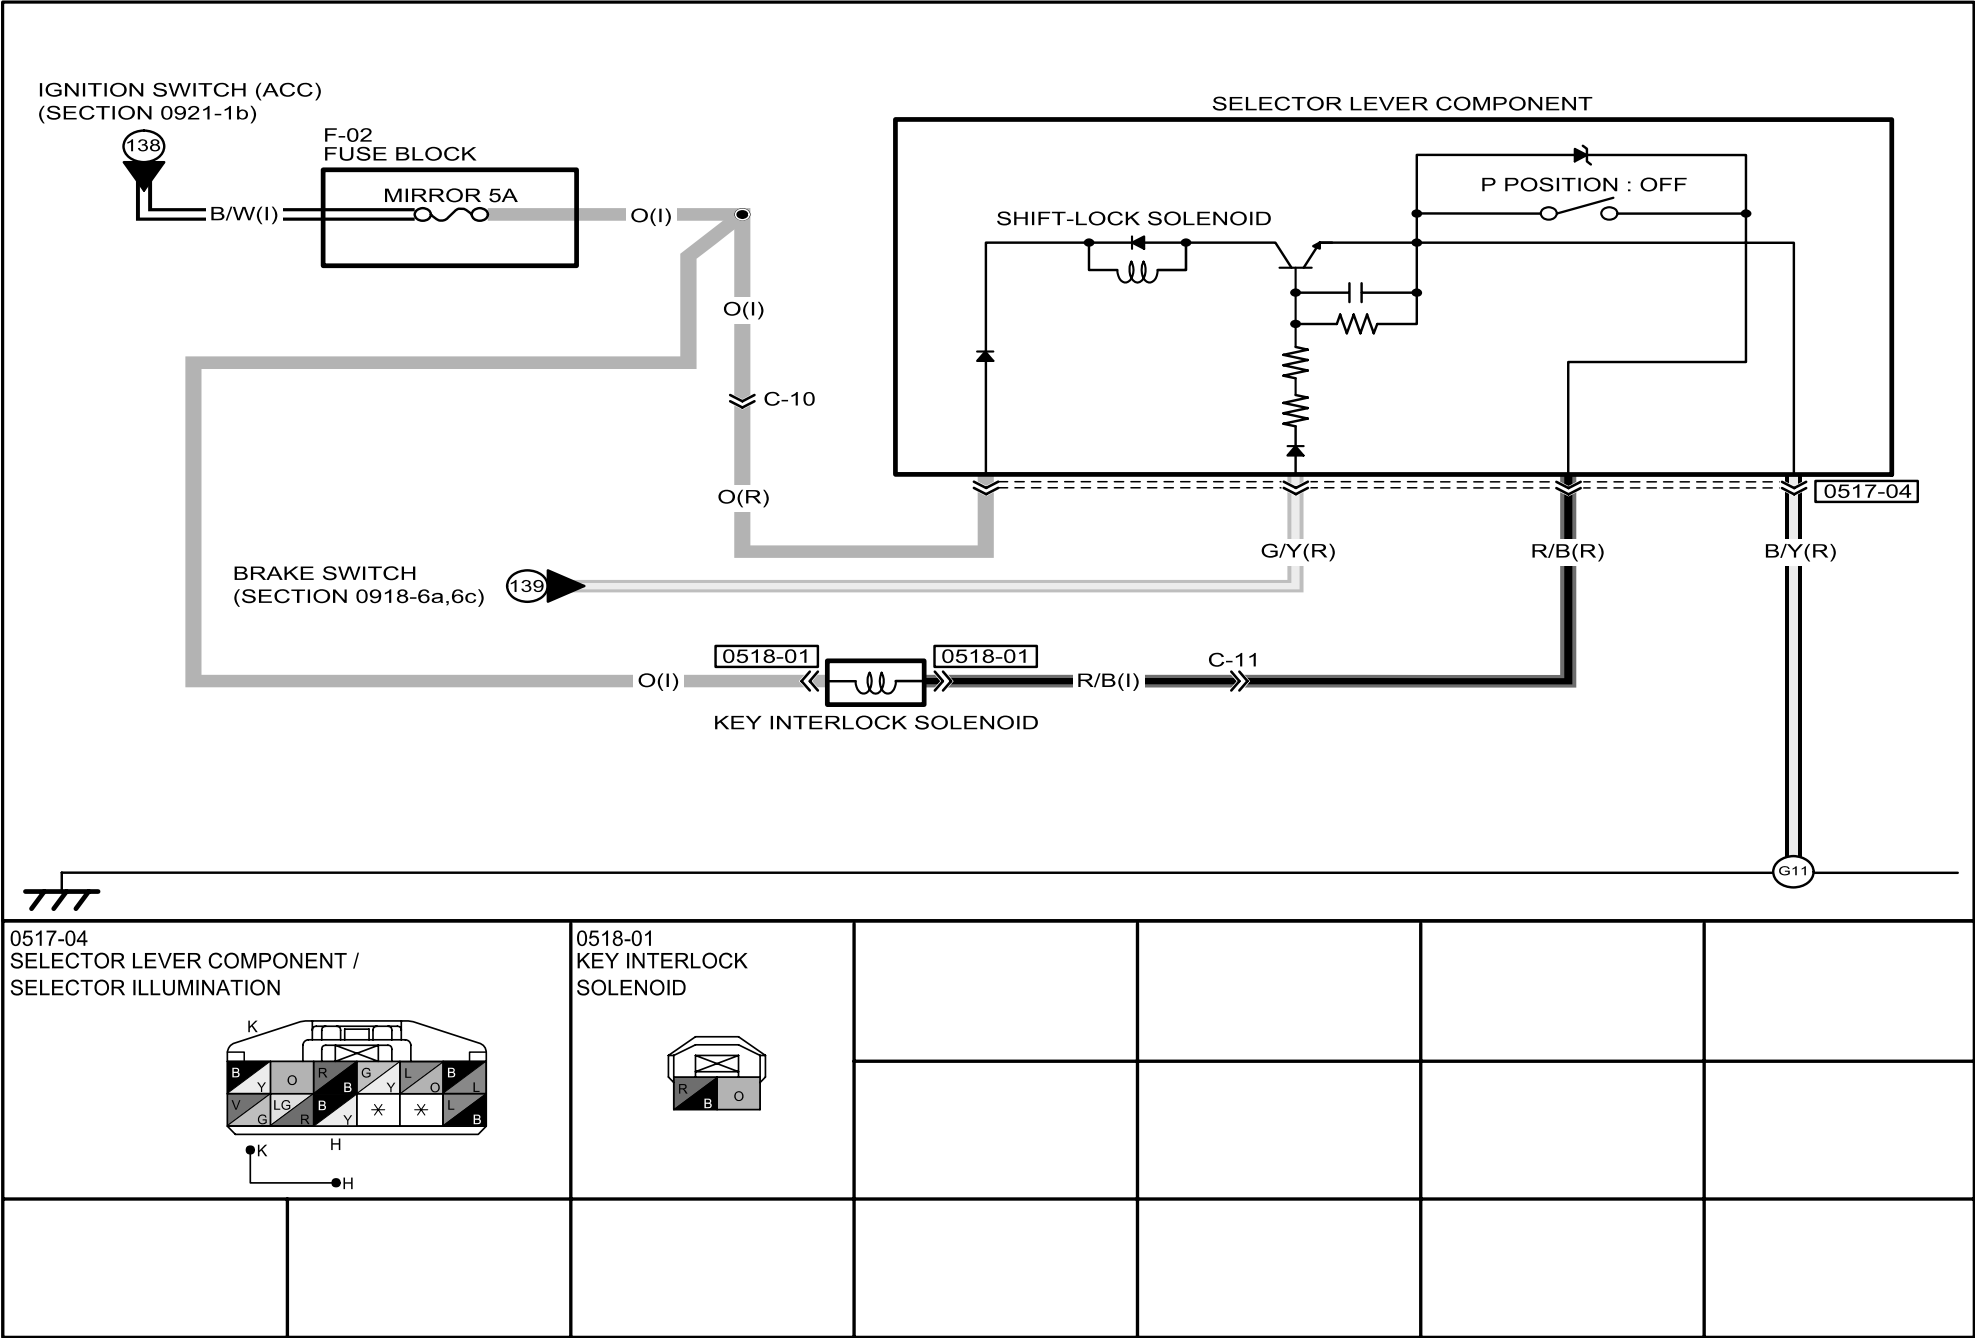

F-02
FUSE BLOCK
(REFER TO 00F SECTION)





C-10
(L)-(R)


C-11
(L)-(R)


0517-04
SELECTOR LEVER COMPONENT /
SELECTOR ILLUMINATION





G11


0518-01
KEY INTERLOCK SOLENOID

	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS

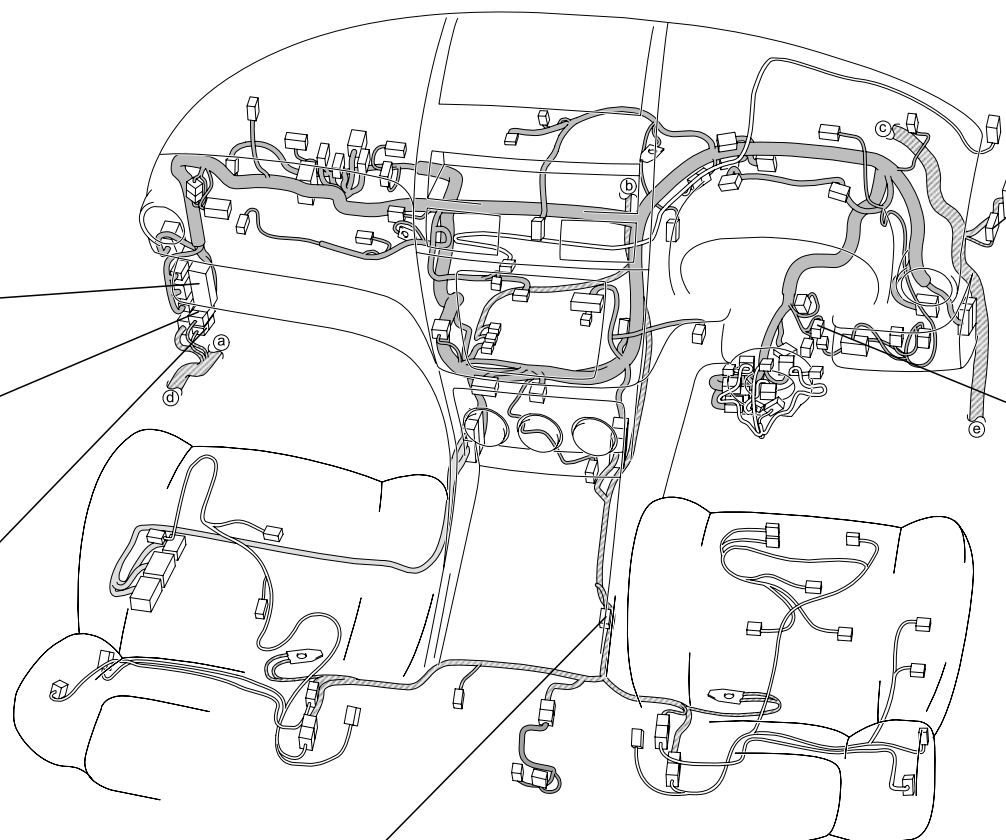

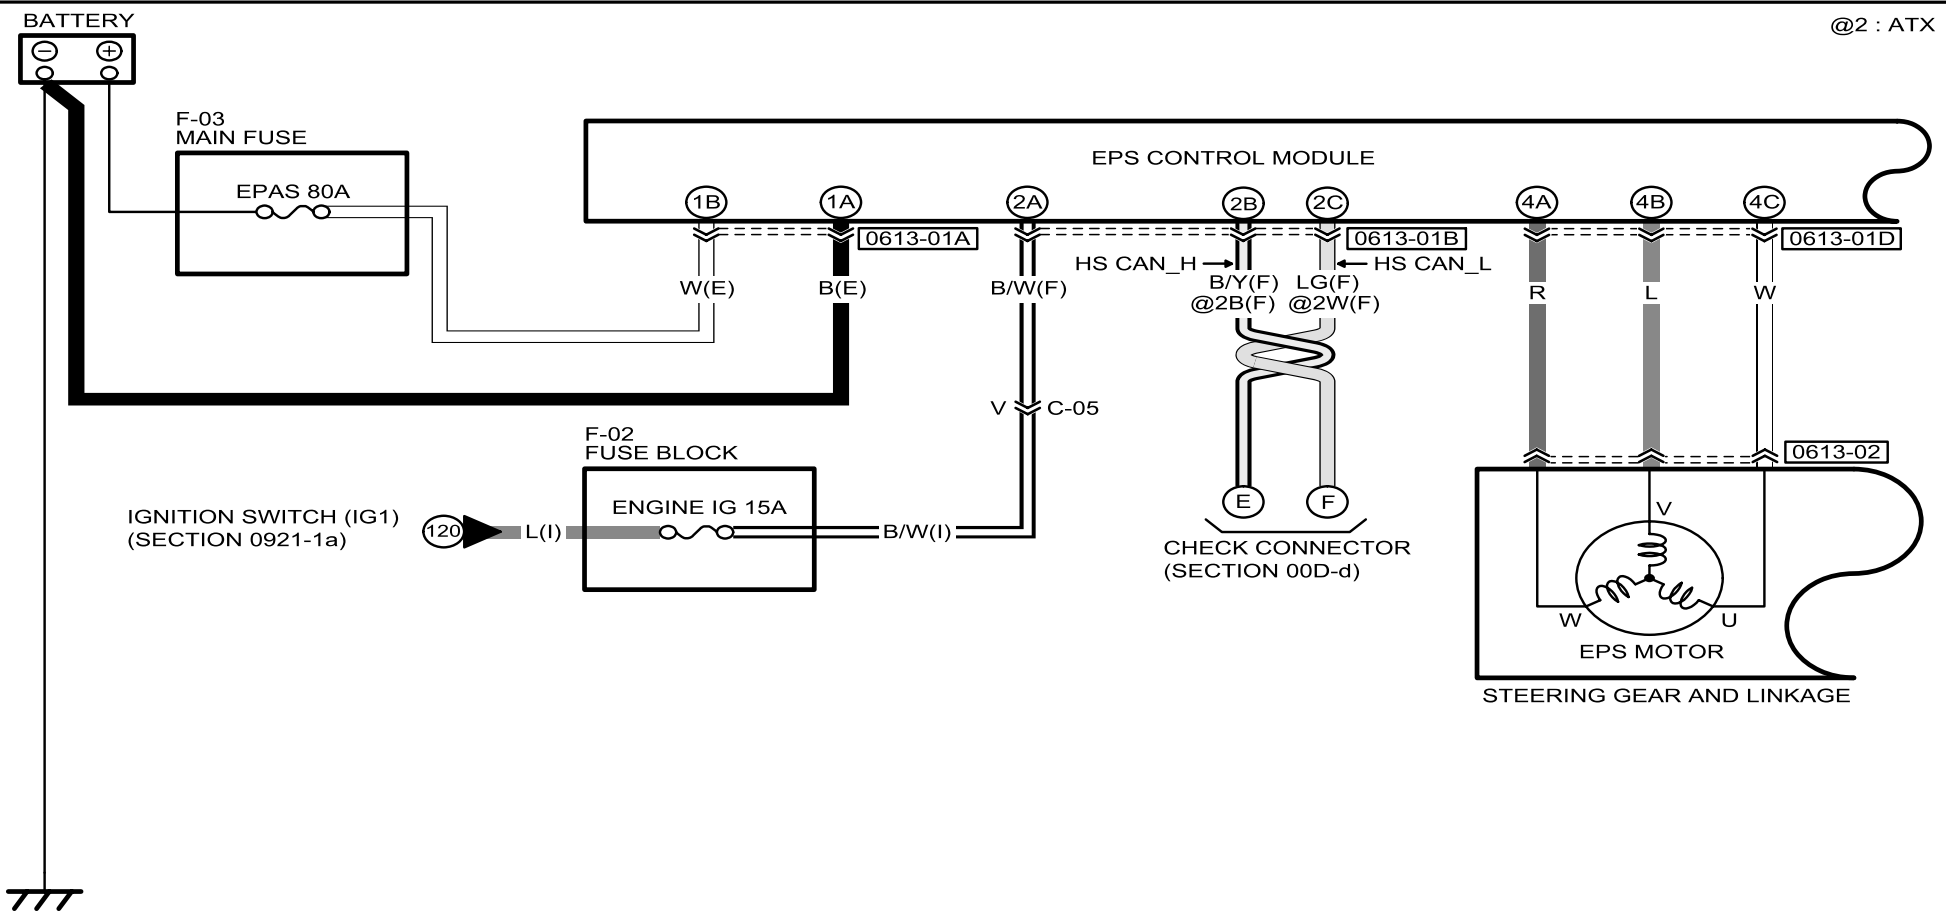


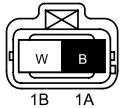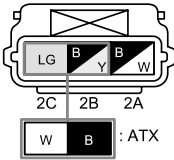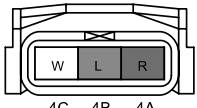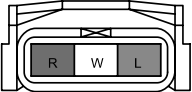
0613-01A EPS CONTROL MODULE	0613-01B EPS CONTROL MODULE	0613-01D EPS CONTROL MODULE	0613-02 EPS MOTOR			
						

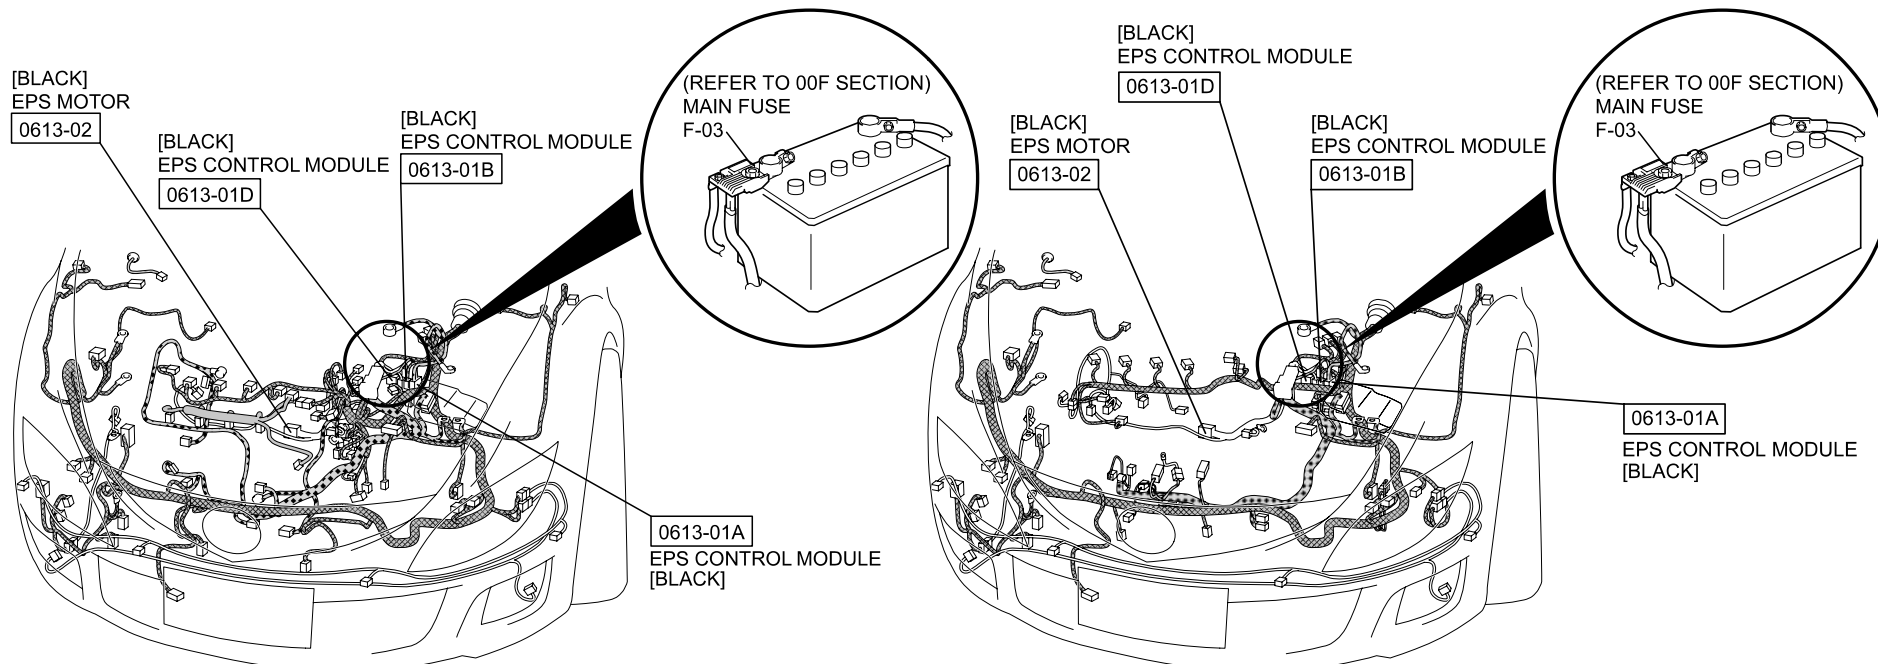


[EXCEPT MZR-CD 2.2]

[MZR-CD 2.2]

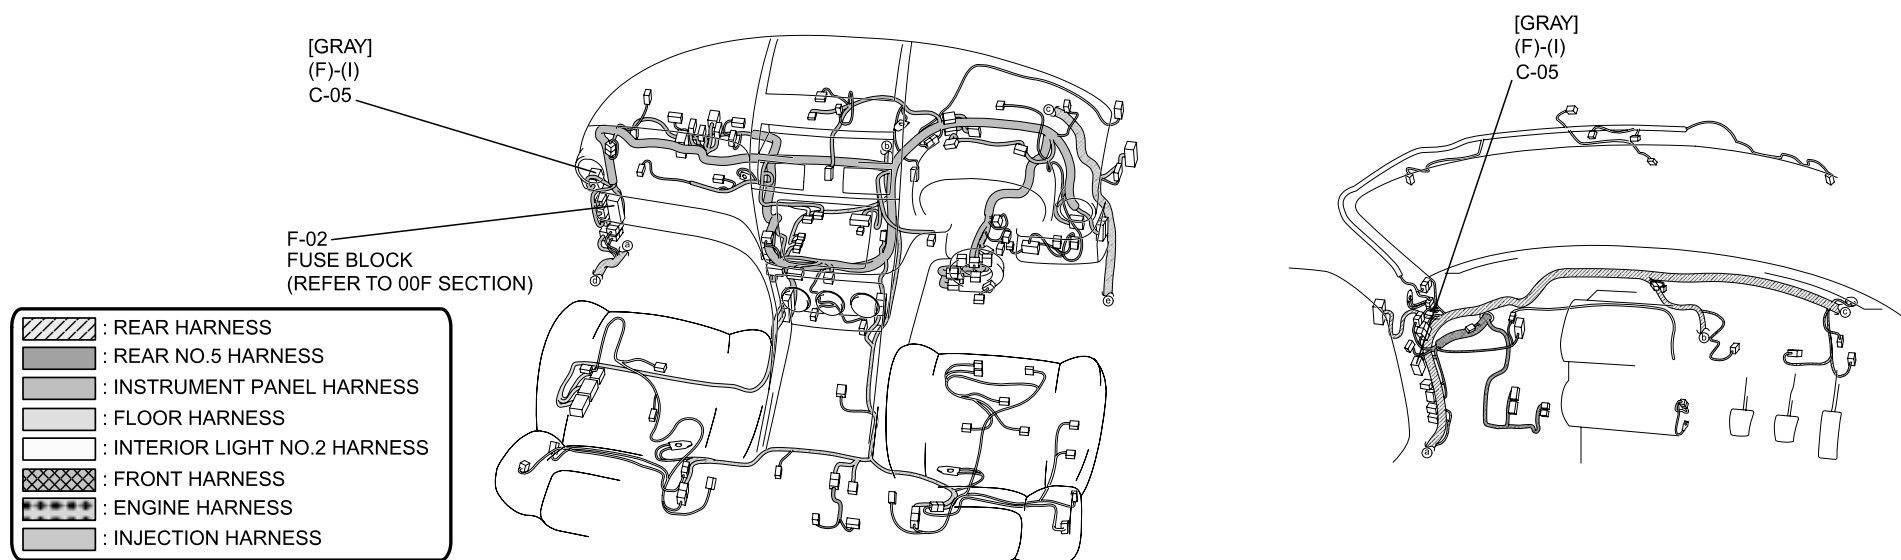


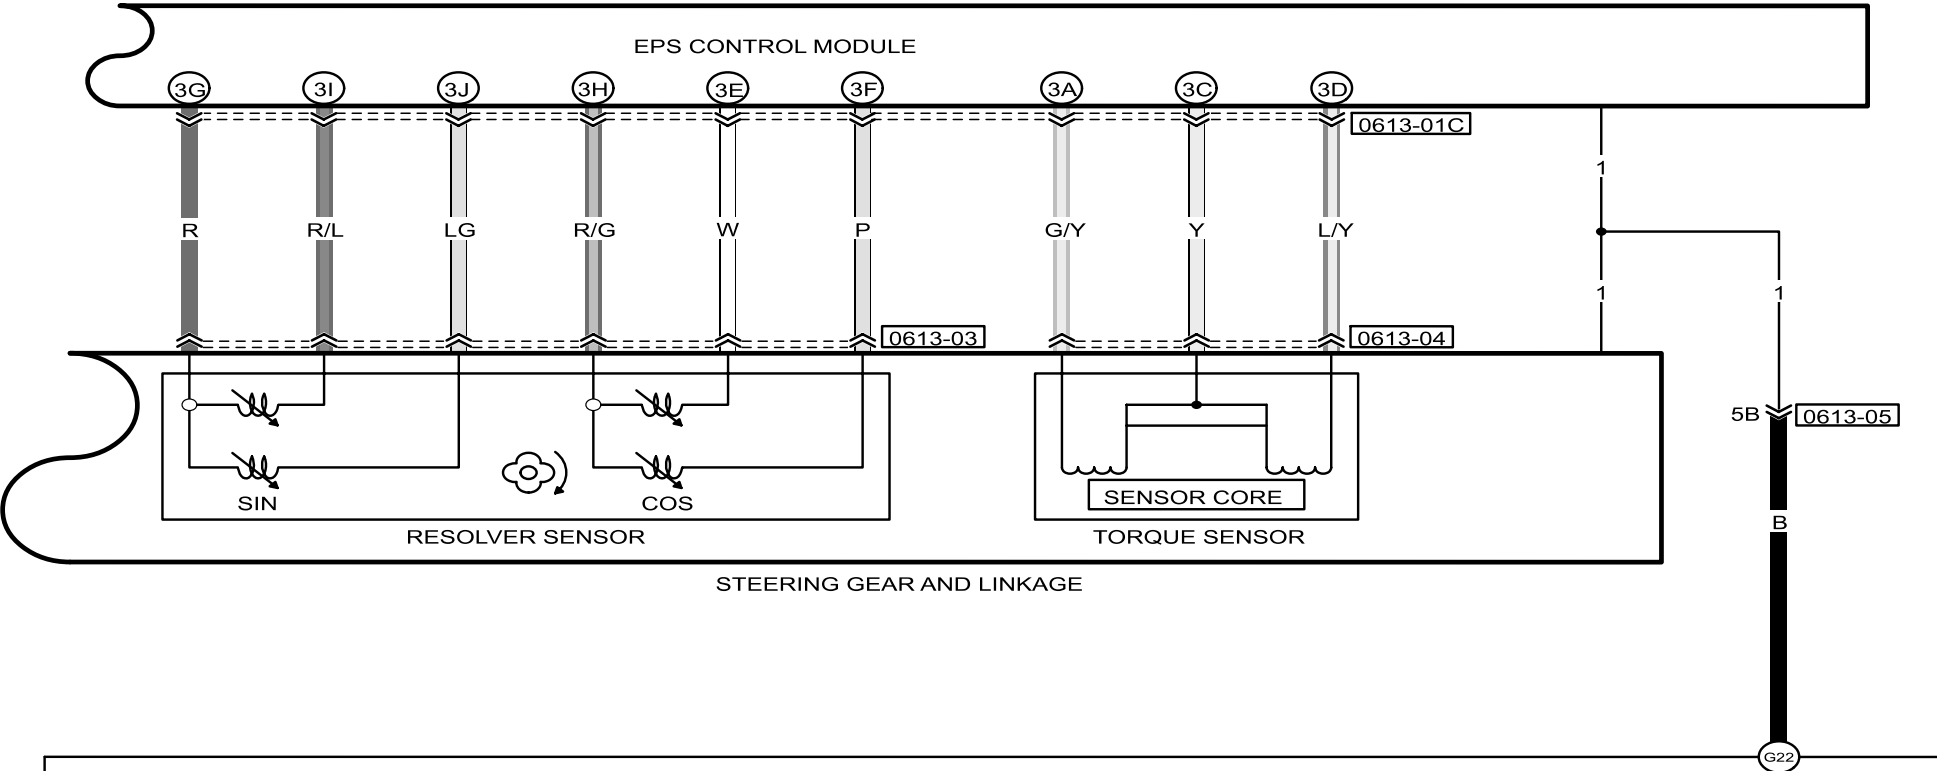


0613-01C
EPS CONTROL MODULE

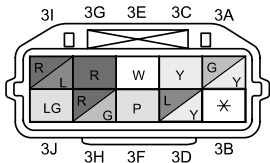

0613-03
RESOLVER SENSOR

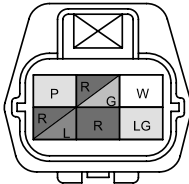


0613-04
TORQUE SENSOR

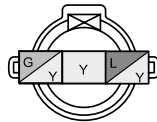


0613-05
STEERING GEAR AND LINKAGE EARTH

 
SHORT CORD





SHORT CORD

 



WIRE COLORS ARE
INDICATED BY NUMBERS.

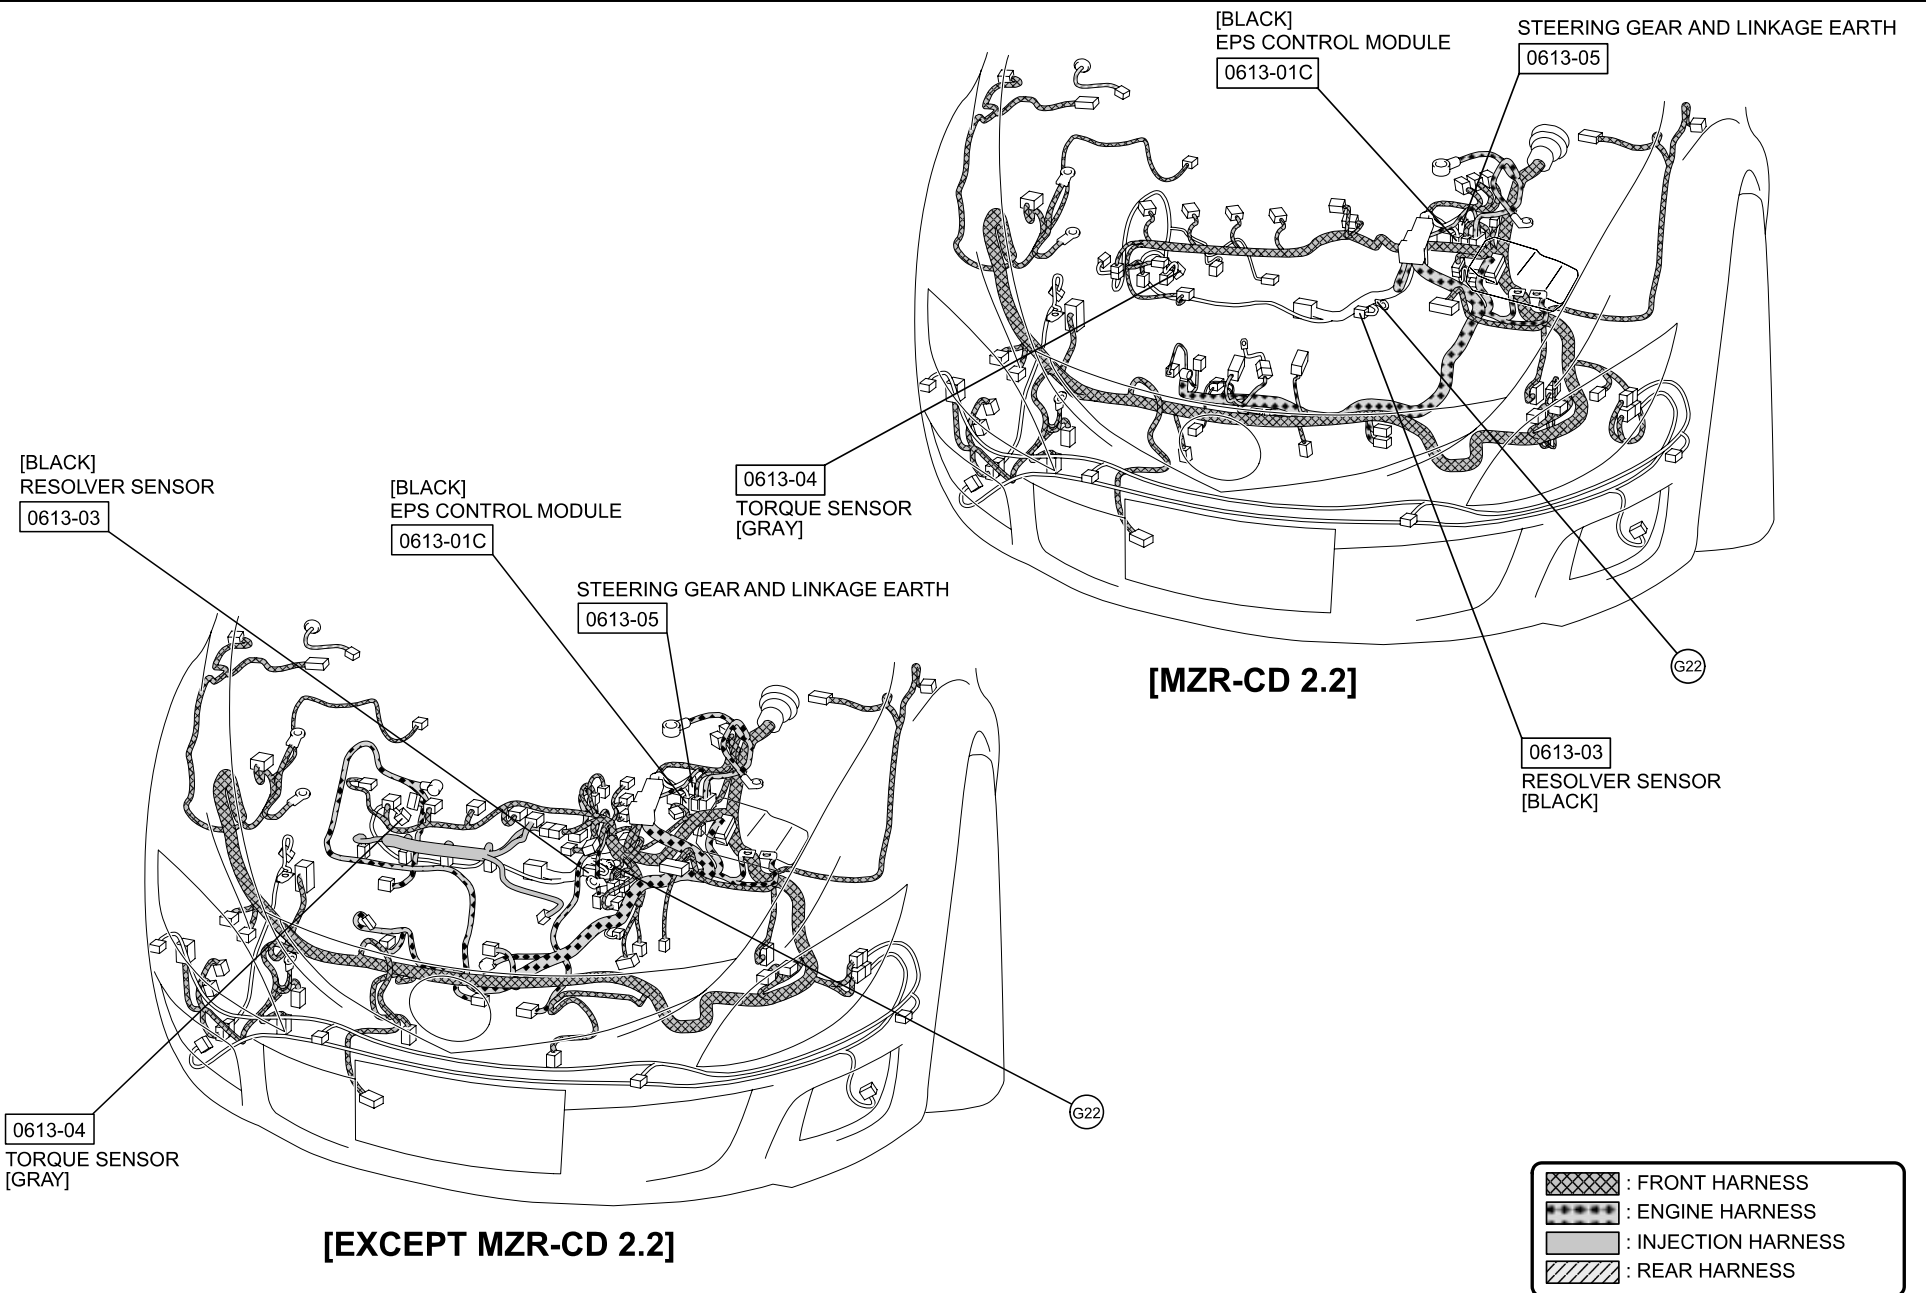


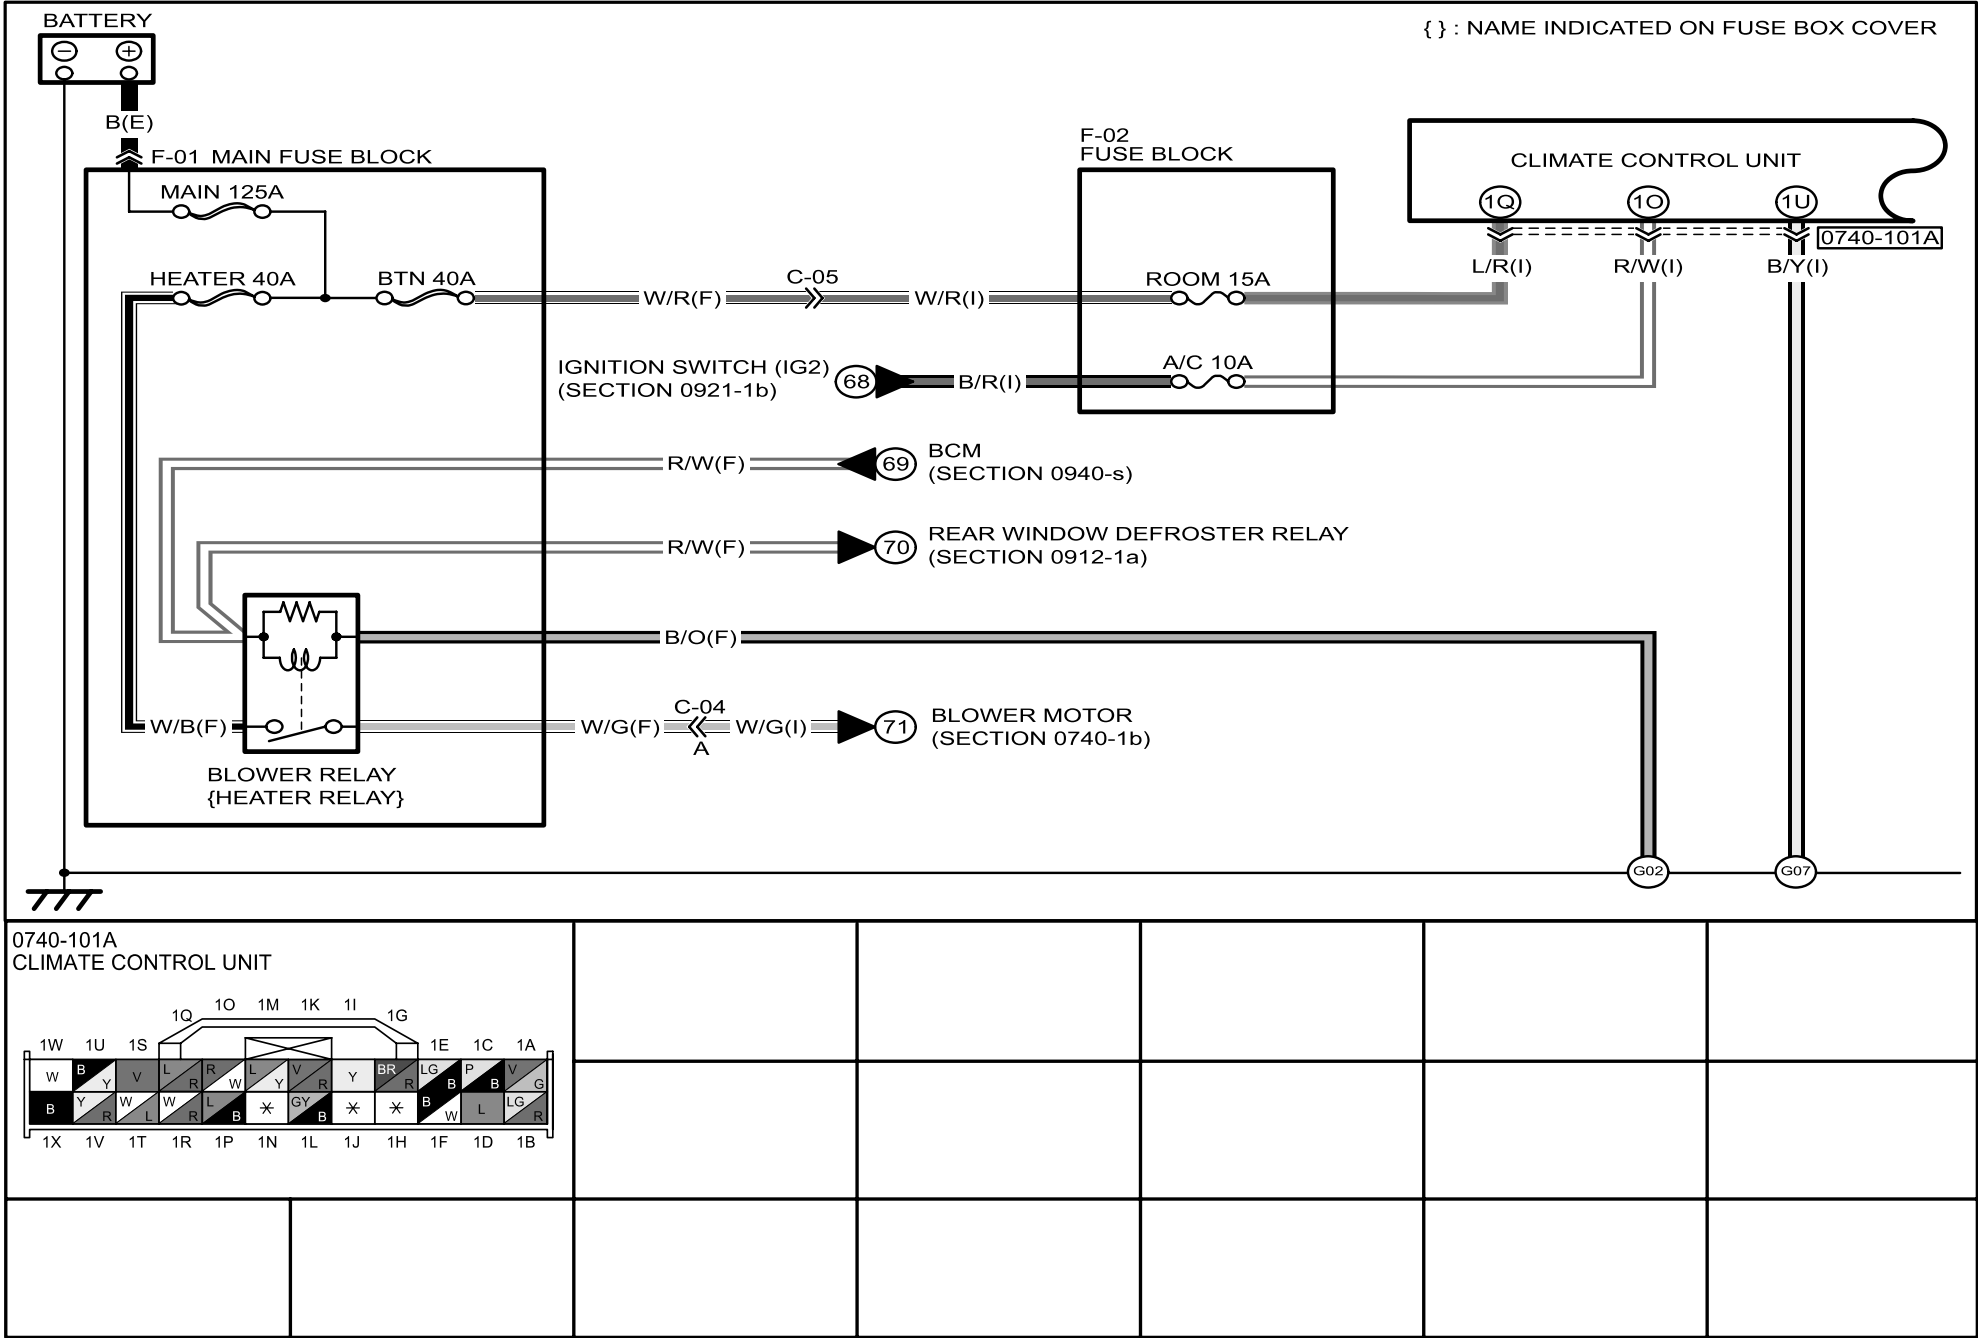

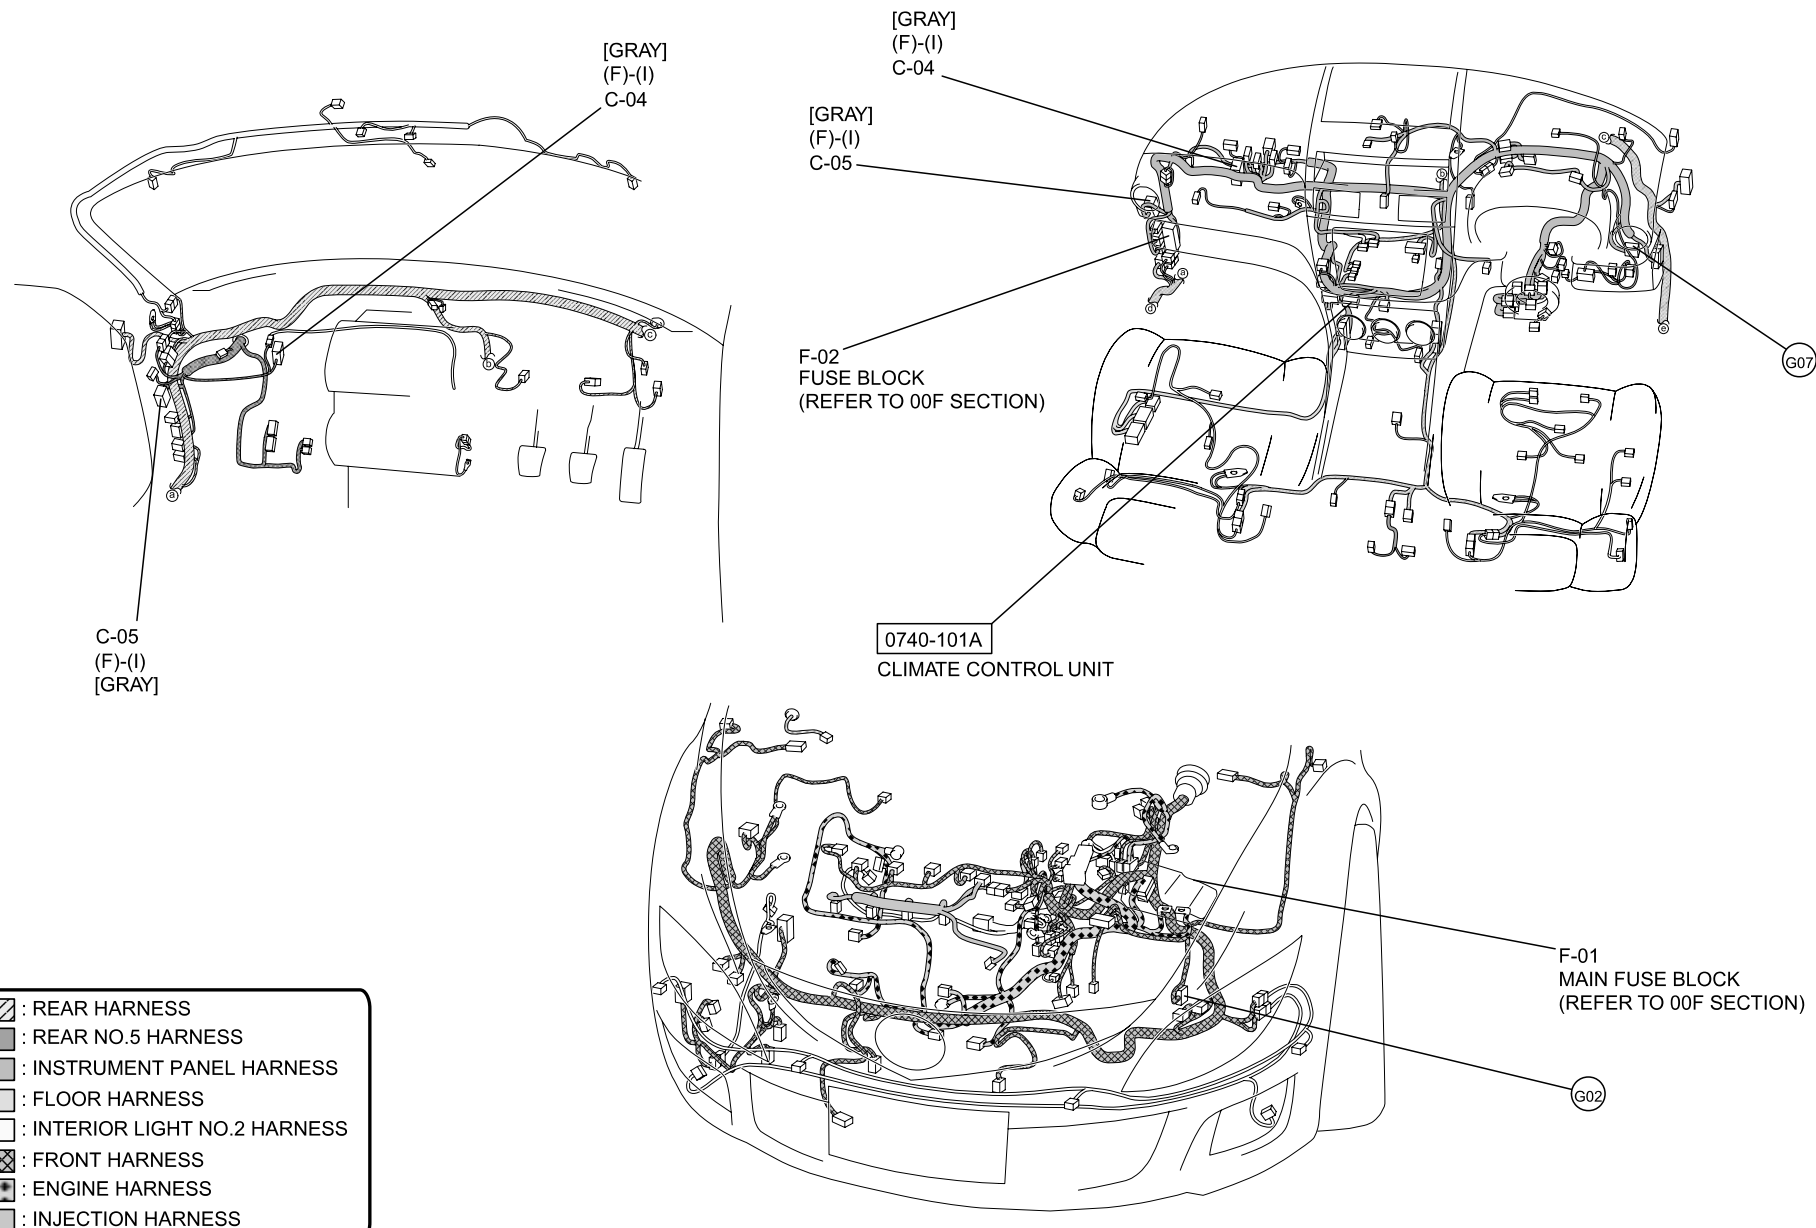


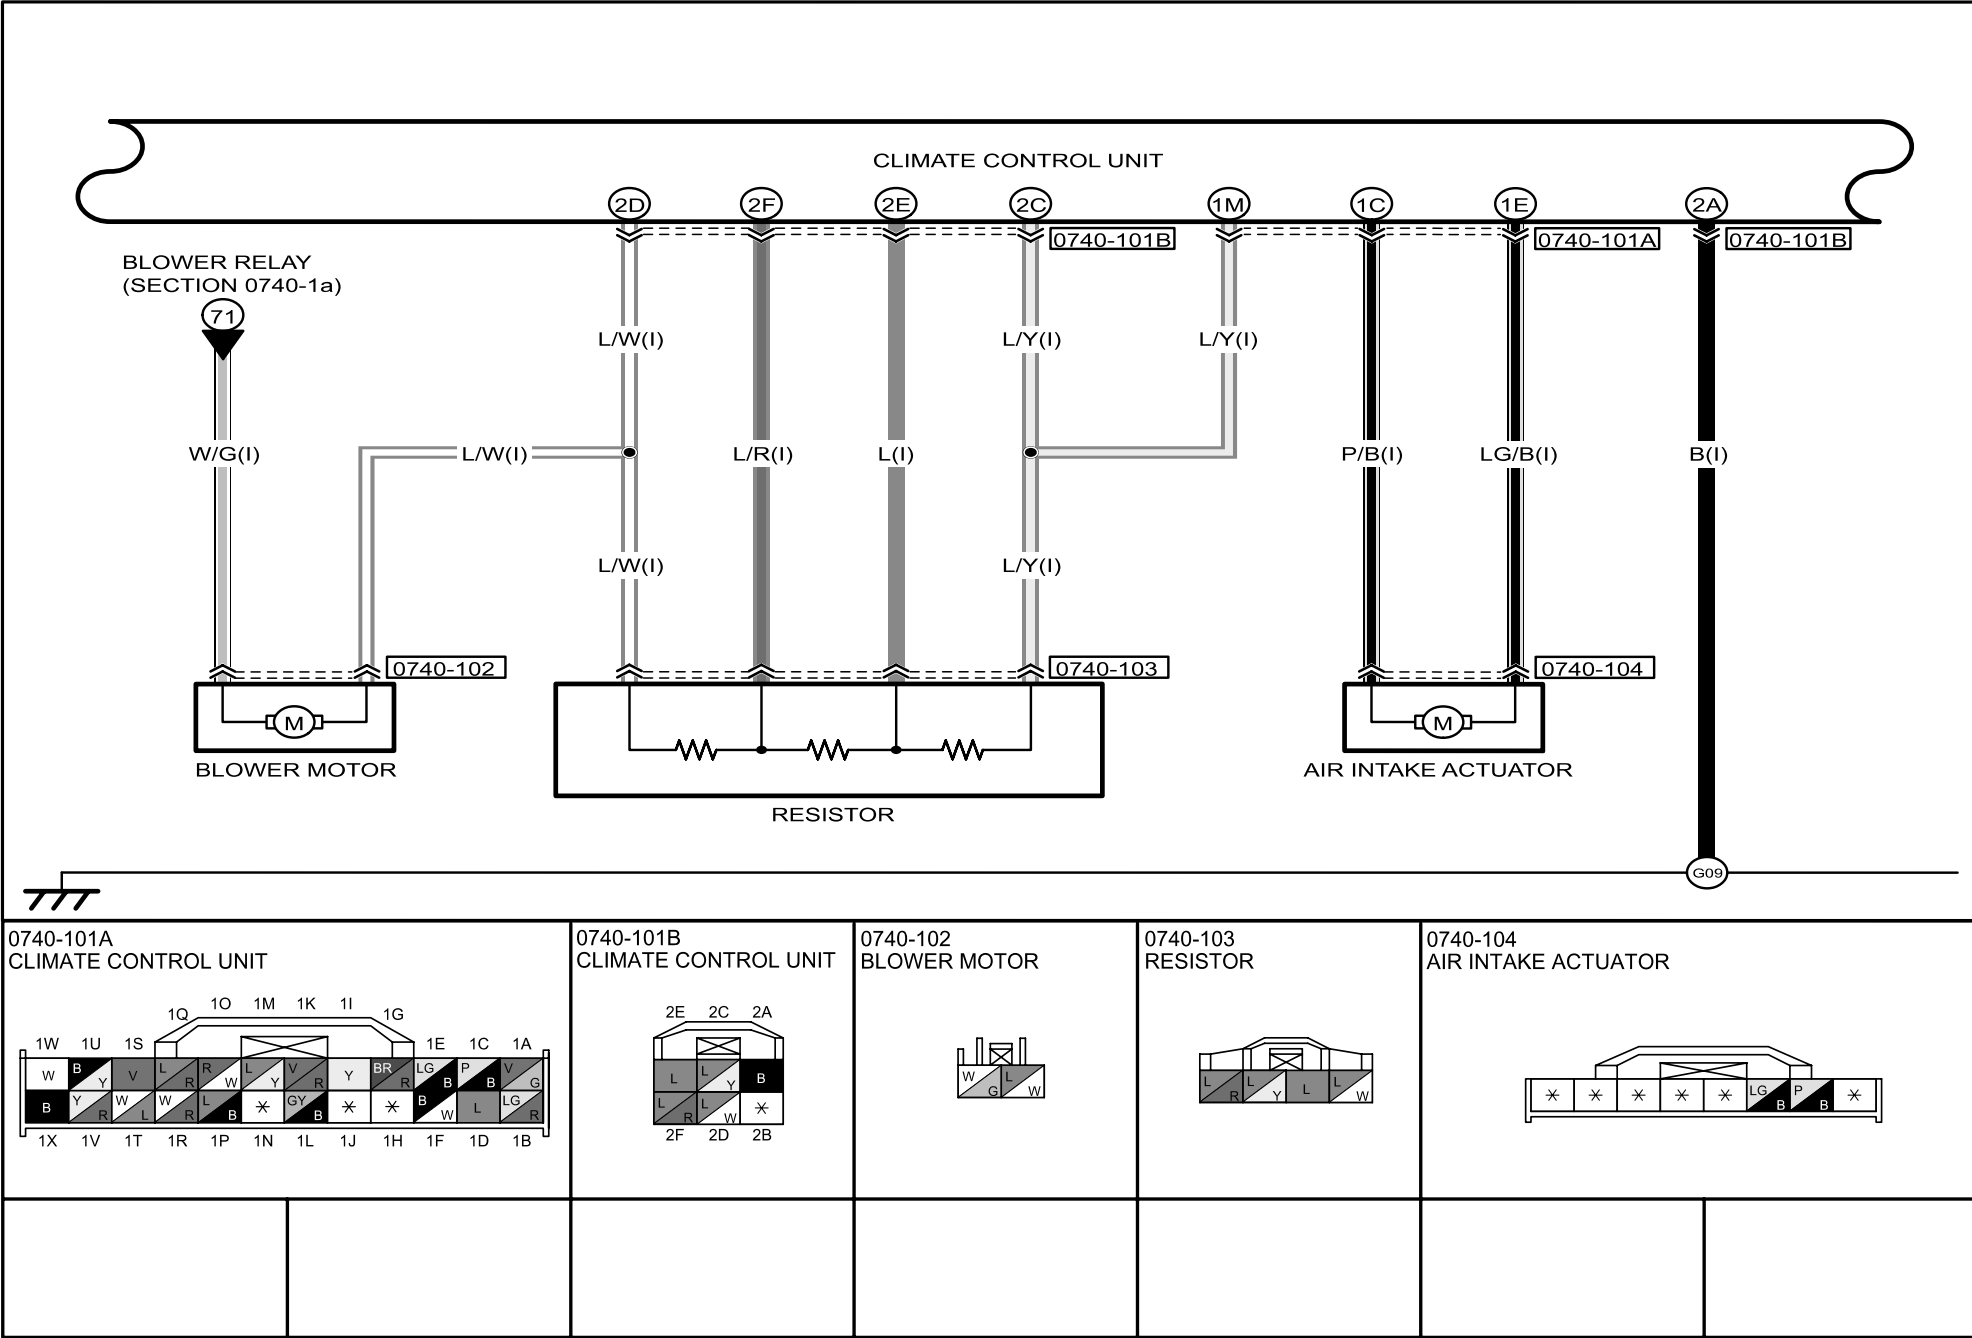

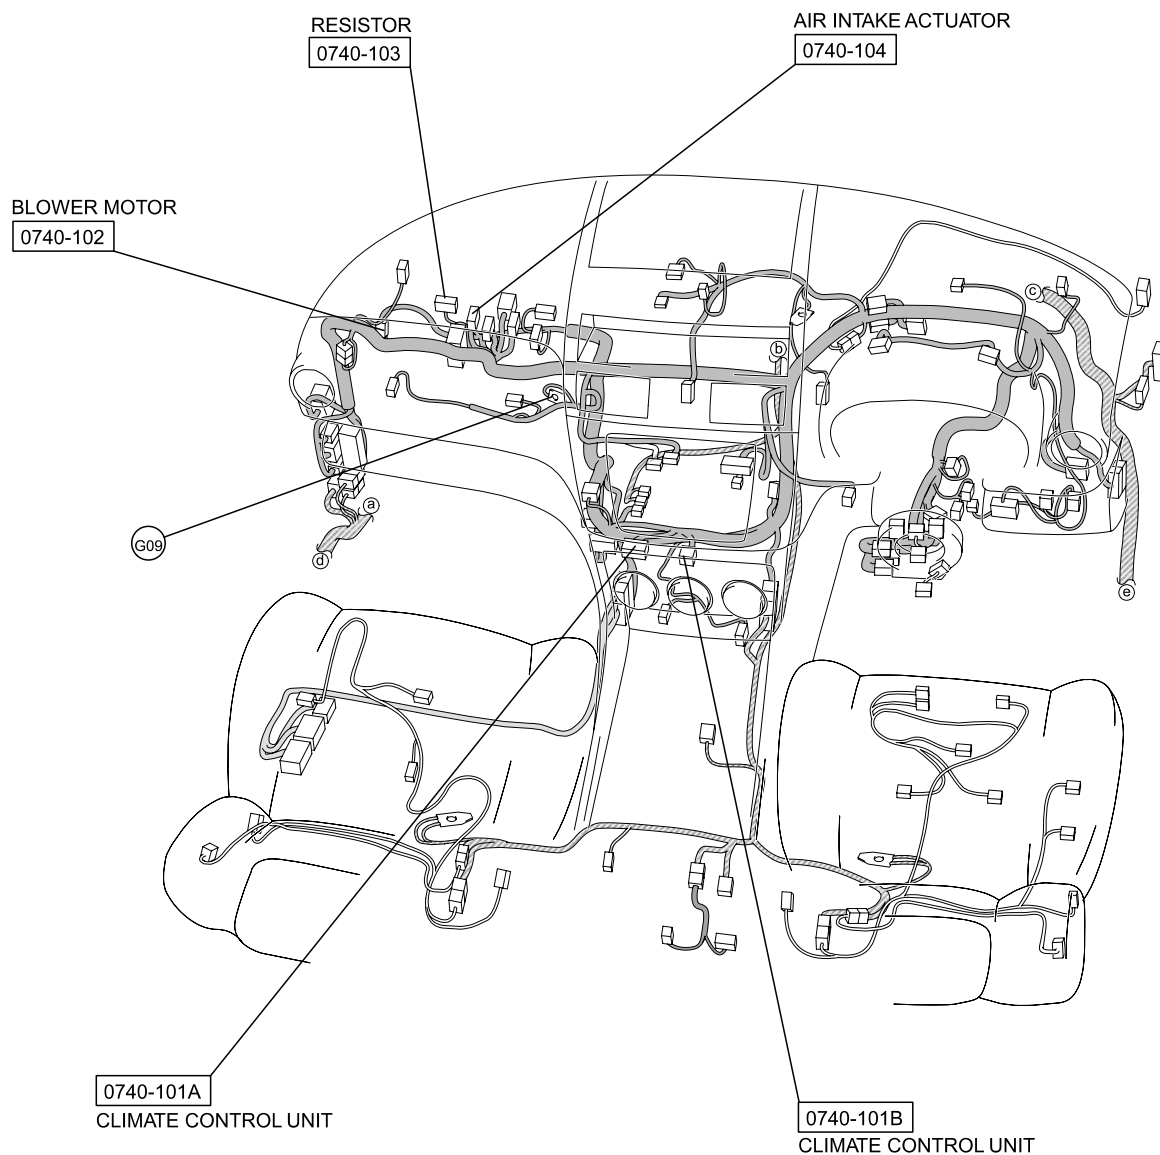


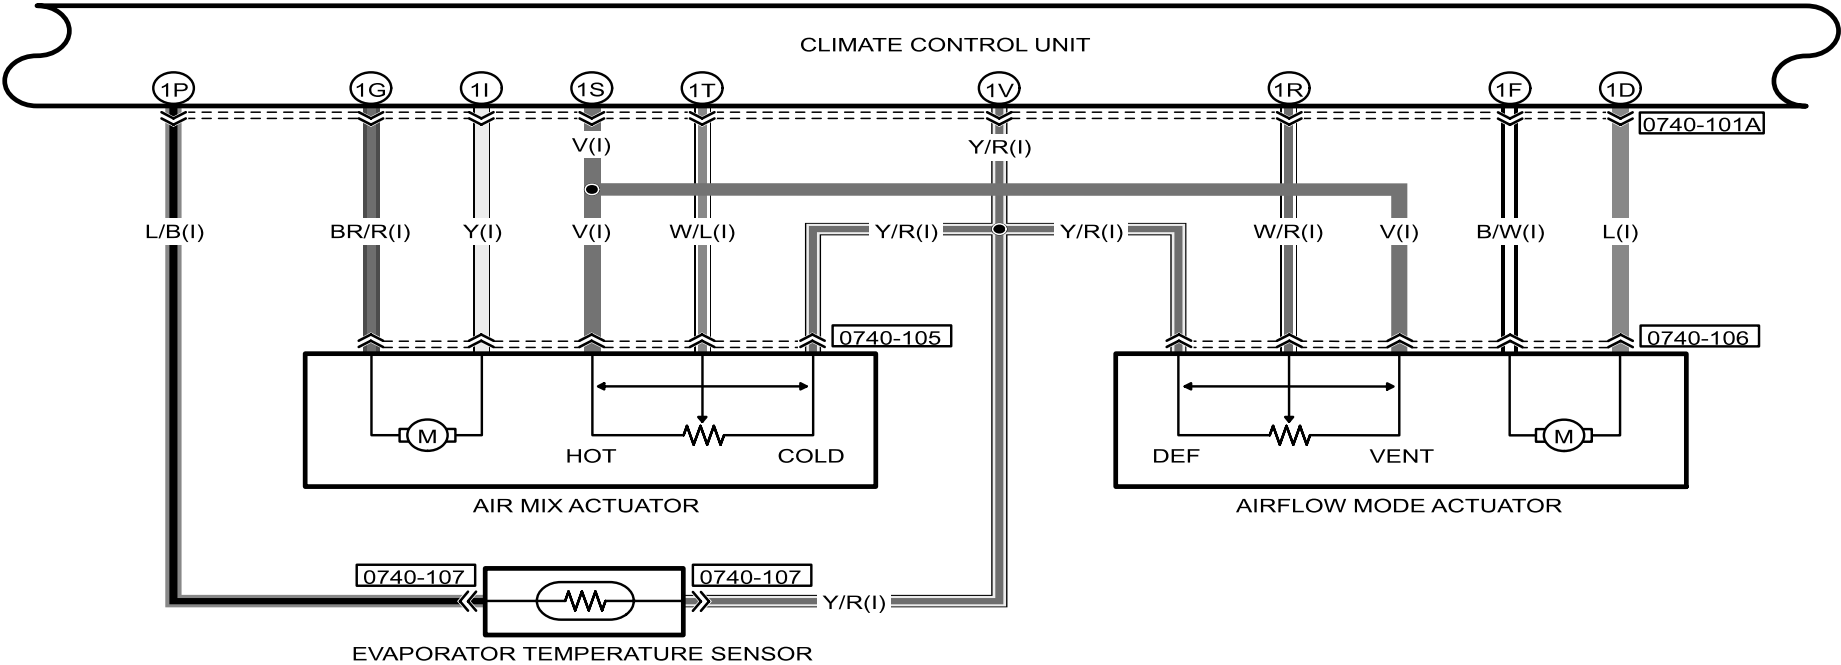


0740-101A
CLIMATE CONTROL UNIT

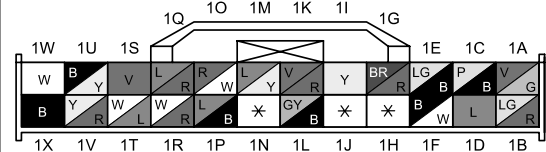


0740-105
AIR MIX ACTUATOR

 



0740-106
AIRFLOW MODE ACTUATOR

 



0740-107
EVAPORATOR TEMPERATURE SENSOR

 

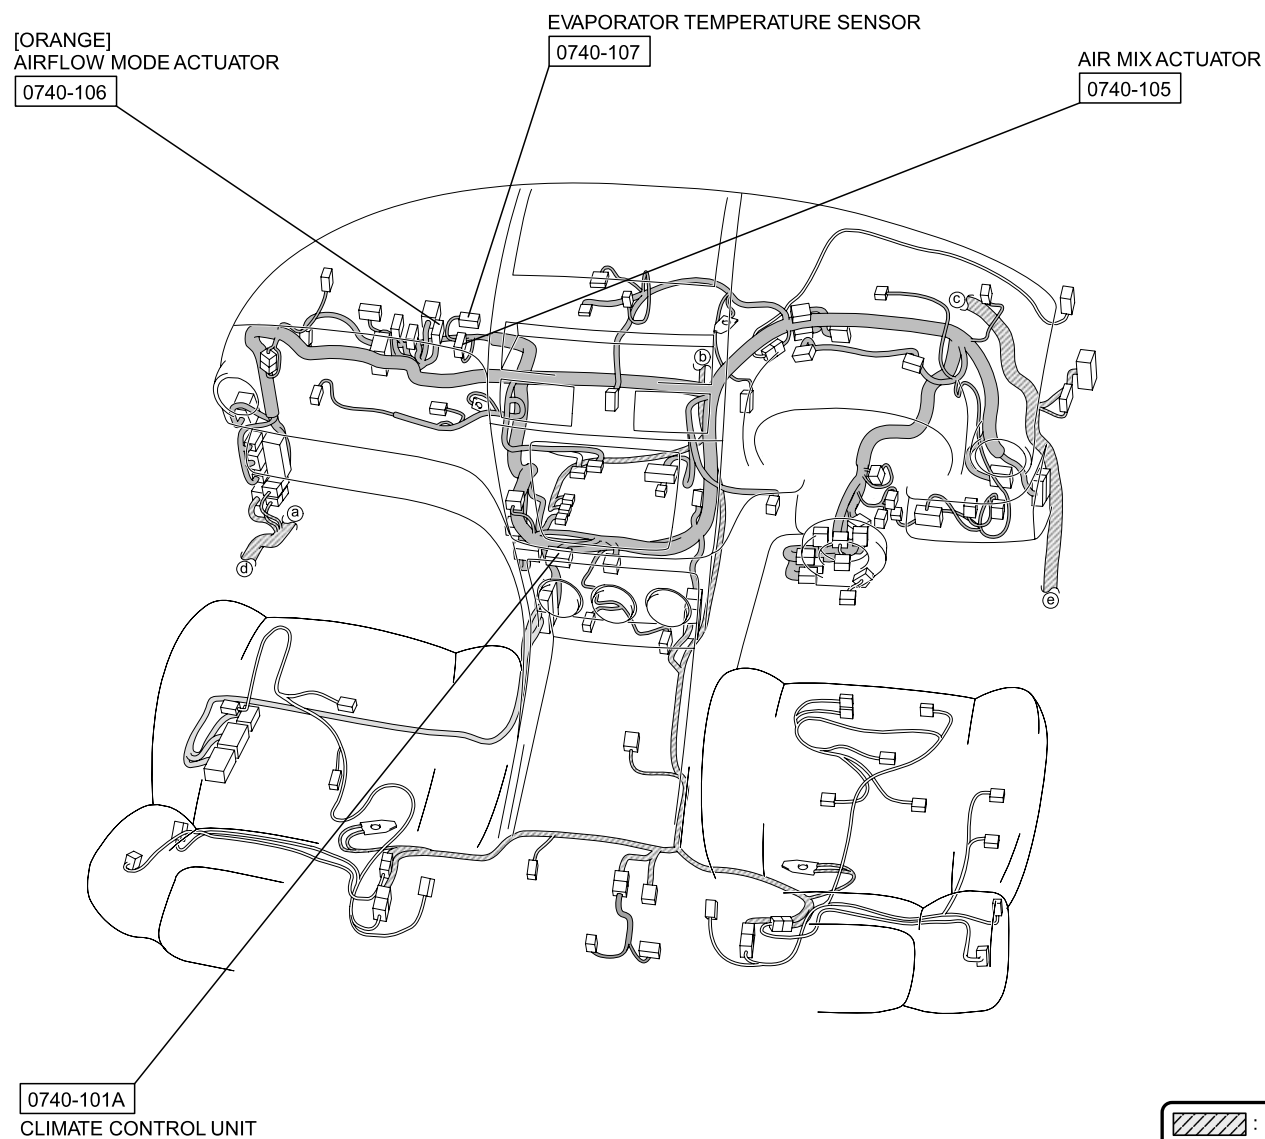


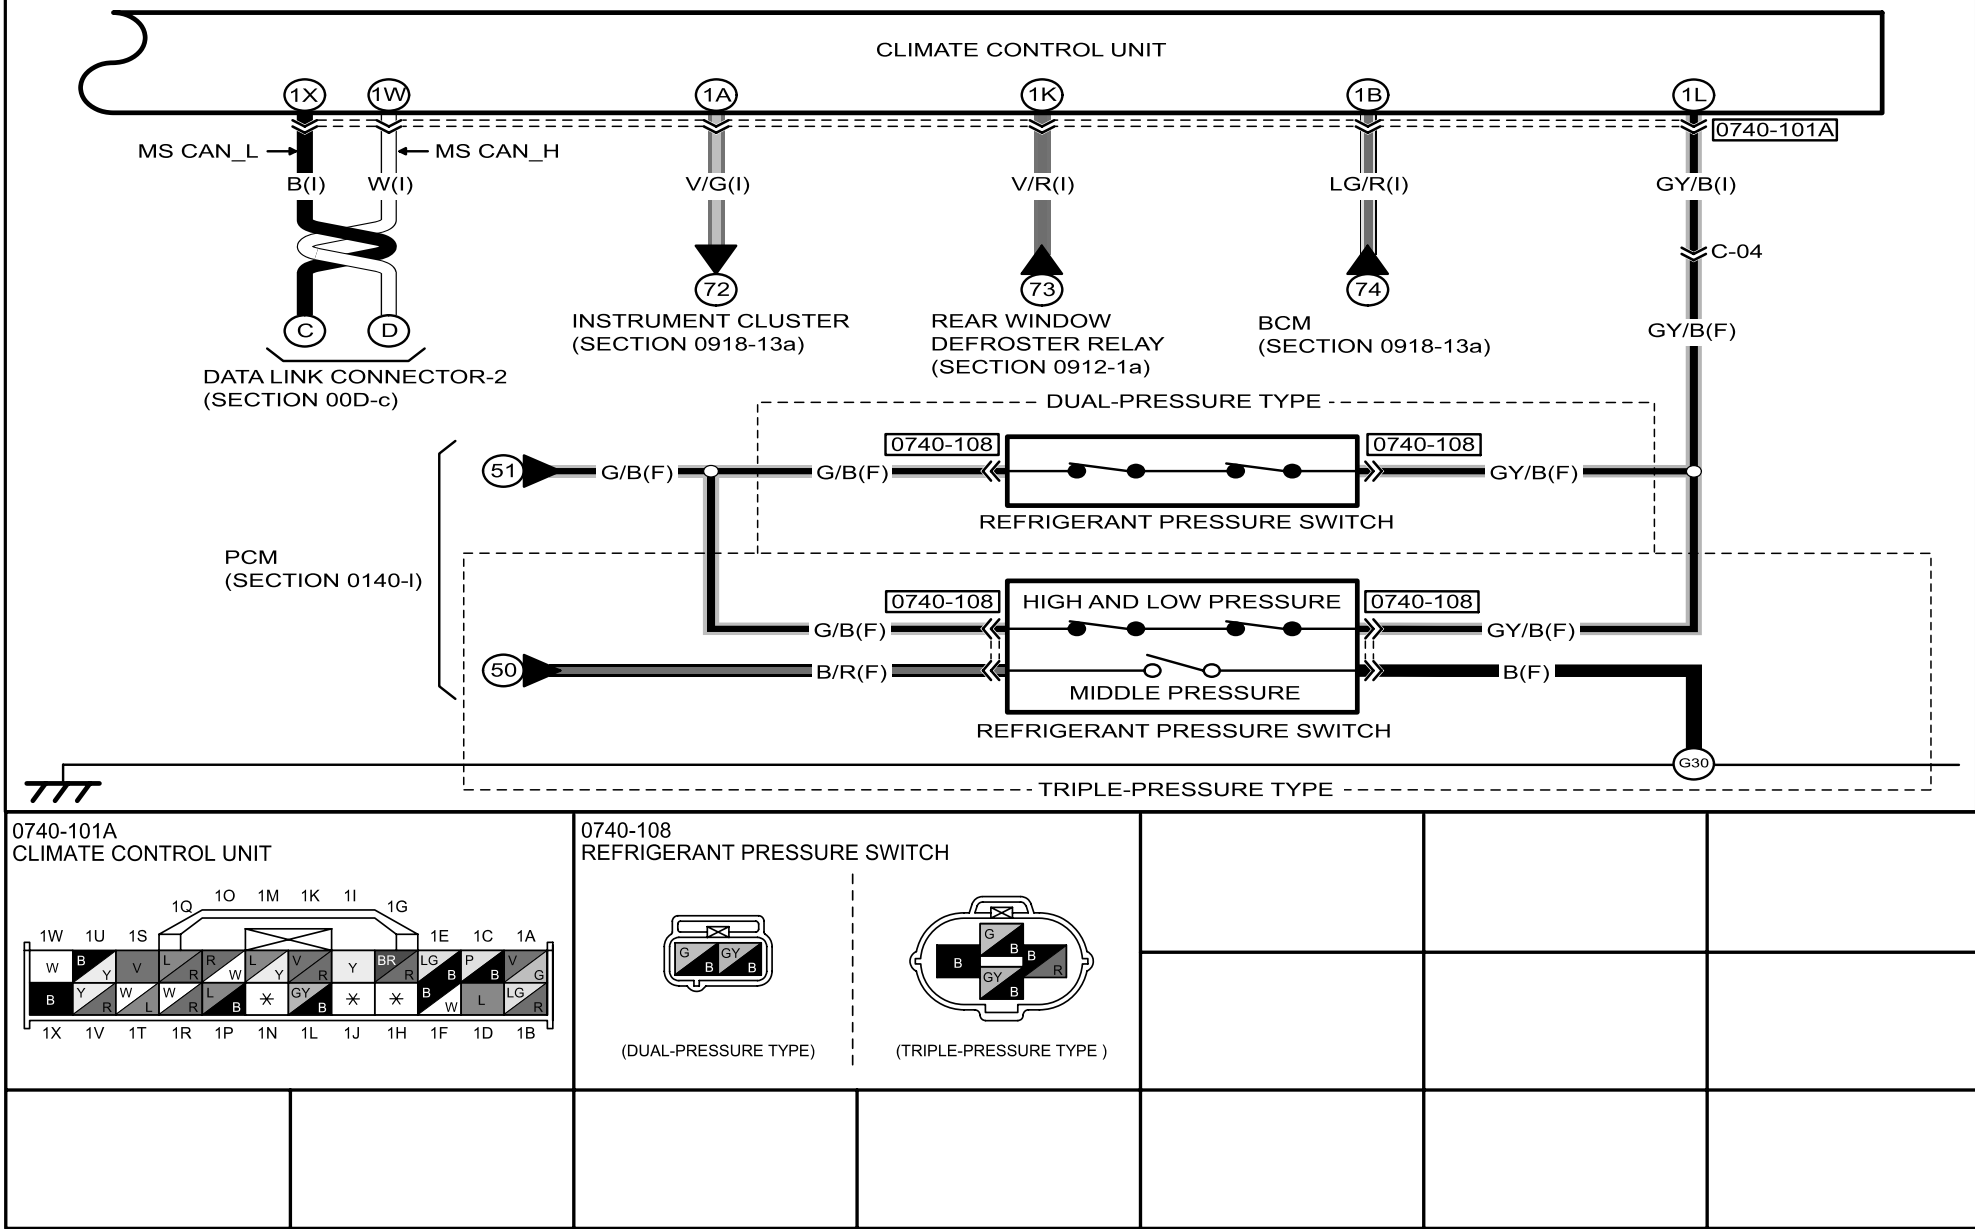


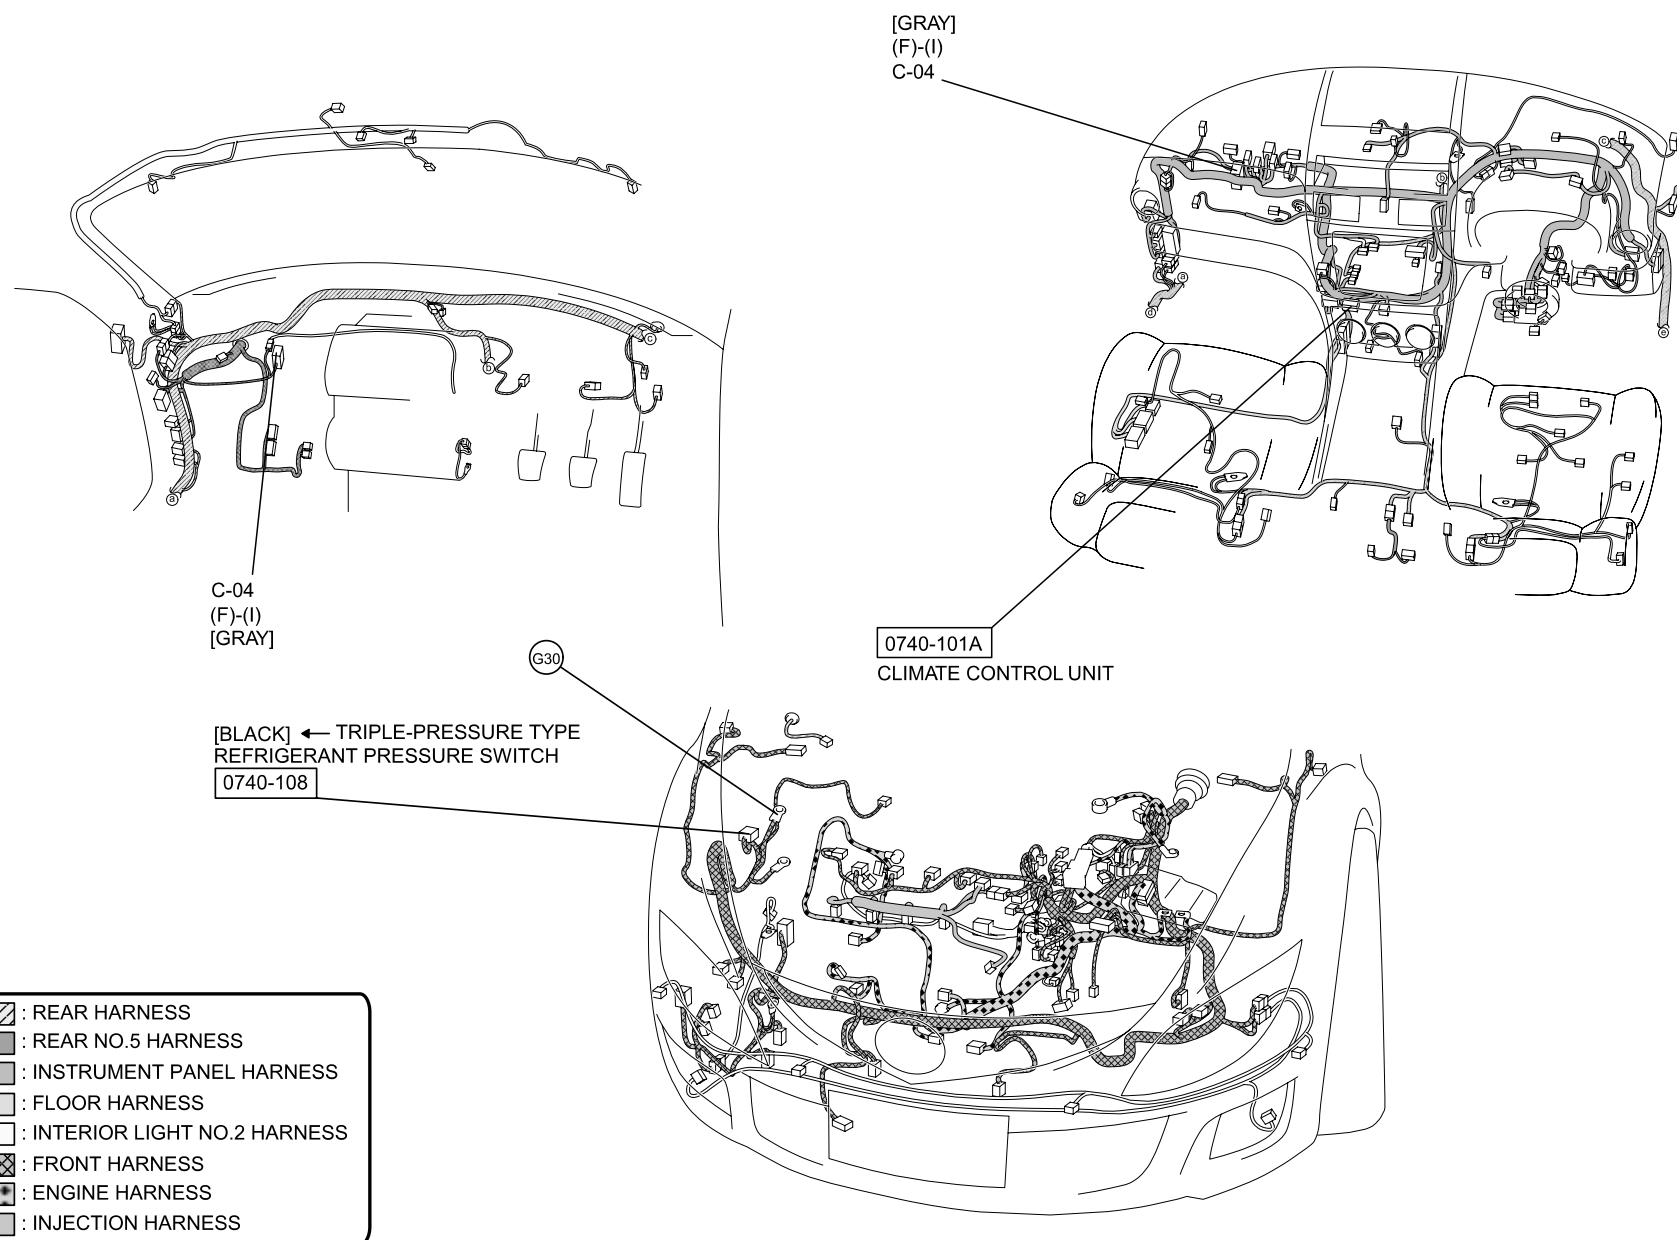

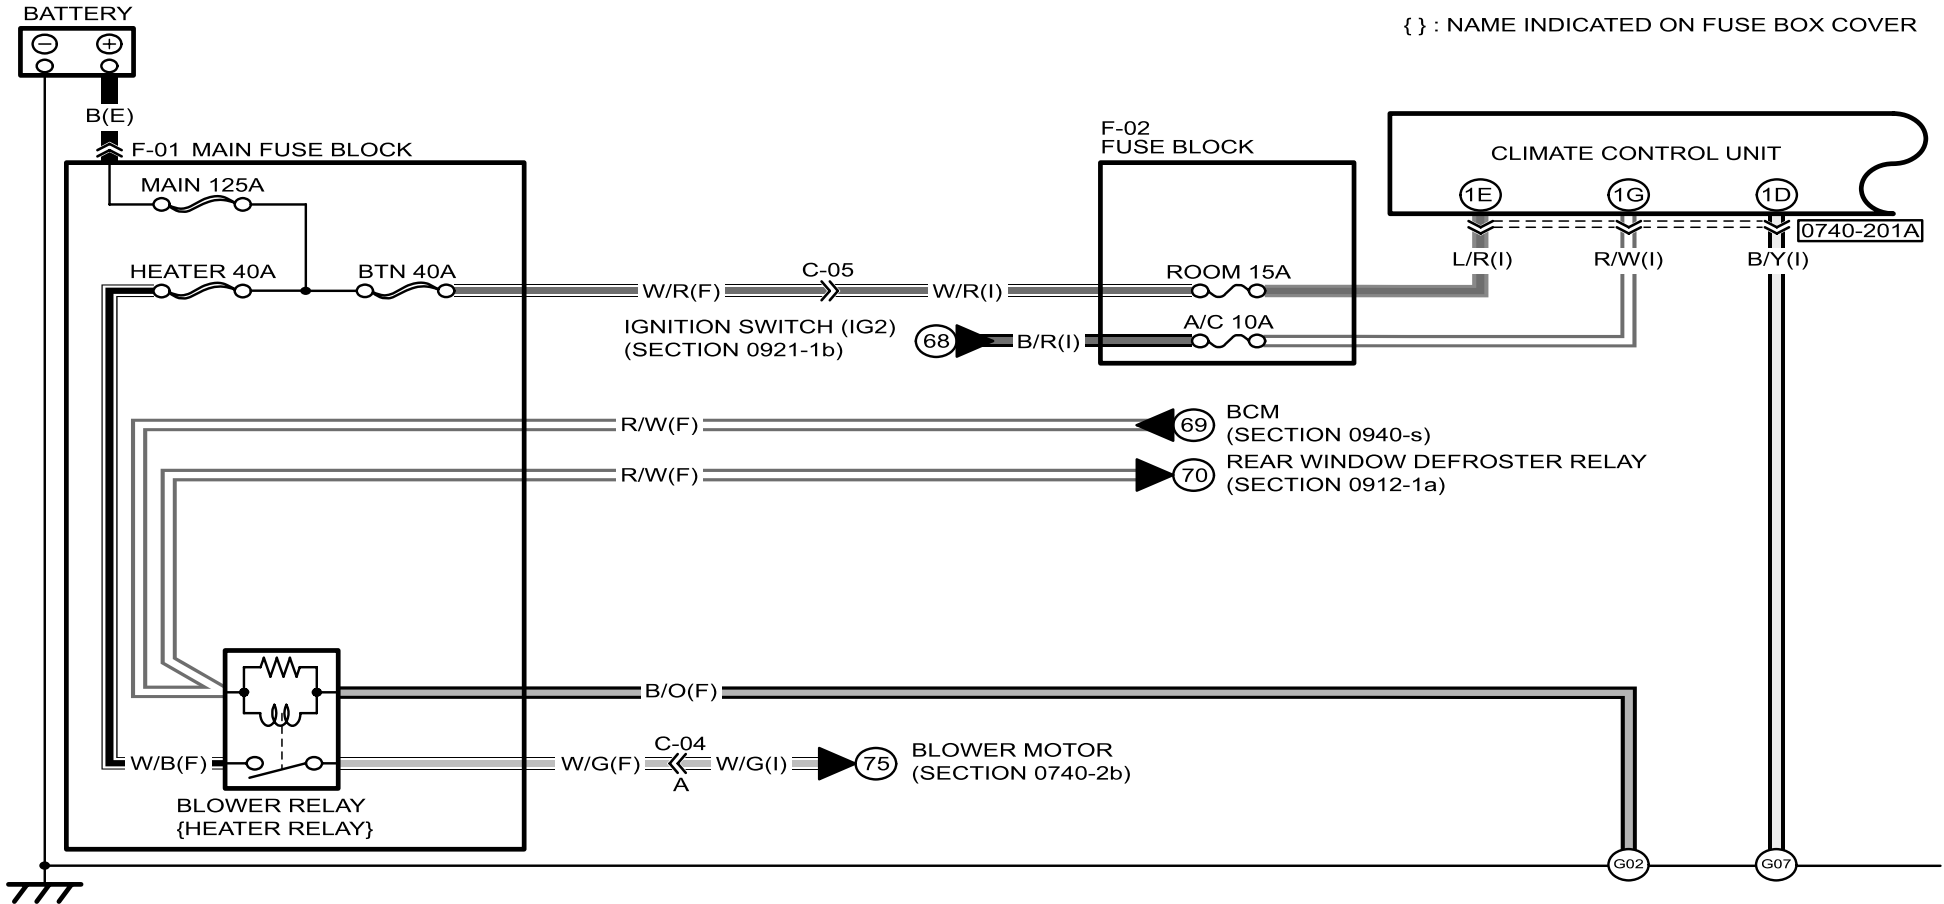


0740-201A
CLIMATE CONTROL UNIT


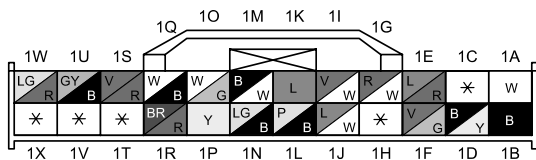


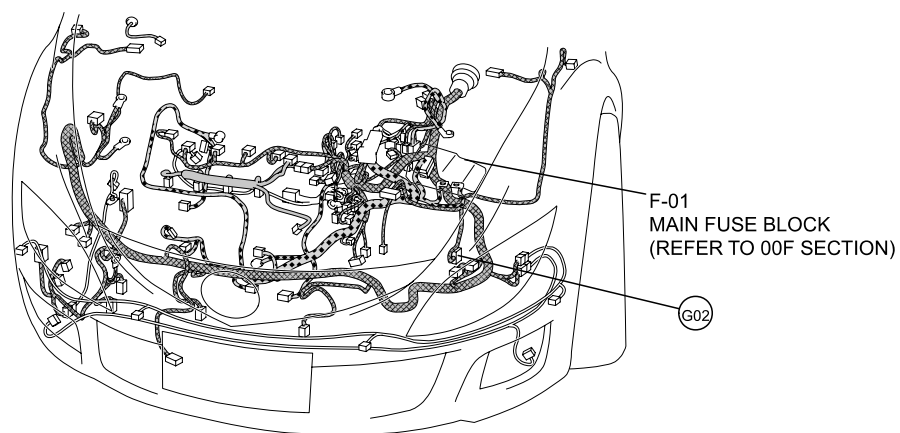



[EXCEPT MZR-CD 2.2]

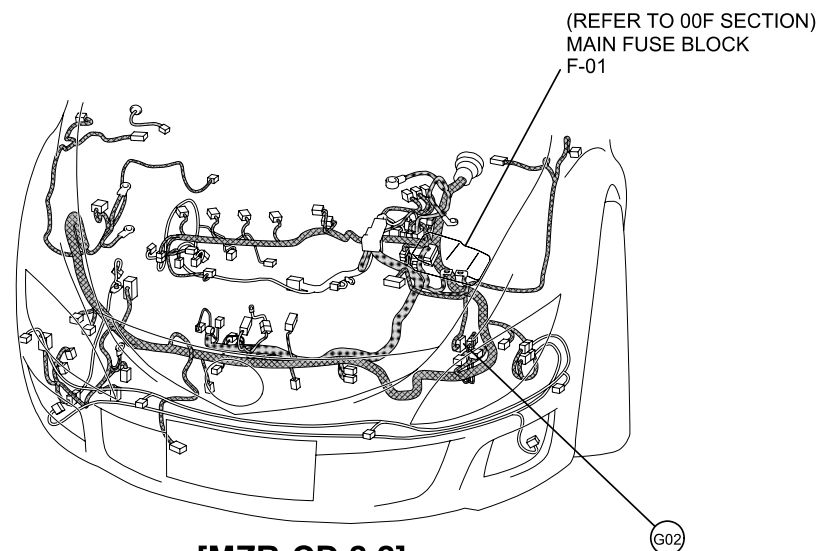







[MZR-CD 2.2]

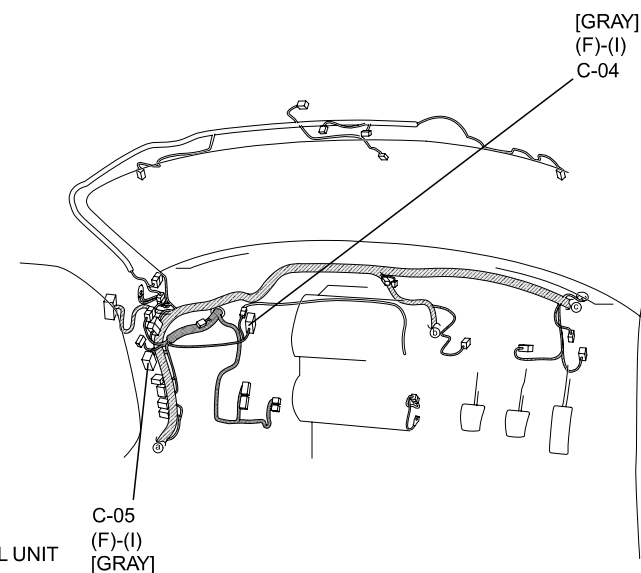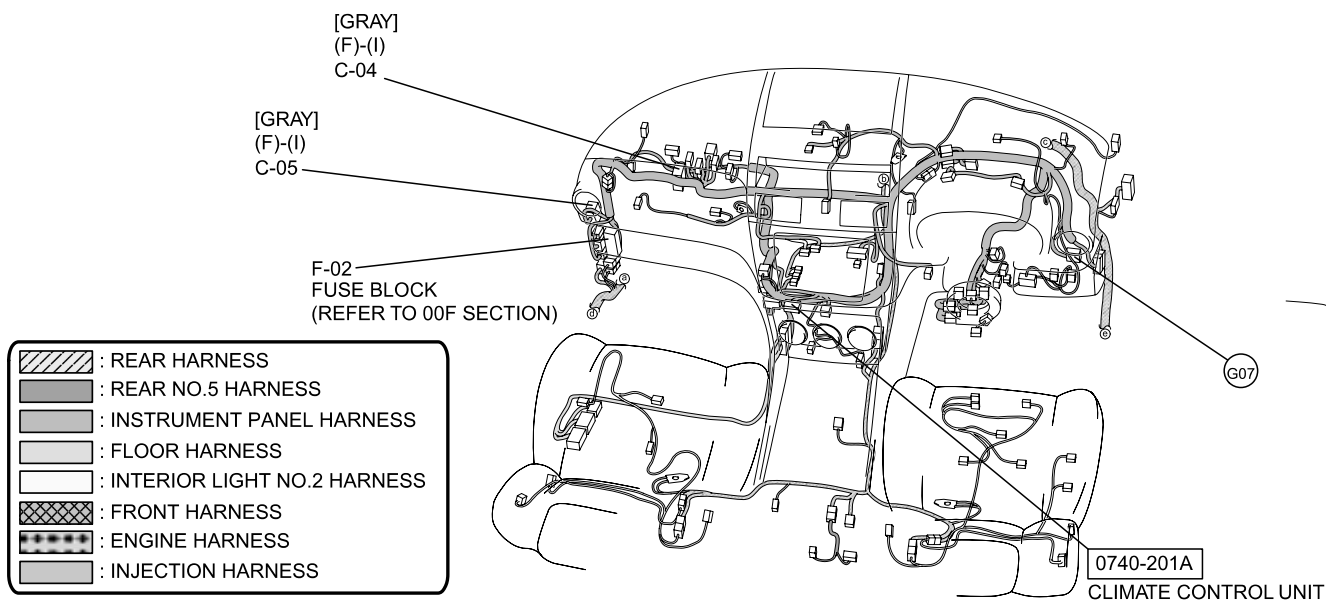


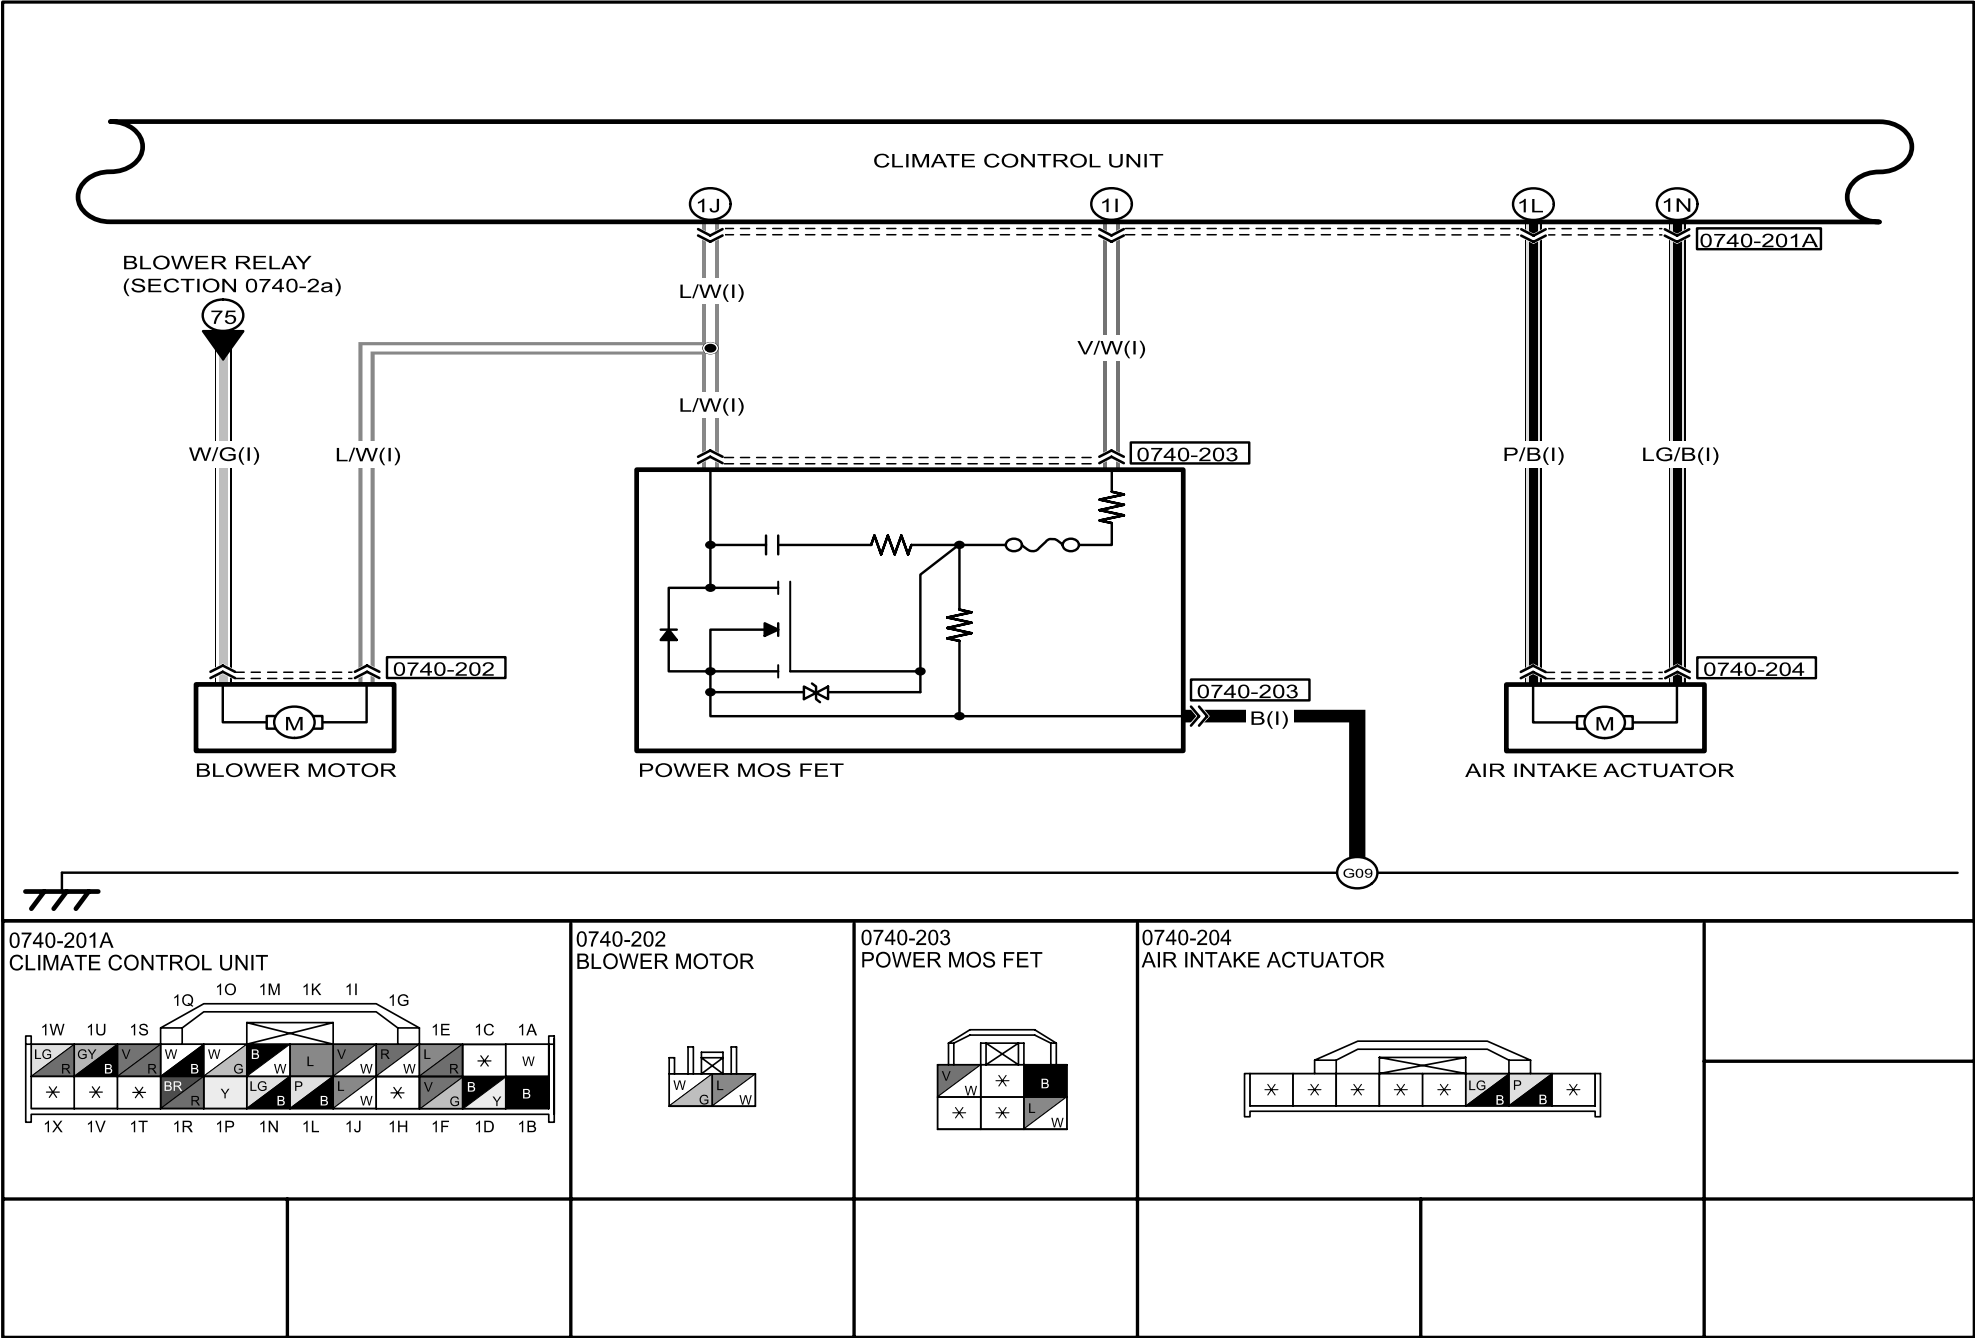

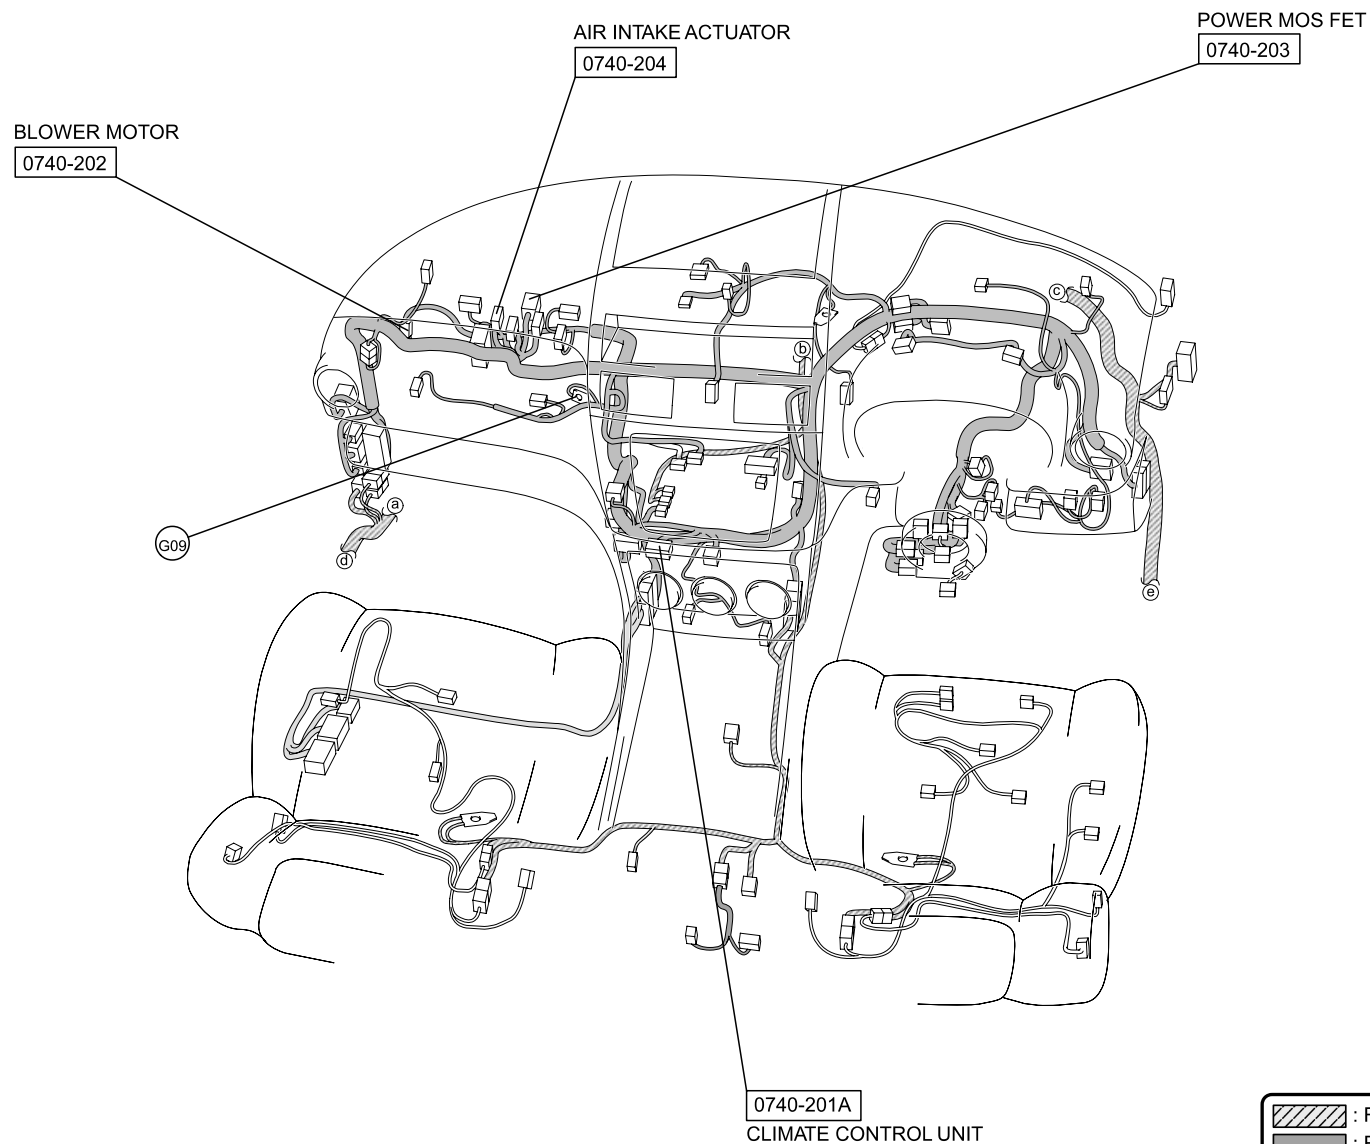

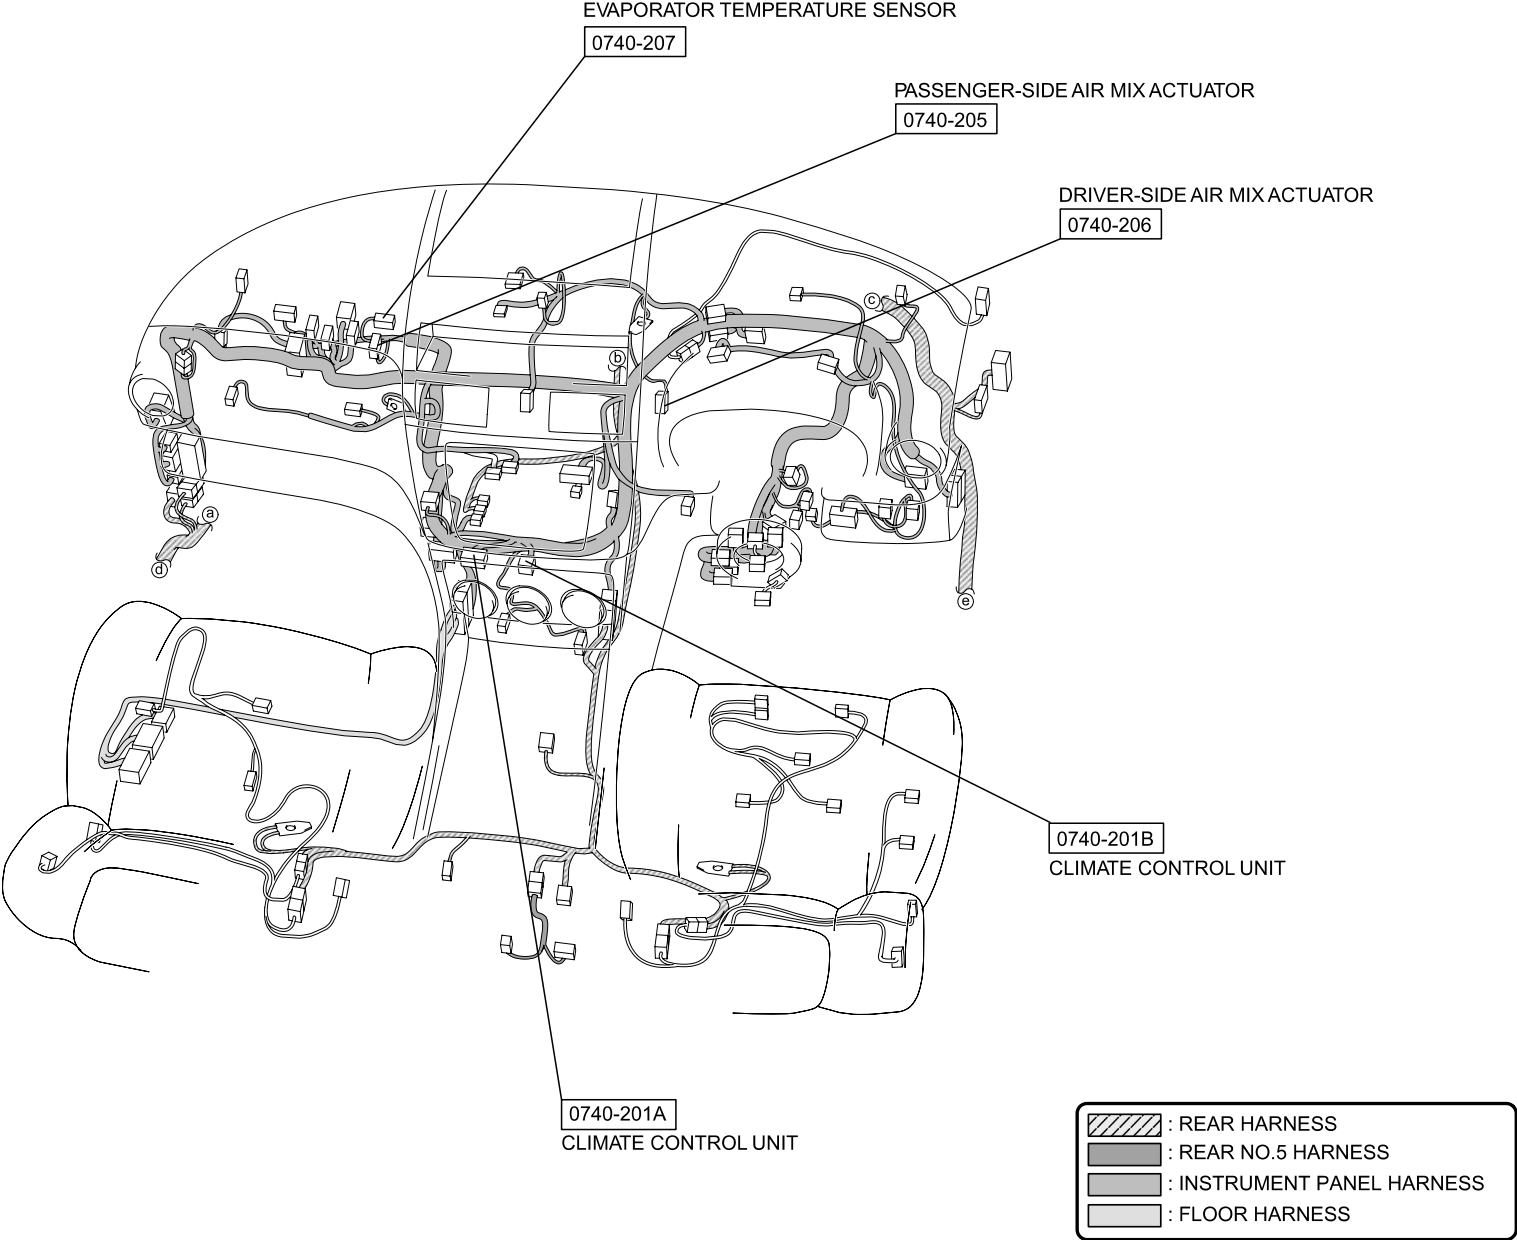

   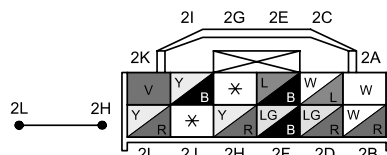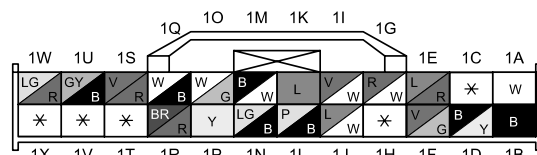

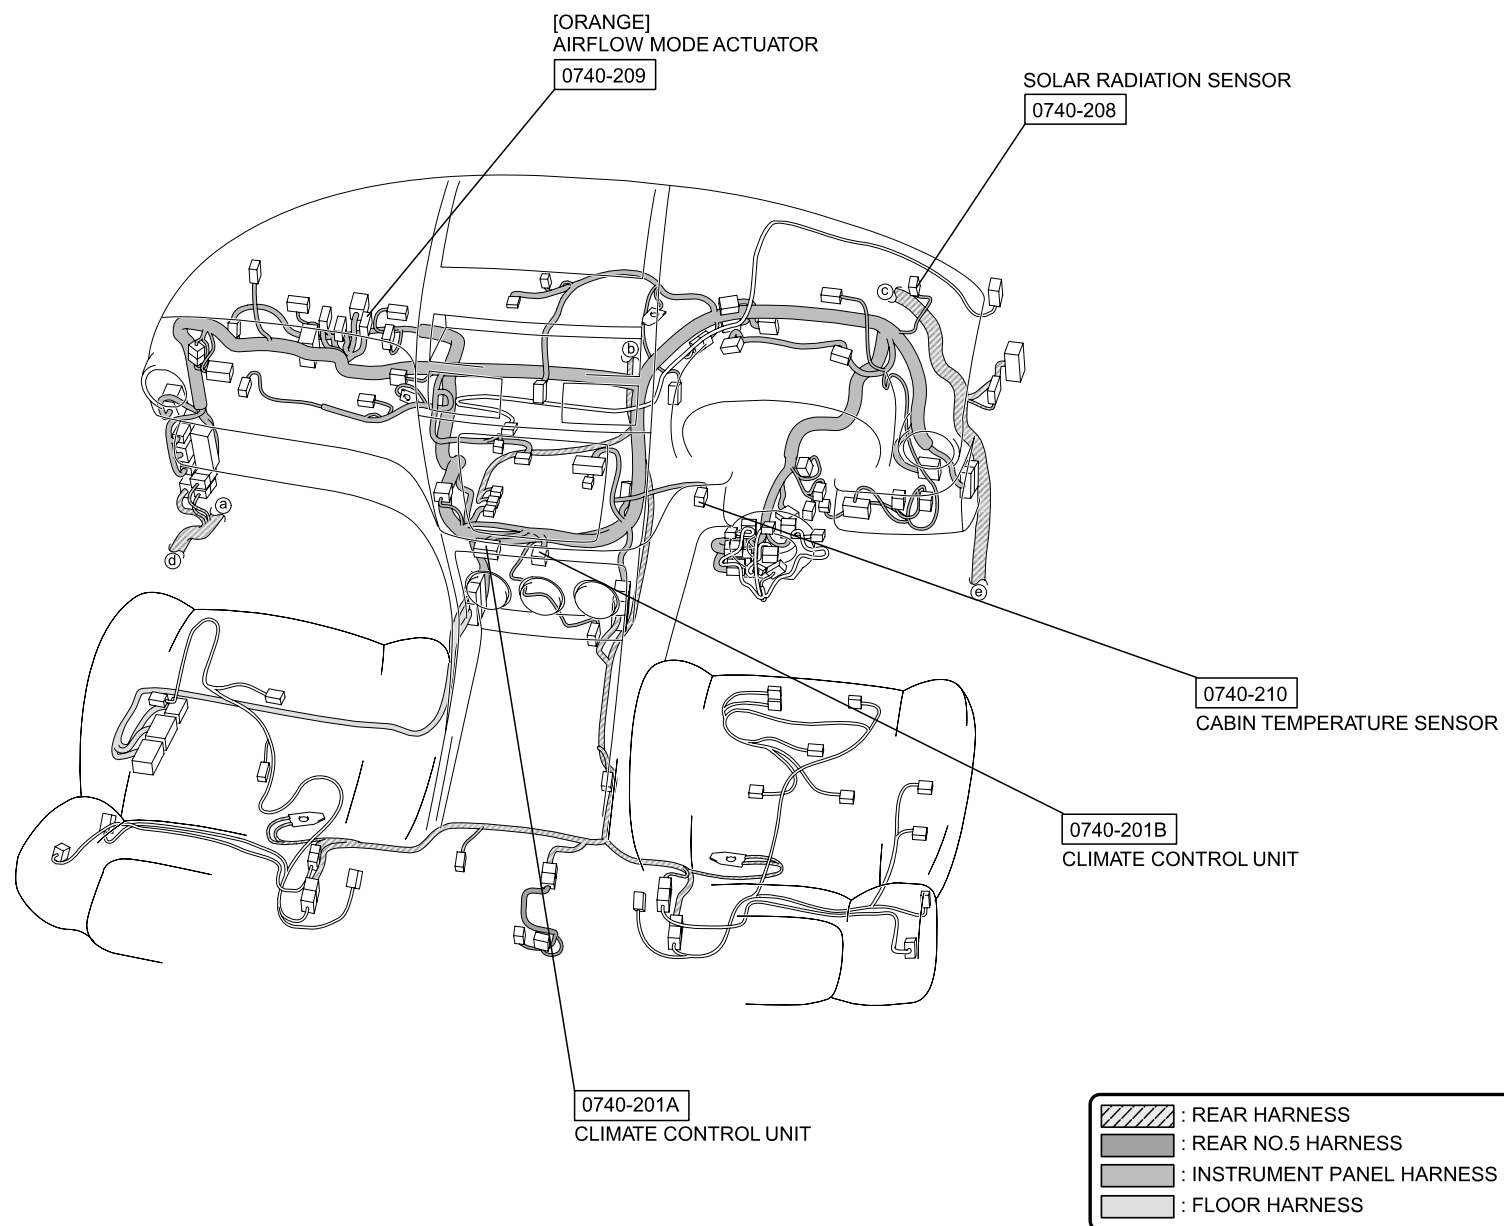

<p>0740-201A CLIMATE CONTROL UNIT</p>	<p>0740-211 REFRIGERANT PRESSURE SWITCH</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>(DUAL-PRESSURE TYPE)</p> </div> <div style="text-align: center;"> <p>(TRIPLE-PRESSURE TYPE)</p> </div> </div>			


HEATER AND AIR CONDITIONER SYSTEM (AUTO A/C)

0740-2e

[BLACK] ← TRIPLE-PRESSURE TYPE
REFRIGERANT PRESSURE SWITCH

0740-211

G30

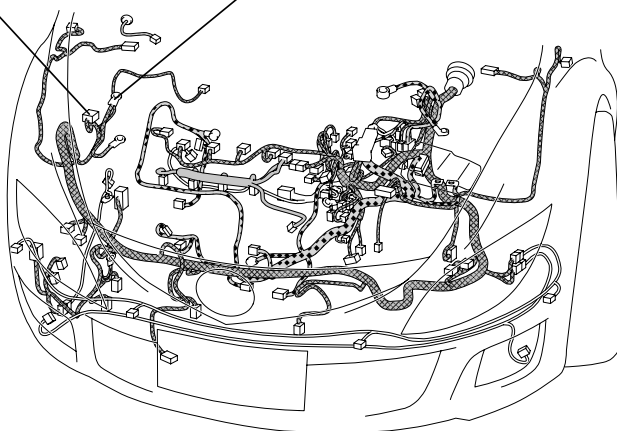


[EXCEPT MZR-CD 2.2]

[BLACK]
REFRIGERANT PRESSURE SWITCH


0740-211

G30

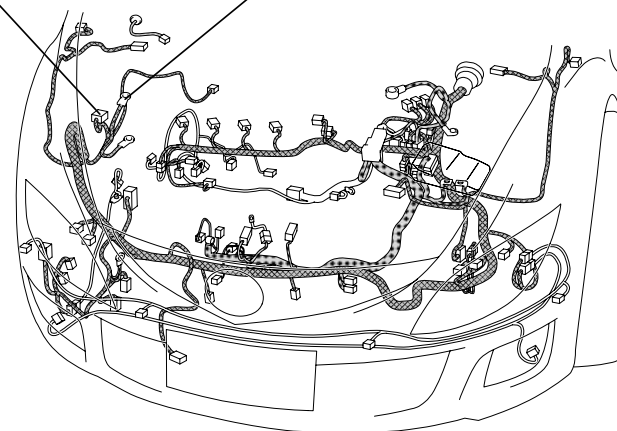


[MZR-CD 2.2]



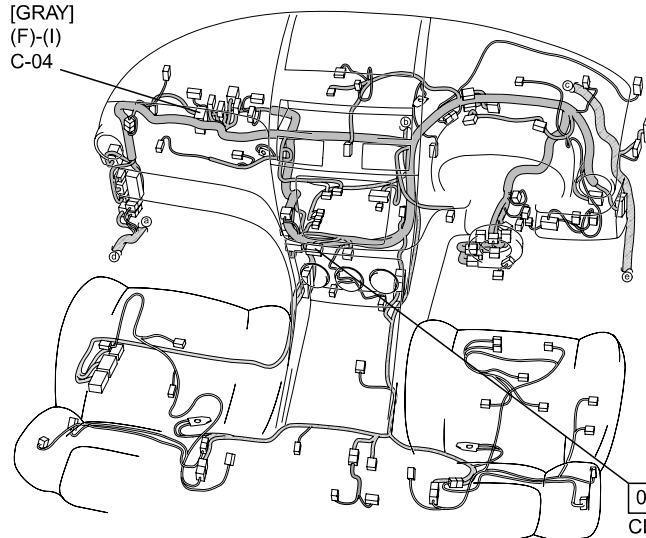

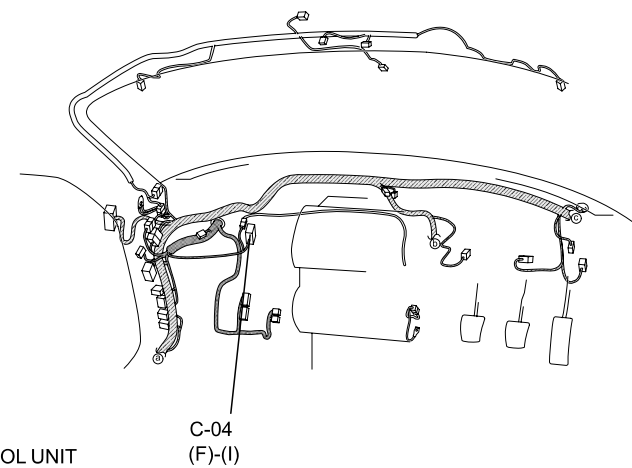



[GRAY]
(F)-(I)
C-04






0740-201A
CLIMATE CONTROL UNIT




 
C-04
(F)-(I)
[GRAY]

-  : REAR HARNESS
-  : REAR NO.5 HARNESS
-  : INSTRUMENT PANEL HARNESS
-  : FLOOR HARNESS
-  : INTERIOR LIGHT NO.2 HARNESS
-  : FRONT HARNESS
-  : ENGINE HARNESS
-  : INJECTION HARNESS

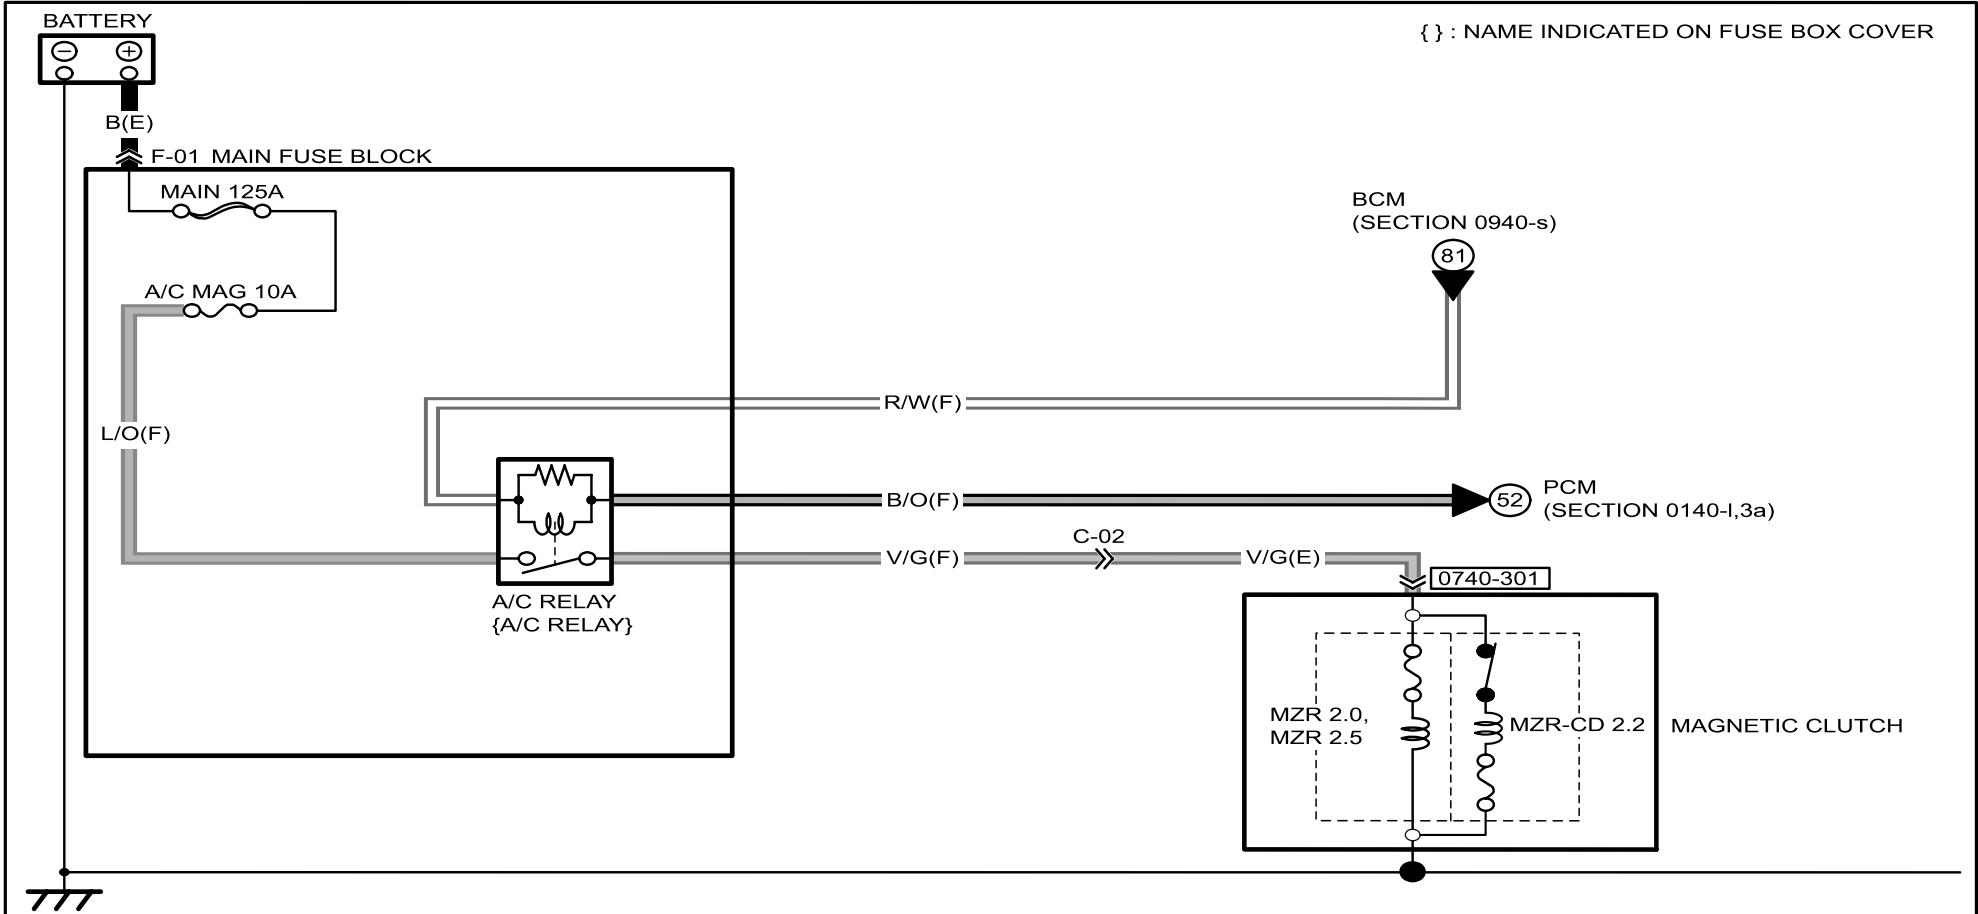

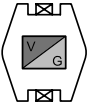0740-301 MAGNETIC CLUTCH						
						
(MZR 2.0, MZR 2.5)	(MZR-CD 2.2)					

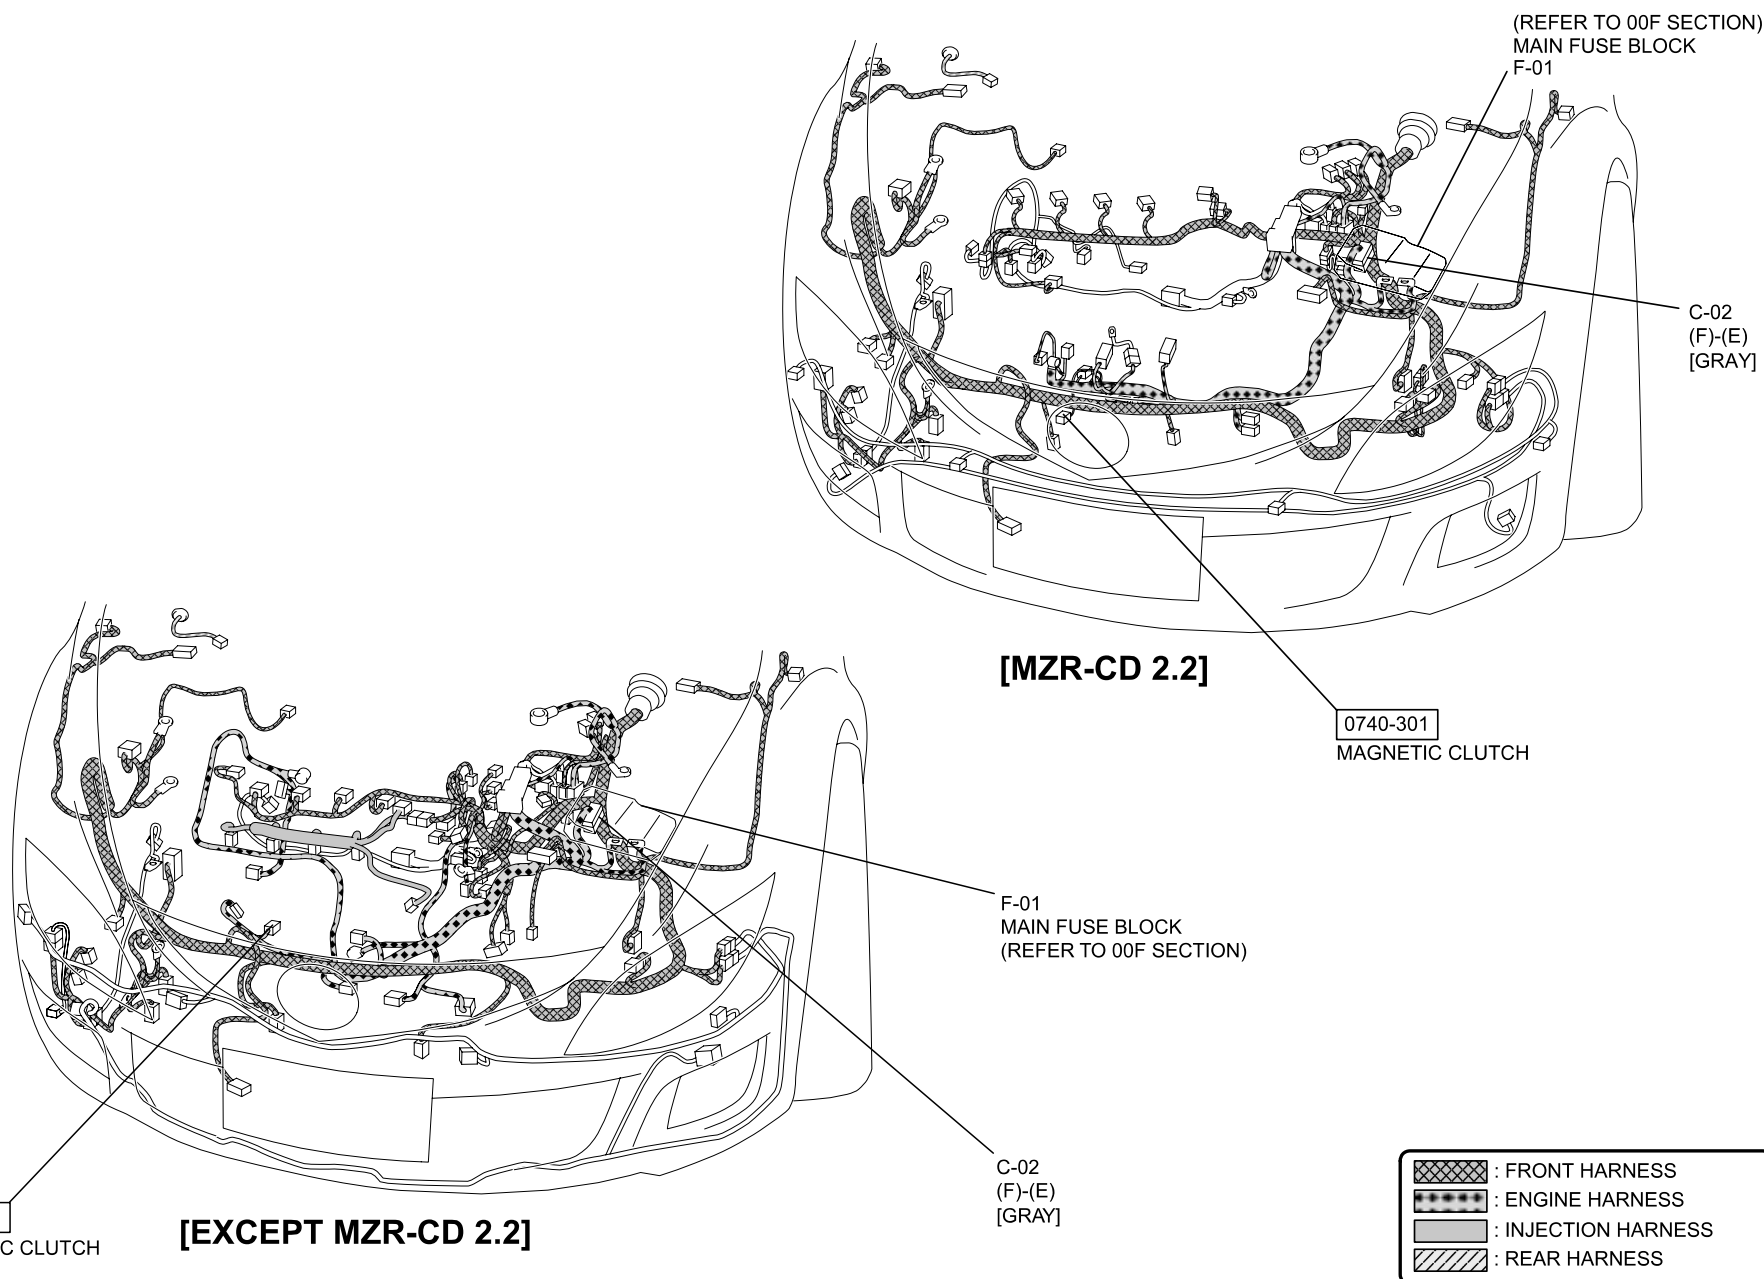


 

AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION)


0810-a

177

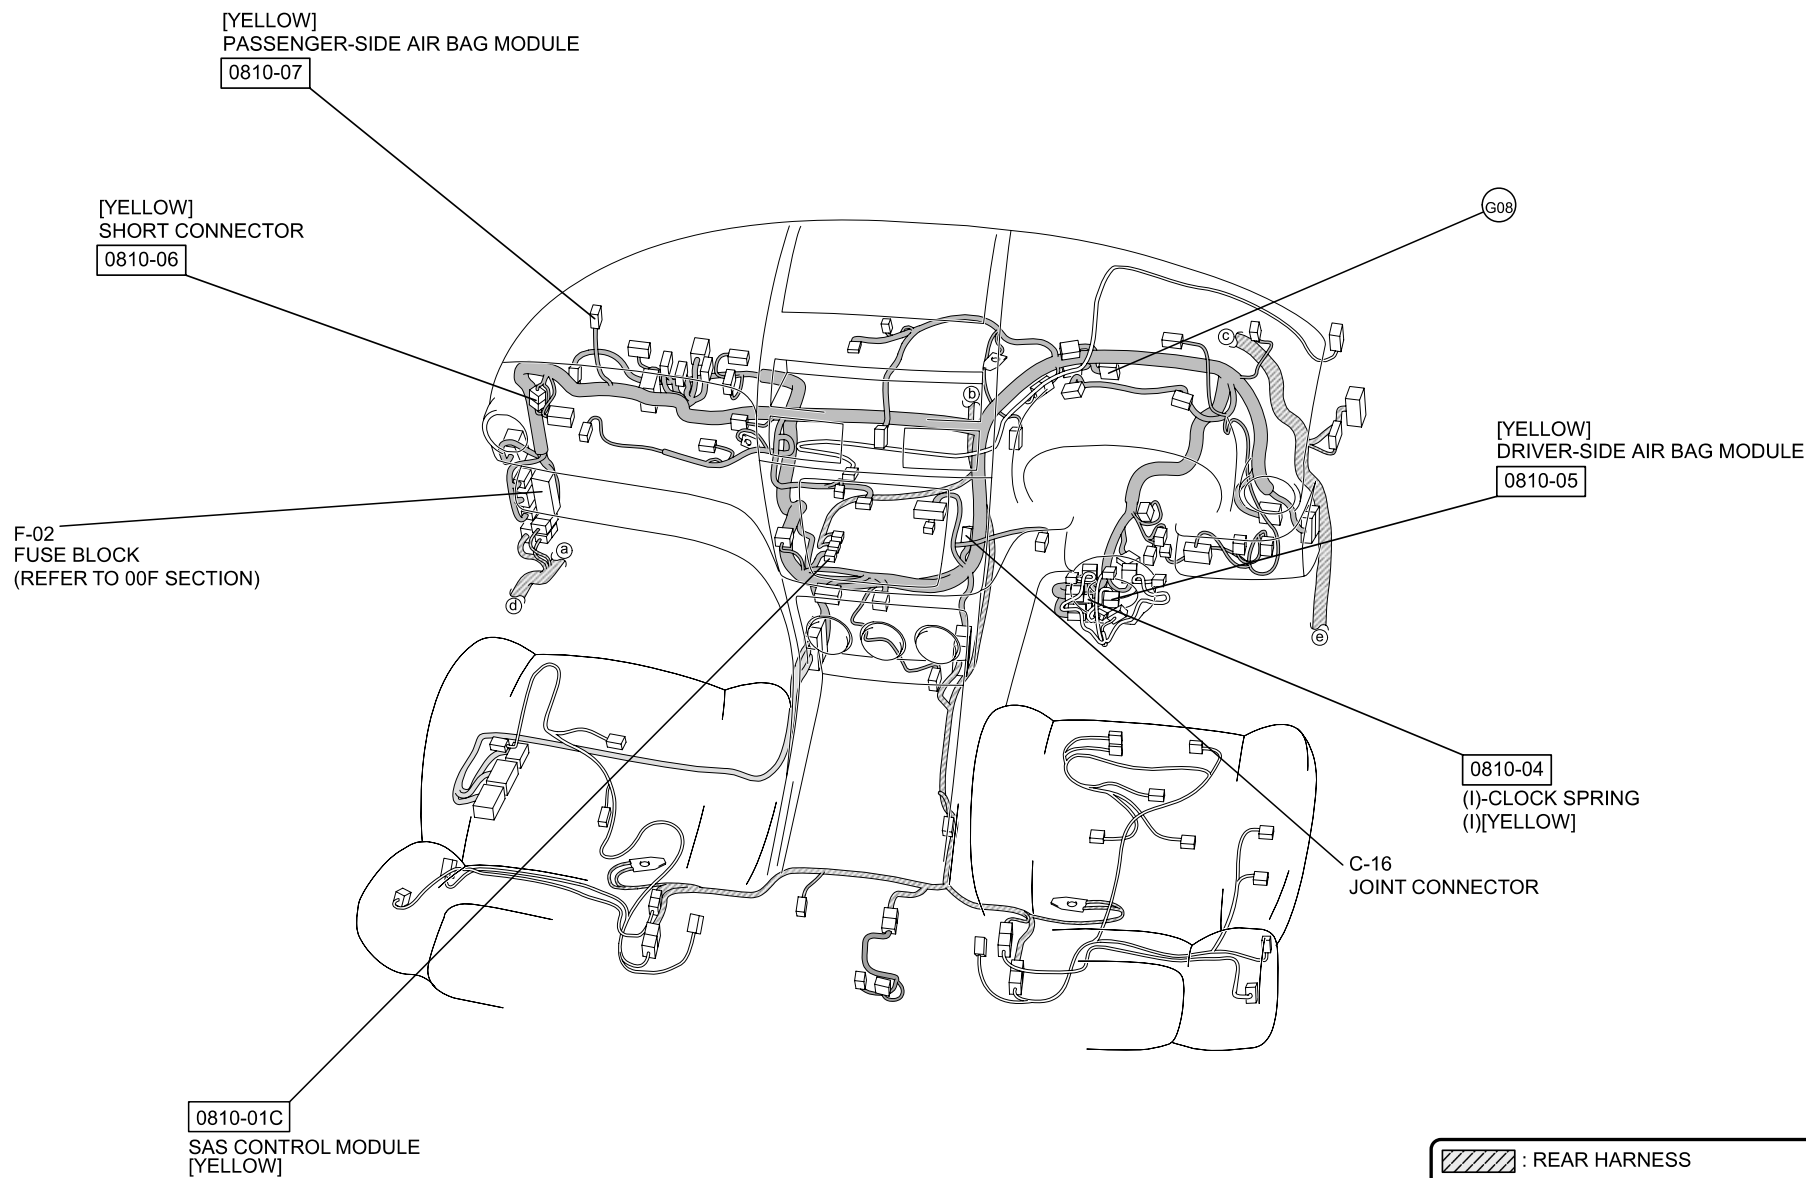


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS

: WITHOUT POWER SEAT

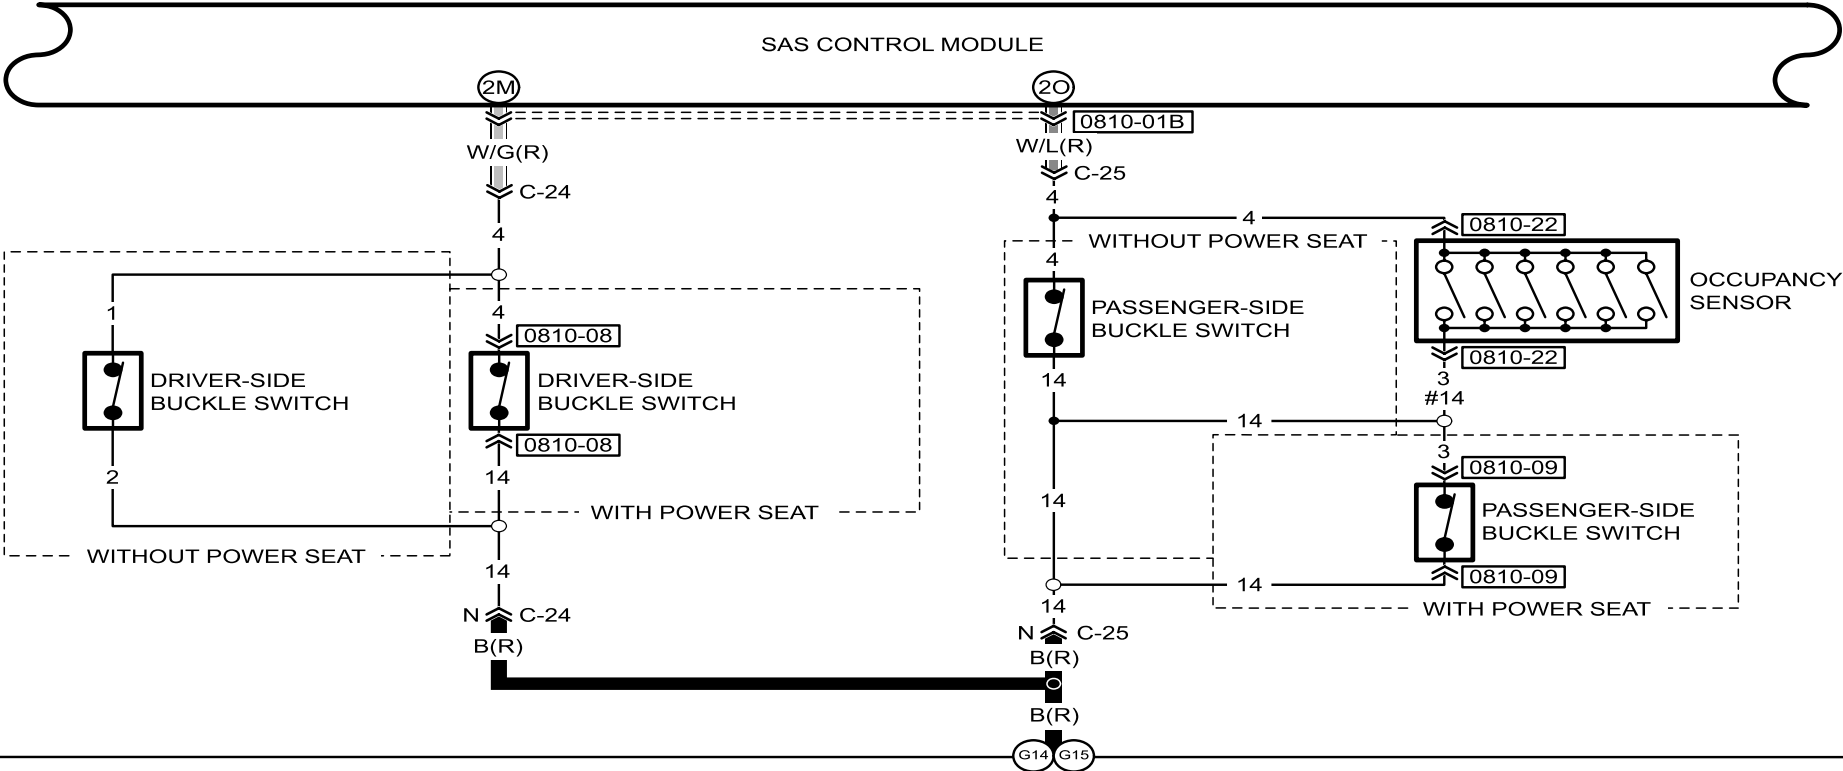

0810-01B
SAS CONTROL
MODULE

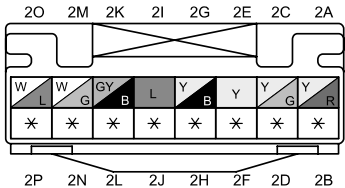

0810-08
DRIVER-SIDE BUCKLE SWITCH



WIRE COLORS ARE INDICATED BY NUMBERS.

0810-09
PASSENGER-SIDE BUCKLE SWITCH













WIRE COLORS ARE INDICATED BY NUMBERS.

0810-22
OCCUPANCY SENSOR




WIRE COLORS ARE INDICATED BY NUMBERS.

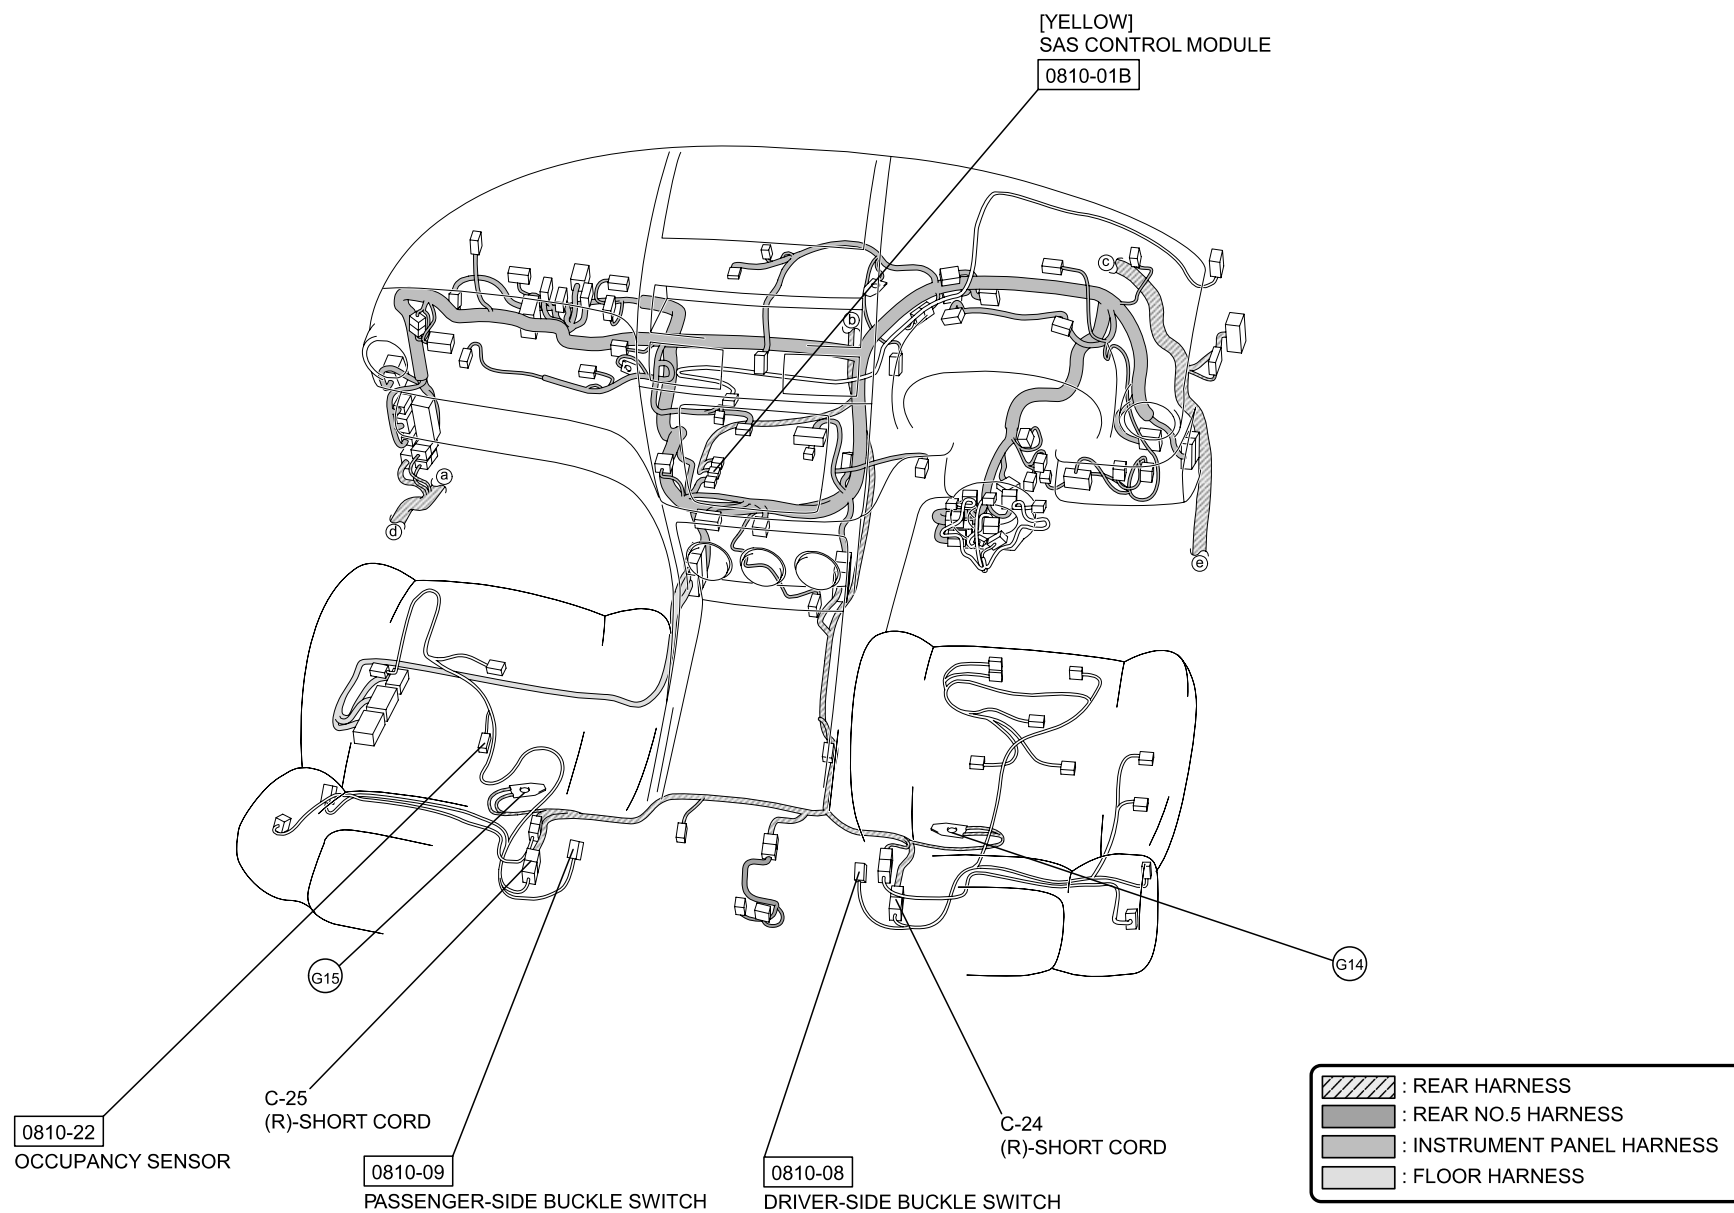


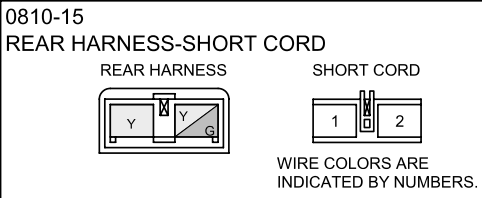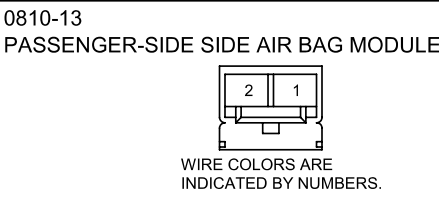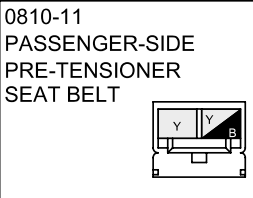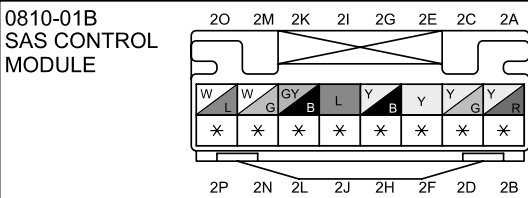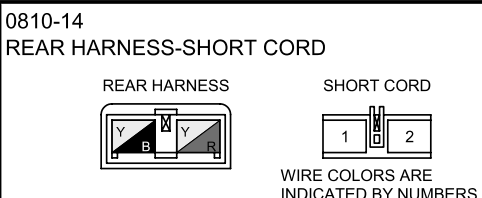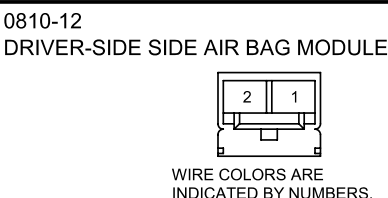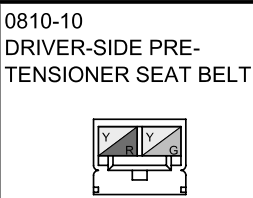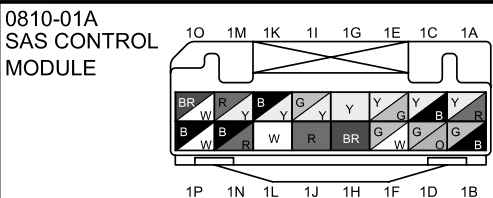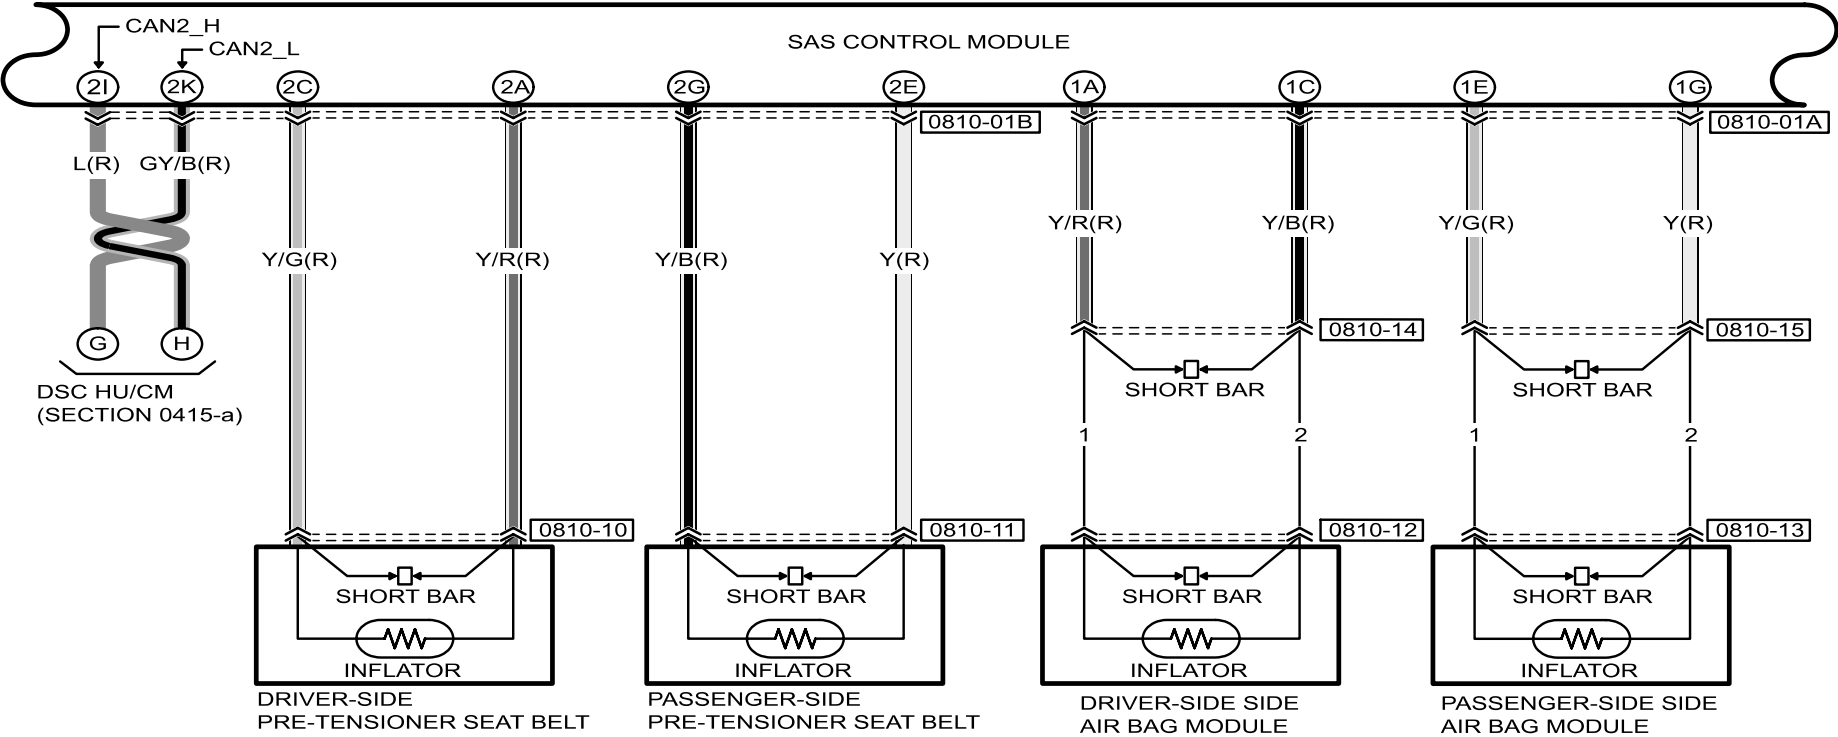

AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION)


0810-c


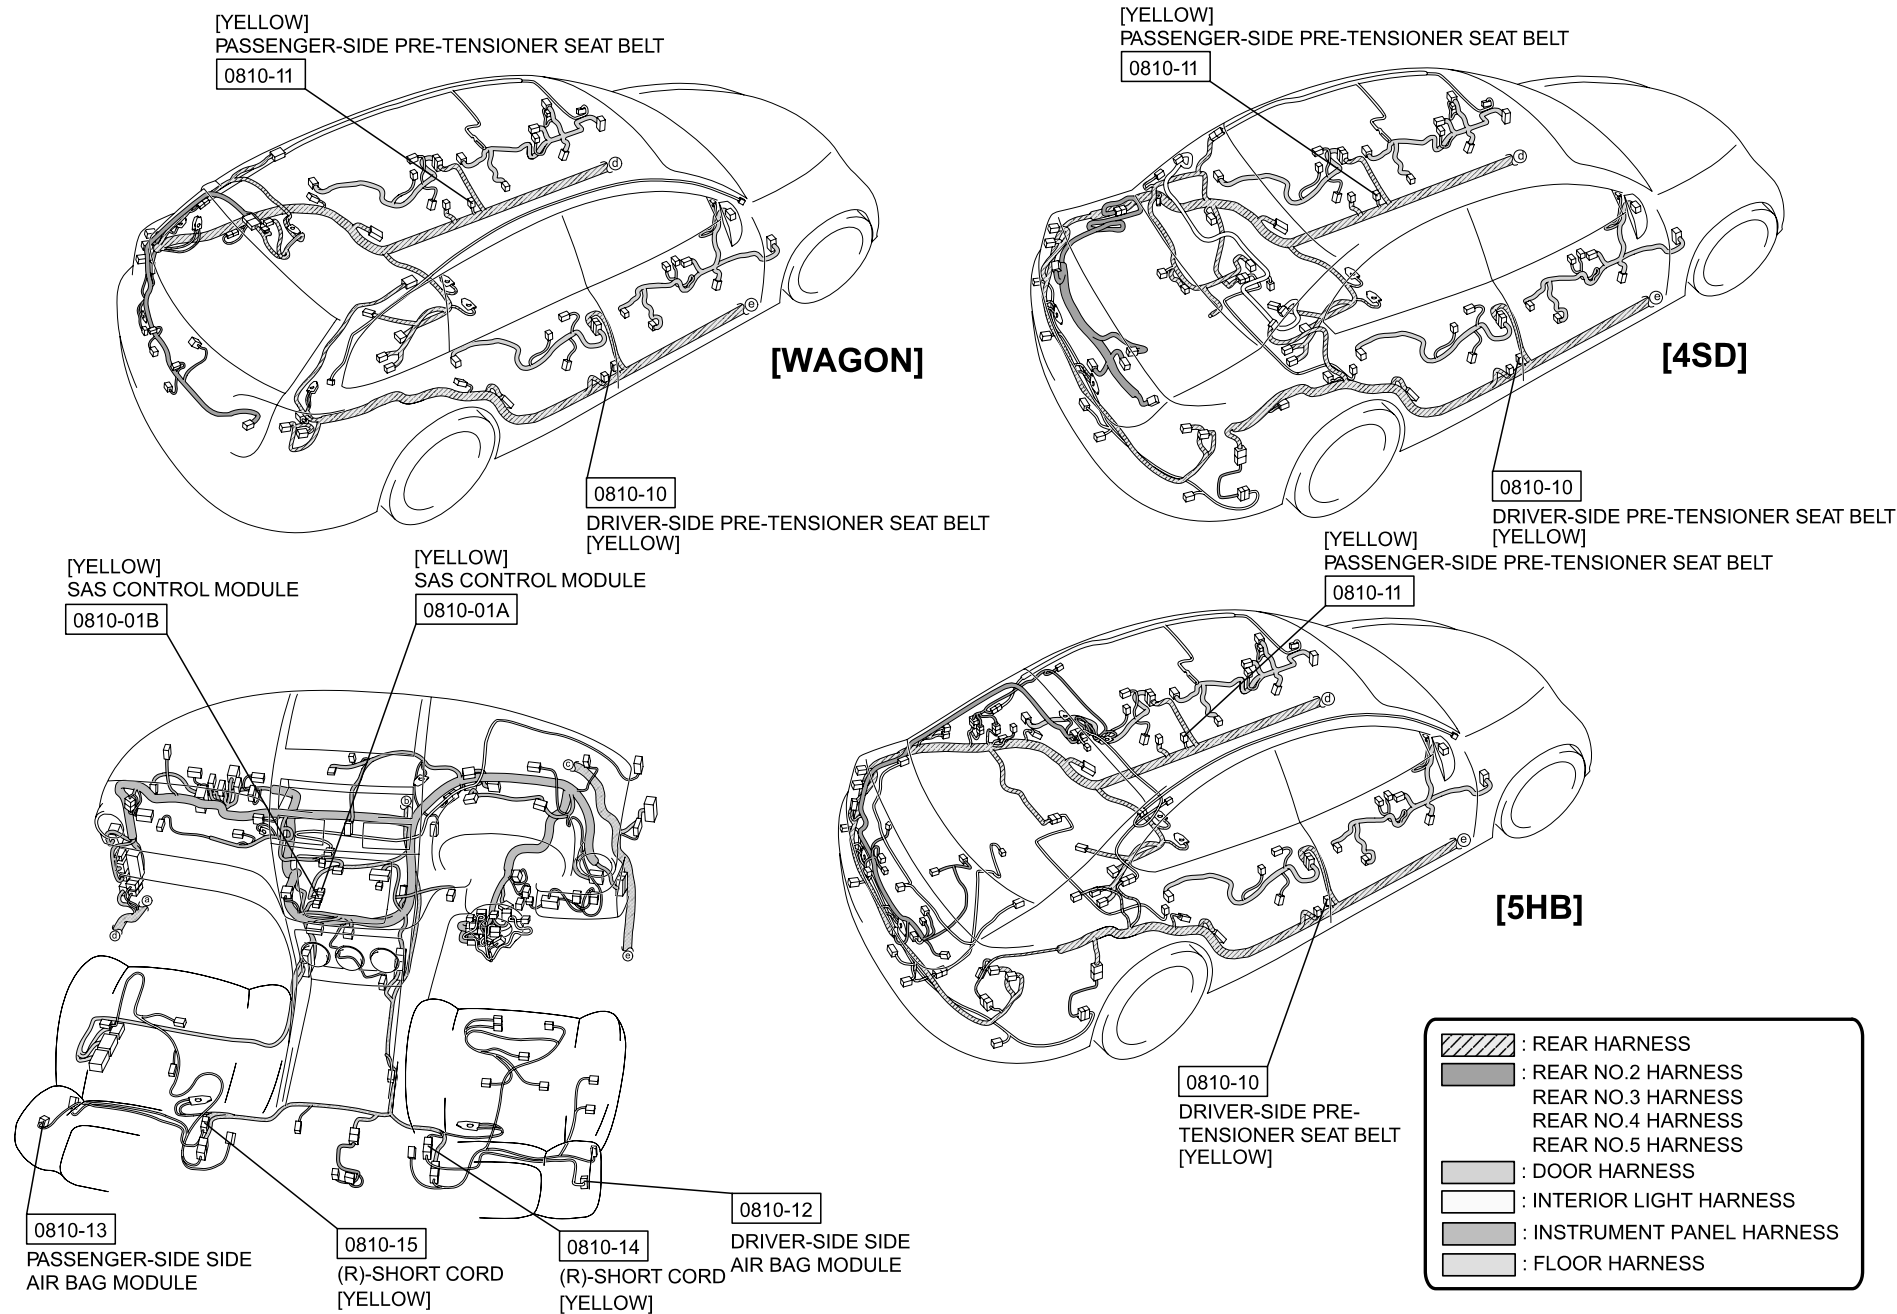


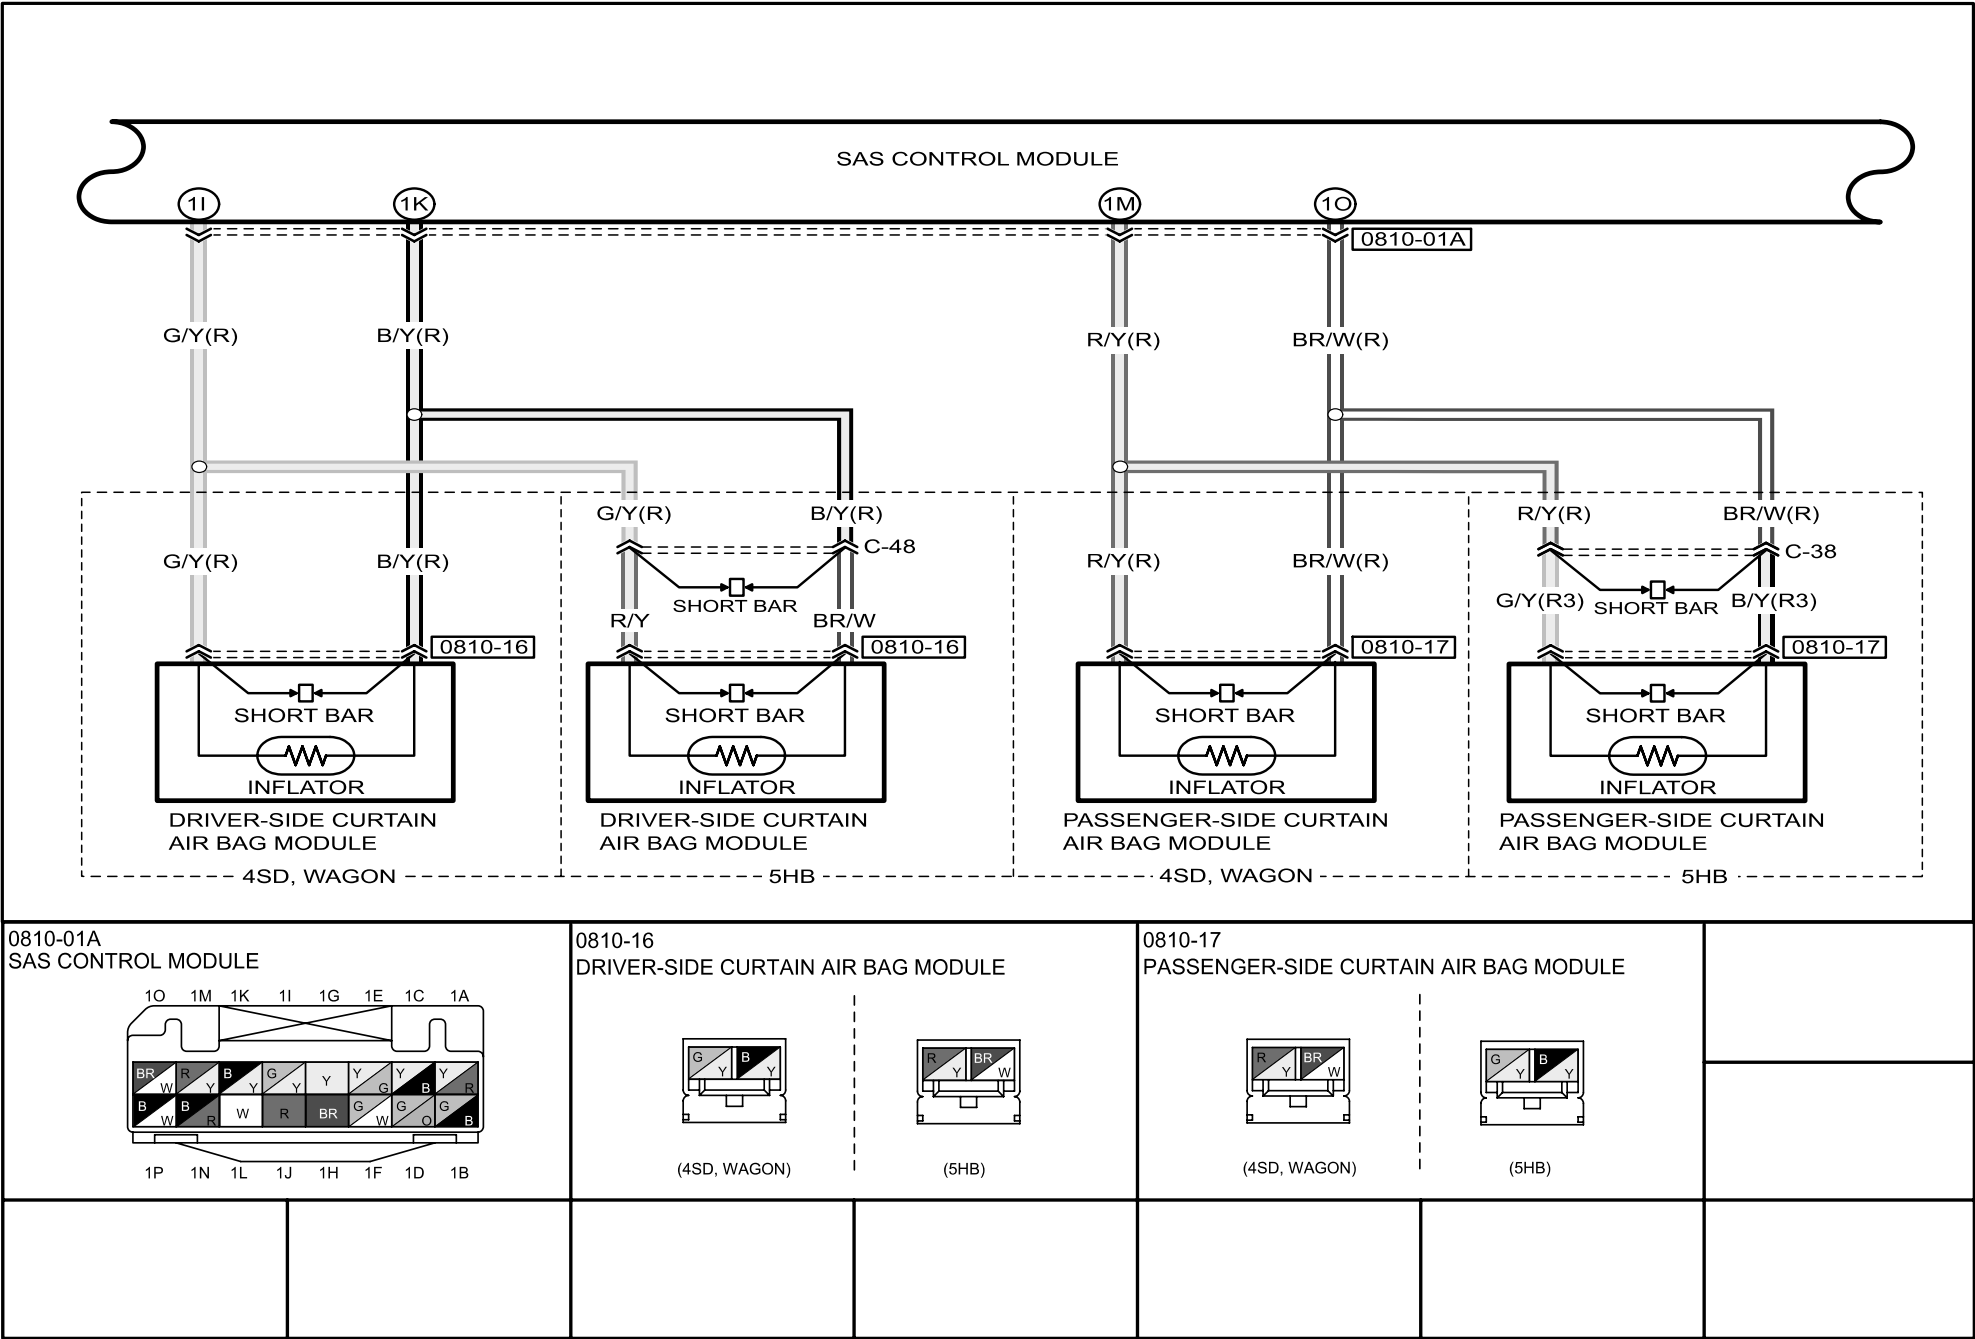


AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION)

0810-d

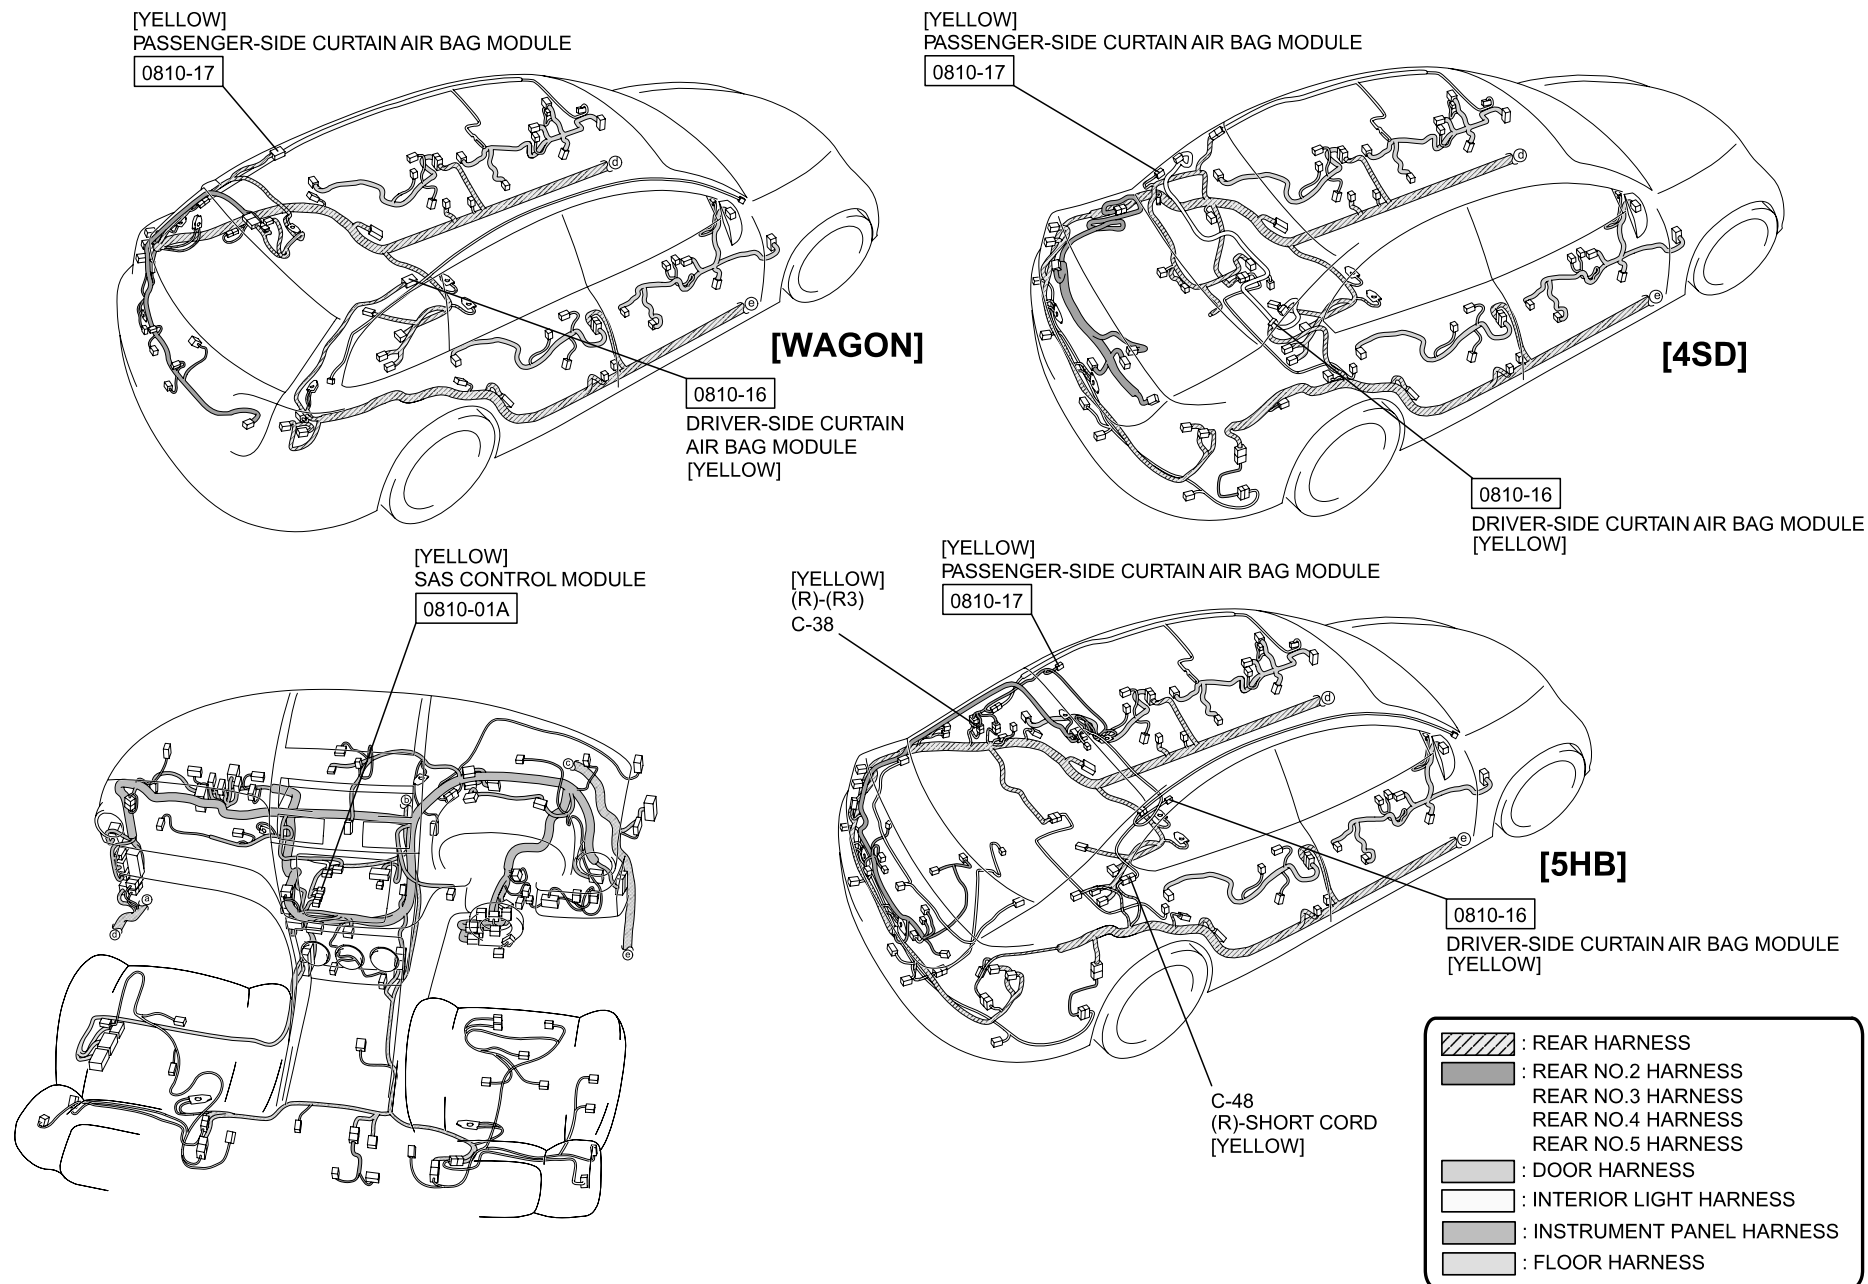


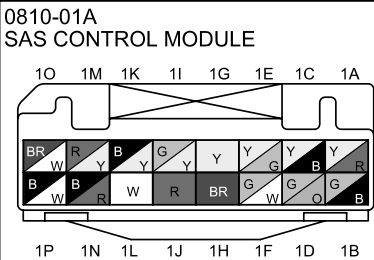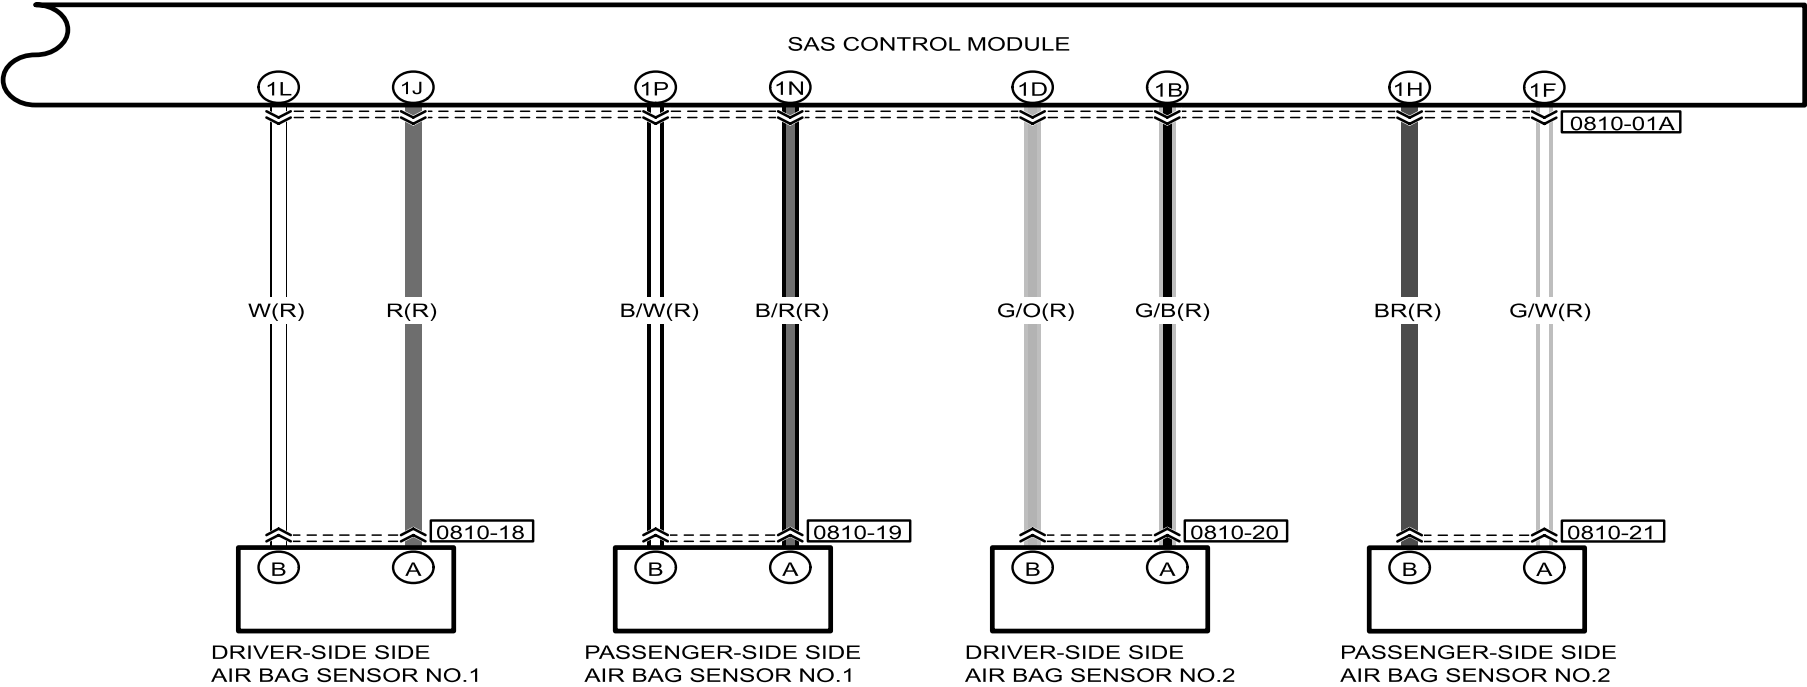


0810-18
DRIVER-SIDE SIDE AIR BAG
SENSOR NO.1

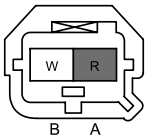


0810-19
PASSENGER-SIDE SIDE AIR BAG
SENSOR NO.1

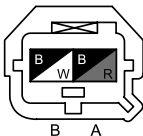

0810-20
DRIVER-SIDE SIDE AIR BAG
SENSOR NO.2




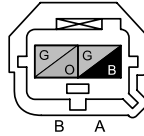




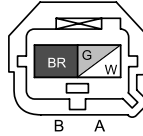



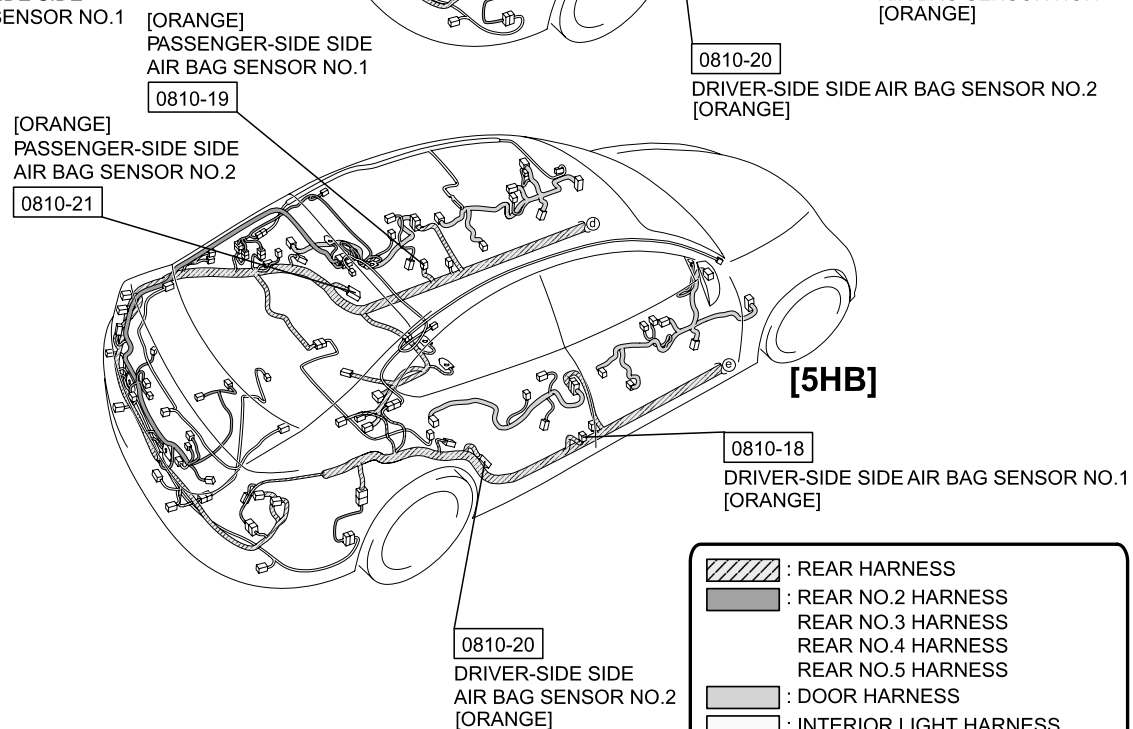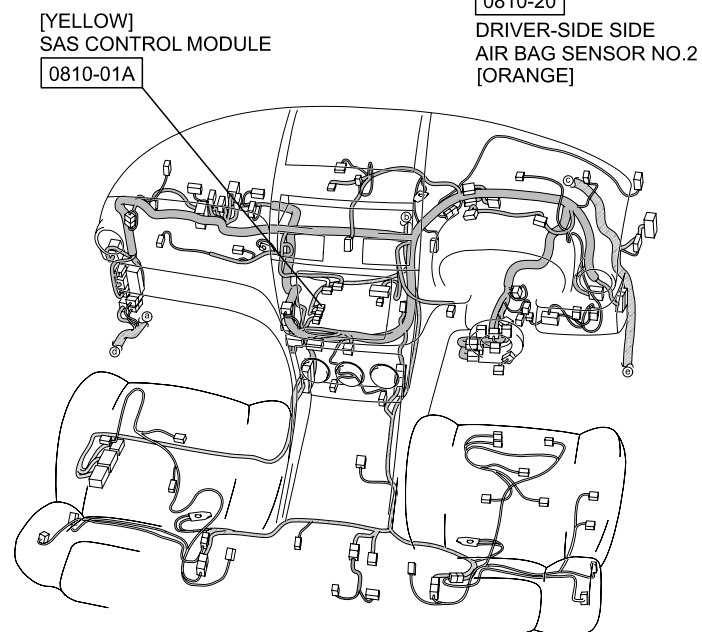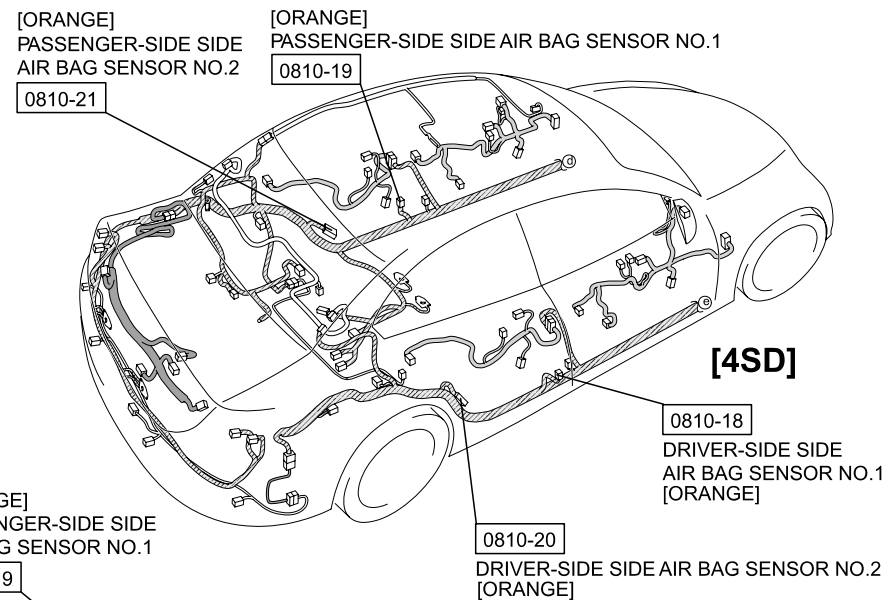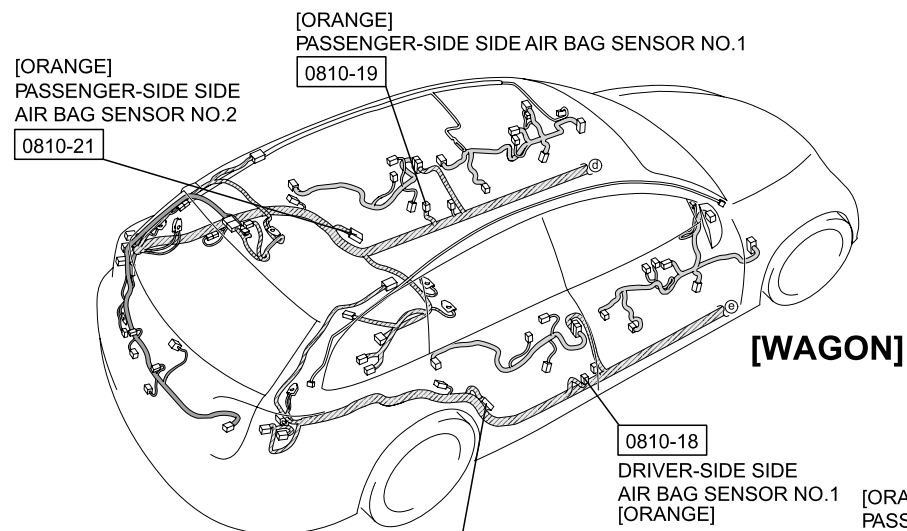


0810-21
PASSENGER-SIDE SIDE AIR BAG
SENSOR NO.2



AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION)

0810-e




-  : REAR HARNESS
-  : REAR NO.2 HARNESS
-  : REAR NO.3 HARNESS
-  : REAR NO.4 HARNESS
-  : REAR NO.5 HARNESS
-  : DOOR HARNESS
-  : INTERIOR LIGHT HARNESS
-  : INSTRUMENT PANEL HARNESS
-  : FLOOR HARNESS


REAR WINDOW DEFROSTER

0912-1a


{ } : NAME INDICATED ON FUSE BOX COVER

186


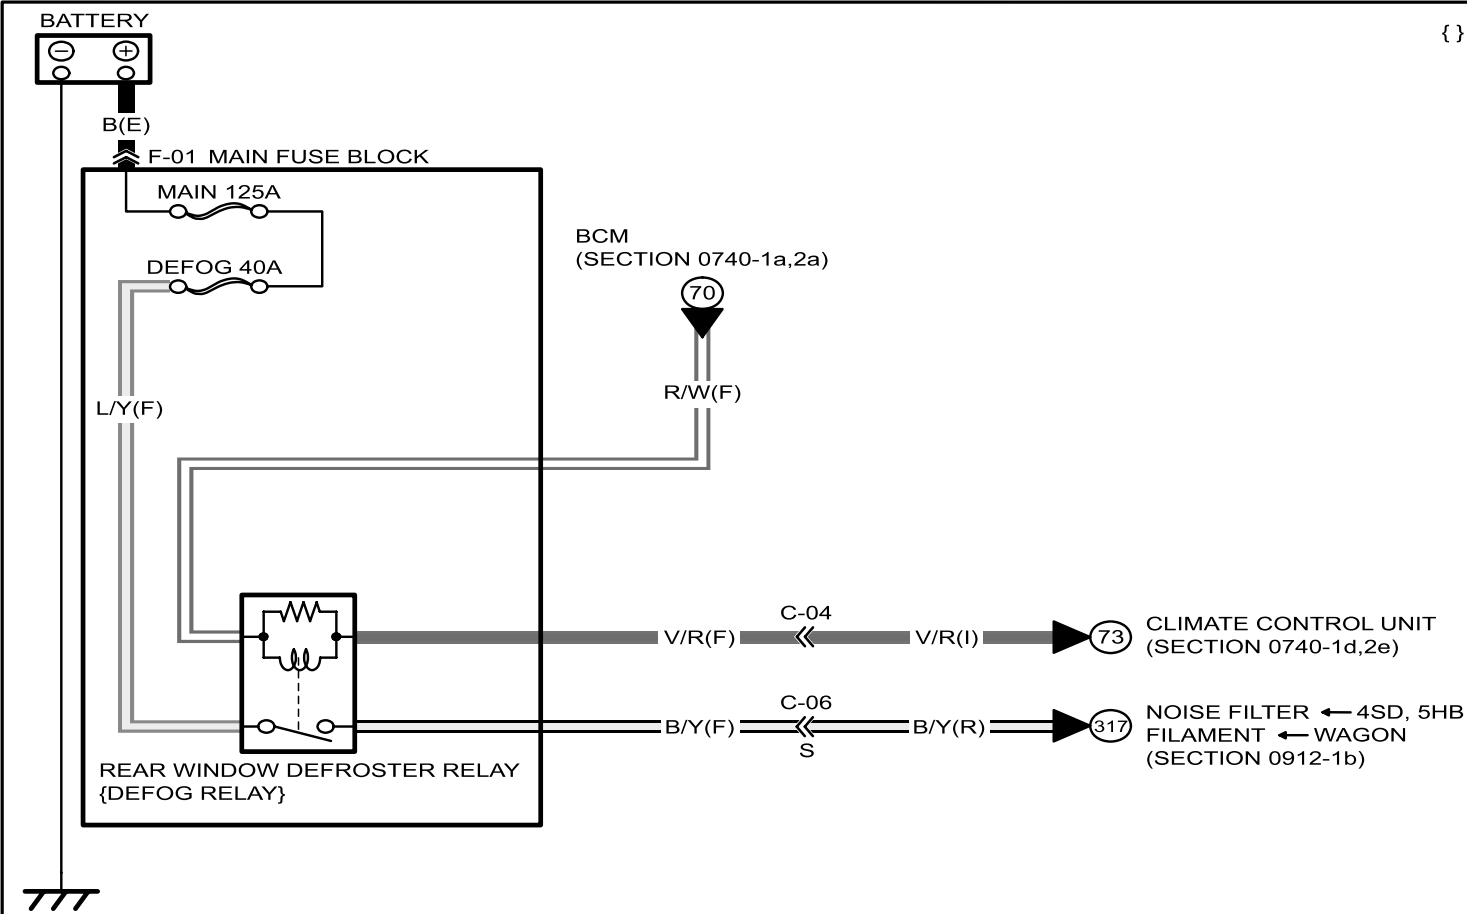


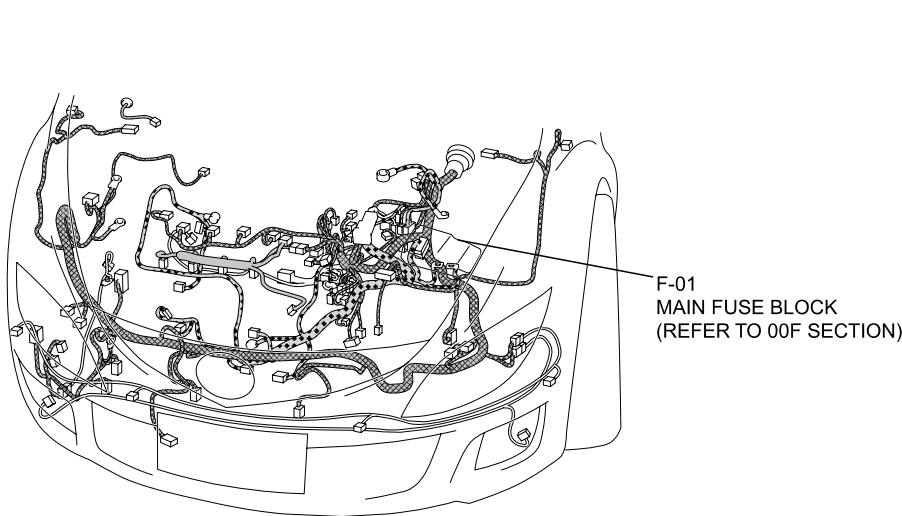

[EXCEPT MZR-CD 2.2]

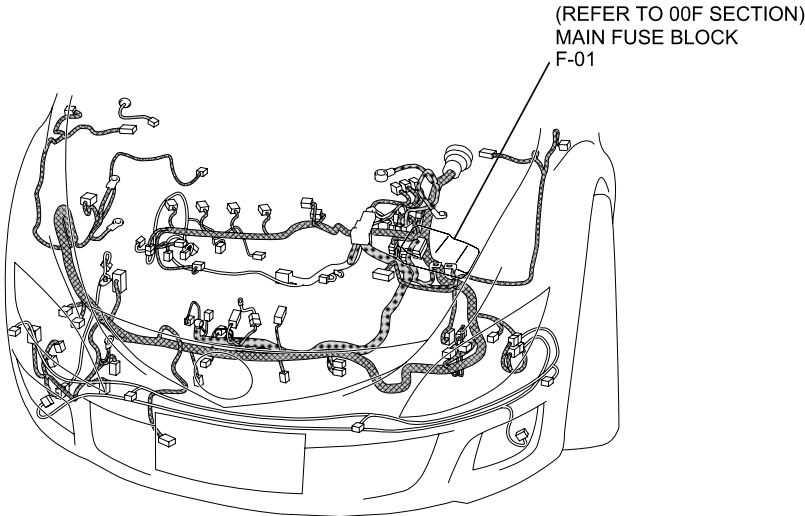

[MZR-CD 2.2]

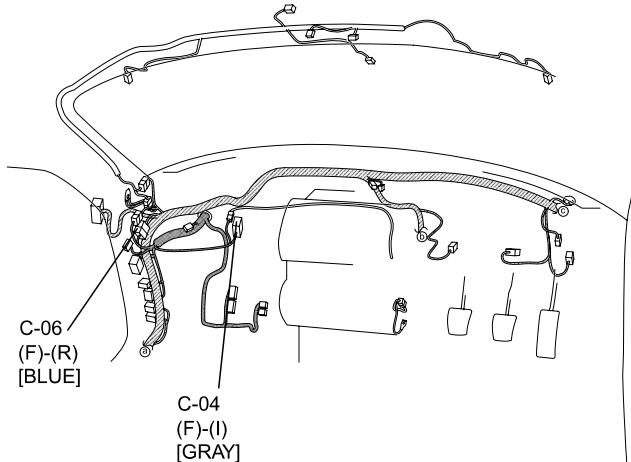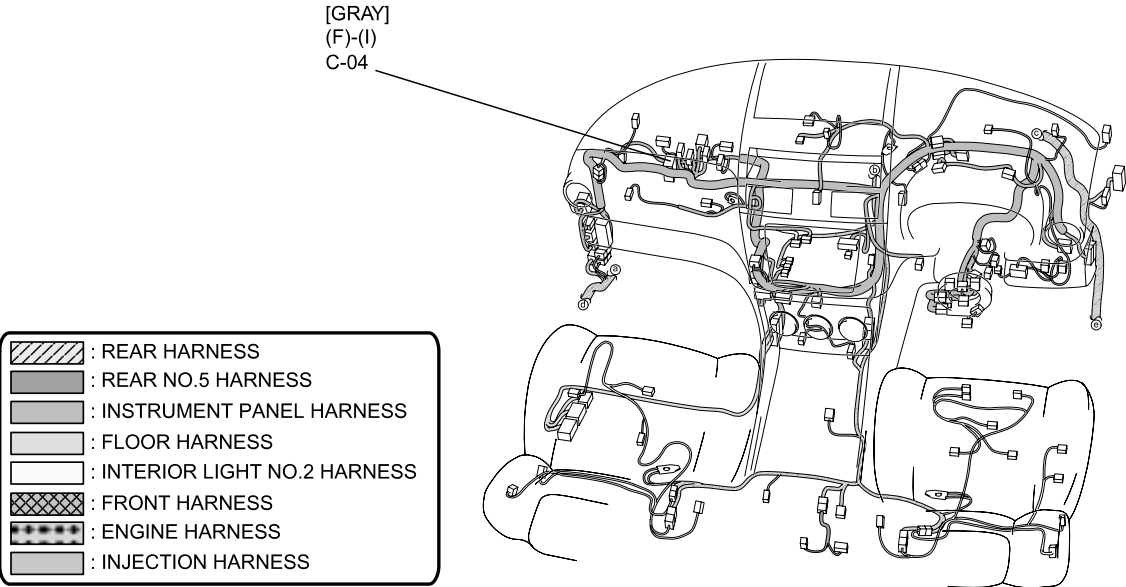

- [Hatched pattern] : REAR HARNESS
- [Dark gray pattern] : REAR NO.5 HARNESS
- [Medium gray pattern] : INSTRUMENT PANEL HARNESS
- [Light gray pattern] : FLOOR HARNESS
- [White pattern] : INTERIOR LIGHT NO.2 HARNESS
- [Cross-hatched pattern] : FRONT HARNESS
- [Dotted pattern] : ENGINE HARNESS
- [Solid gray pattern] : INJECTION HARNESS

[] : 5HB

REAR WINDOW DEFROSTER RELAY
(SECTION 0912-1a)

317

B/Y(R)

4SD, 5HB

B/Y(R)

4SD

B/Y(R)

B/Y(R)
[B/Y(R2)]

0912-104

NOISE FILTER

B/Y(R)

B/Y(R2)

A C-36

A C-41

B(R3)

5HB

B/Y(R)

C-50

B/Y(R2)

0912-102

FILAMENT

WAGON

R/Y 5HB B/L

0912-103

0912-102

0912-101

FILAMENT

0912-101
FILAMENT



(4SD)



(5HB)

0912-102
FILAMENT



(4SD)



(5HB)



(WAGON)

0912-103
NOISE FILTER












0912-104
NOISE FILTER

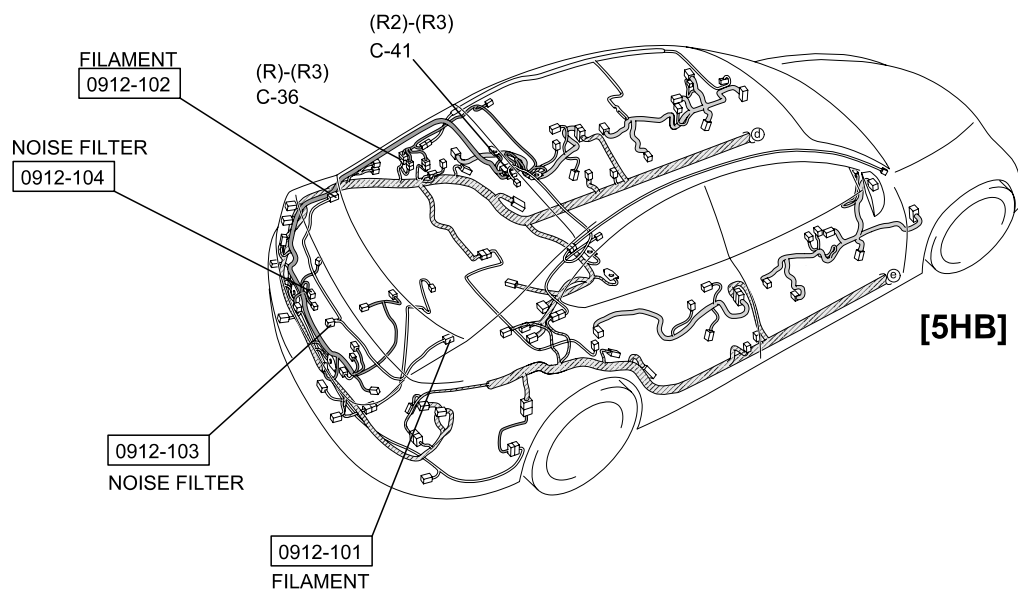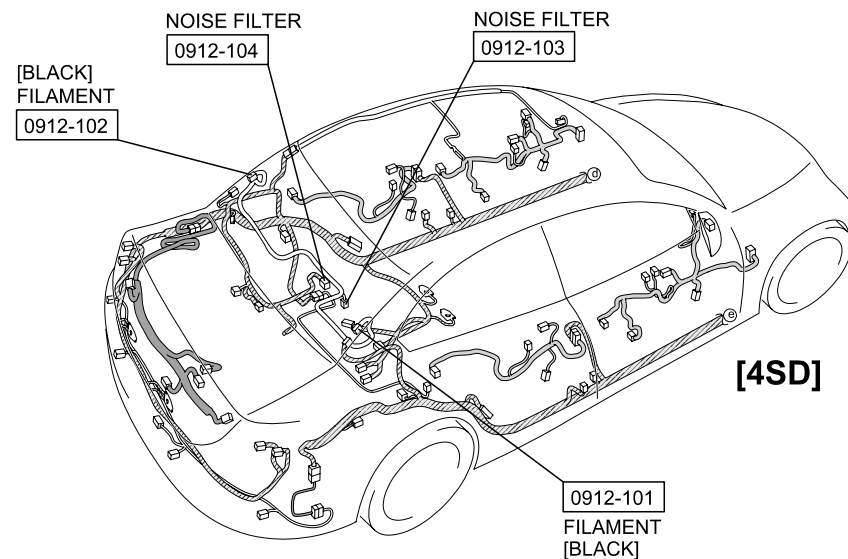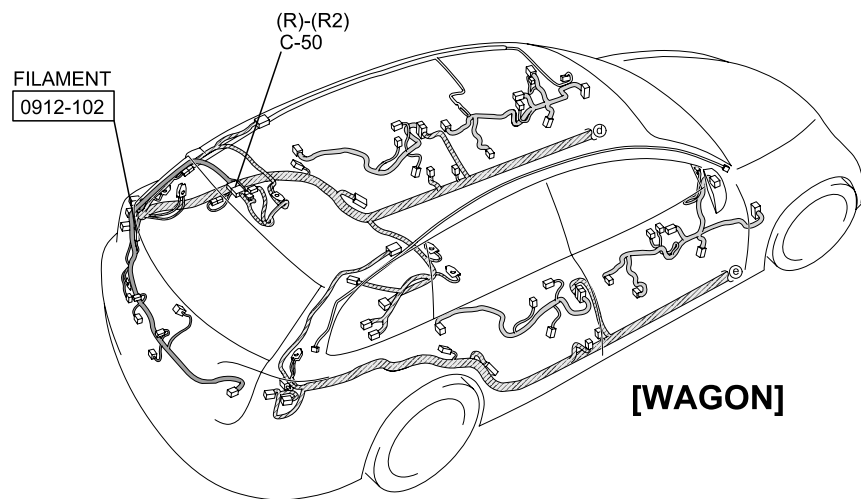



REAR WINDOW DEFROSTER


0912-1b




	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.3 HARNESS
	: REAR NO.4 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS

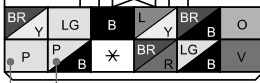0912-501B POWER OUTER MIRROR SWITCH / POWER WINDOW MAIN SWITCH  : NOT USED						

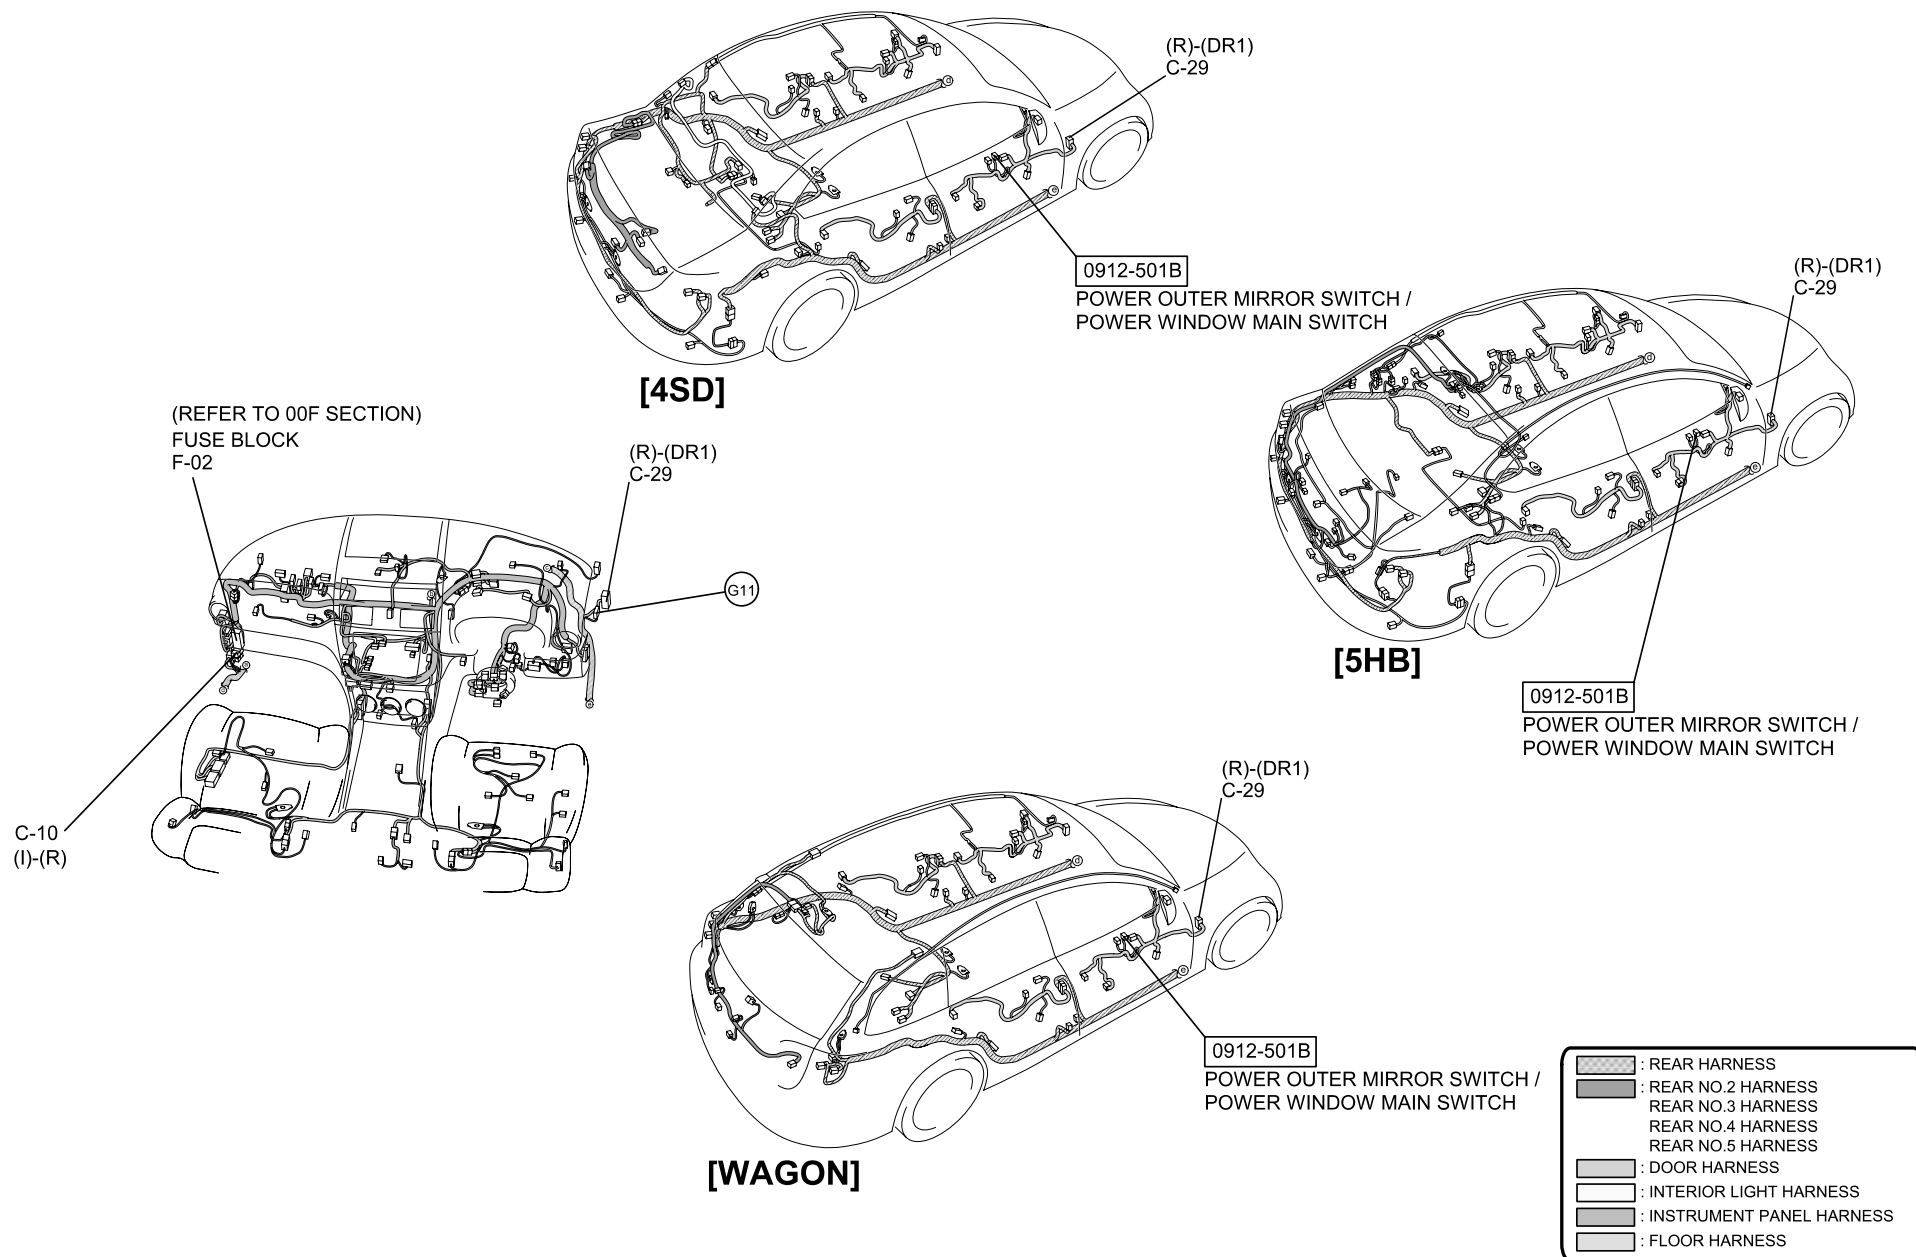


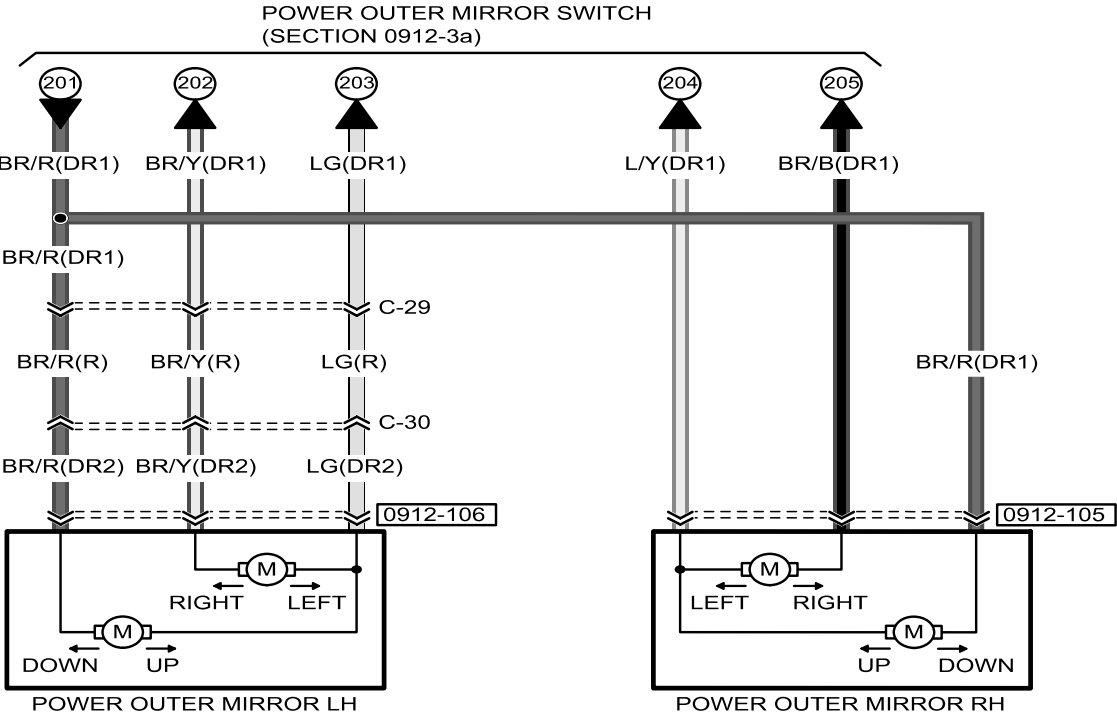

0912-105
POWER OUTER MIRROR RH

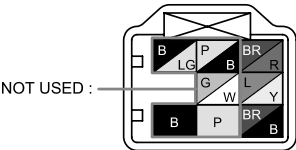






0912-106
POWER OUTER MIRROR LH

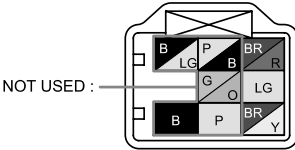


POWER OUTER MIRROR

0912-3b


193

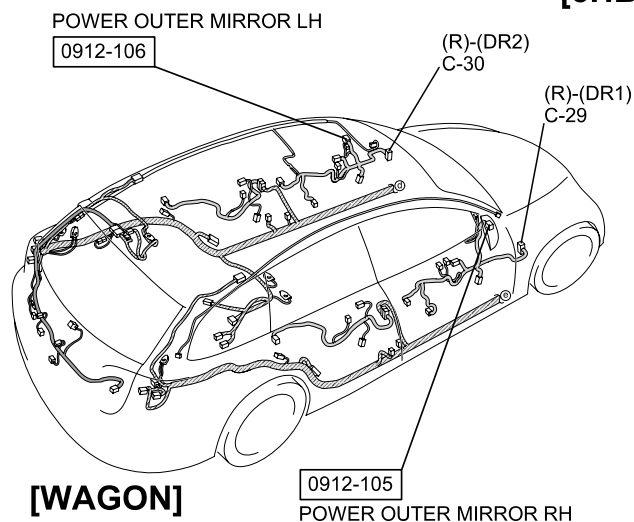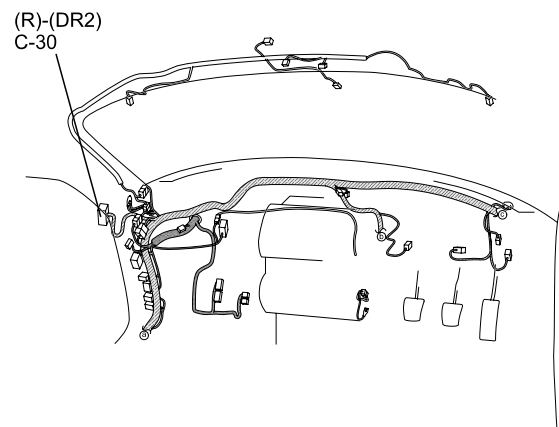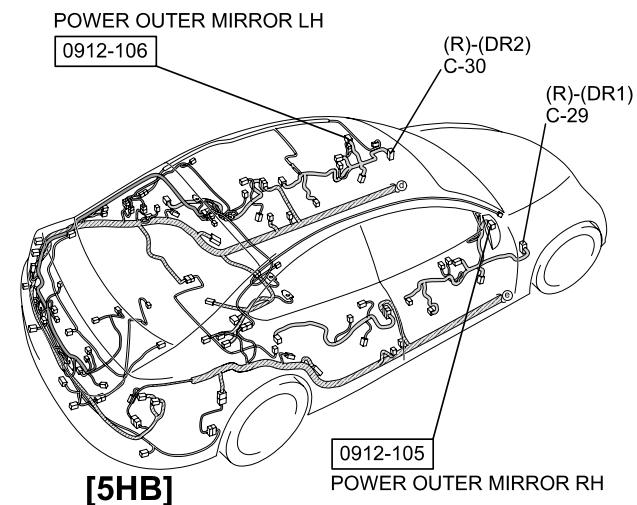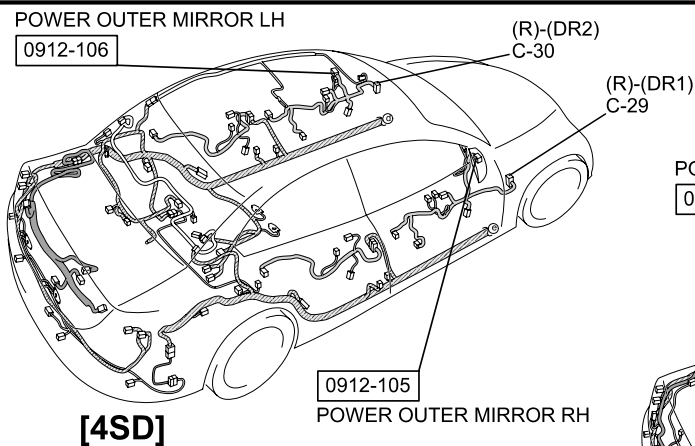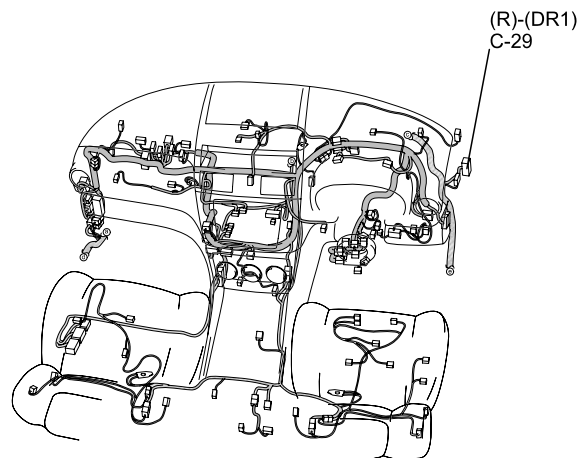



	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.3 HARNESS
	: REAR NO.4 HARNESS
	: REAR NO.5 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS

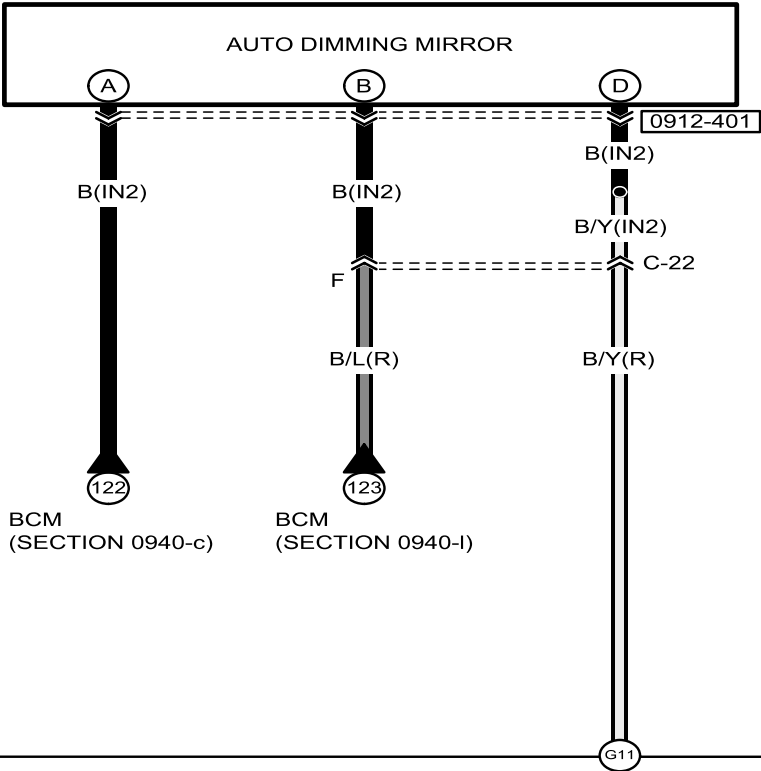


0912-401
AUTO DIMMING MIRROR

 


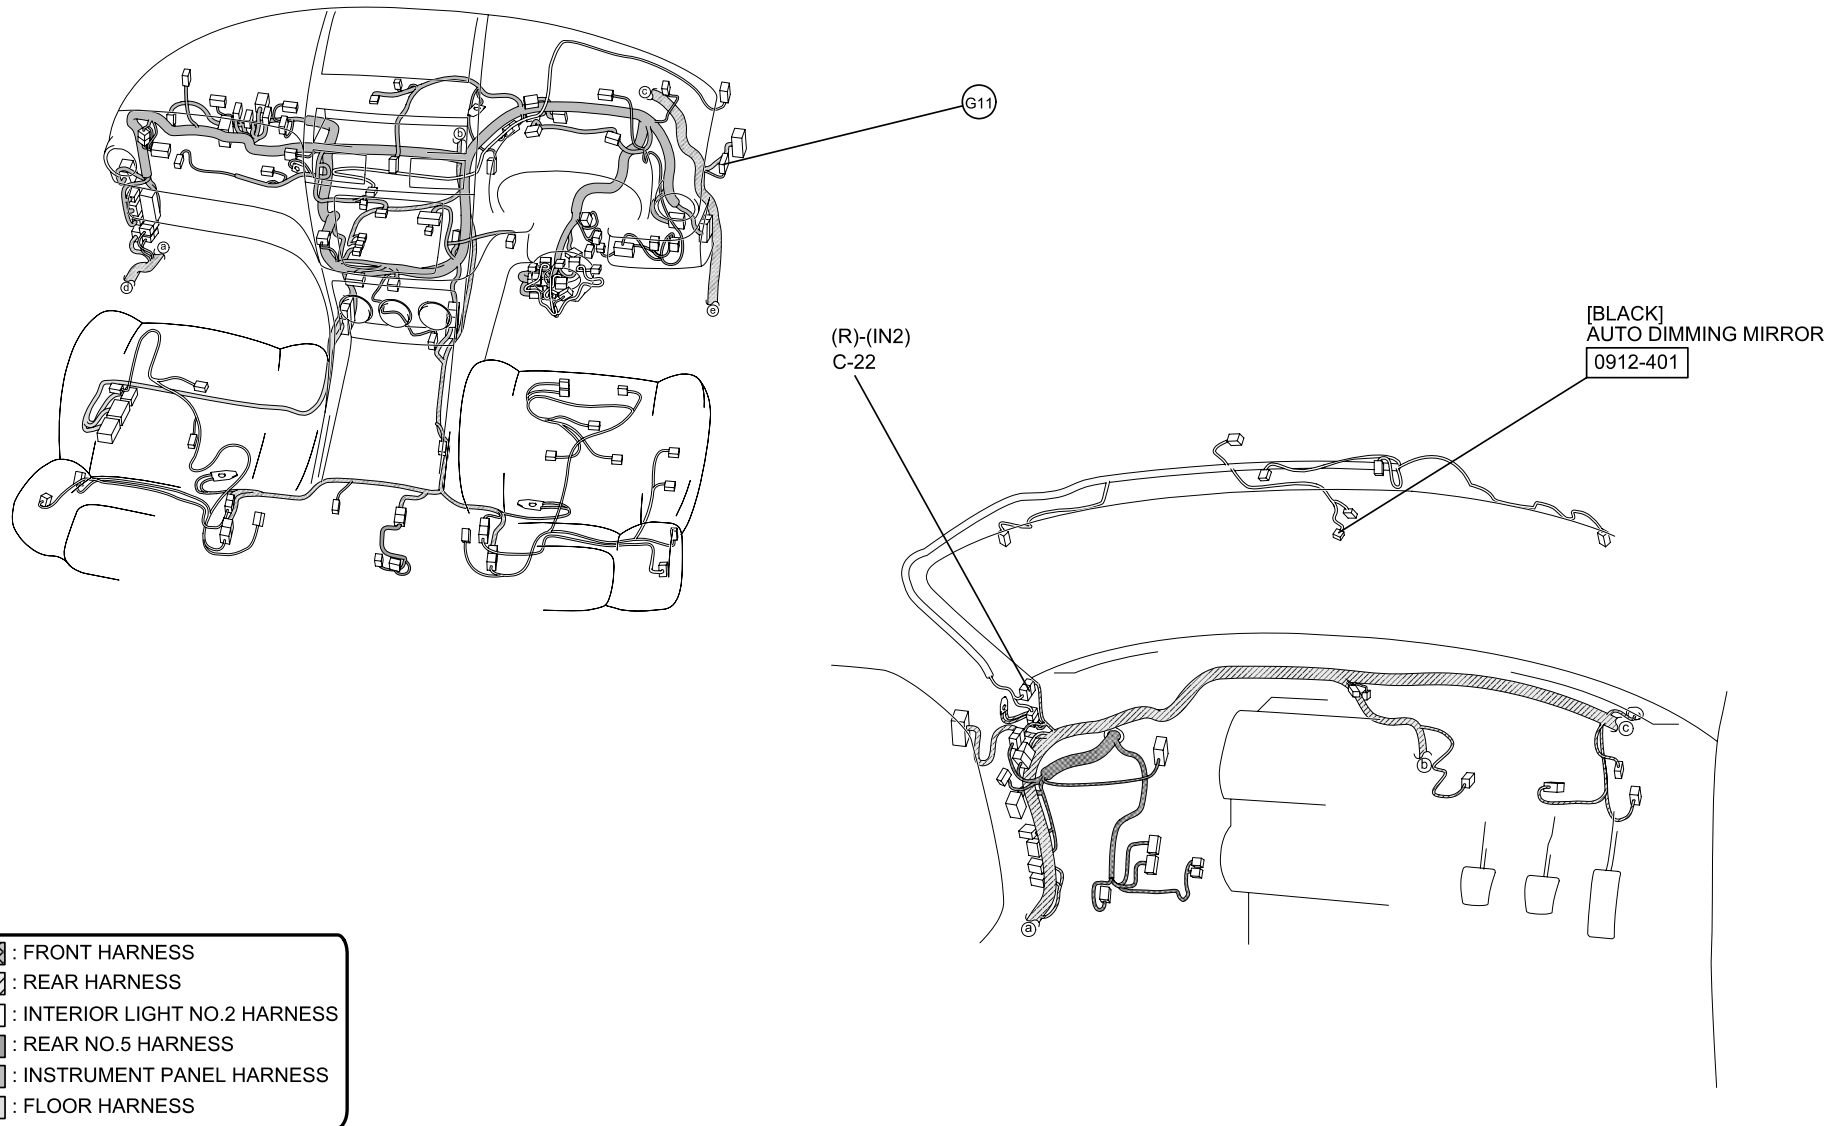


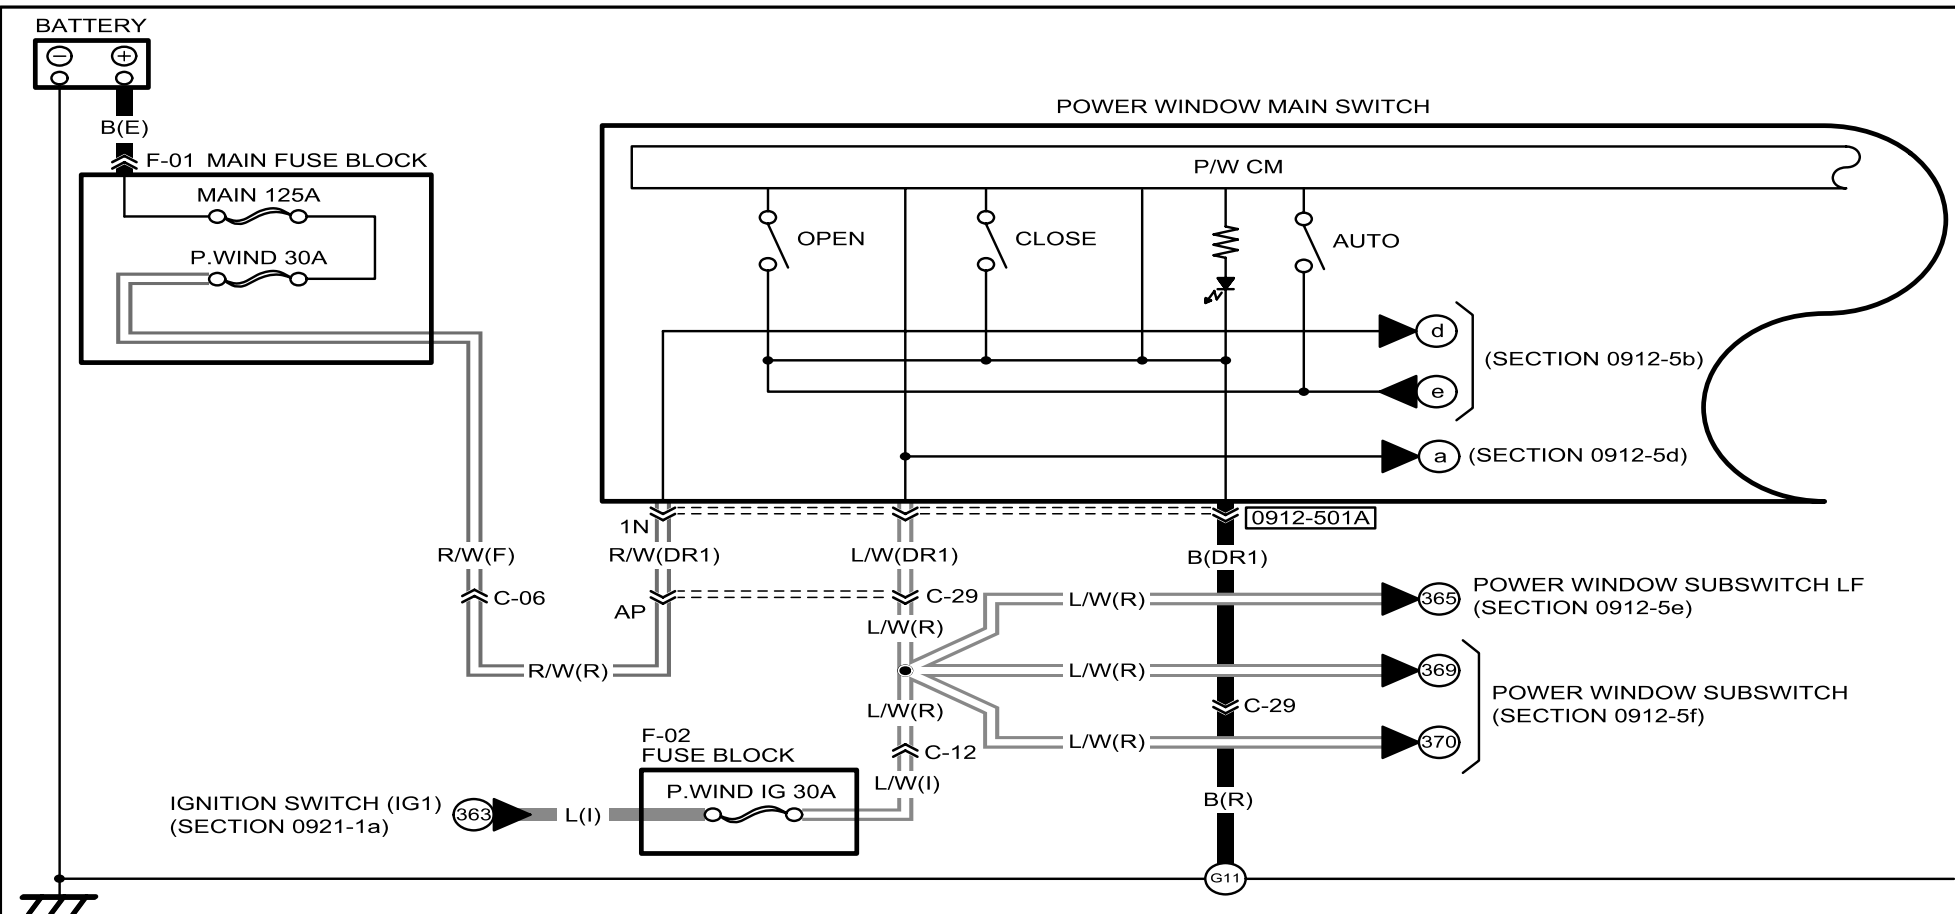


0912-501A
POWER WINDOW MAIN SWITCH

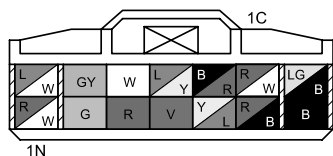


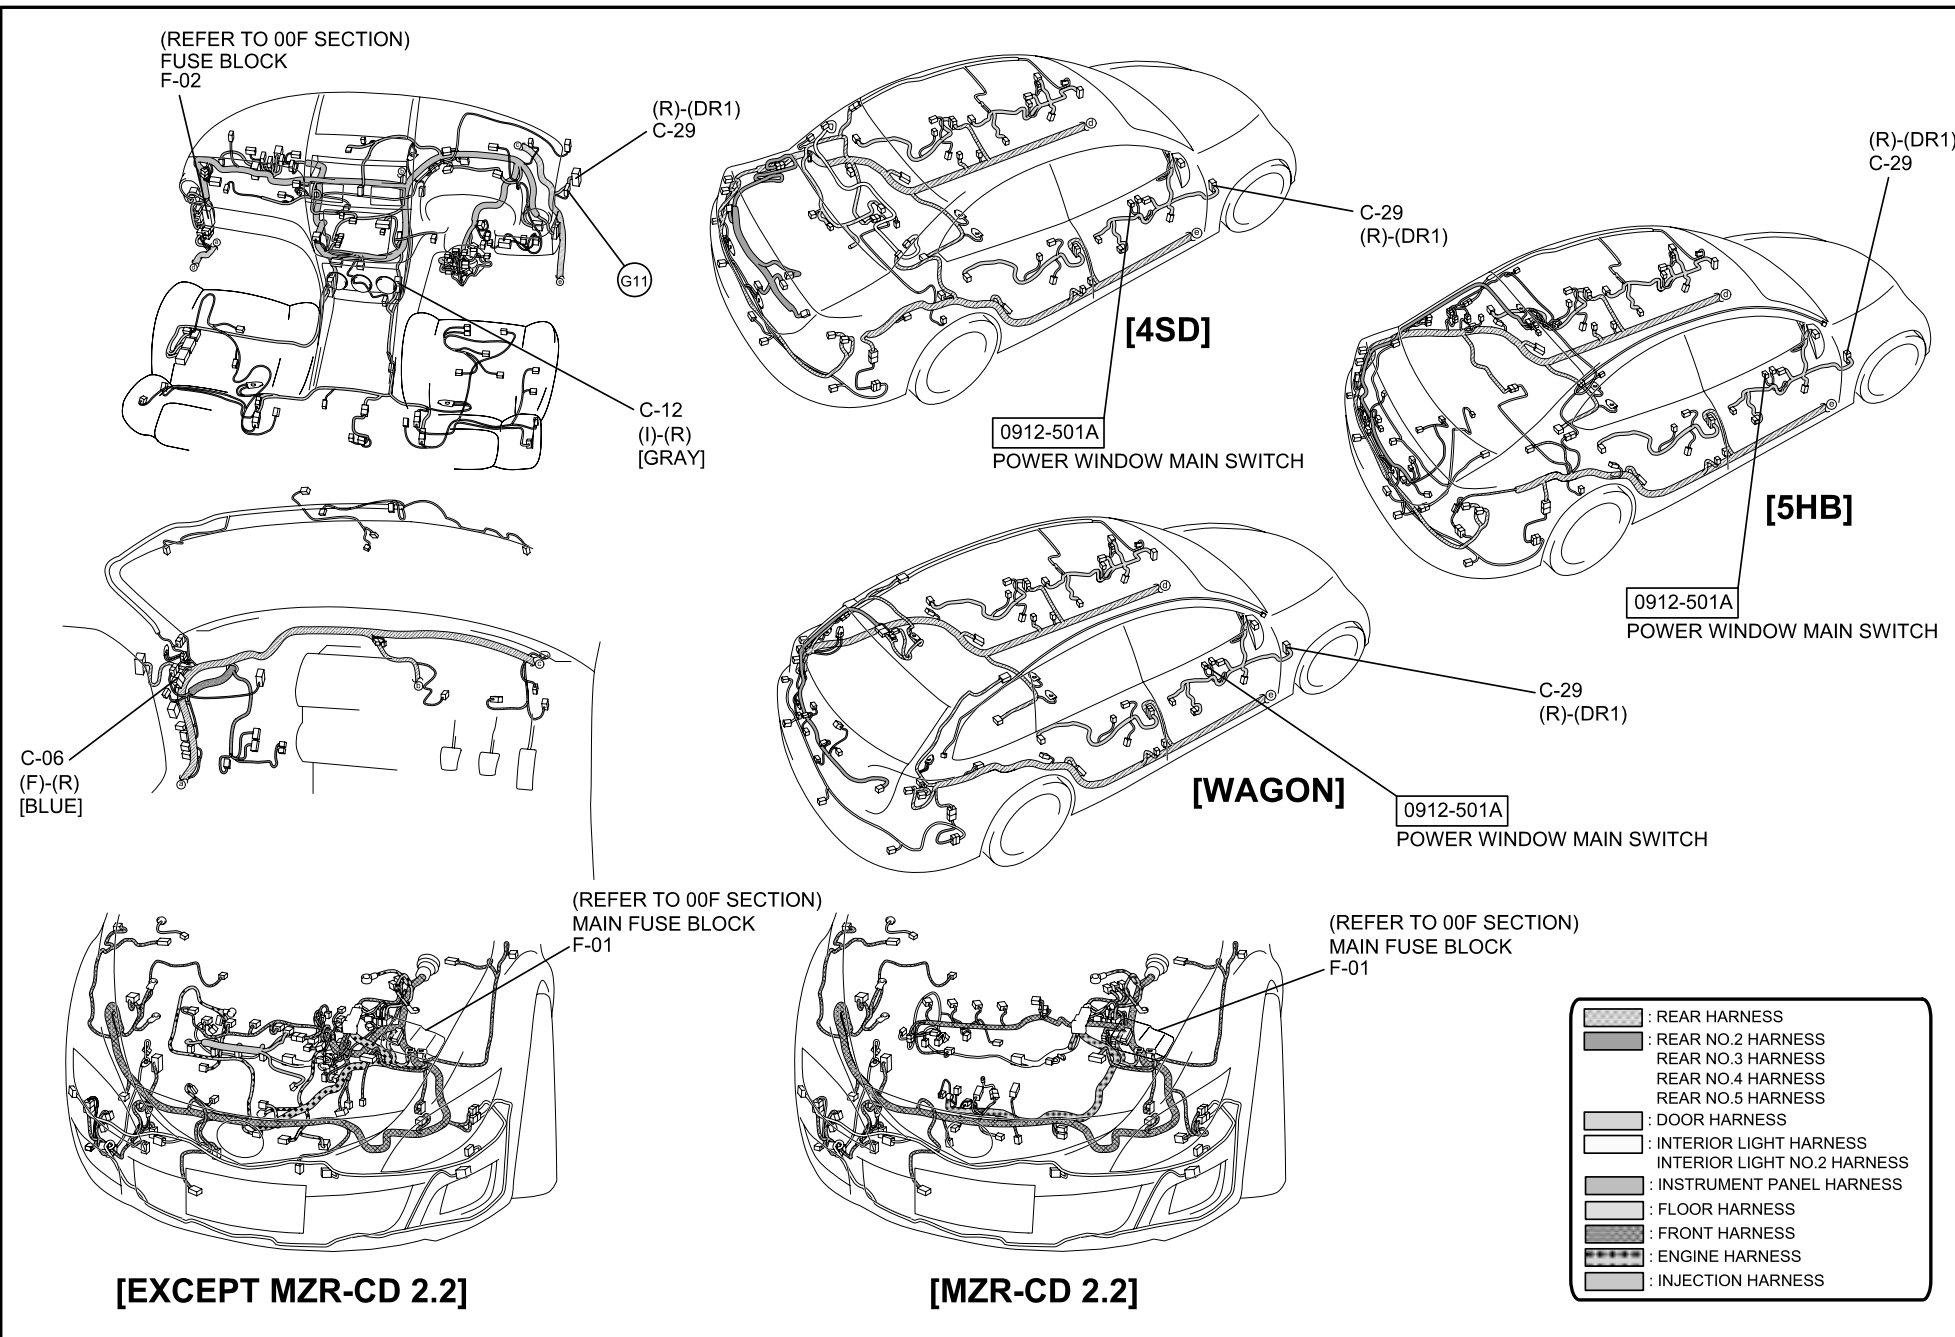

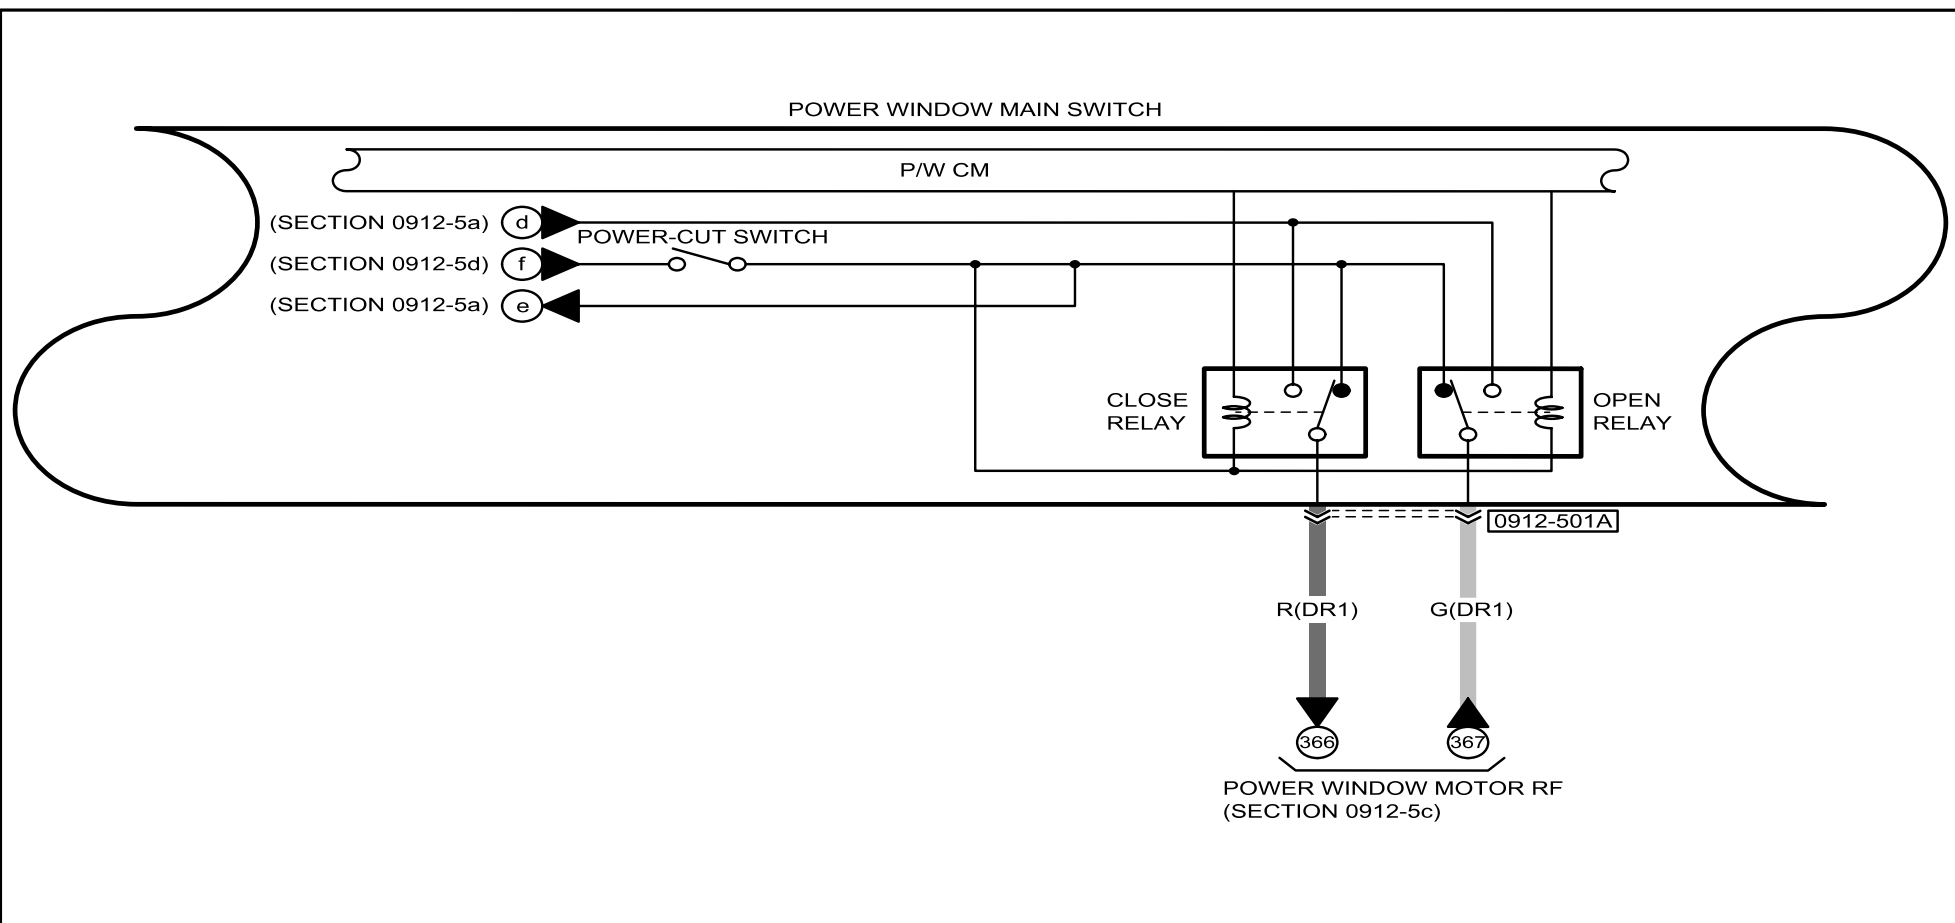


0912-501A
POWER WINDOW MAIN SWITCH

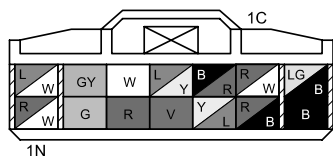

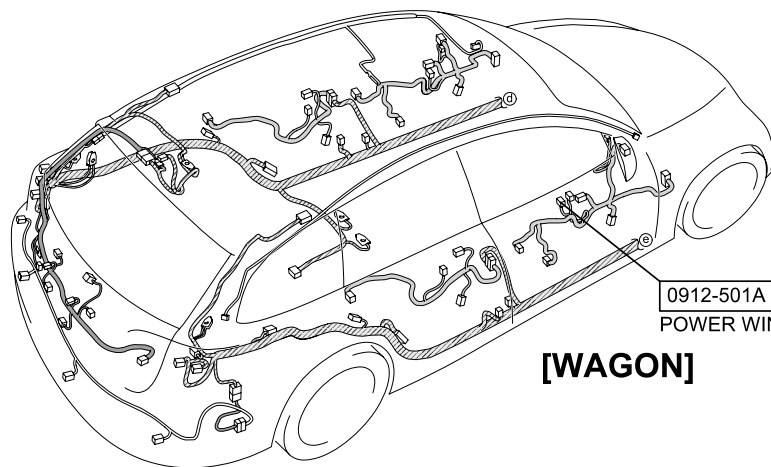


[WAGON]

0912-501A
POWER WINDOW MAIN SWITCH

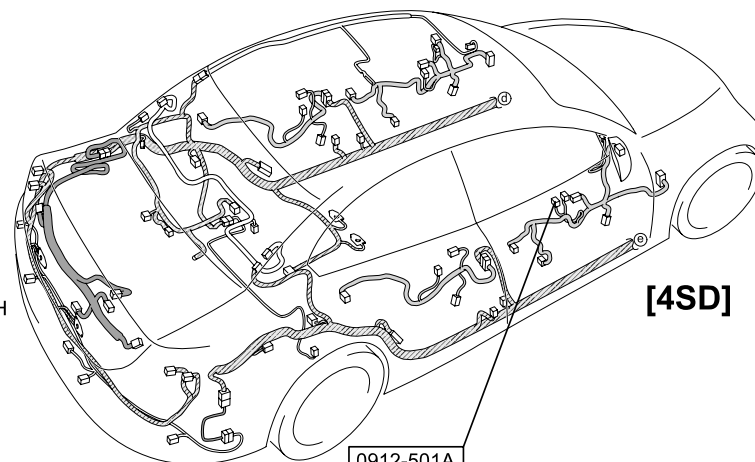



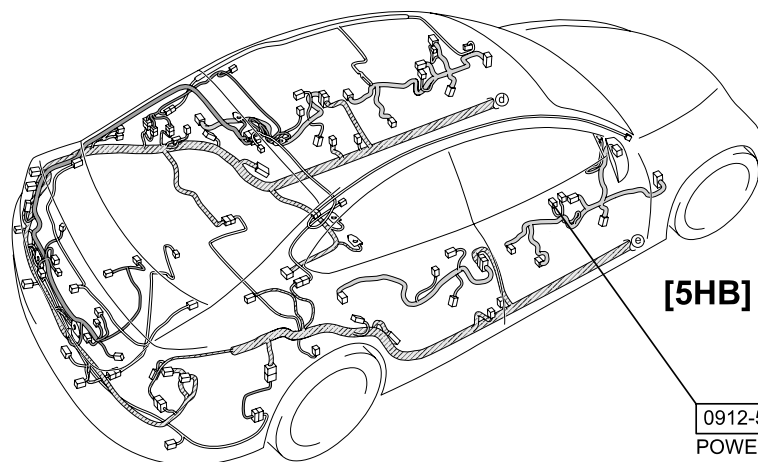

[4SD]


0912-501A
POWER WINDOW MAIN SWITCH




[5HB]

0912-501A
POWER WINDOW MAIN SWITCH


	: REAR HARNESS
	: REAR NO.2 HARNESS REAR NO.3 HARNESS REAR NO.4 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS

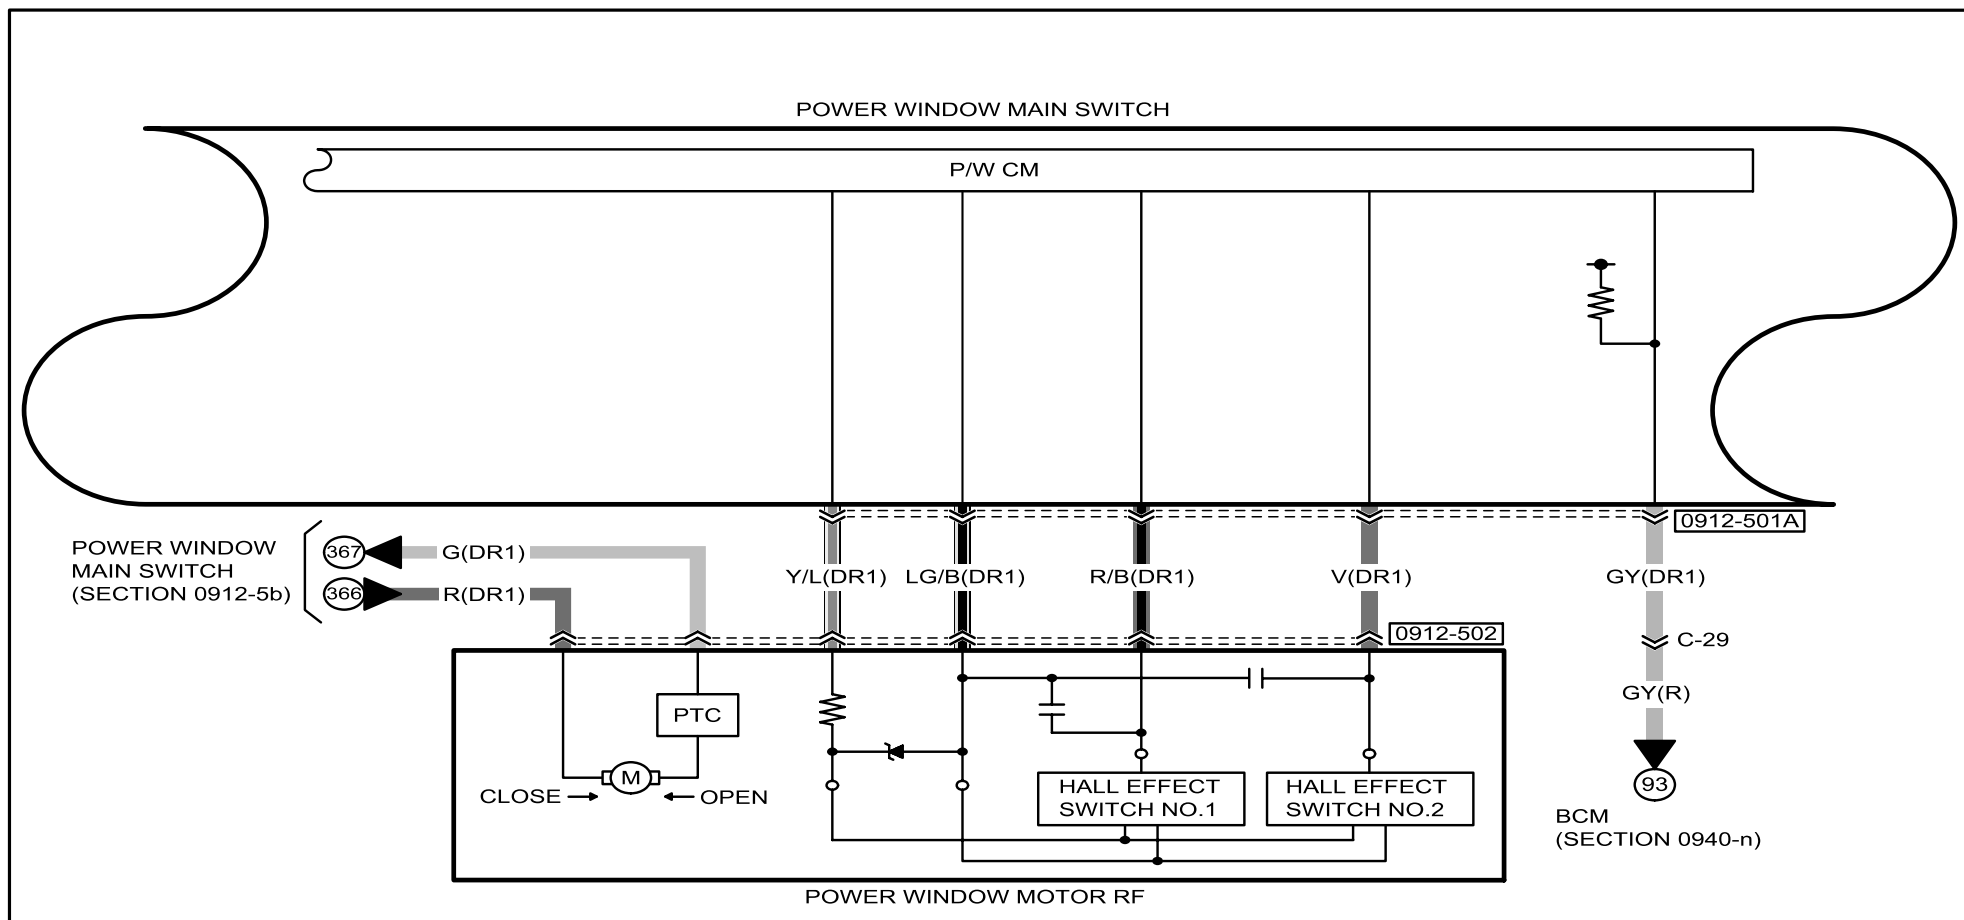



0912-501A
POWER WINDOW MAIN SWITCH

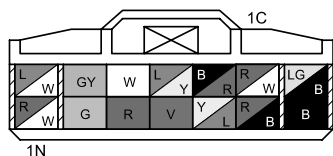


0912-502
POWER WINDOW MOTOR RF

 



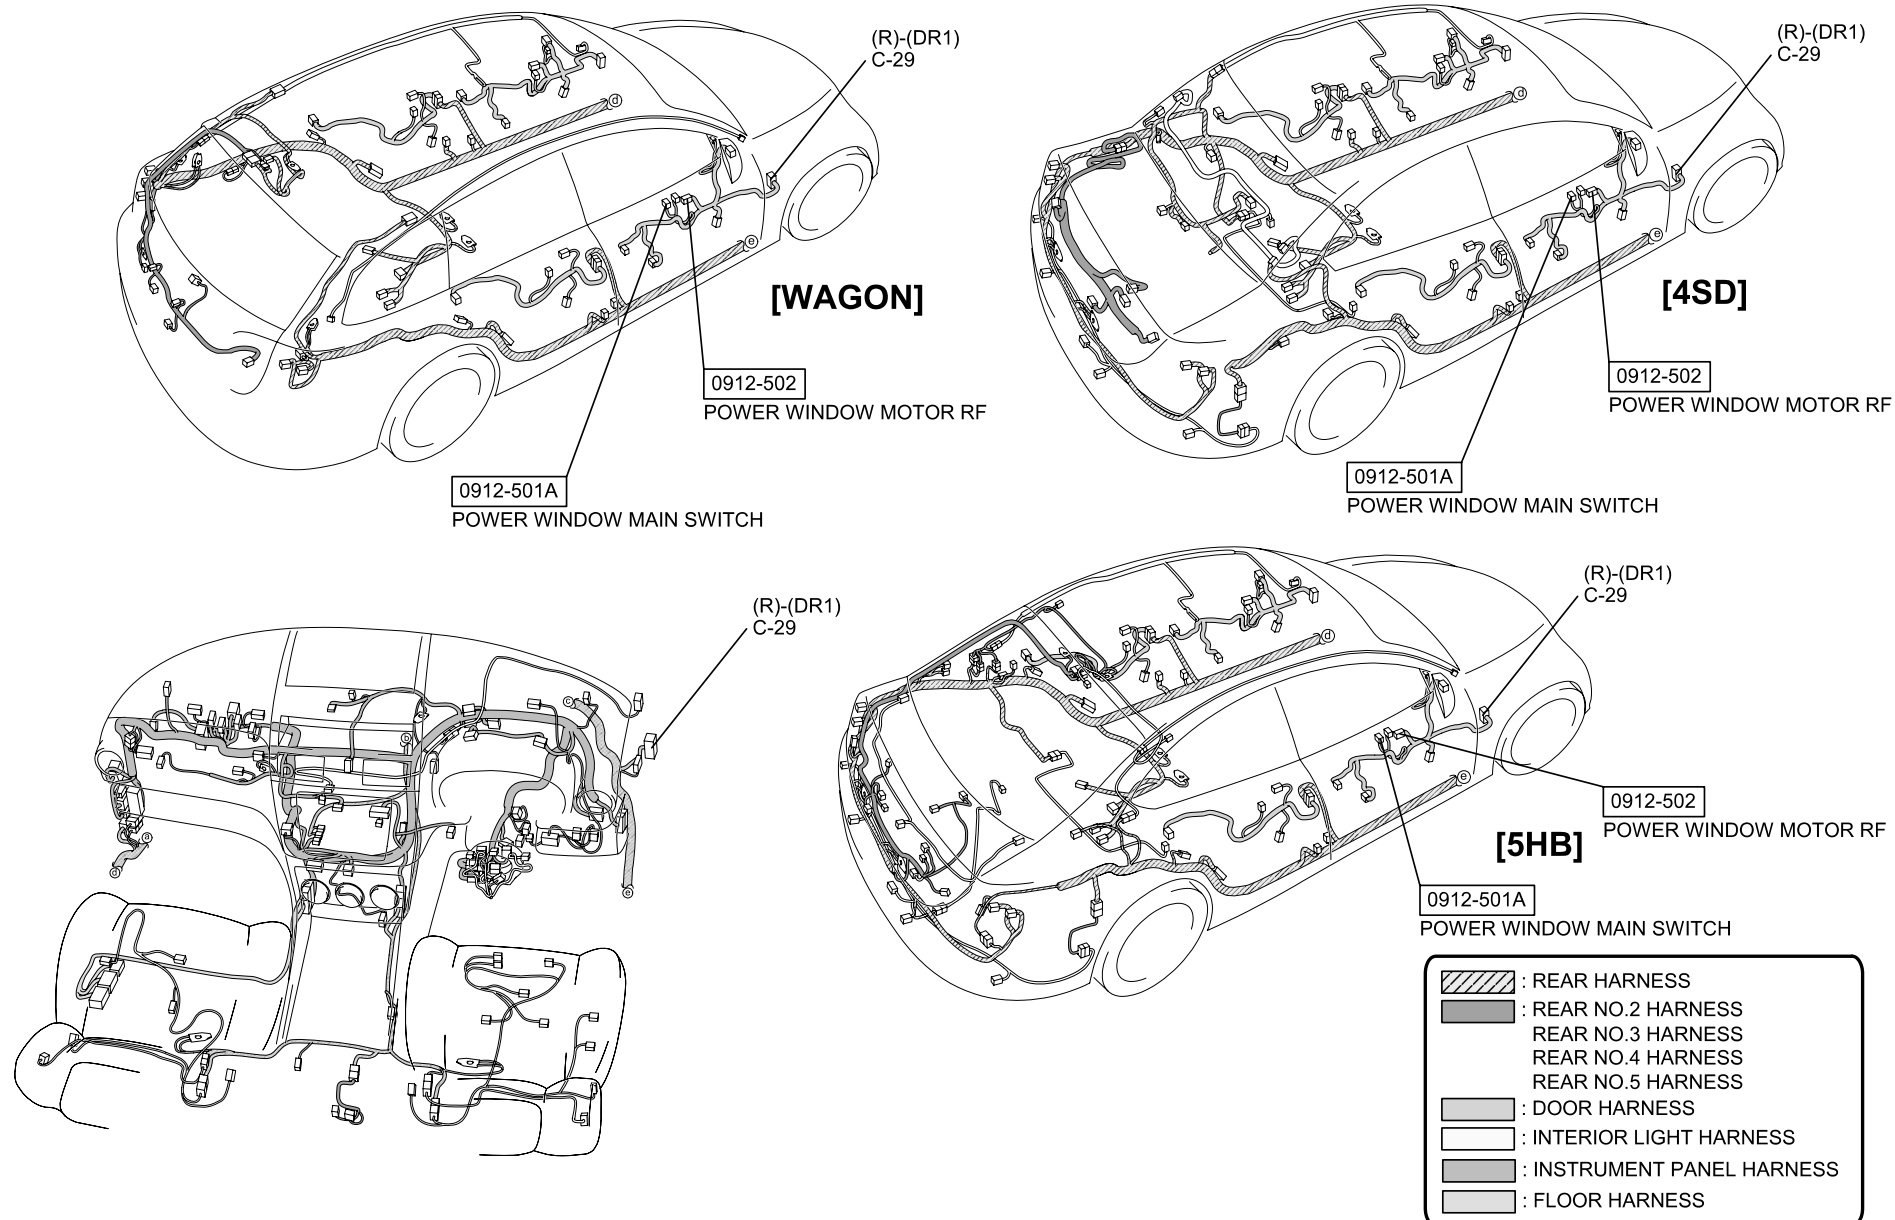


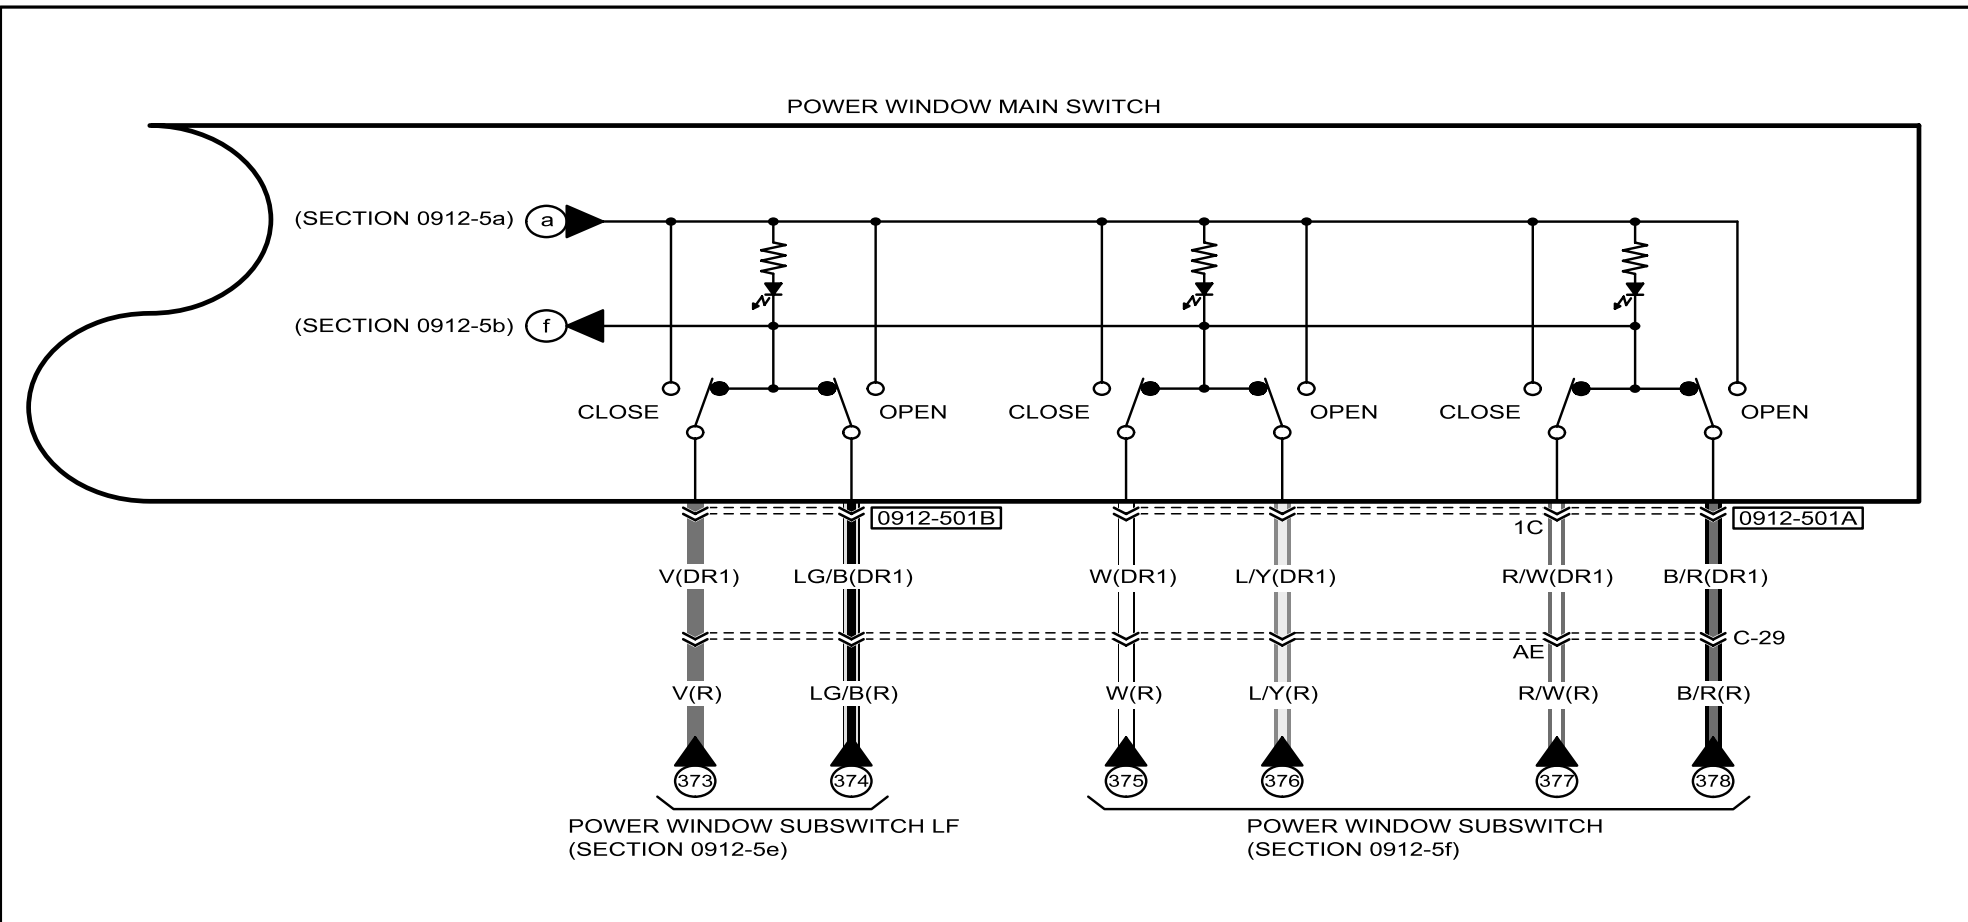


<p>0912-501A POWER WINDOW MAIN SWITCH</p>	<p>0912-501B POWER OUTER MIRROR SWITCH / POWER WINDOW MAIN SWITCH</p>				

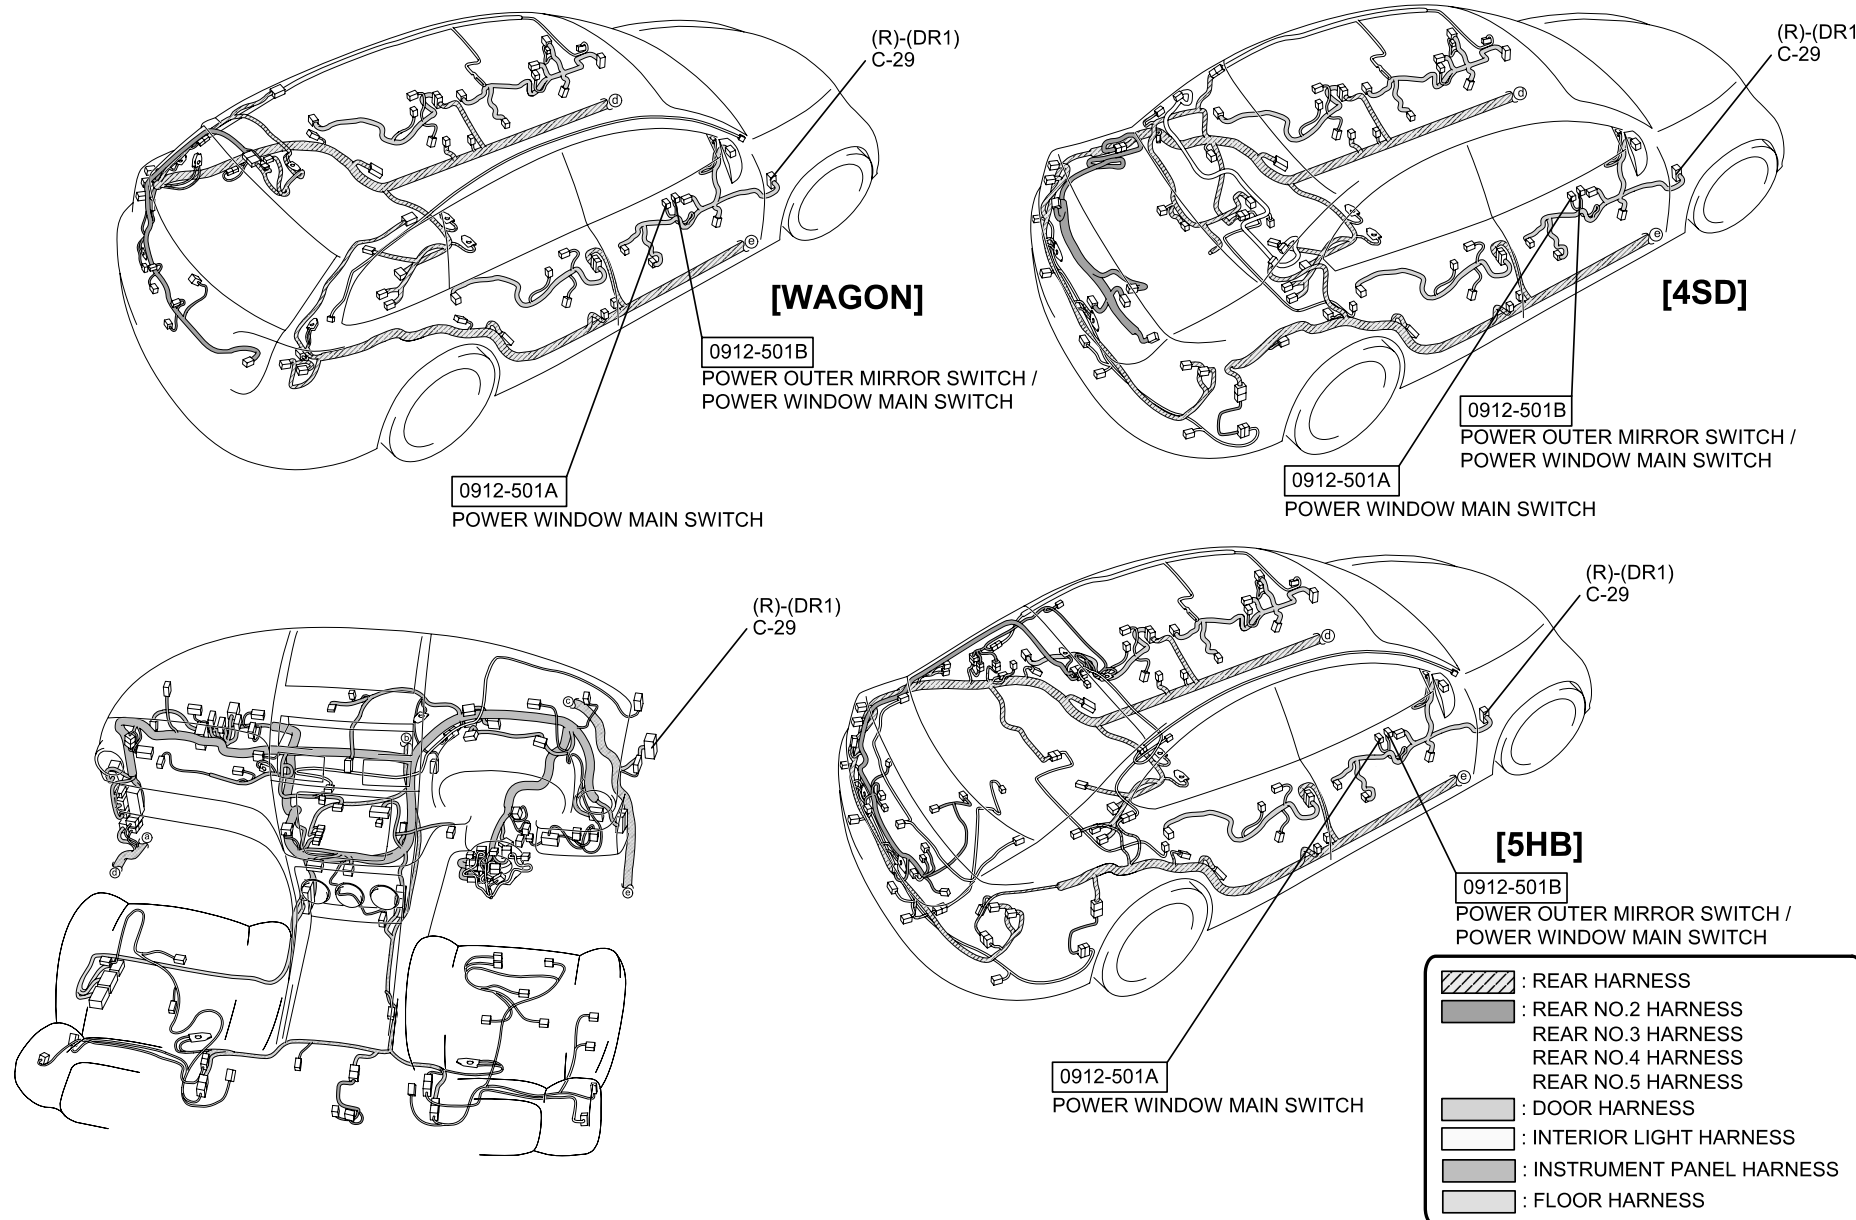

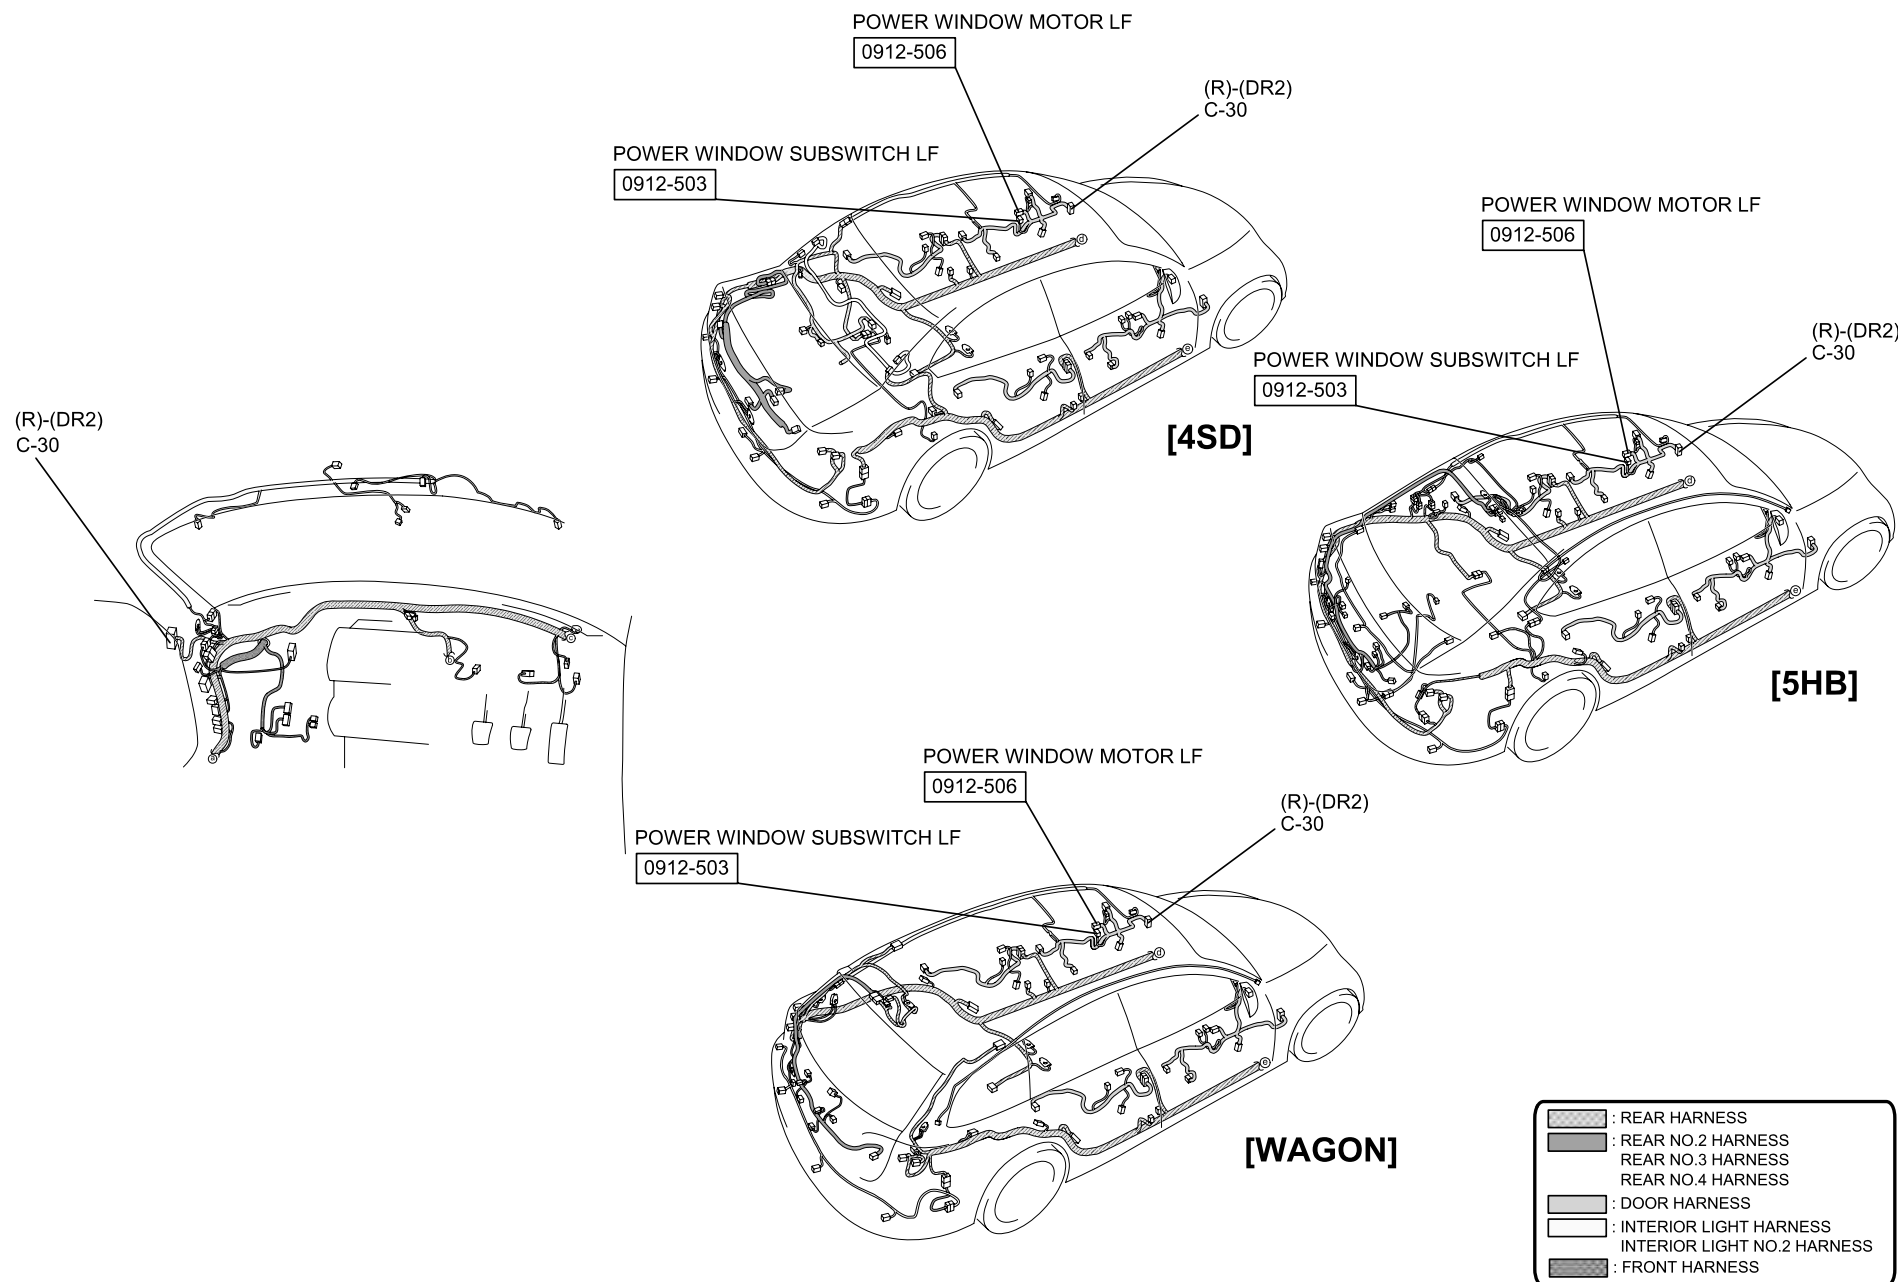


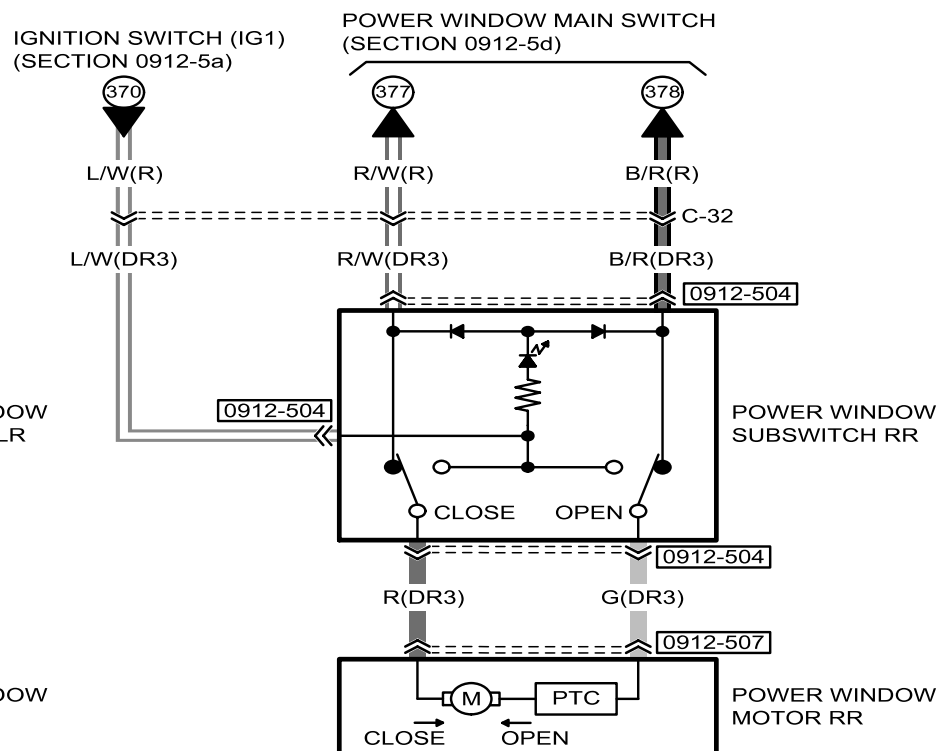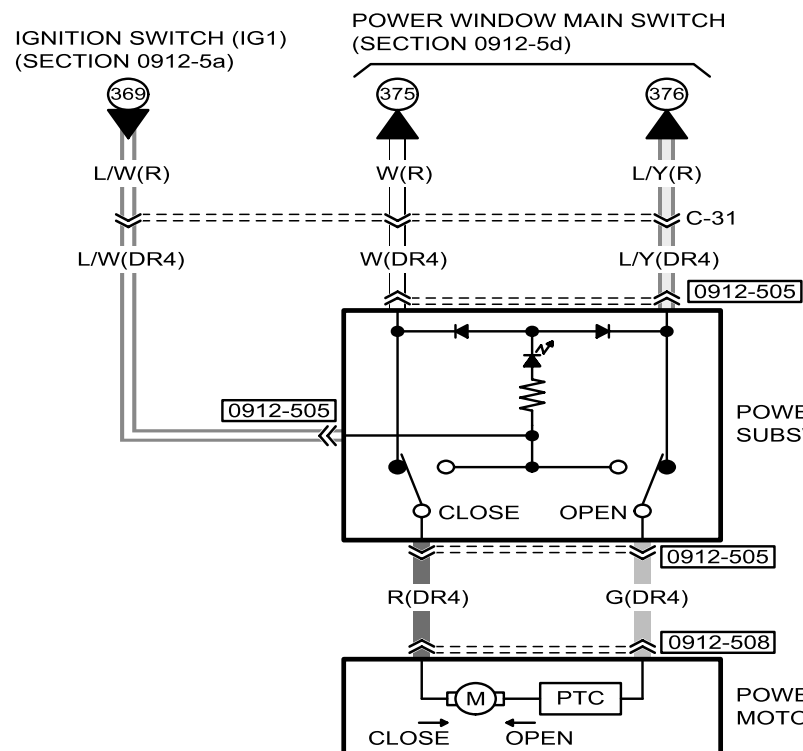


0912-504
POWER WINDOW
SUBSWITCH RR

 


0912-505
POWER WINDOW
SUBSWITCH LR




 



0912-507
POWER WINDOW MOTOR
RR

 

0912-508
POWER WINDOW MOTOR
LR

 


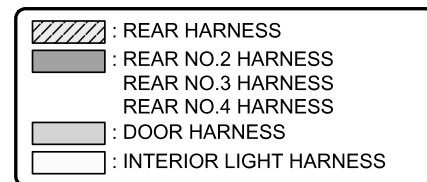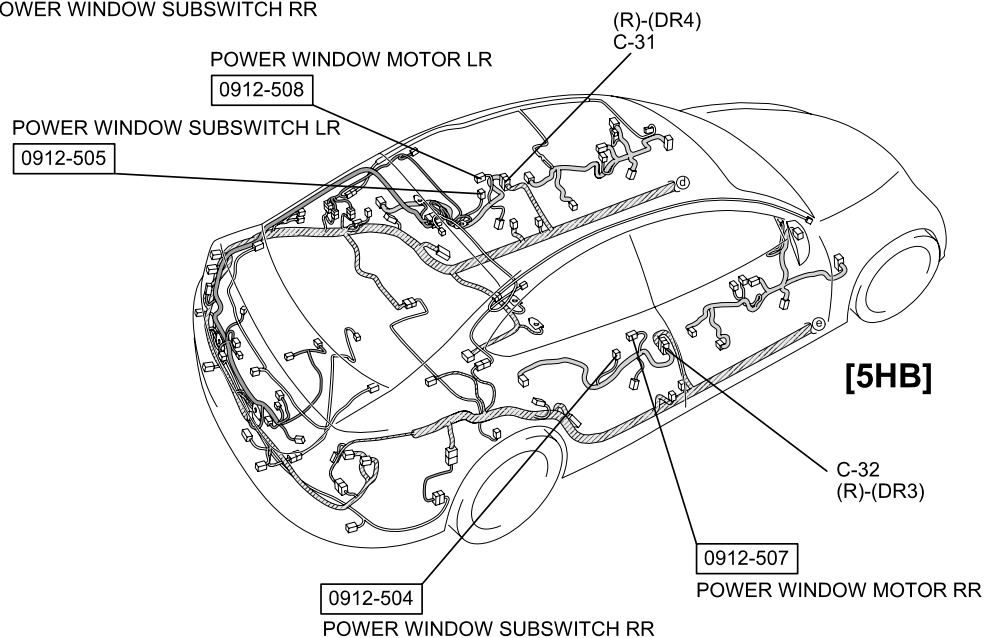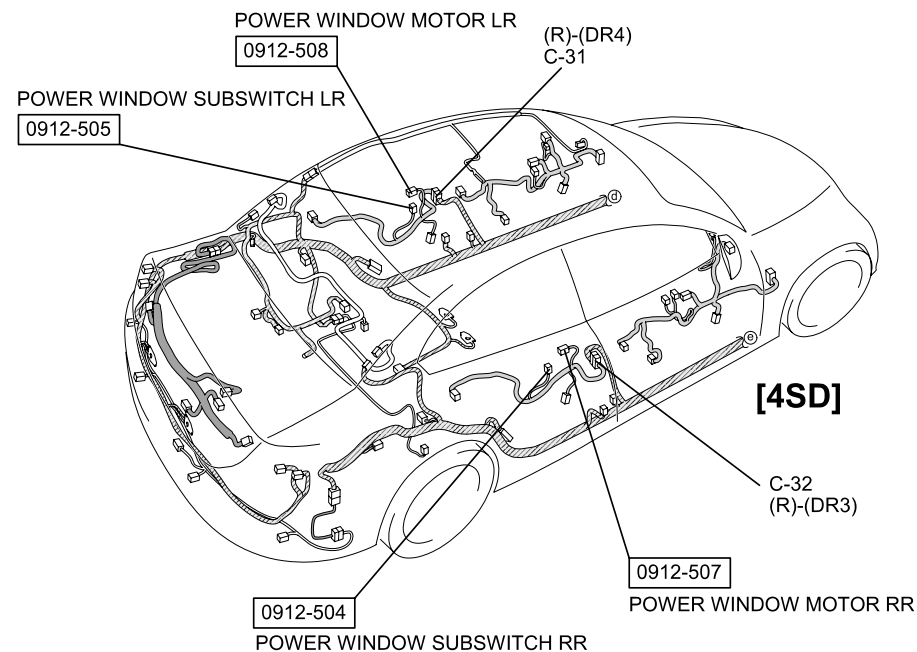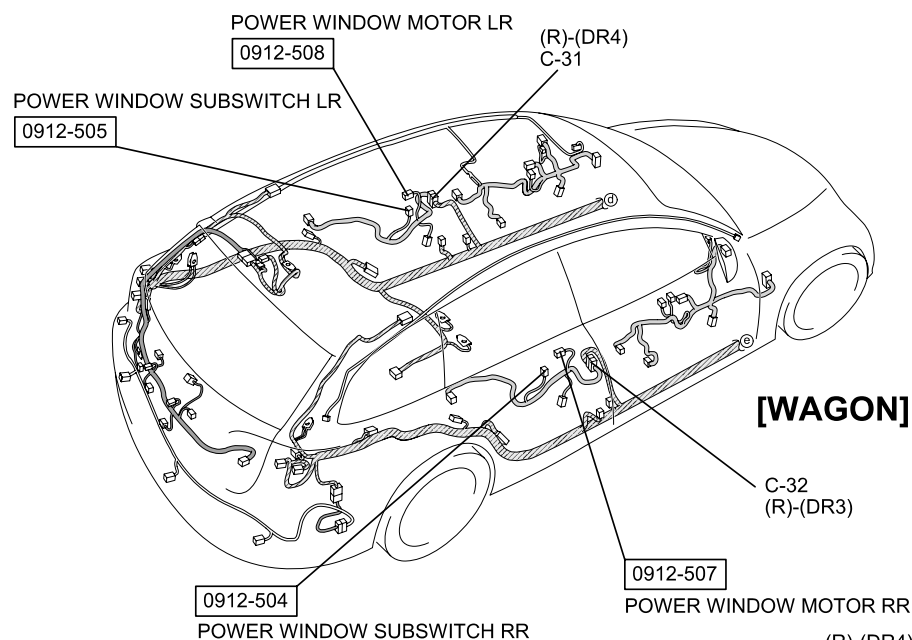

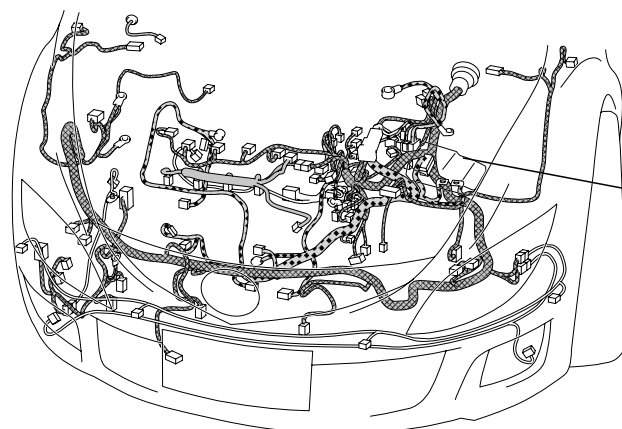

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)


[EXCEPT MZR-CD 2.2]

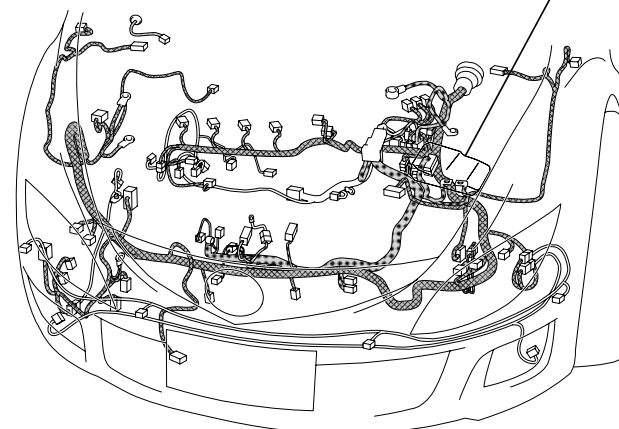

(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01

[MZR-CD 2.2]

	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

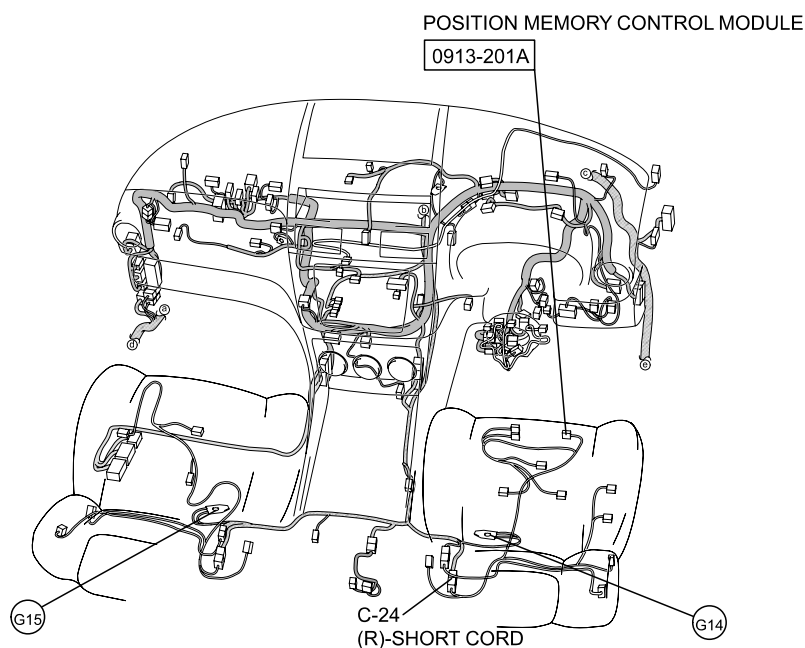


POSITION MEMORY CONTROL MODULE
0913-201A

G15

C-24


(R)-SHORT CORD

G14

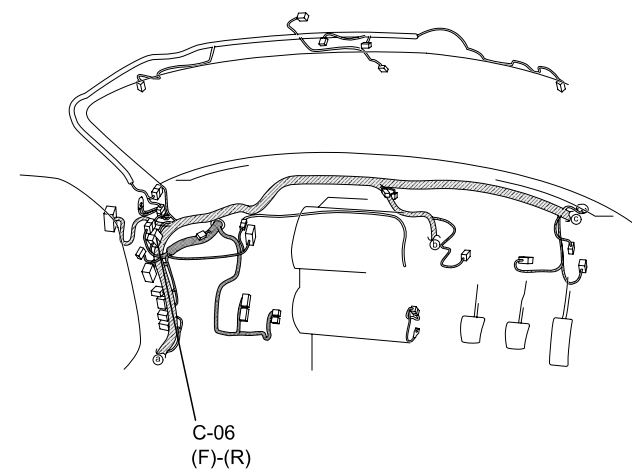


C-06
(F)-(R)
[BLUE]

210

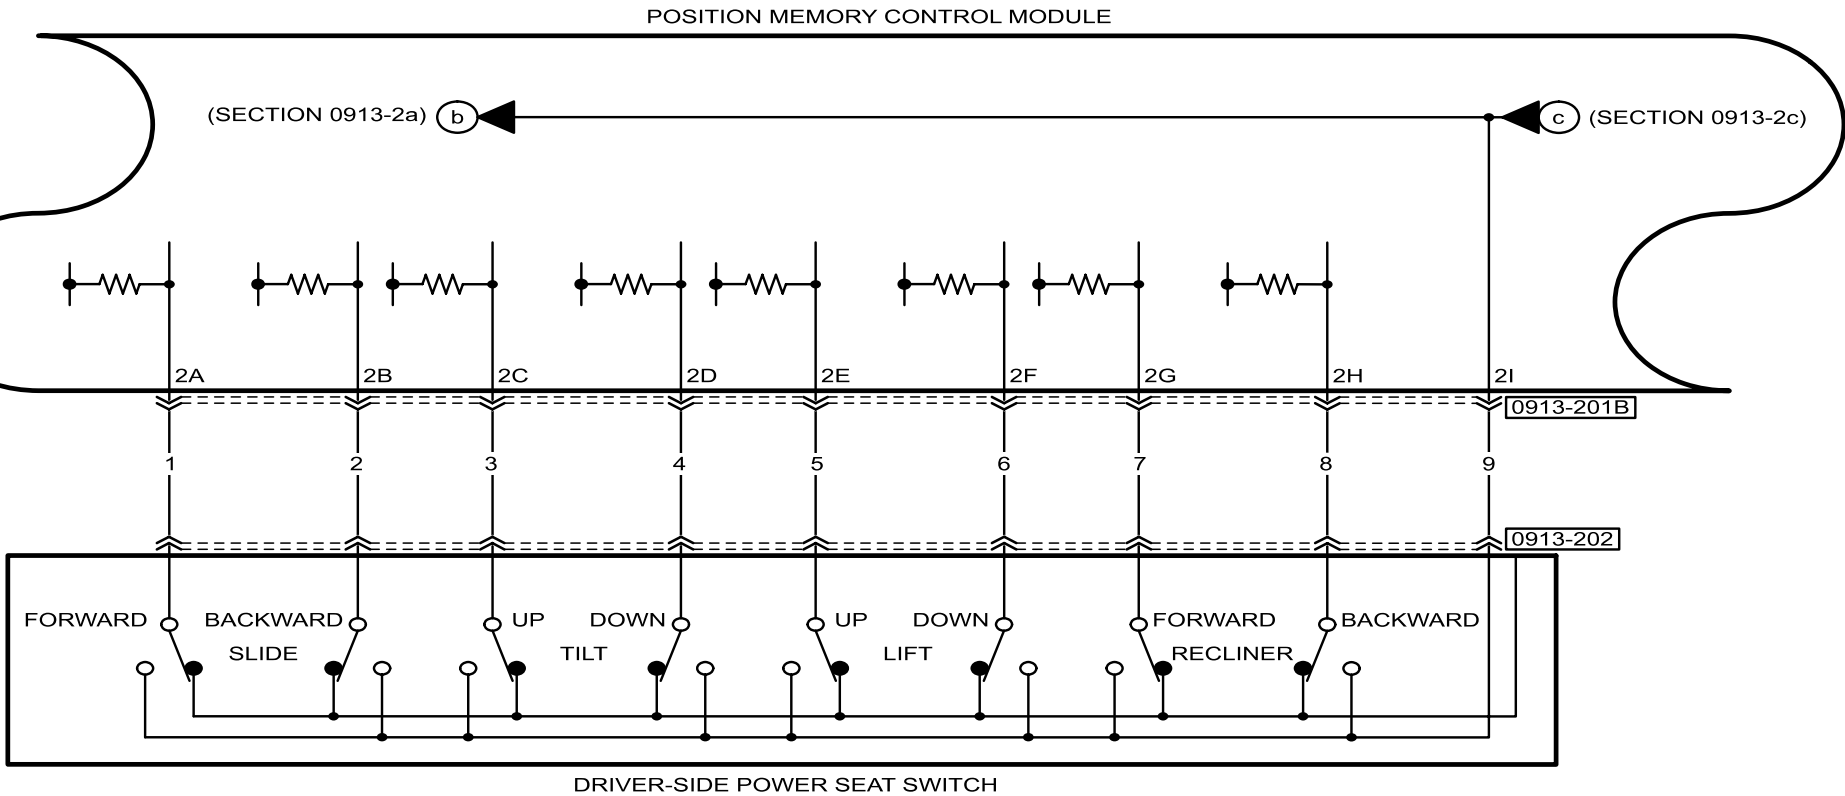


0913-201B
POSITION MEMORY CONTROL MODULE

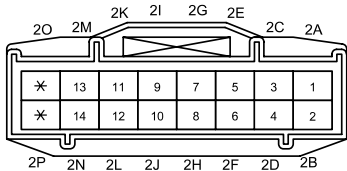


WIRE COLORS ARE INDICATED BY NUMBERS.

 
0913-202
DRIVER-SIDE POWER SEAT SWITCH




WIRE COLORS ARE INDICATED BY NUMBERS.

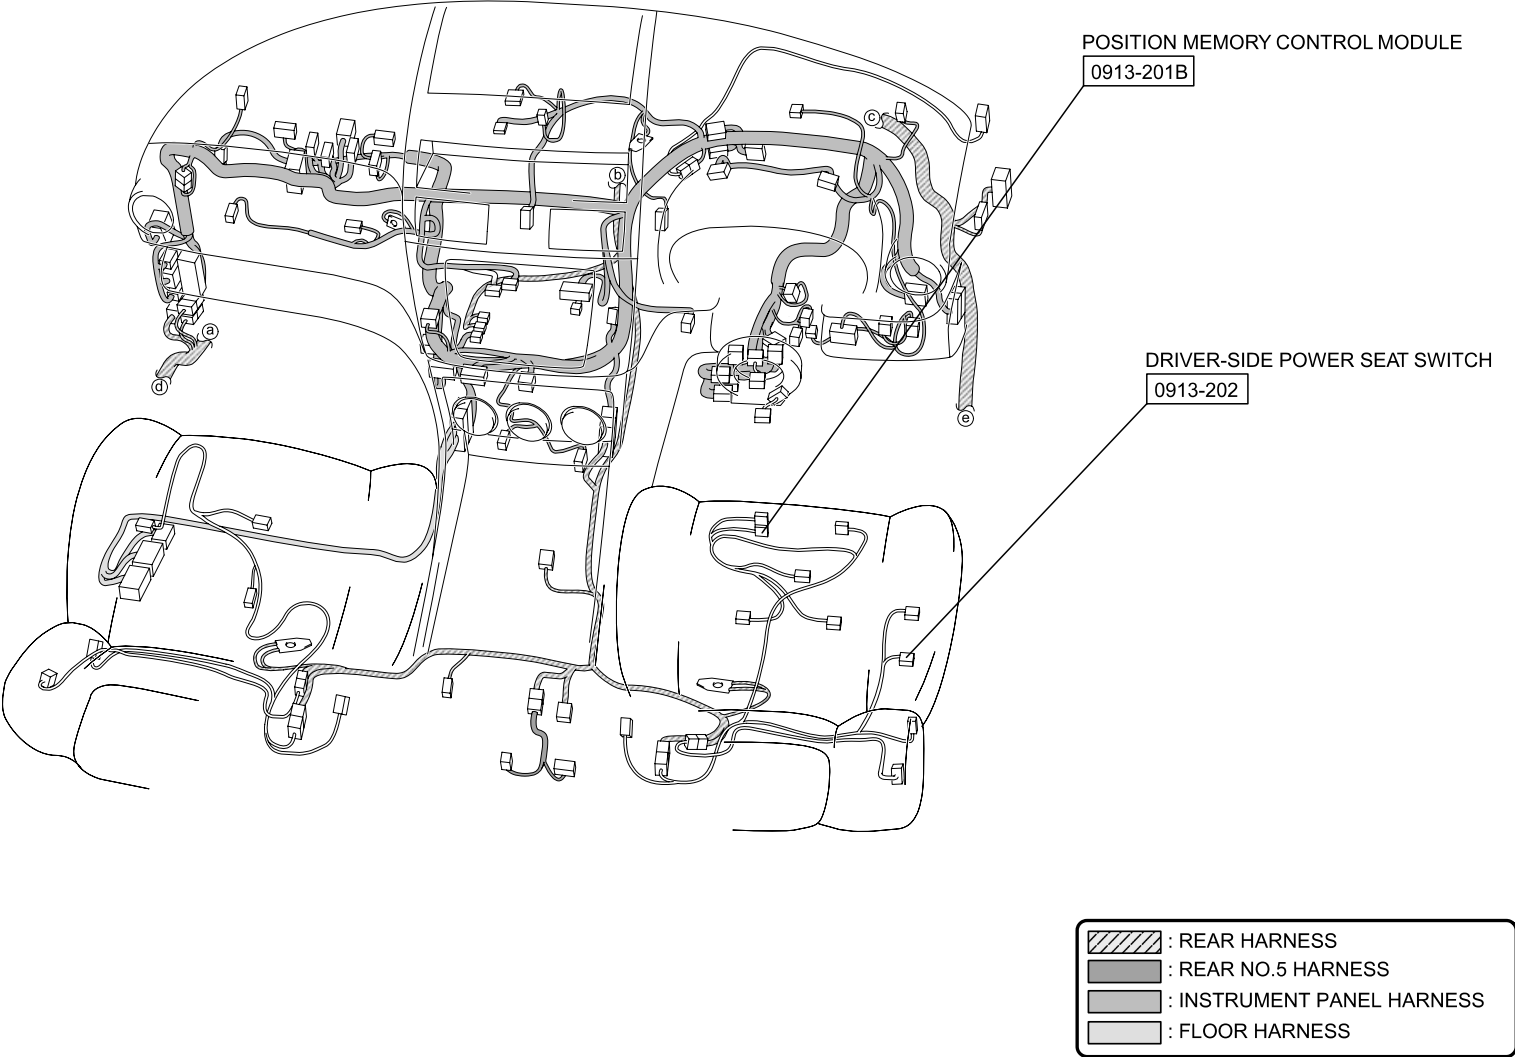

212

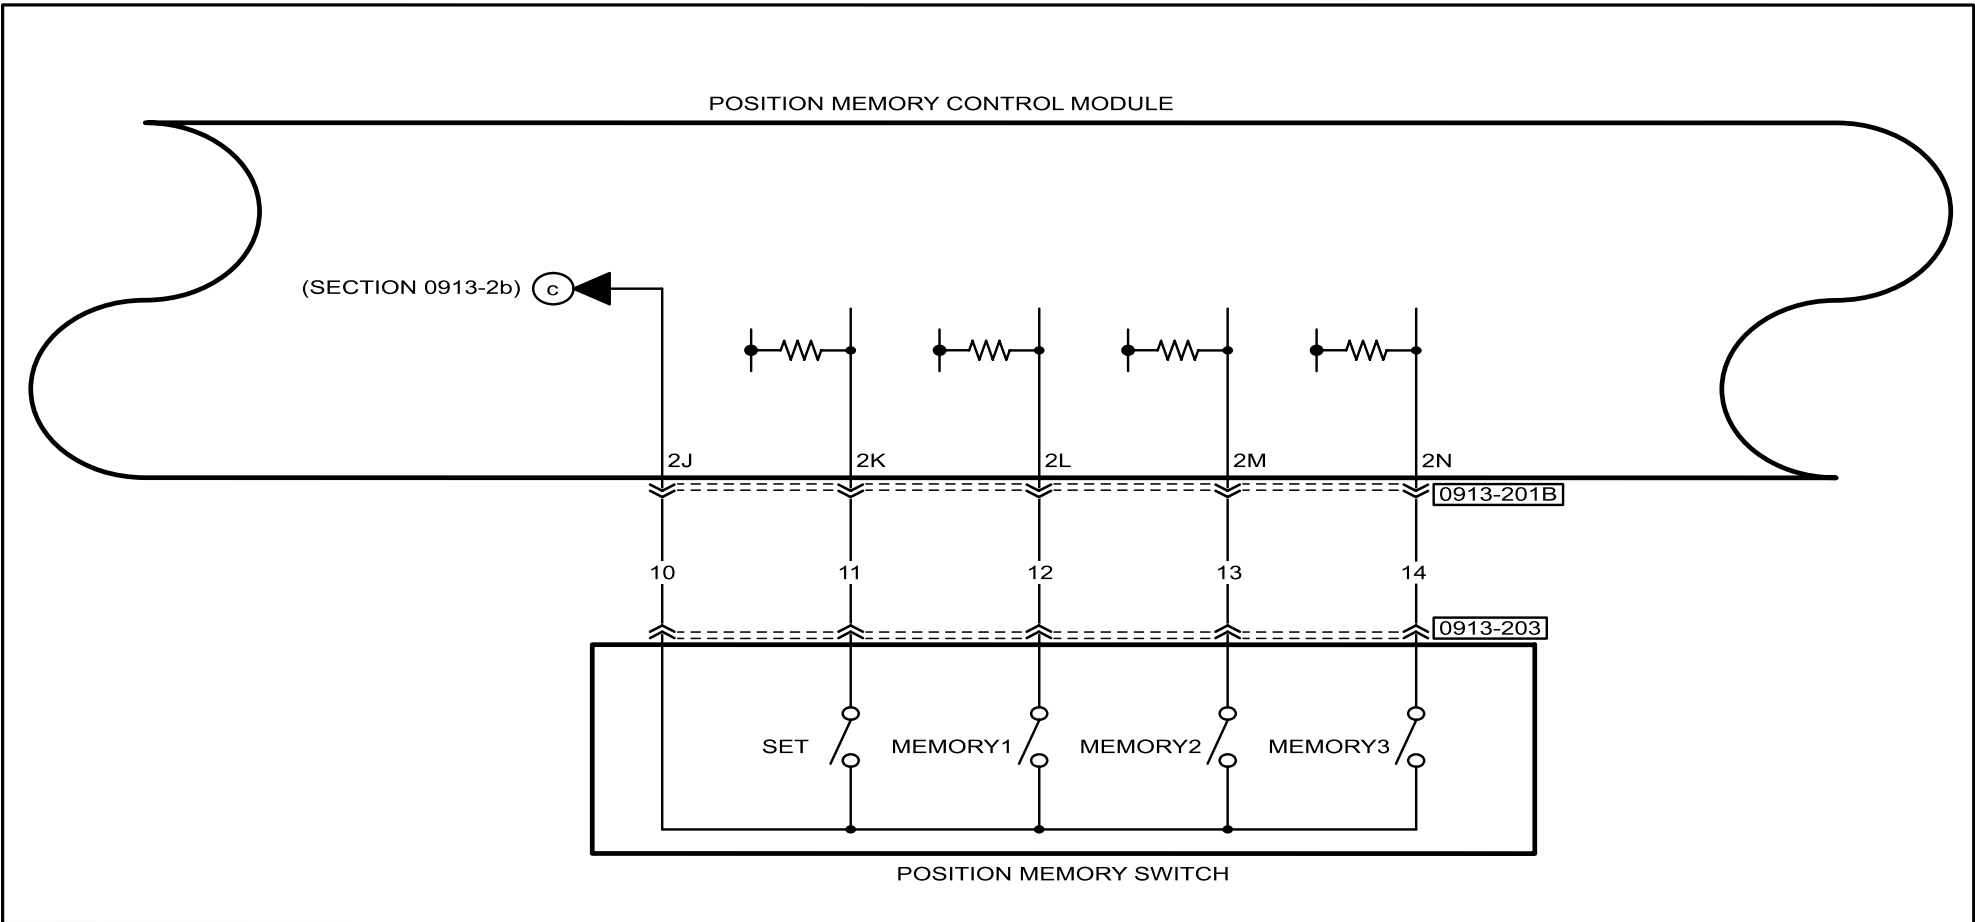

0913-201B
POSITION MEMORY CONTROL MODULE

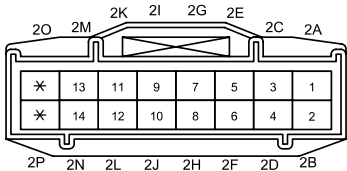


WIRE COLORS ARE INDICATED BY NUMBERS.


0913-203
POSITION MEMORY SWITCH





WIRE COLORS ARE
INDICATED BY NUMBERS.

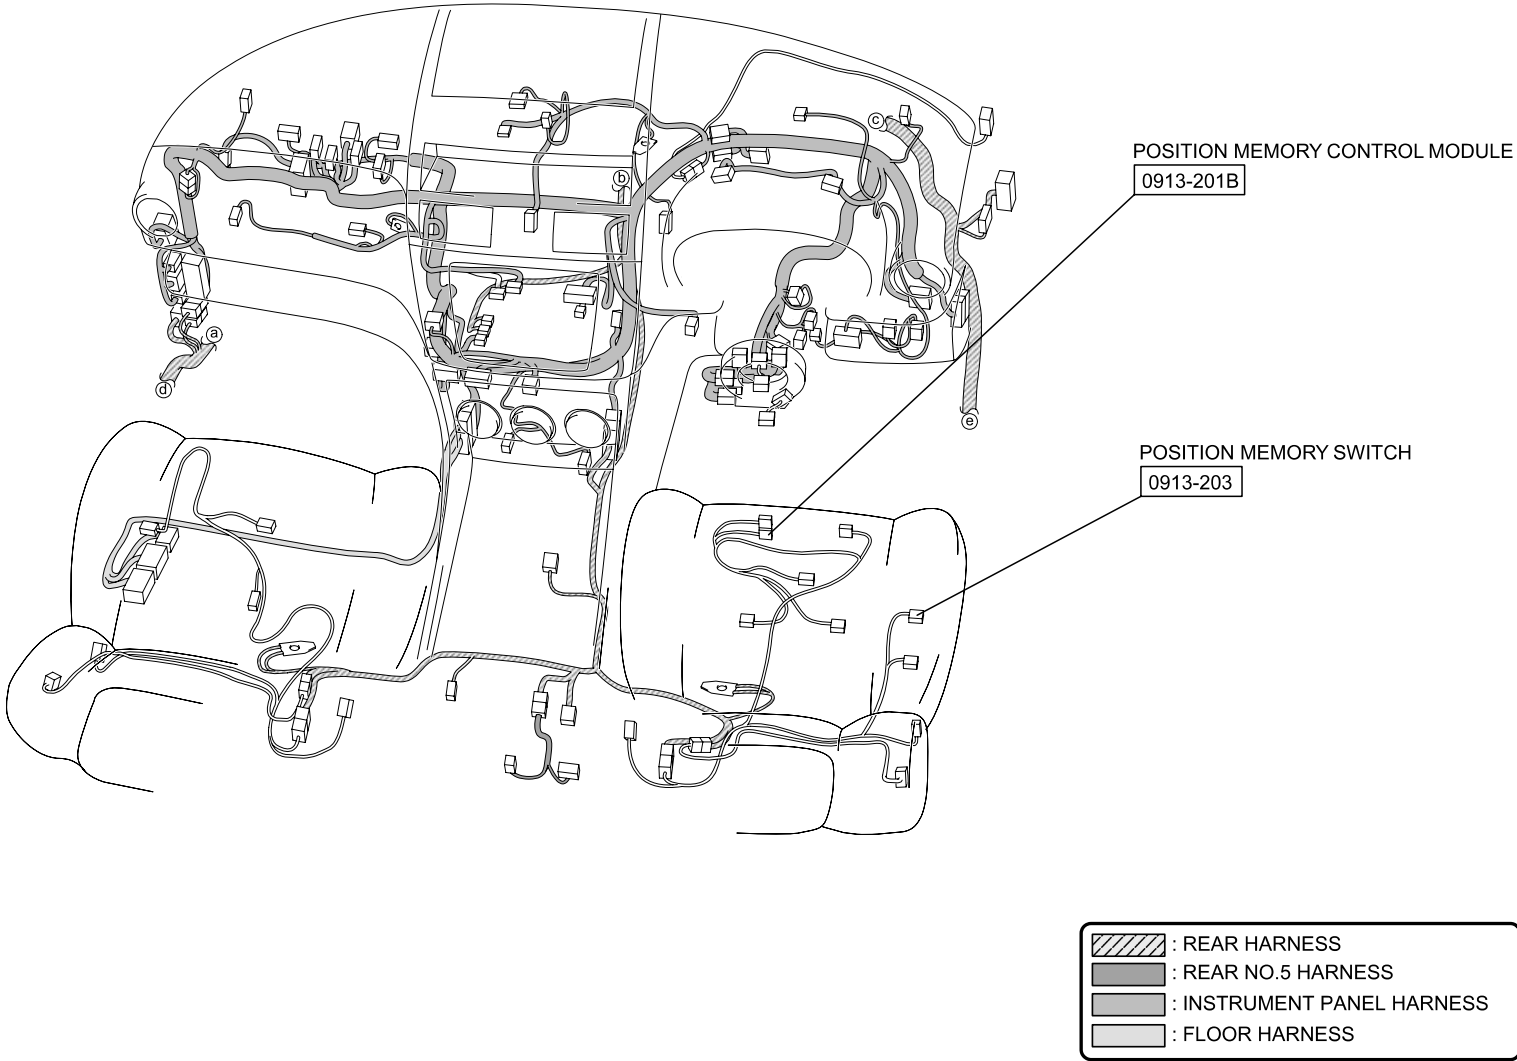


214


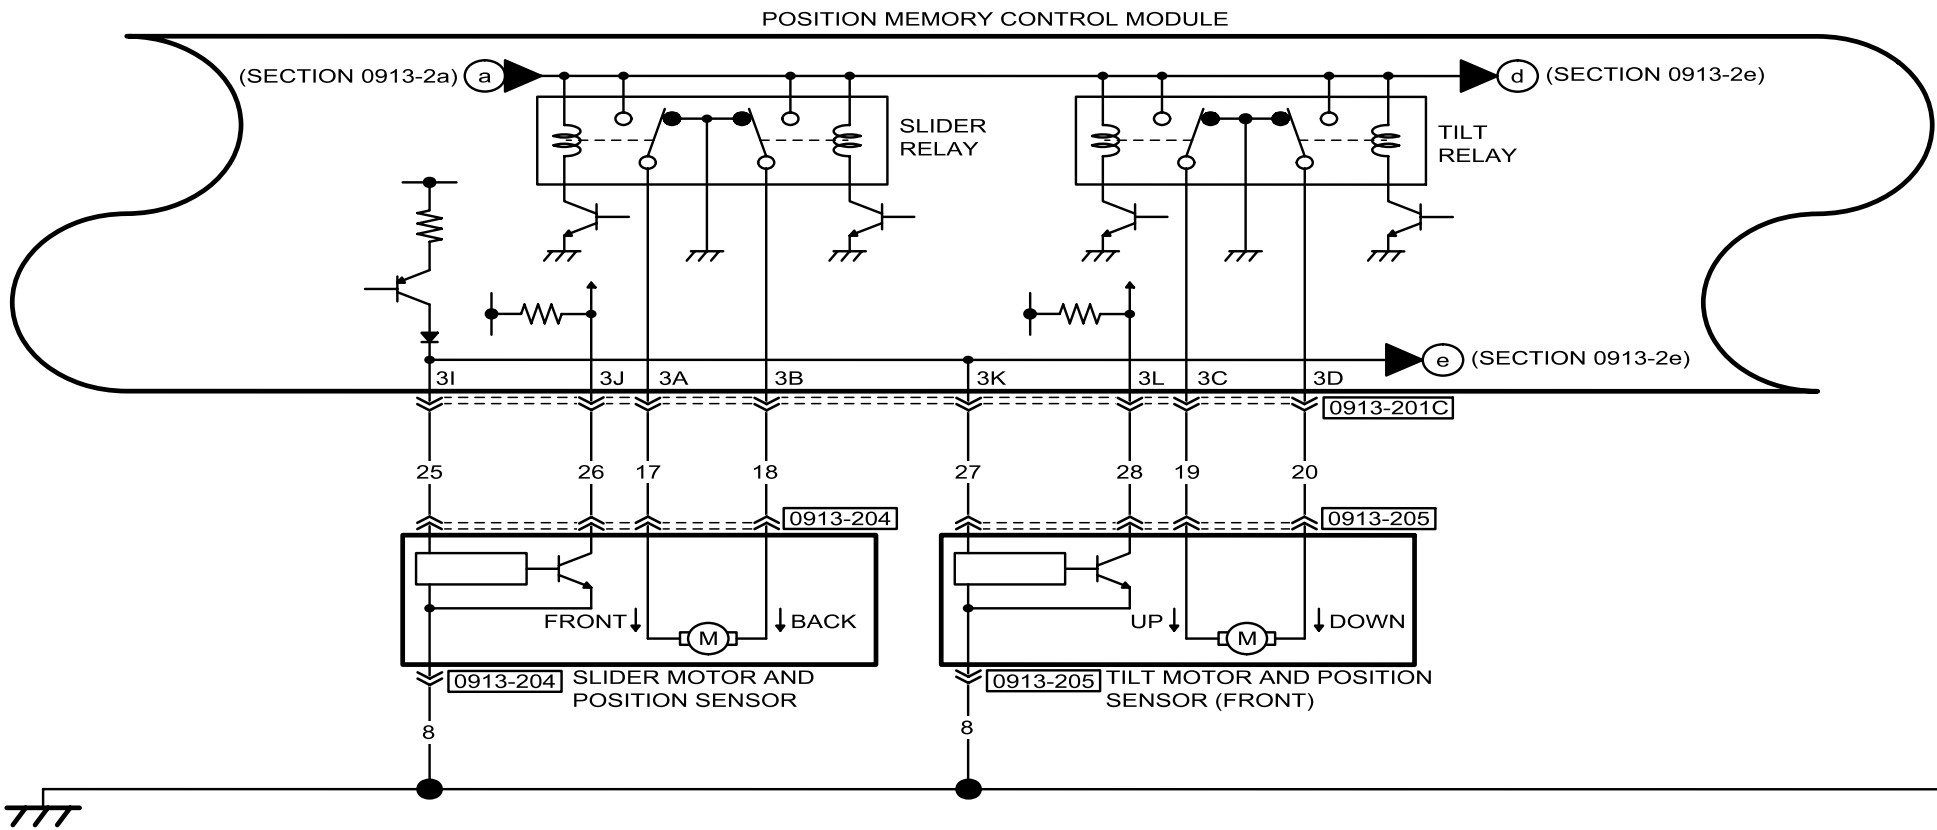


<div>0913-201C</div> <div>POSITION MEMORY CONTROL MODULE</div> <div><div><div>3O3M3K3I3G3E3C3A</div><div><div><div>3129272523211917</div><div>3230282624222018</div></div><div>3P3N3L3J3H3F3D3B</div></div><div>WIRE COLORS ARE INDICATED BY NUMBERS.</div></div></div>	<div>0913-204</div> <div>SLIDER MOTOR AND POSITION SENSOR</div> <div><div><div>26<div></div>✱</div><div>8251718</div></div><div>WIRE COLORS ARE INDICATED BY NUMBERS.</div></div>	<div>0913-205</div> <div>TILT MOTOR AND POSITION SENSOR (FRONT)</div> <div><div><div>28<div></div>✱</div><div>8272019</div></div><div>WIRE COLORS ARE INDICATED BY NUMBERS.</div></div>			

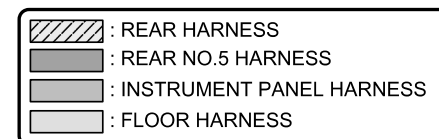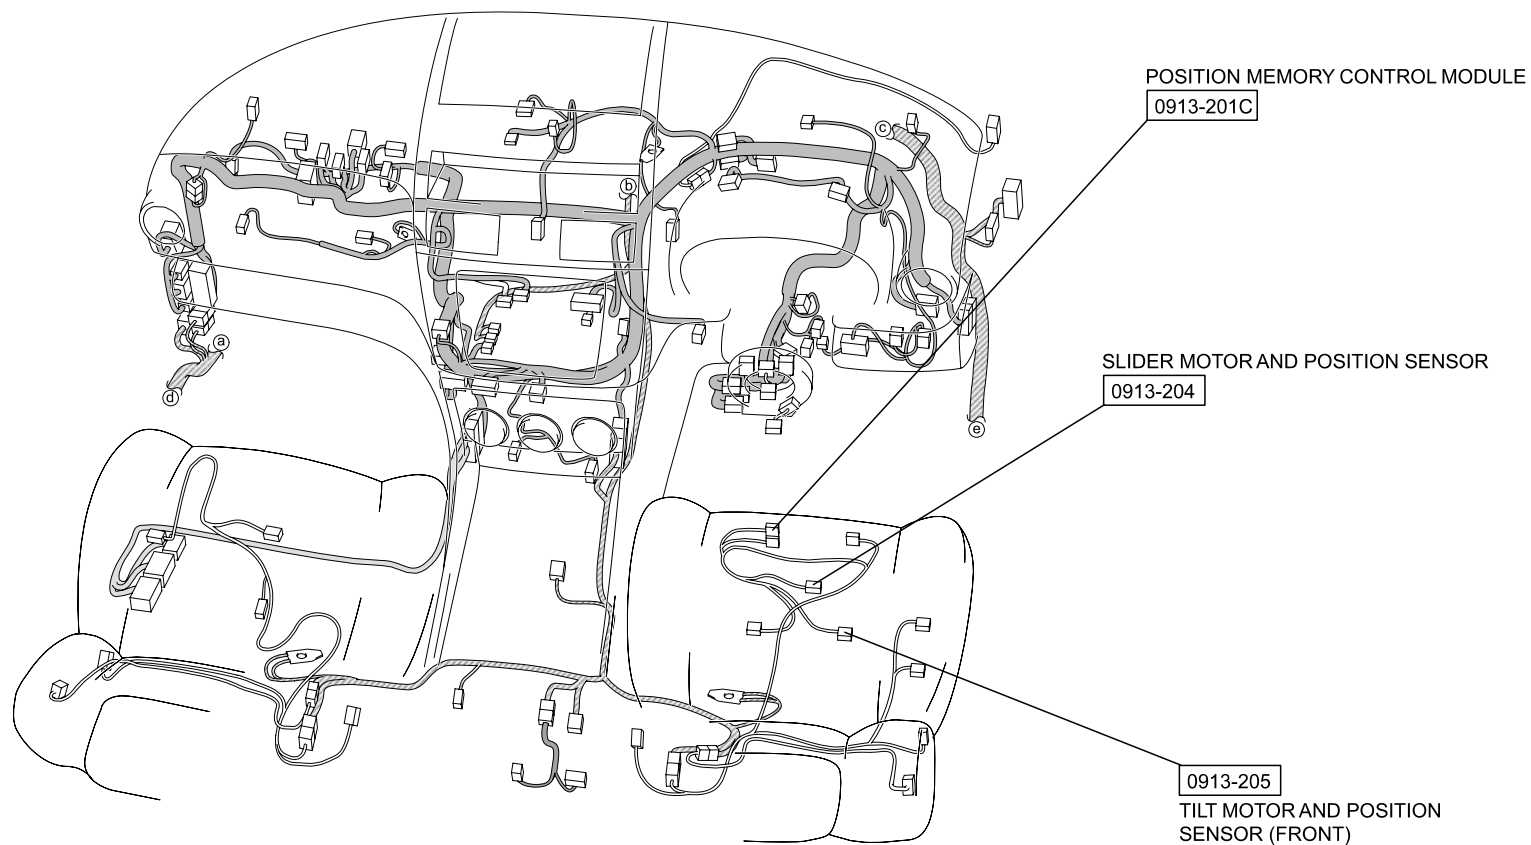




216



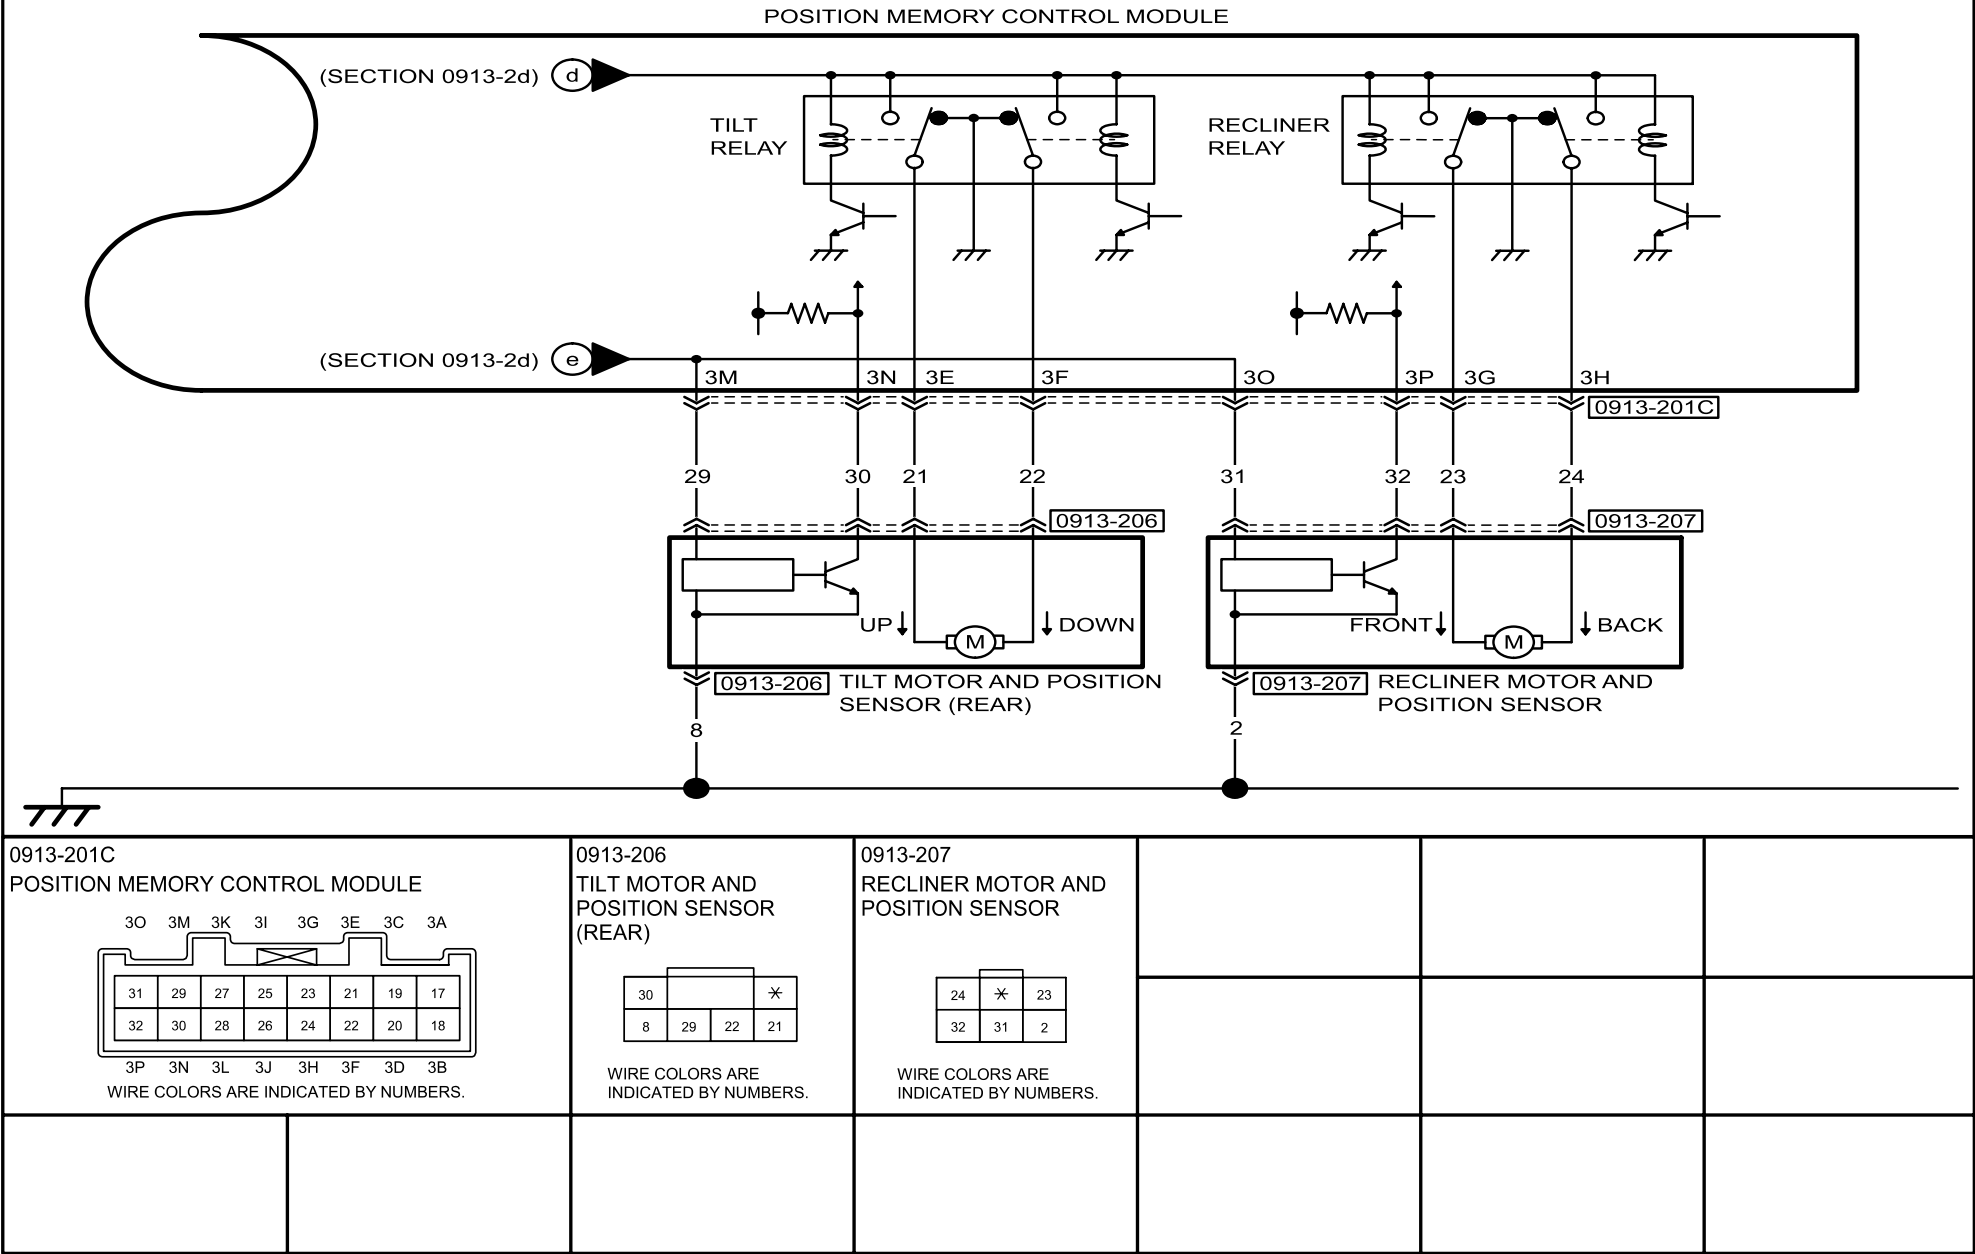


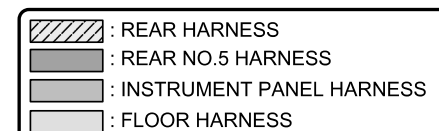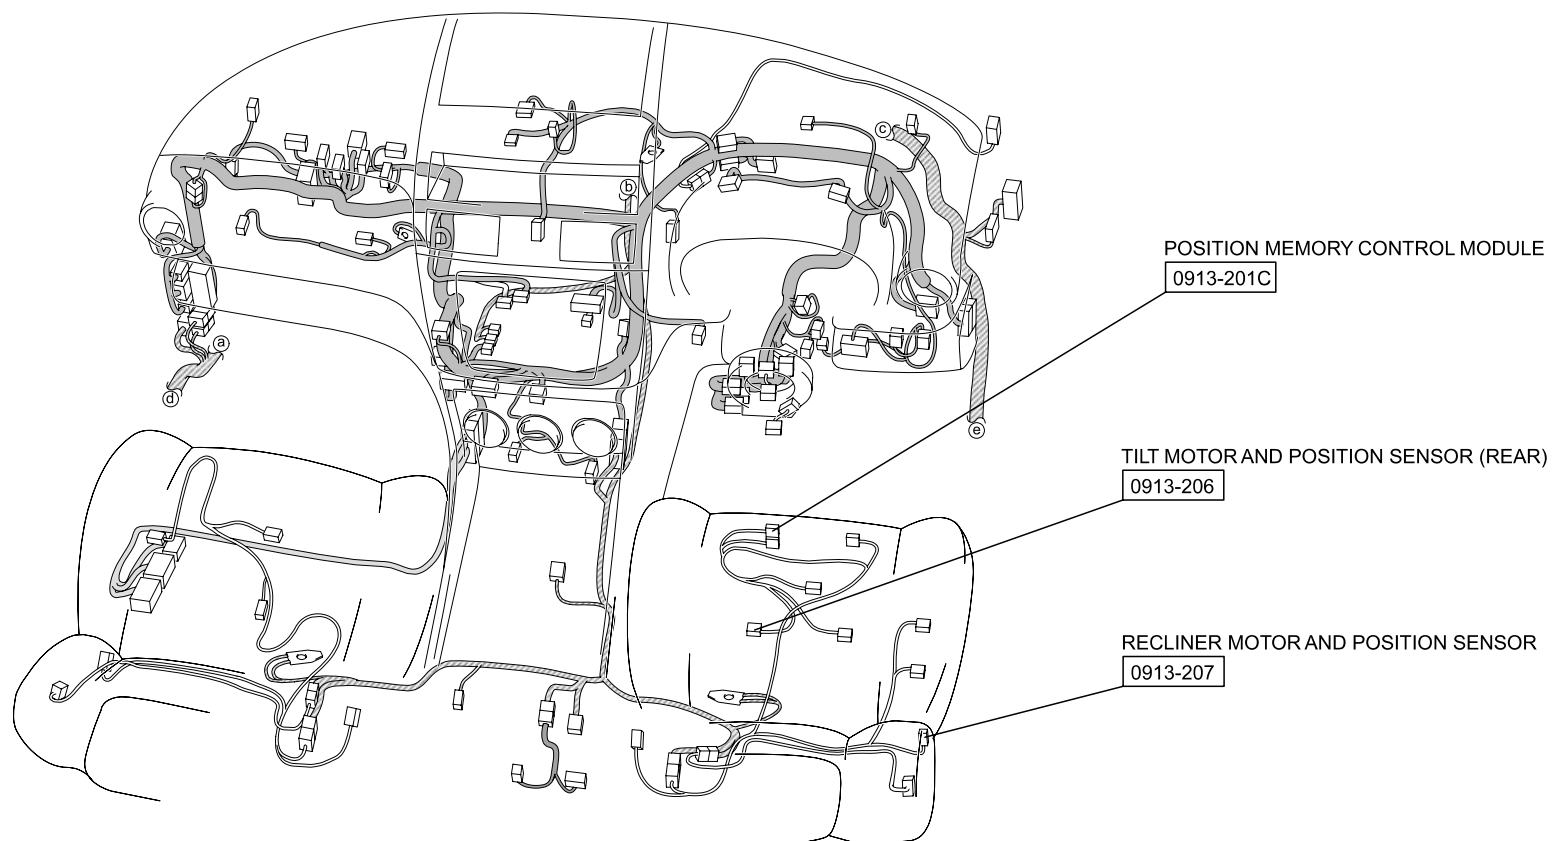


218

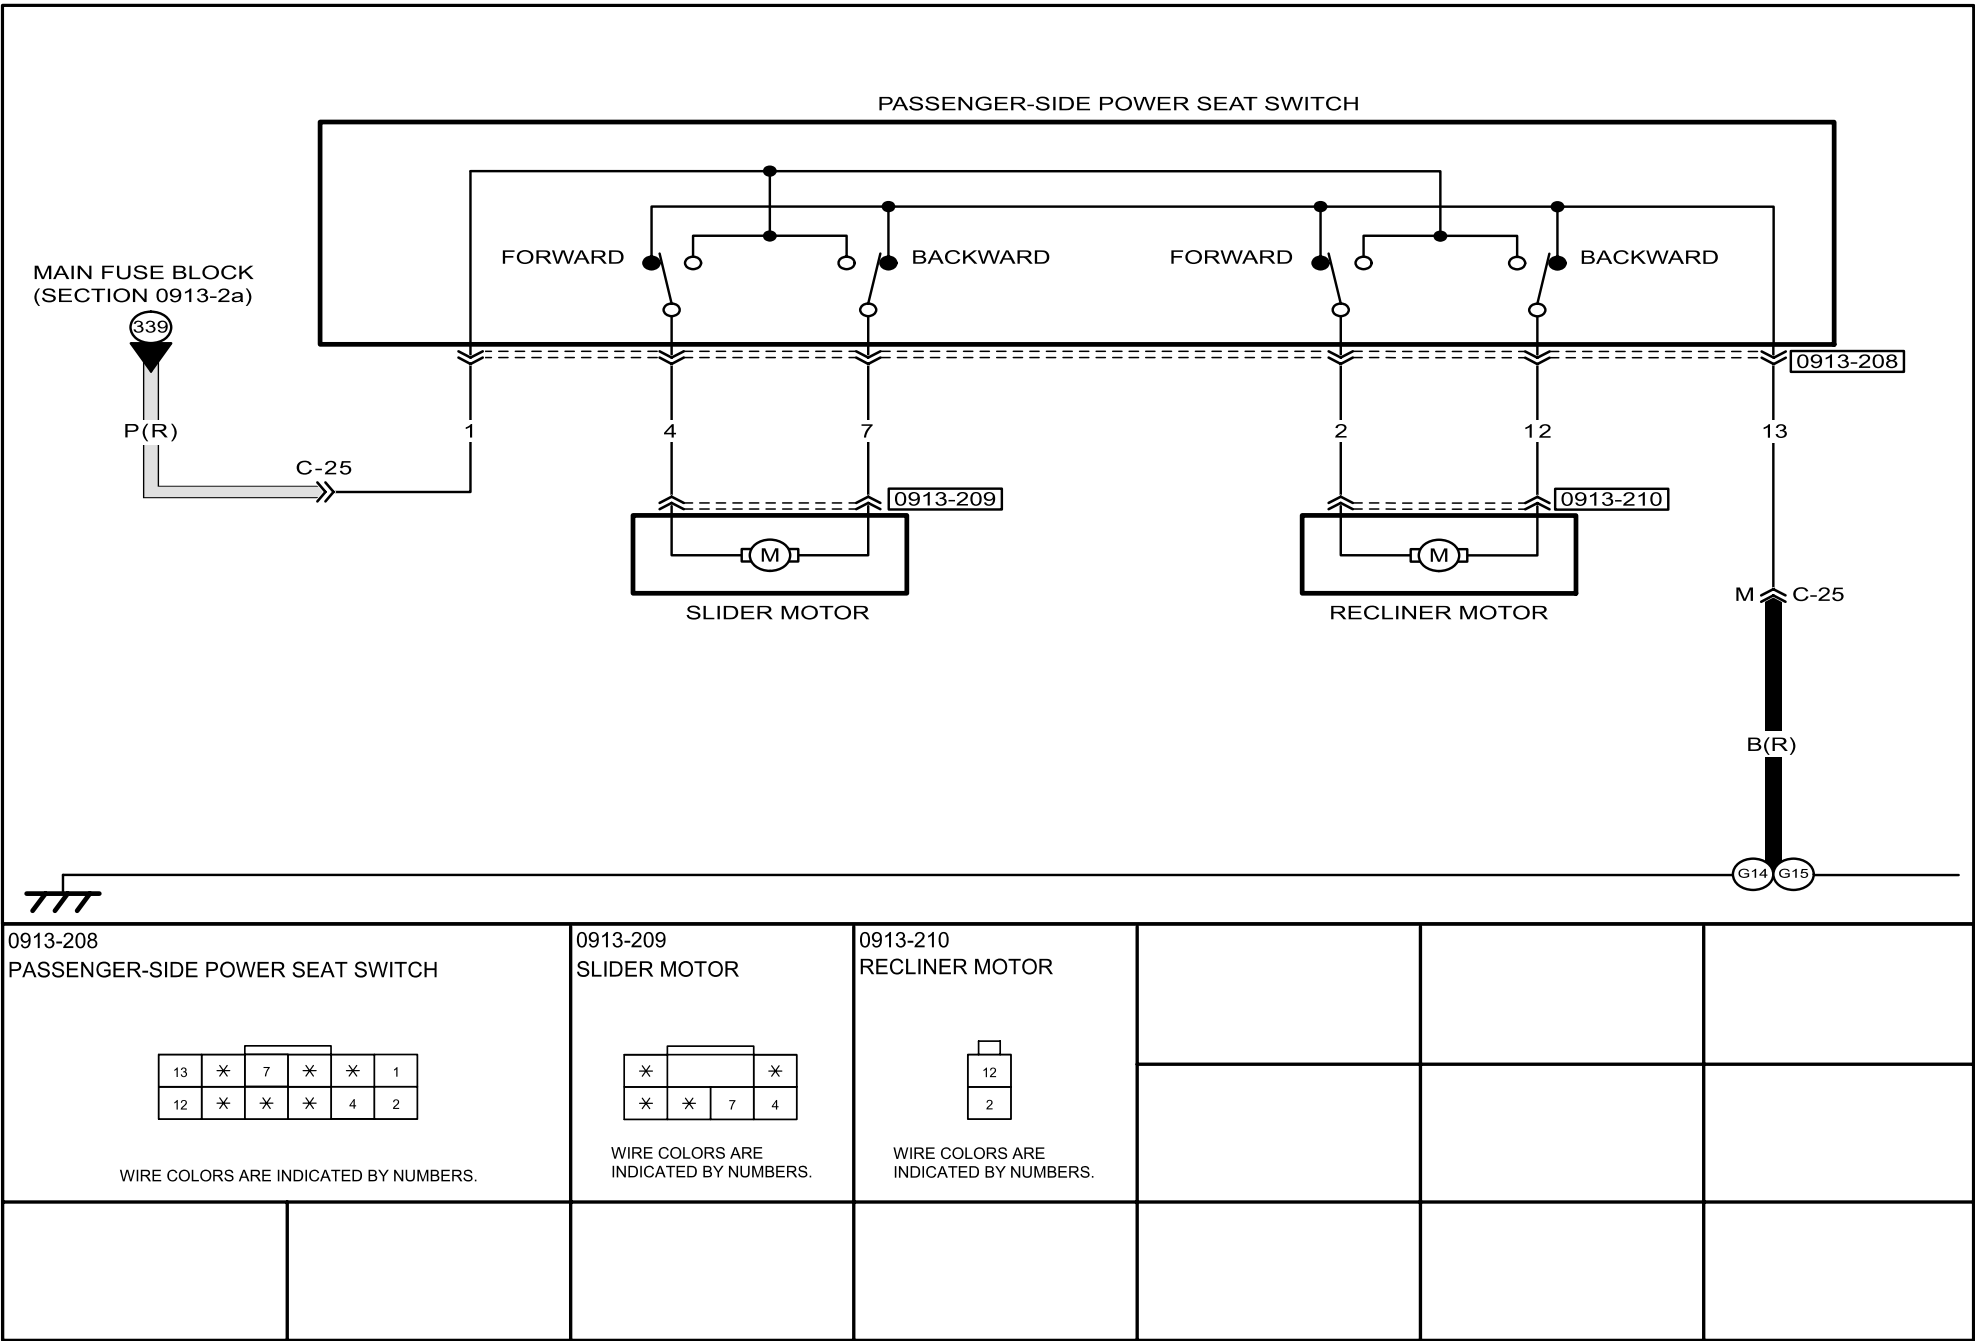

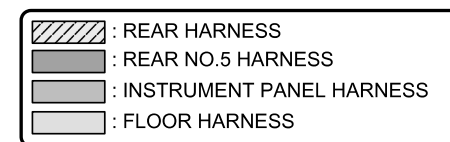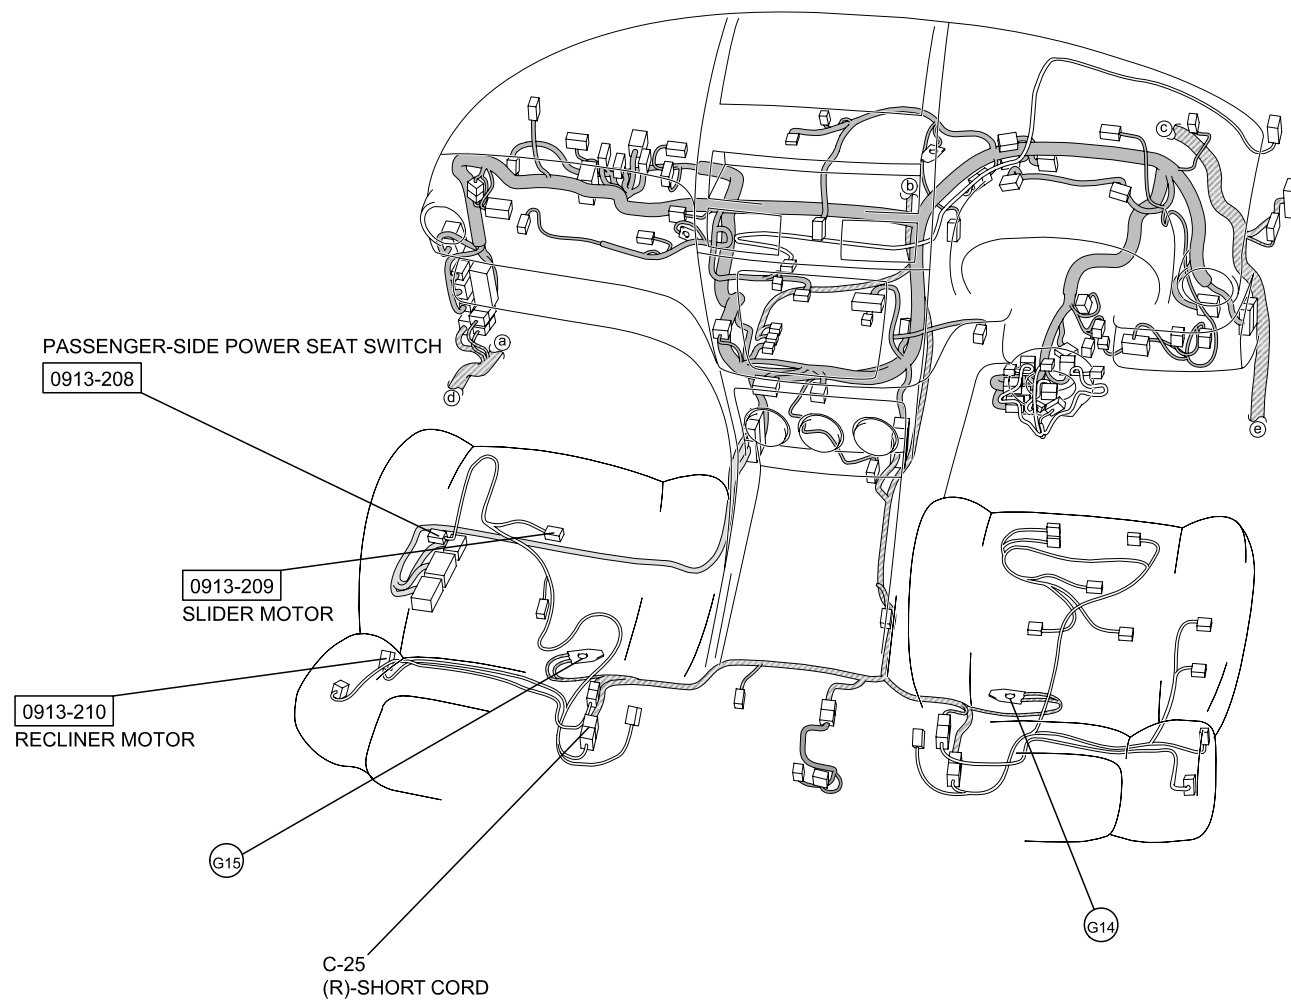


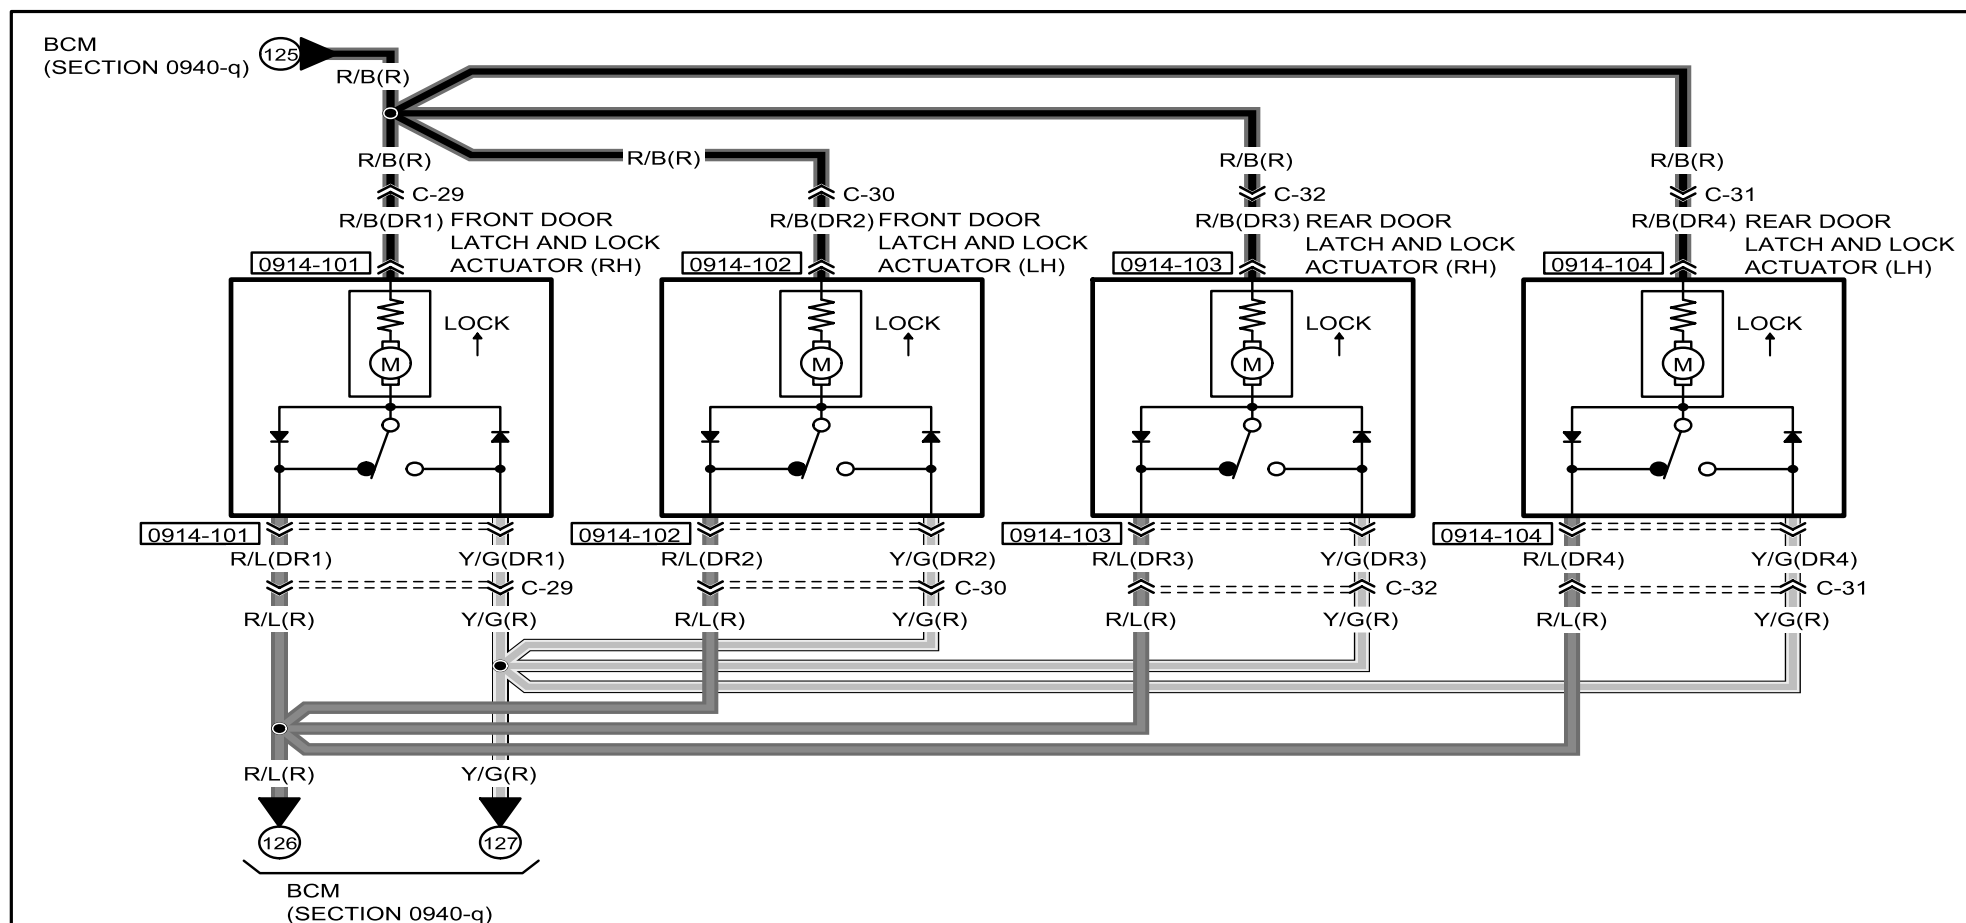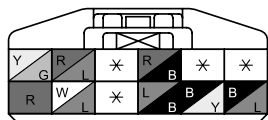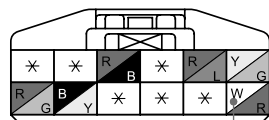0914-101
FRONT DOOR LATCH AND LOCK
ACTUATOR (RH)0914-102
FRONT DOOR LATCH AND LOCK
ACTUATOR (LH)

: NOT USED

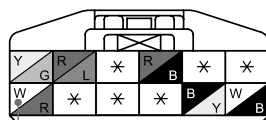0914-103
REAR DOOR LATCH AND LOCK
ACTUATOR (RH)

: NOT USED

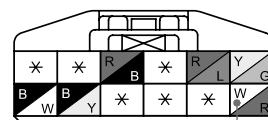
0914-104
REAR DOOR LATCH AND LOCK
ACTUATOR (LH)


: NOT USED

POWER DOOR LOCK SYSTEM

0914-1a

221

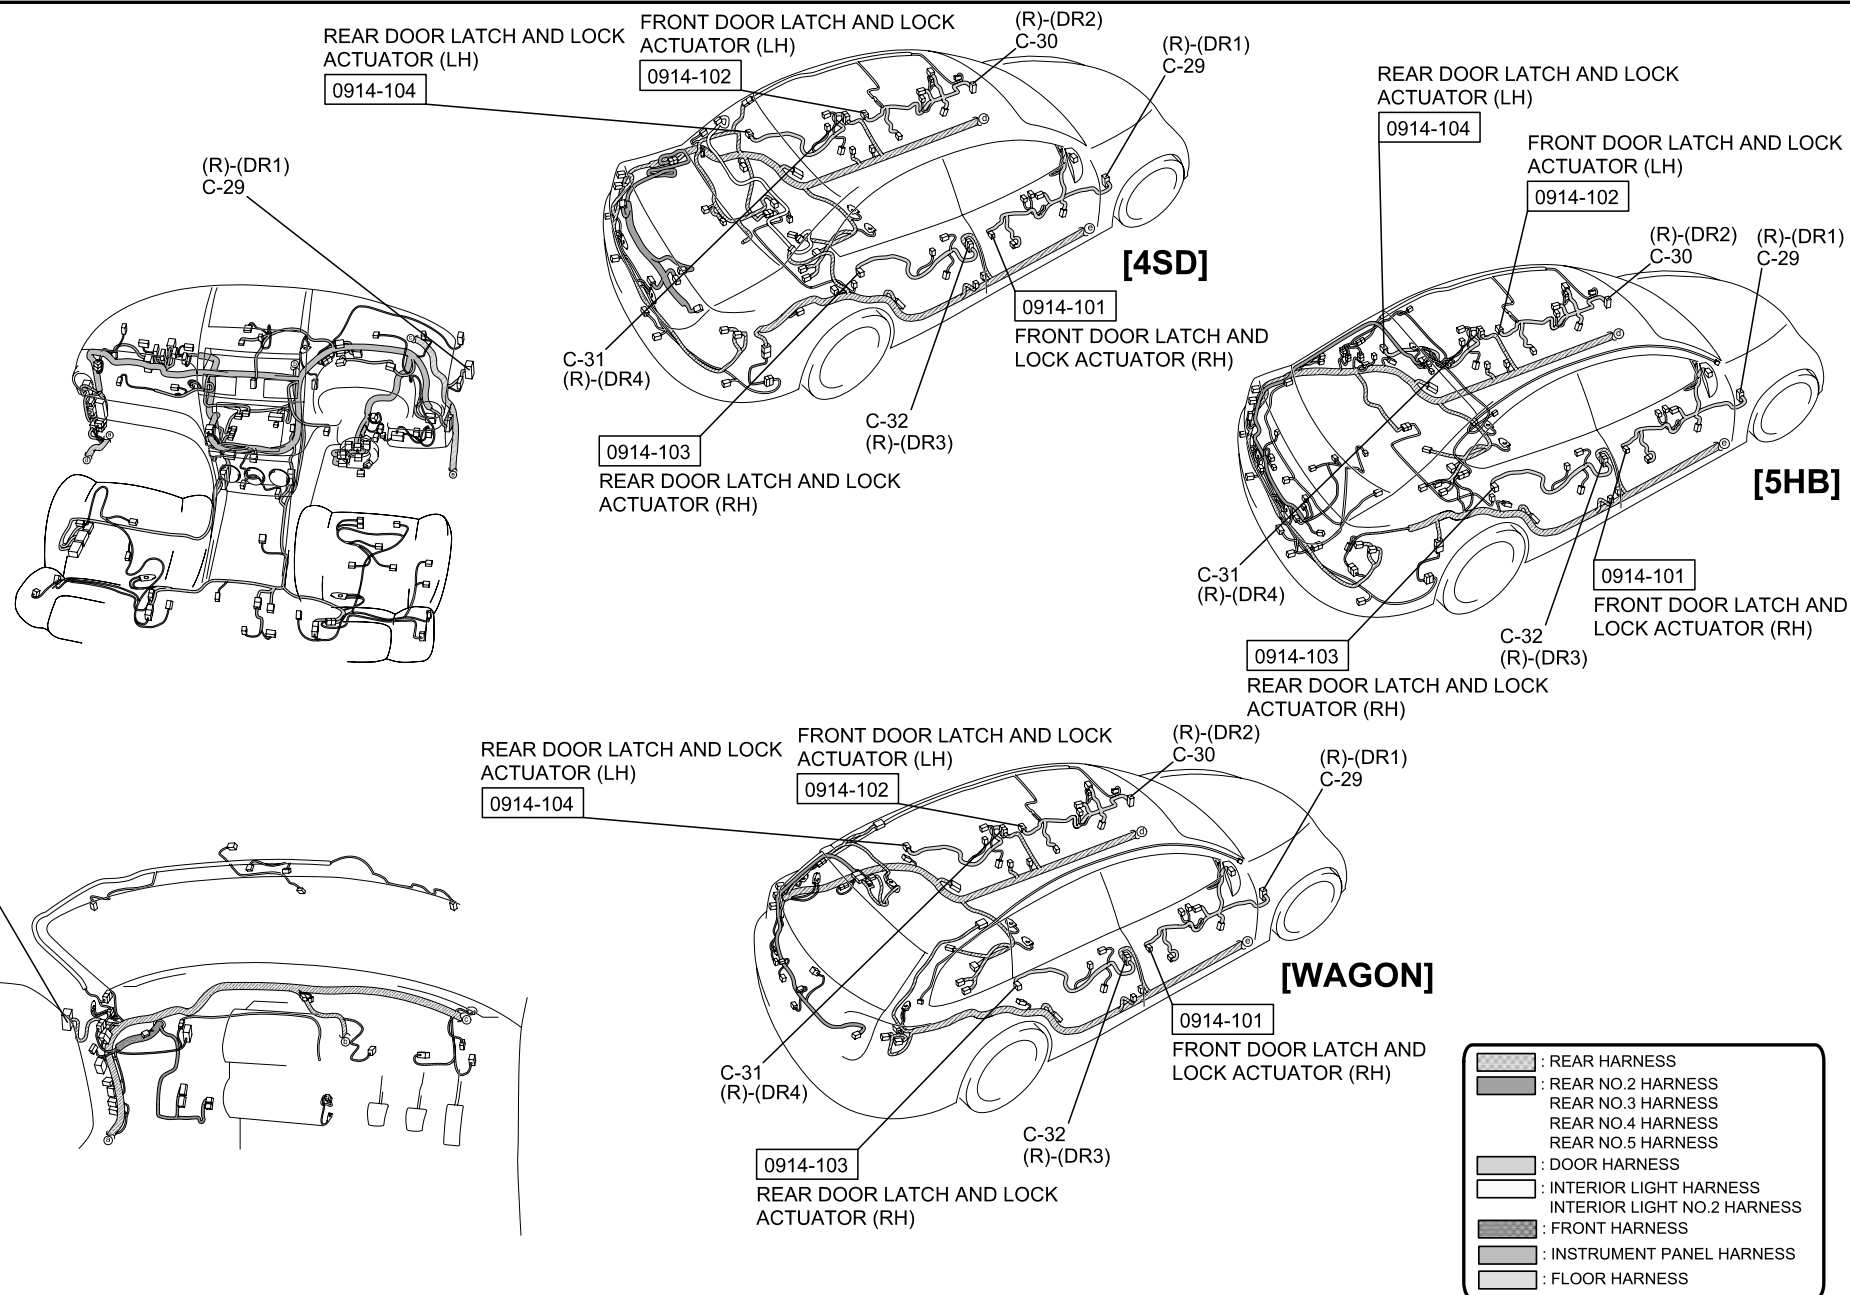


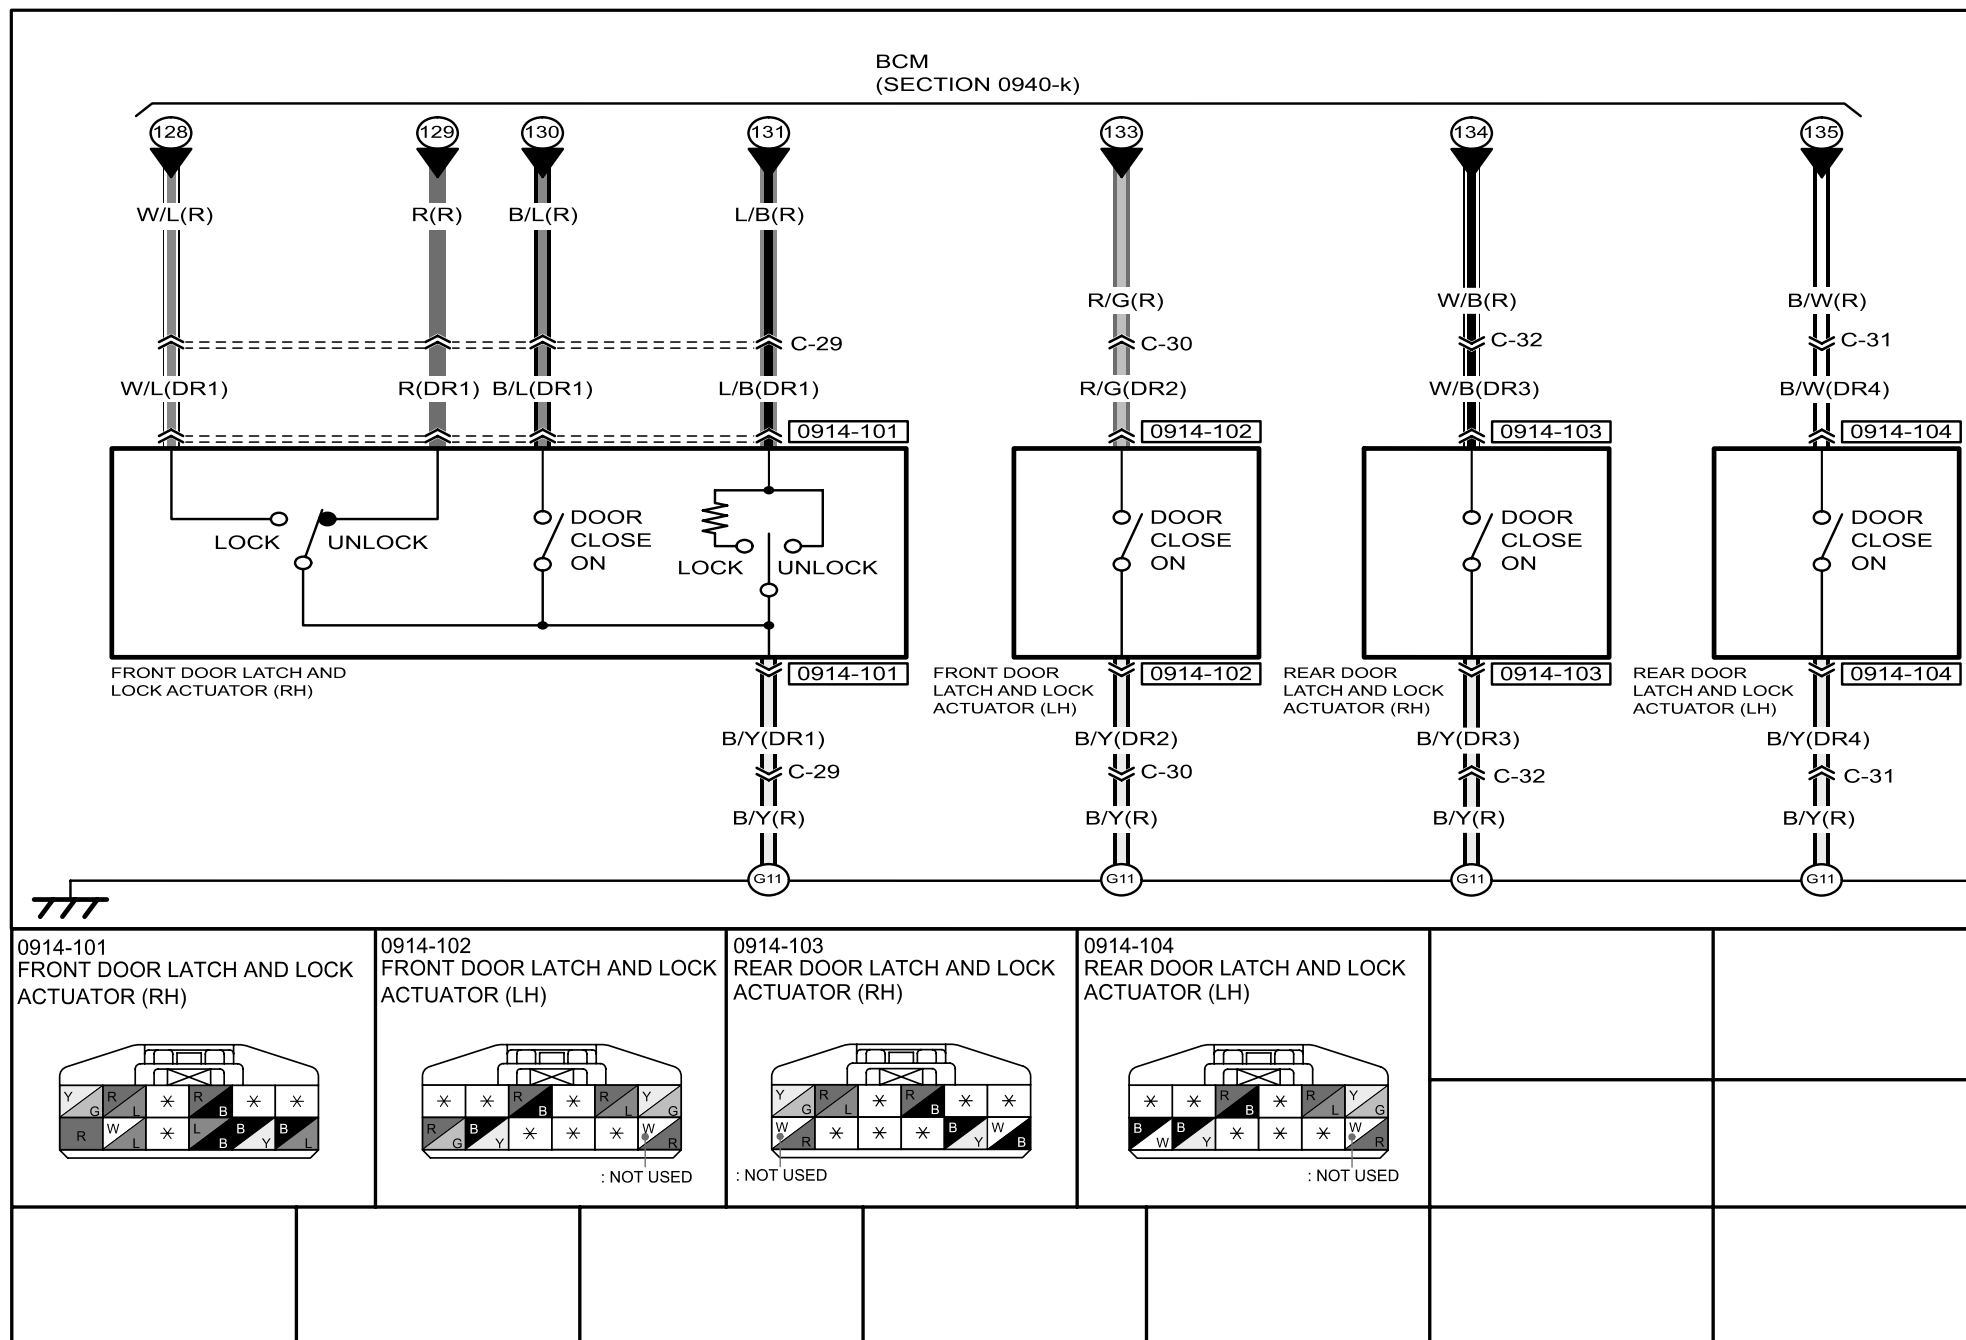


POWER DOOR LOCK SYSTEM


0914-1b


223

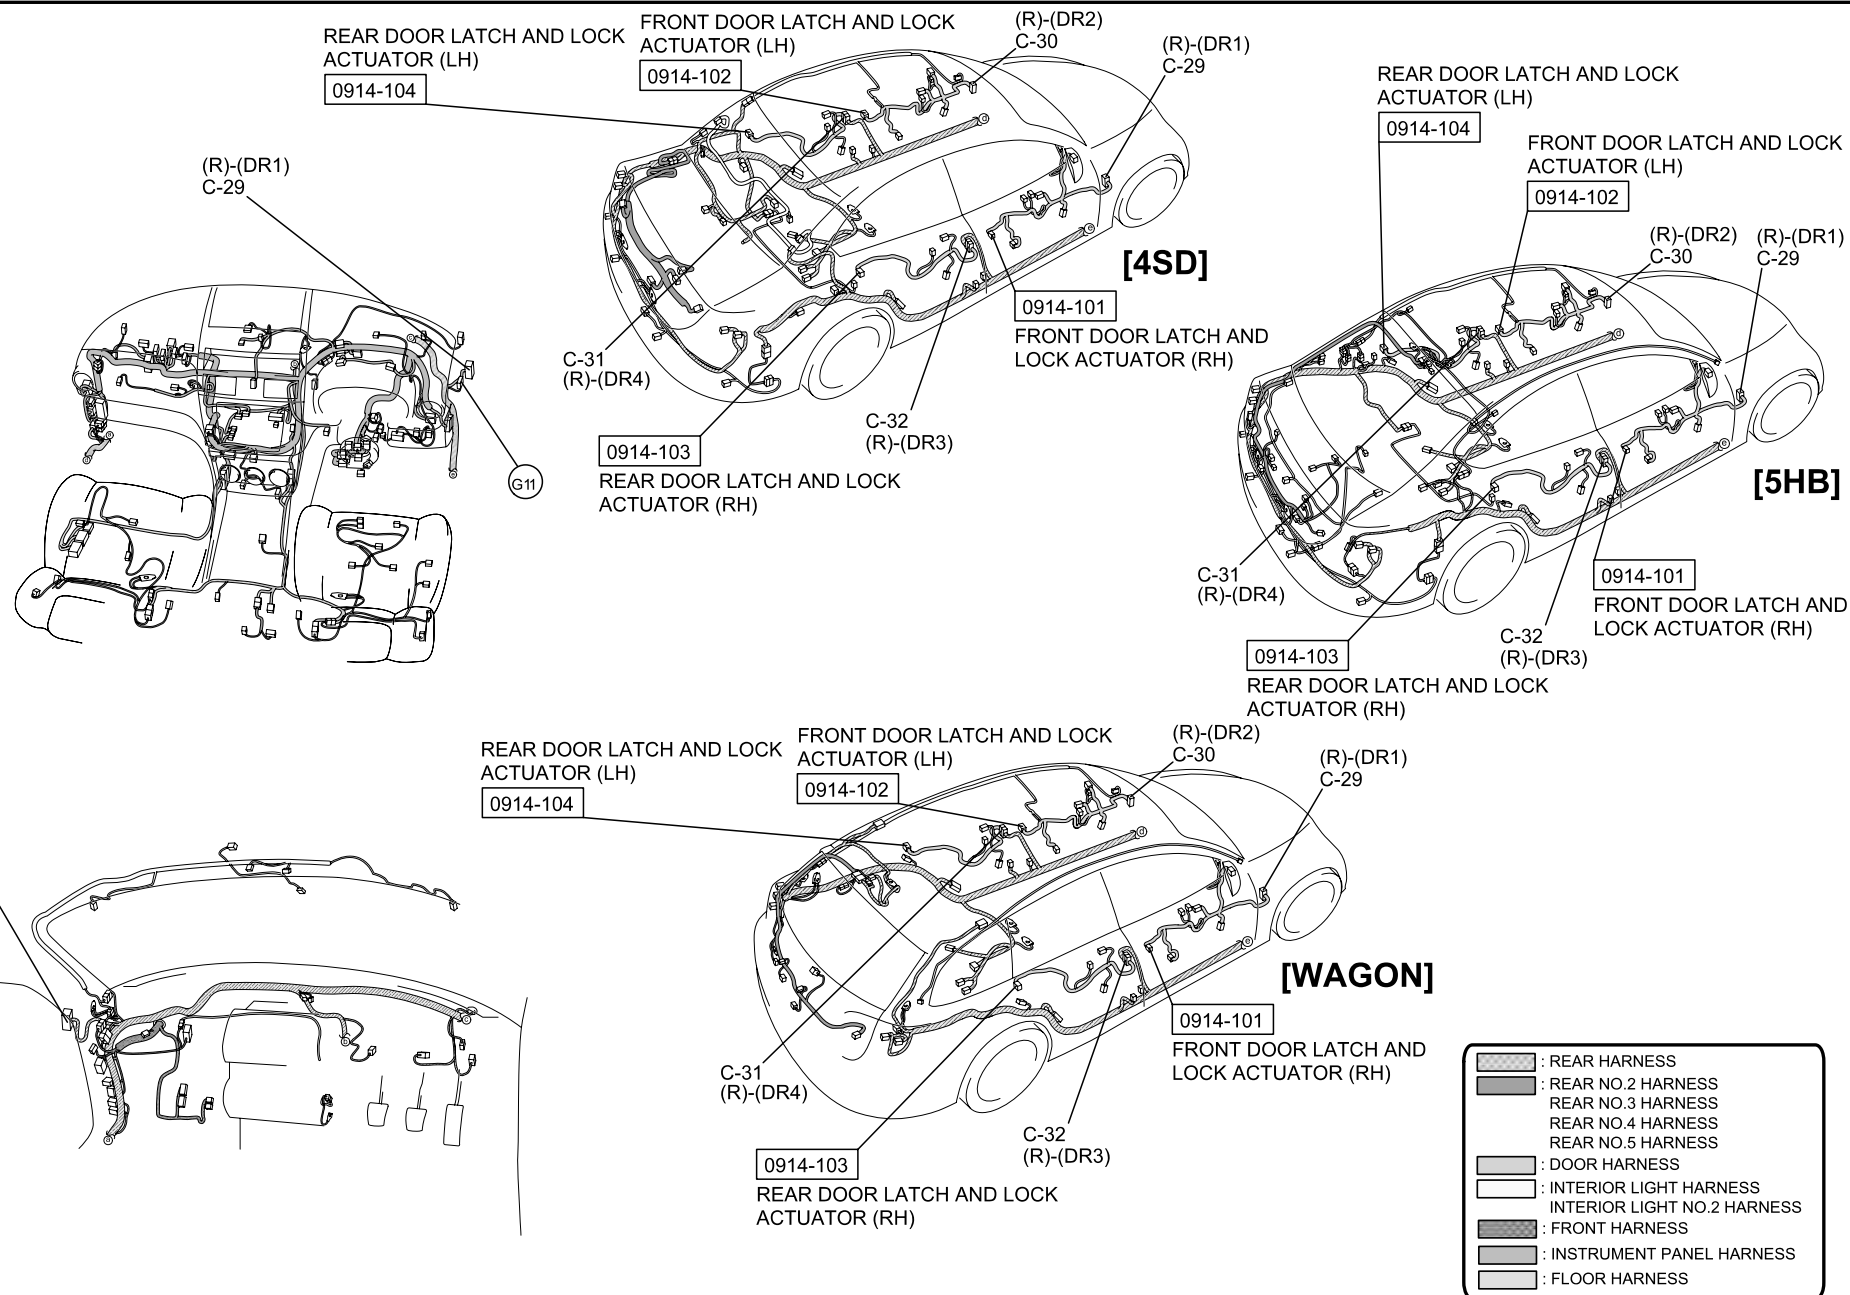


224

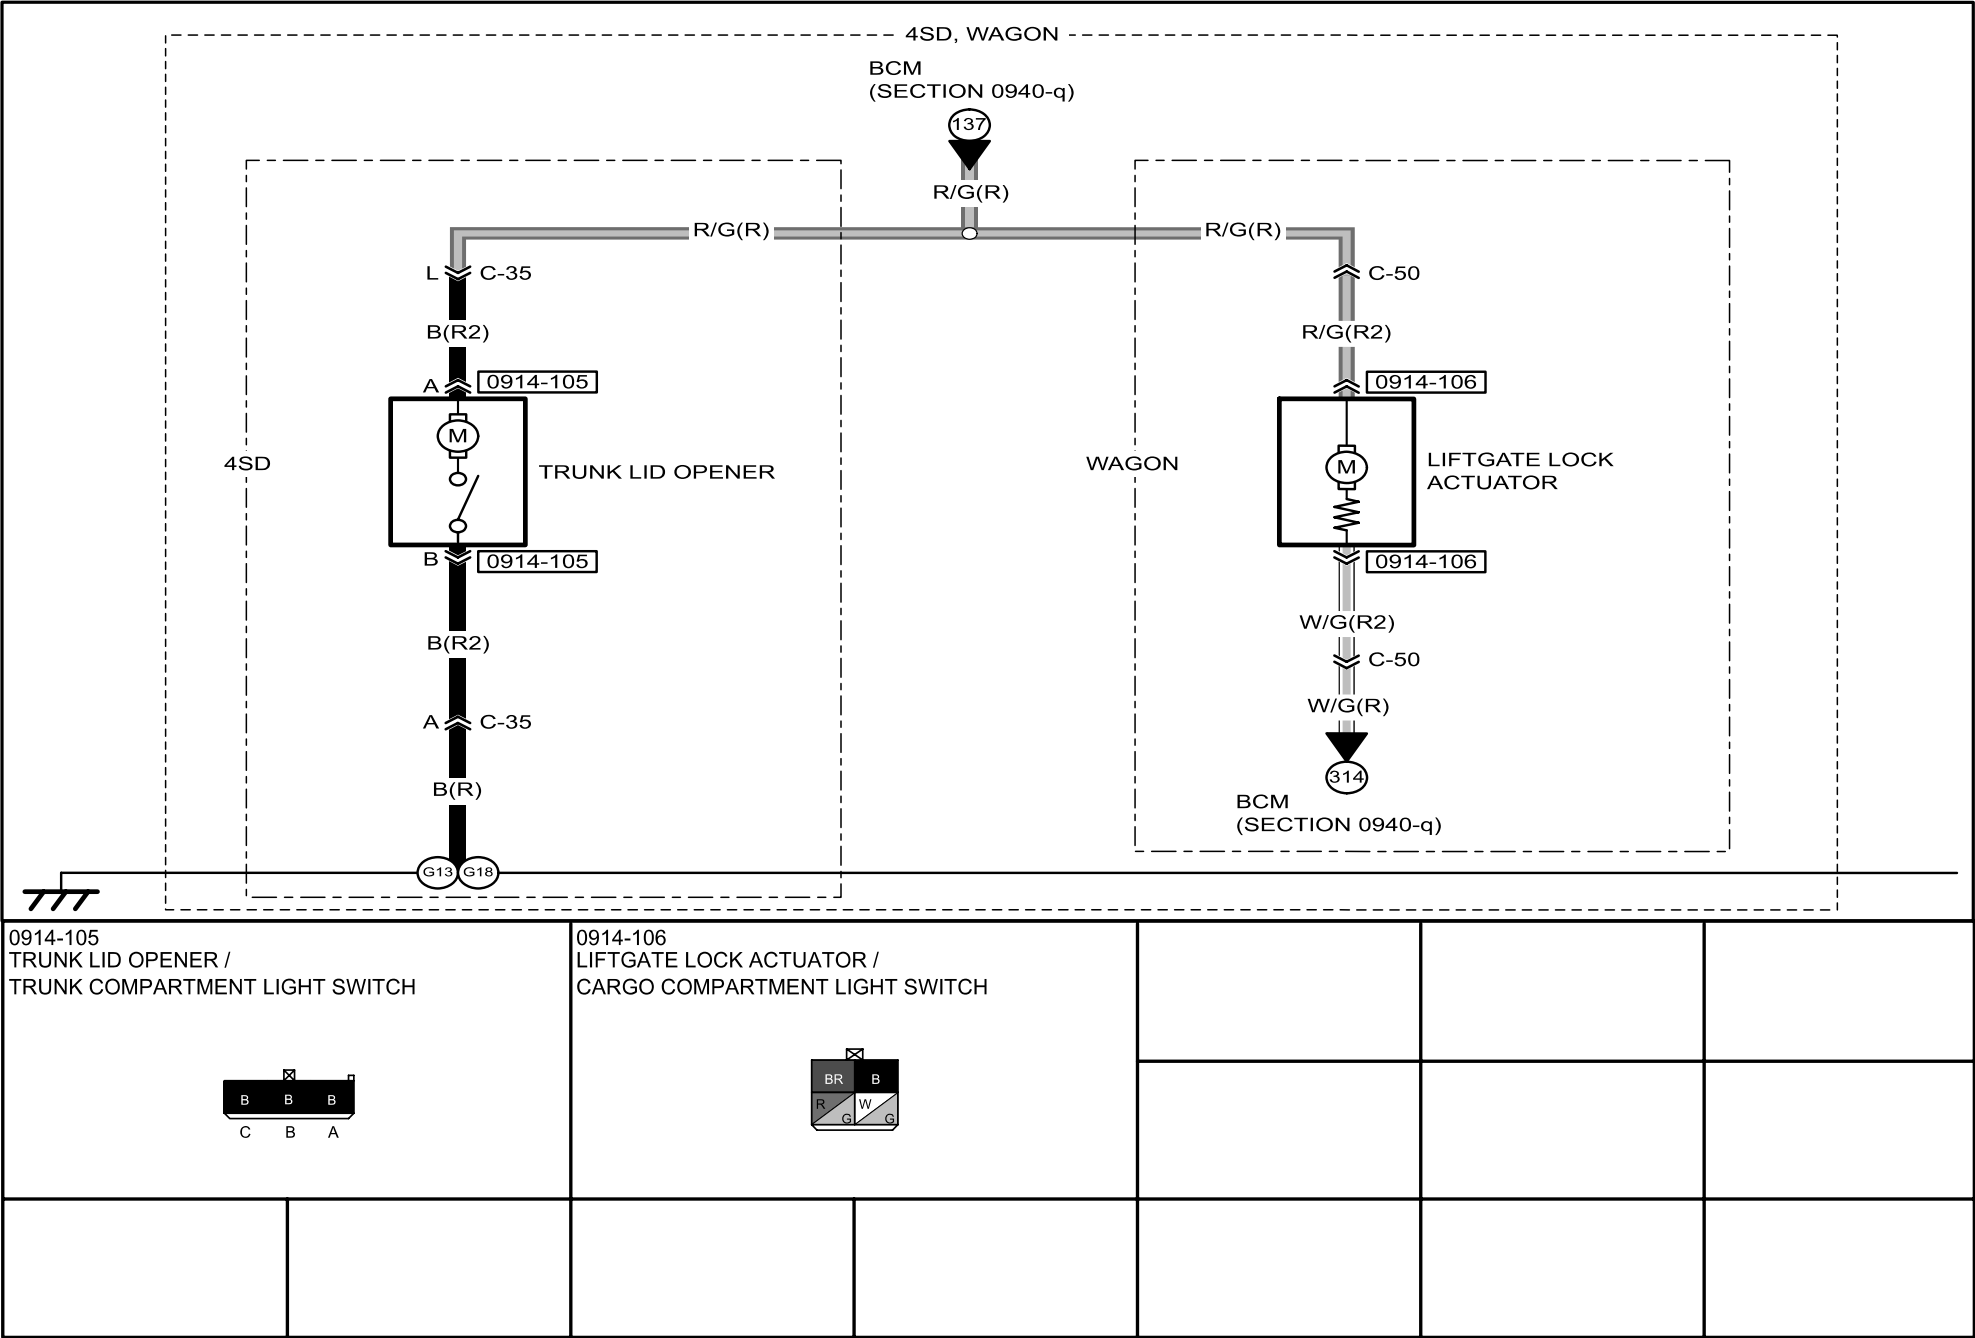

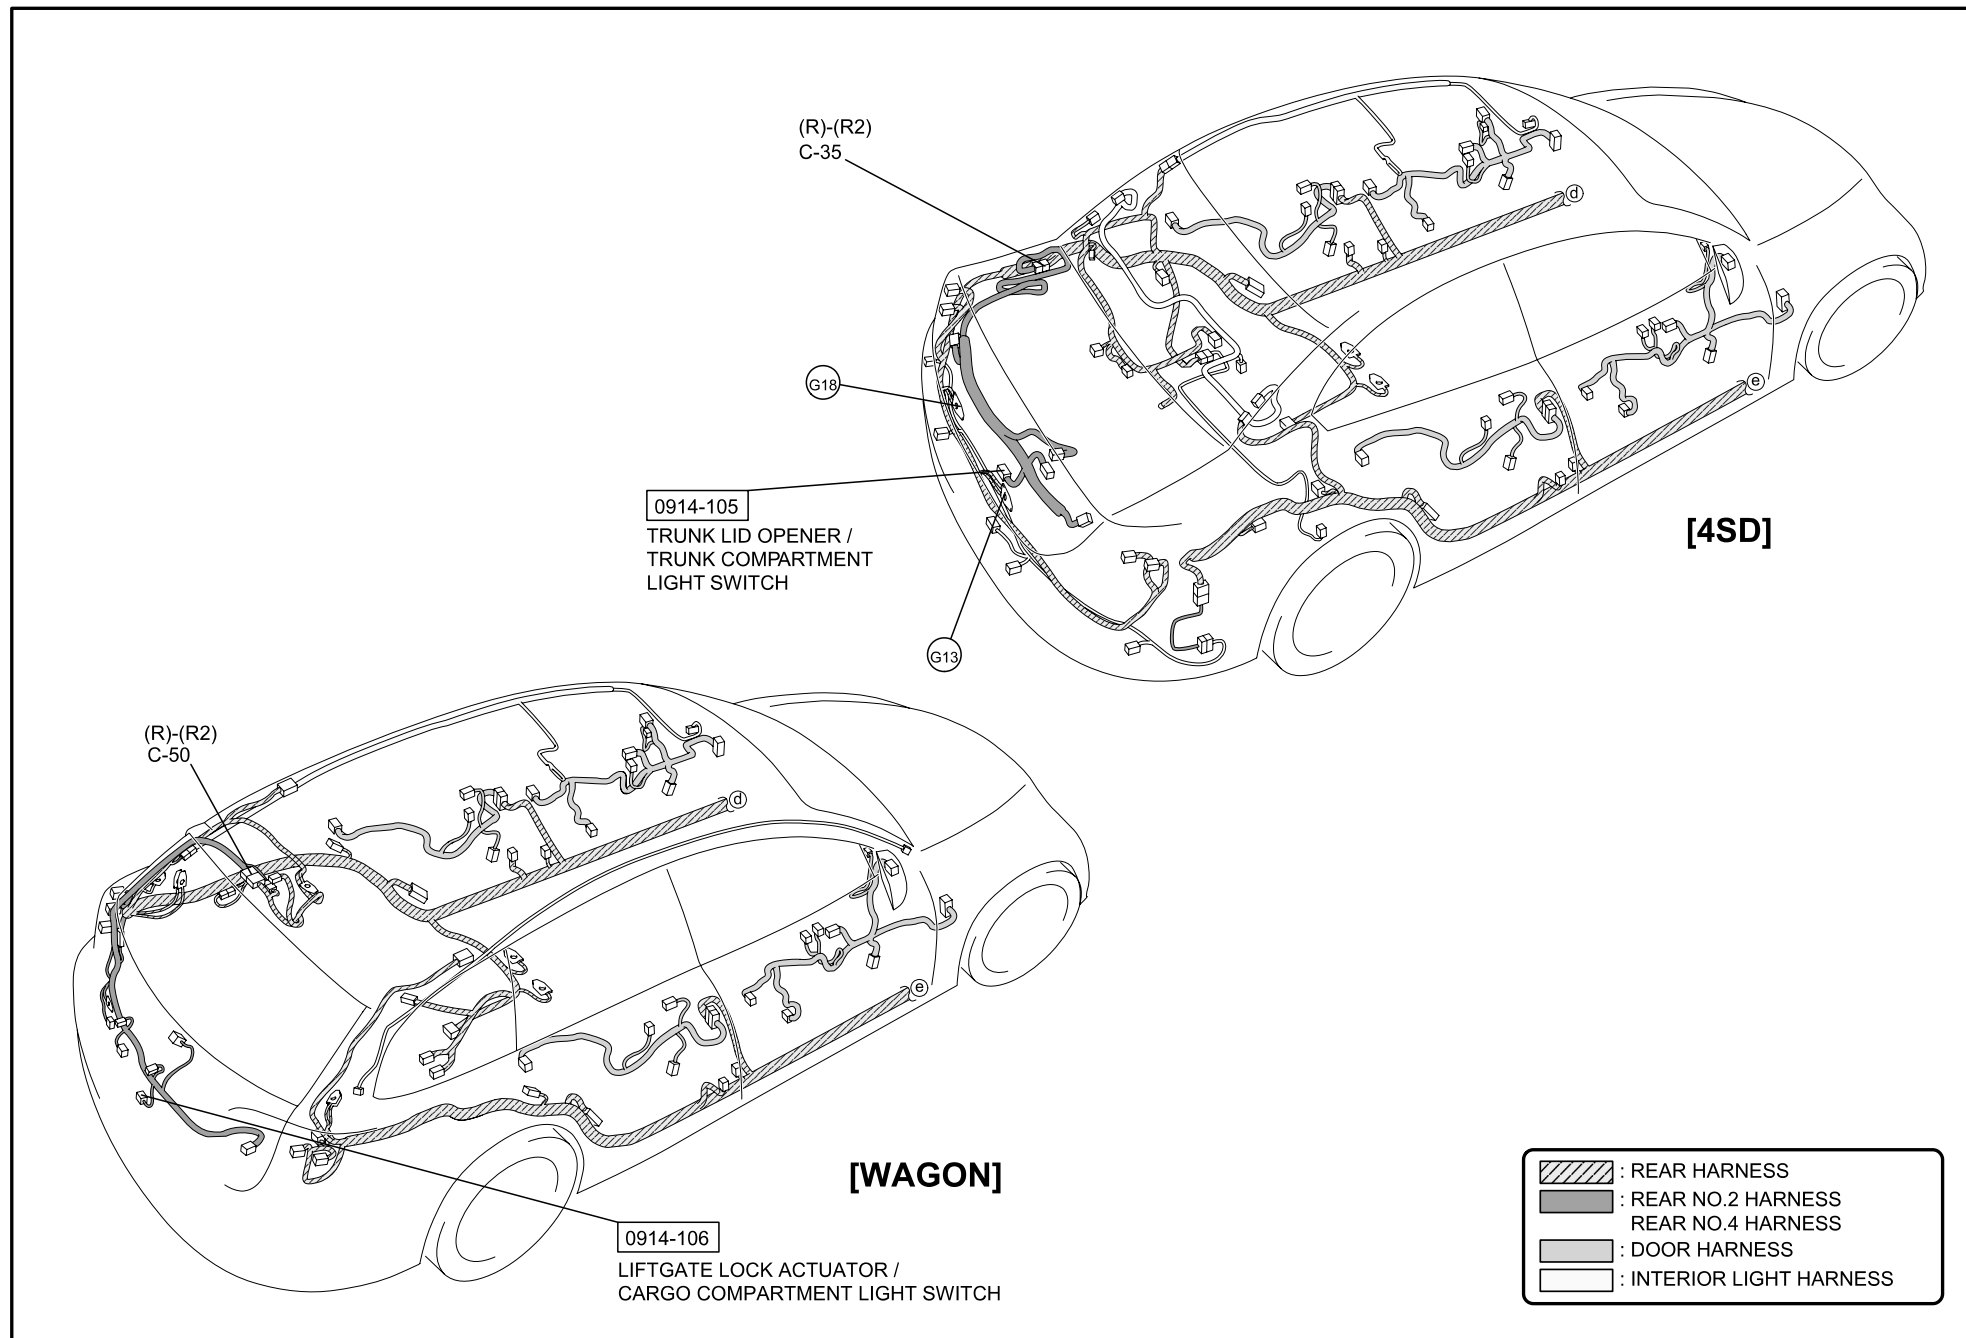


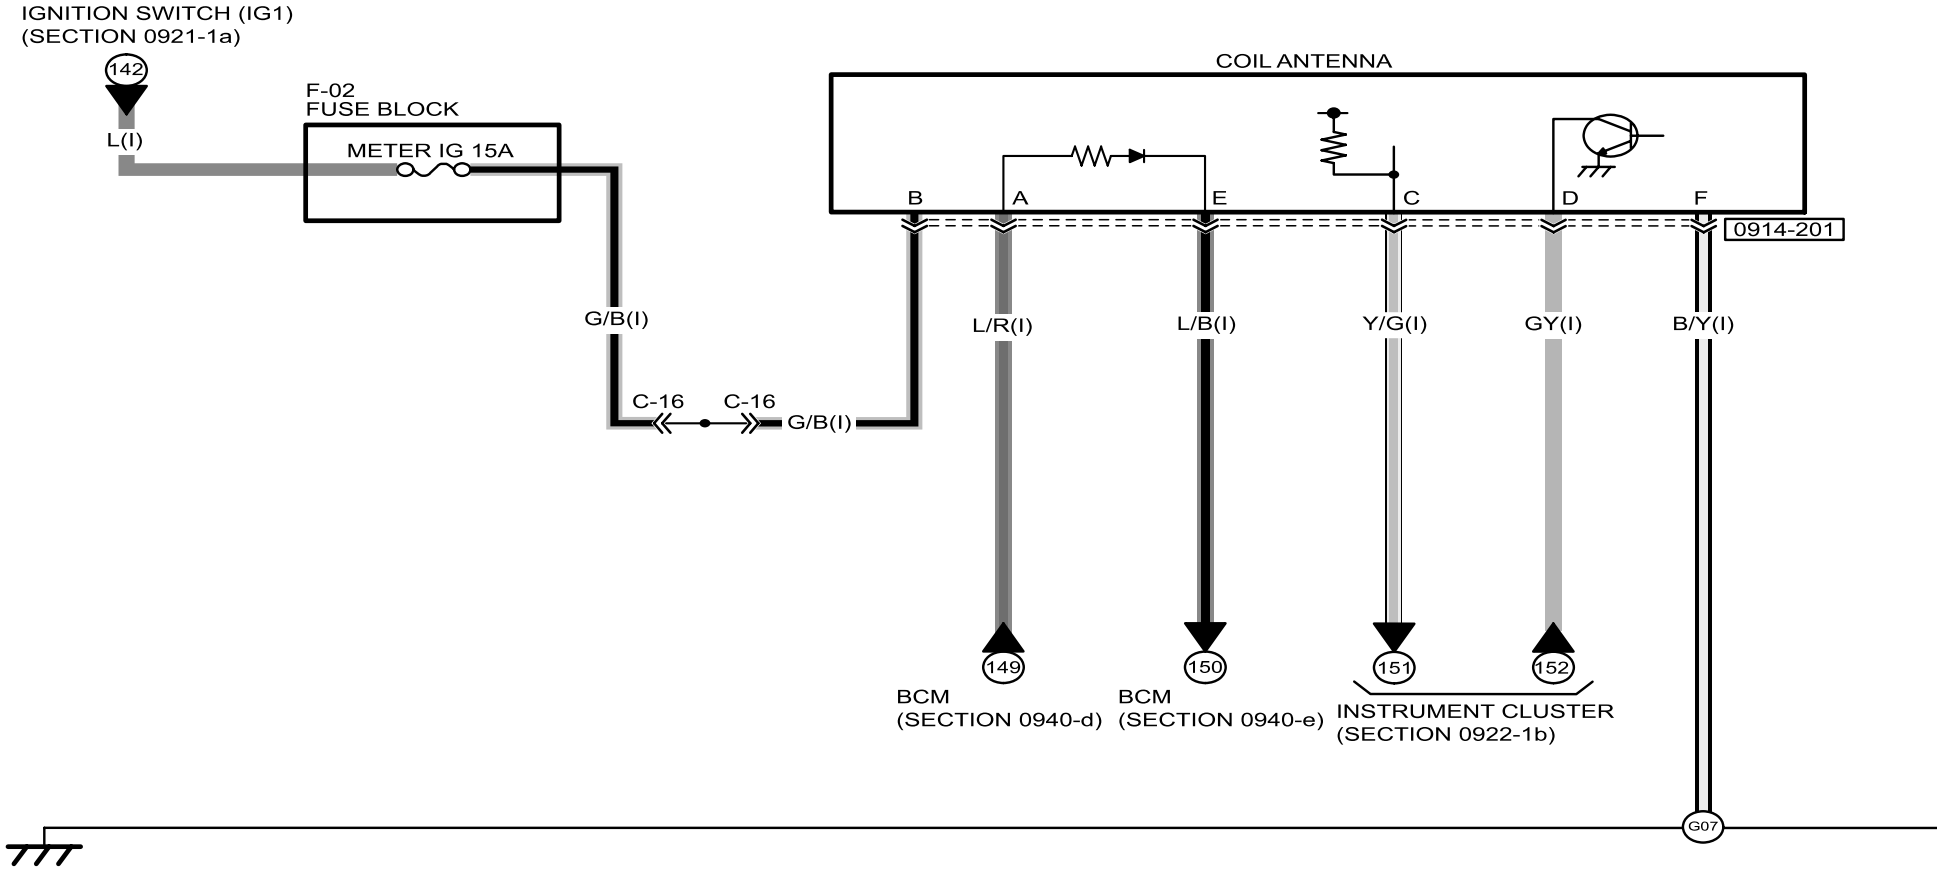

0914-201
COIL ANTENNA

 



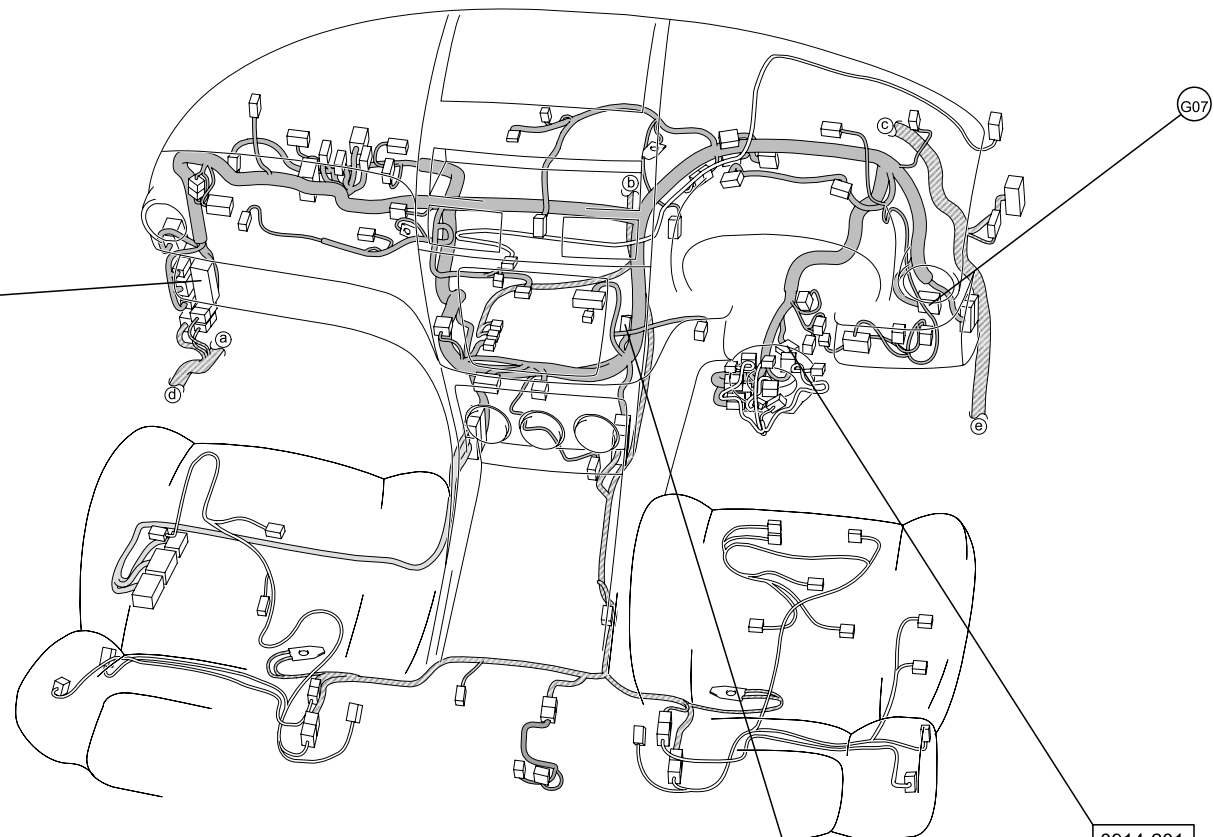


F-02
FUSE BLOCK
(REFER TO 00F SECTION)




C-16
JOINT CONNECTOR

0914-201
COIL ANTENNA

	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS

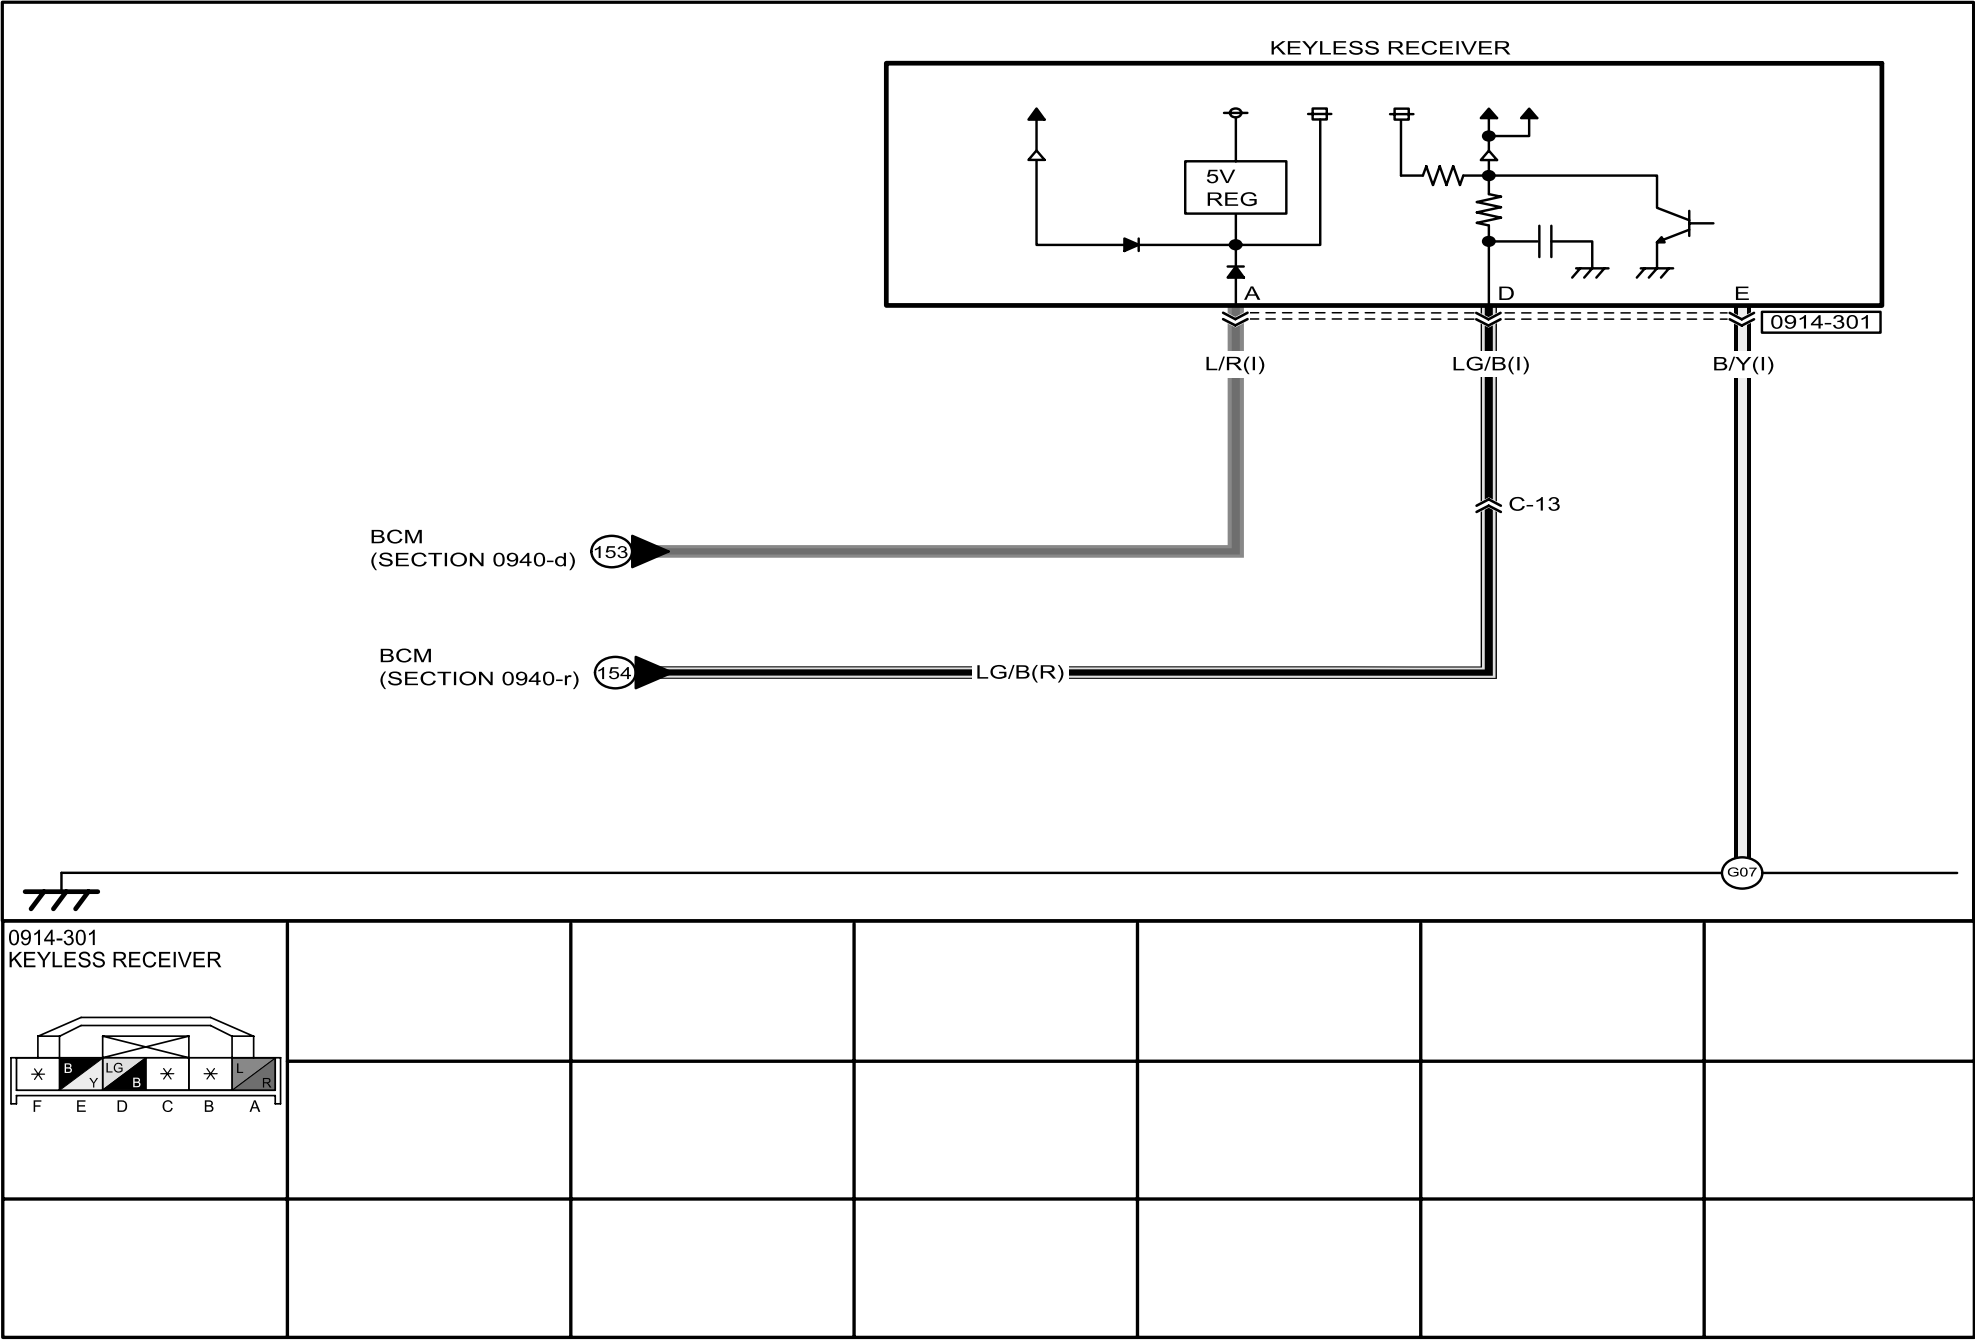



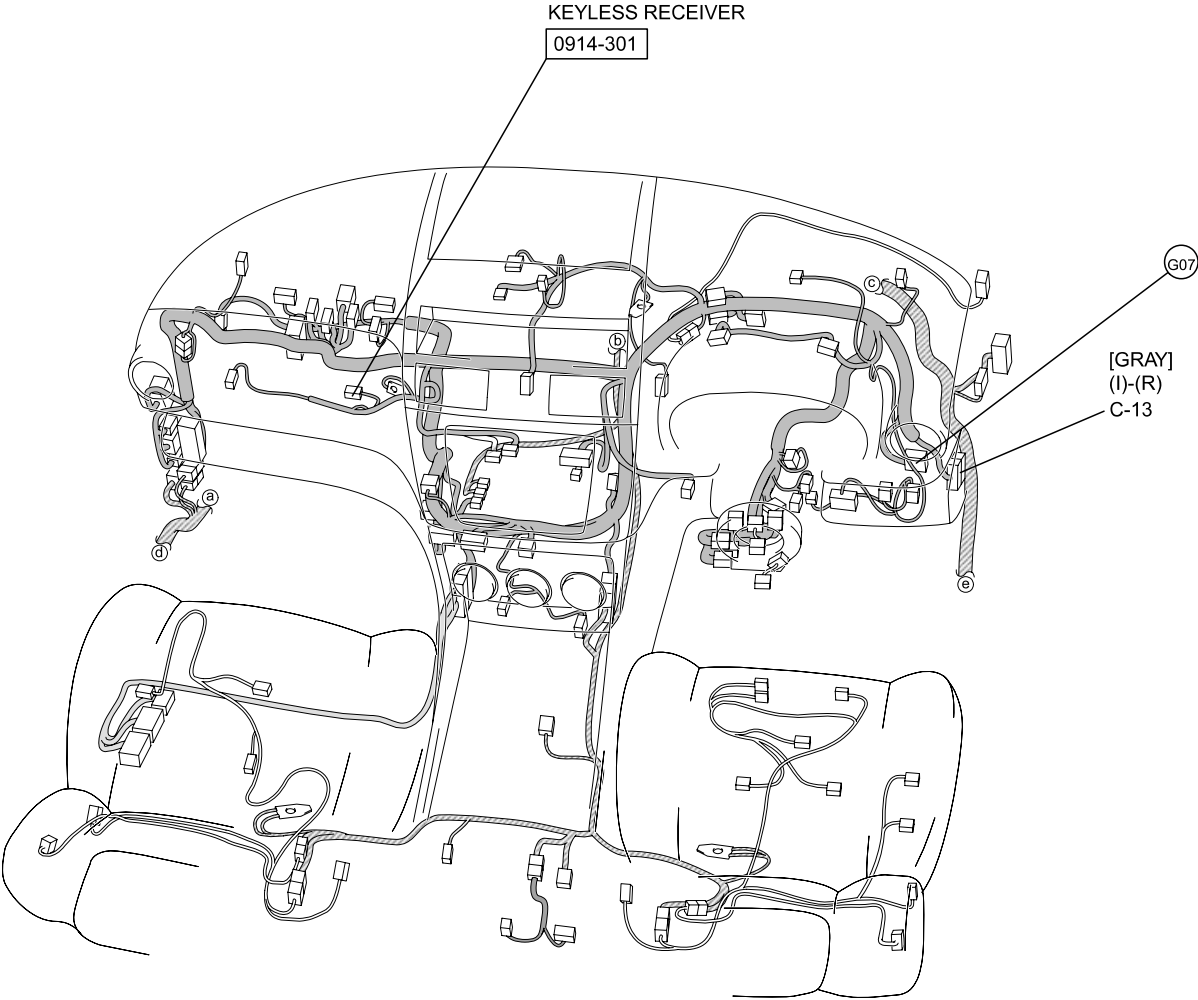


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS


230

230

230

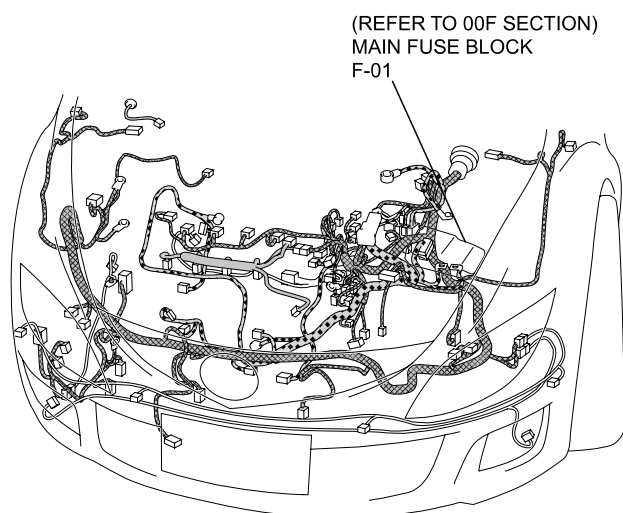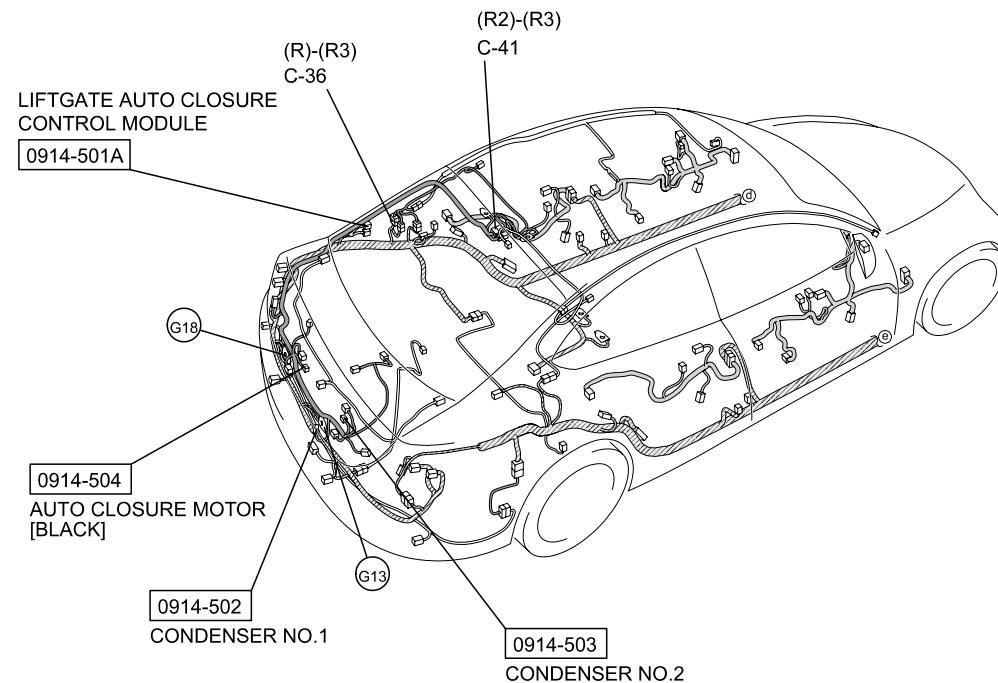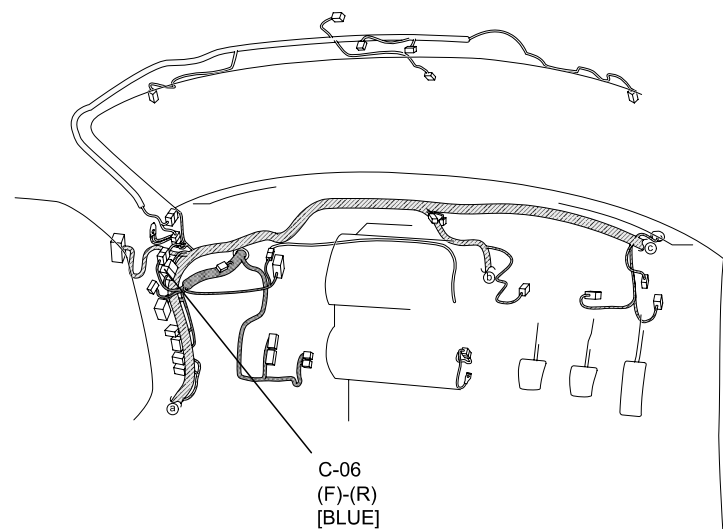


[EXCEPT MZR-CD 2.2]

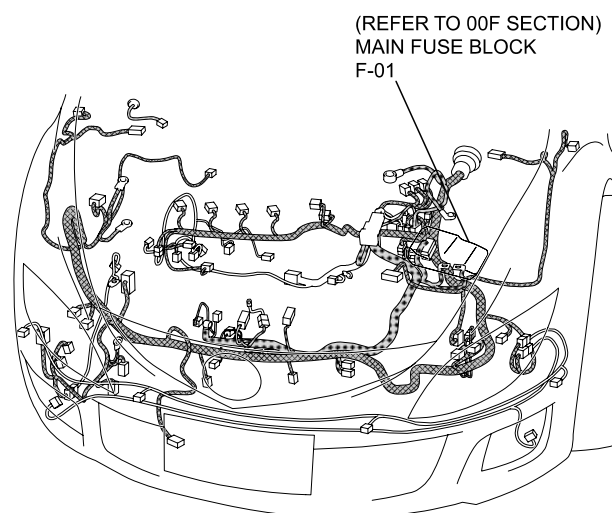


[MZR-CD 2.2]


	: REAR HARNESS
	: REAR NO.2 HARNESS REAR NO.3 HARNESS REAR NO.4 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS



232


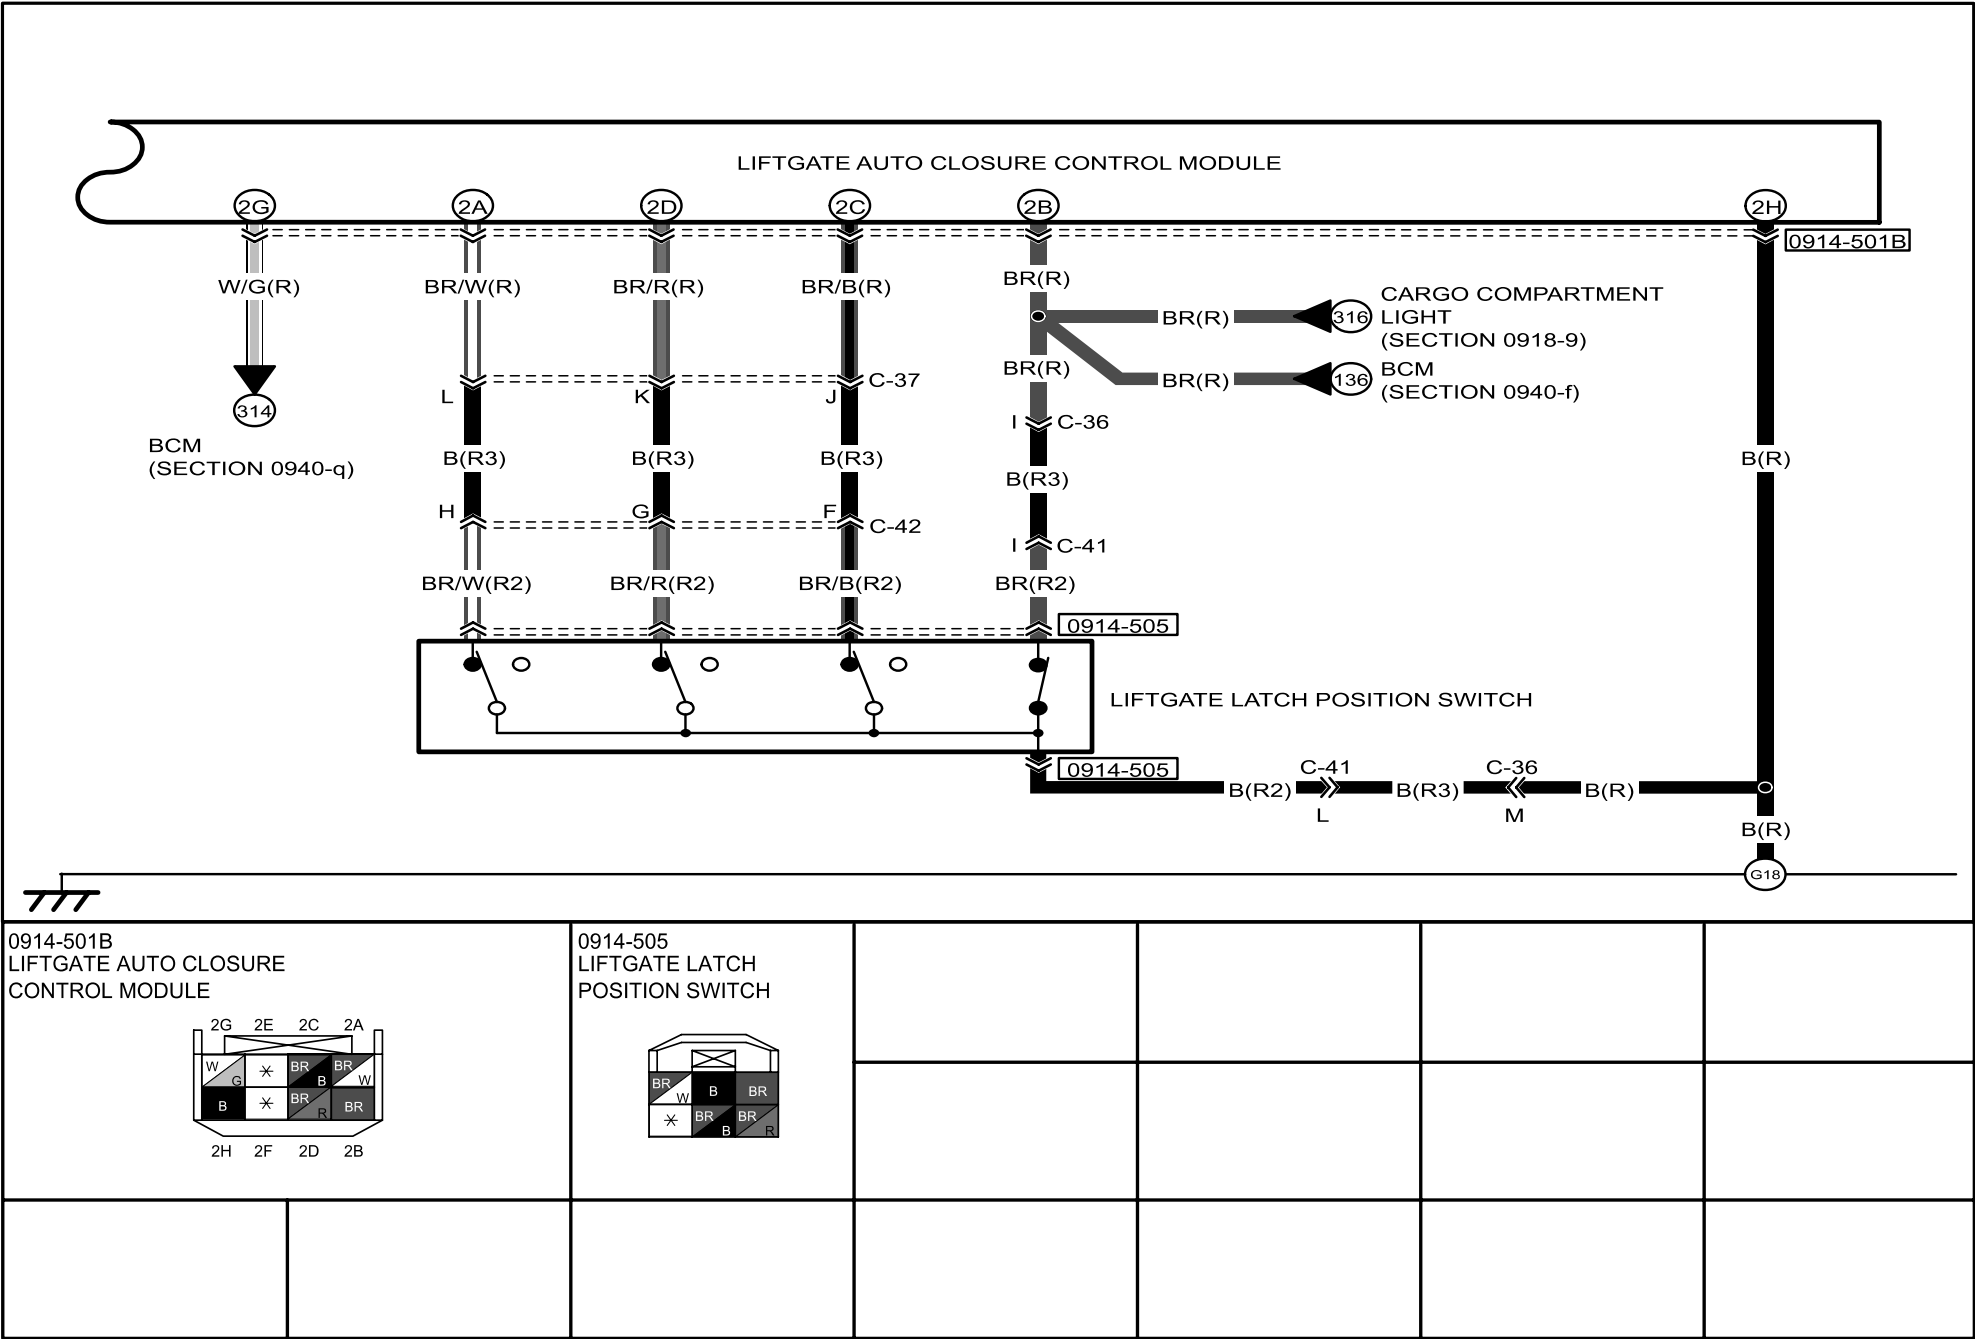


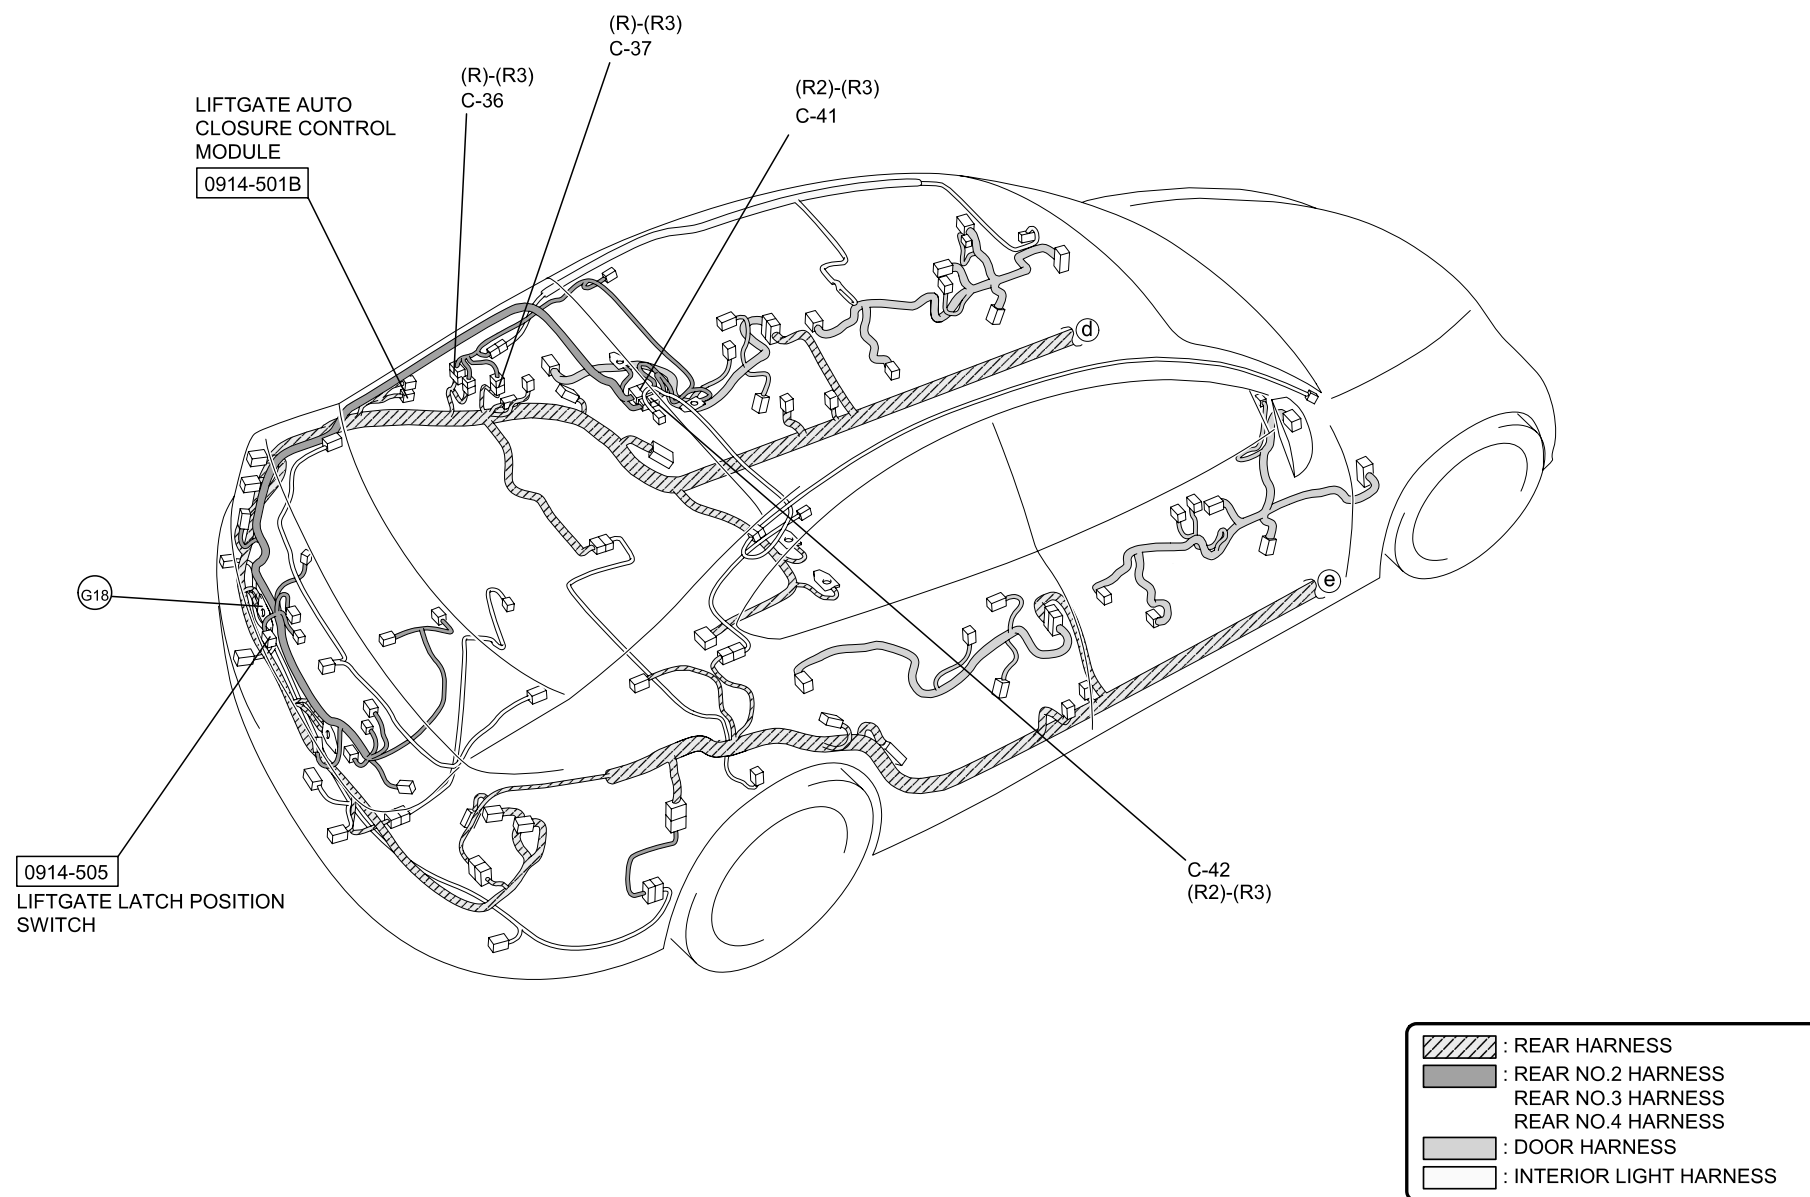


234

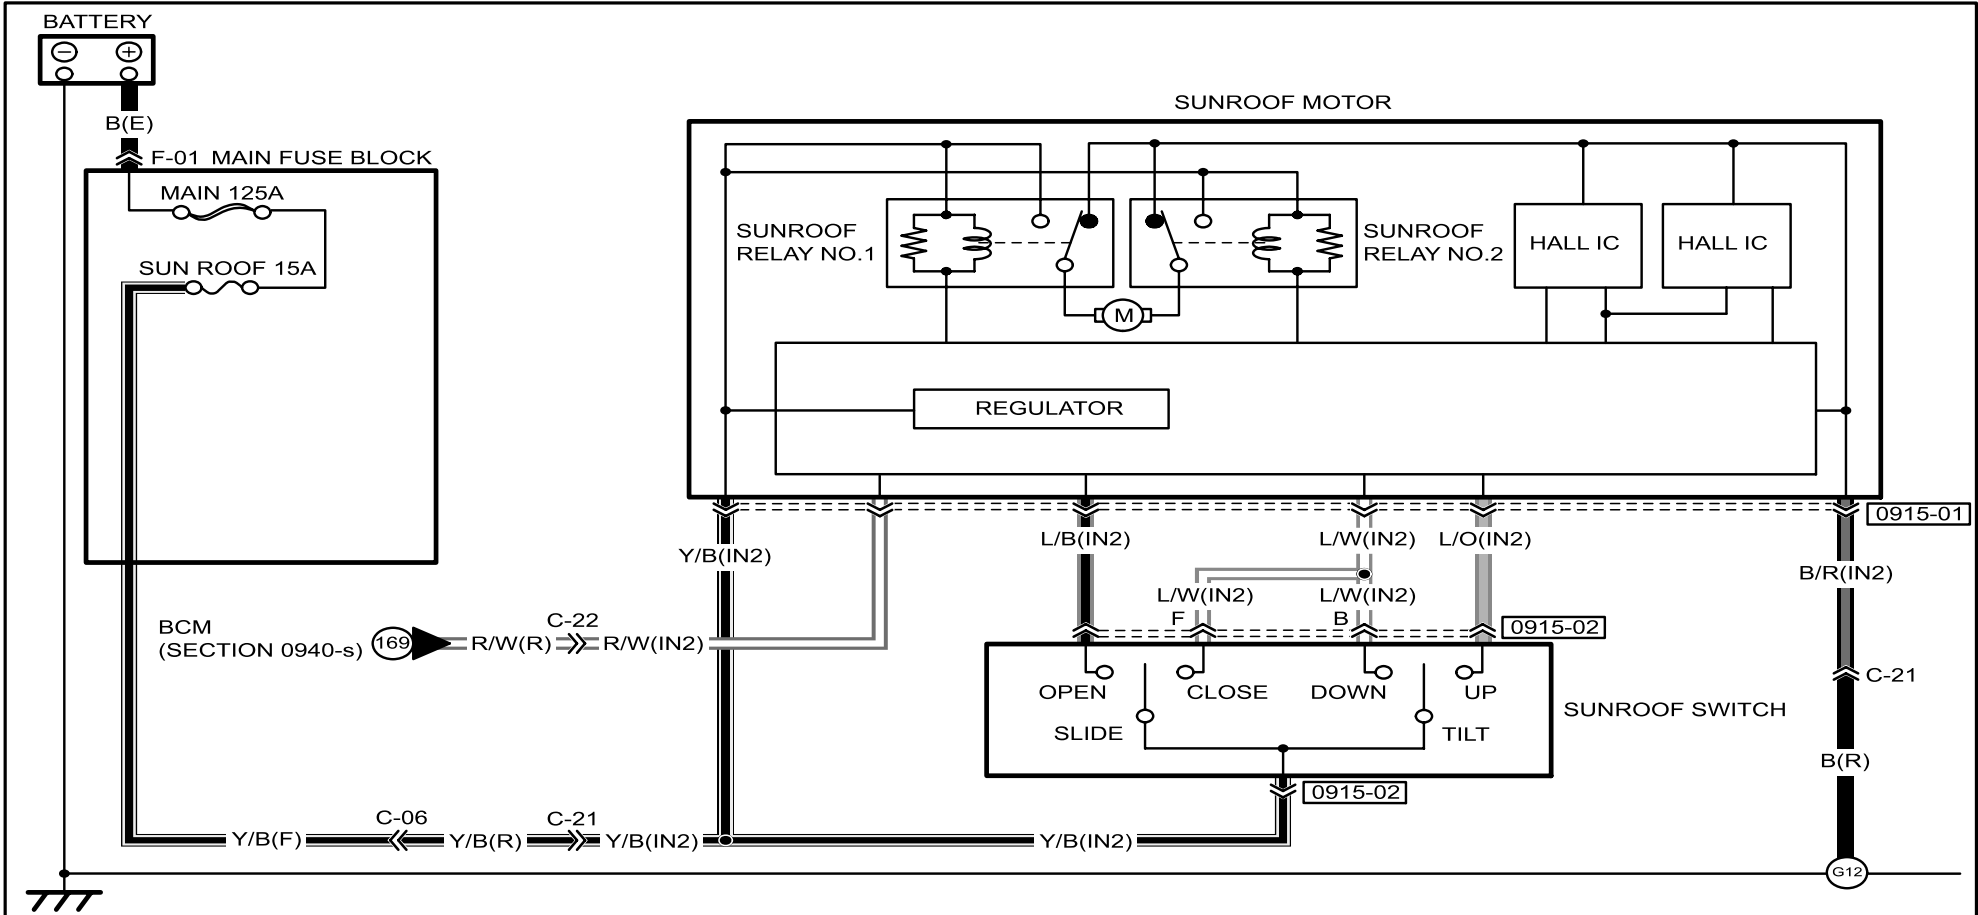

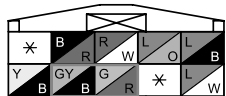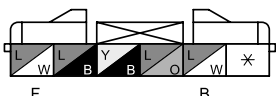
0915-01 SUNROOF MOTOR		0915-02 SUNROOF SWITCH			
 <p>: NOT USED</p>		 <p>F B</p>			

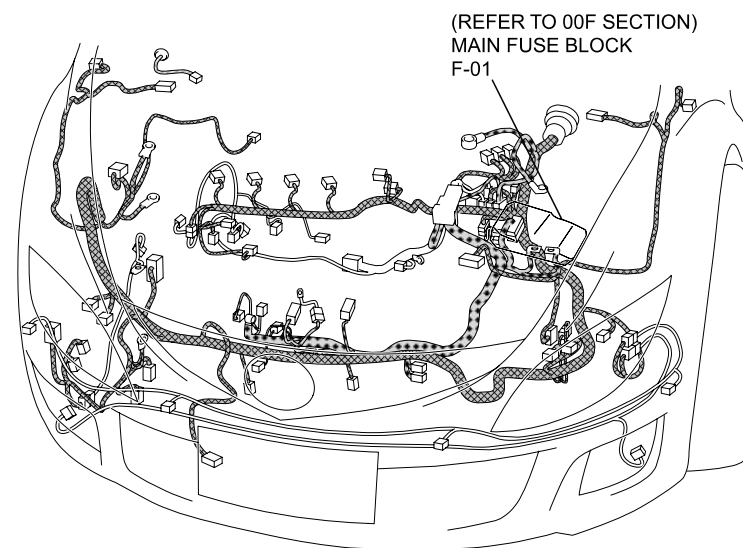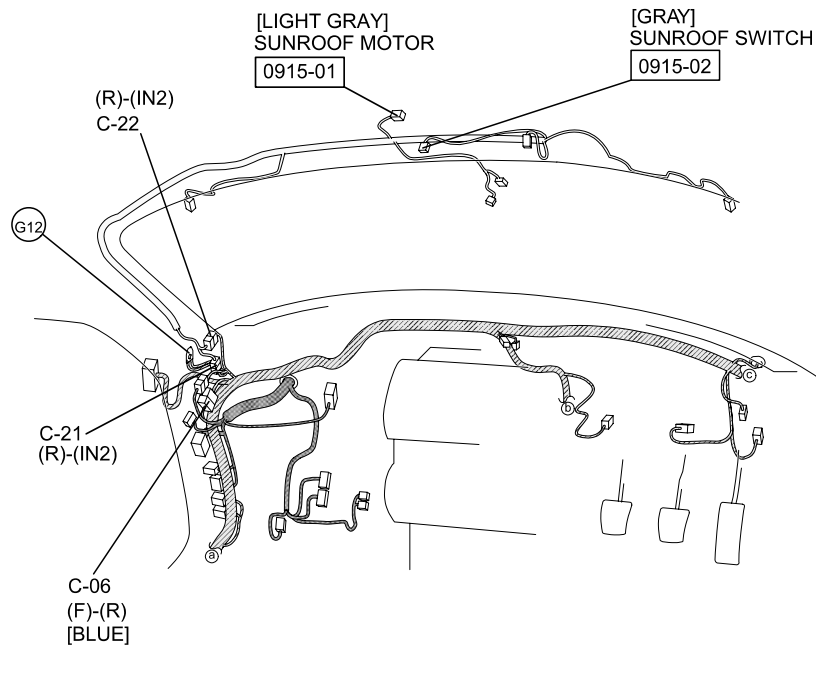


[MZR-CD 2.2]

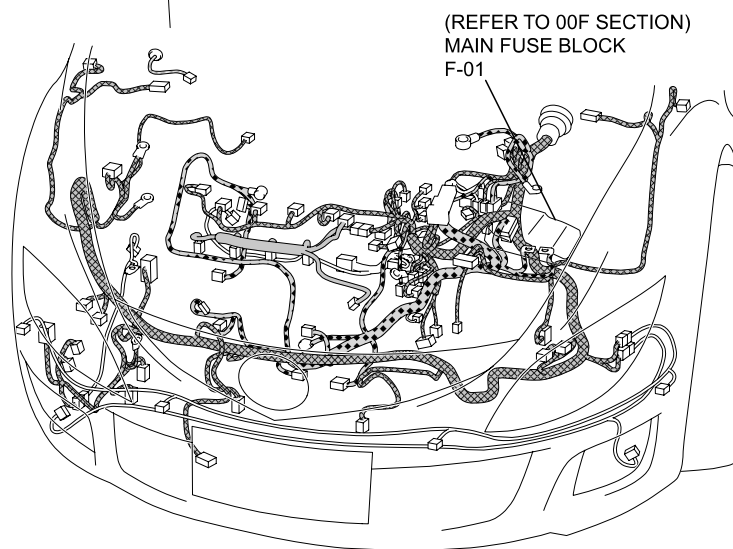


[EXCEPT MZR-CD 2.2]

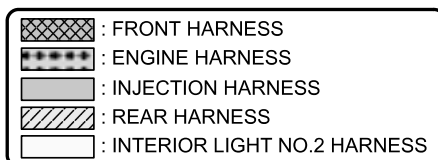


{ } : NAME INDICATED ON FUSE BOX COVER

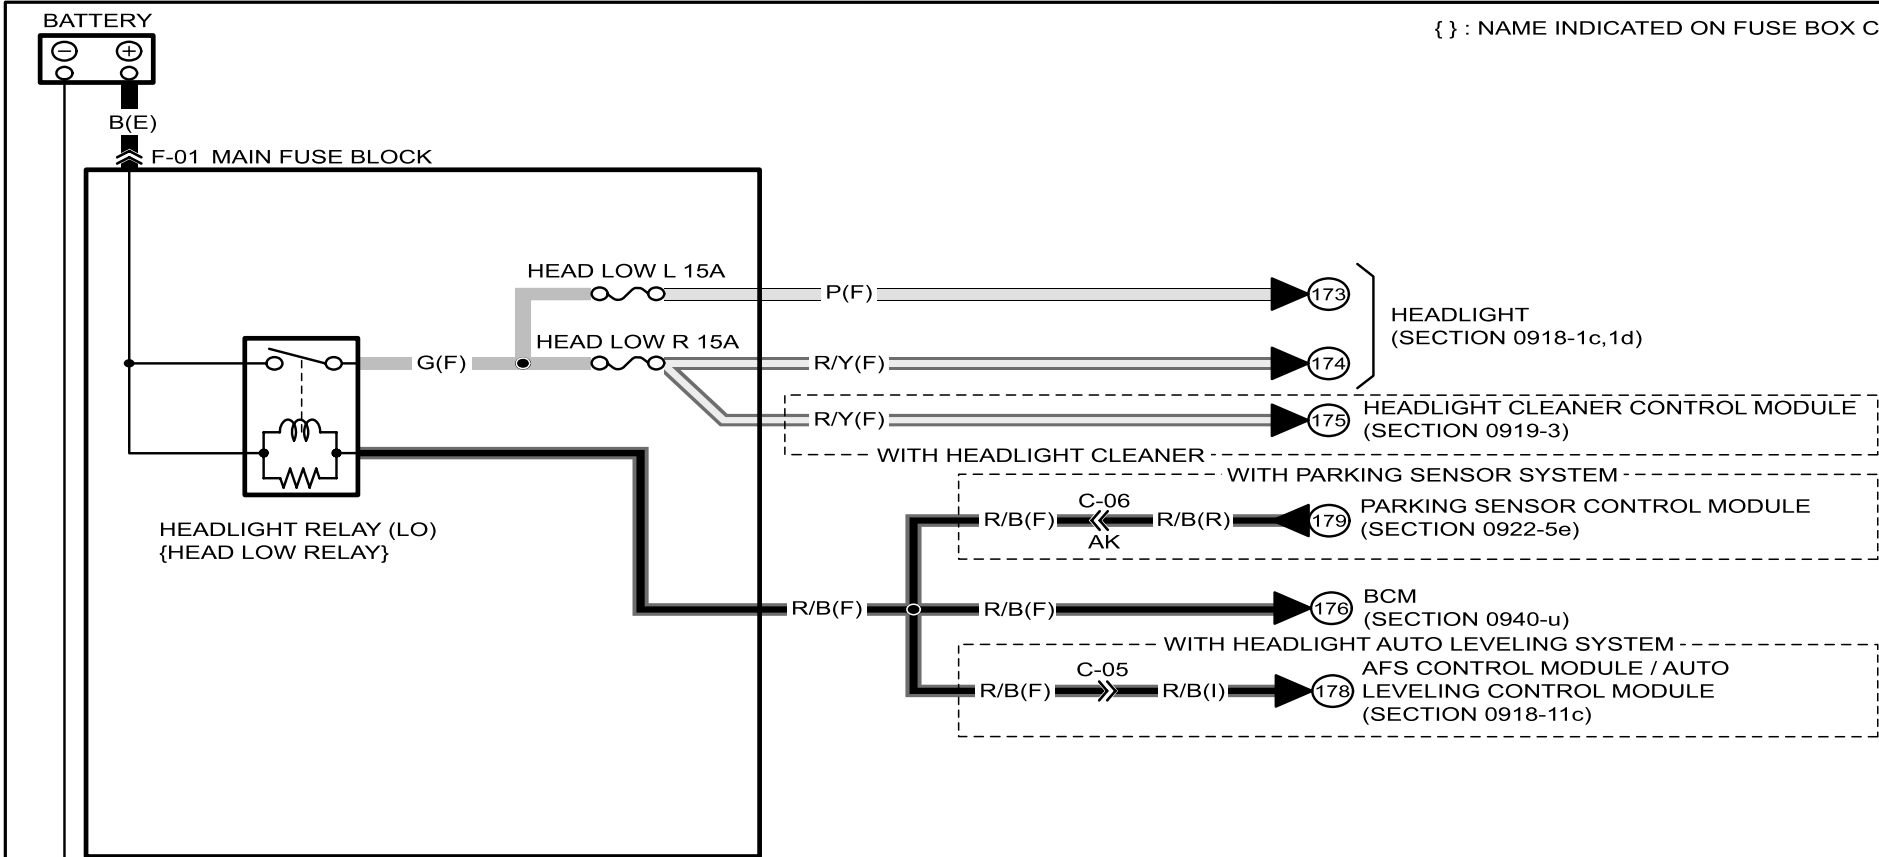

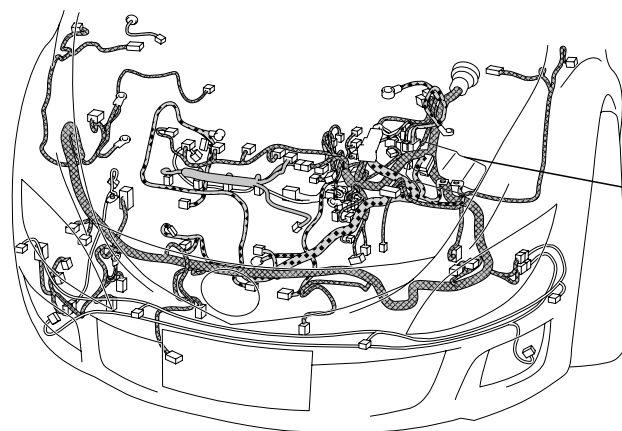

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)


[EXCEPT MZR-CD 2.2]

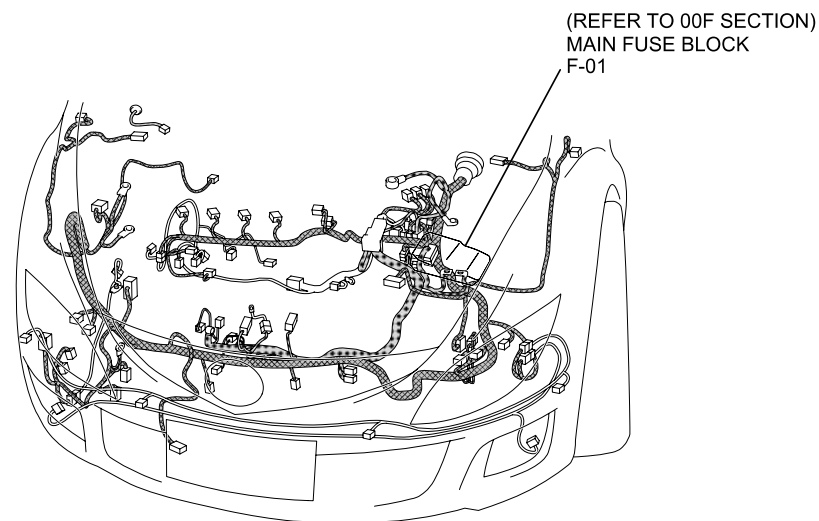

(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01

[MZR-CD 2.2]


[GRAY]
(F)-(I)
C-05

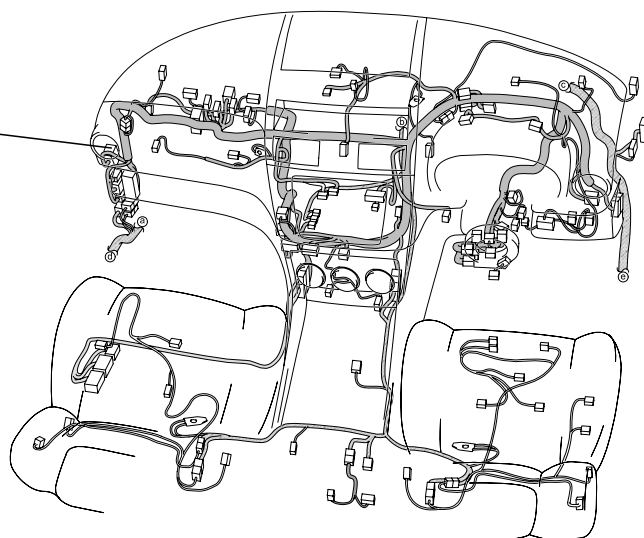

	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

[GRAY]
(F)-(I)
C-05


C-06
(F)-(R)
[BLUE]

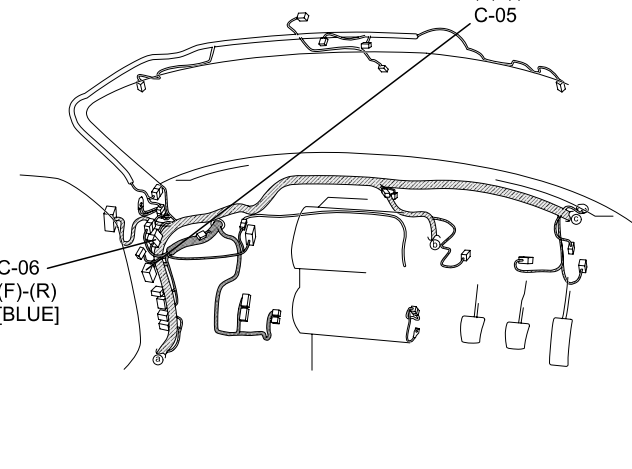


HEADLIGHT


0918-1b

238

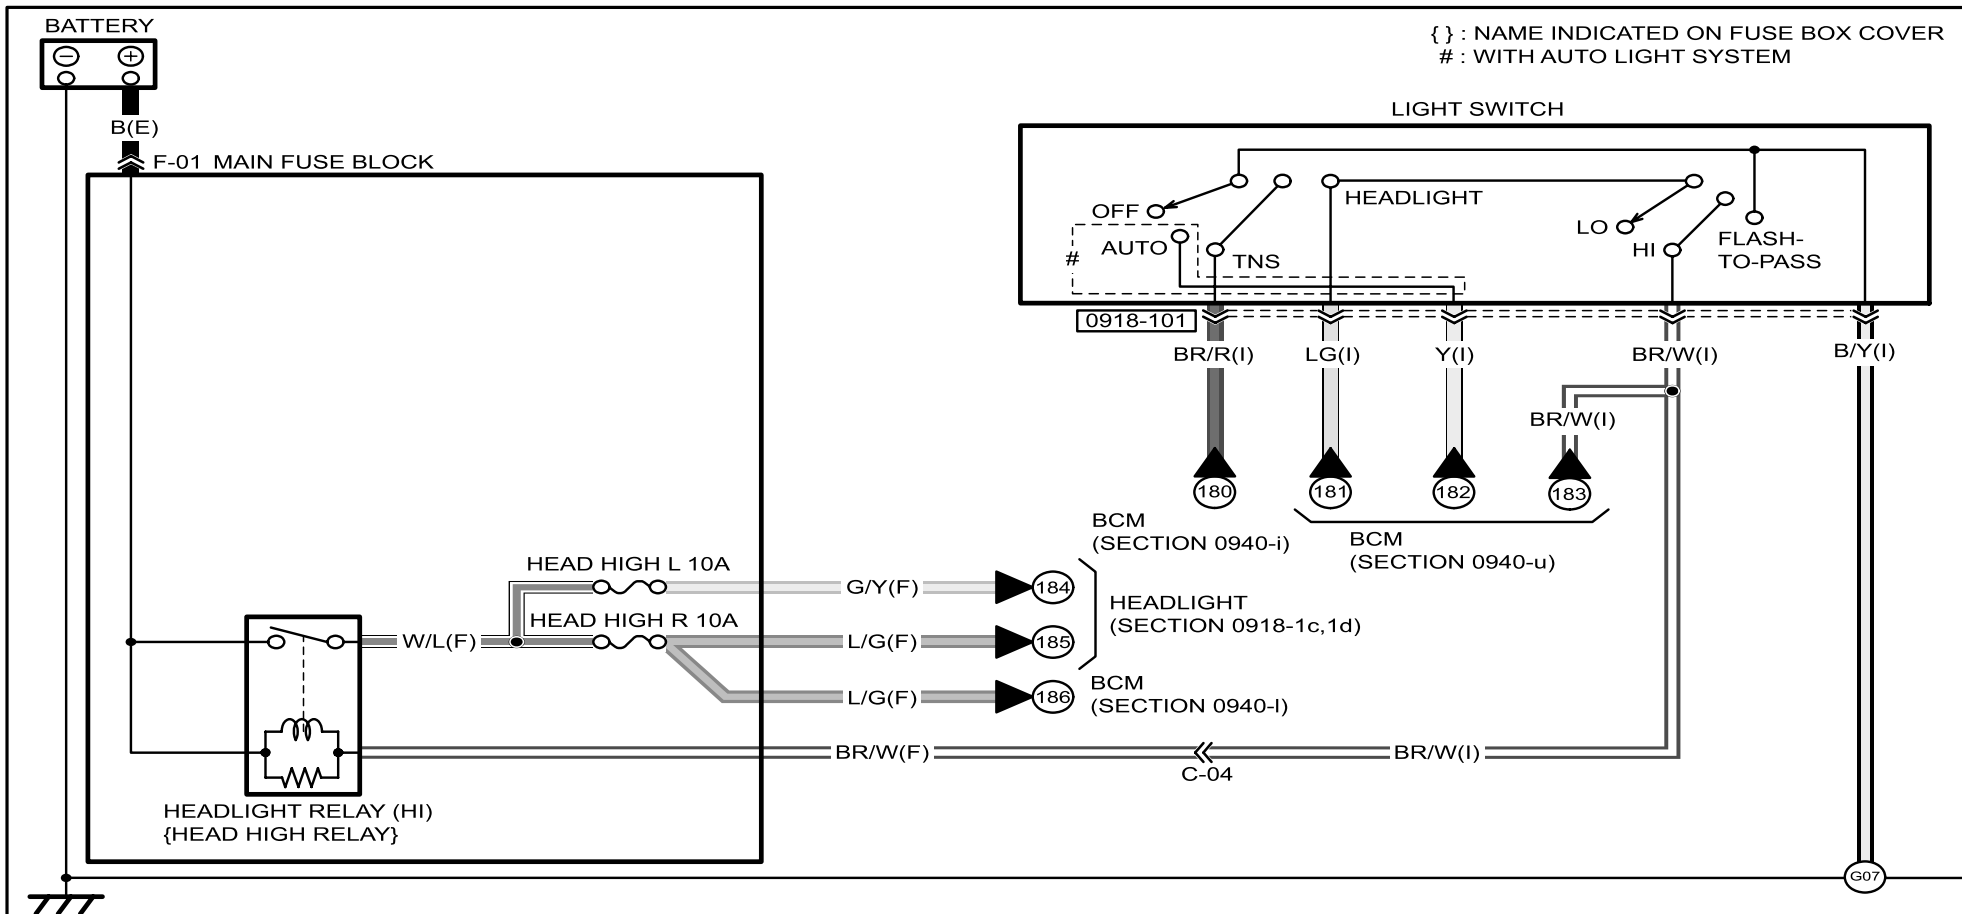


0918-101
LIGHT SWITCH /
FOG LIGHT SWITCH /
TURN SWITCH

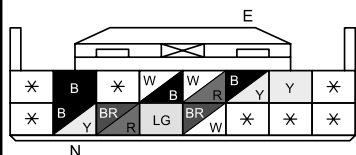

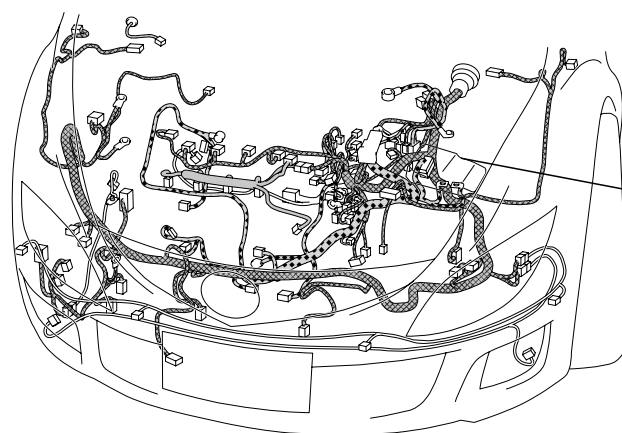

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)


[EXCEPT MZR-CD 2.2]

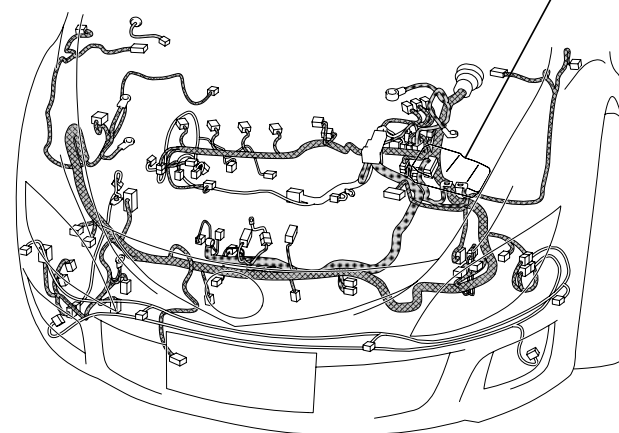


(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01

[MZR-CD 2.2]

[GRAY]
(F)-(I)
C-04

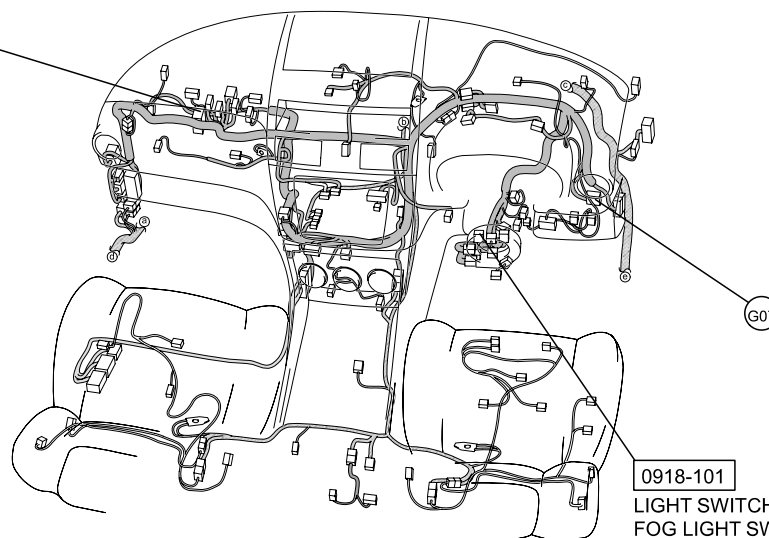



0918-101
LIGHT SWITCH /
FOG LIGHT SWITCH /
TURN SWITCH

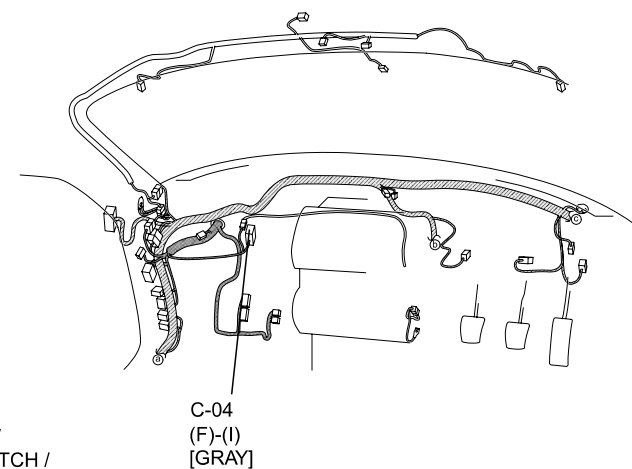



C-04
(F)-(I)
[GRAY]


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

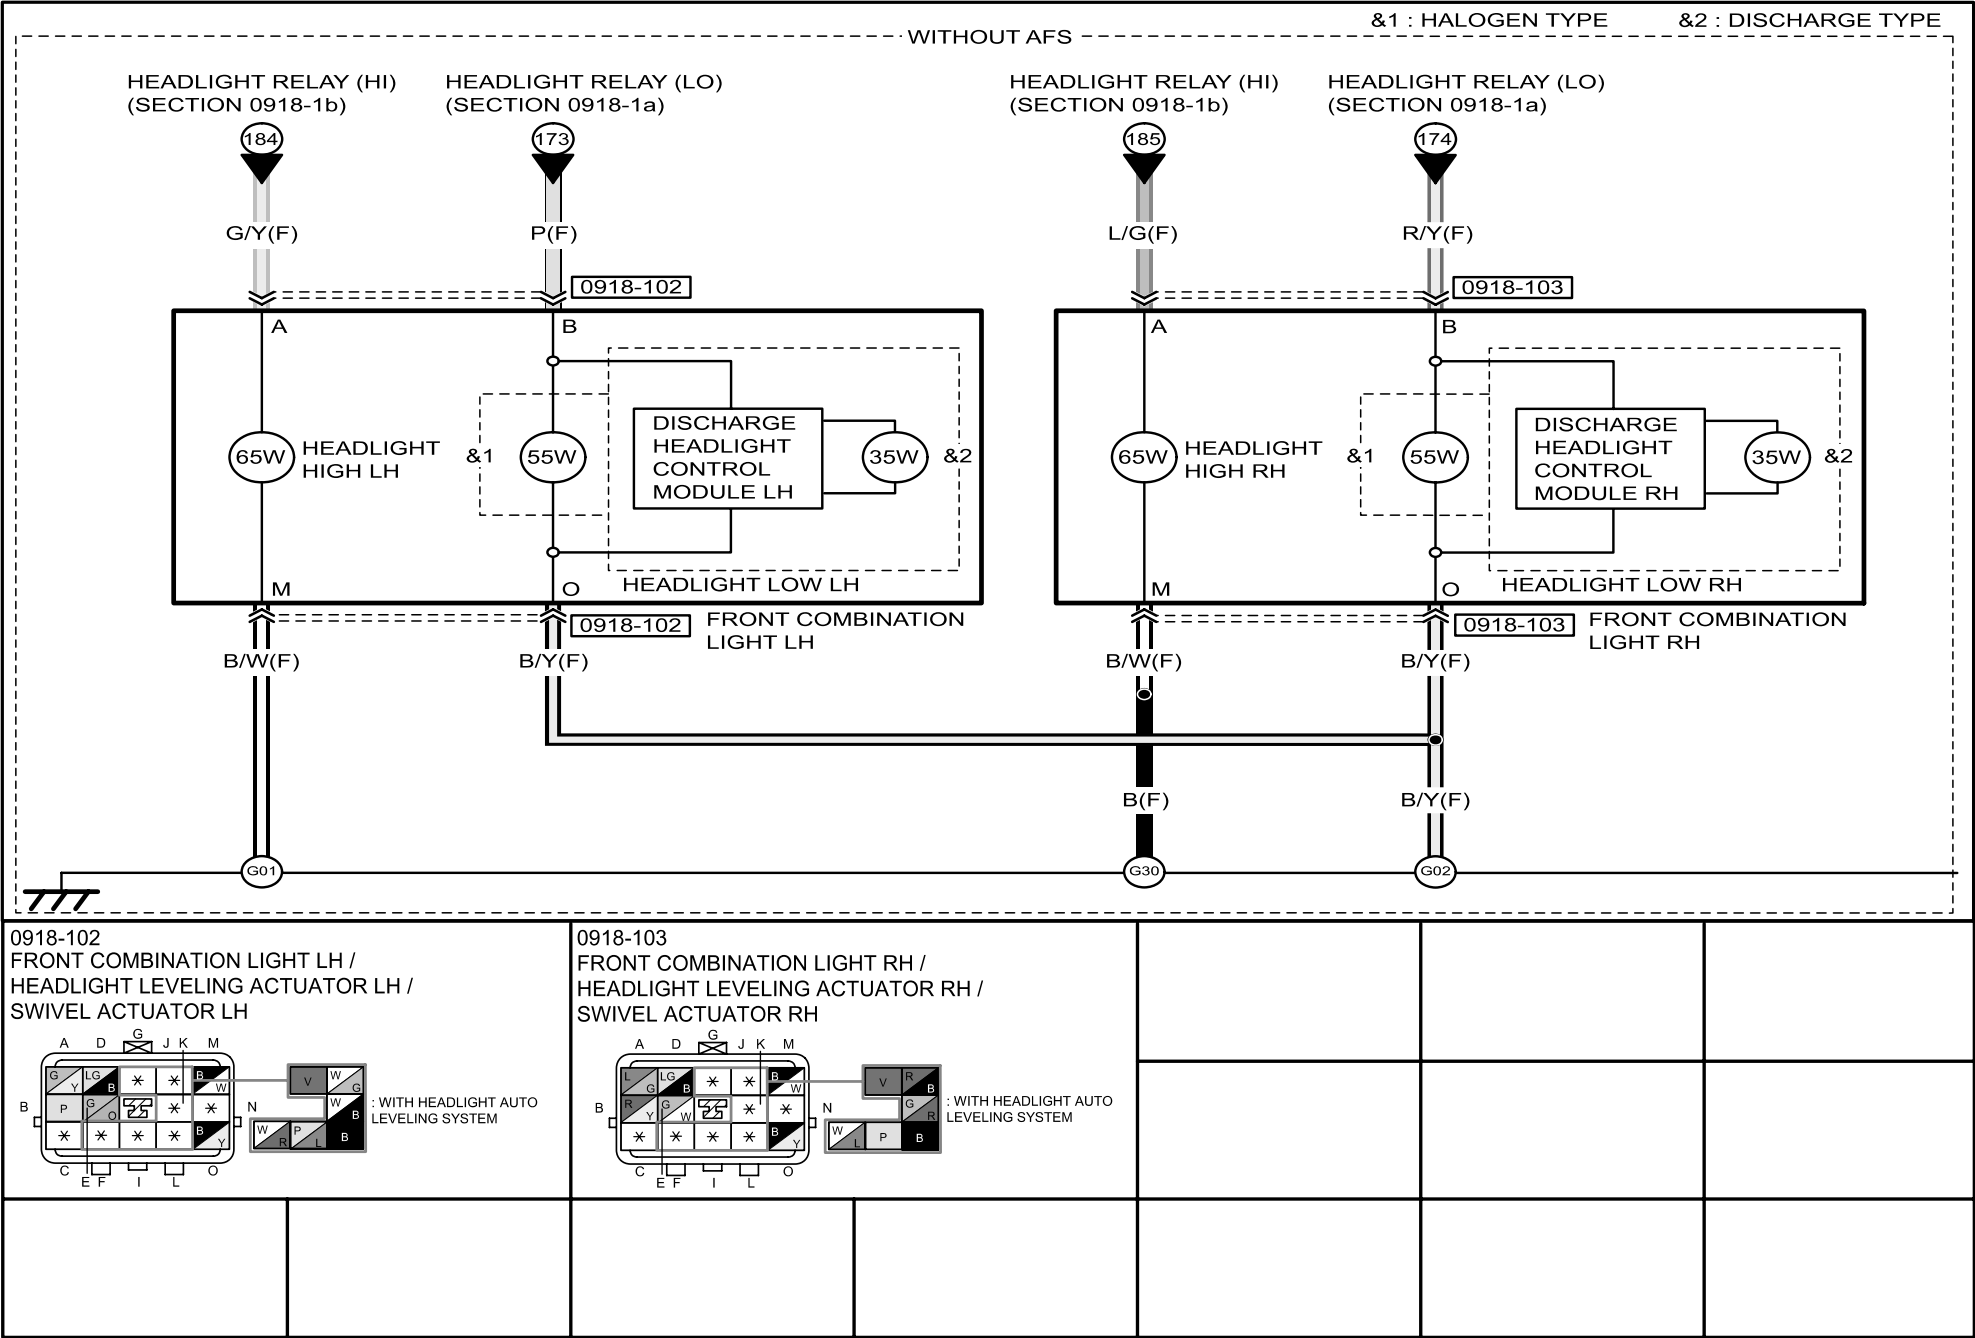


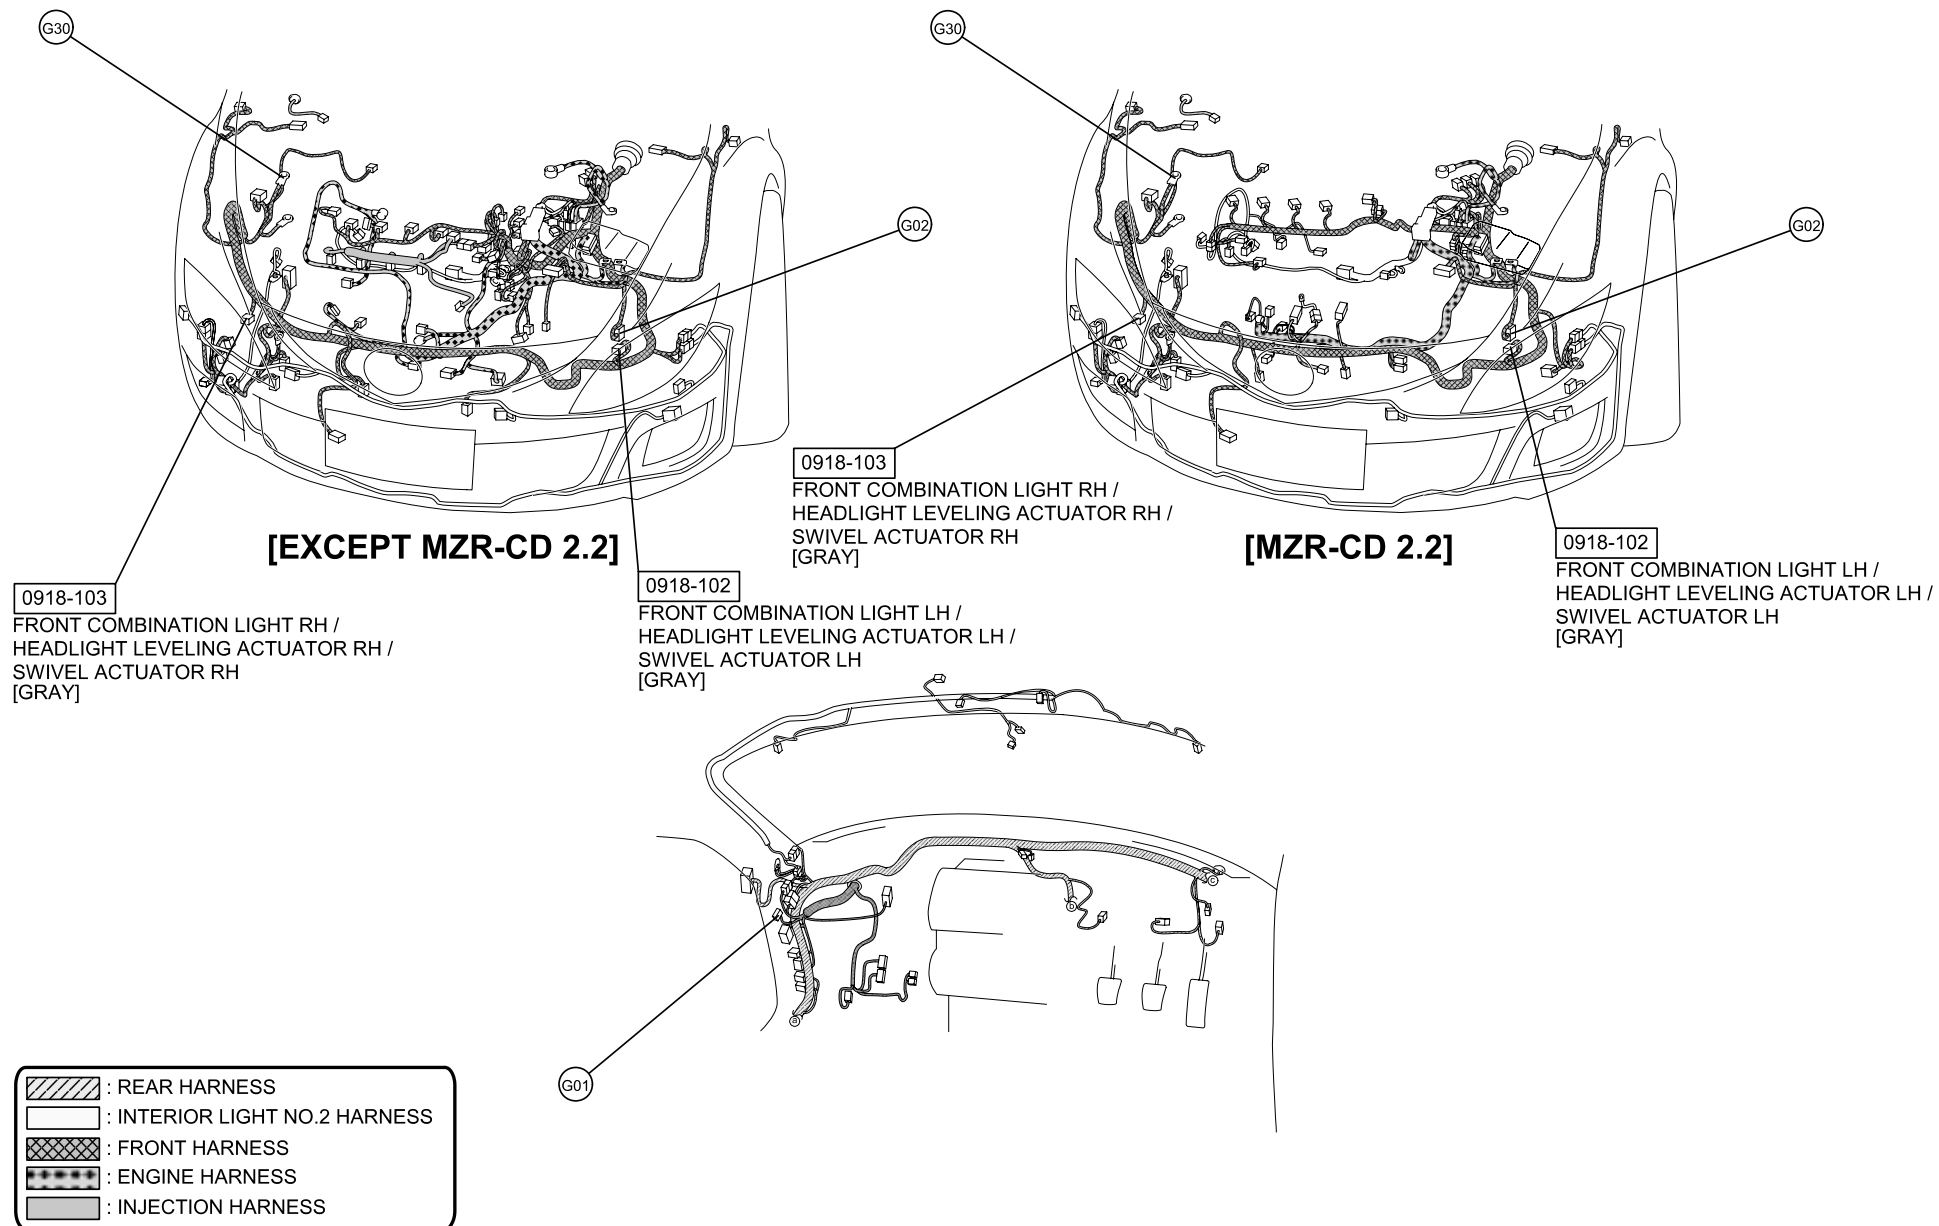


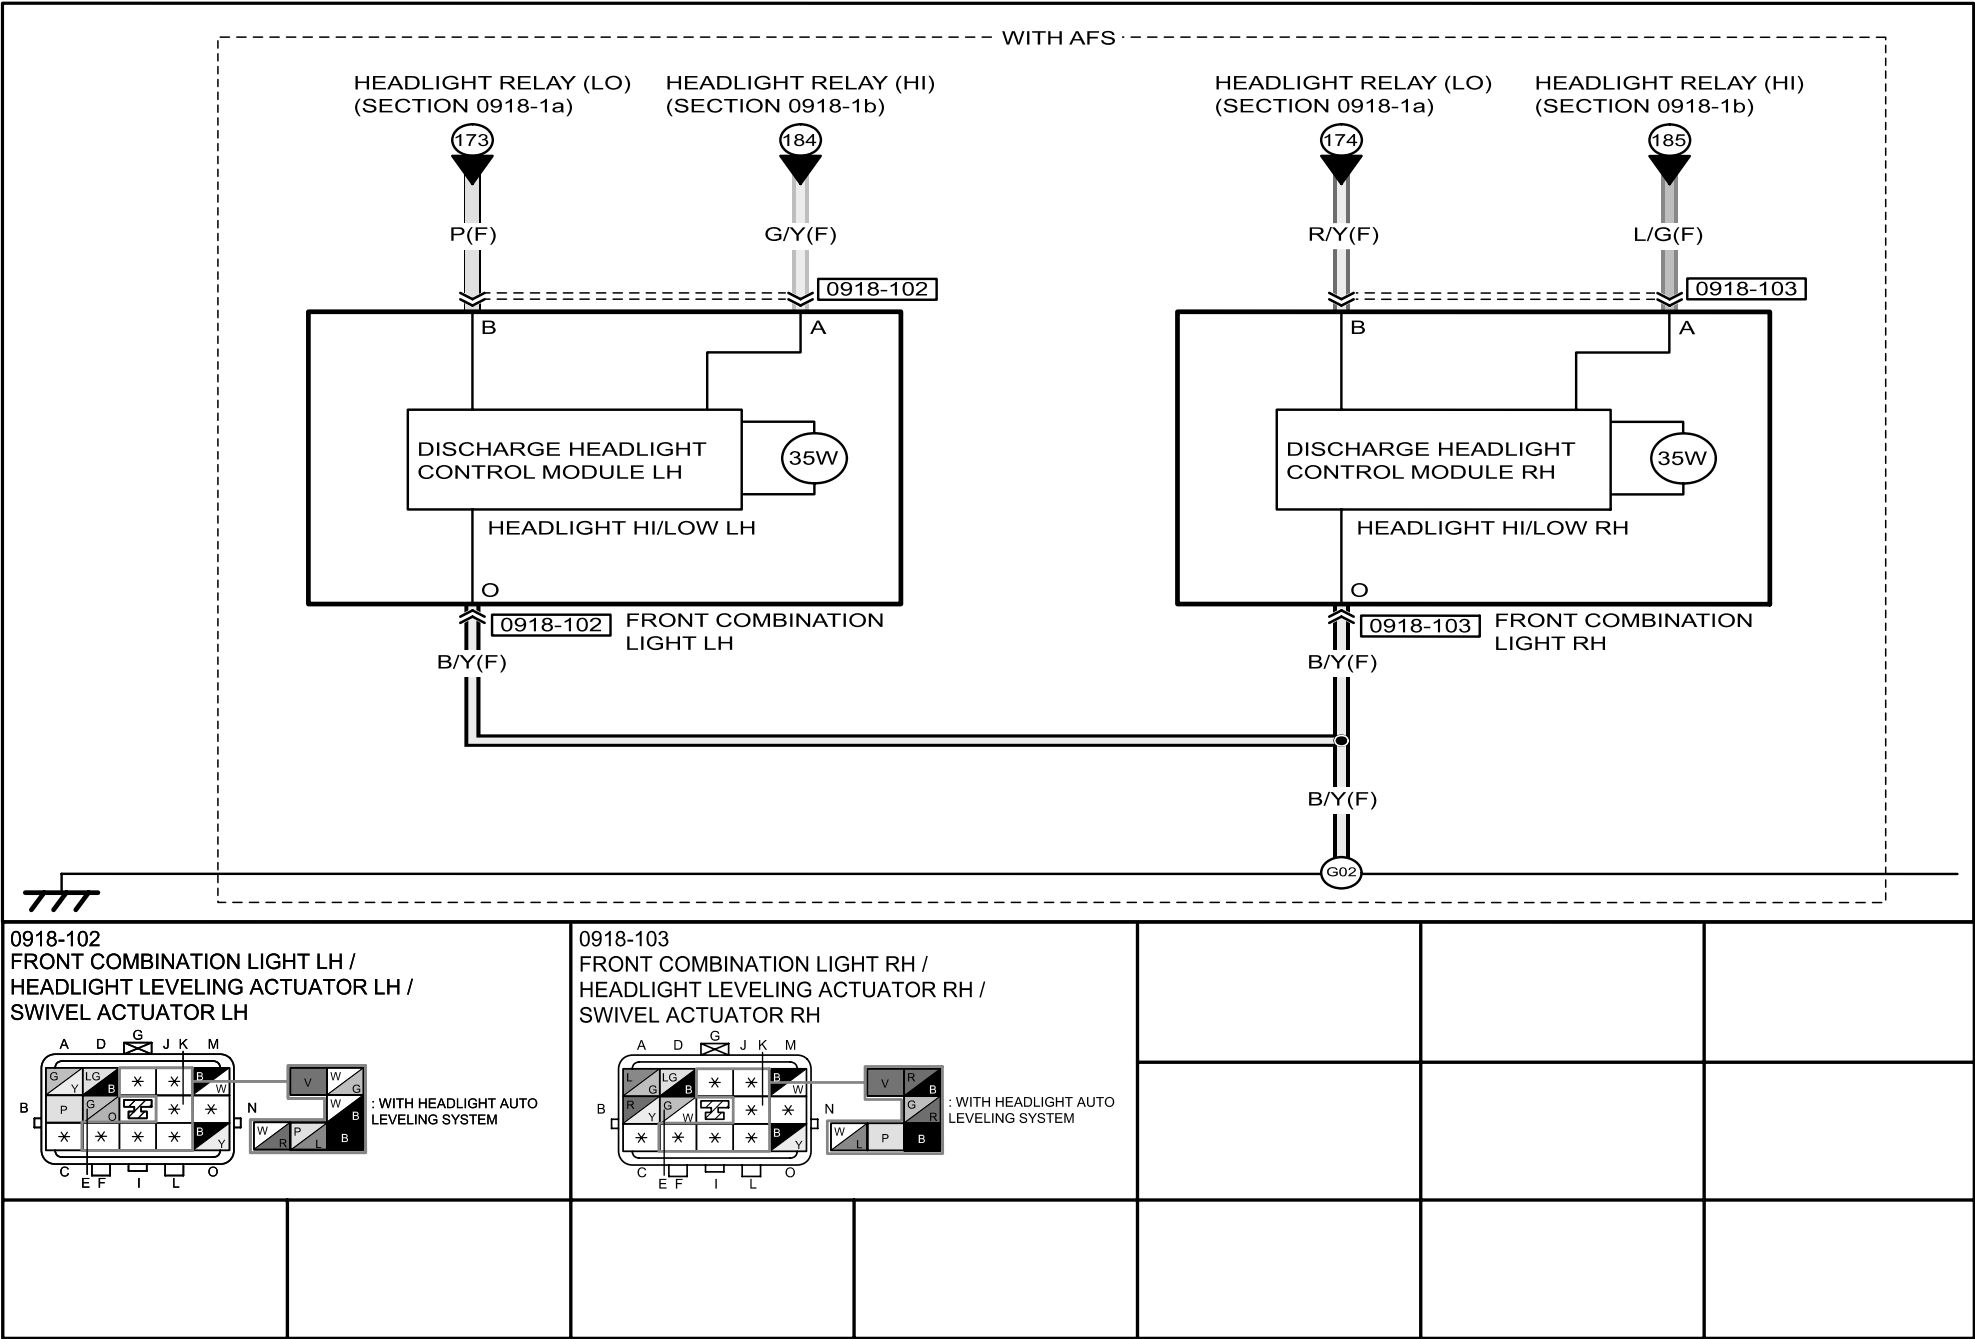

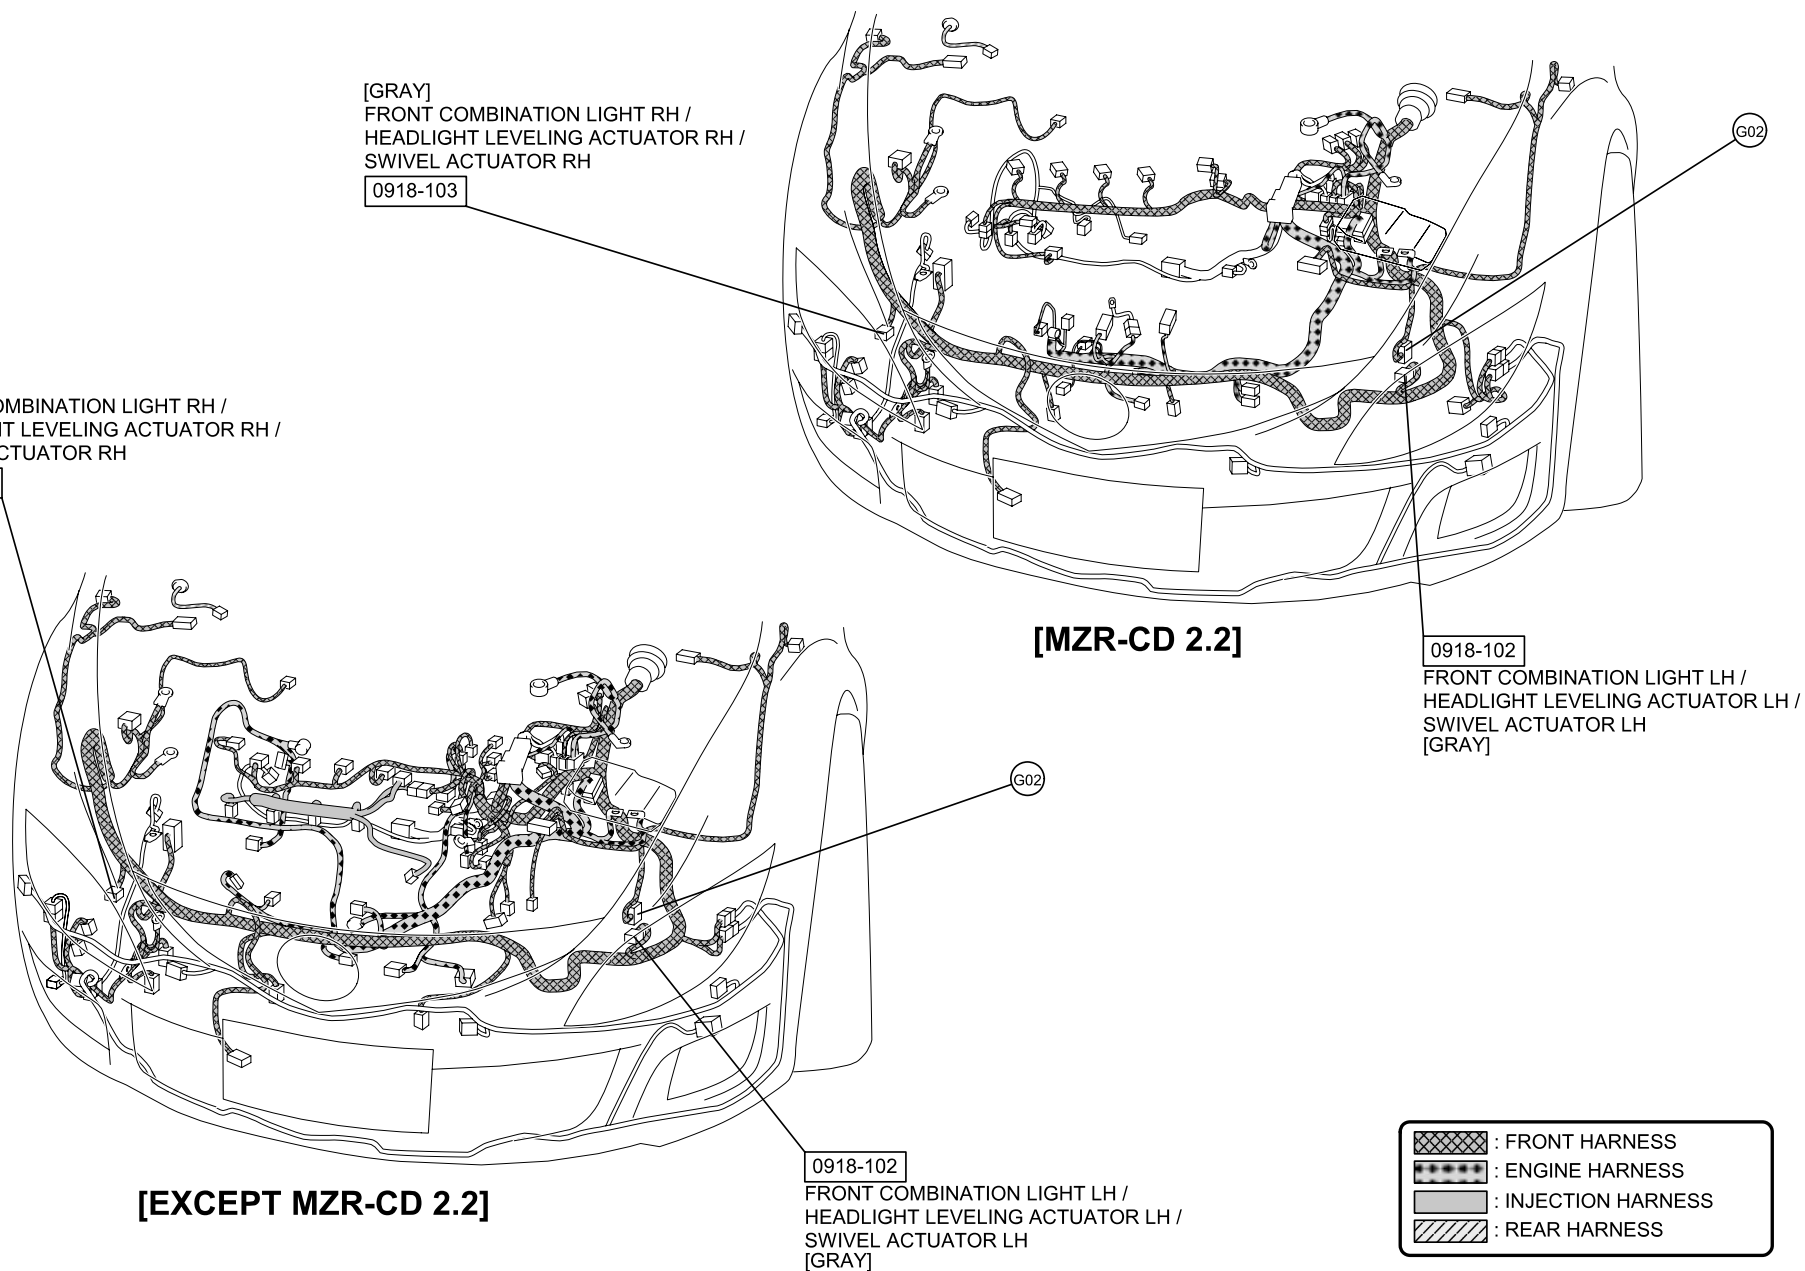

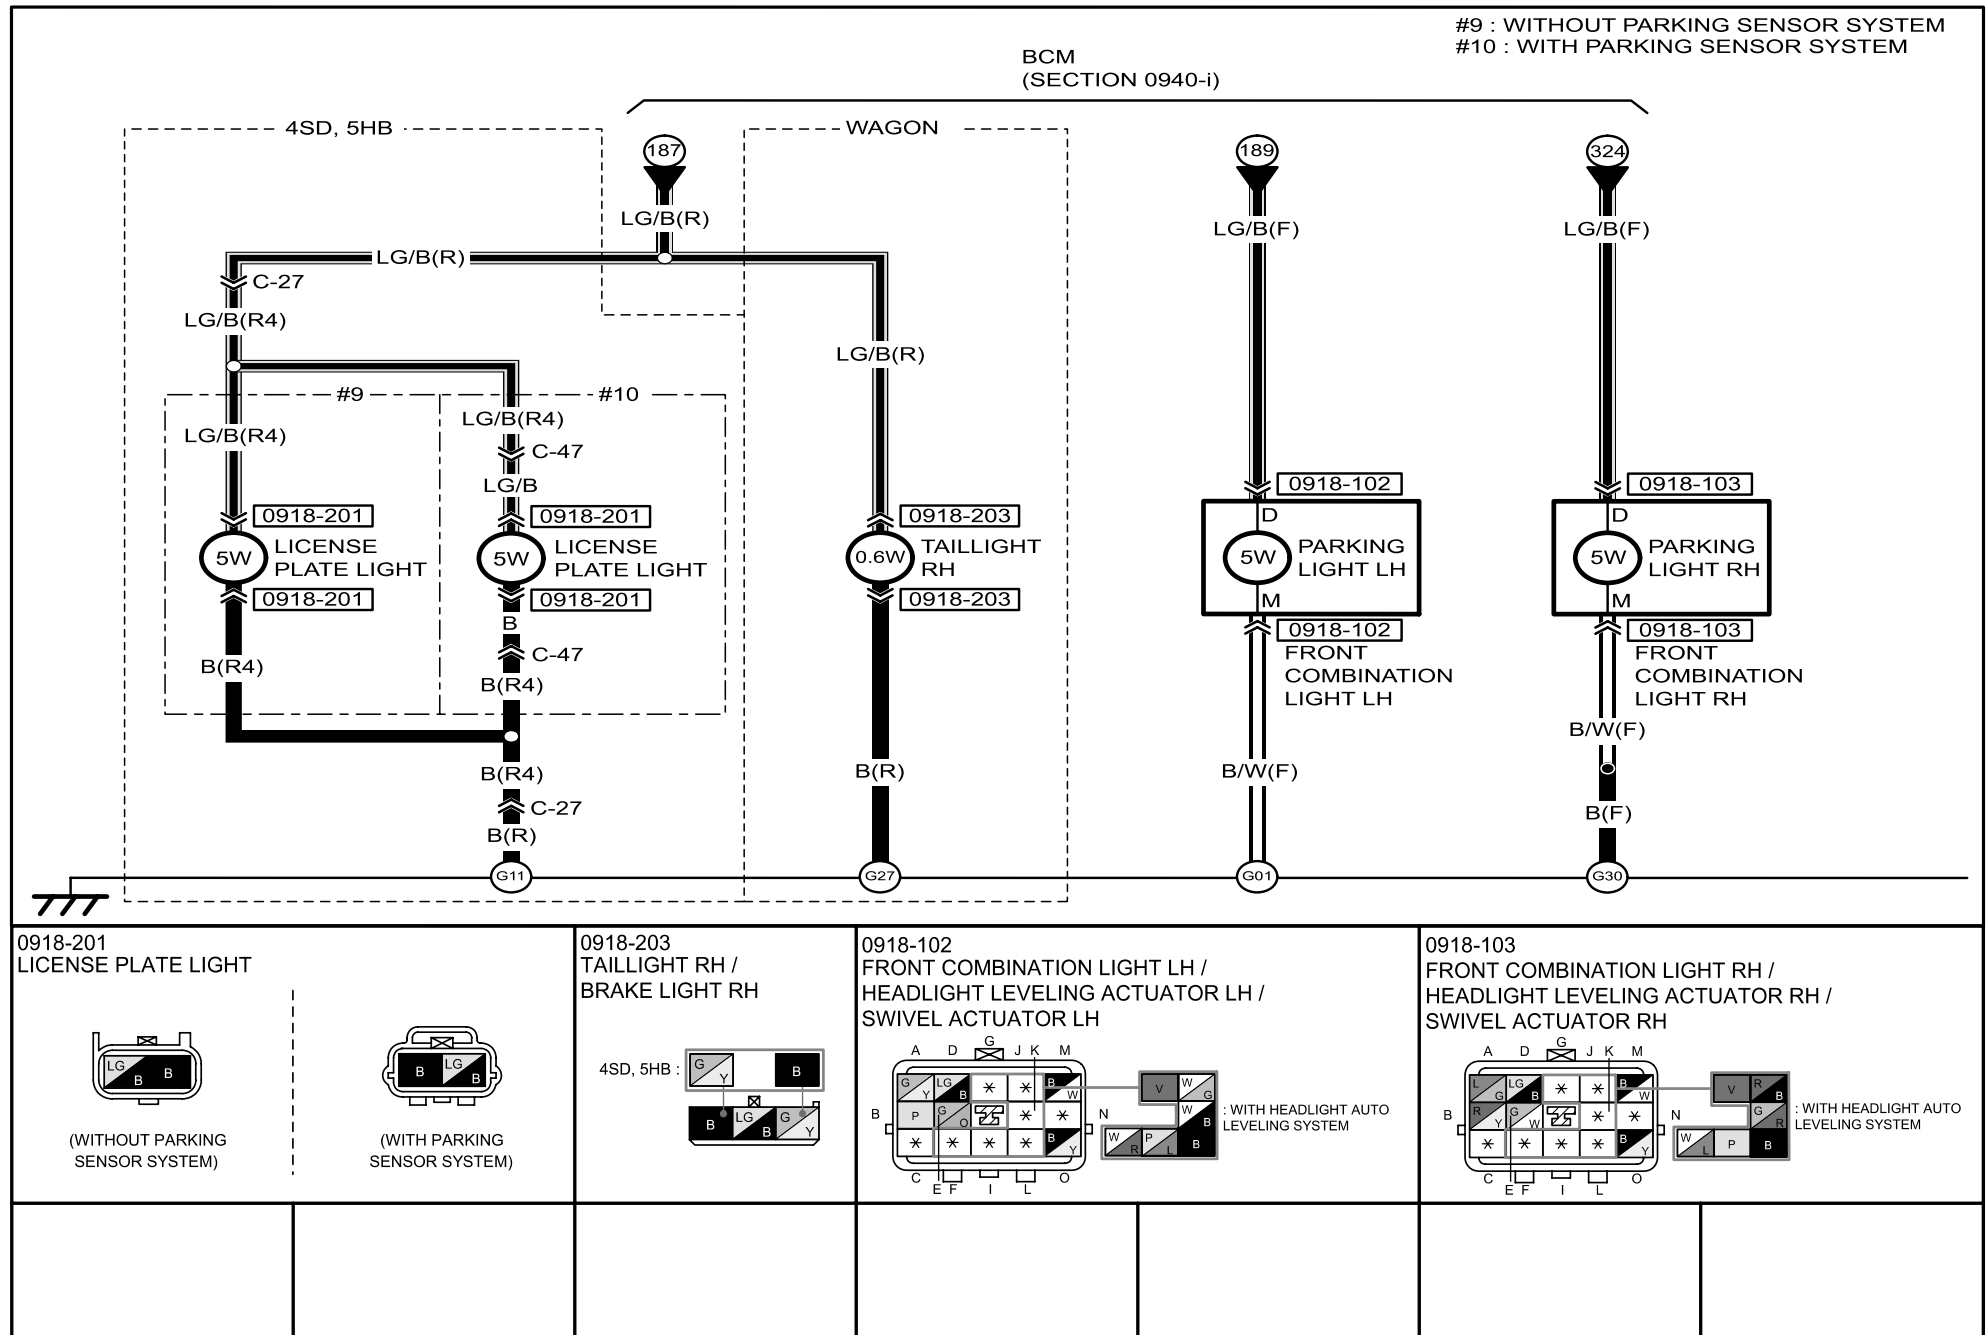


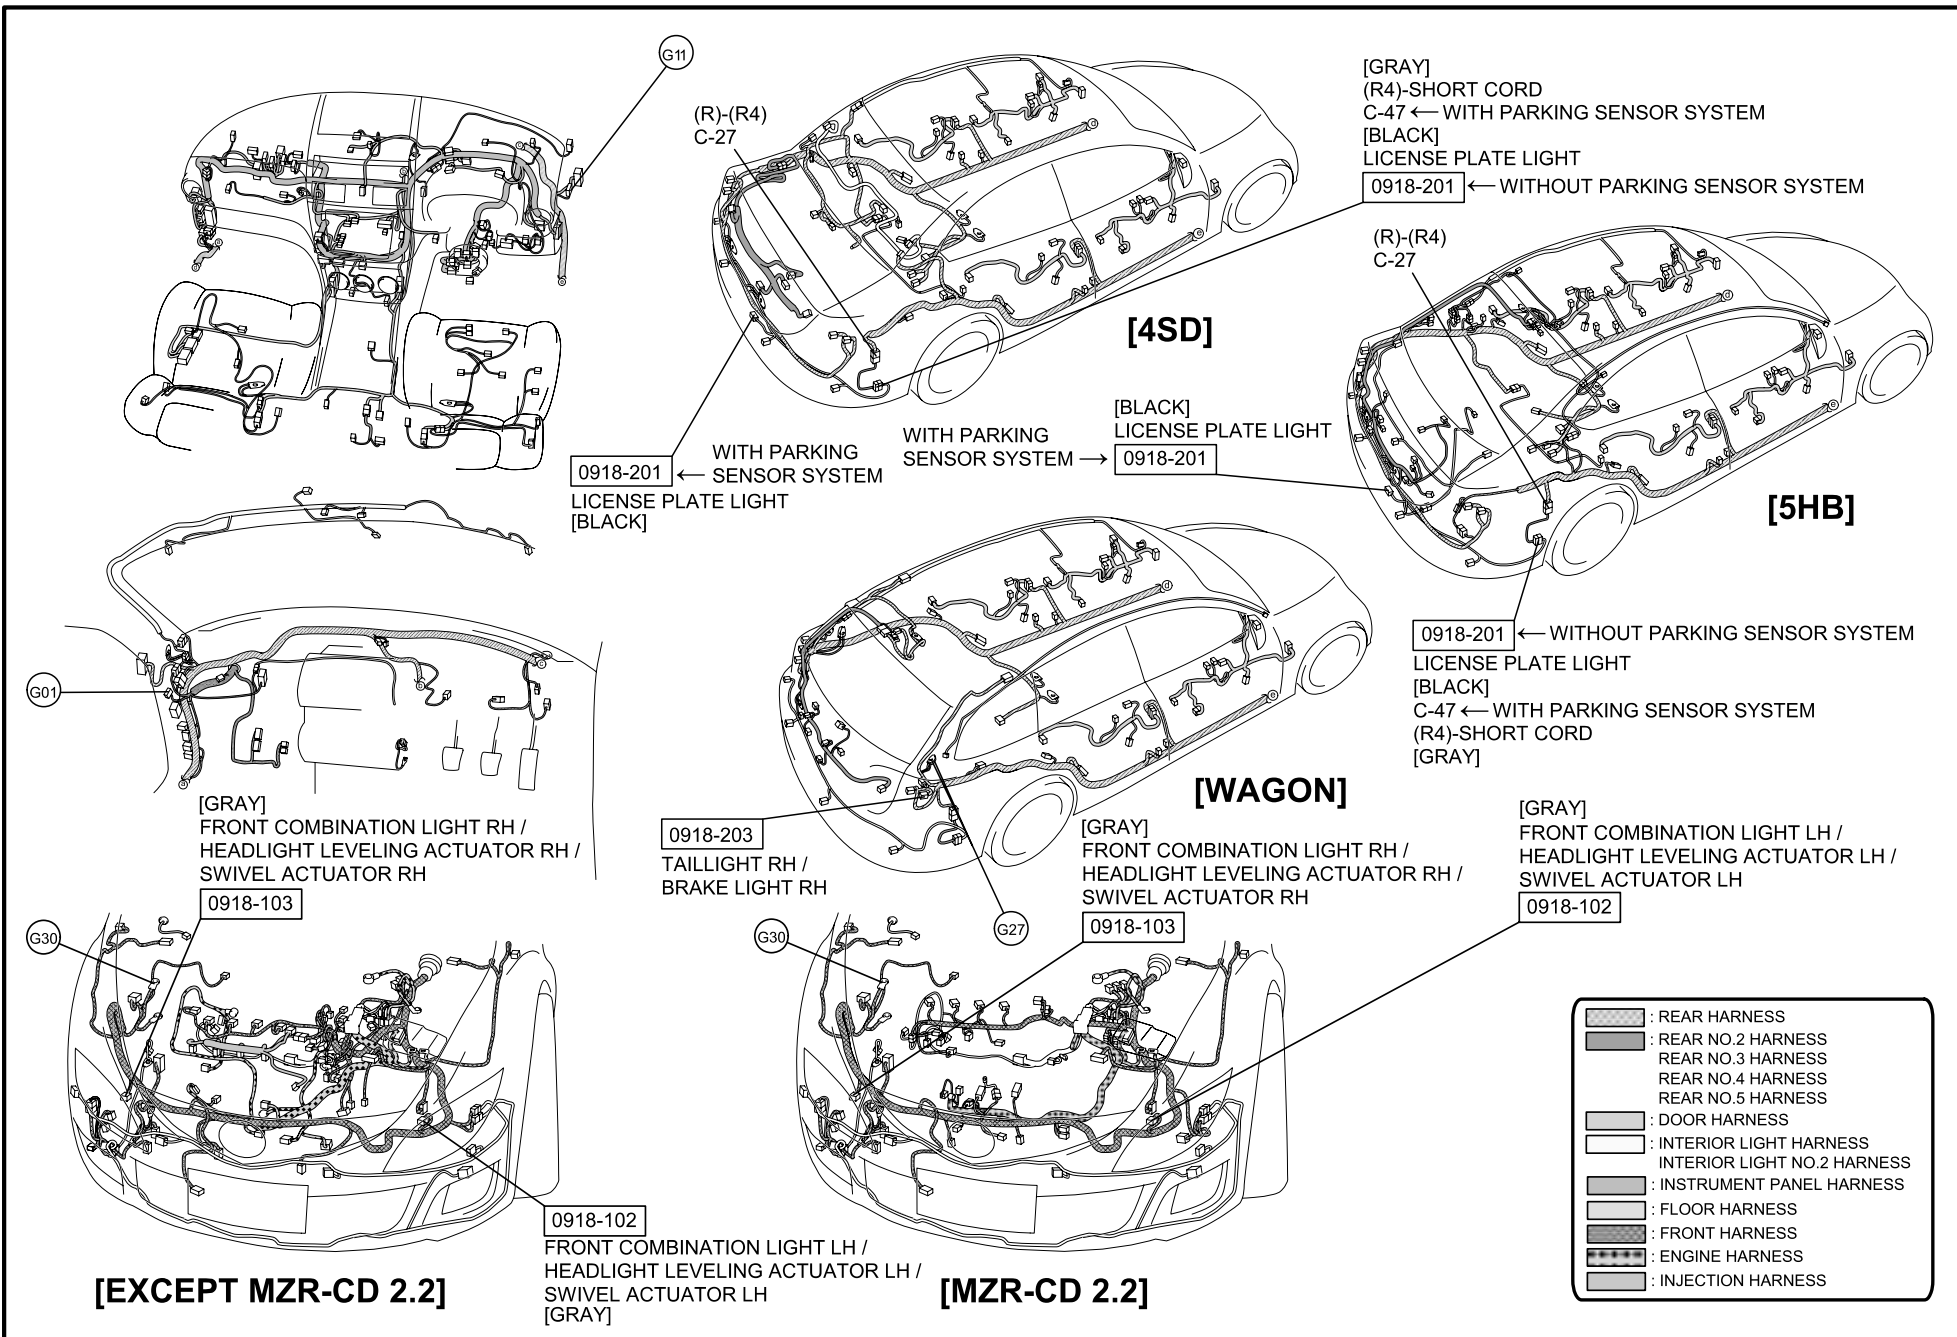

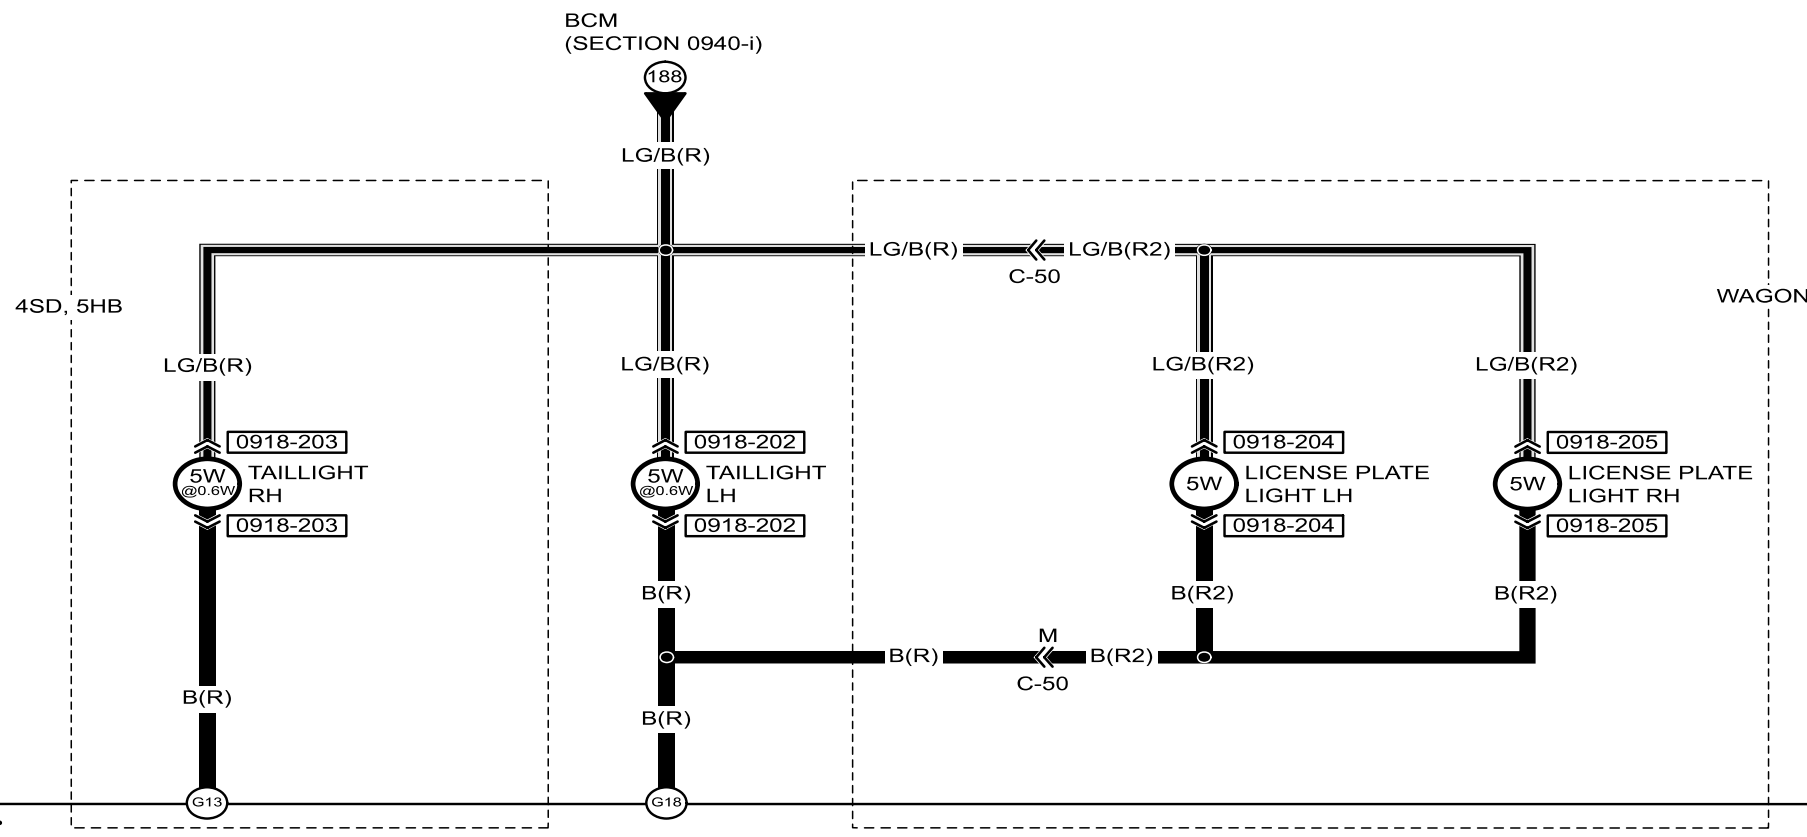


246

 
0918-202
TAILLIGHT LH /
BRAKE LIGHT LH




0918-203
TAILLIGHT RH /
BRAKE LIGHT RH

 

0918-204
LICENSE PLATE LIGHT LH

 

0918-205
LICENSE PLATE LIGHT RH

 

TAILLIGHT LH /
BRAKE LIGHT LH
0918-202

(R)-(R2)
C-50

G18

[WAGON]

0918-205

LICENSE PLATE LIGHT RH

0918-204

LICENSE PLATE LIGHT LH

TAILLIGHT LH /
BRAKE LIGHT LH
0918-202

G18

G13

0918-203

TAILLIGHT RH /
BRAKE LIGHT RH

TAILLIGHT LH /
BRAKE LIGHT LH
0918-202

G18




 

G13

[4SD]

0918-203


TAILLIGHT RH /
BRAKE LIGHT RH

[5HB]


	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.3 HARNESS
	: REAR NO.4 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS


FOG LIGHT

0918-3a

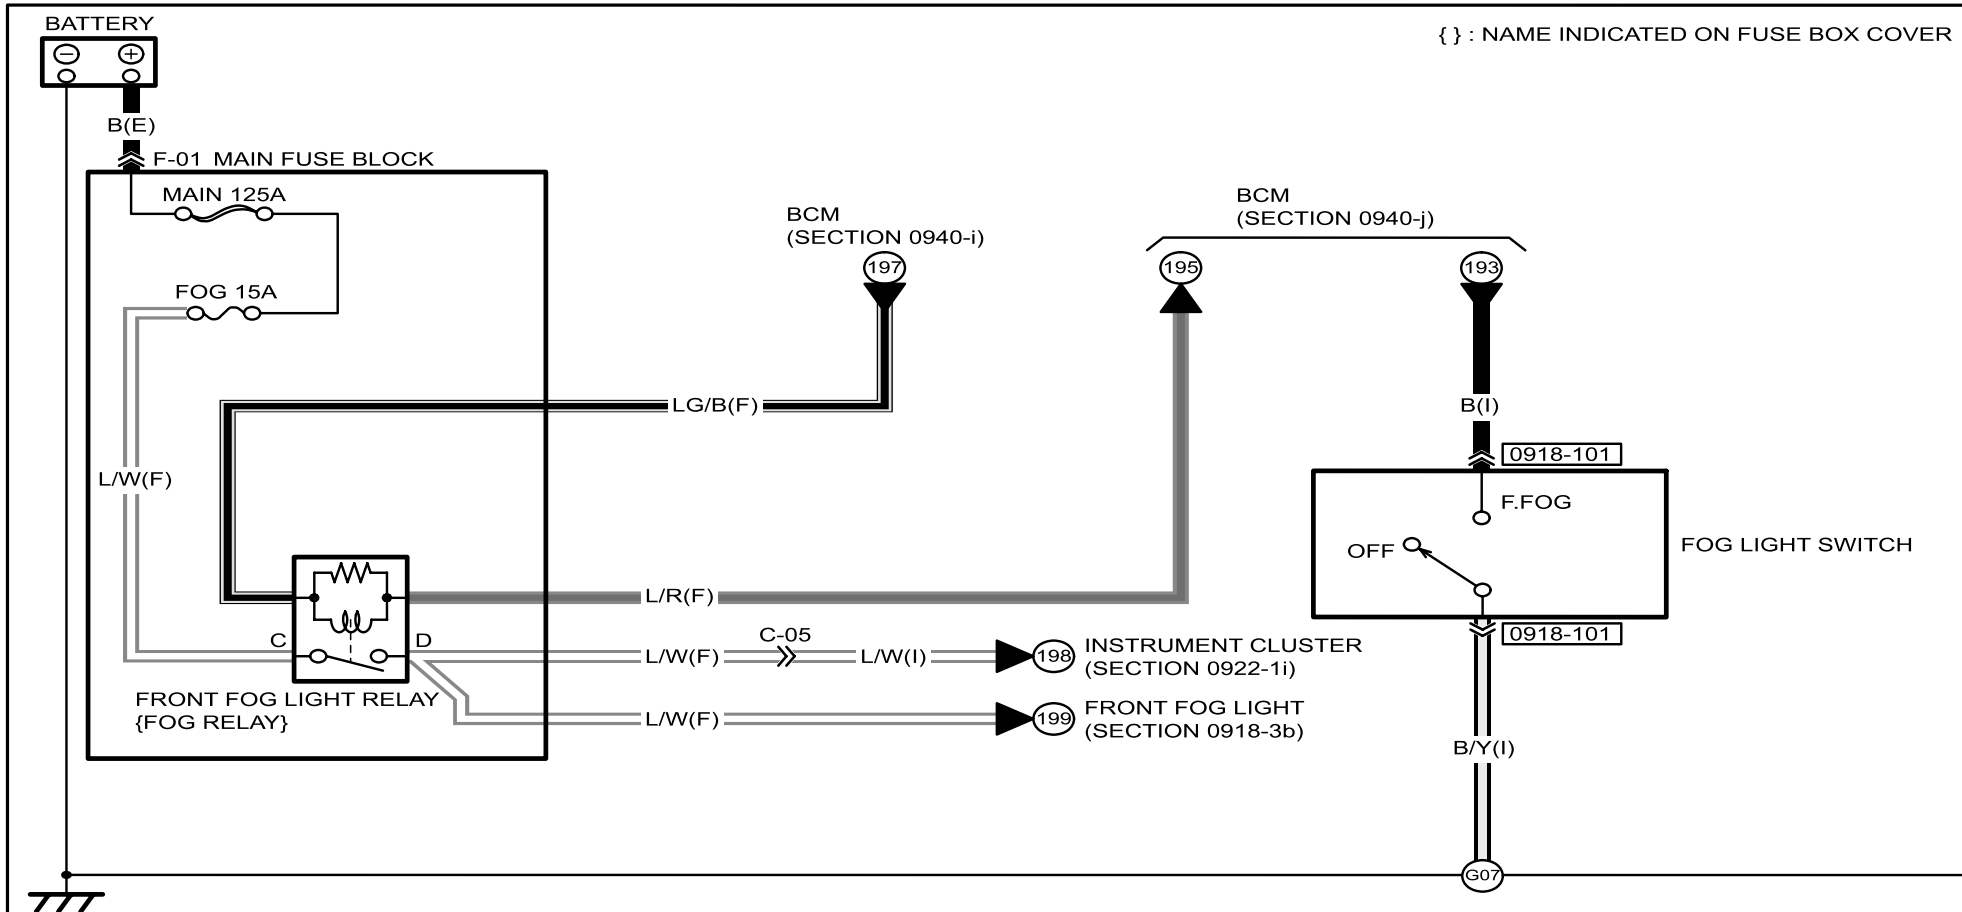


0918-101
LIGHT SWITCH /
FOG LIGHT SWITCH /
TURN SWITCH

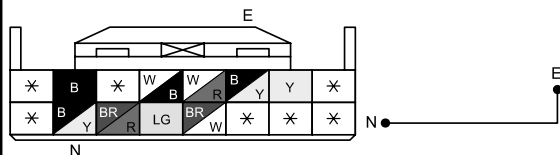


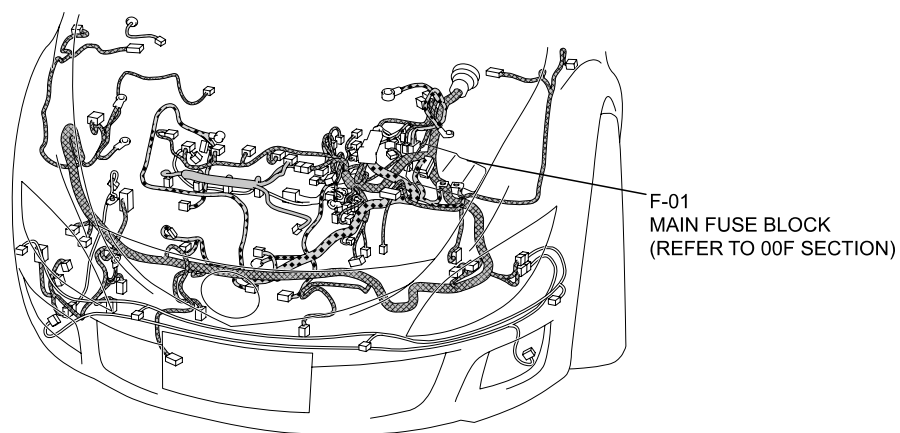


[EXCEPT MZR-CD 2.2]

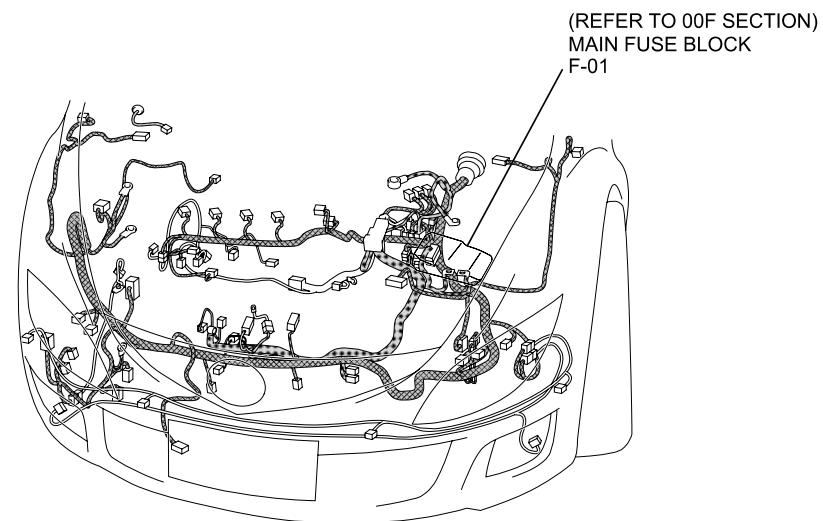


[MZR-CD 2.2]

[GRAY]
(F)-(I)
C-05

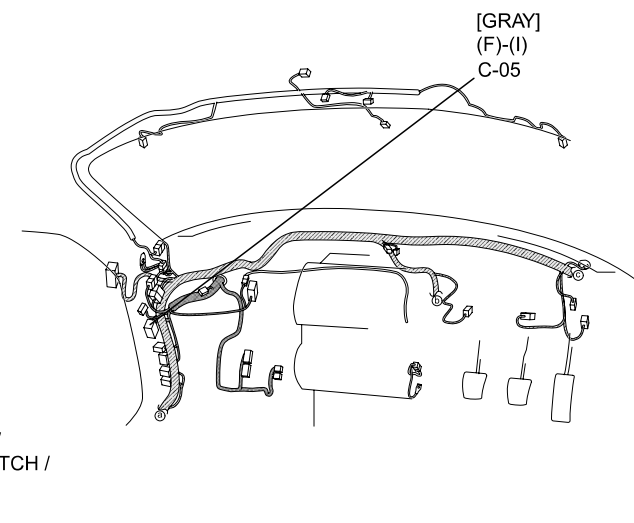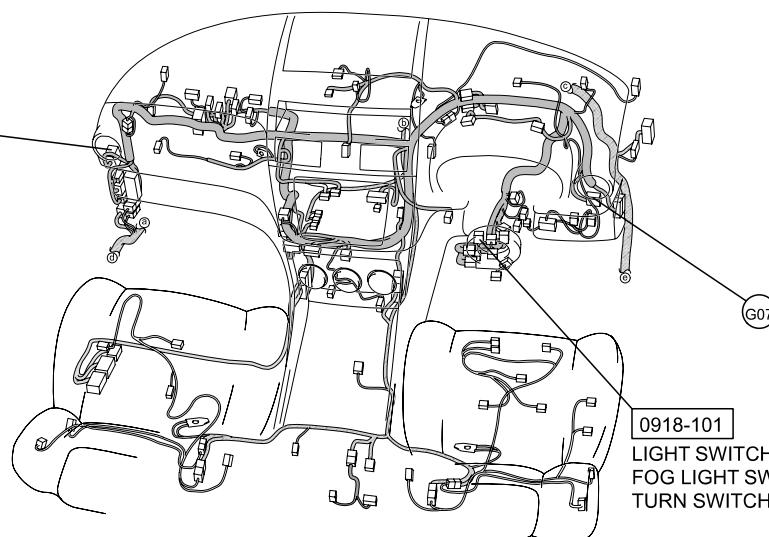


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS


FRONT FOG LIGHT RELAY
(SECTION 0918-3a)

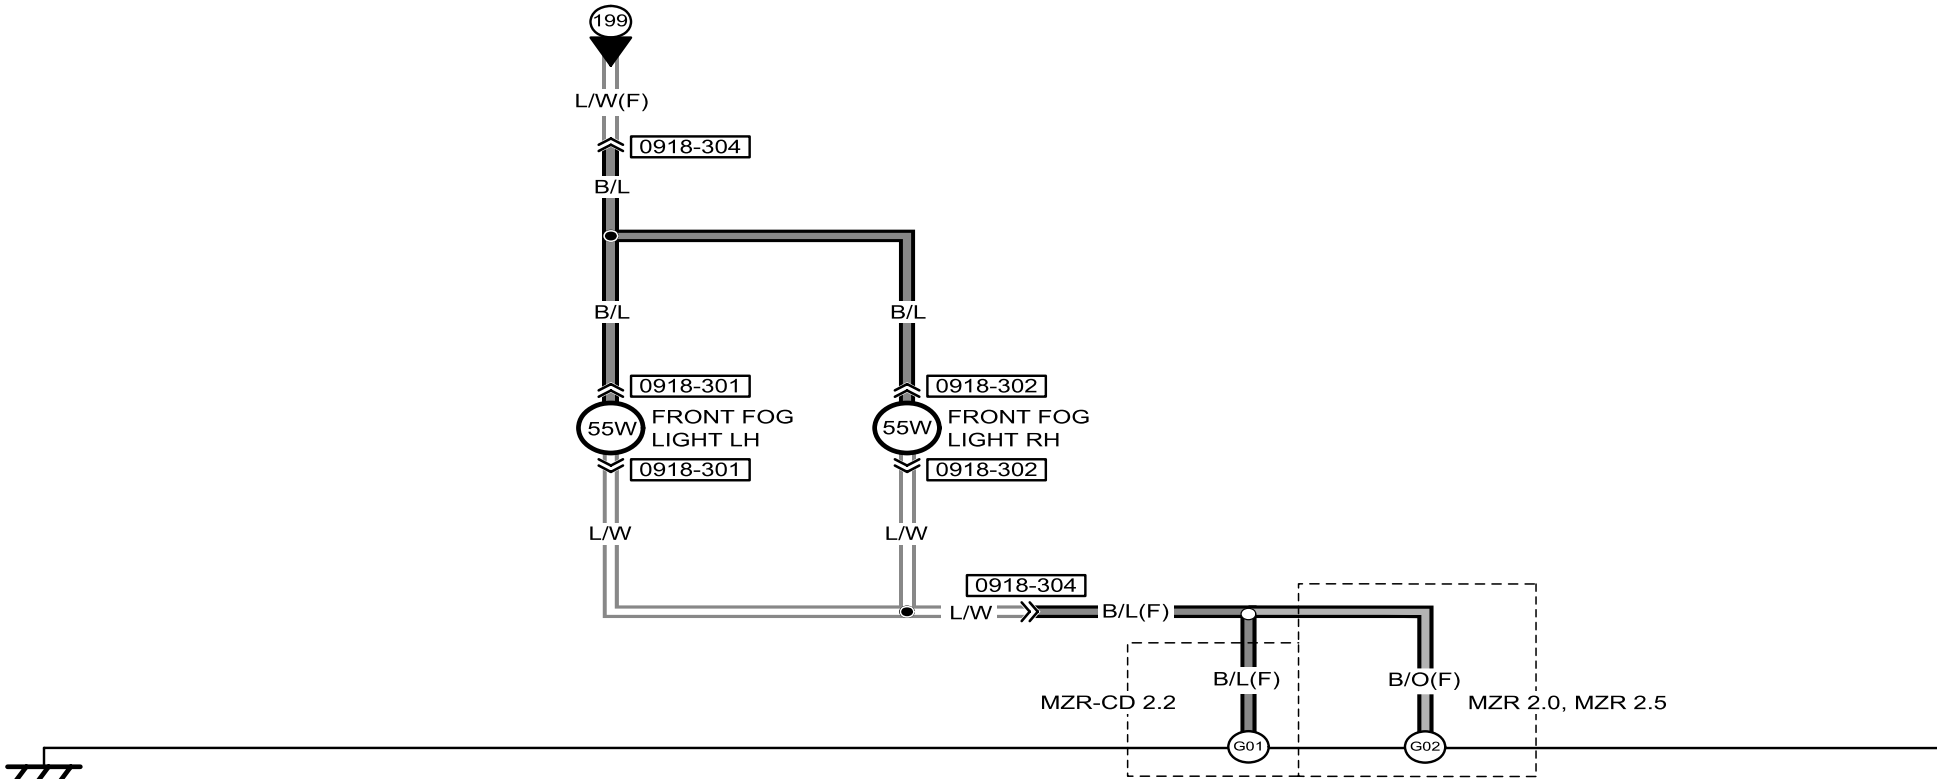

0918-301
FRONT FOG LIGHT LH

 


0918-302
FRONT FOG LIGHT RH

 




0918-304
FRONT HARNESS-SHORT CORD

 

 
 
 
FRONT HARNESS





SHORT CORD

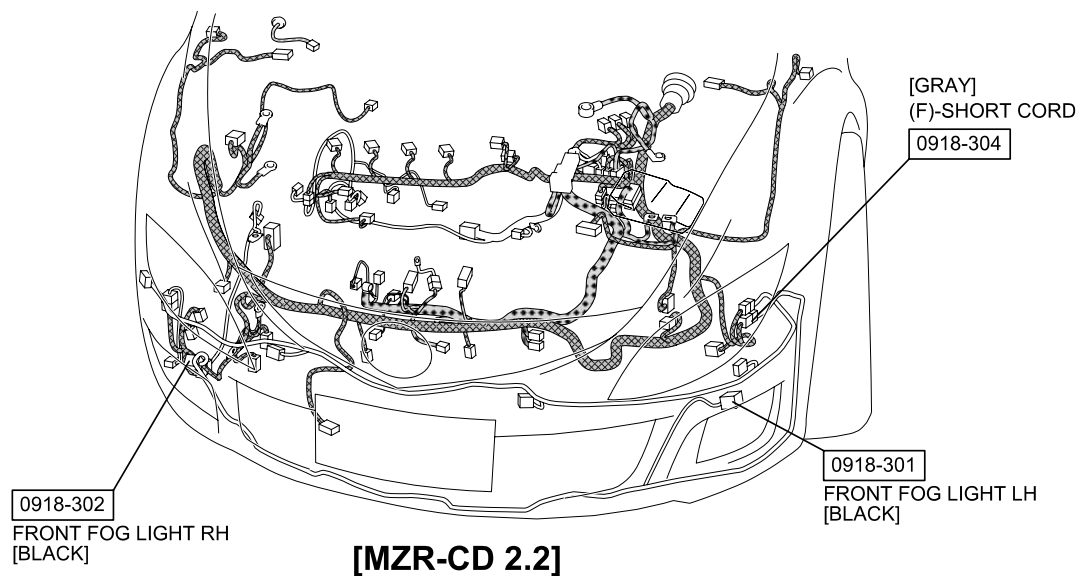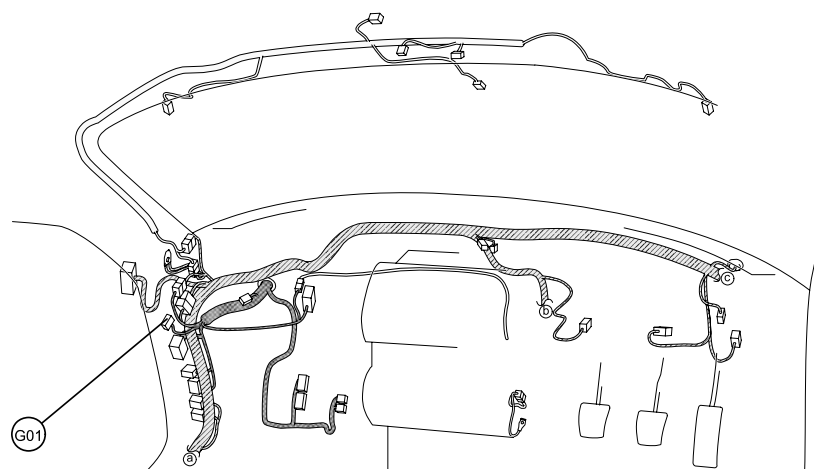




-  : FRONT HARNESS
-  : ENGINE HARNESS
-  : INJECTION HARNESS
-  : REAR HARNESS
-  : INTERIOR LIGHT NO.2 HARNESS

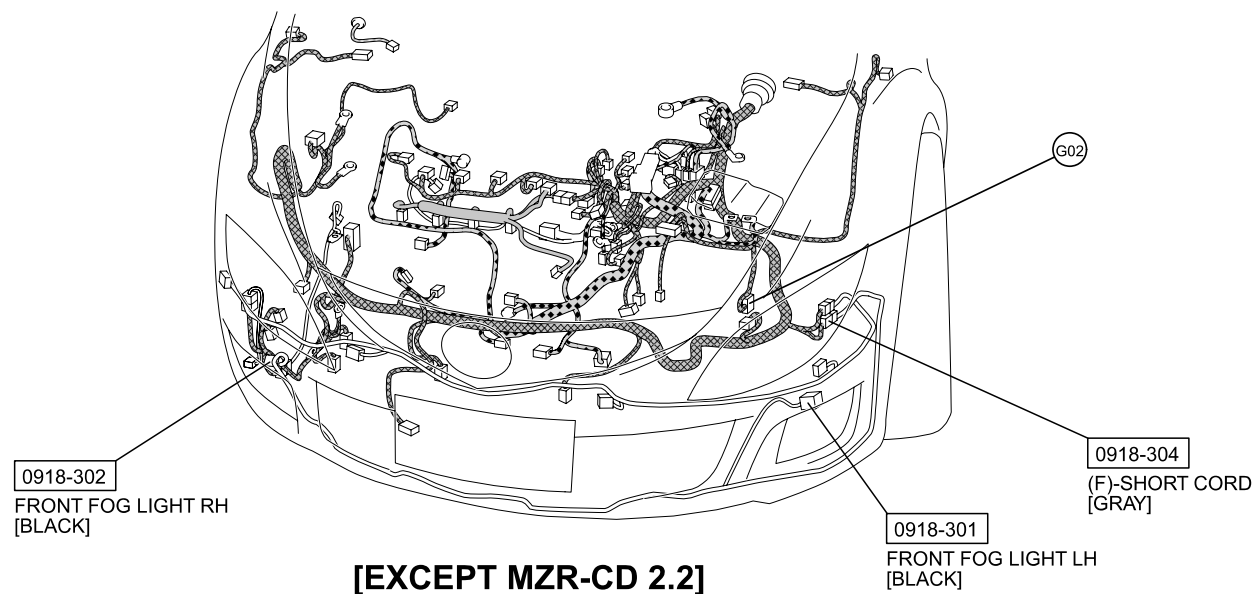


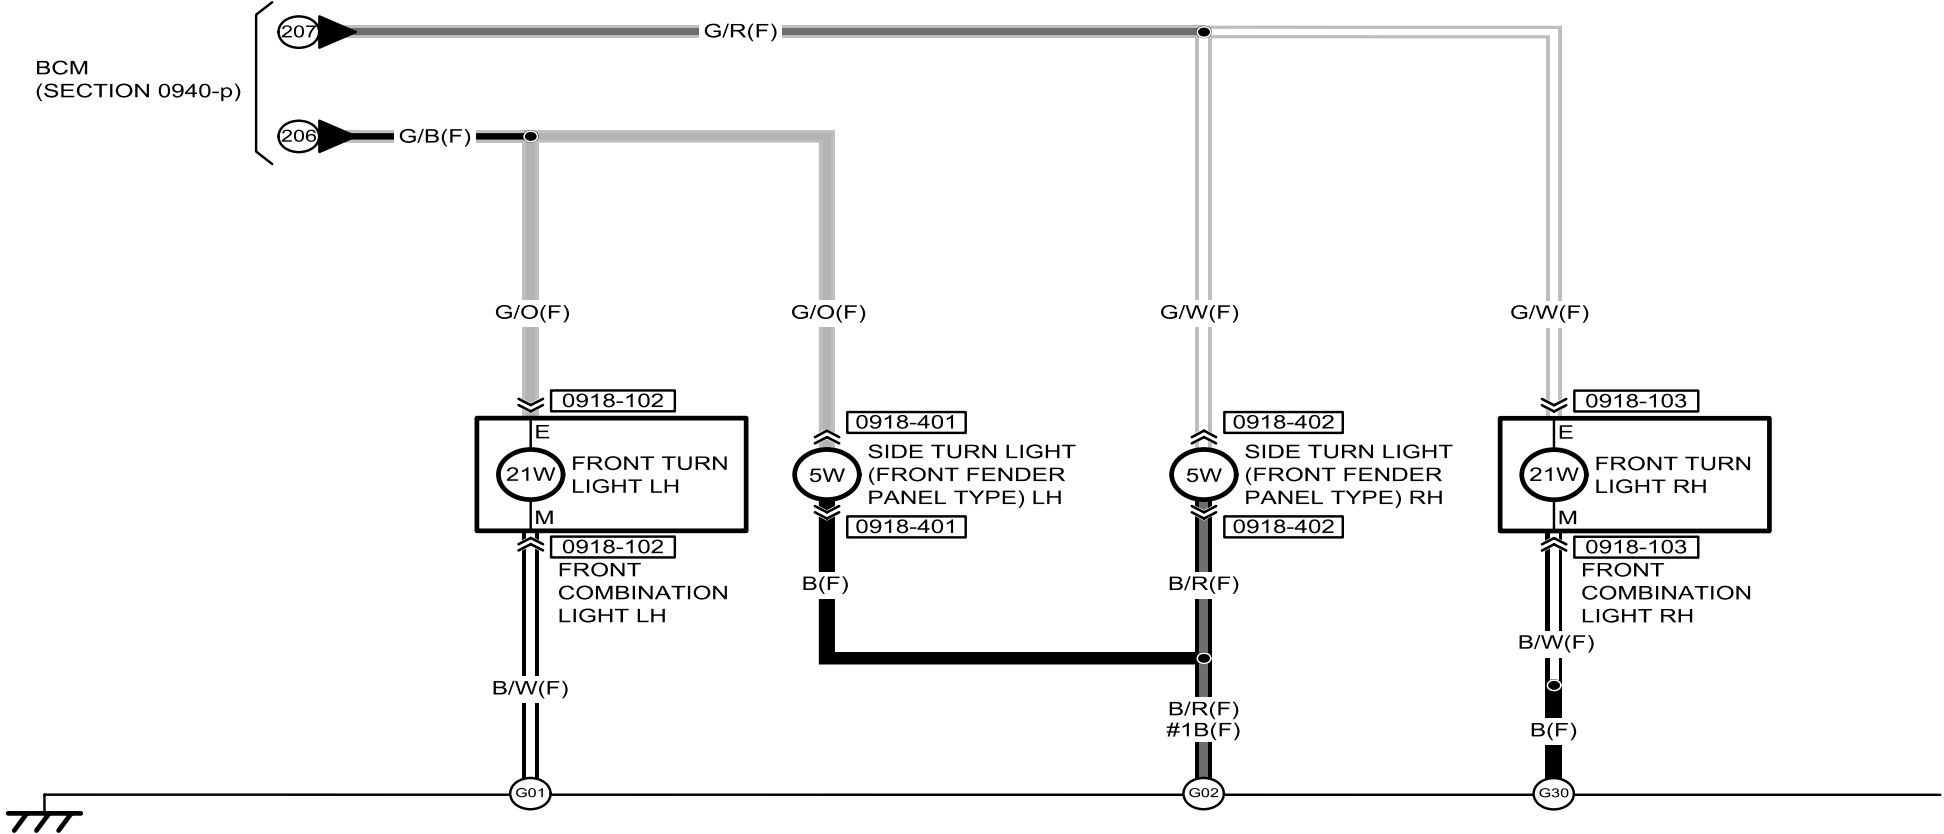

 
0918-401
SIDE TURN LIGHT (FRONT
FENDER PANEL TYPE) LH



 0918-402
SIDE TURN LIGHT (FRONT
FENDER PANEL TYPE) RH




0918-102
FRONT COMBINATION LIGHT LH /
HEADLIGHT LEVELING ACTUATOR LH /
SWIVEL ACTUATOR LH

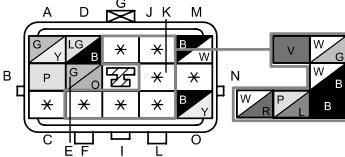

: WITH HEADLIGHT AUTO
LEVELING SYSTEM

0918-103
FRONT COMBINATION LIGHT RH /
HEADLIGHT LEVELING ACTUATOR RH /
SWIVEL ACTUATOR RH

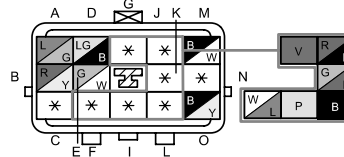



: WITH HEADLIGHT AUTO
LEVELING SYSTEM

TURN AND HAZARD WARNING LIGHT

0918-4a

253



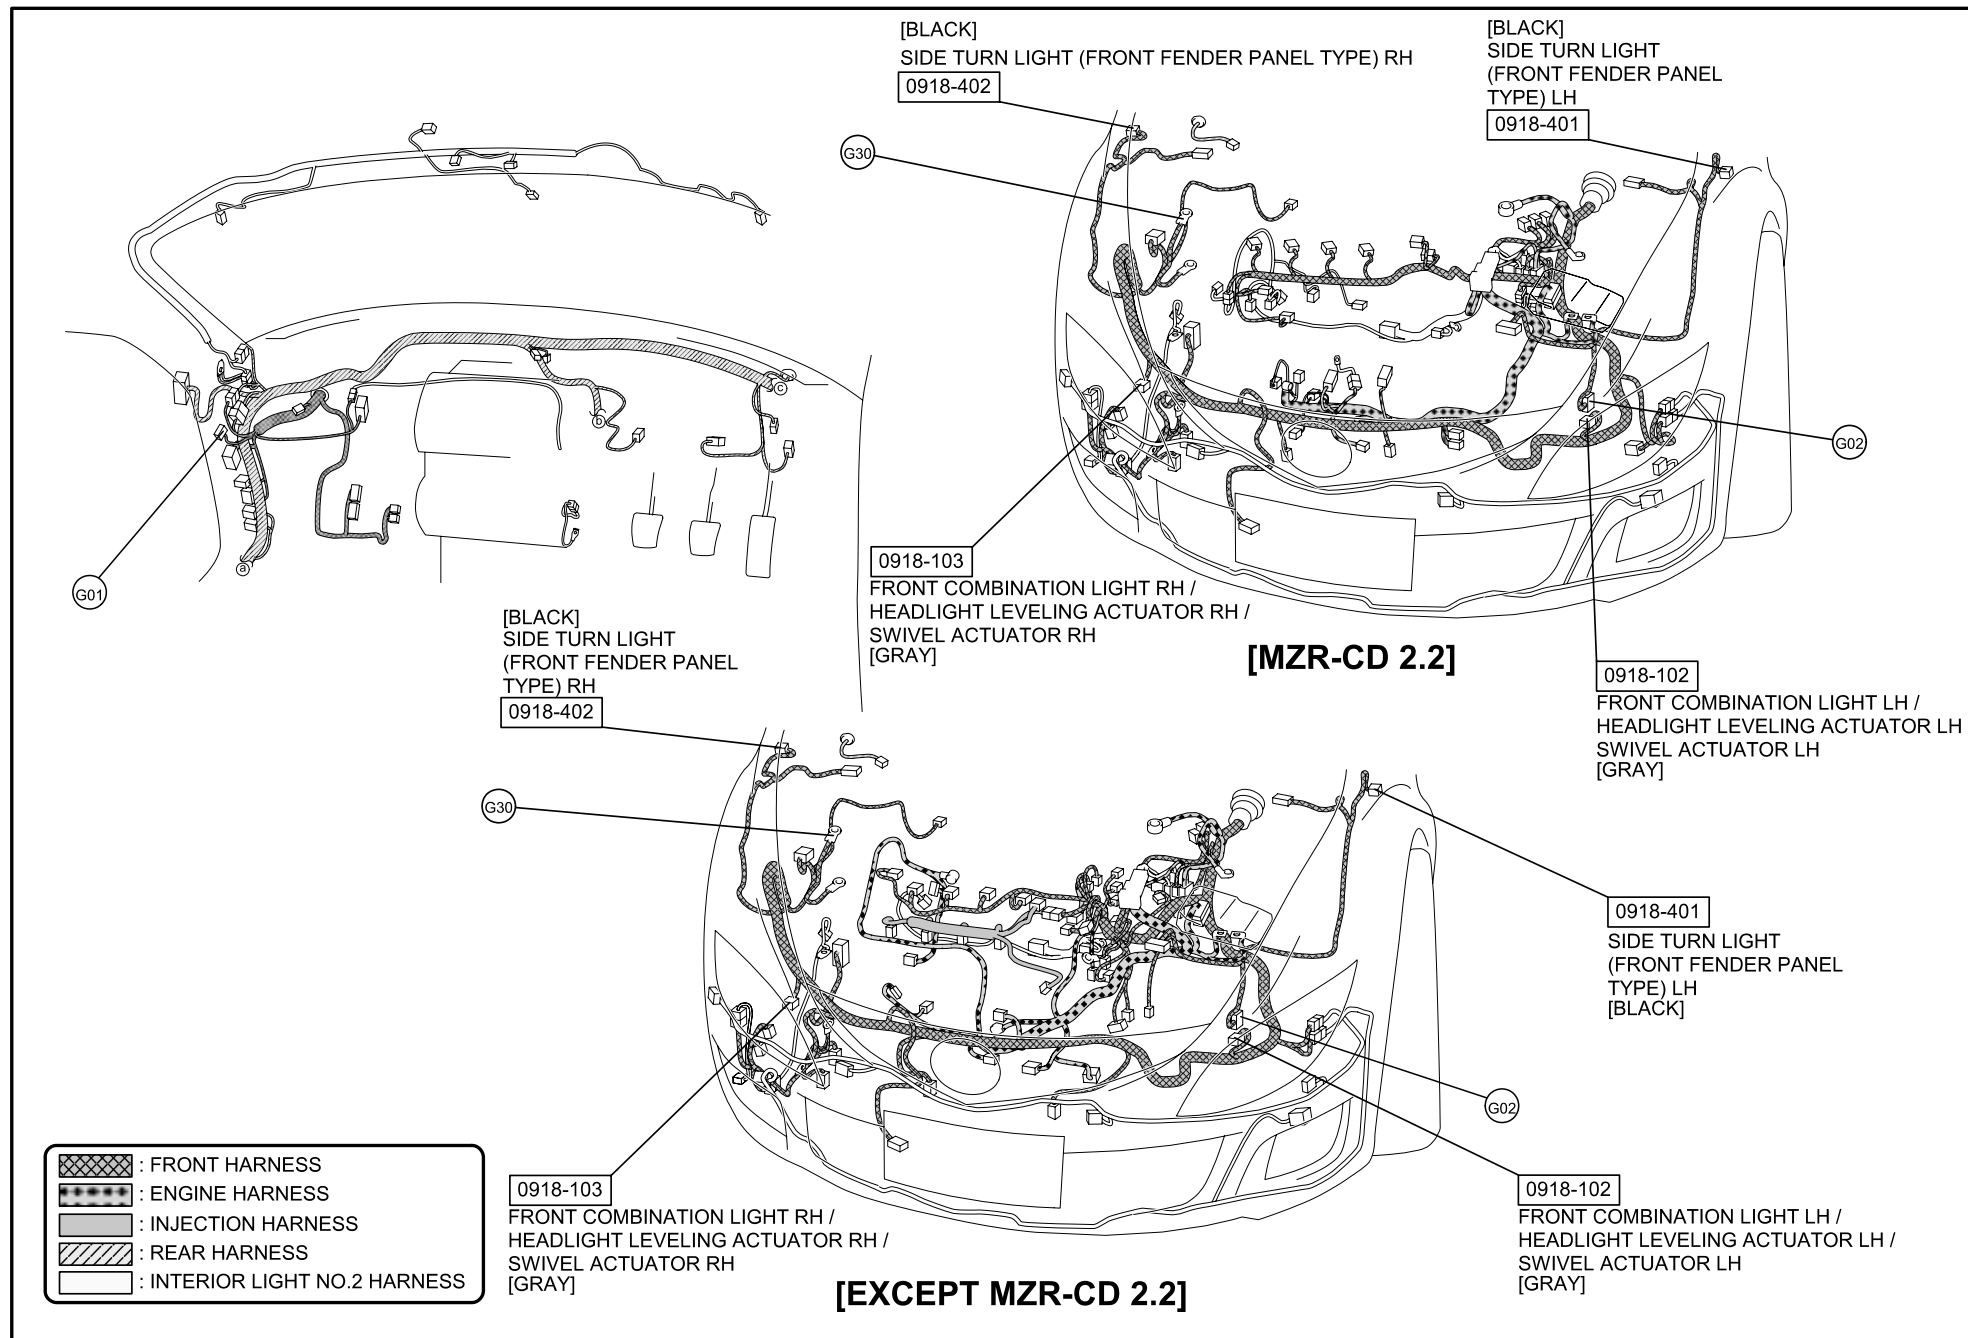


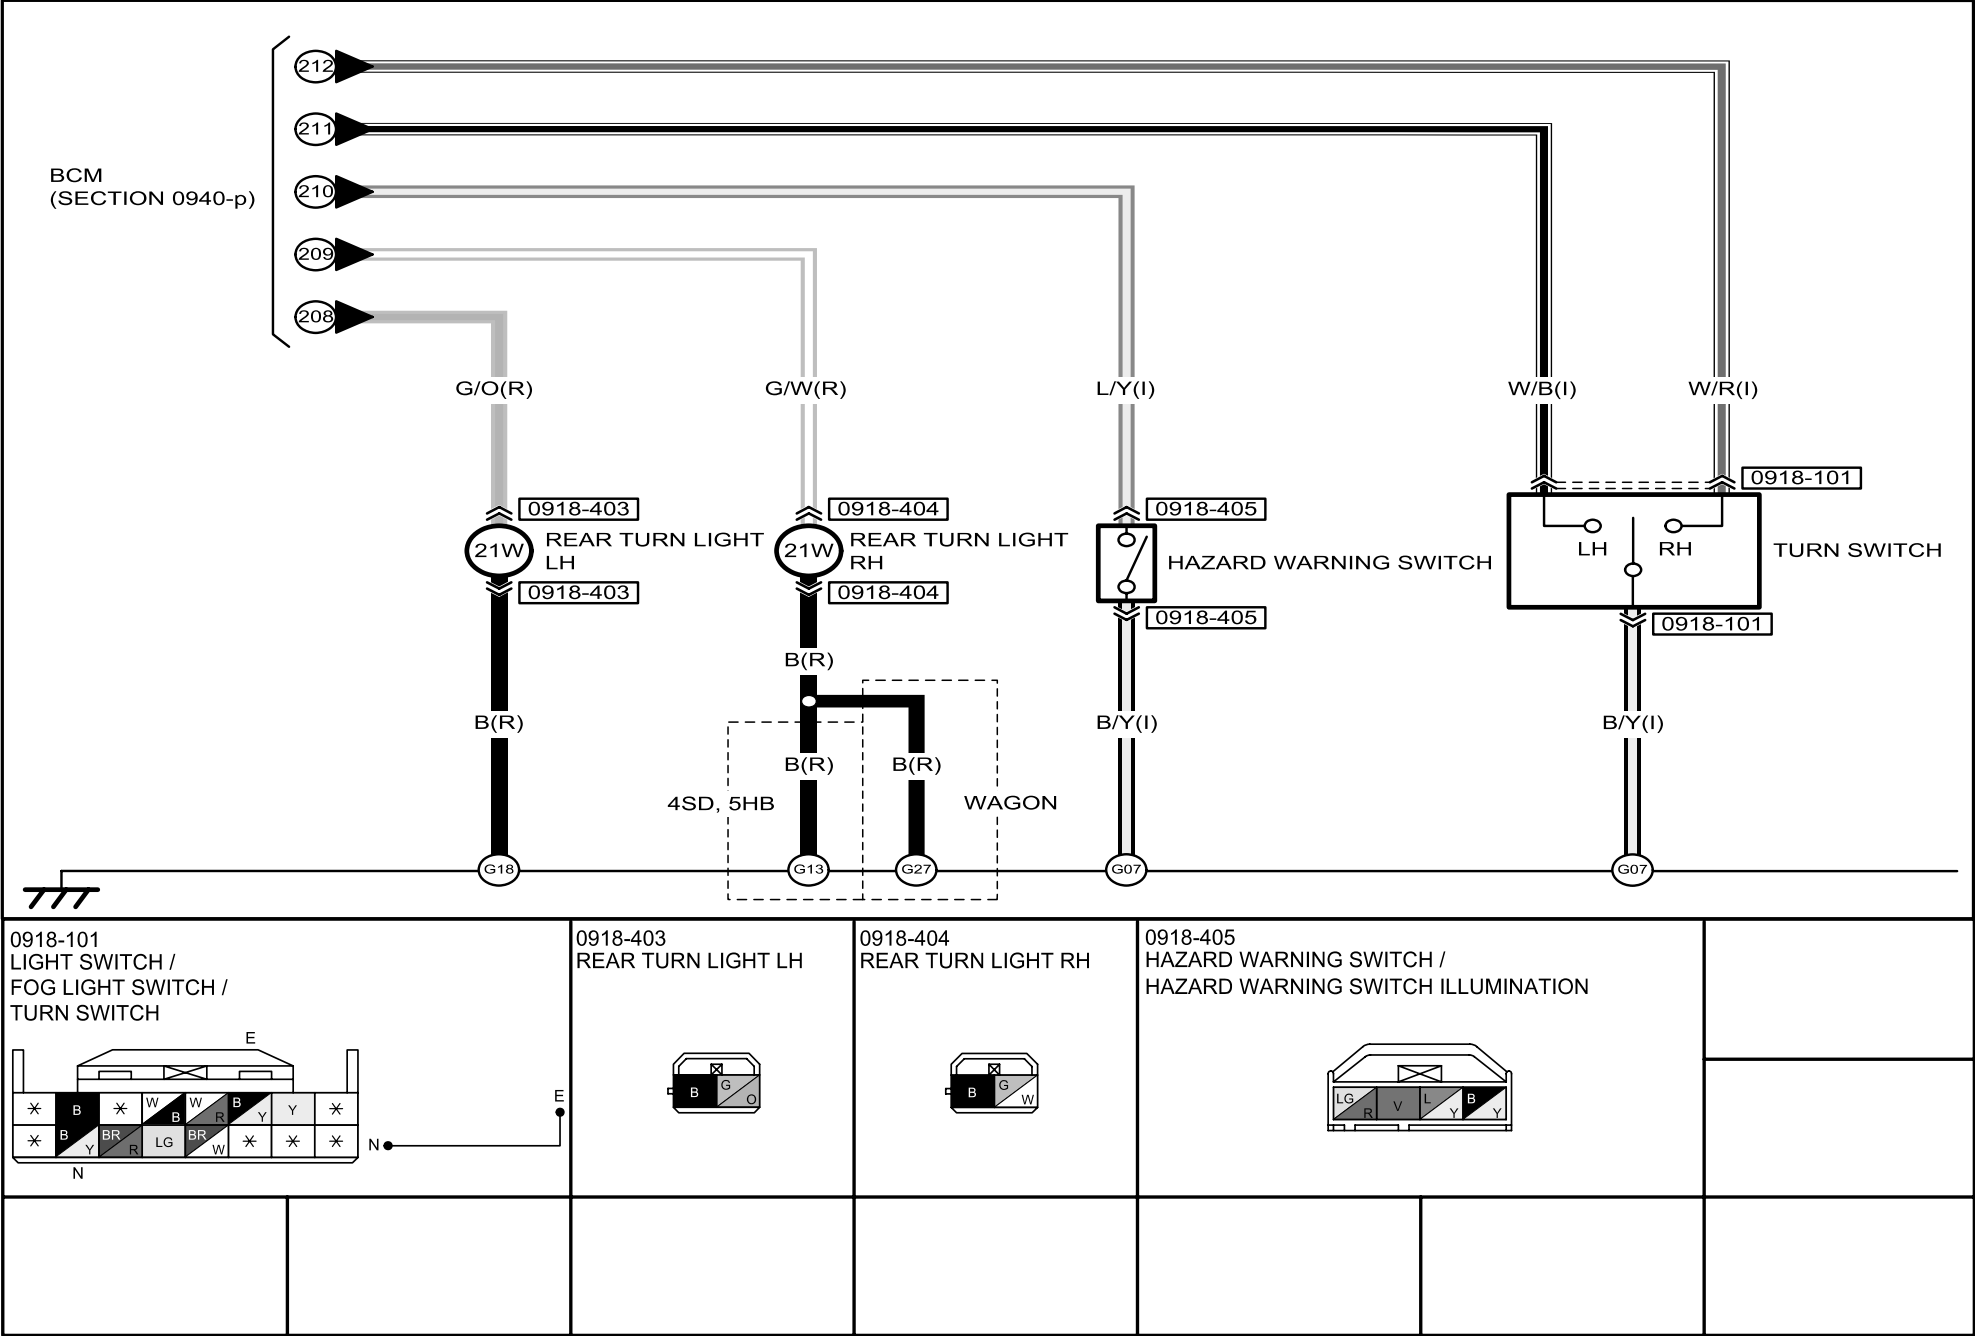


TURN AND HAZARD WARNING LIGHT

0918-4b

255

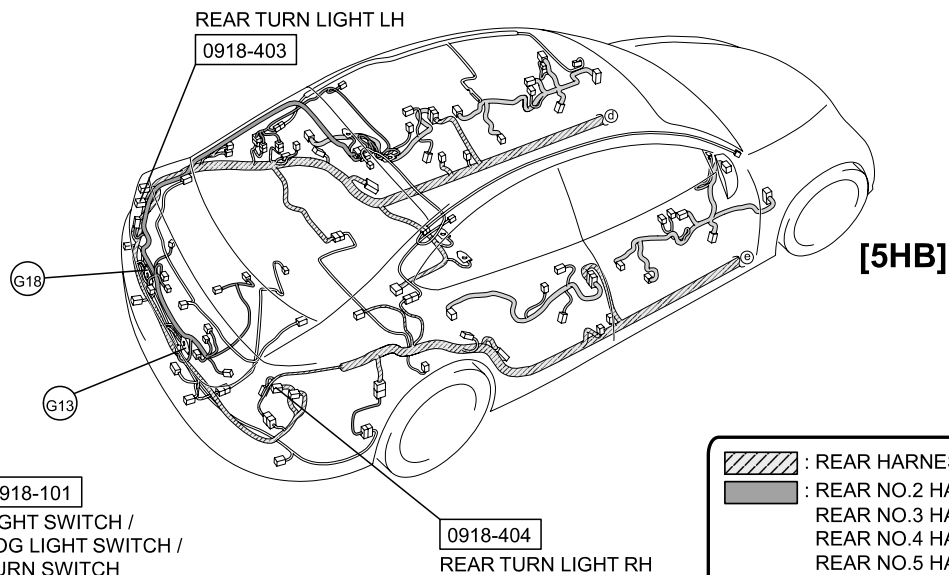
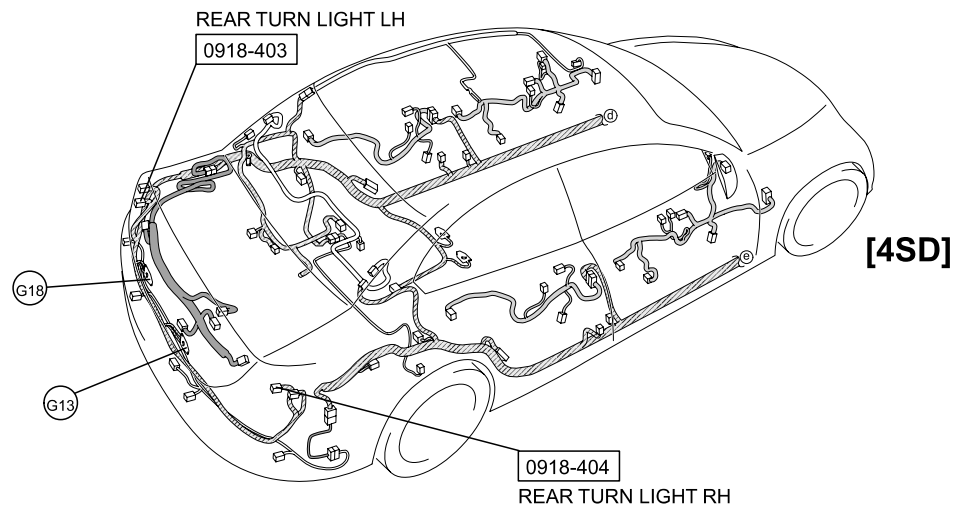
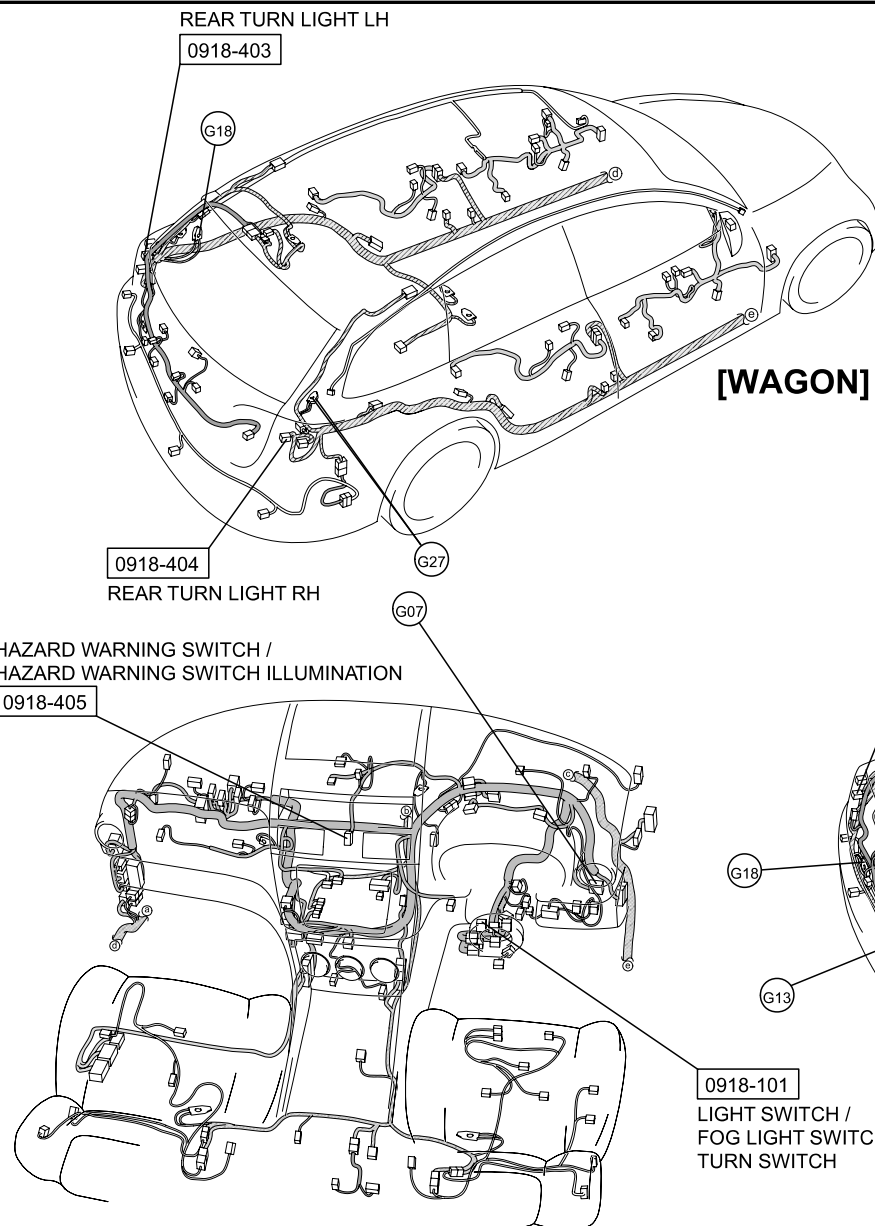




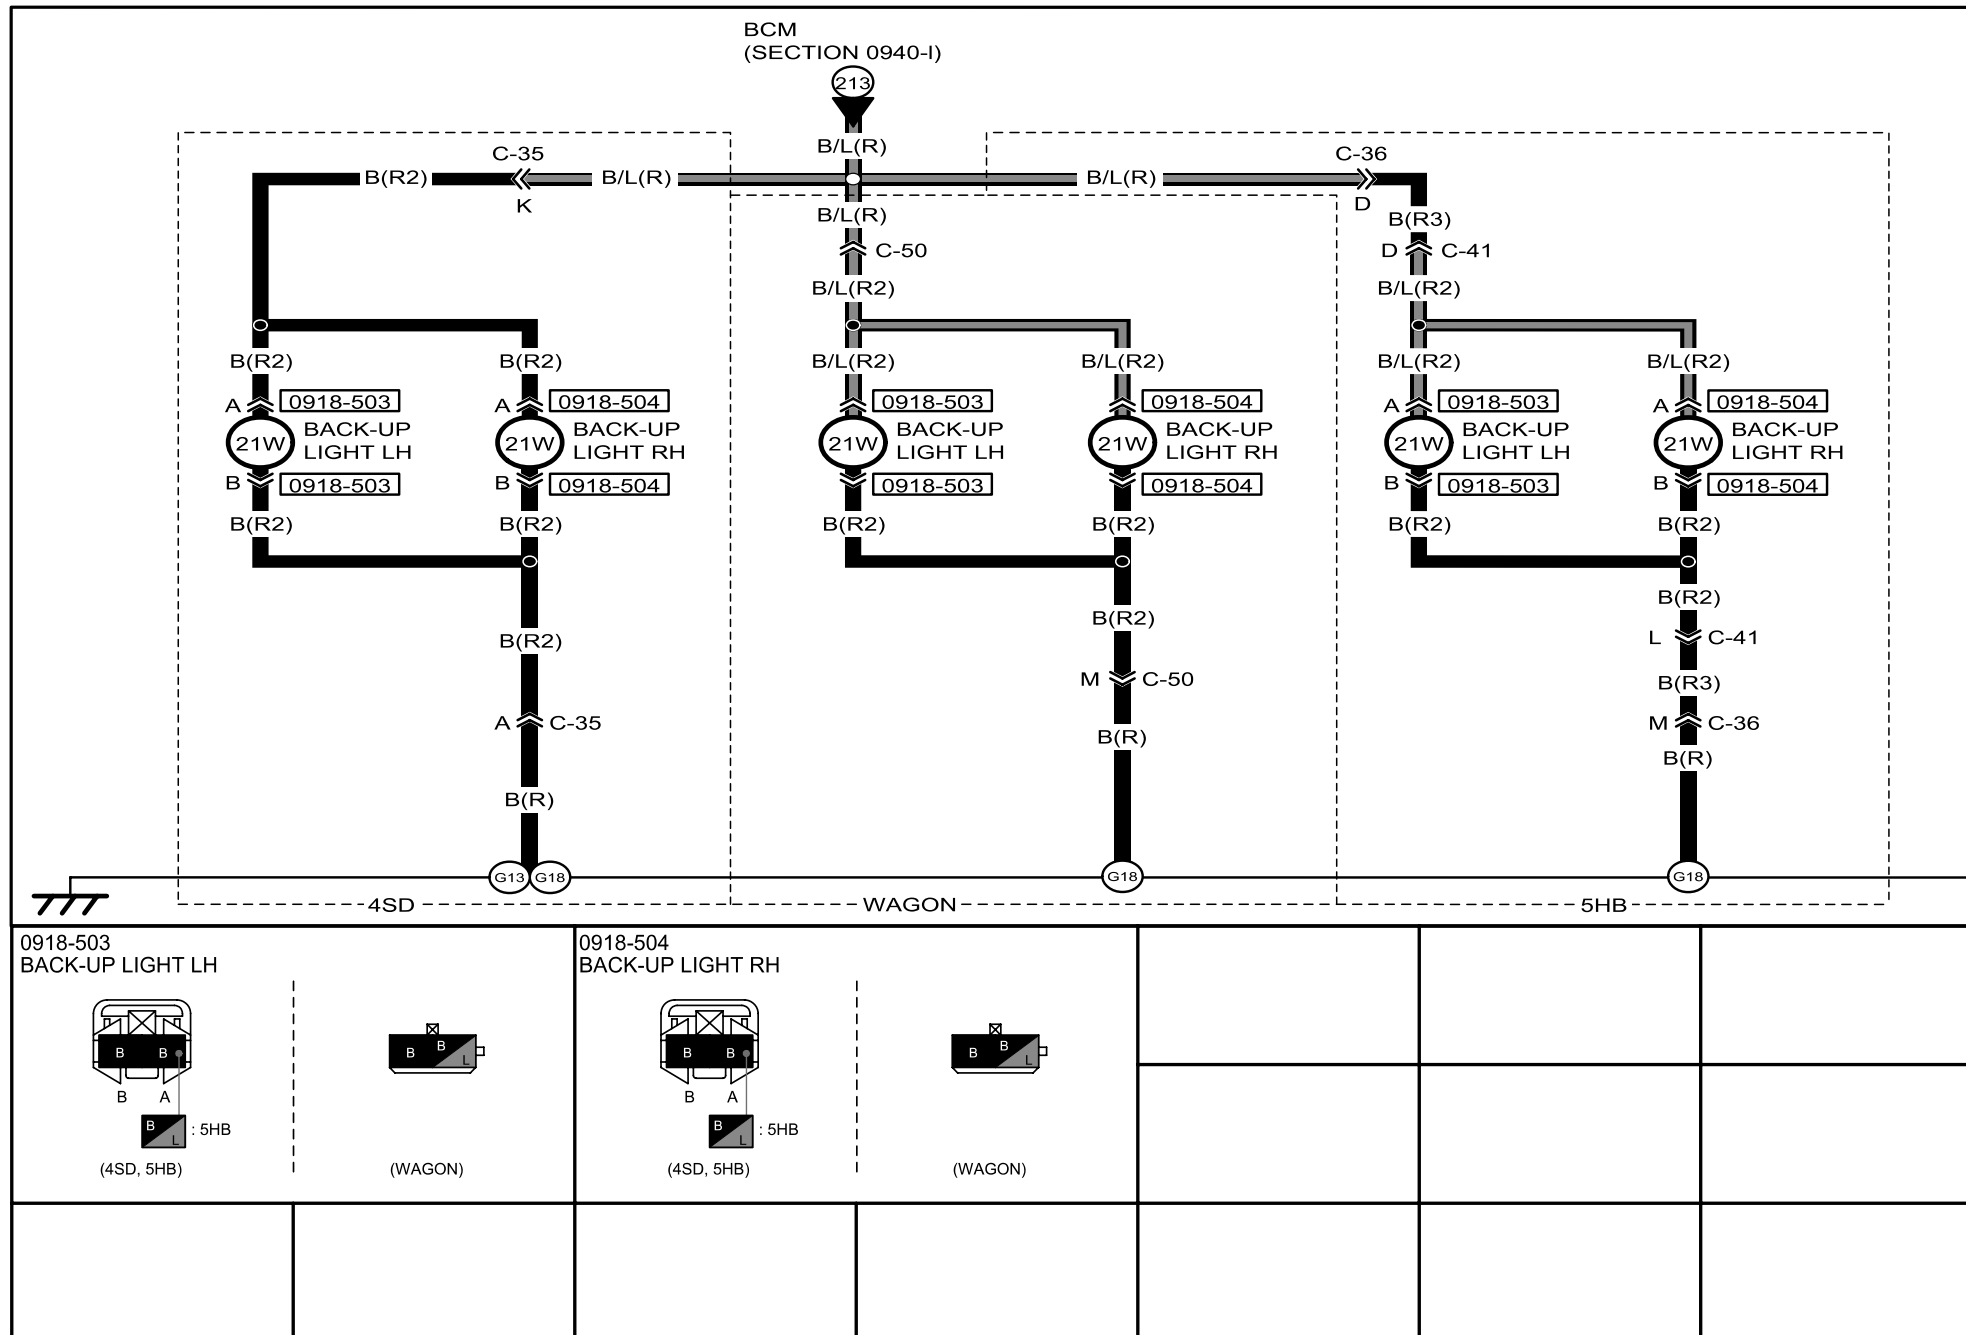



	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.3 HARNESS
	: REAR NO.4 HARNESS
	: REAR NO.5 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS

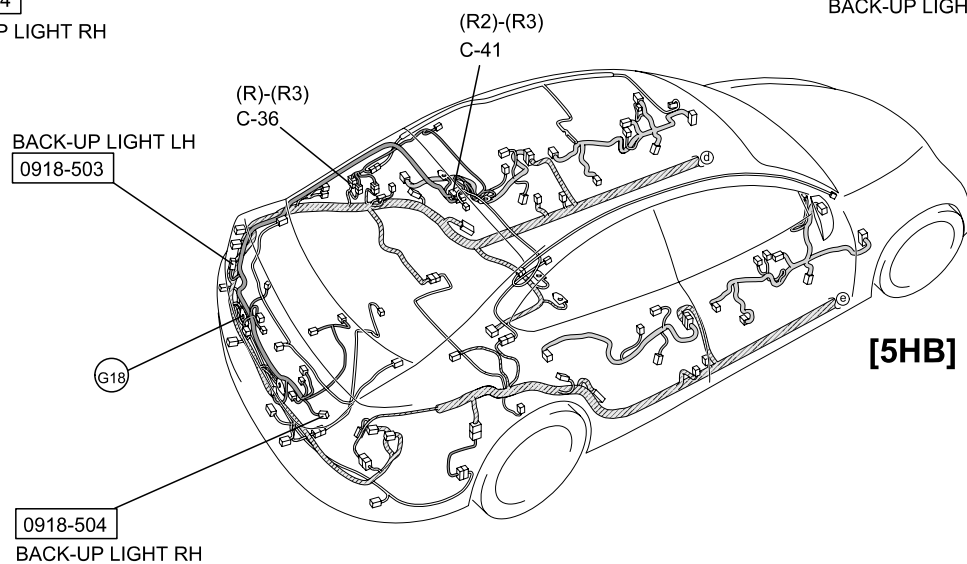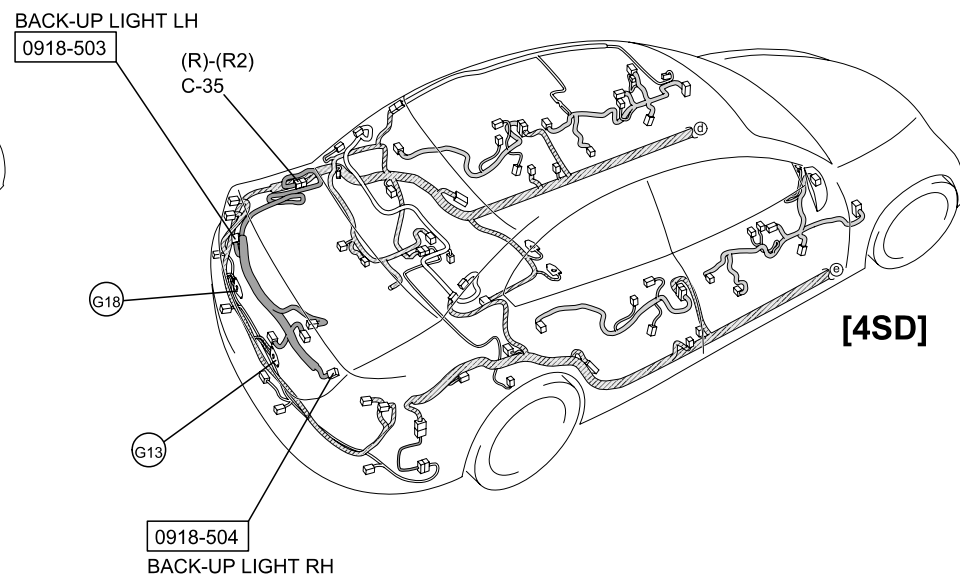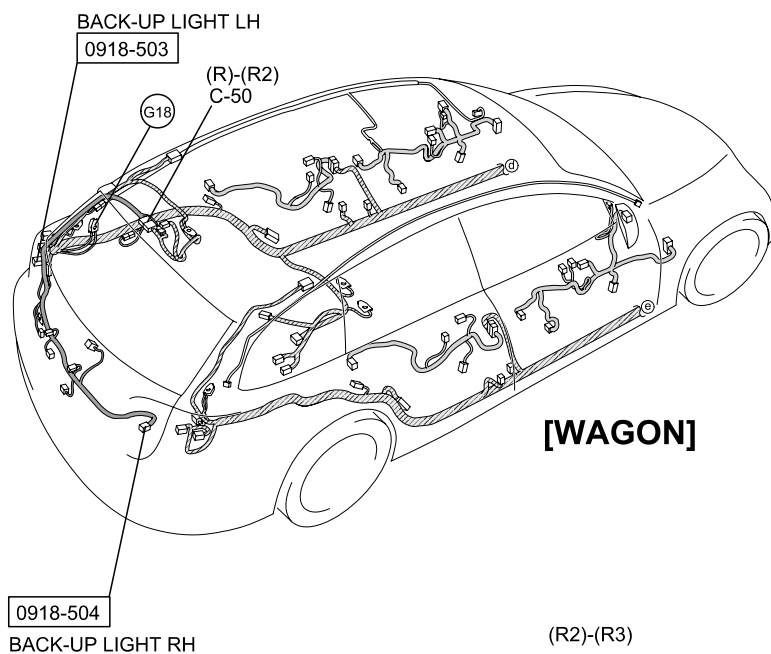


BACK-UP LIGHT

 
0918-5a




	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.3 HARNESS
	: REAR NO.4 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS

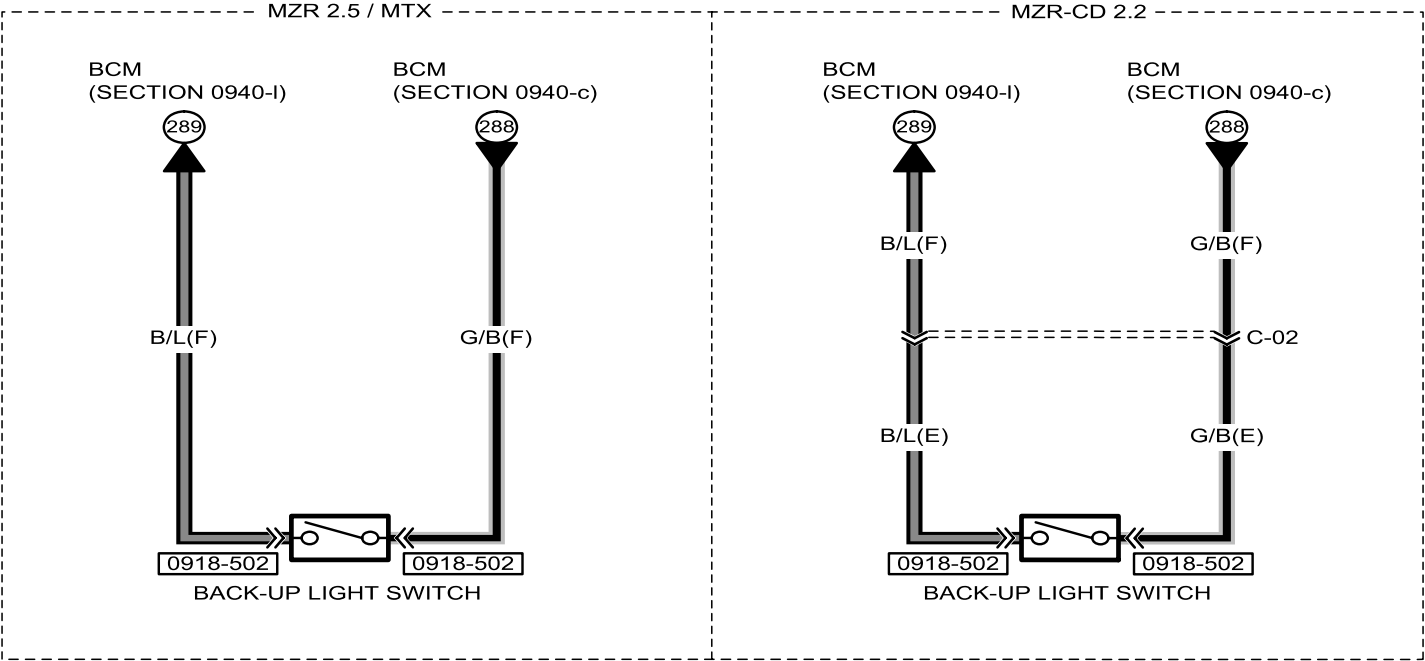

0918-502
BACK-UP LIGHT SWITCH

 


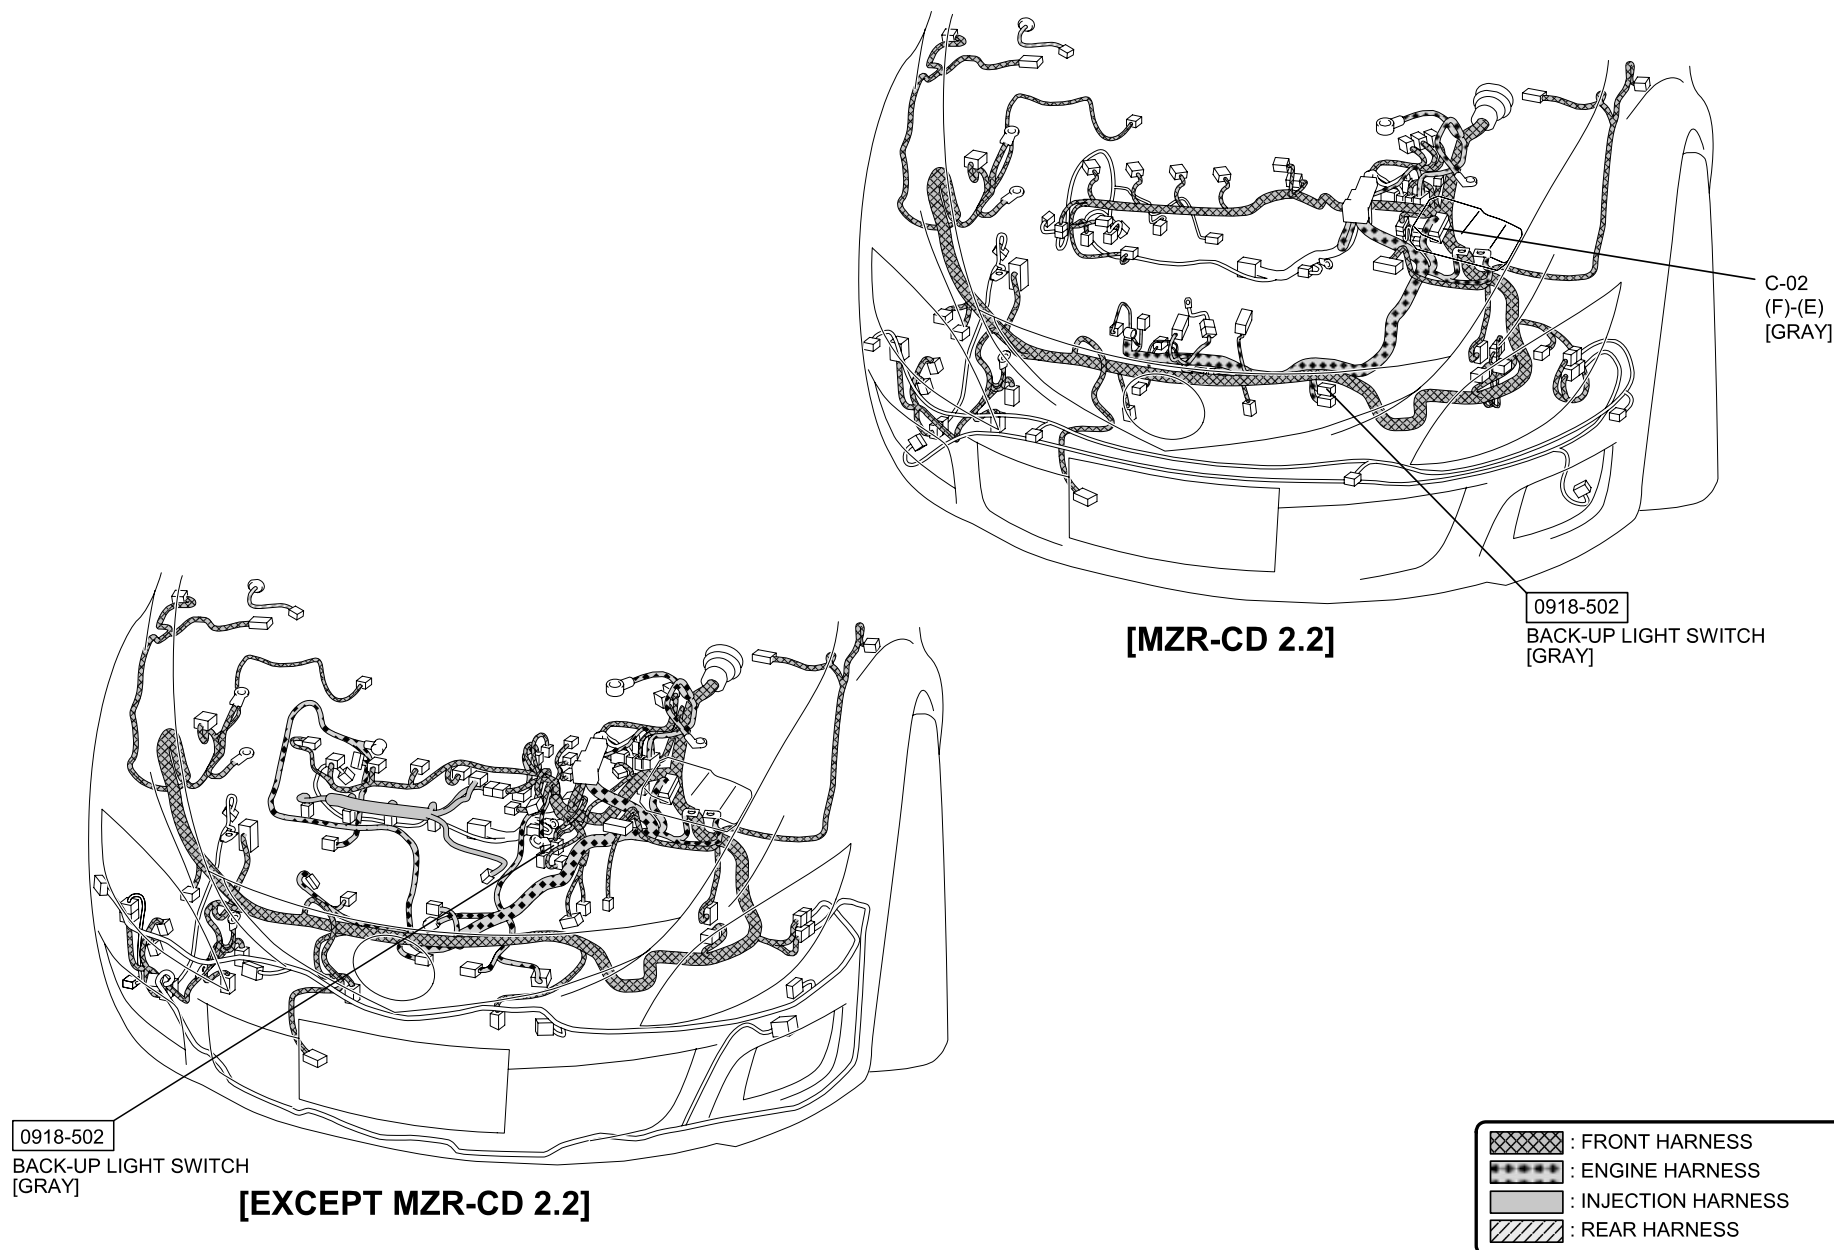


BRAKE LIGHT / HIGH-MOUNT BRAKE LIGHT

0918-6a


@ : LED TYPE

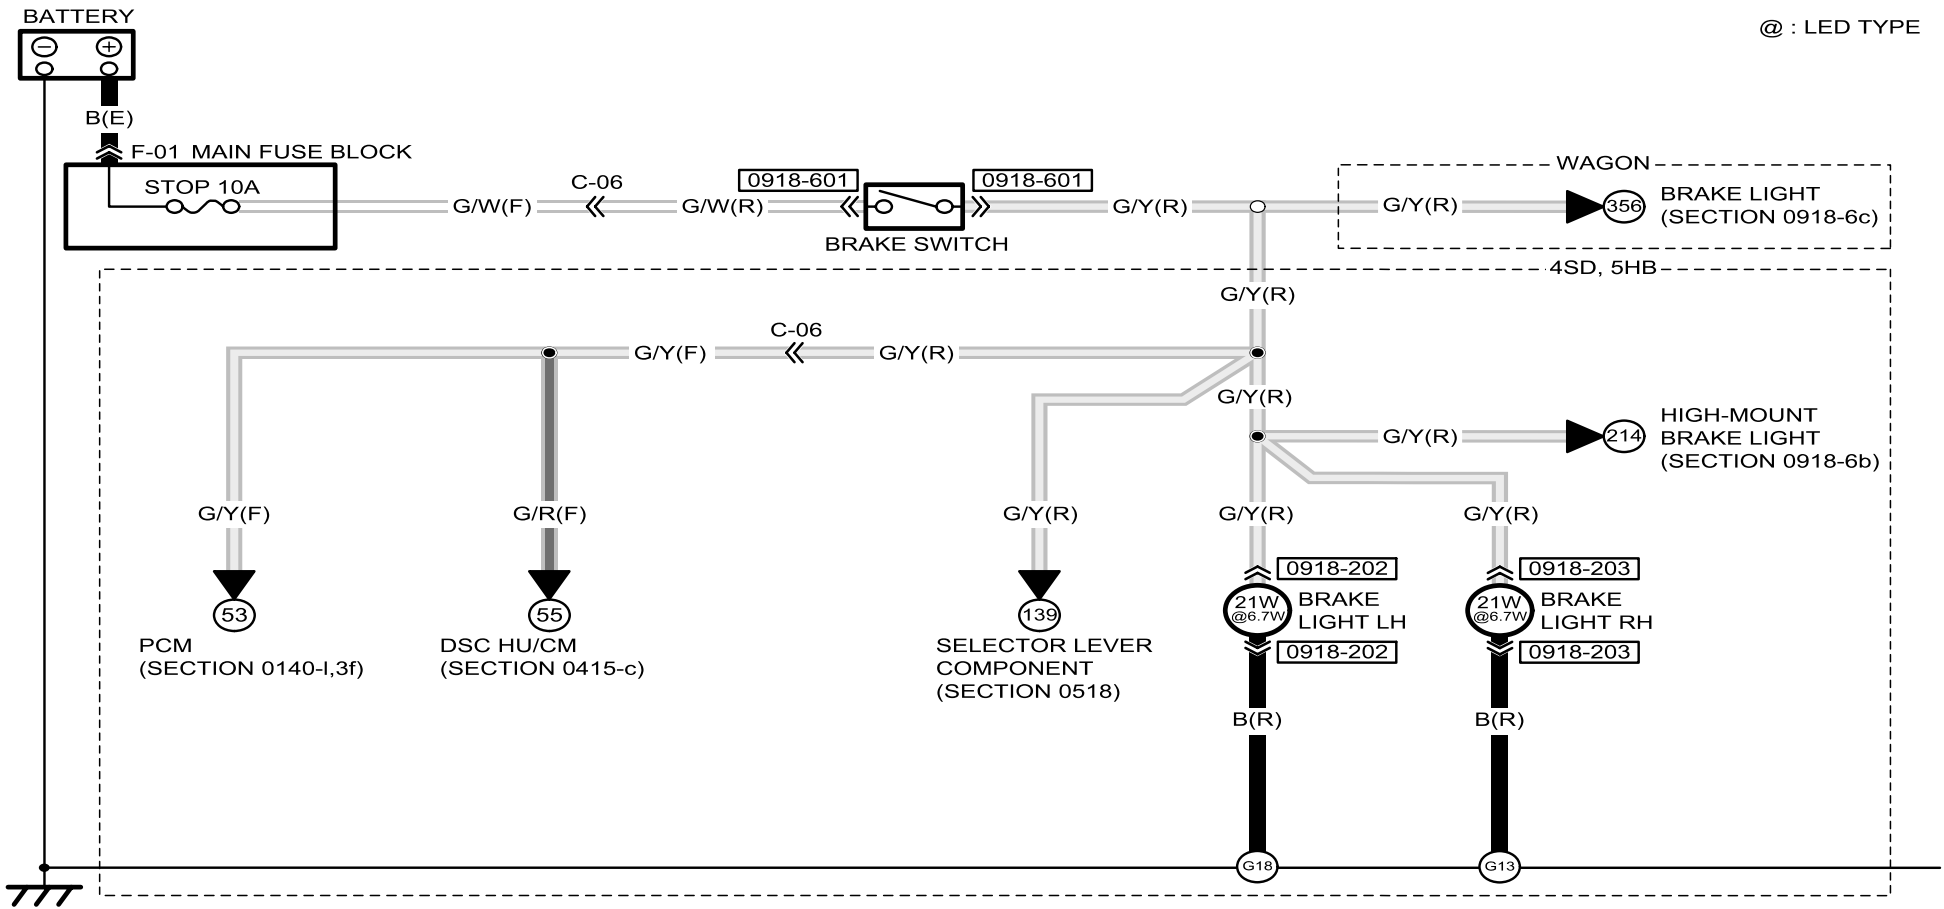

 
0918-202
 TAILLIGHT LH /
 BRAKE LIGHT LH








 0918-203
 TAILLIGHT RH /
 BRAKE LIGHT RH




0918-601
 BRAKE SWITCH2 /
 BRAKE SWITCH

 

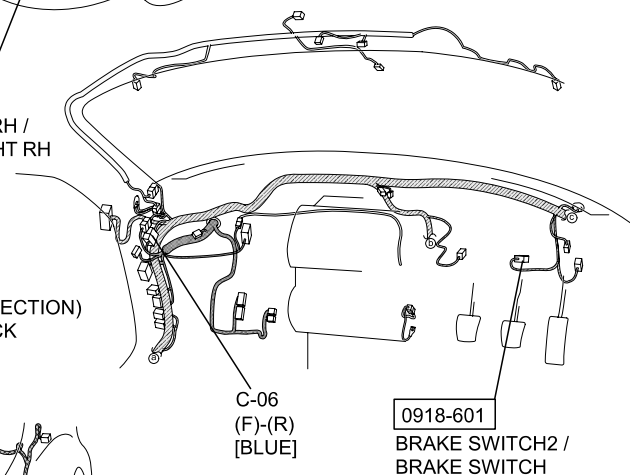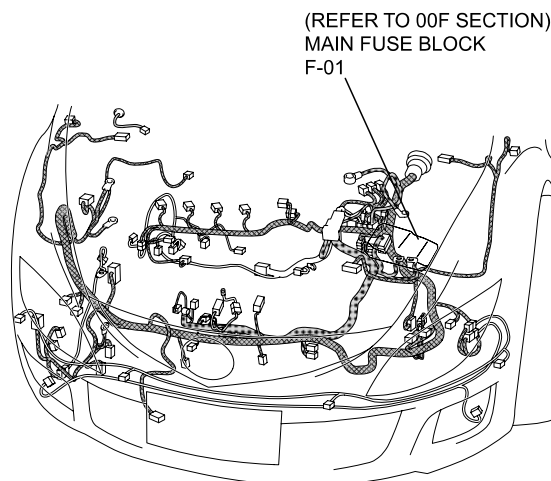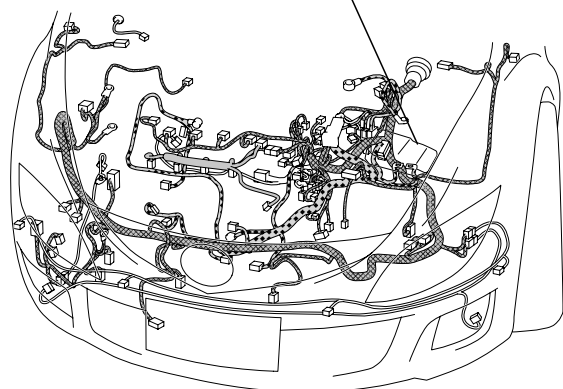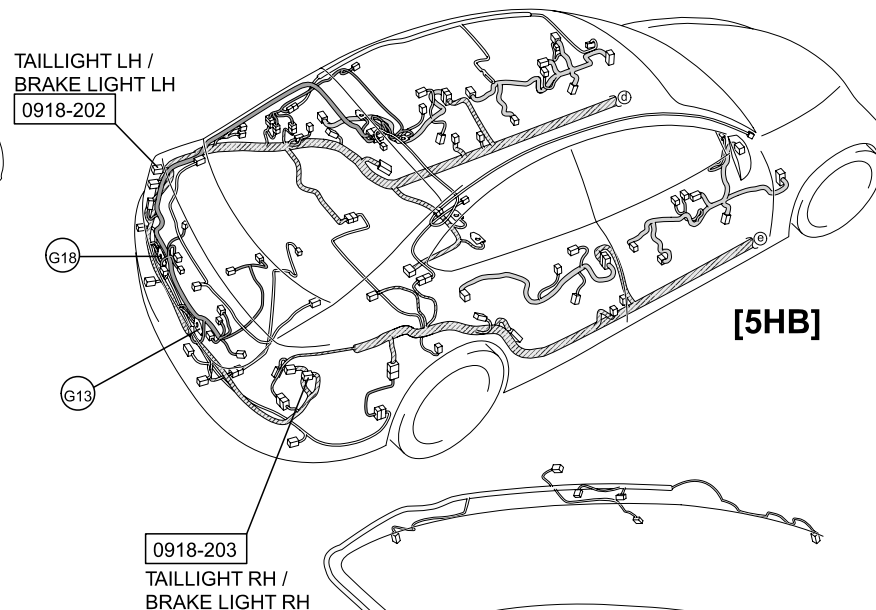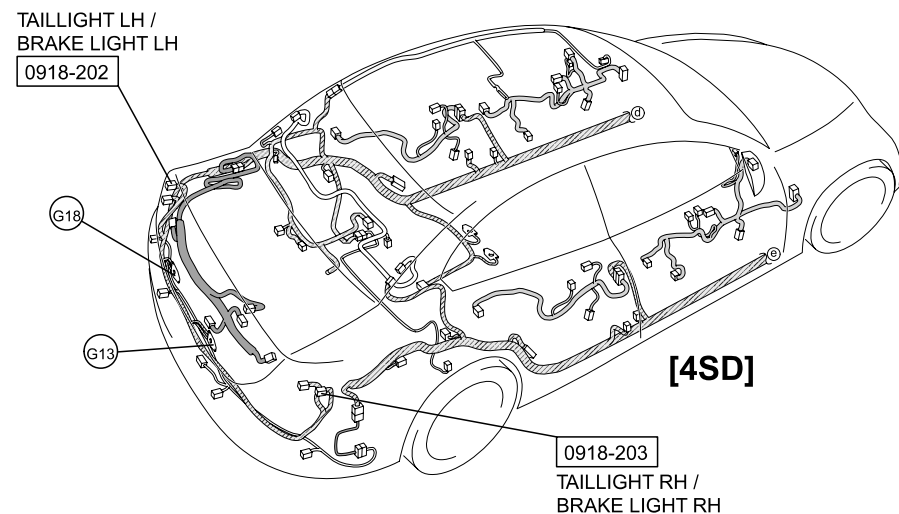


	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.3 HARNESS
	: REAR NO.4 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

262

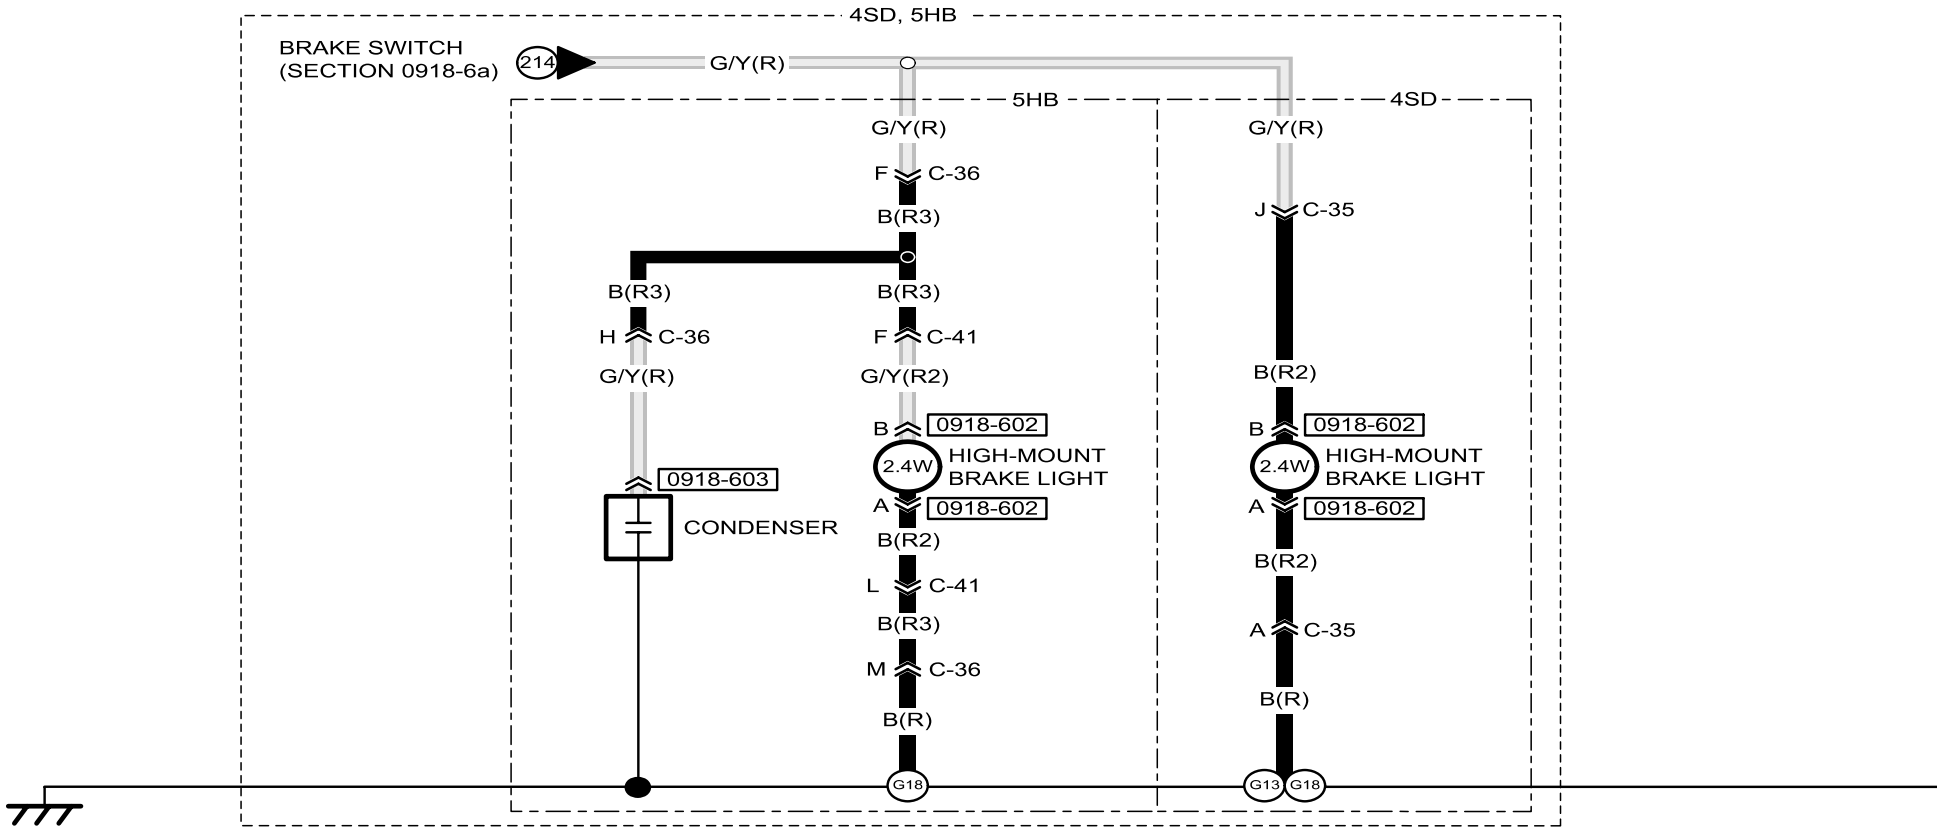


0918-602
HIGH-MOUNT
BRAKE LIGHT

 


0918-603
CONDENSER




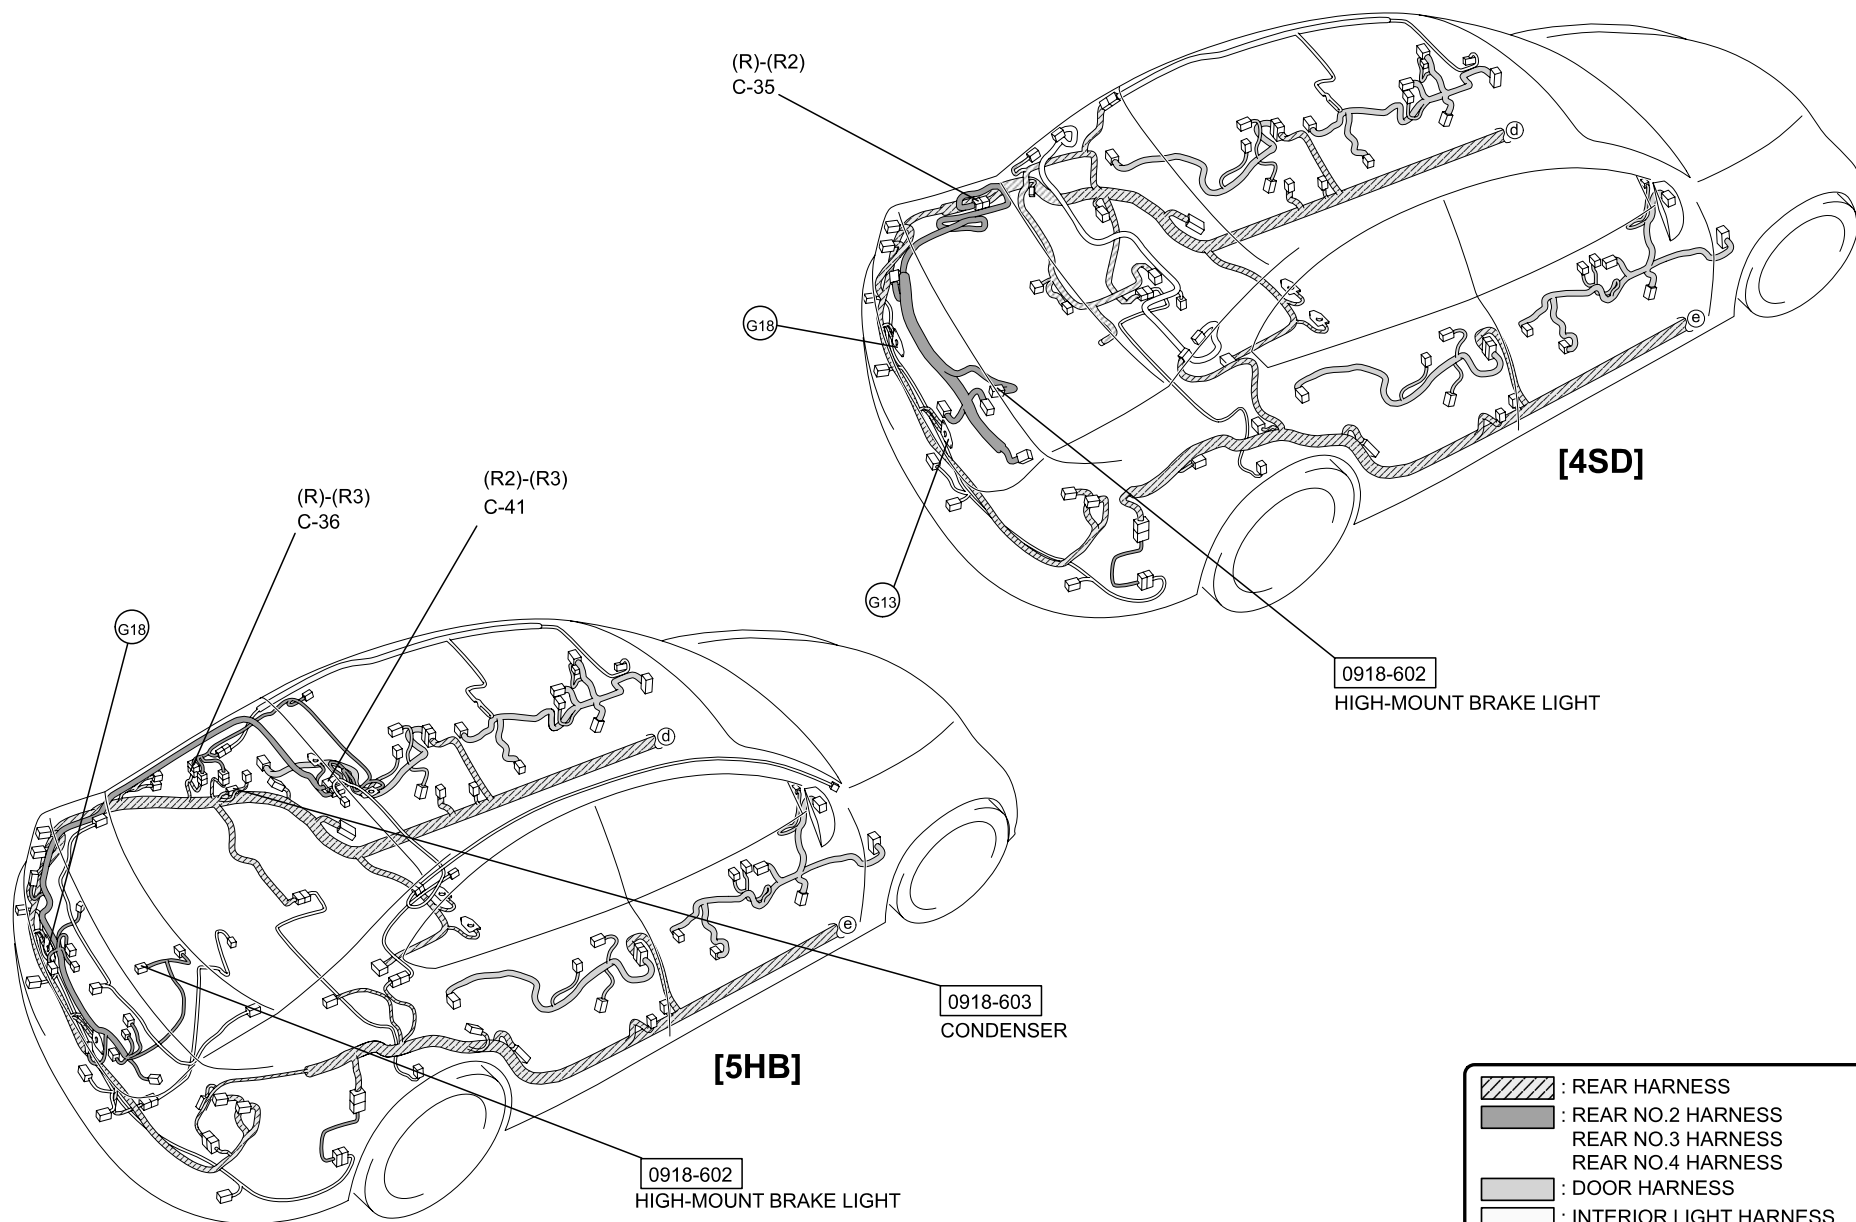


264

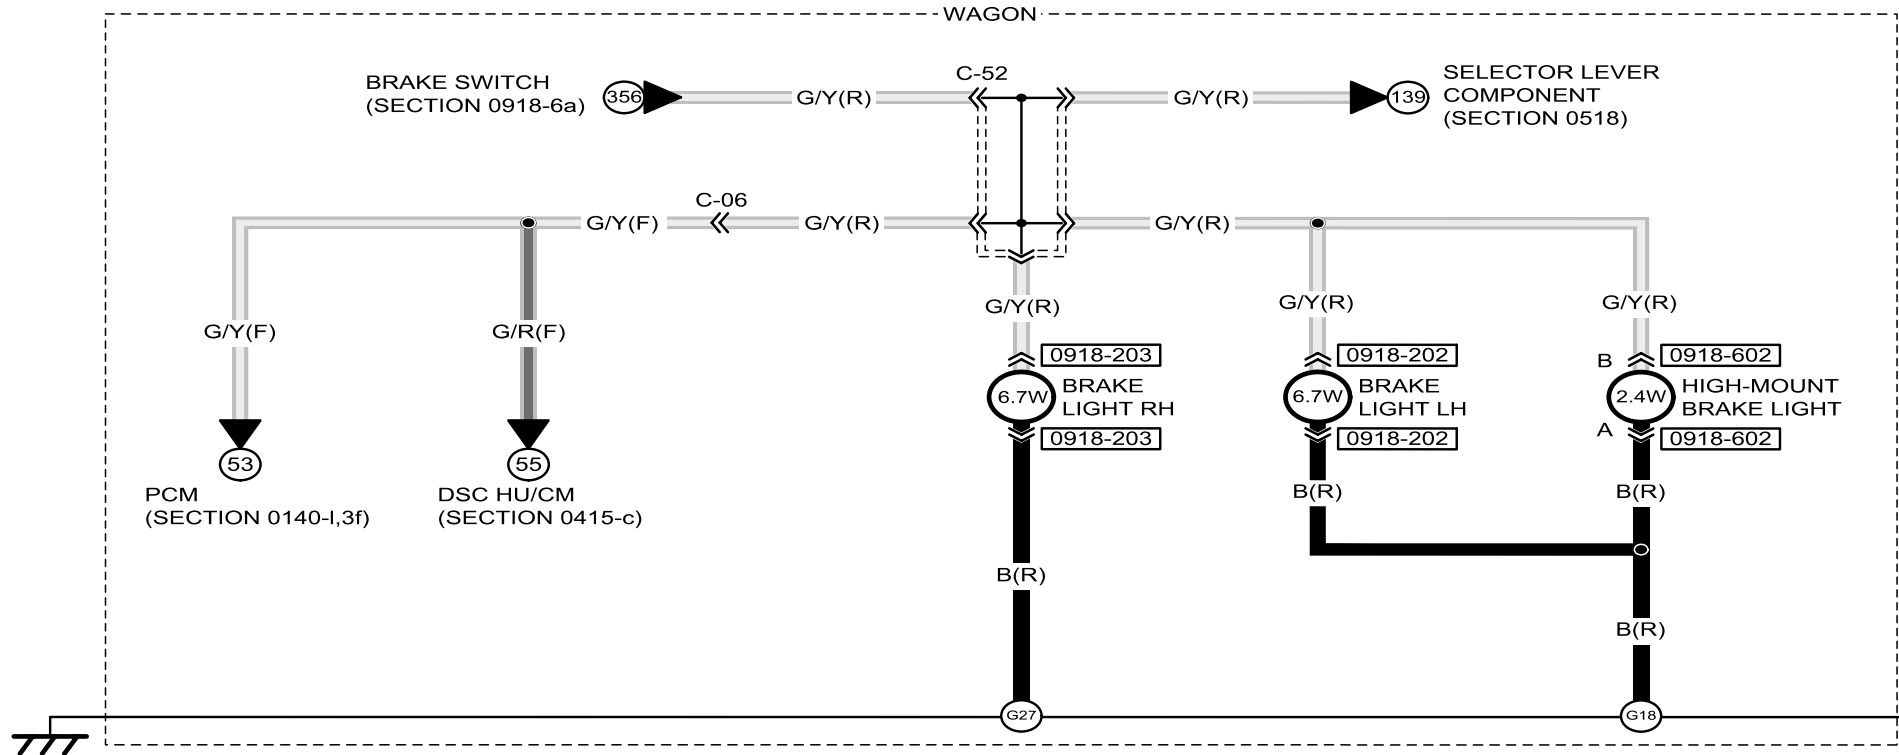


0918-602
HIGH-MOUNT
BRAKE LIGHT

 


0918-202
TAILLIGHT LH /
BRAKE LIGHT LH

 


0918-203
TAILLIGHT RH /
BRAKE LIGHT RH

 

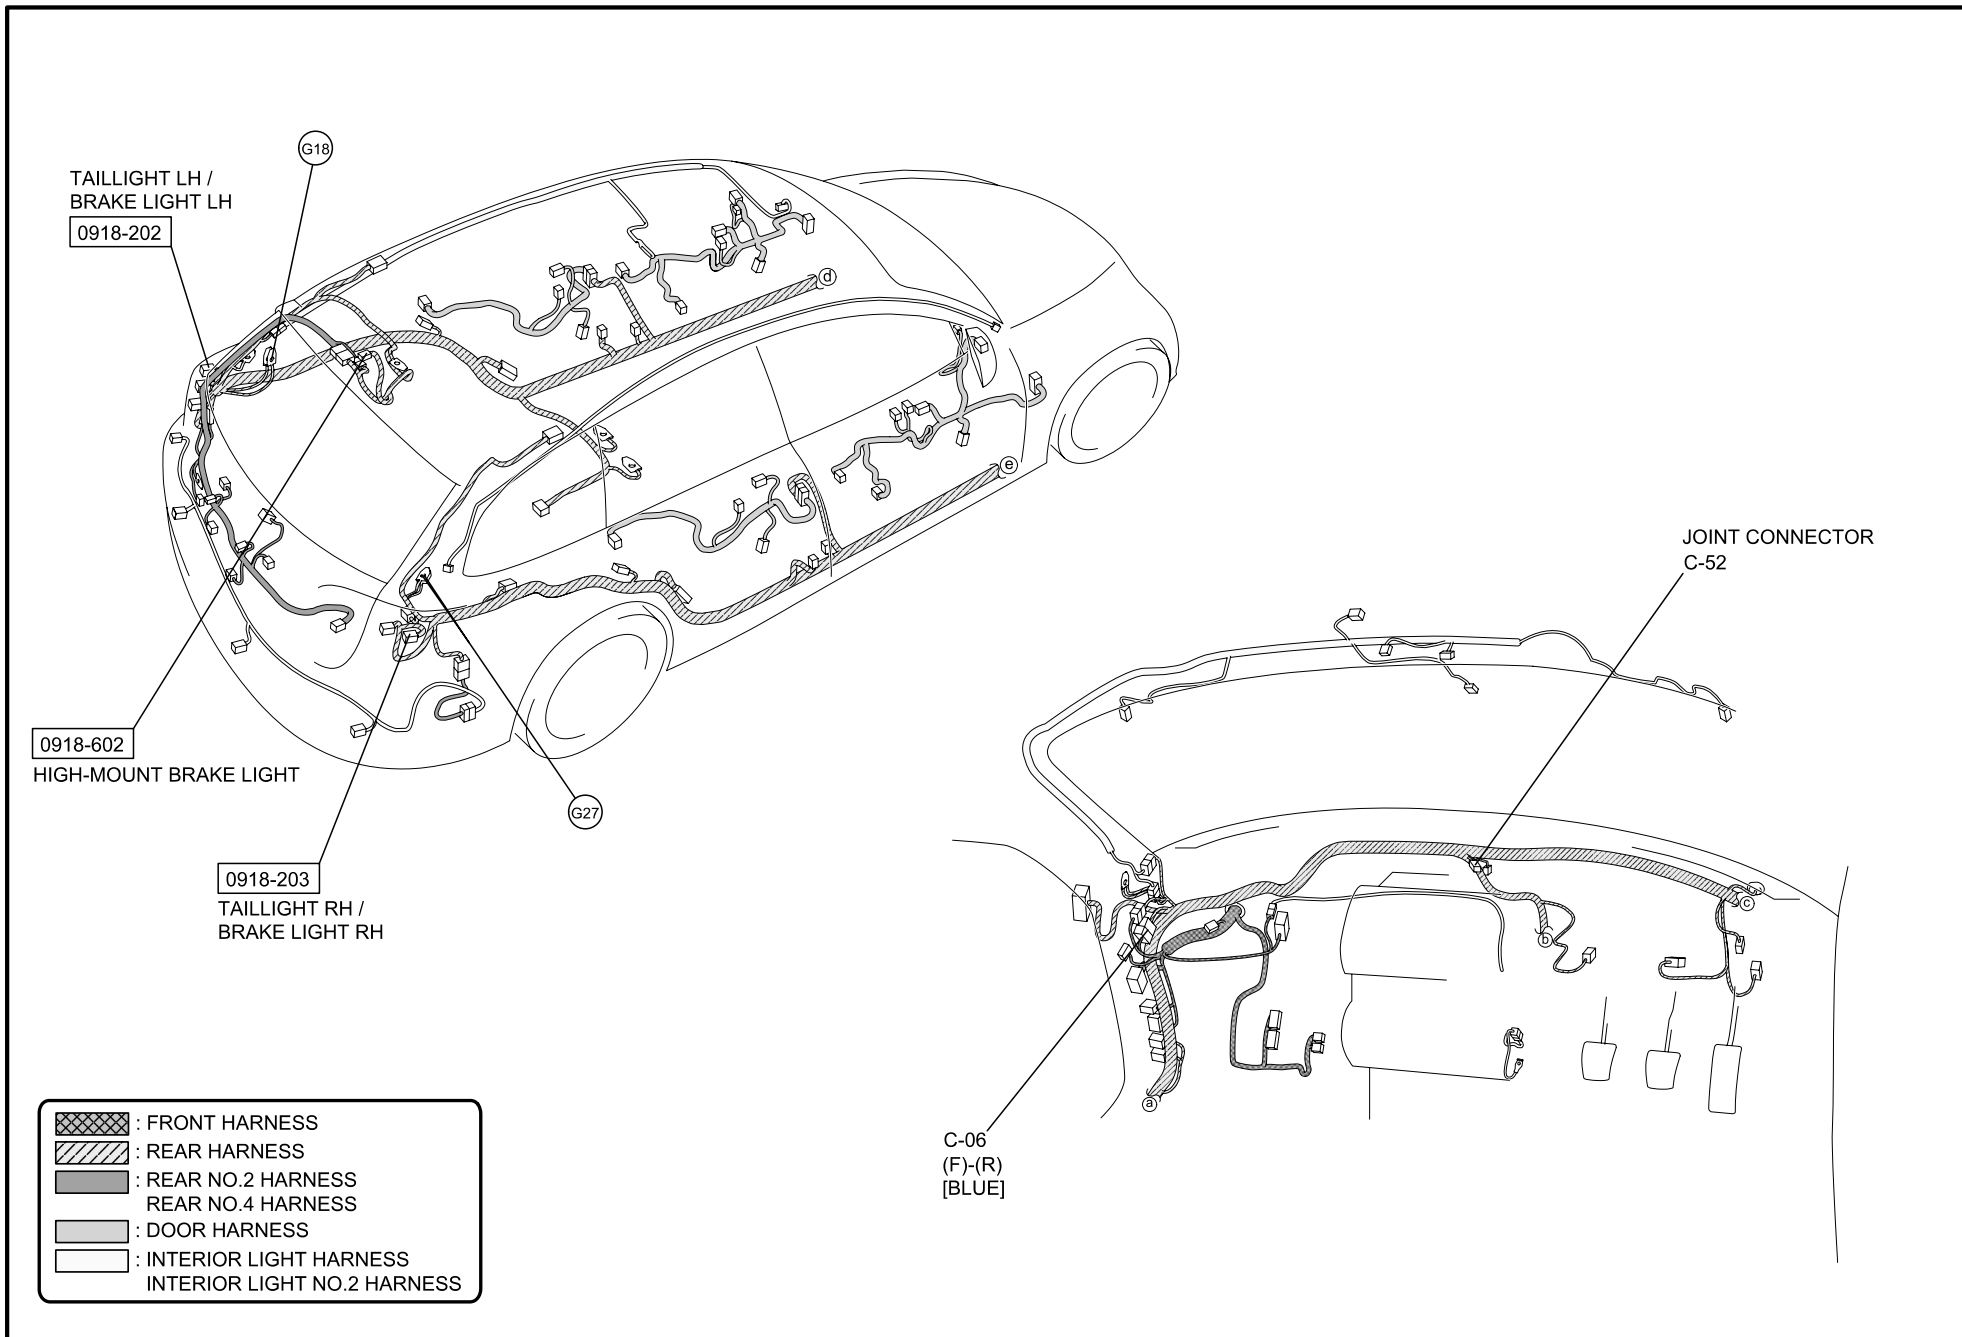


[] : 5HB

266

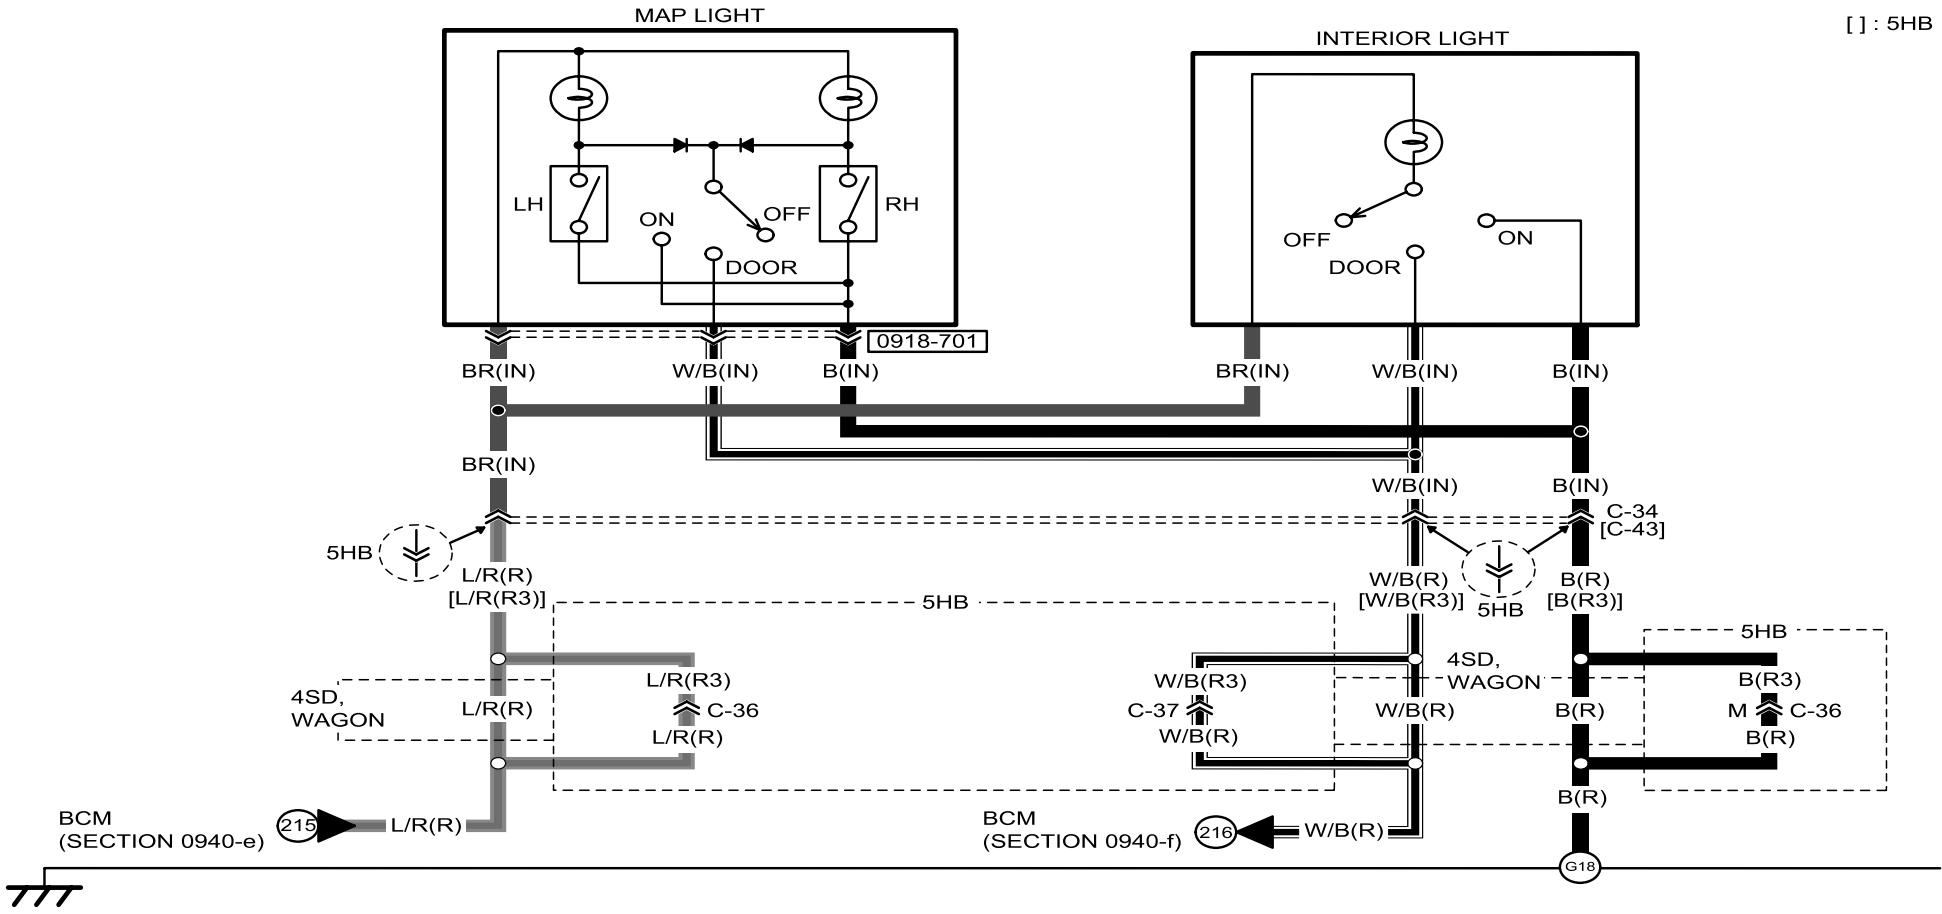

0918-701
MAP LIGHT / DOWN LIGHT

 

0918-701 MAP LIGHT / DOWN LIGHT						

[GRAY]
MAP LIGHT / DOWN LIGHT
0918-701

(R)-(IN)
C-34

G18

[WAGON]

[GRAY]
MAP LIGHT / DOWN LIGHT
0918-701

(R)-(IN)
C-34

G18

[4SD]

[GRAY]
MAP LIGHT / DOWN LIGHT
0918-701







(R3)-(IN)
C-43

(R)-(R3)
C-37


(R)-(R3)
C-36


G18

[5HB]


	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.3 HARNESS
	: REAR NO.4 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS


268

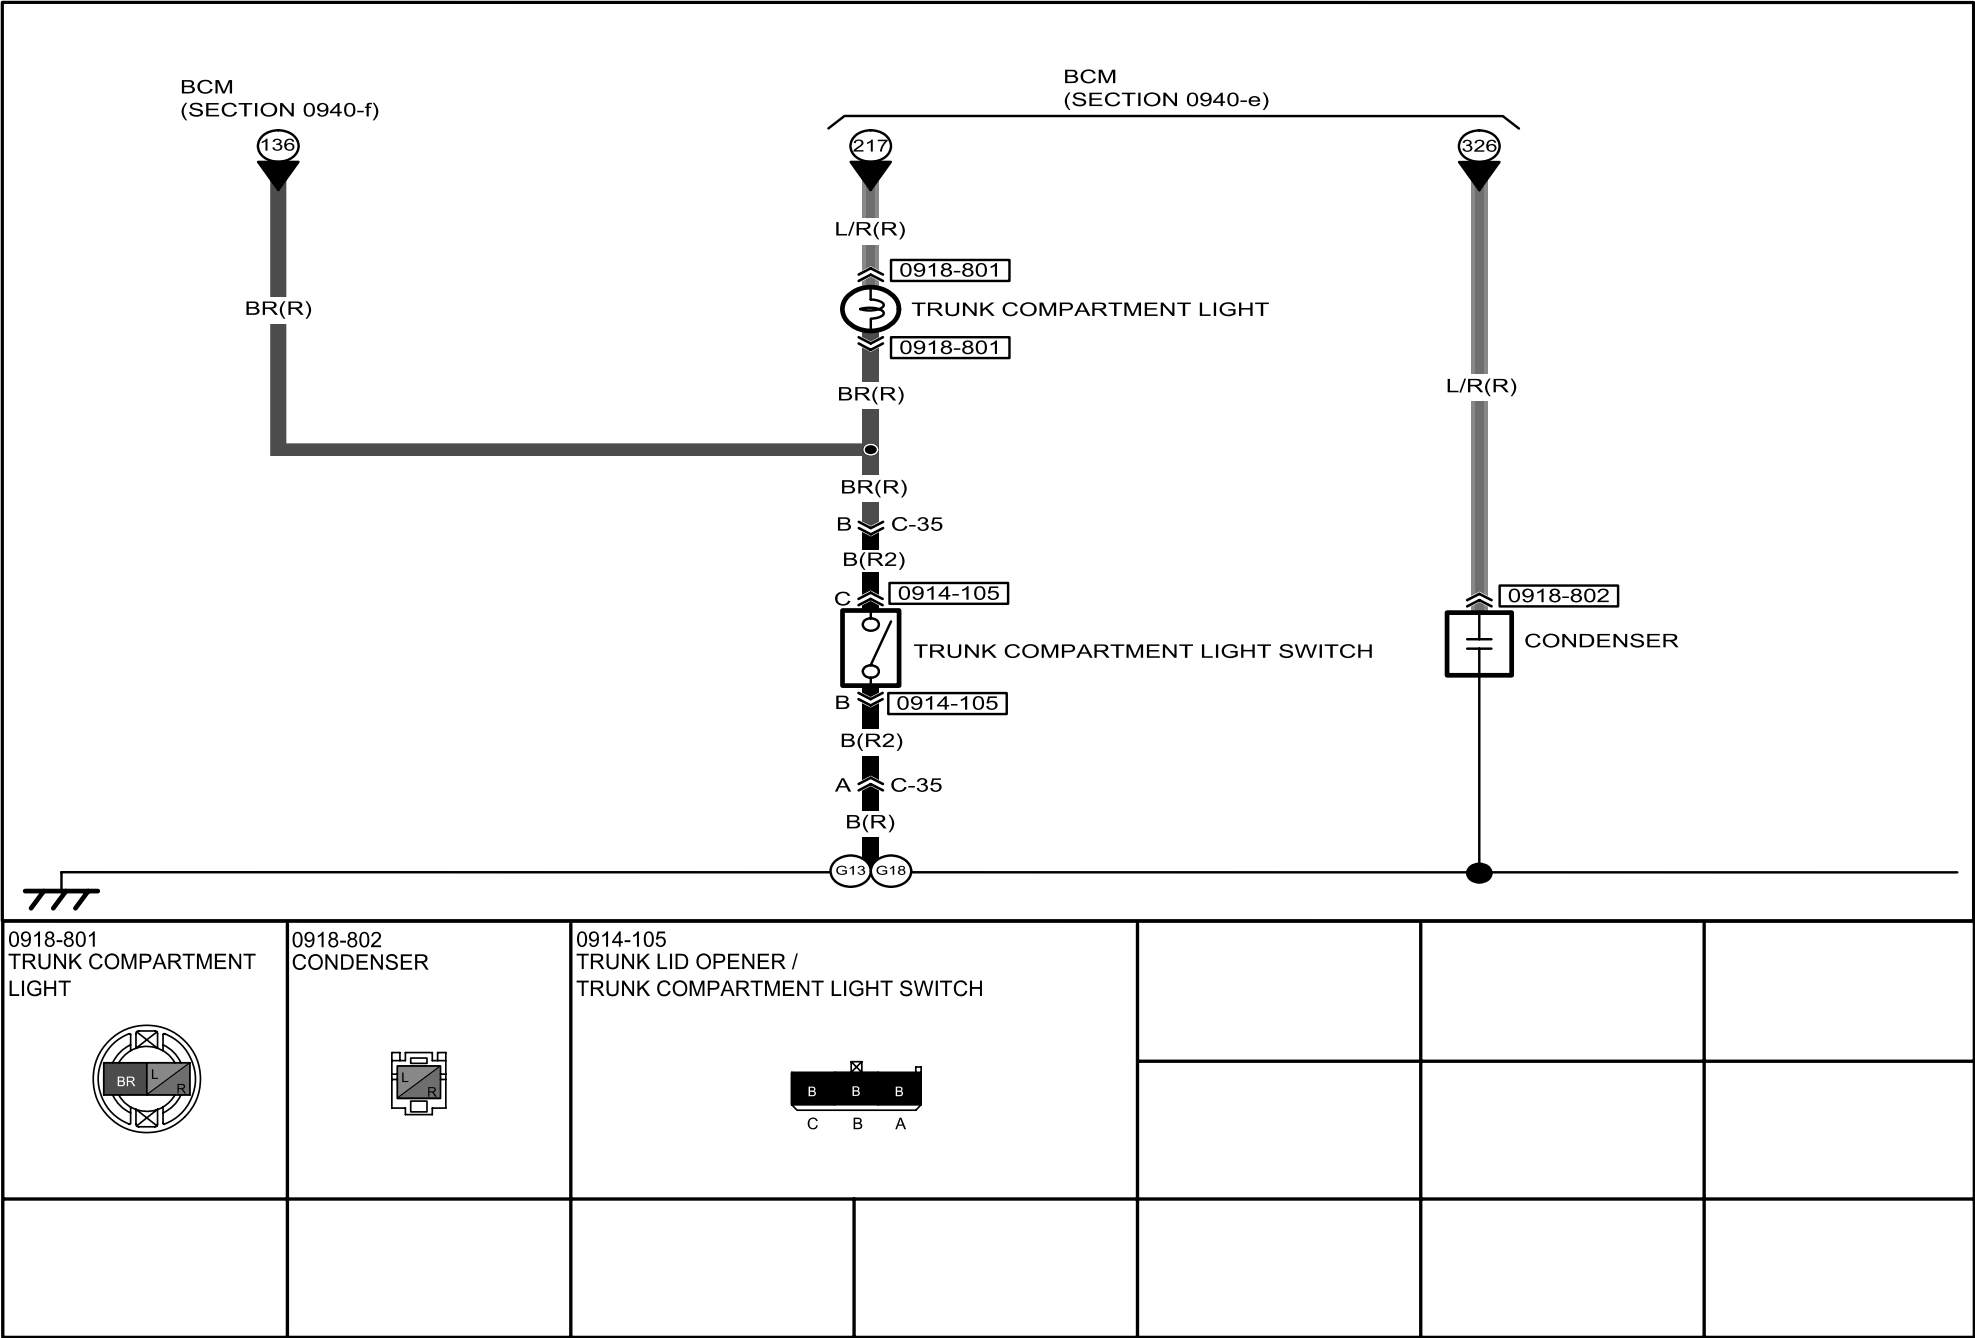


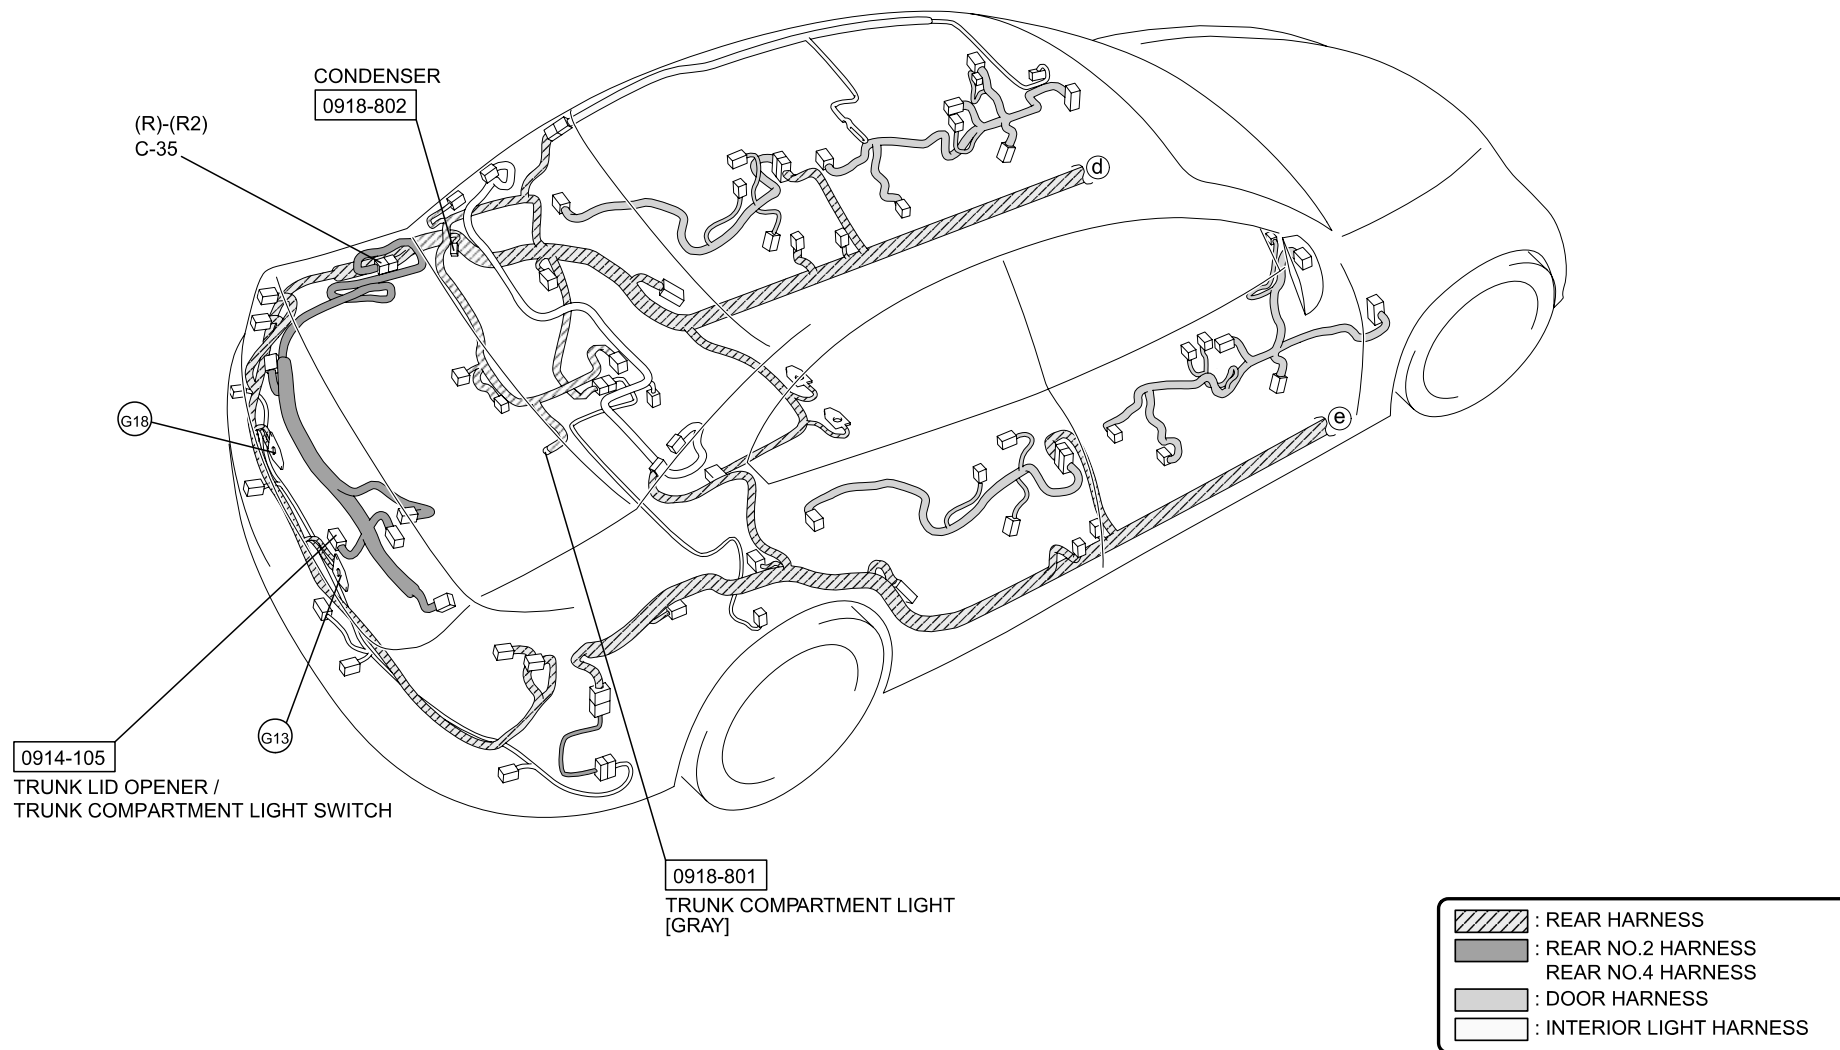


270

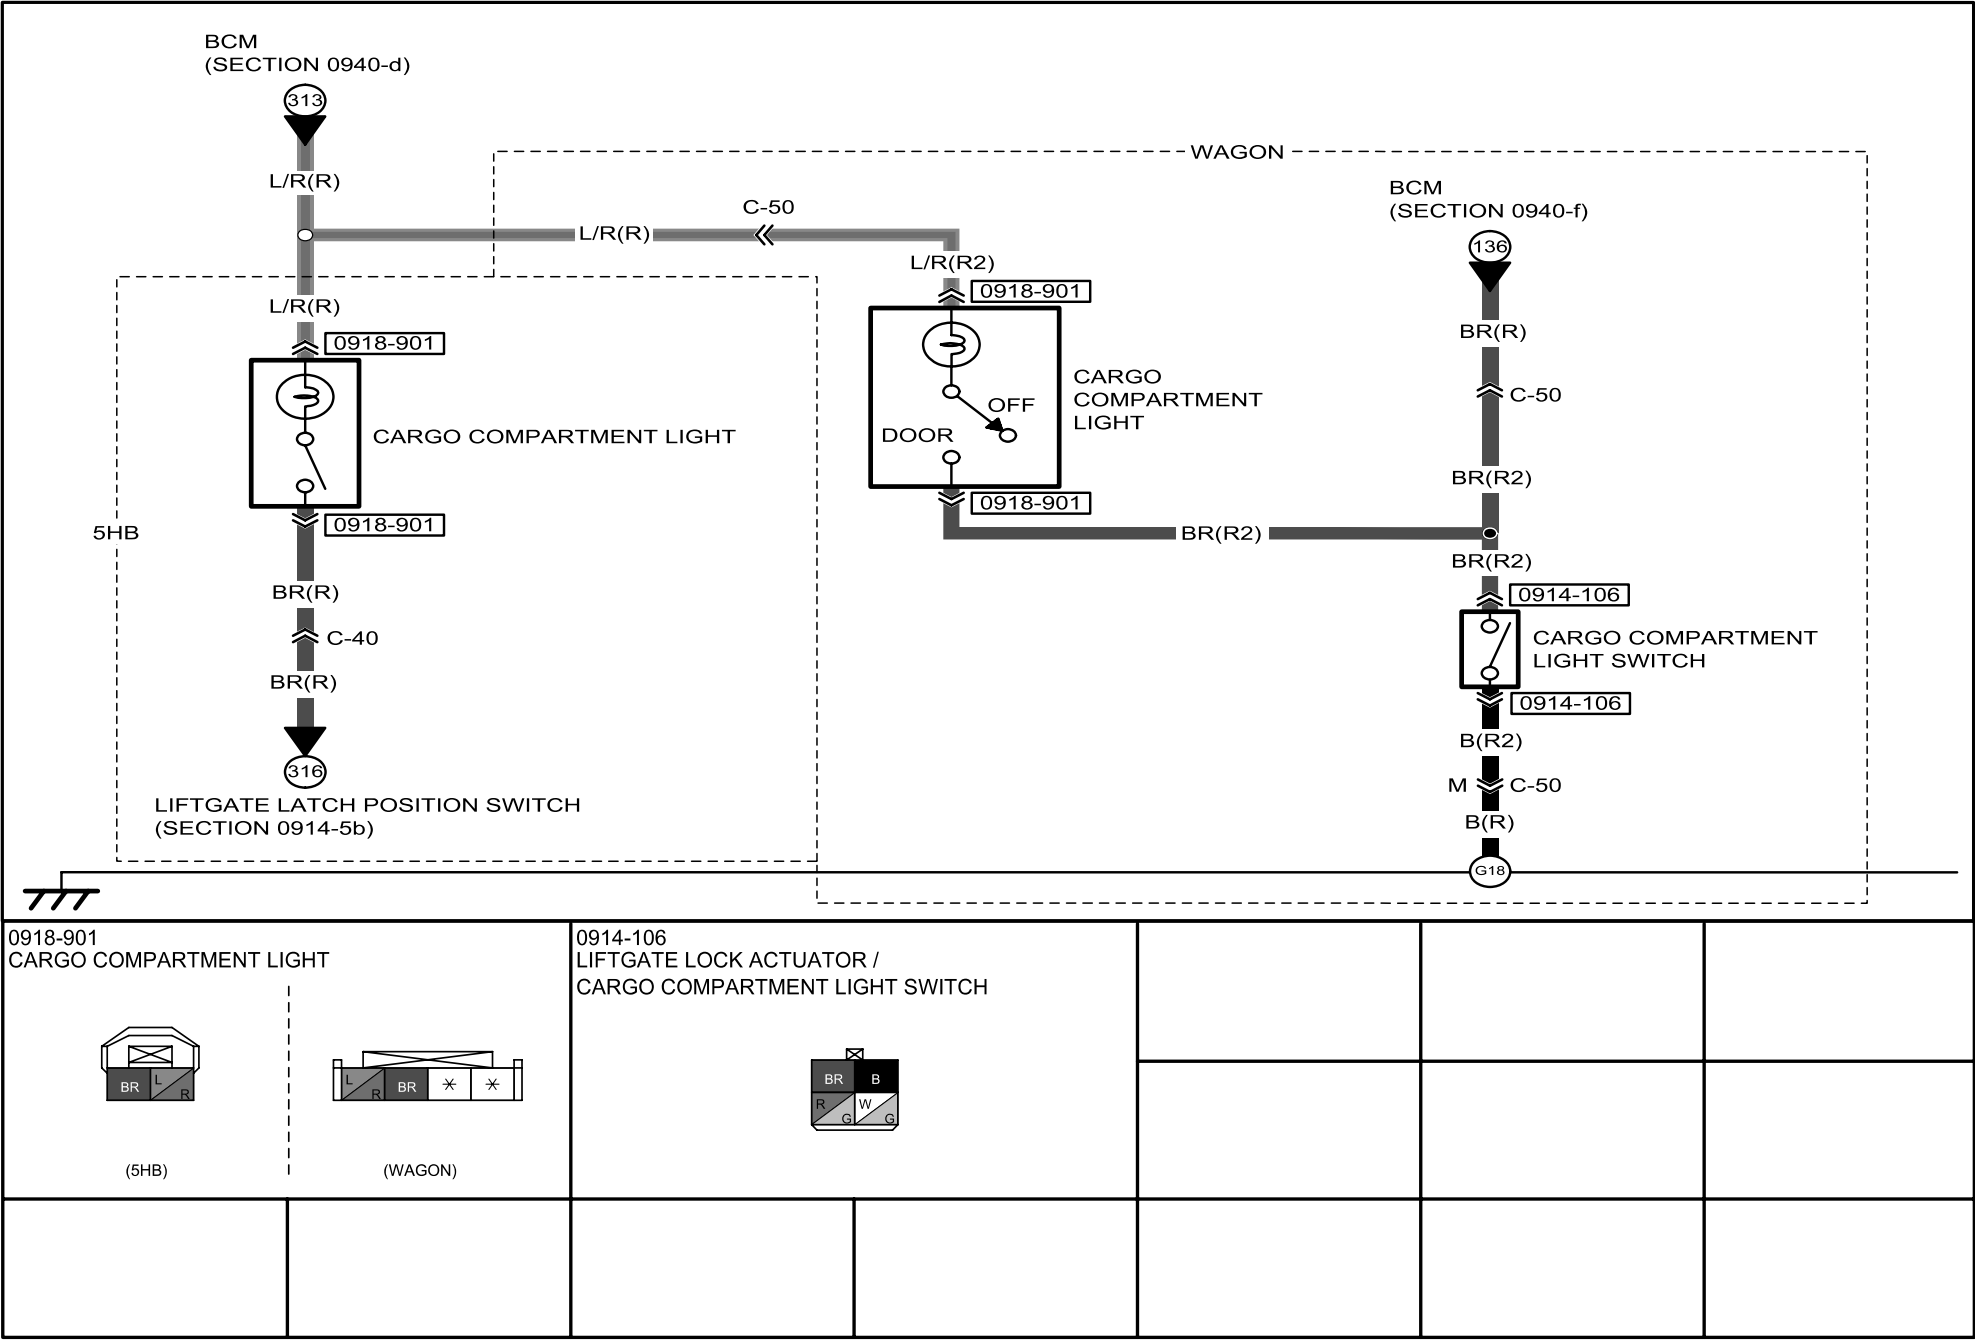

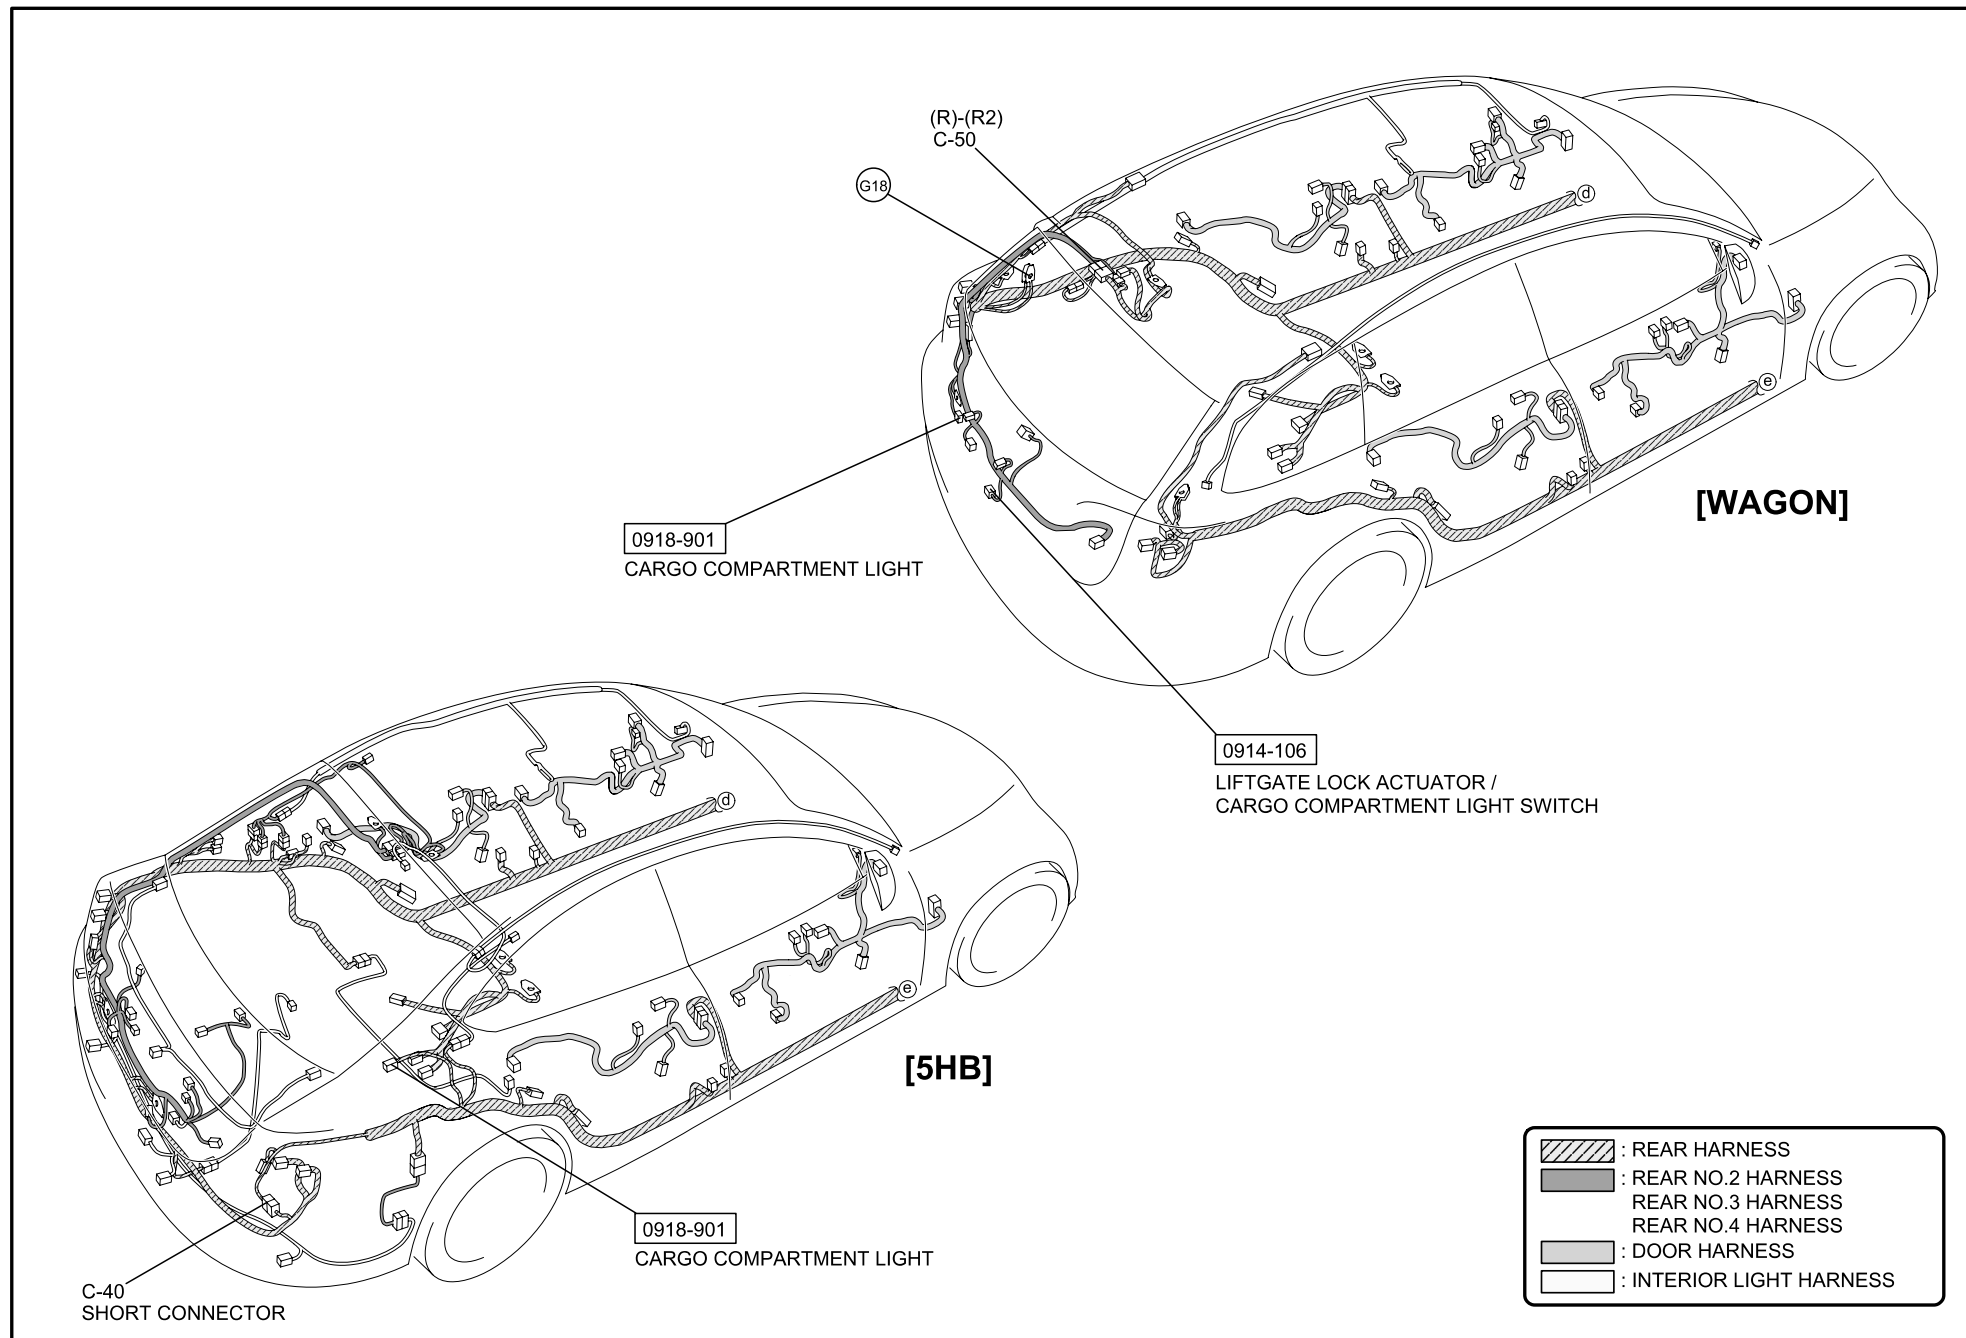


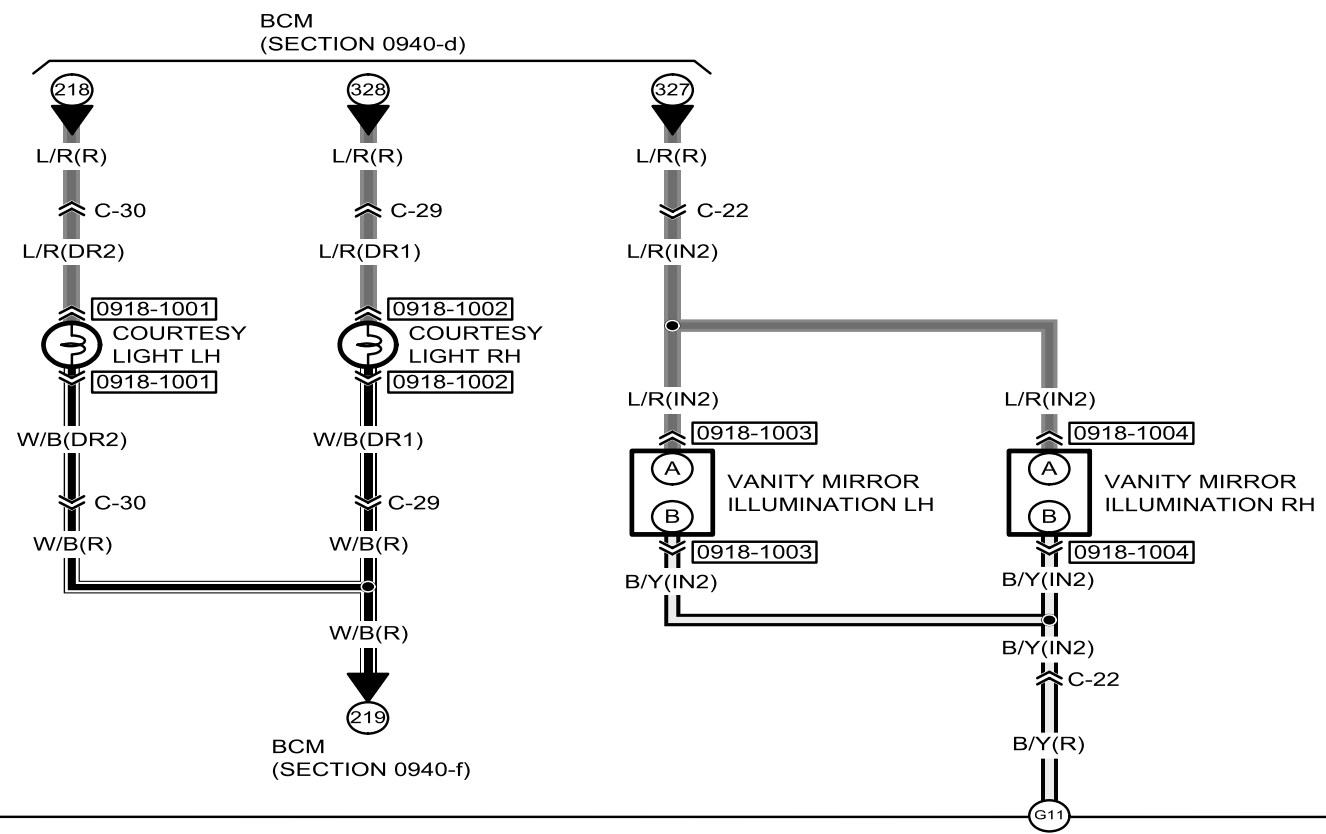

0918-1001
COURTESY LIGHT LH

 

0918-1002
COURTESY LIGHT RH

 



0918-1003
VANITY MIRROR
ILLUMINATION LH




0918-1004
VANITY MIRROR
ILLUMINATION RH




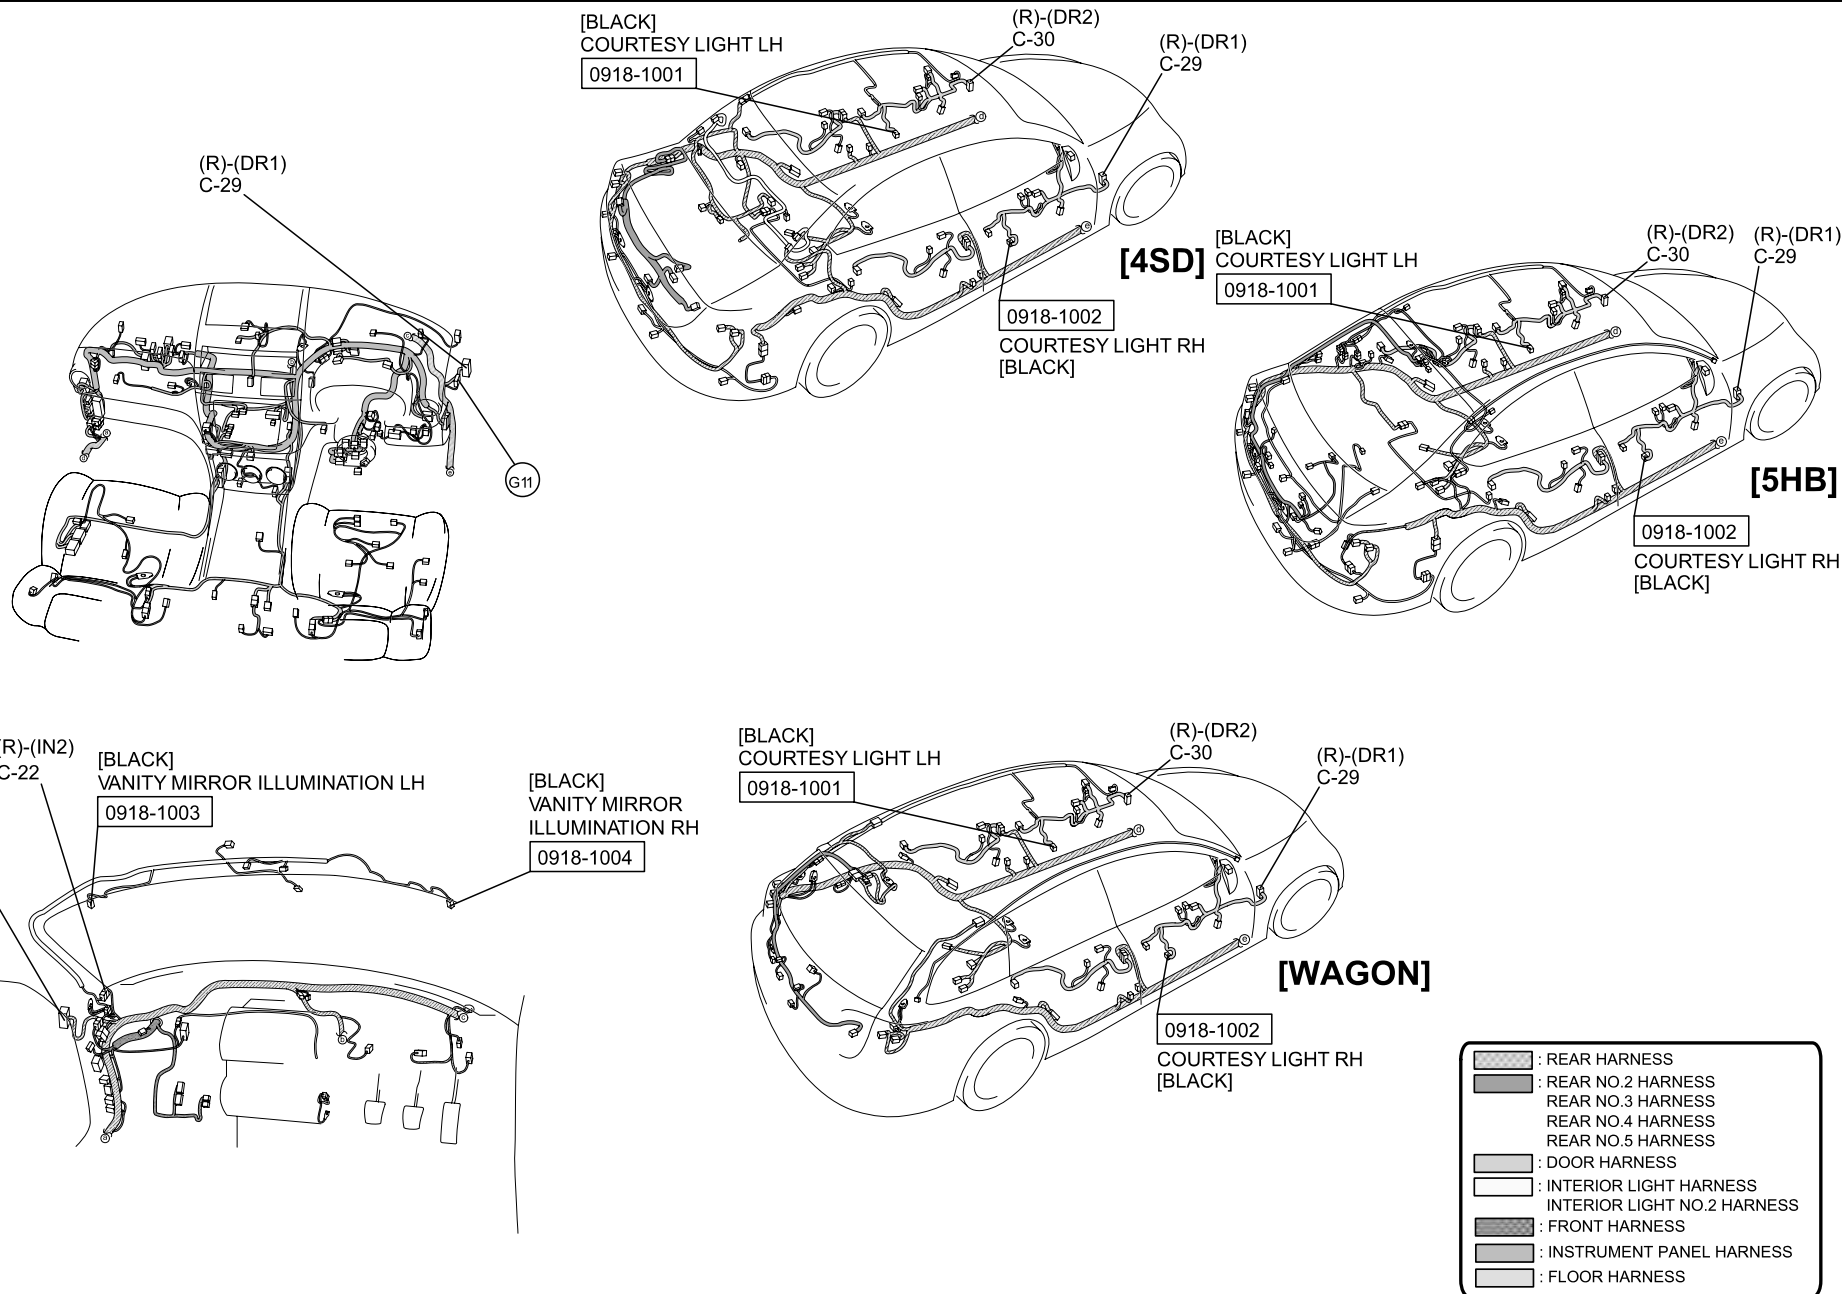

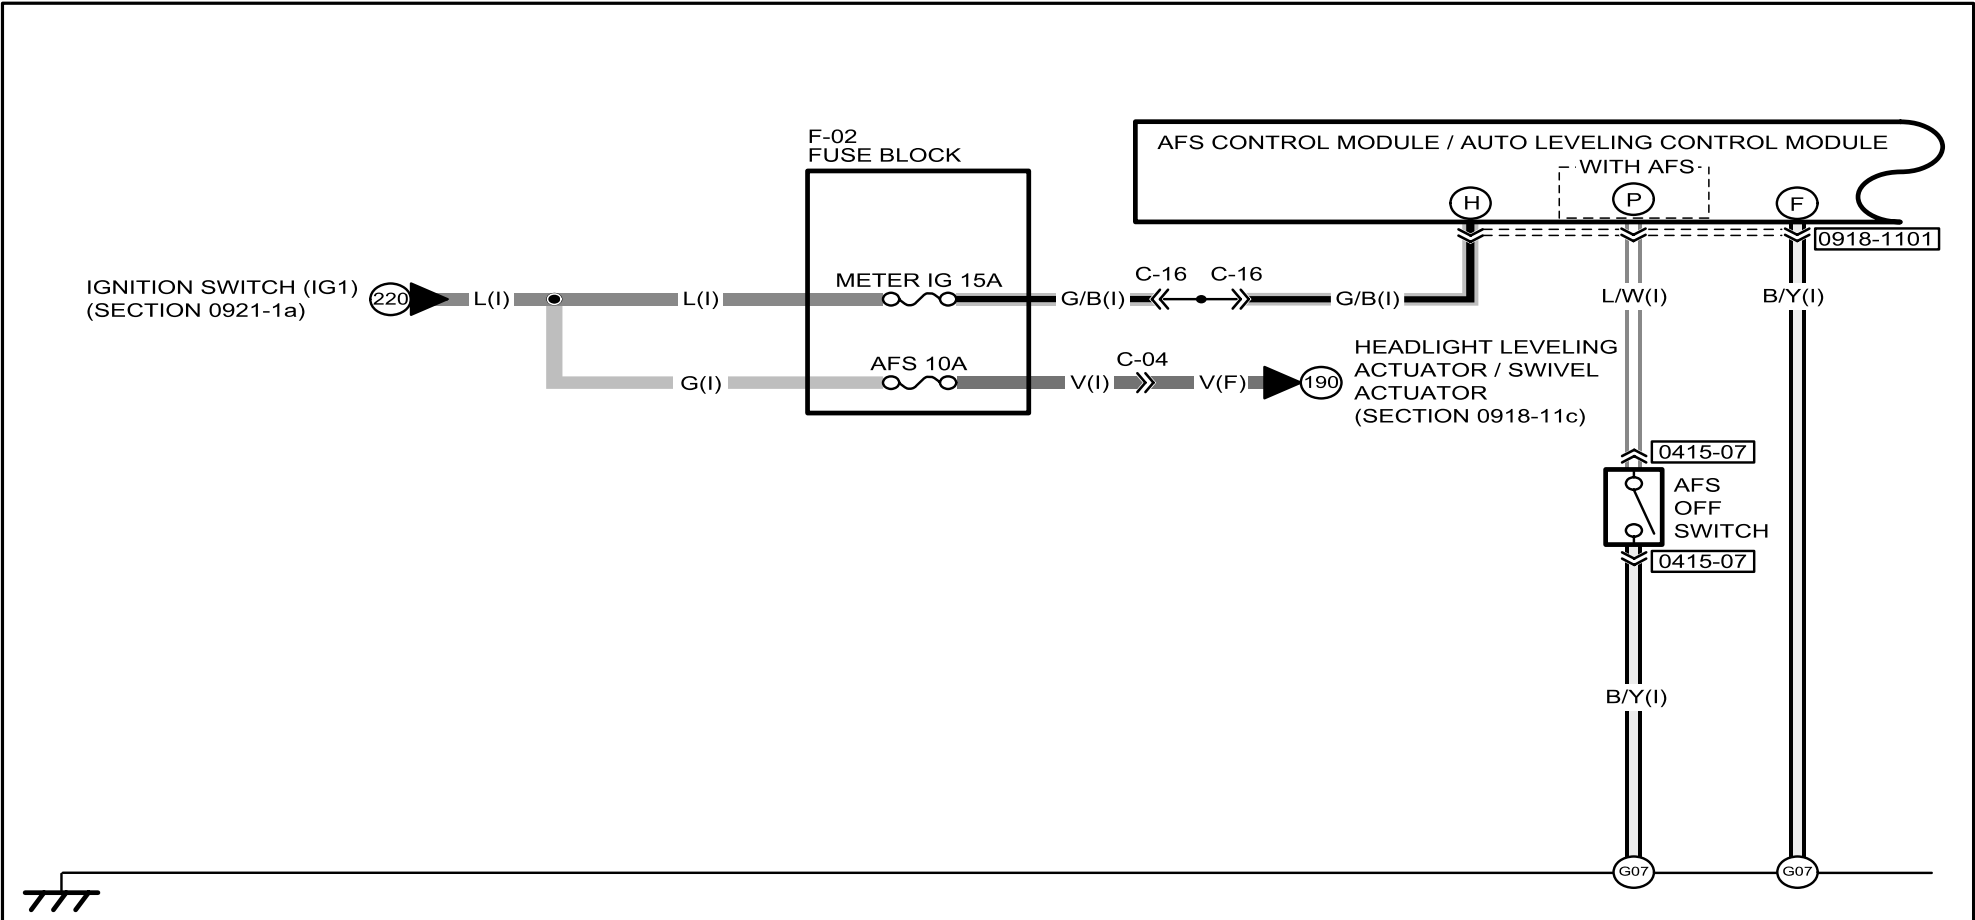


<p>0918-1101 AFS CONTROL MODULE / AUTO LEVELING CONTROL MODULE</p>	<p>0415-07 DSC OFF SWITCH / AFS OFF SWITCH / DSC OFF SWITCH ILLUMINATION / AFS OFF SWITCH ILLUMINATION</p>			
	<p>W R B : NOT USED</p>			

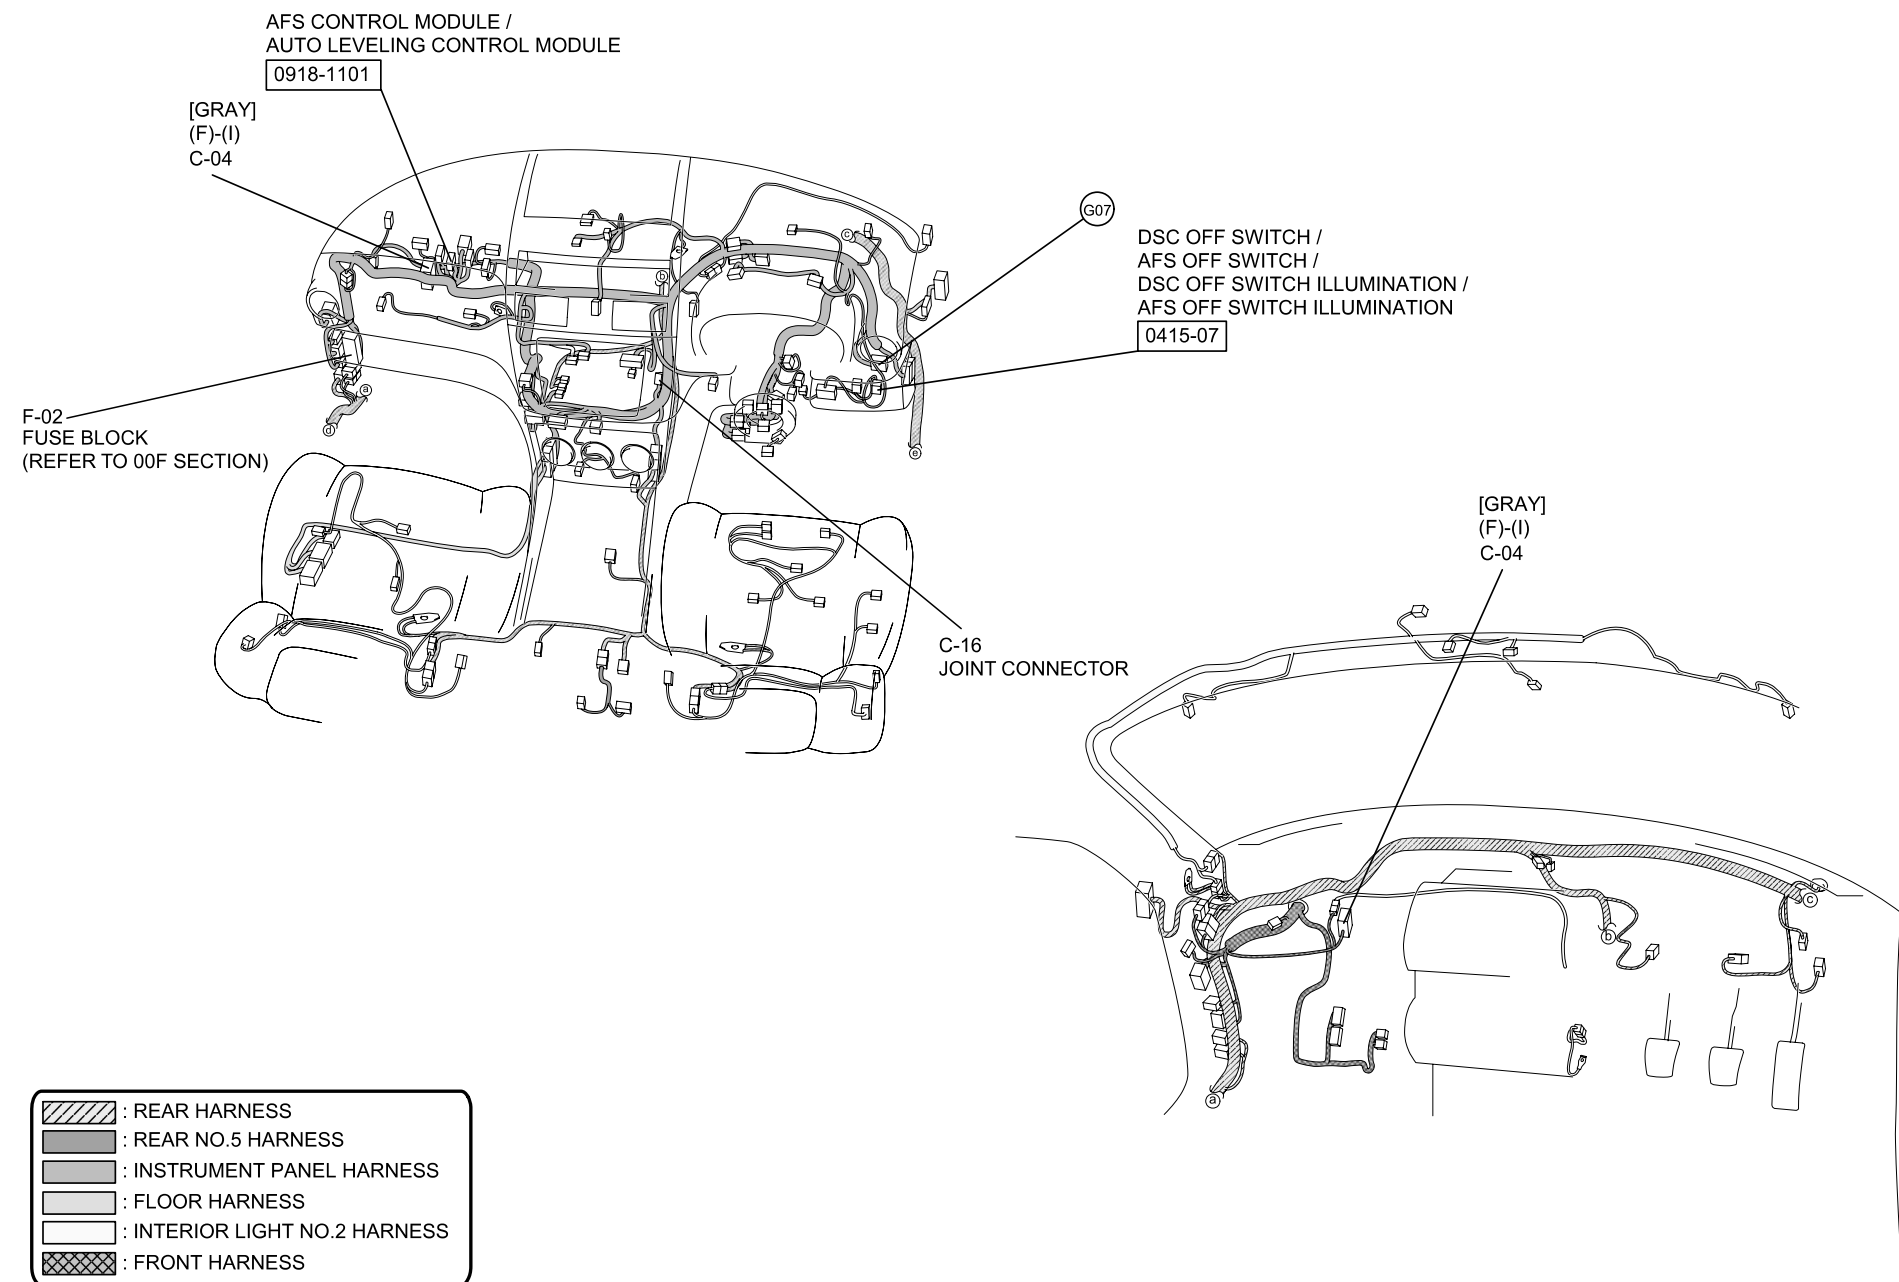


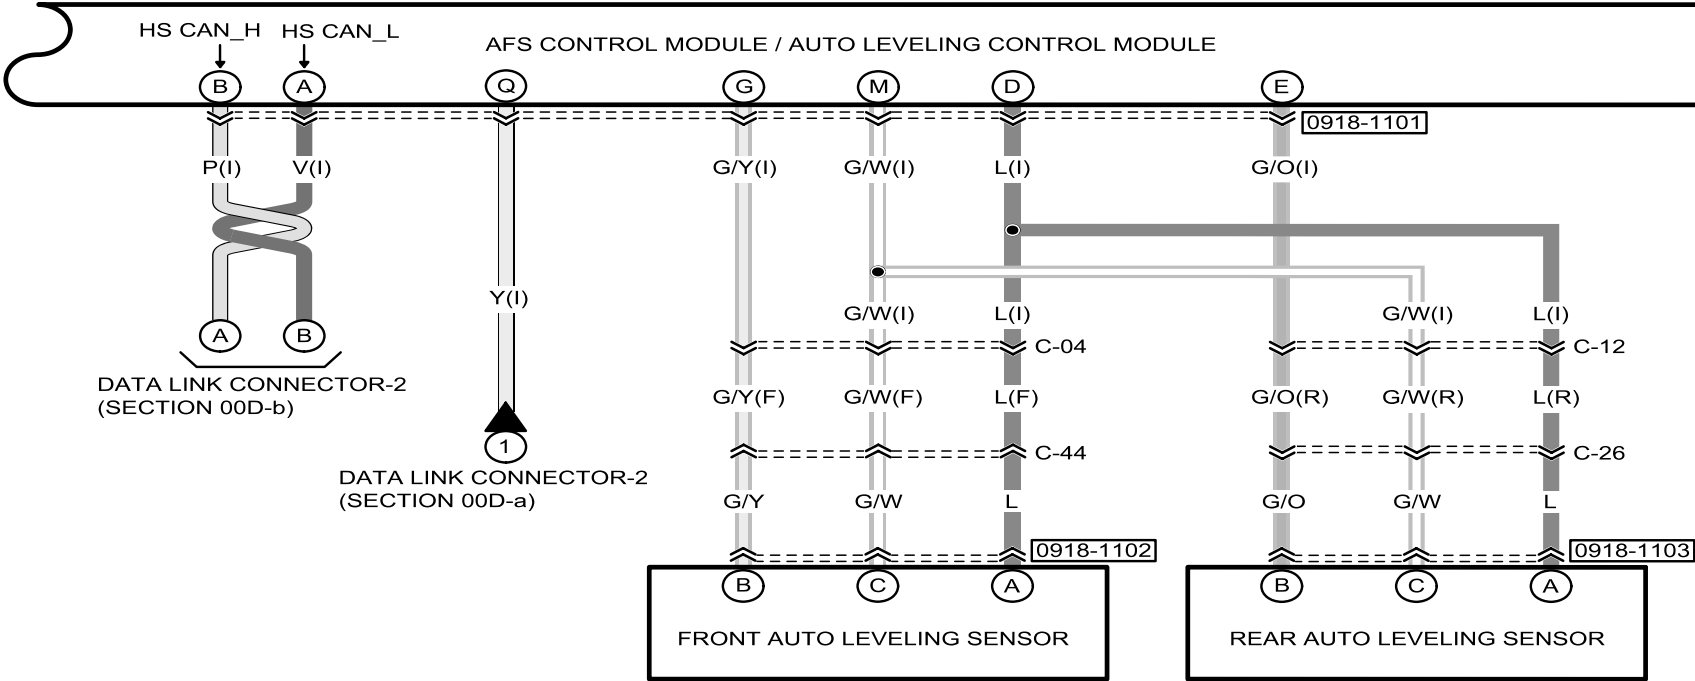


0918-1101
AFS CONTROL MODULE /
AUTO LEVELING CONTROL MODULE

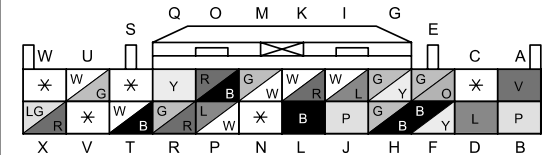



0918-1102
FRONT AUTO LEVELING SENSOR

 


0918-1103
REAR AUTO LEVELING SENSOR

 

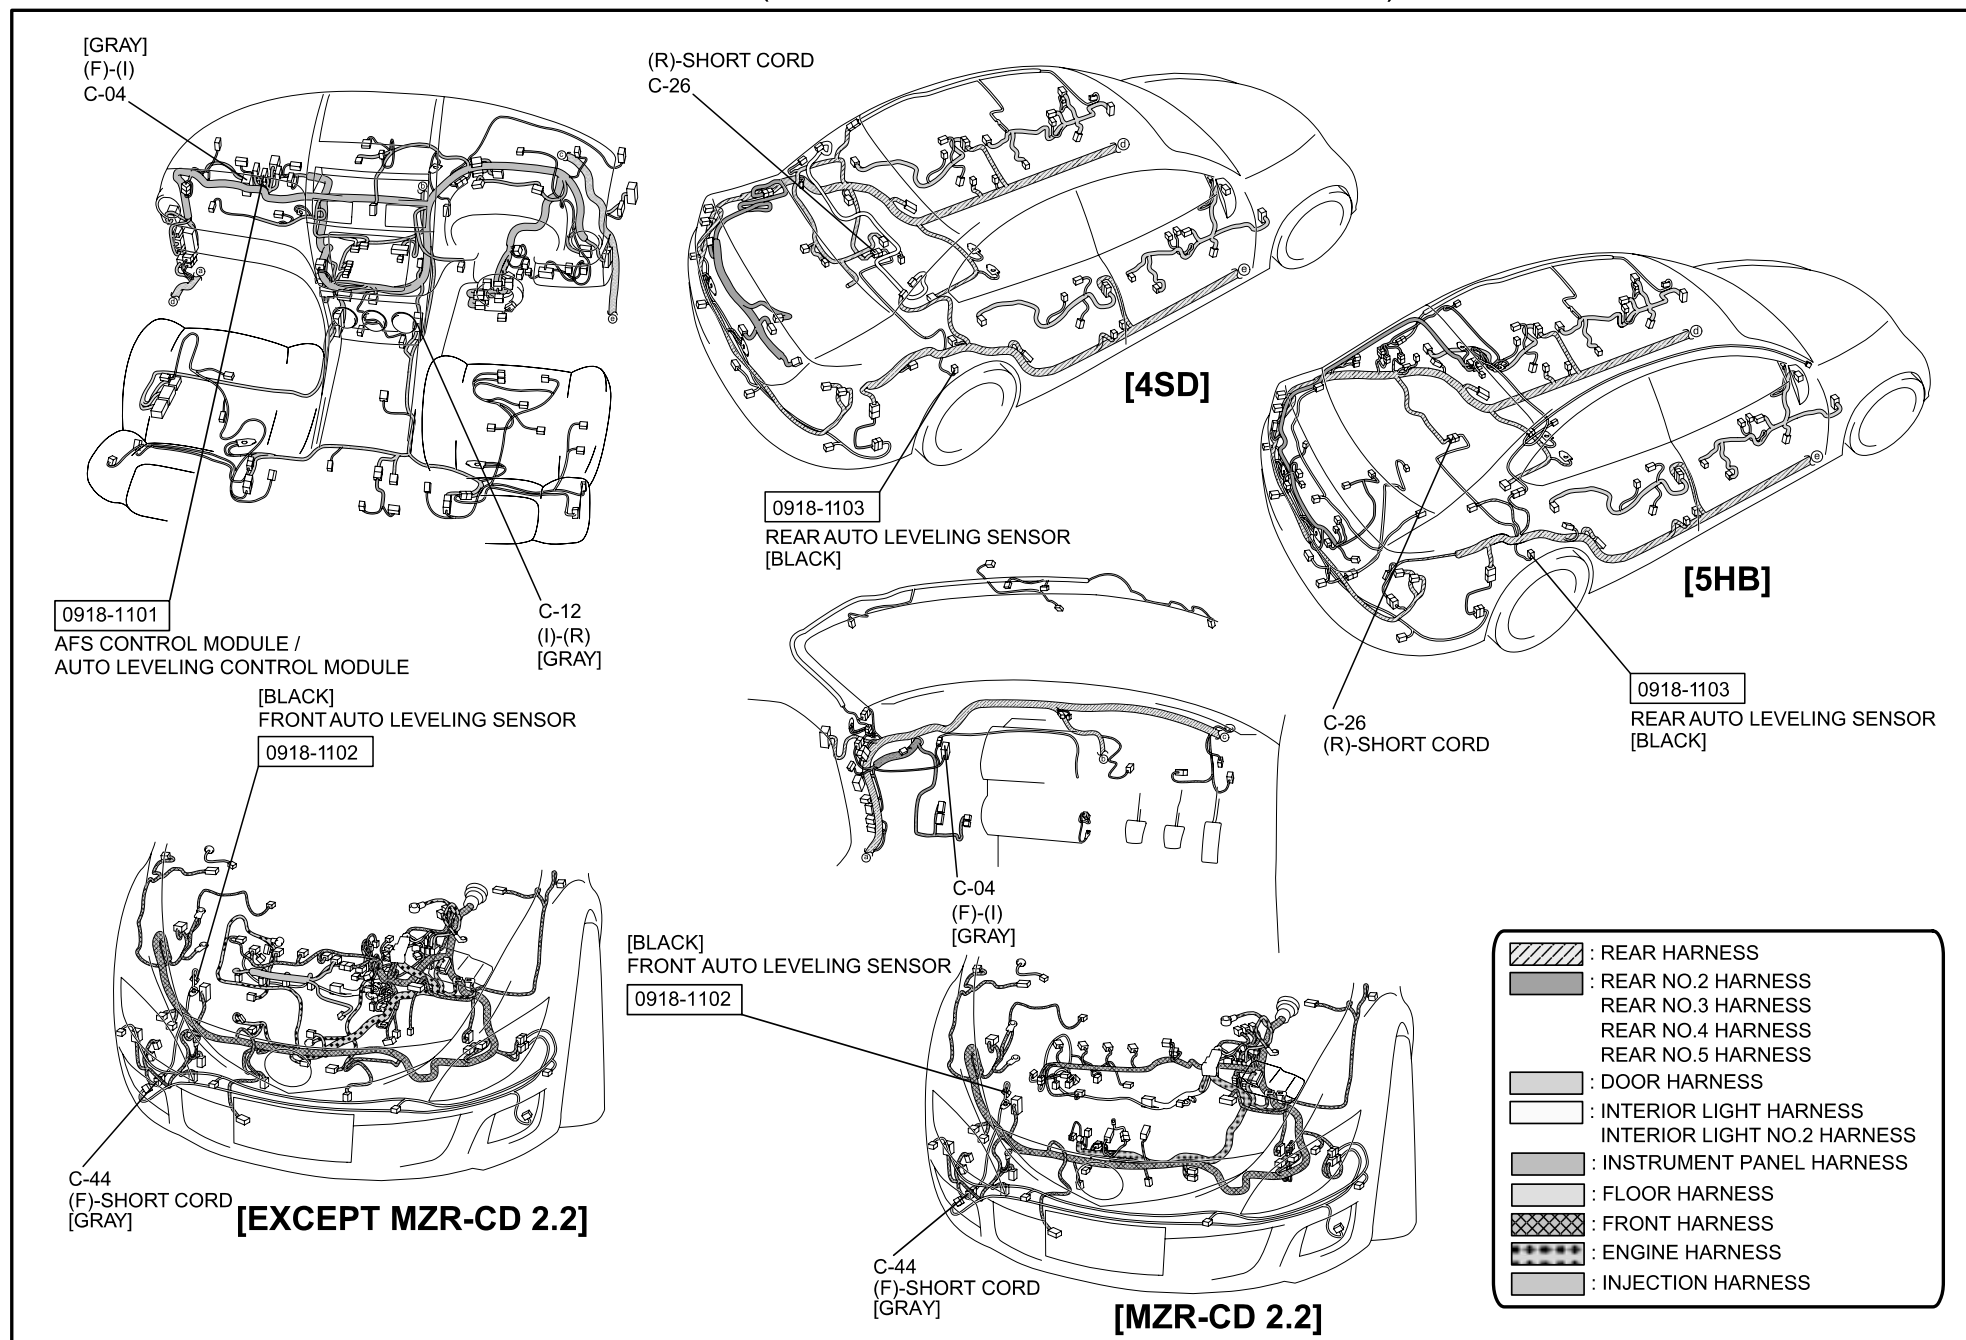


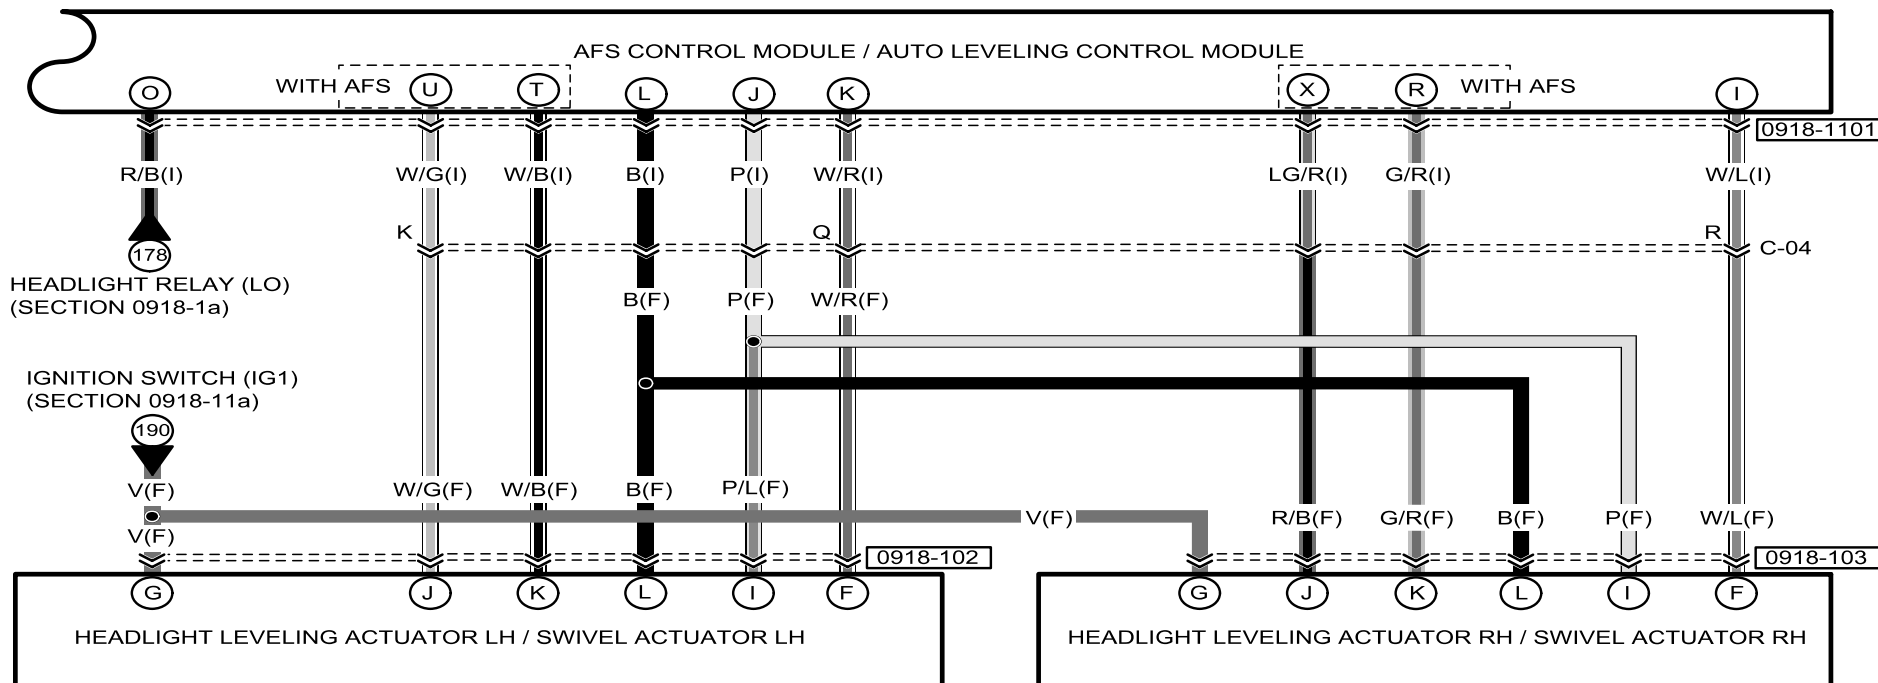


0918-1101
AFS CONTROL MODULE /
AUTO LEVELING CONTROL MODULE

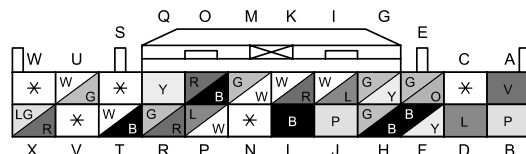

0918-102
FRONT COMBINATION LIGHT LH /
HEADLIGHT LEVELING ACTUATOR LH /
SWIVEL ACTUATOR LH

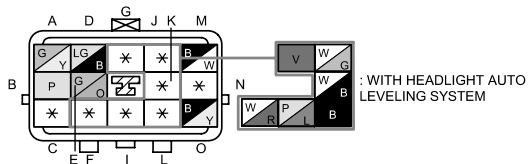


0918-103
FRONT COMBINATION LIGHT RH /
HEADLIGHT LEVELING ACTUATOR RH /
SWIVEL ACTUATOR RH

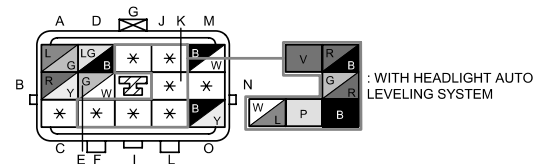

[GRAY]
FRONT COMBINATION LIGHT RH /
HEADLIGHT LEVELING ACTUATOR RH /
SWIVEL ACTUATOR RH


0918-103

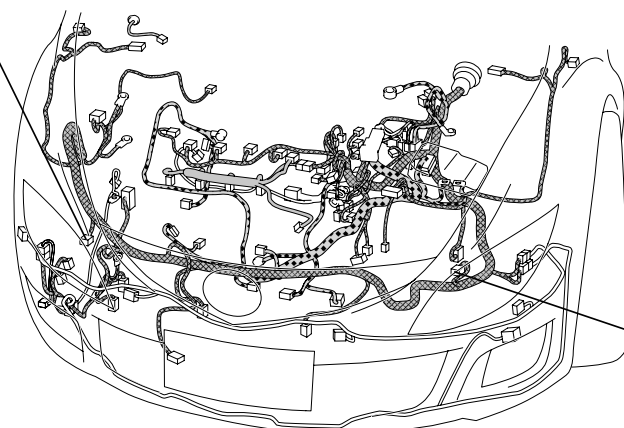

[EXCEPT MZR-CD 2.2]

[GRAY]
FRONT COMBINATION LIGHT RH /
HEADLIGHT LEVELING ACTUATOR RH /
SWIVEL ACTUATOR RH

0918-103

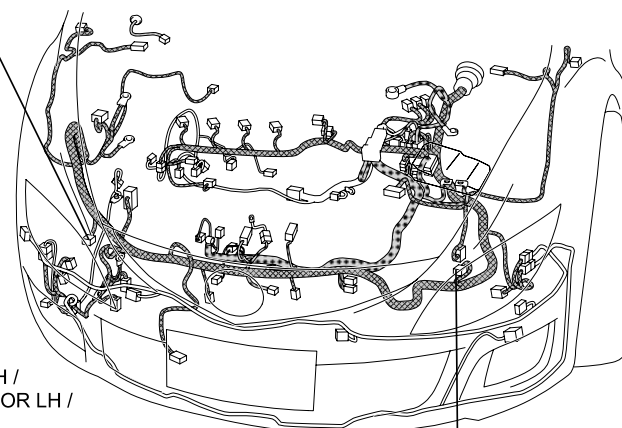

[MZR-CD 2.2]

0918-102

FRONT COMBINATION LIGHT LH /
HEADLIGHT LEVELING ACTUATOR LH /
SWIVEL ACTUATOR LH
[GRAY]


0918-102

FRONT COMBINATION LIGHT LH /
HEADLIGHT LEVELING ACTUATOR LH /
SWIVEL ACTUATOR LH
[GRAY]


AFS CONTROL MODULE /
AUTO LEVELING CONTROL MODULE

0918-1101


[GRAY]
(F)-(I)
C-04


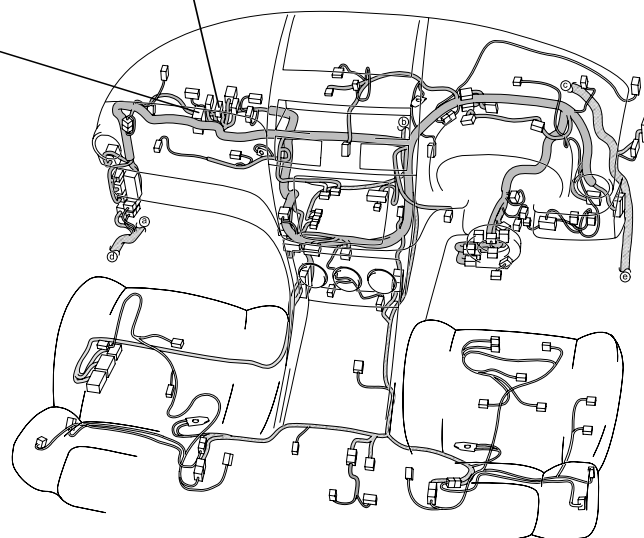



	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

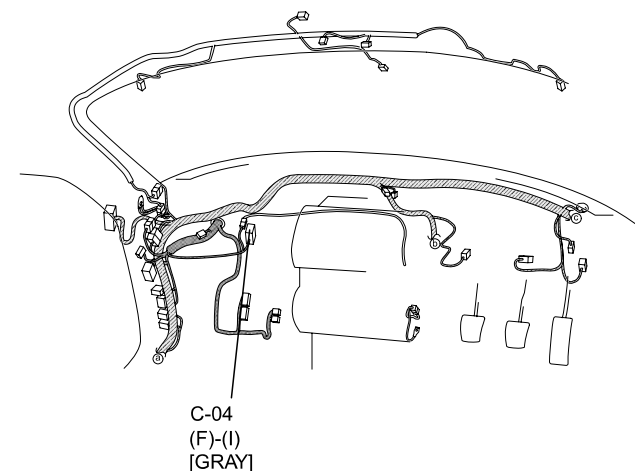


C-04
(F)-(I)
[GRAY]

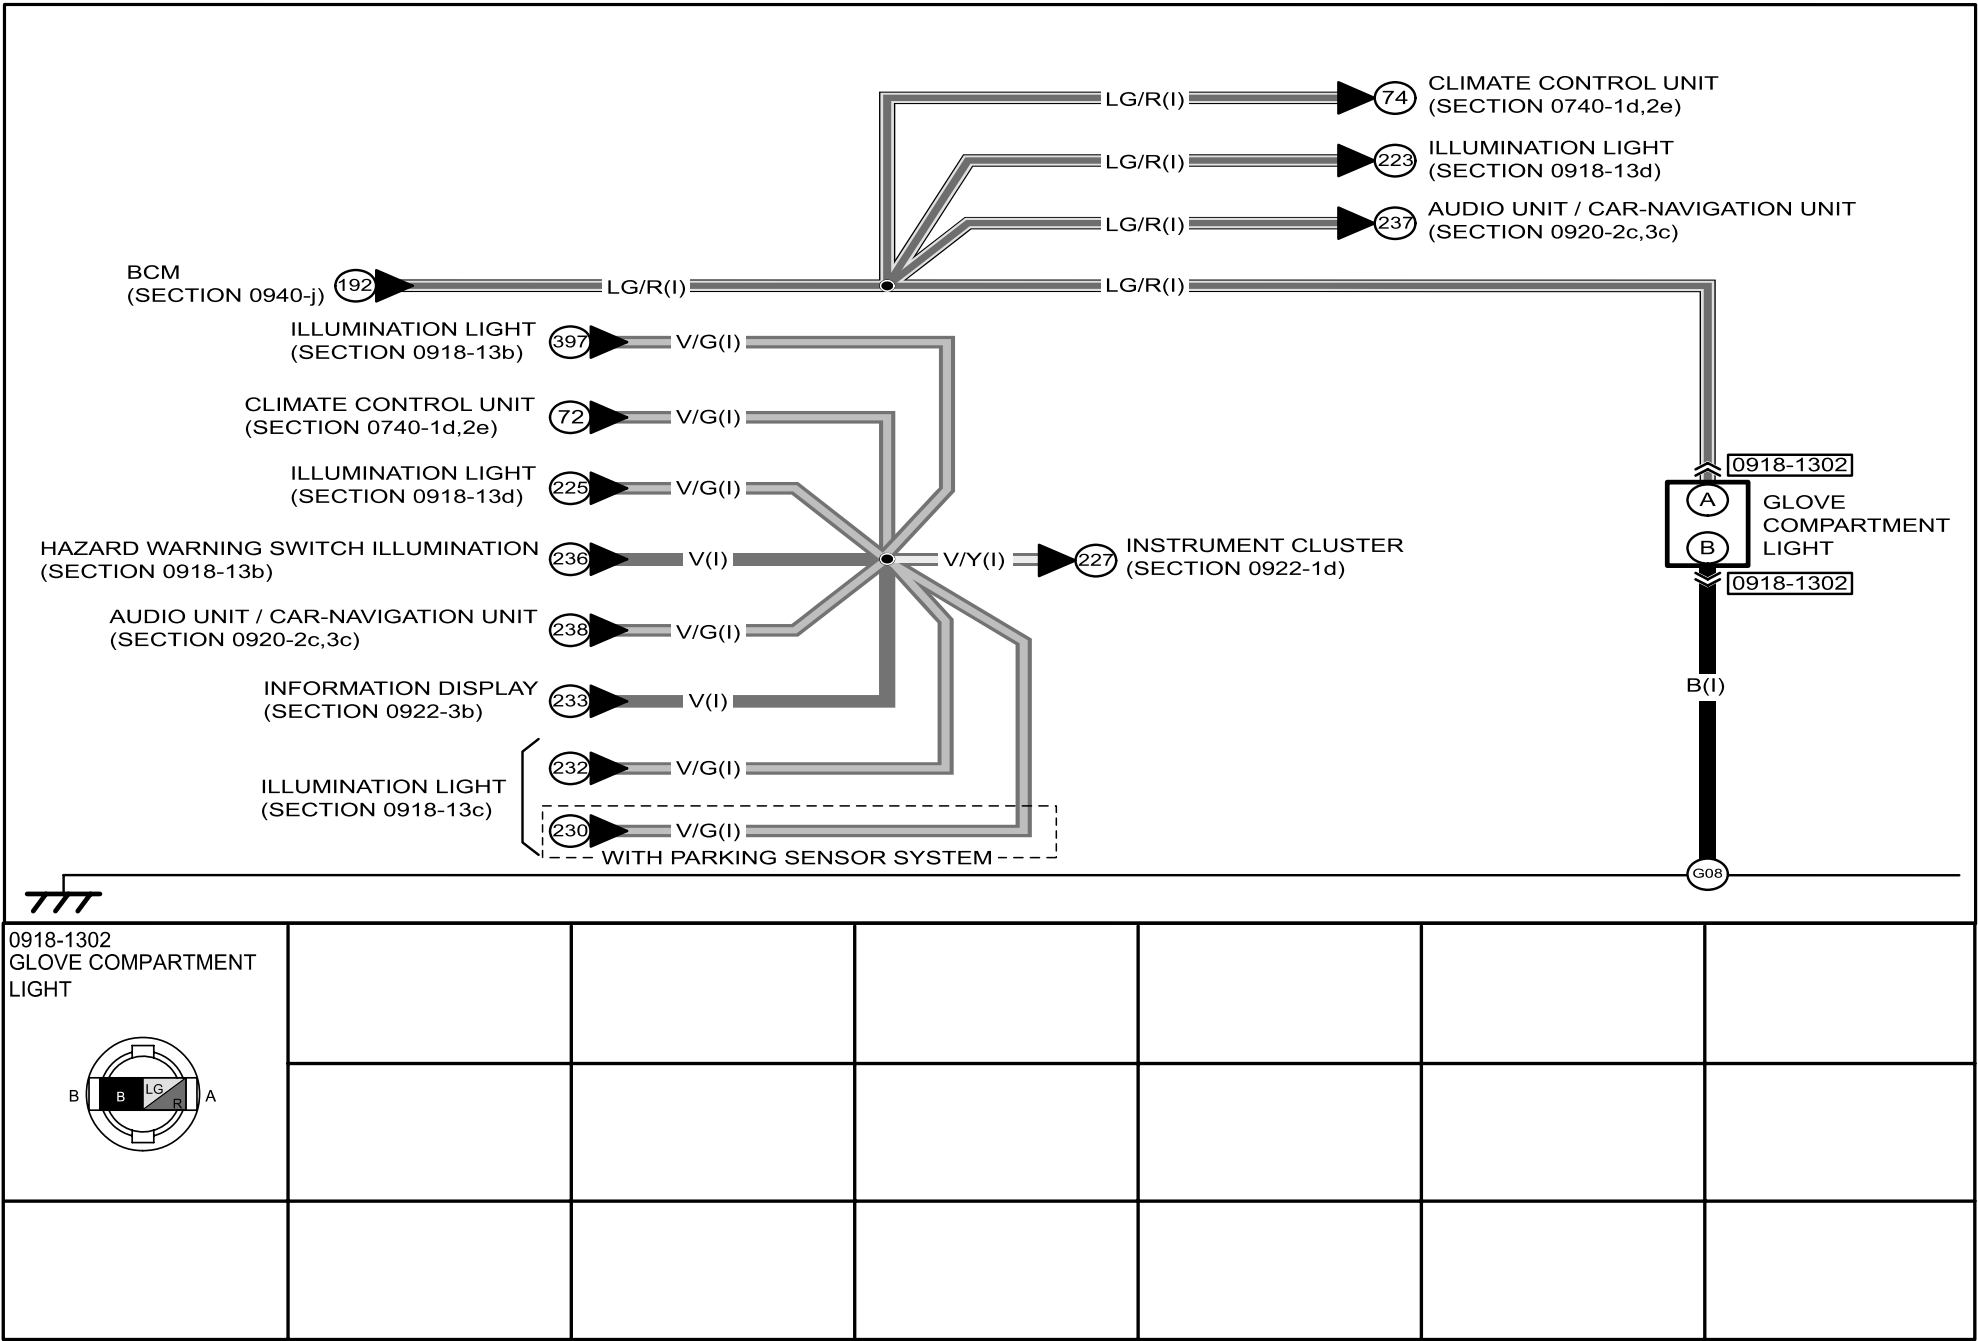

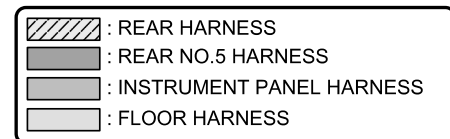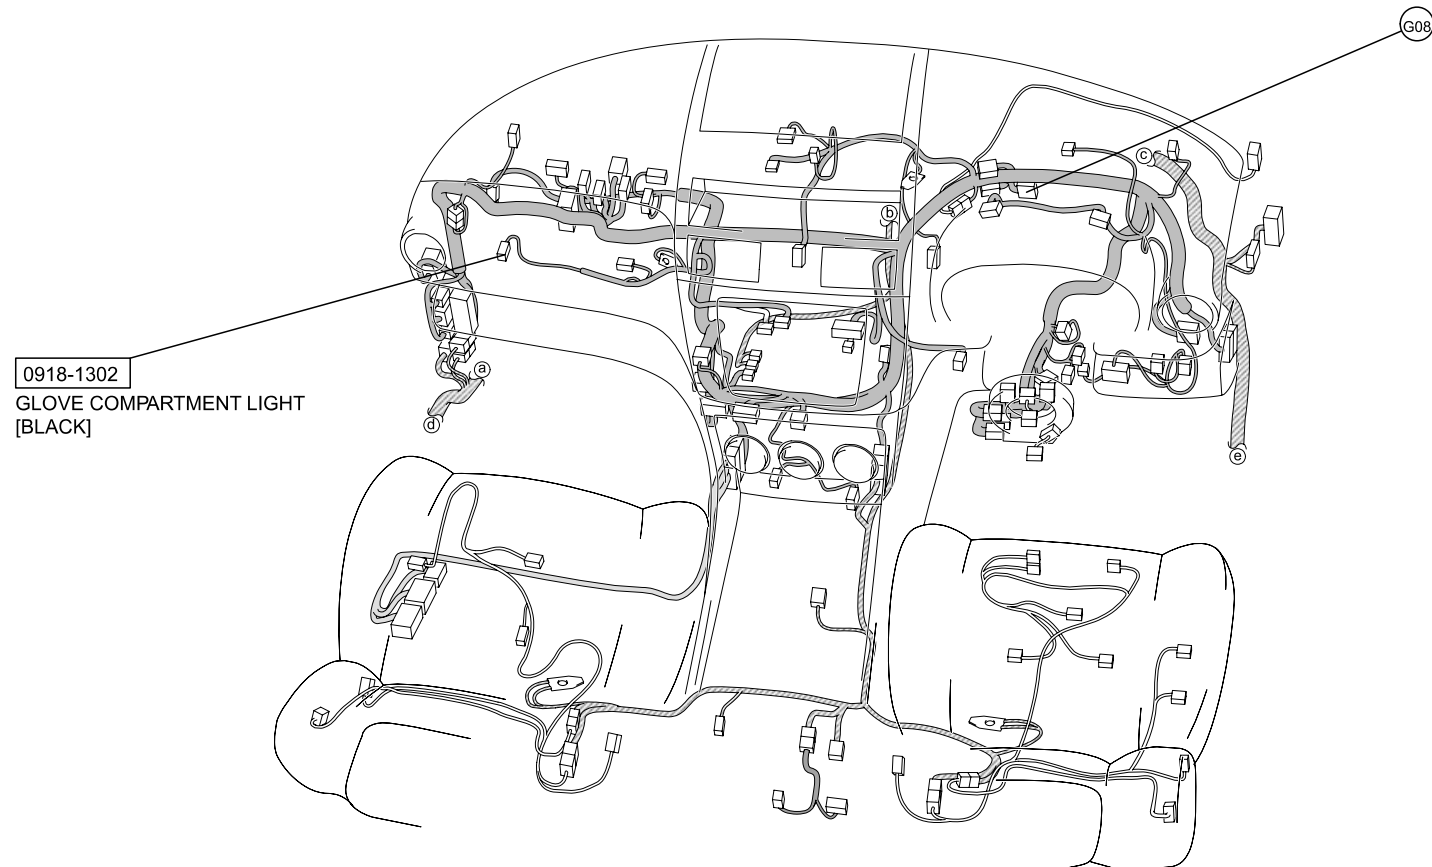


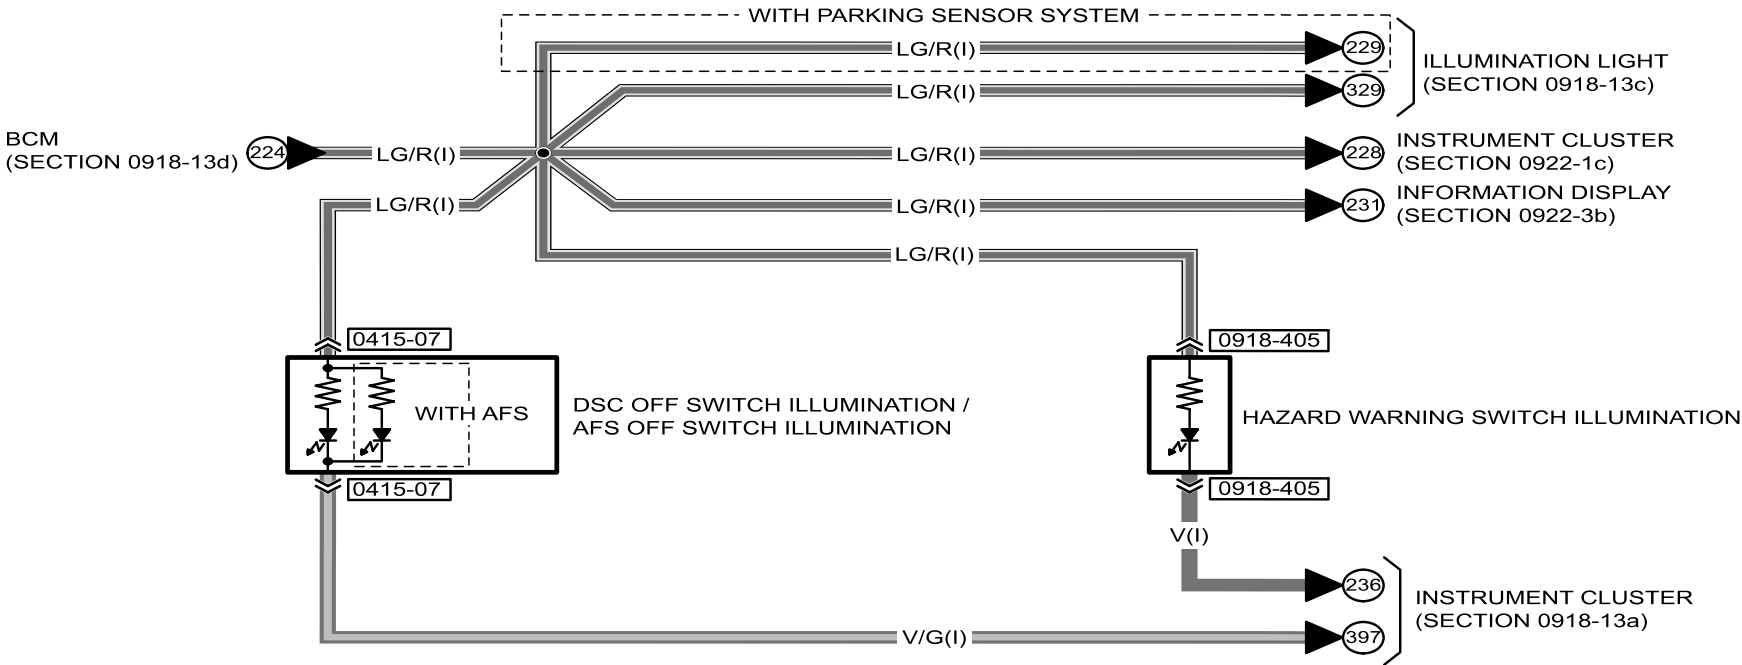



0415-07
DSC OFF SWITCH /
AFS OFF SWITCH /
DSC OFF SWITCH ILLUMINATION /
AFS OFF SWITCH ILLUMINATION

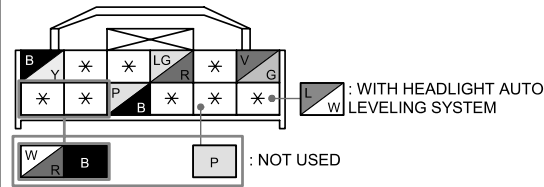


 0918-405
HAZARD WARNING SWITCH /
HAZARD WARNING SWITCH ILLUMINATION



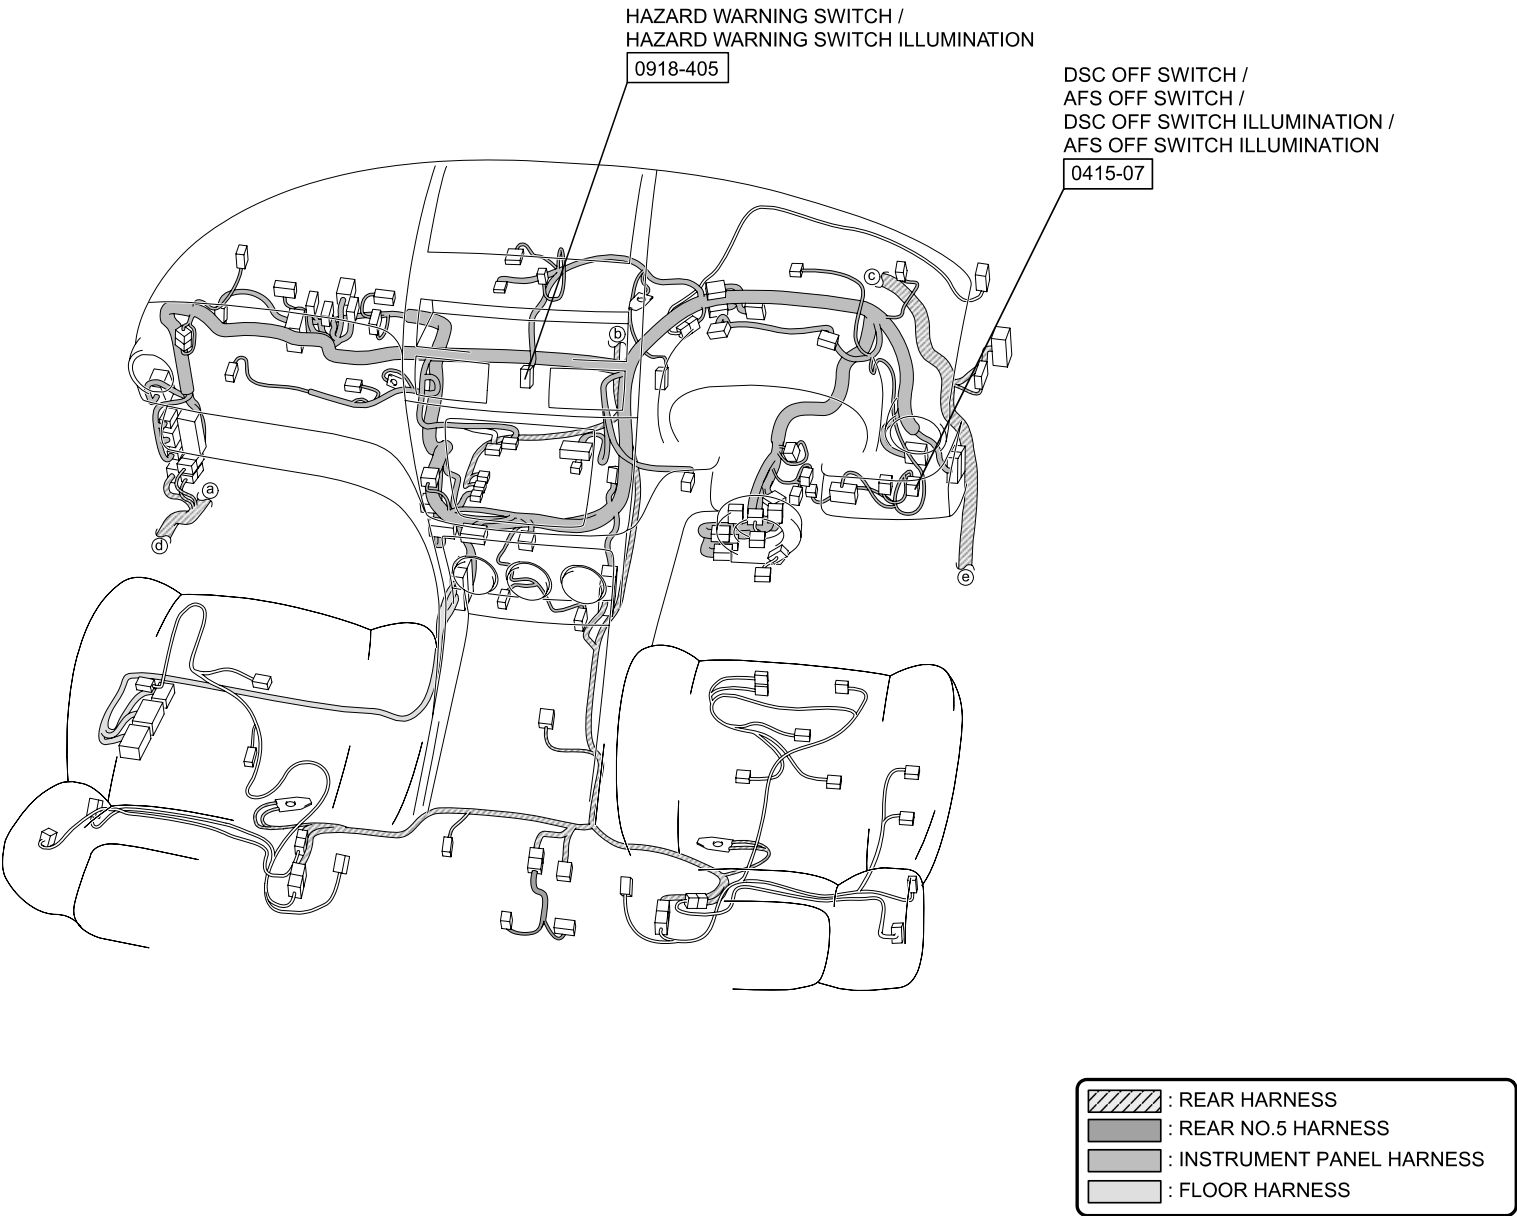


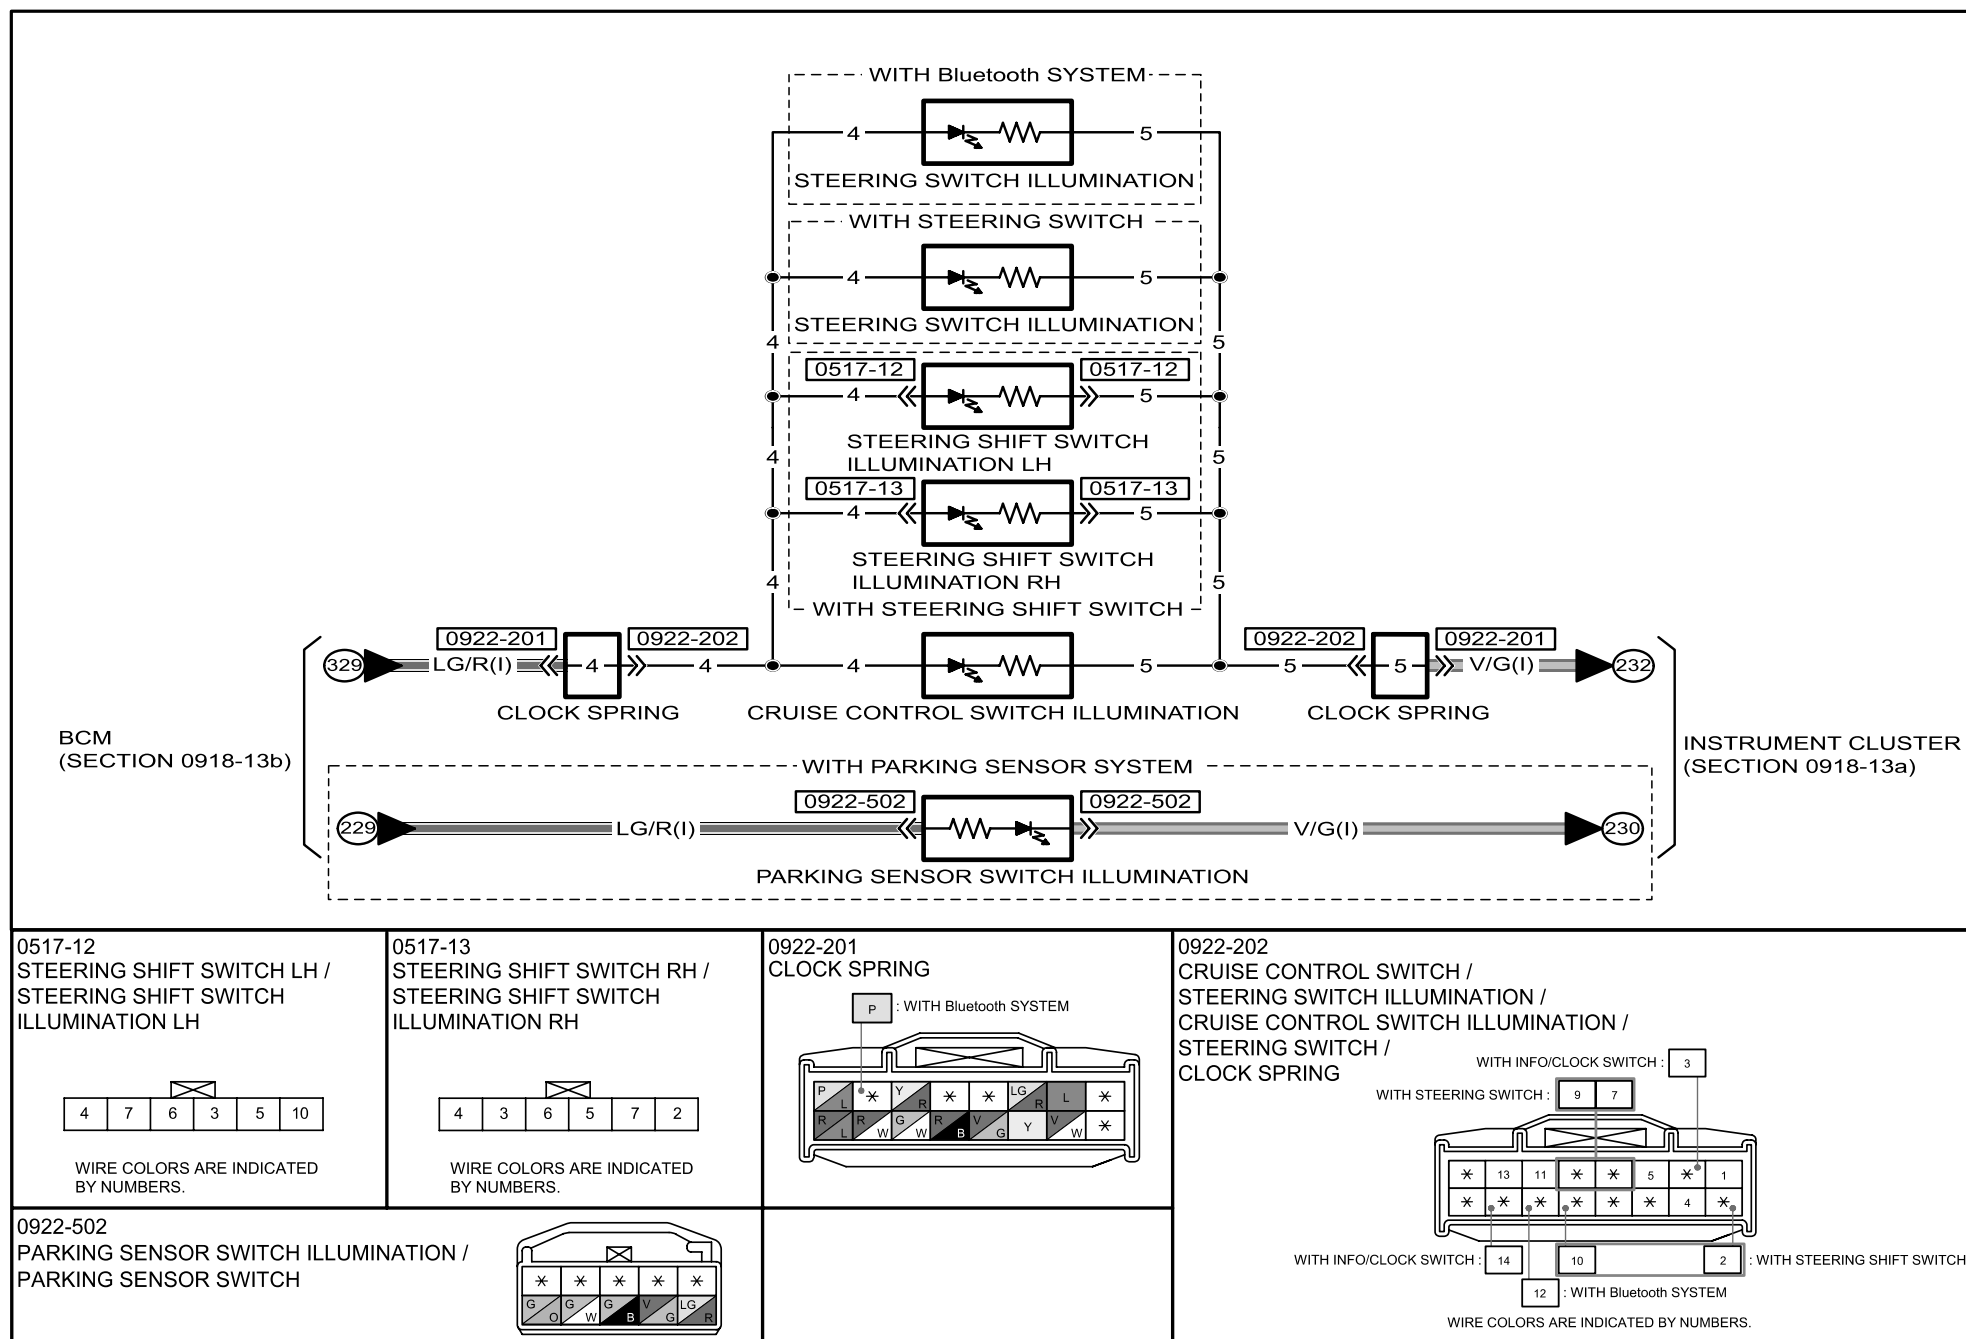

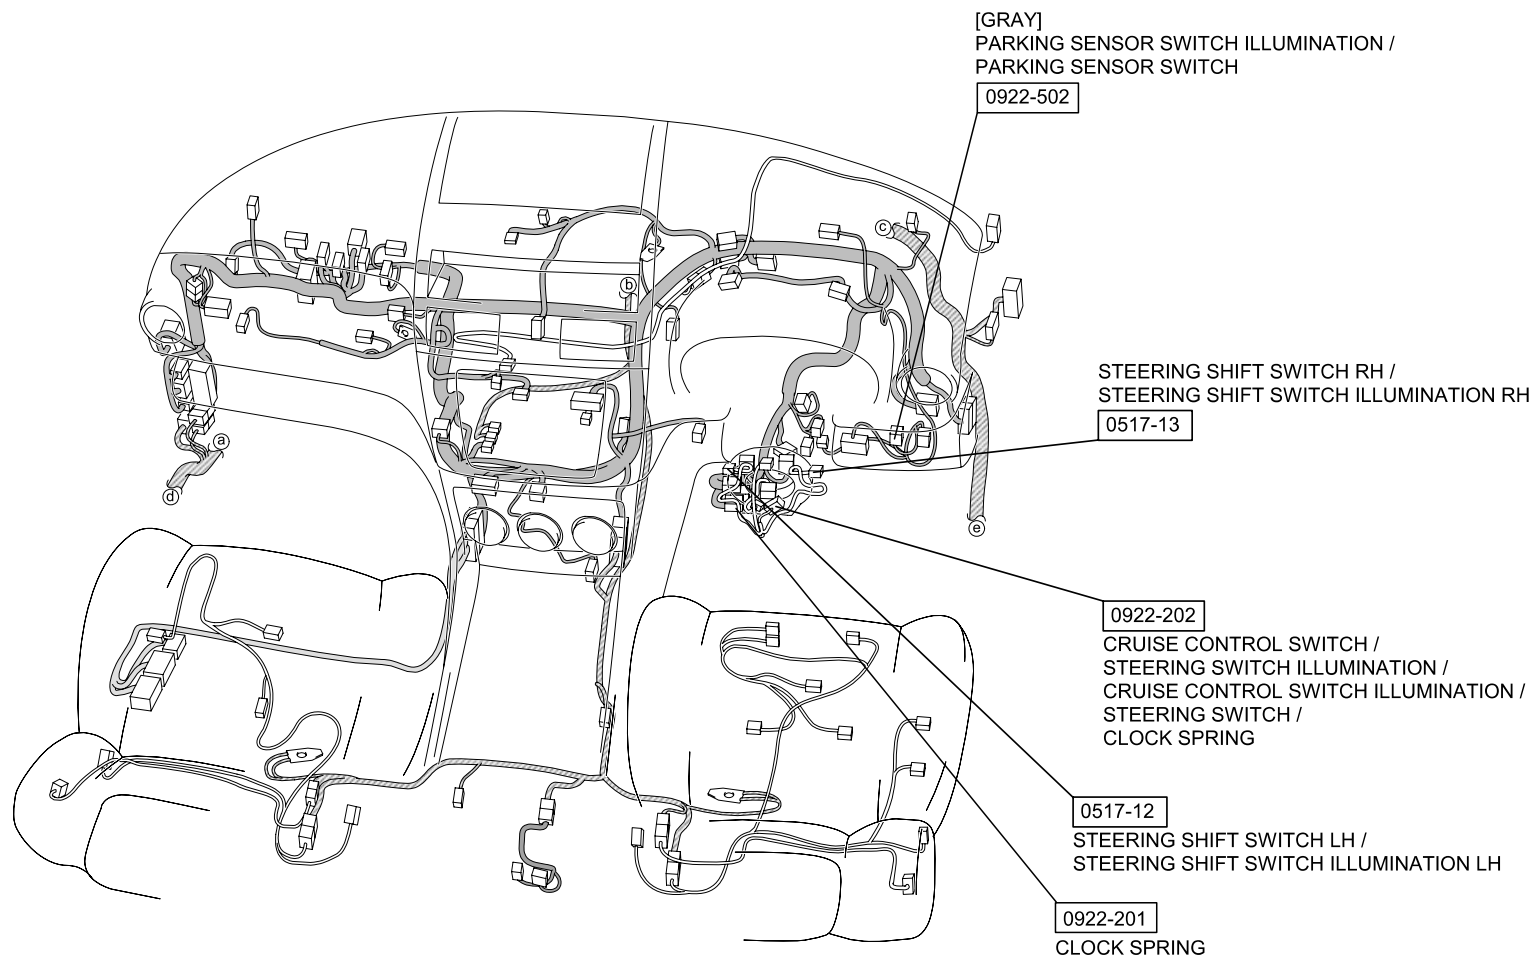


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS


[] : 5HB

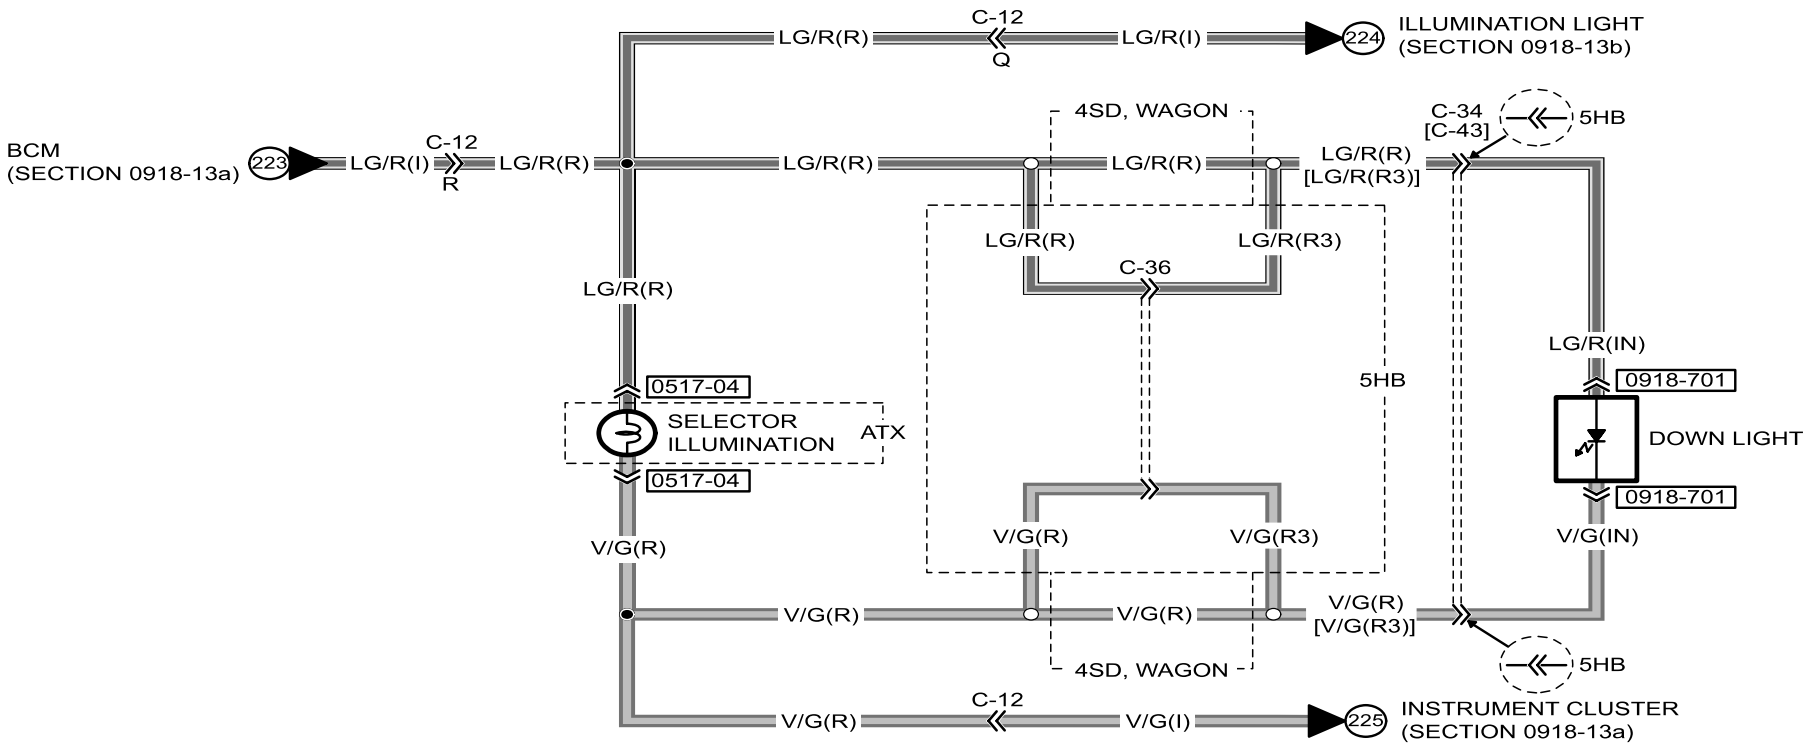



0517-04
SELECTOR LEVER COMPONENT /
SELECTOR ILLUMINATION

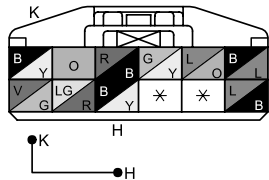


0918-701
MAP LIGHT / DOWN LIGHT

 

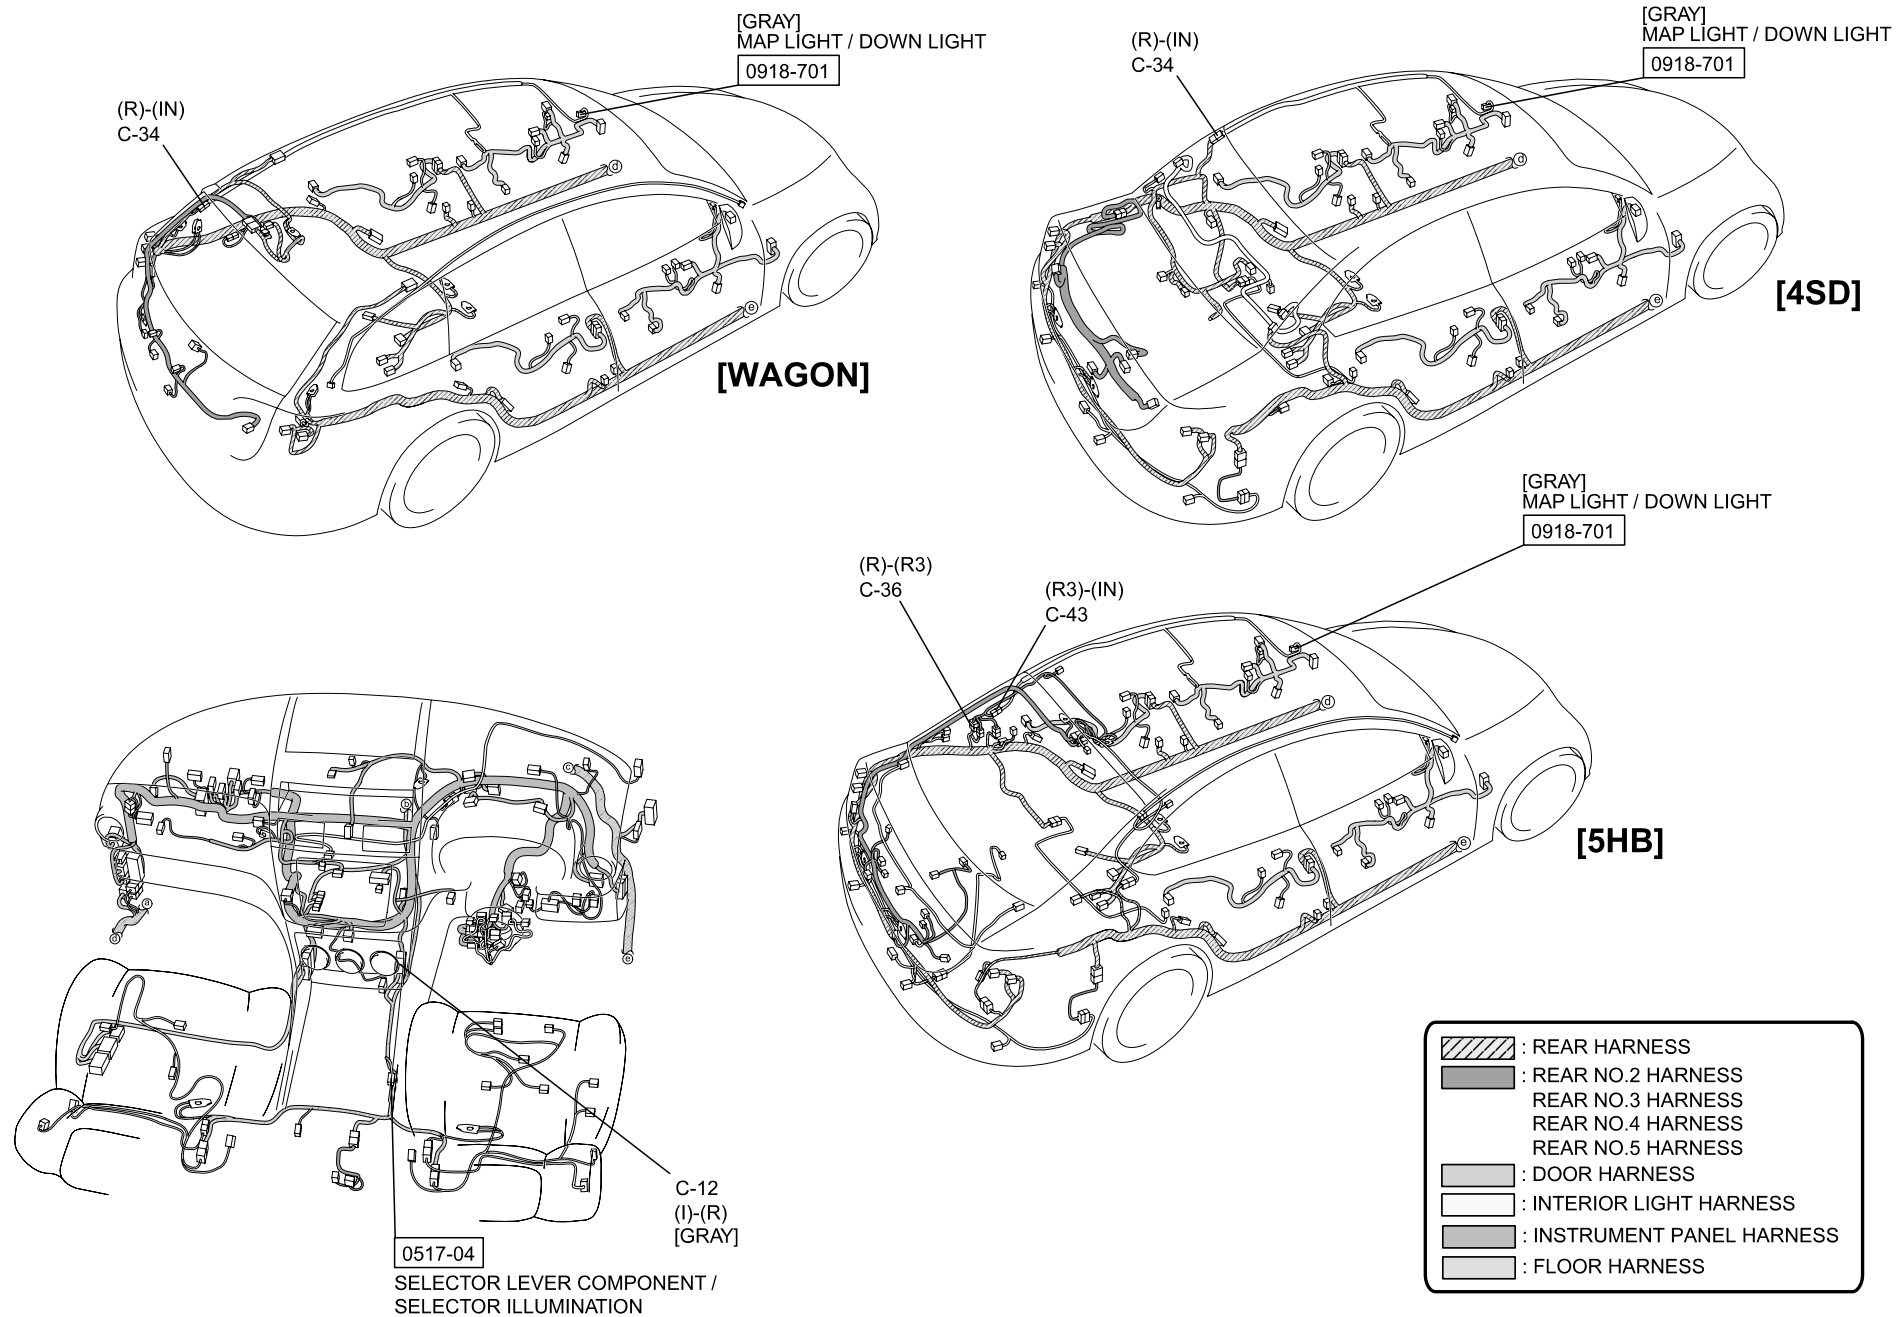


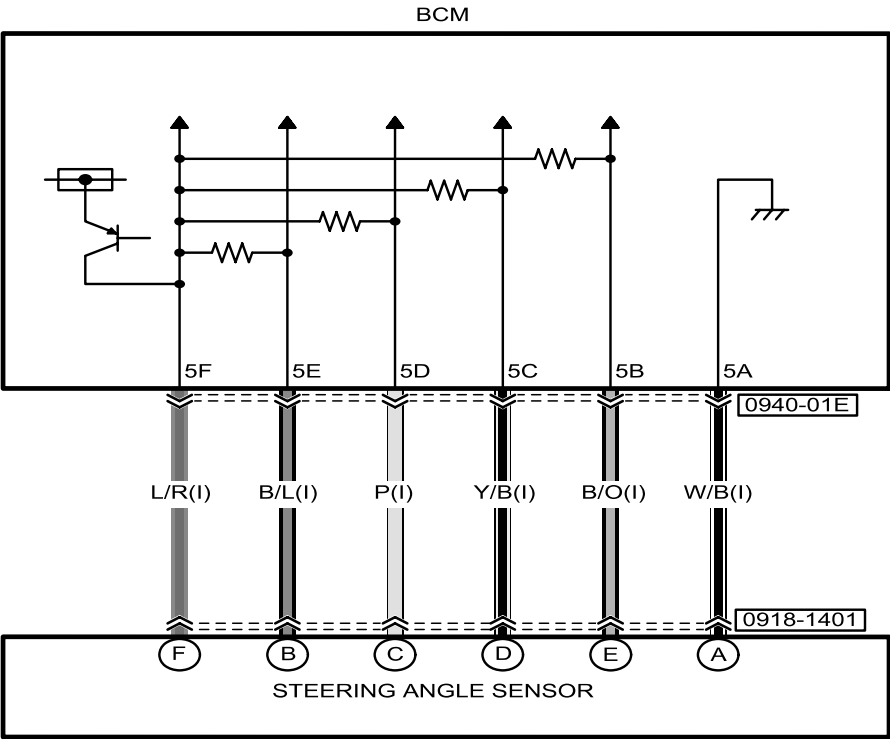


  


 
0918-1401
STEERING ANGLE SENSOR




0940-01E
BCM

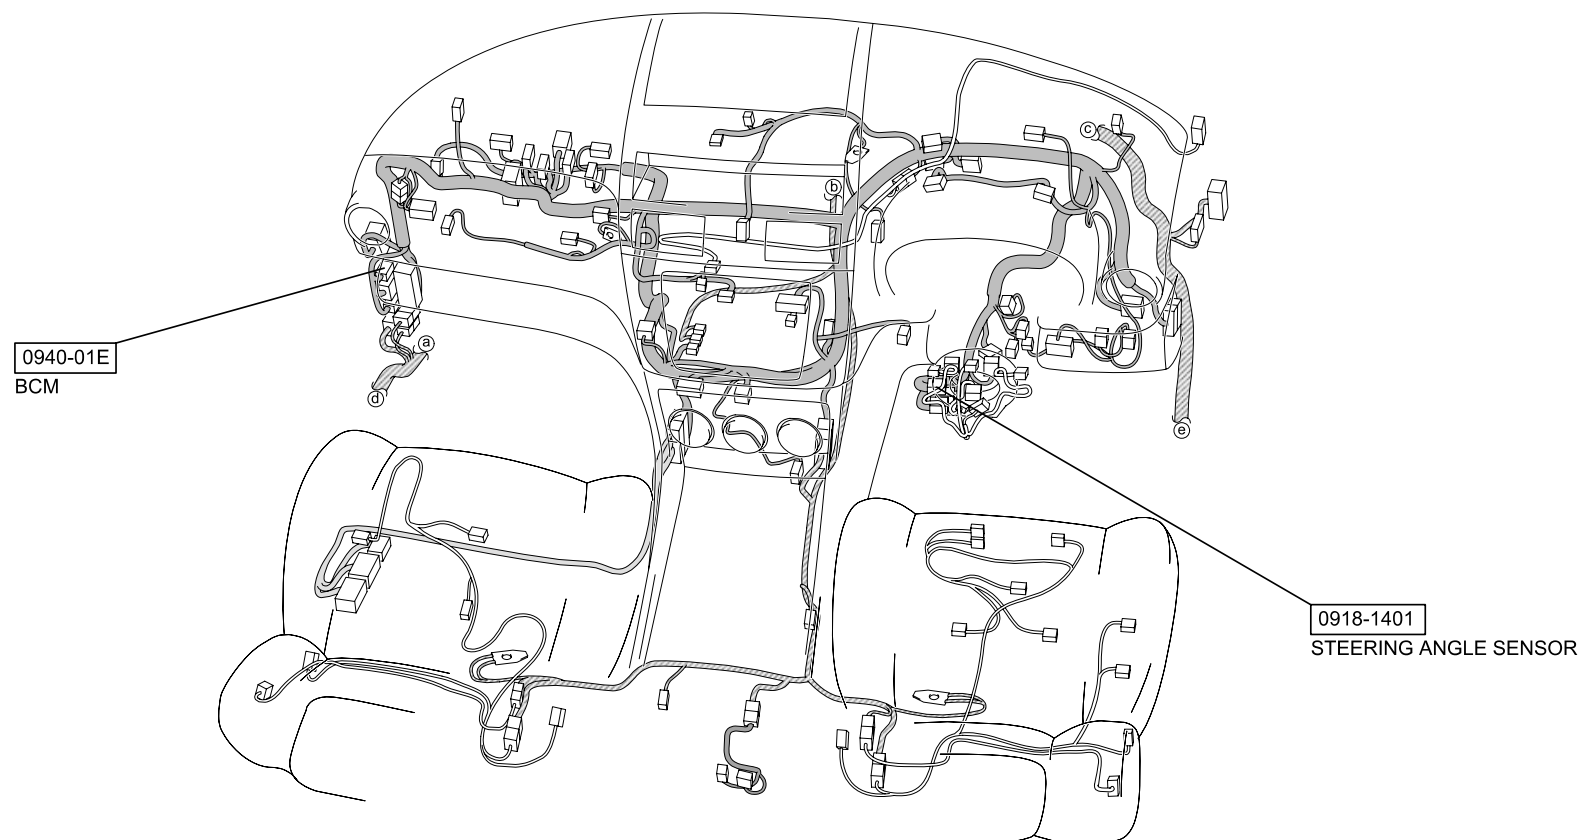




-  : REAR HARNESS
-  : REAR NO.5 HARNESS
-  : INSTRUMENT PANEL HARNESS
-  : FLOOR HARNESS

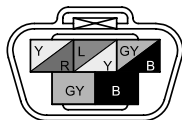


0919-102
WINDSHIELD WASHER
MOTOR

 



B : WITH HEADLIGHT
W CLEANER

0919-103	RAIN SENSOR
----------	-------------

 


0919-105
CONDENSER


 


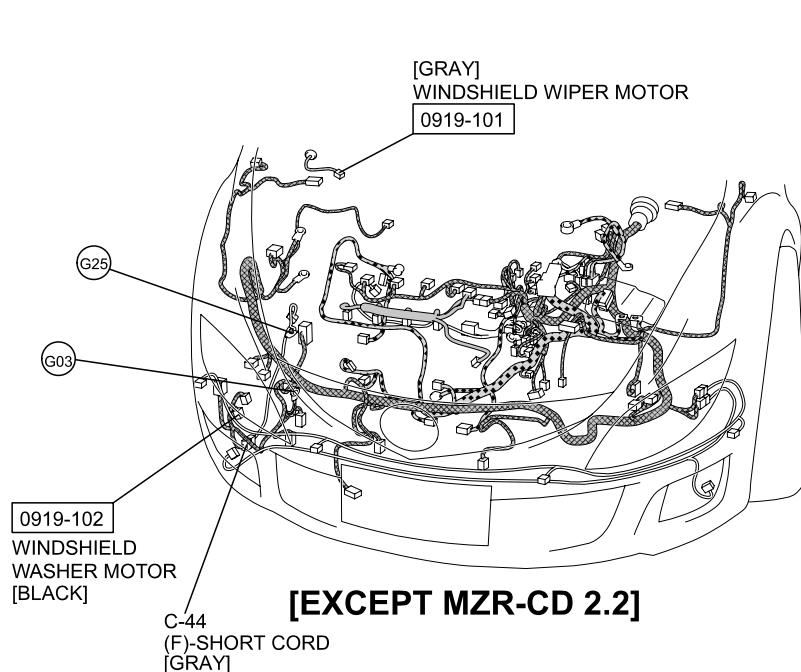


[EXCEPT MZR-CD 2.2]

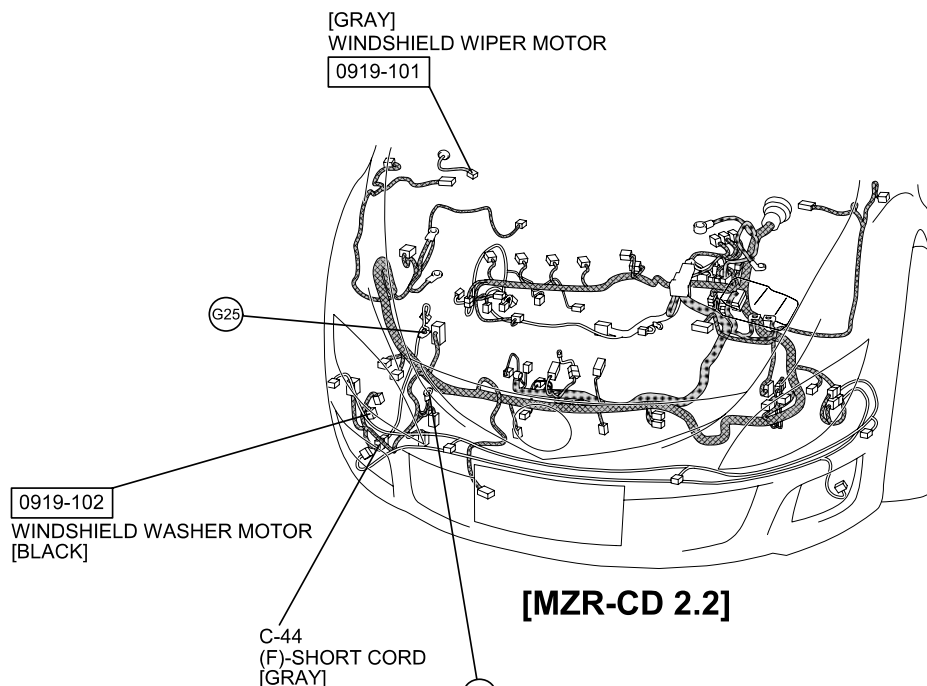


[MZR-CD 2.2]

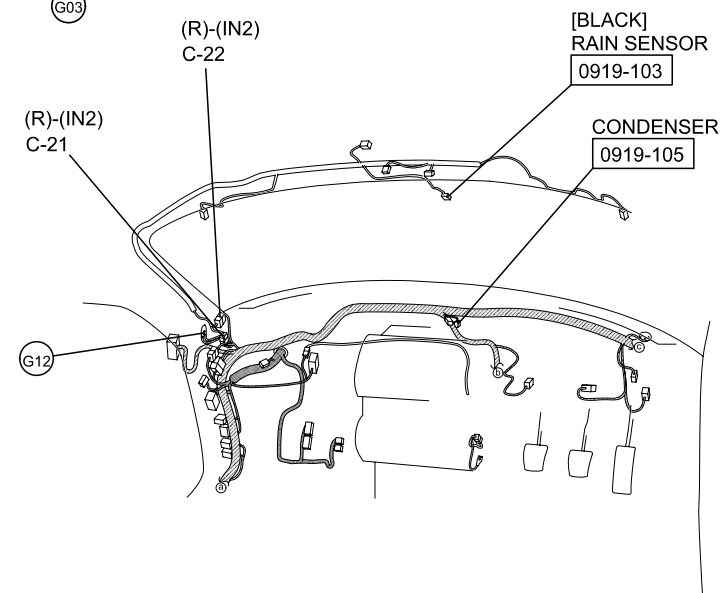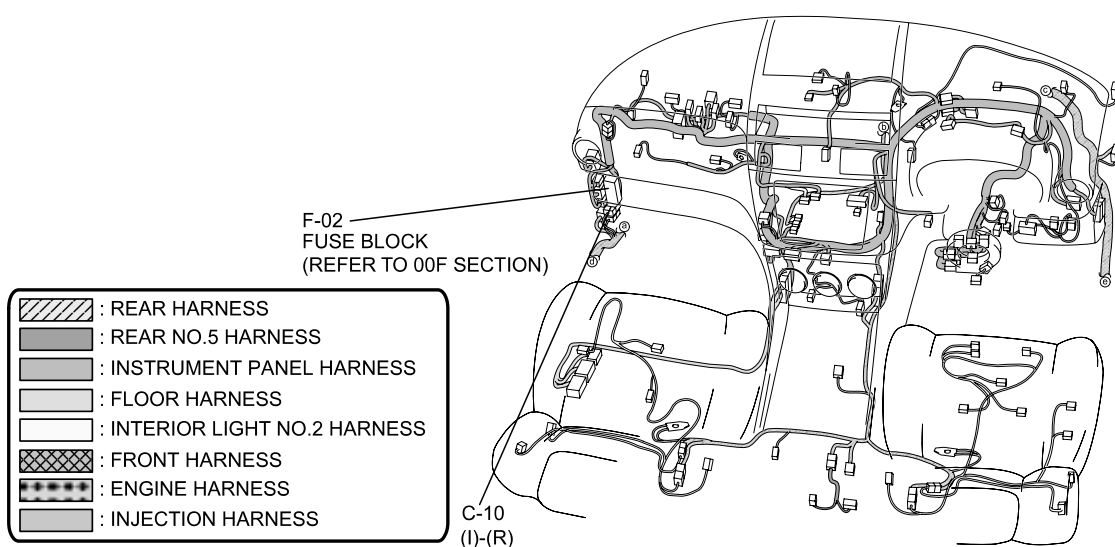


#6 : WITH AUTO WIPER SYSTEM

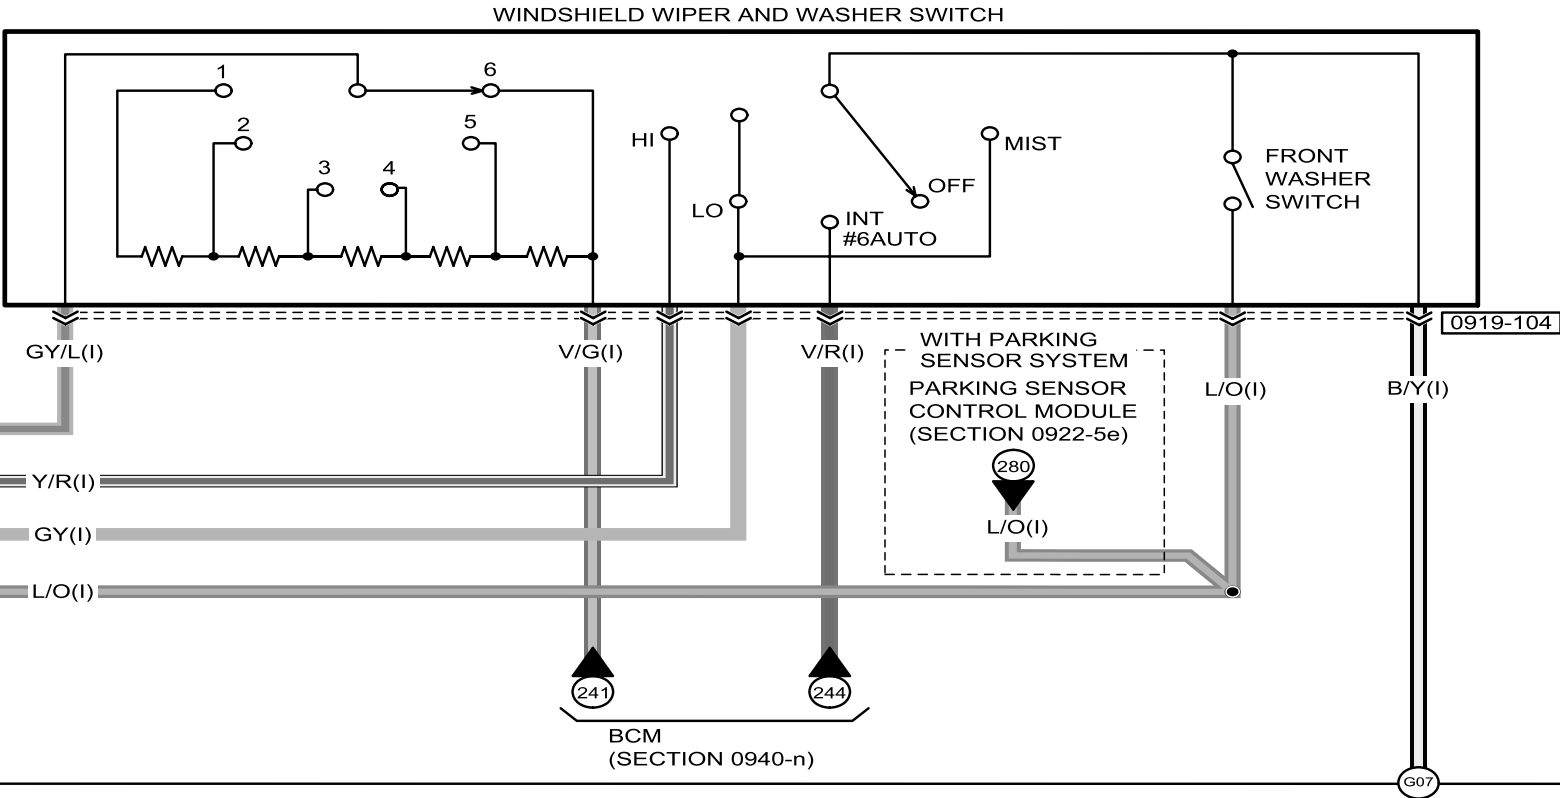

 0919-104
WINDSHIELD WIPER AND WASHER SWITCH /
REAR WIPER AND WASHER SWITCH



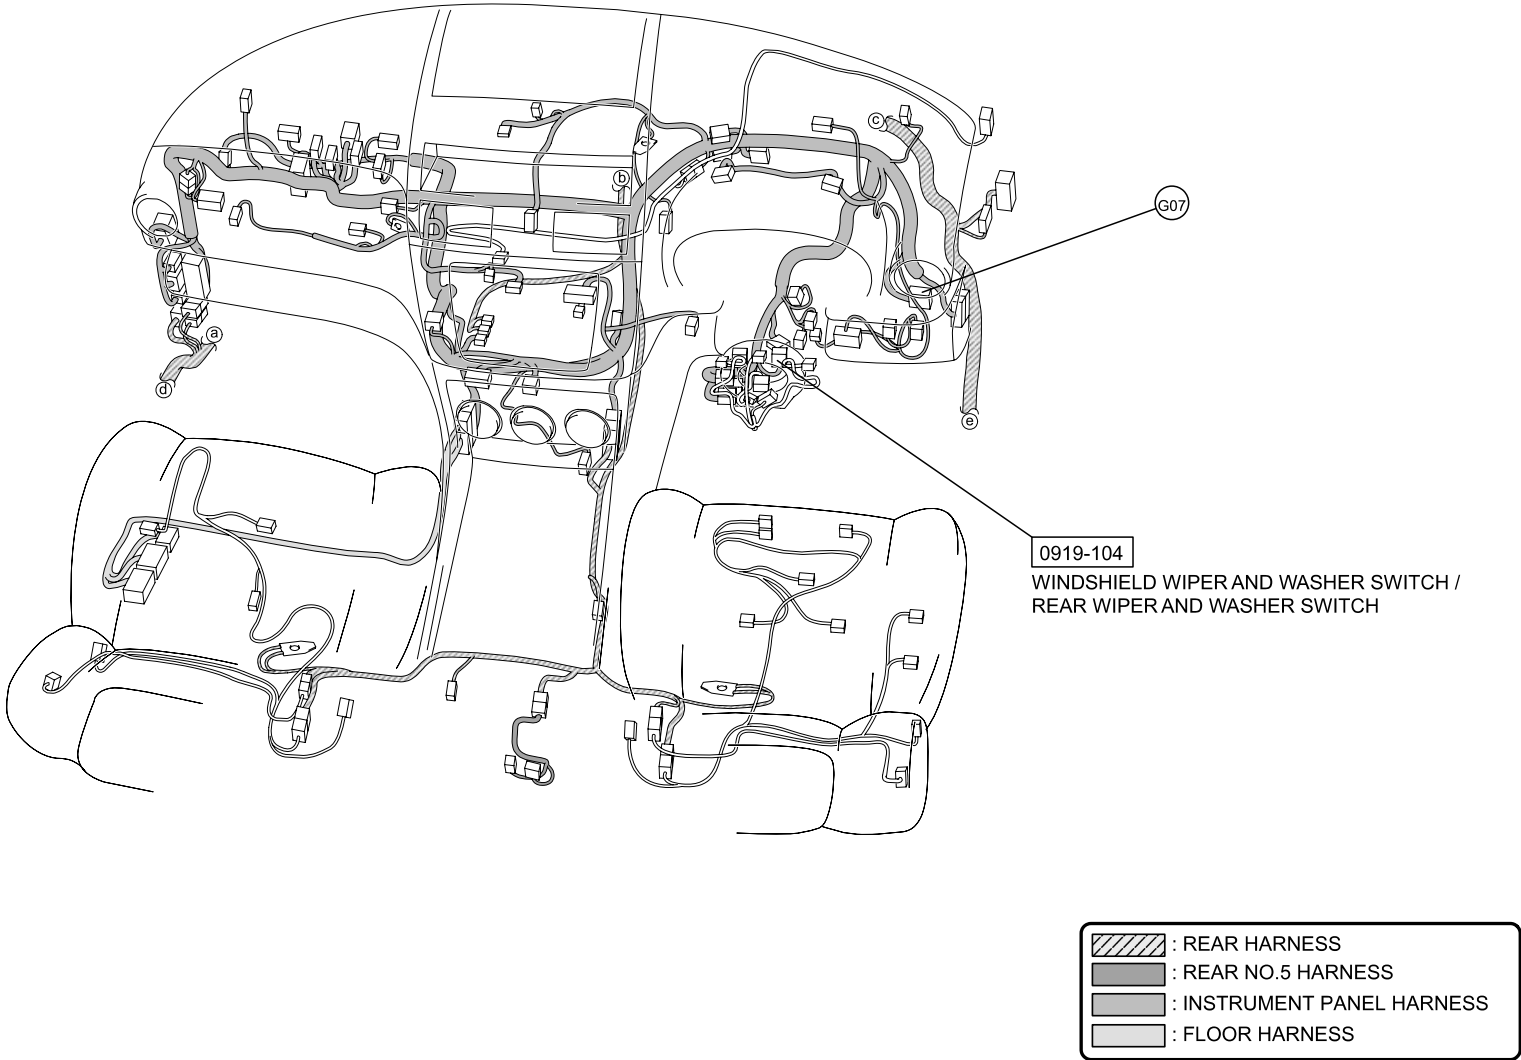


REAR WIPER AND WASHER

0919-2

BCM
(SECTION 0940-f)


BCM
(SECTION 0940-g)

[] : 5HB

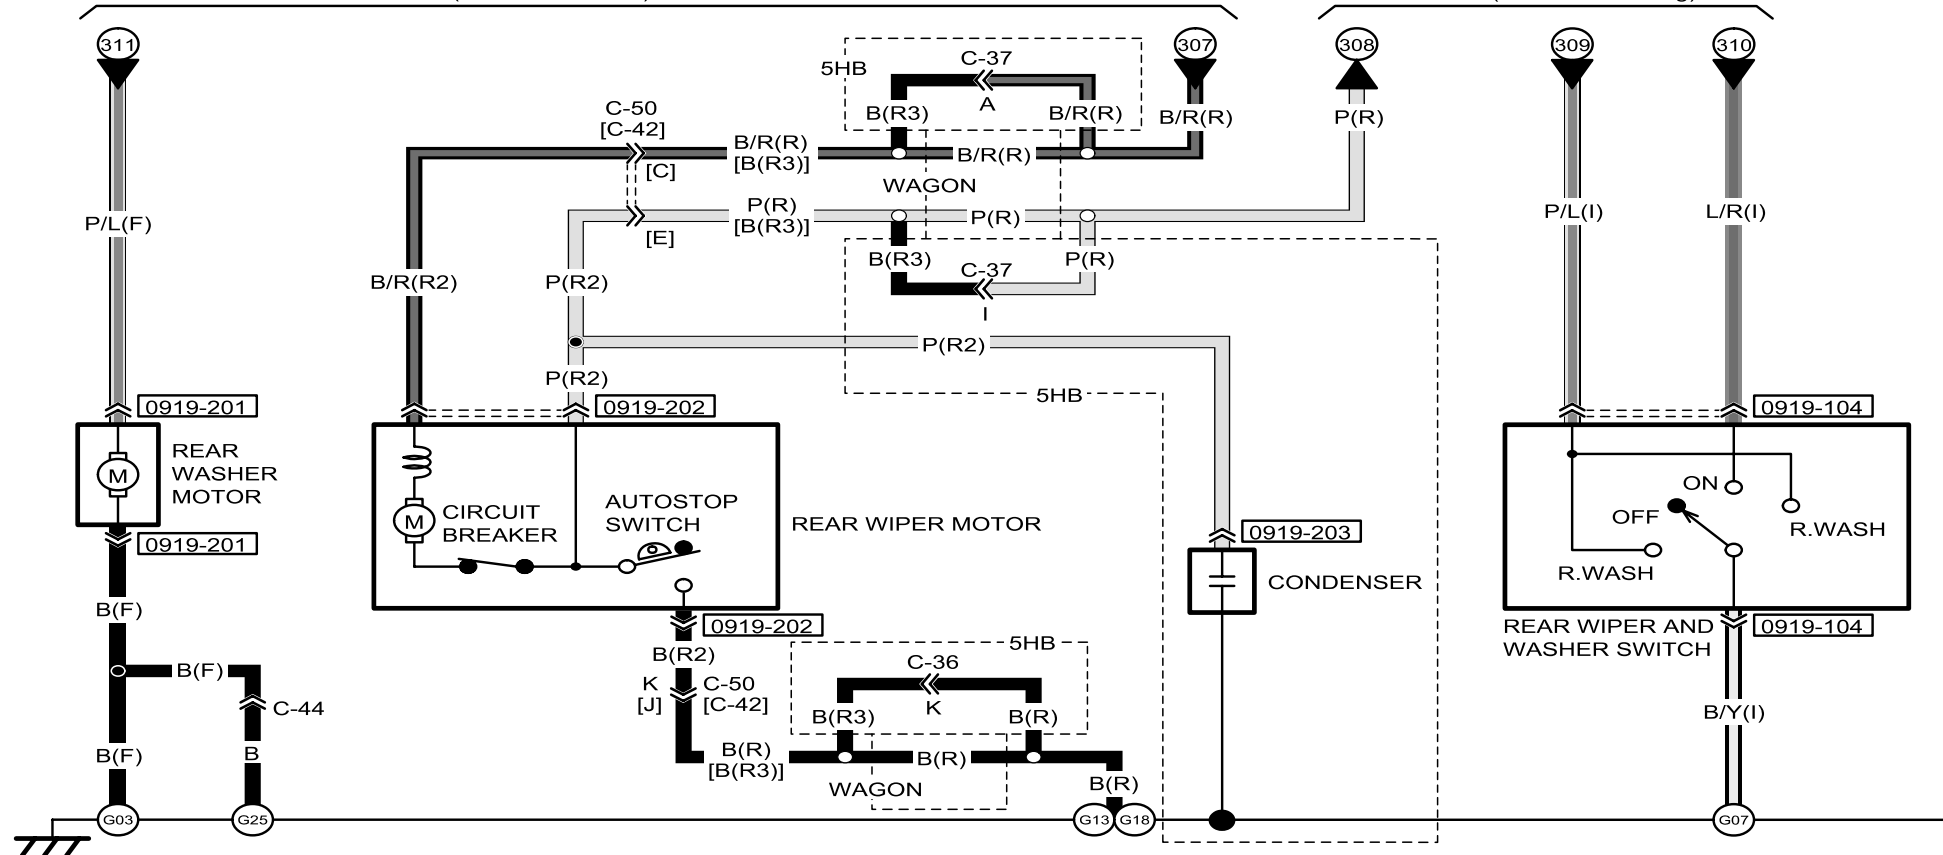

294

 0919-104
WINDSHIELD WIPER AND WASHER SWITCH /
REAR WIPER AND WASHER SWITCH



0919-201
REAR WASHER MOTOR



0919-202
REAR WIPER MOTOR




0919-203
CONDENSER



REAR WIPER AND WASHER


0919-2

295

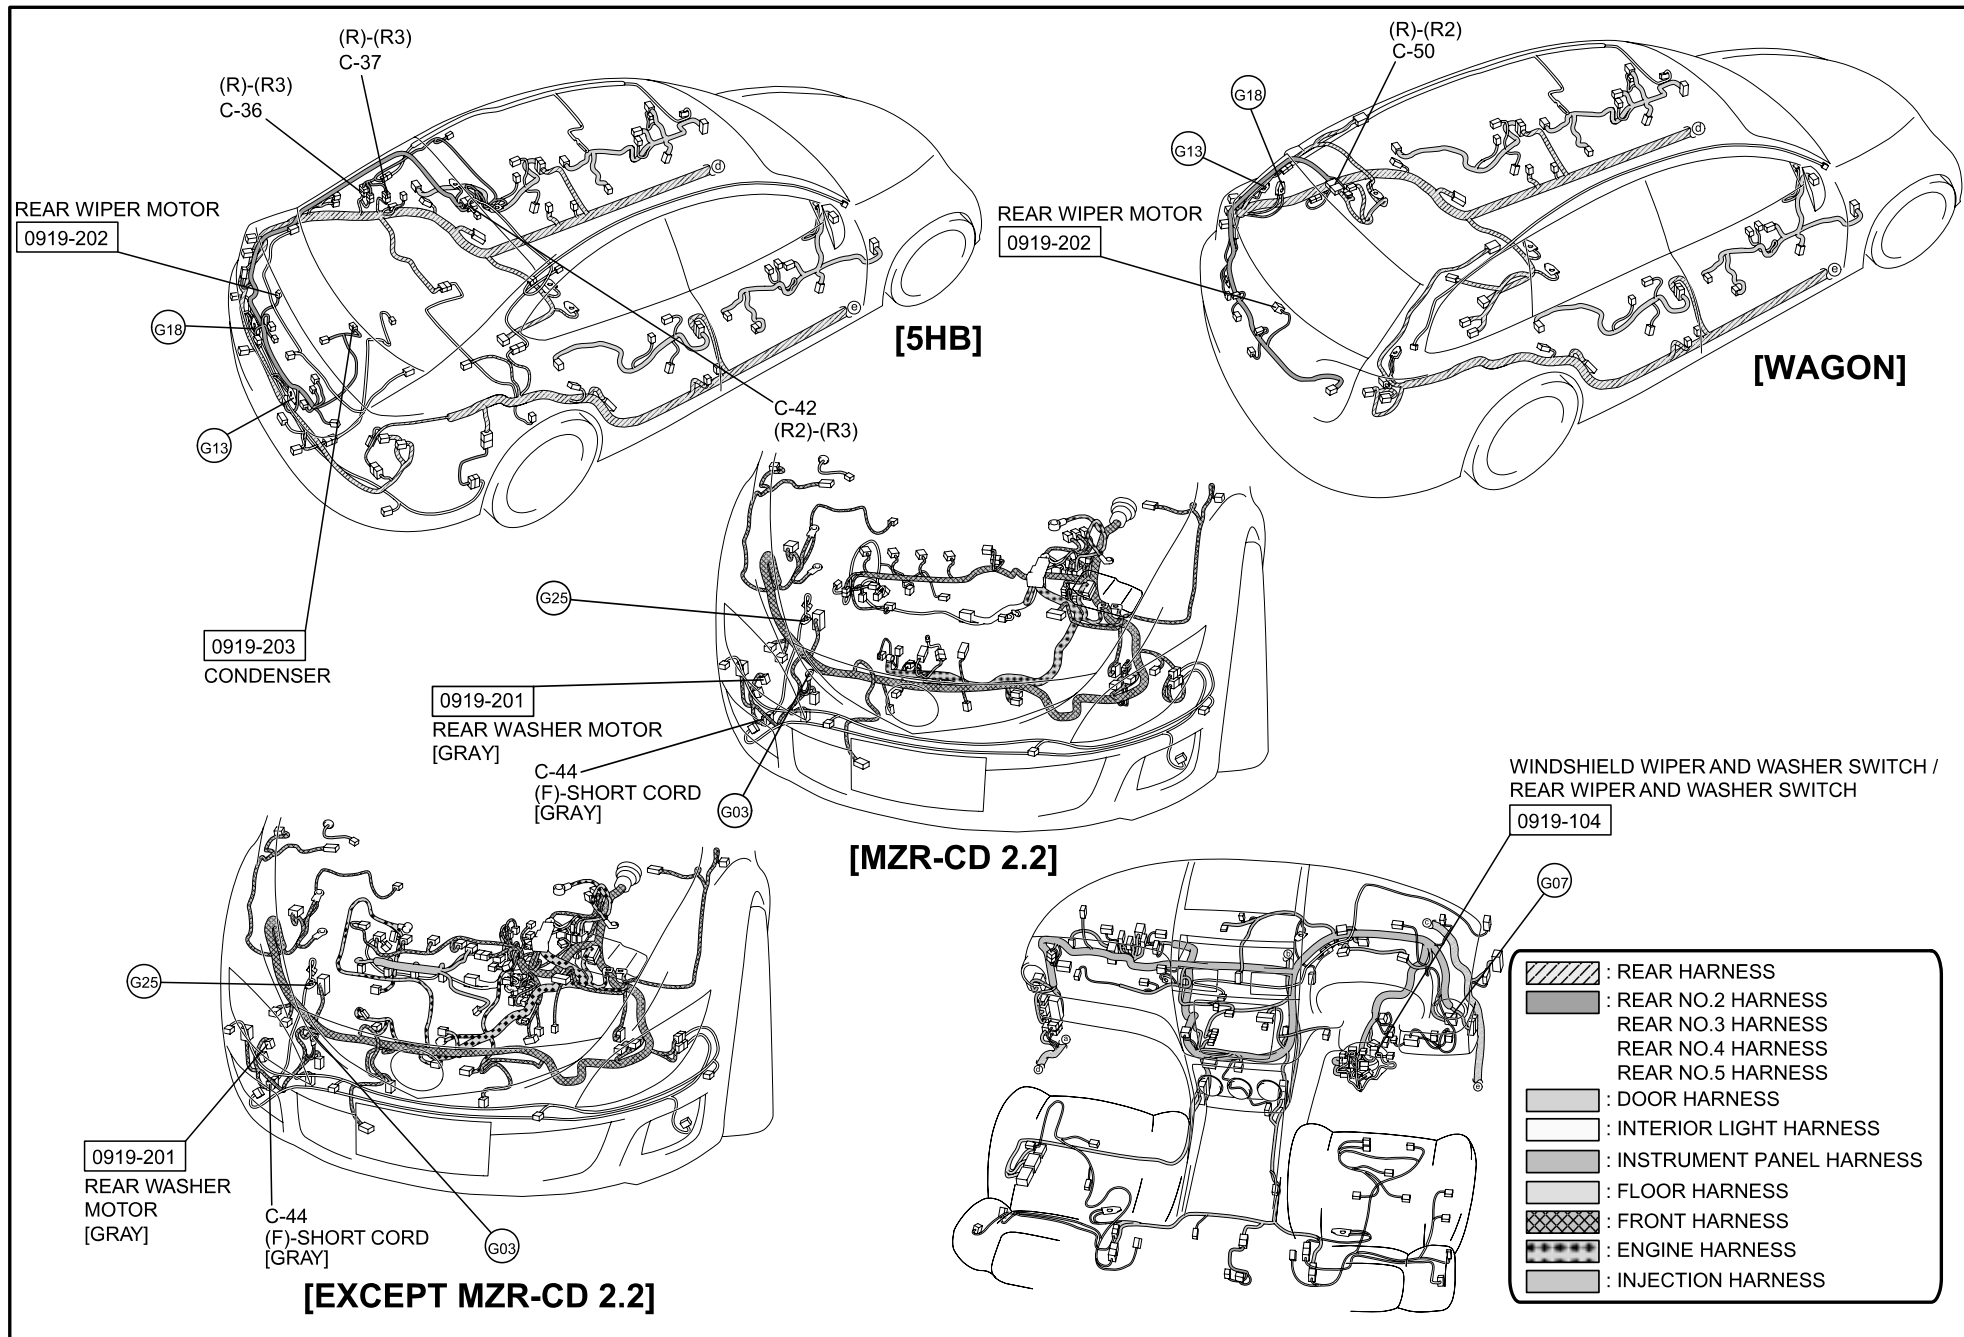

296

 
&4 : MZR 2.5



0919-302
HEADLIGHT CLEANER
MOTOR




WIRE COLORS ARE
INDICATED BY NUMBERS.

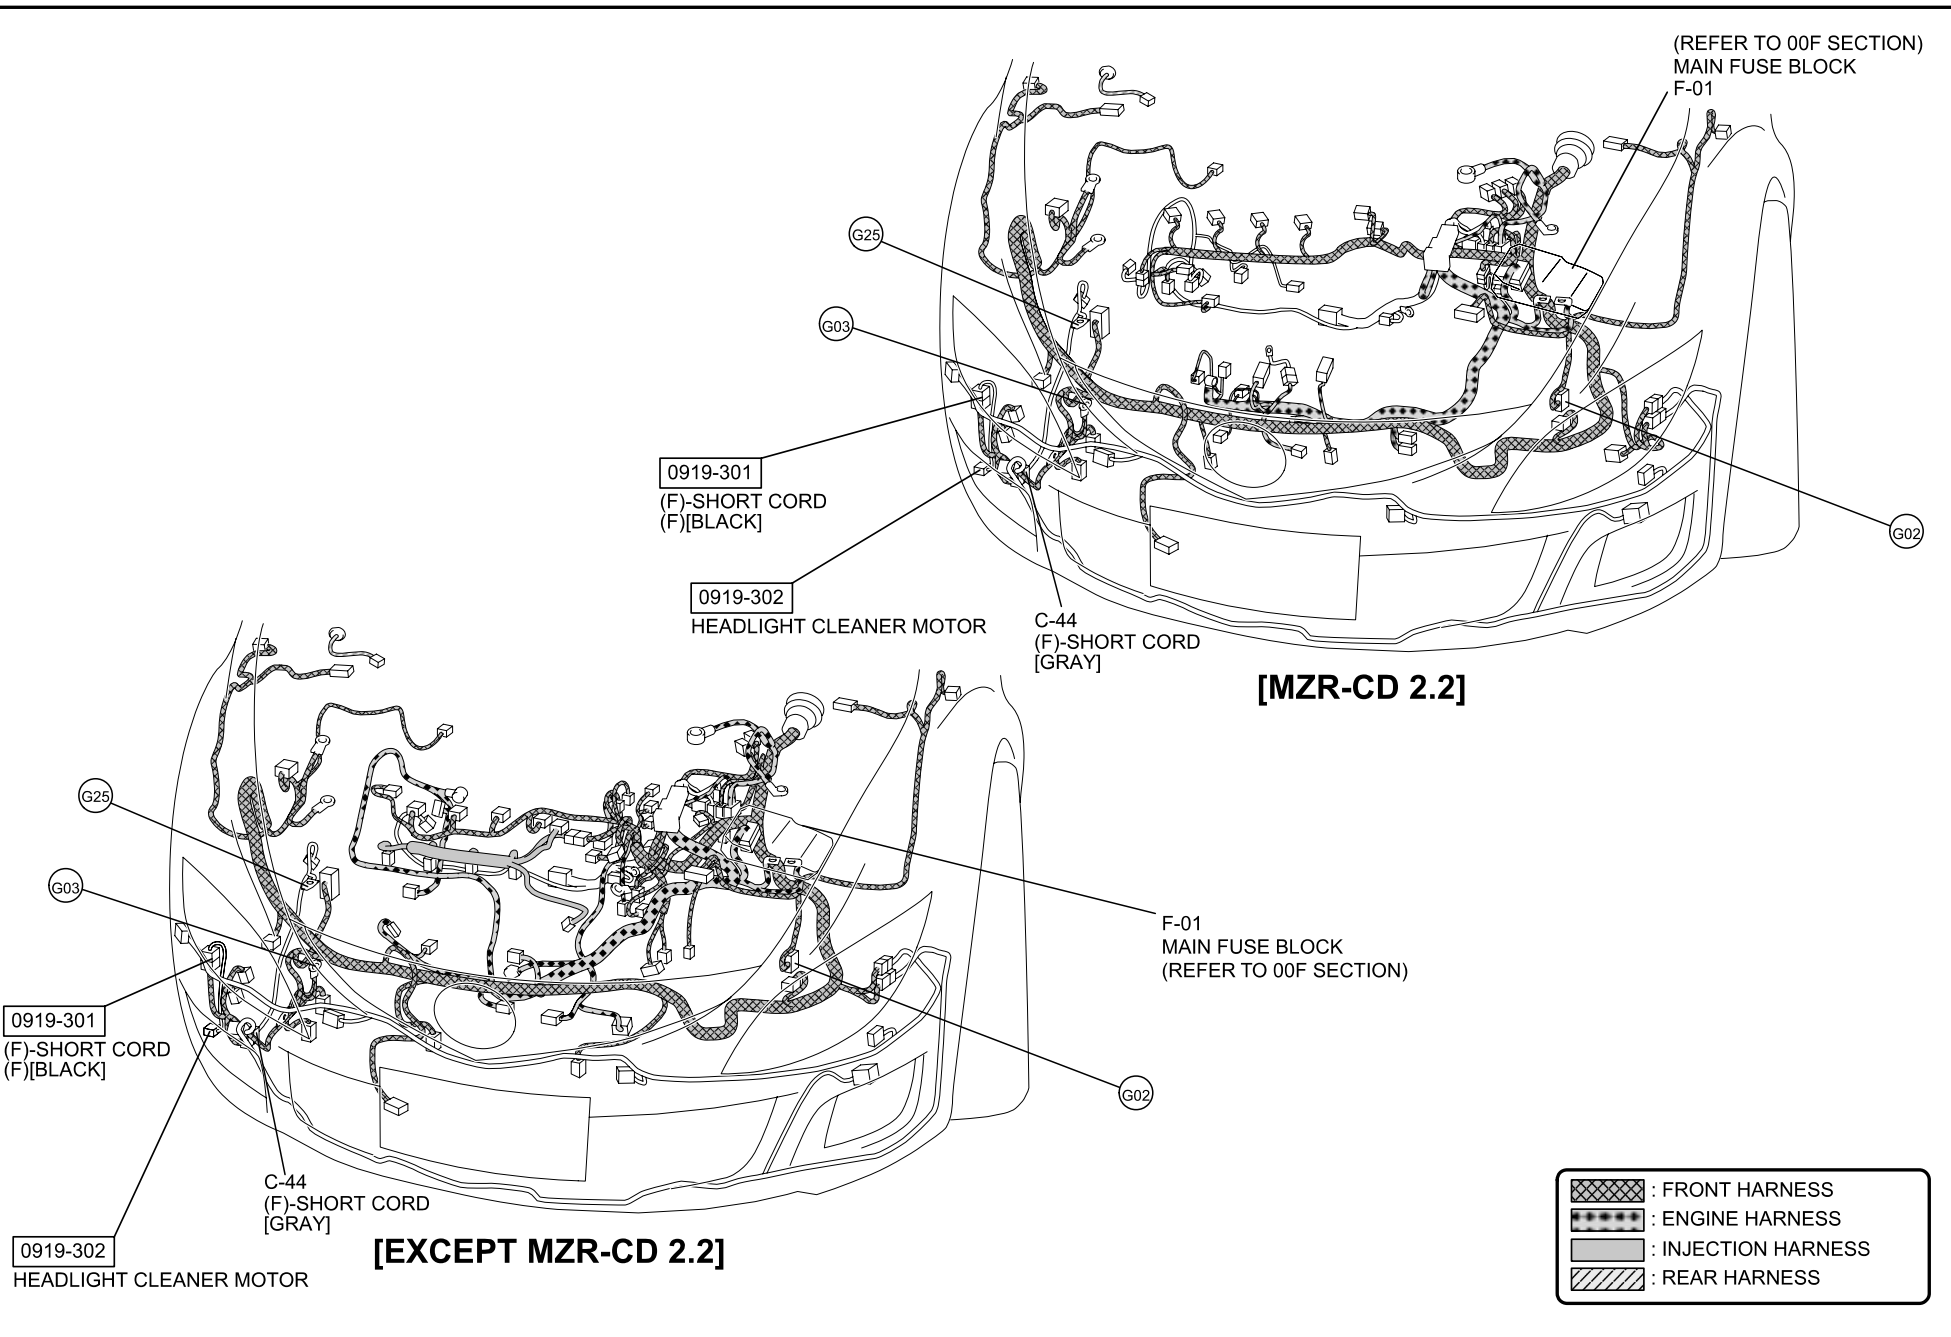

ACCESSORY SOCKET

0920-1

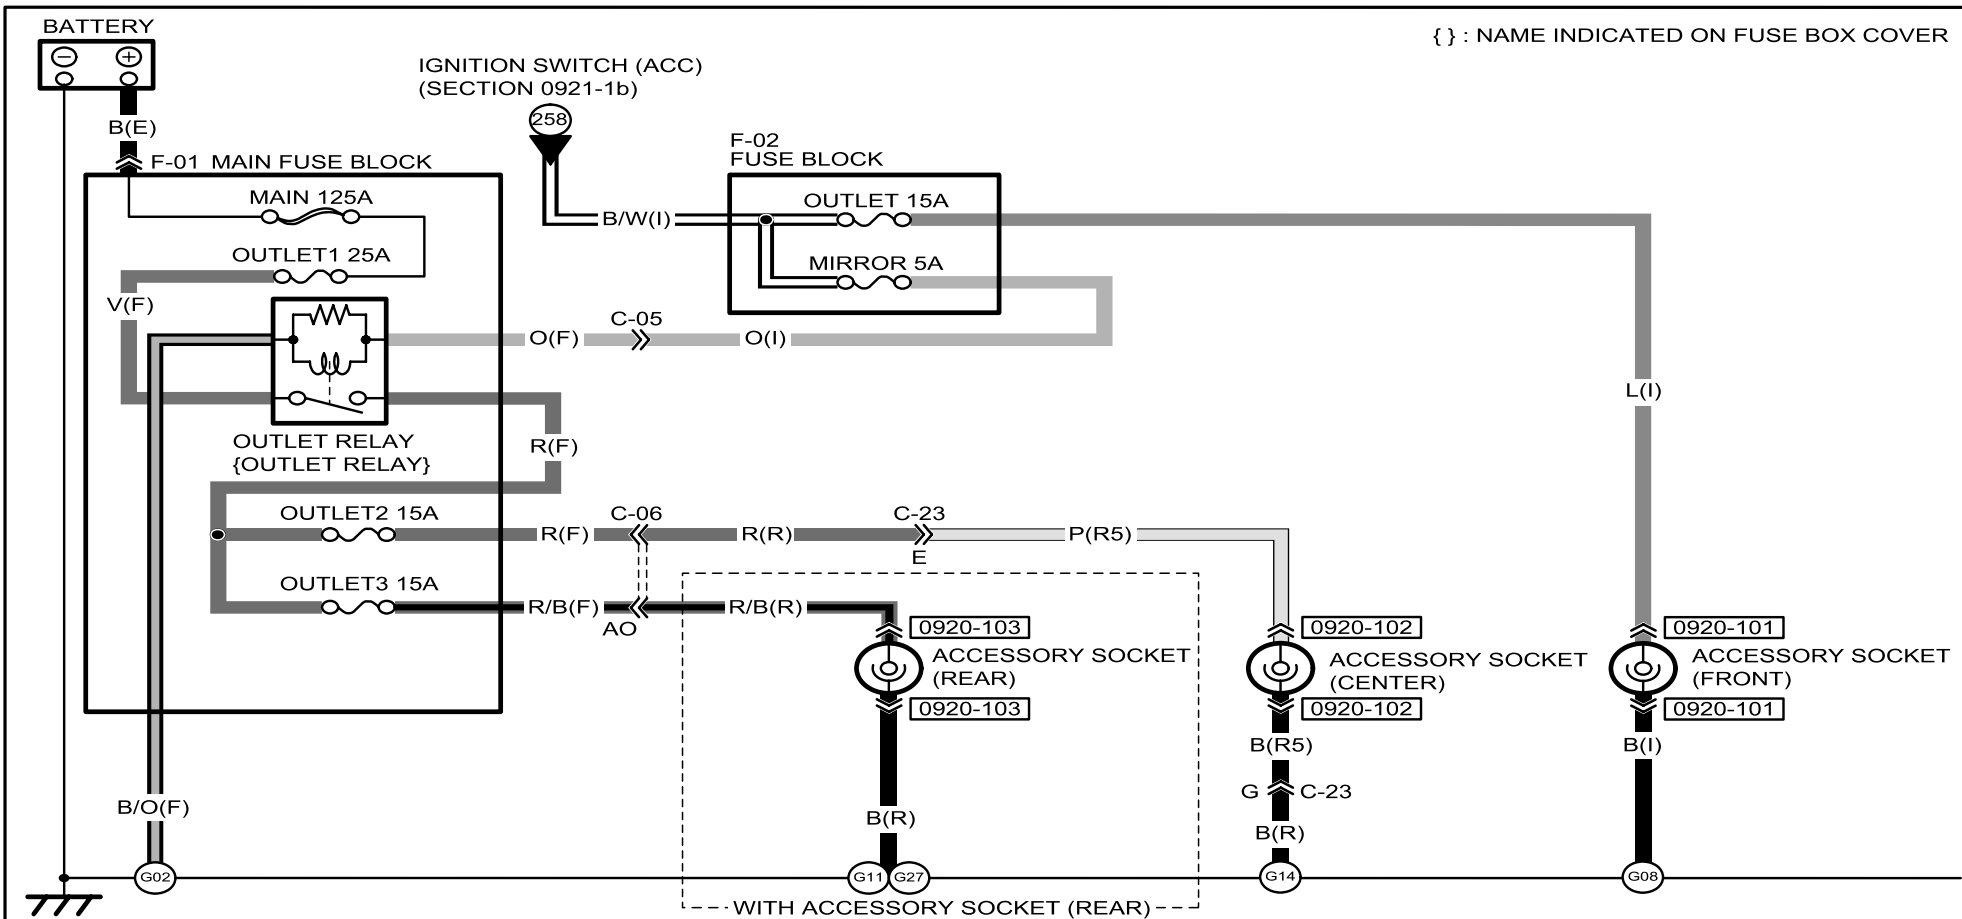




298

0920-101 ACCESSORY SOCKET (FRONT)	0920-102 ACCESSORY SOCKET (CENTER)	0920-103 ACCESSORY SOCKET (REAR)				


ACCESSORY SOCKET

0920-1

299

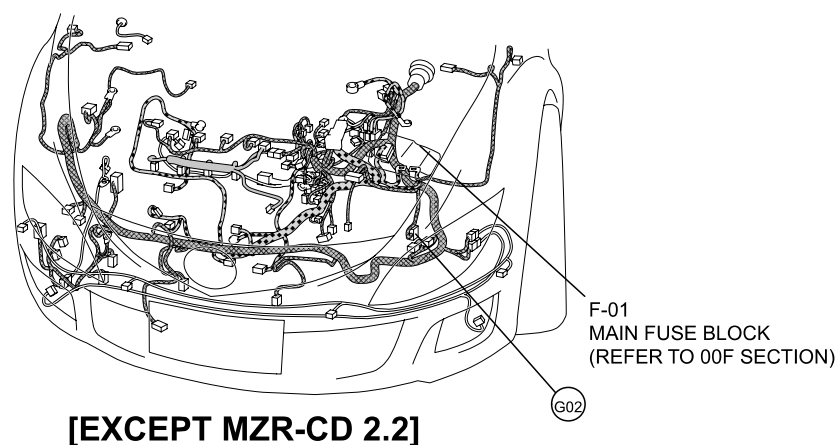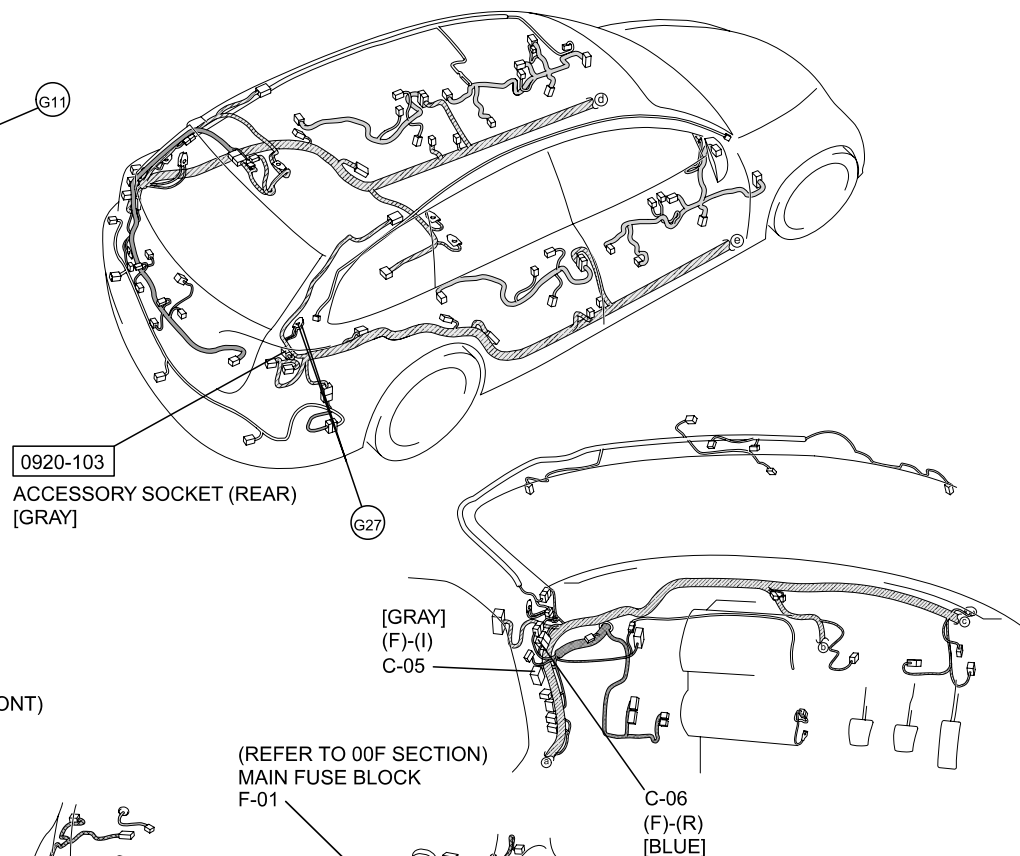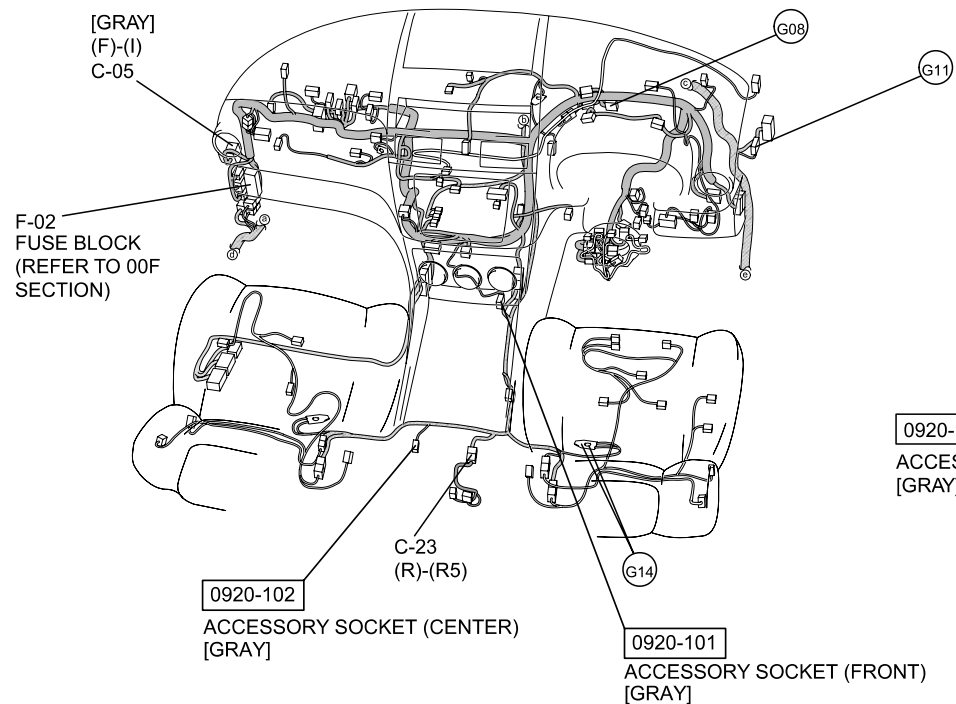


[EXCEPT MZR-CD 2.2]

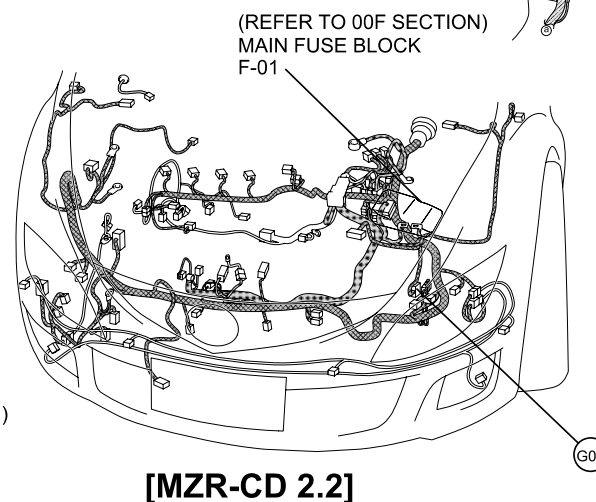



[MZR-CD 2.2]

	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.4 HARNESS
	: REAR NO.5 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

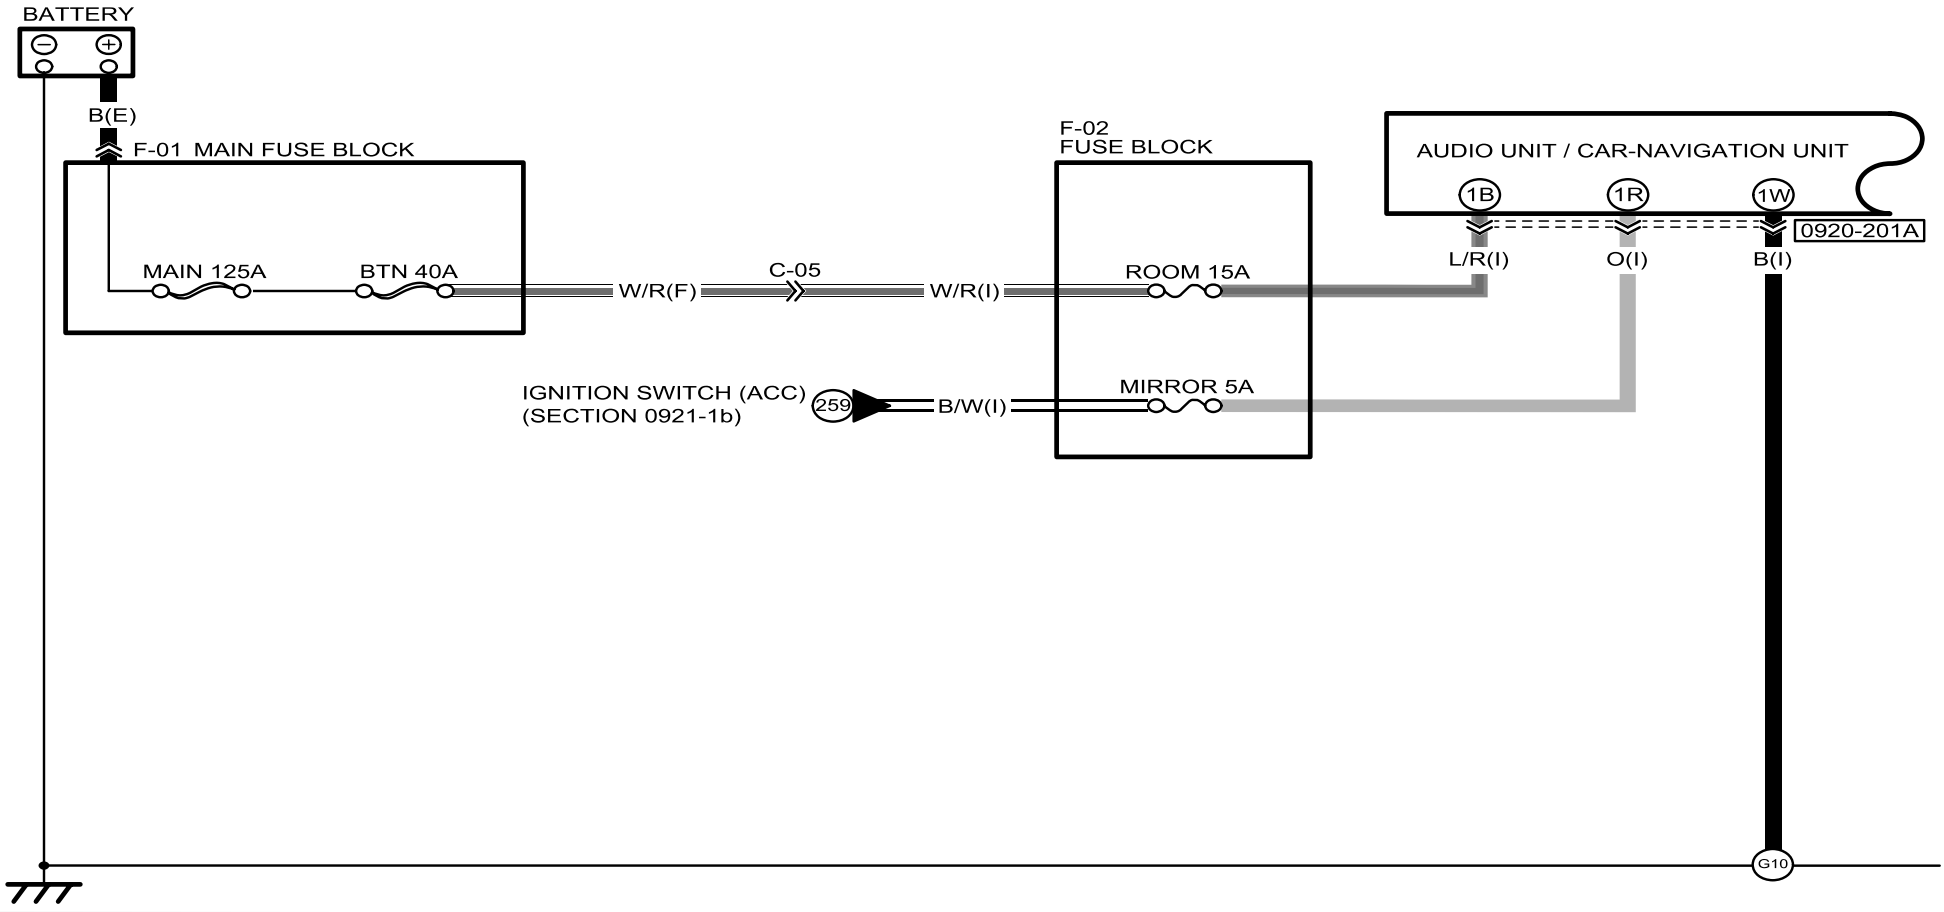


0920-201A
AUDIO UNIT / CAR-NAVIGATION UNIT

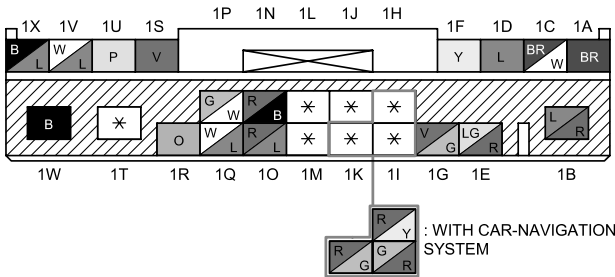

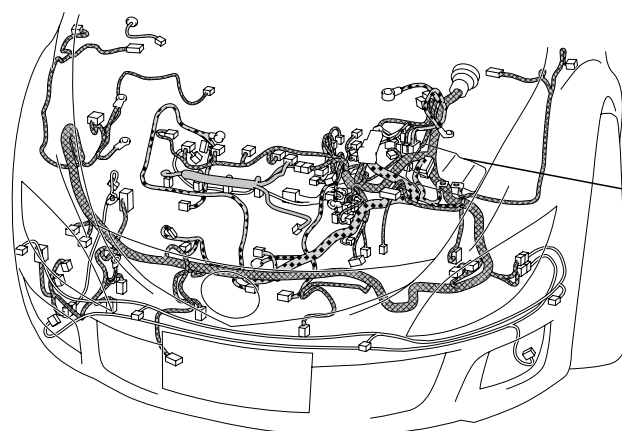

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

[EXCEPT MZR-CD 2.2]

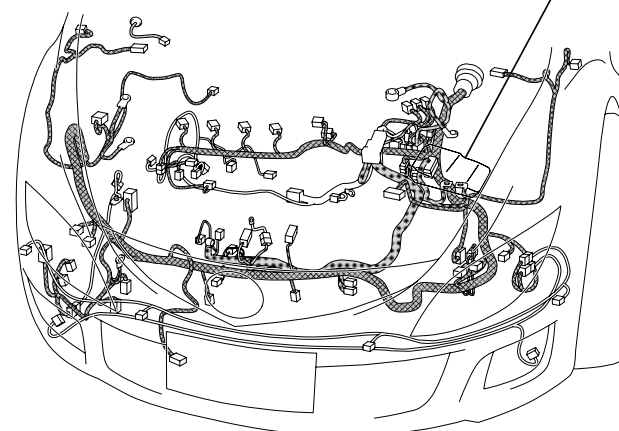

(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01


[MZR-CD 2.2]

AUDIO UNIT / CAR-NAVIGATION UNIT
0920-201A


[GRAY]
(F)-(I)
C-05

F-02
FUSE BLOCK
(REFER TO 00F SECTION)


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

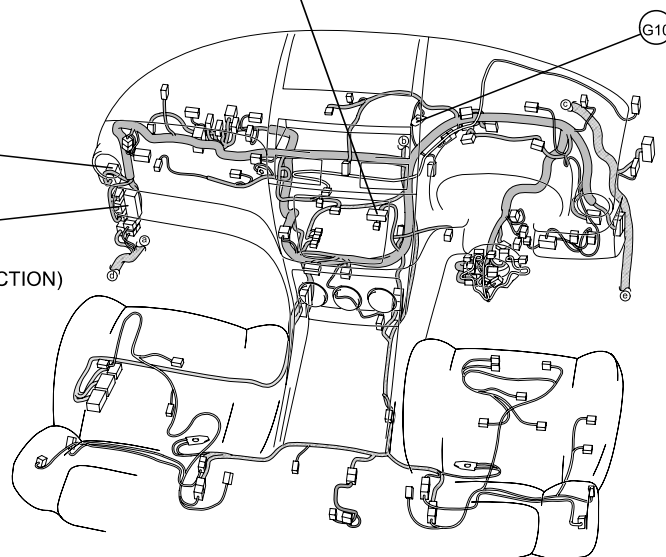


G10

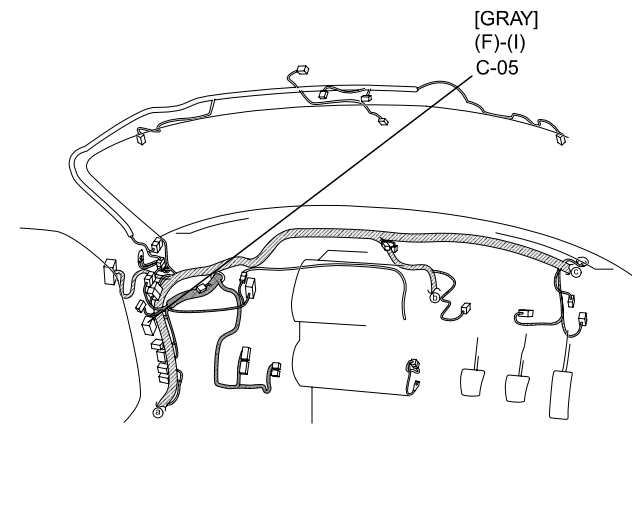


[GRAY]
(F)-(I)
C-05

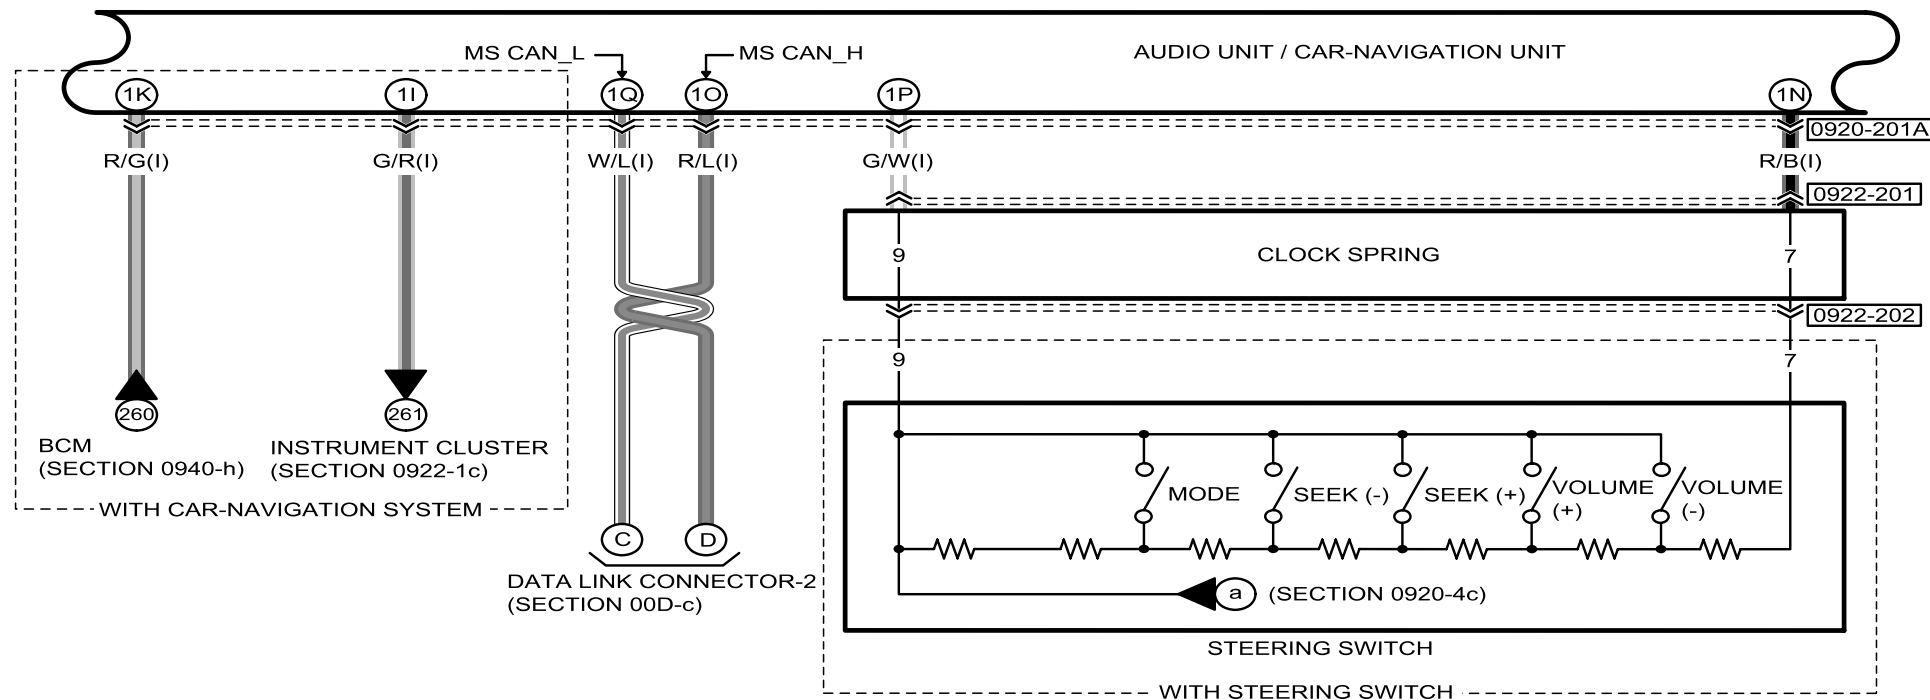


0920-201A
AUDIO UNIT / CAR-NAVIGATION UNIT

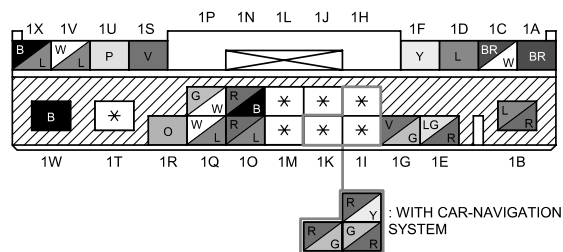



0922-201
CLOCK SPRING

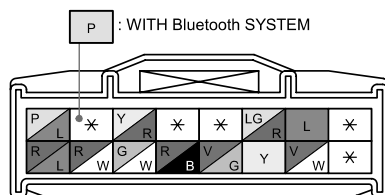

0922-202
CRUISE CONTROL SWITCH /
STEERING SWITCH ILLUMINATION /
CRUISE CONTROL SWITCH ILLUMINATION /
STEERING SWITCH /
CLOCK SPRING

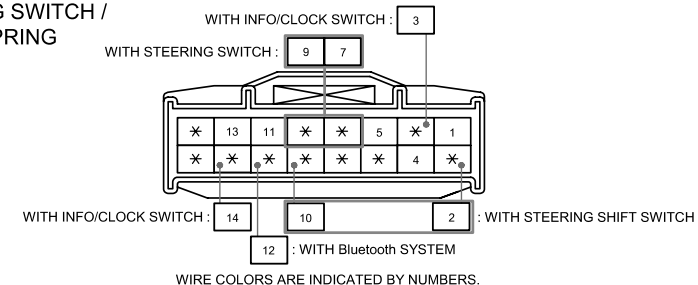

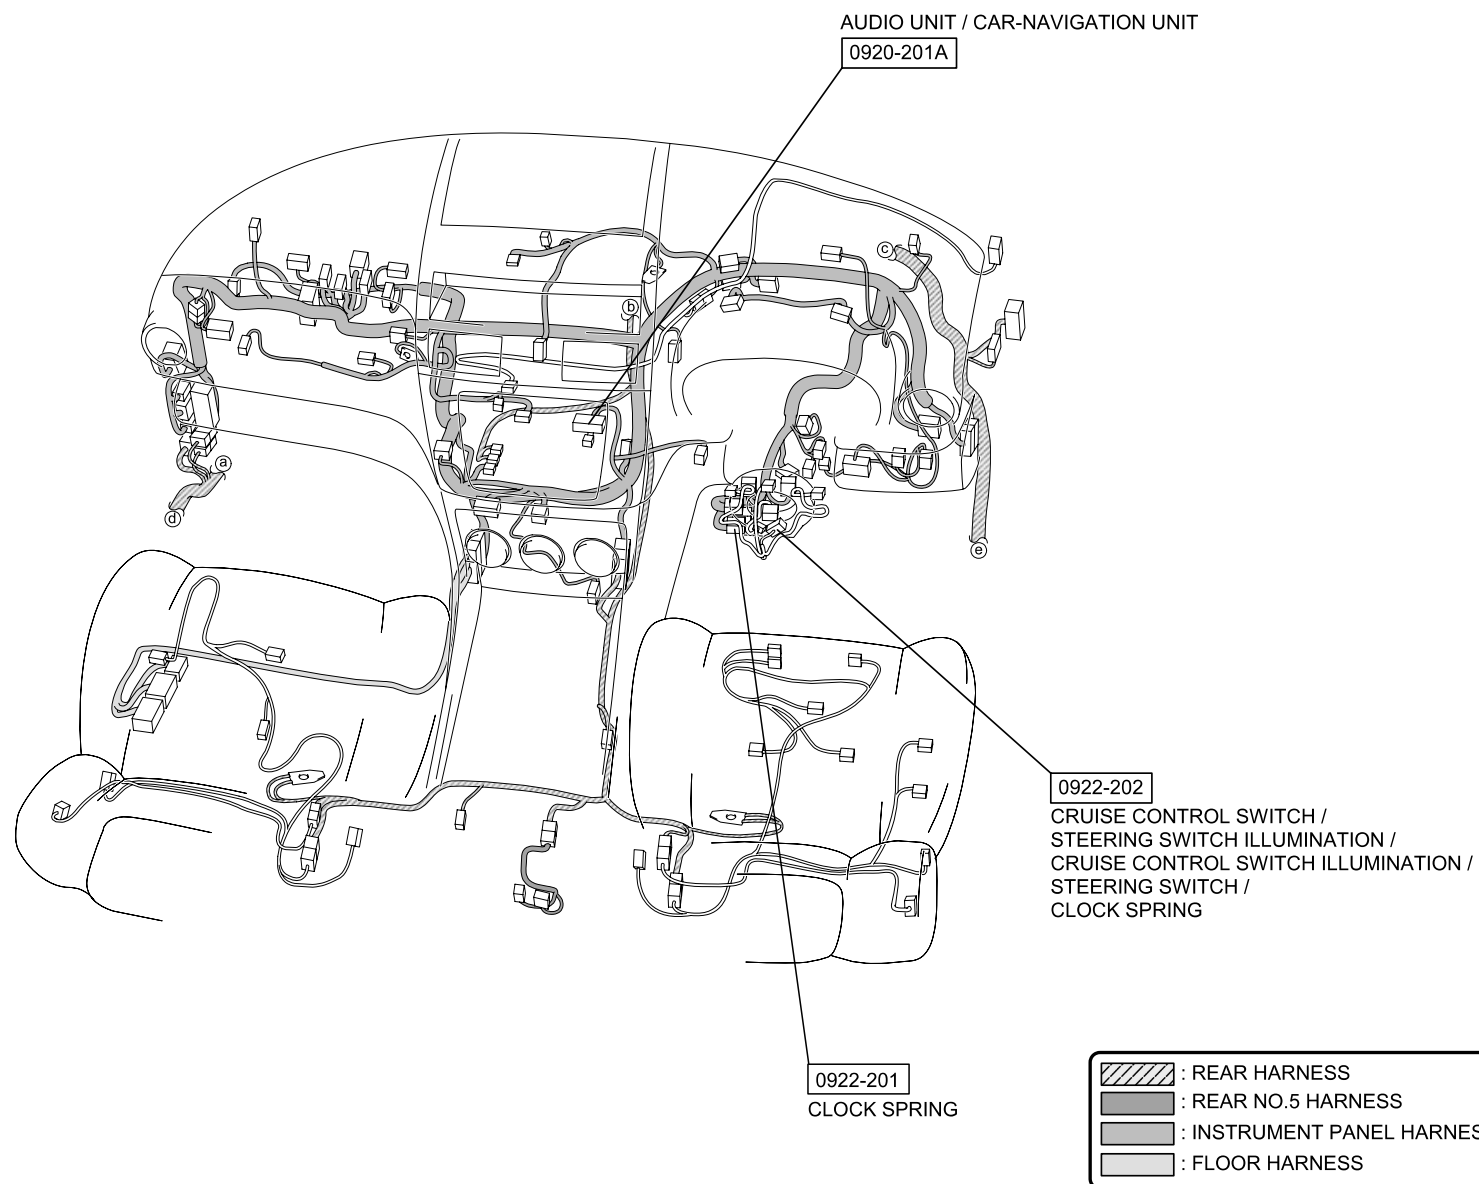

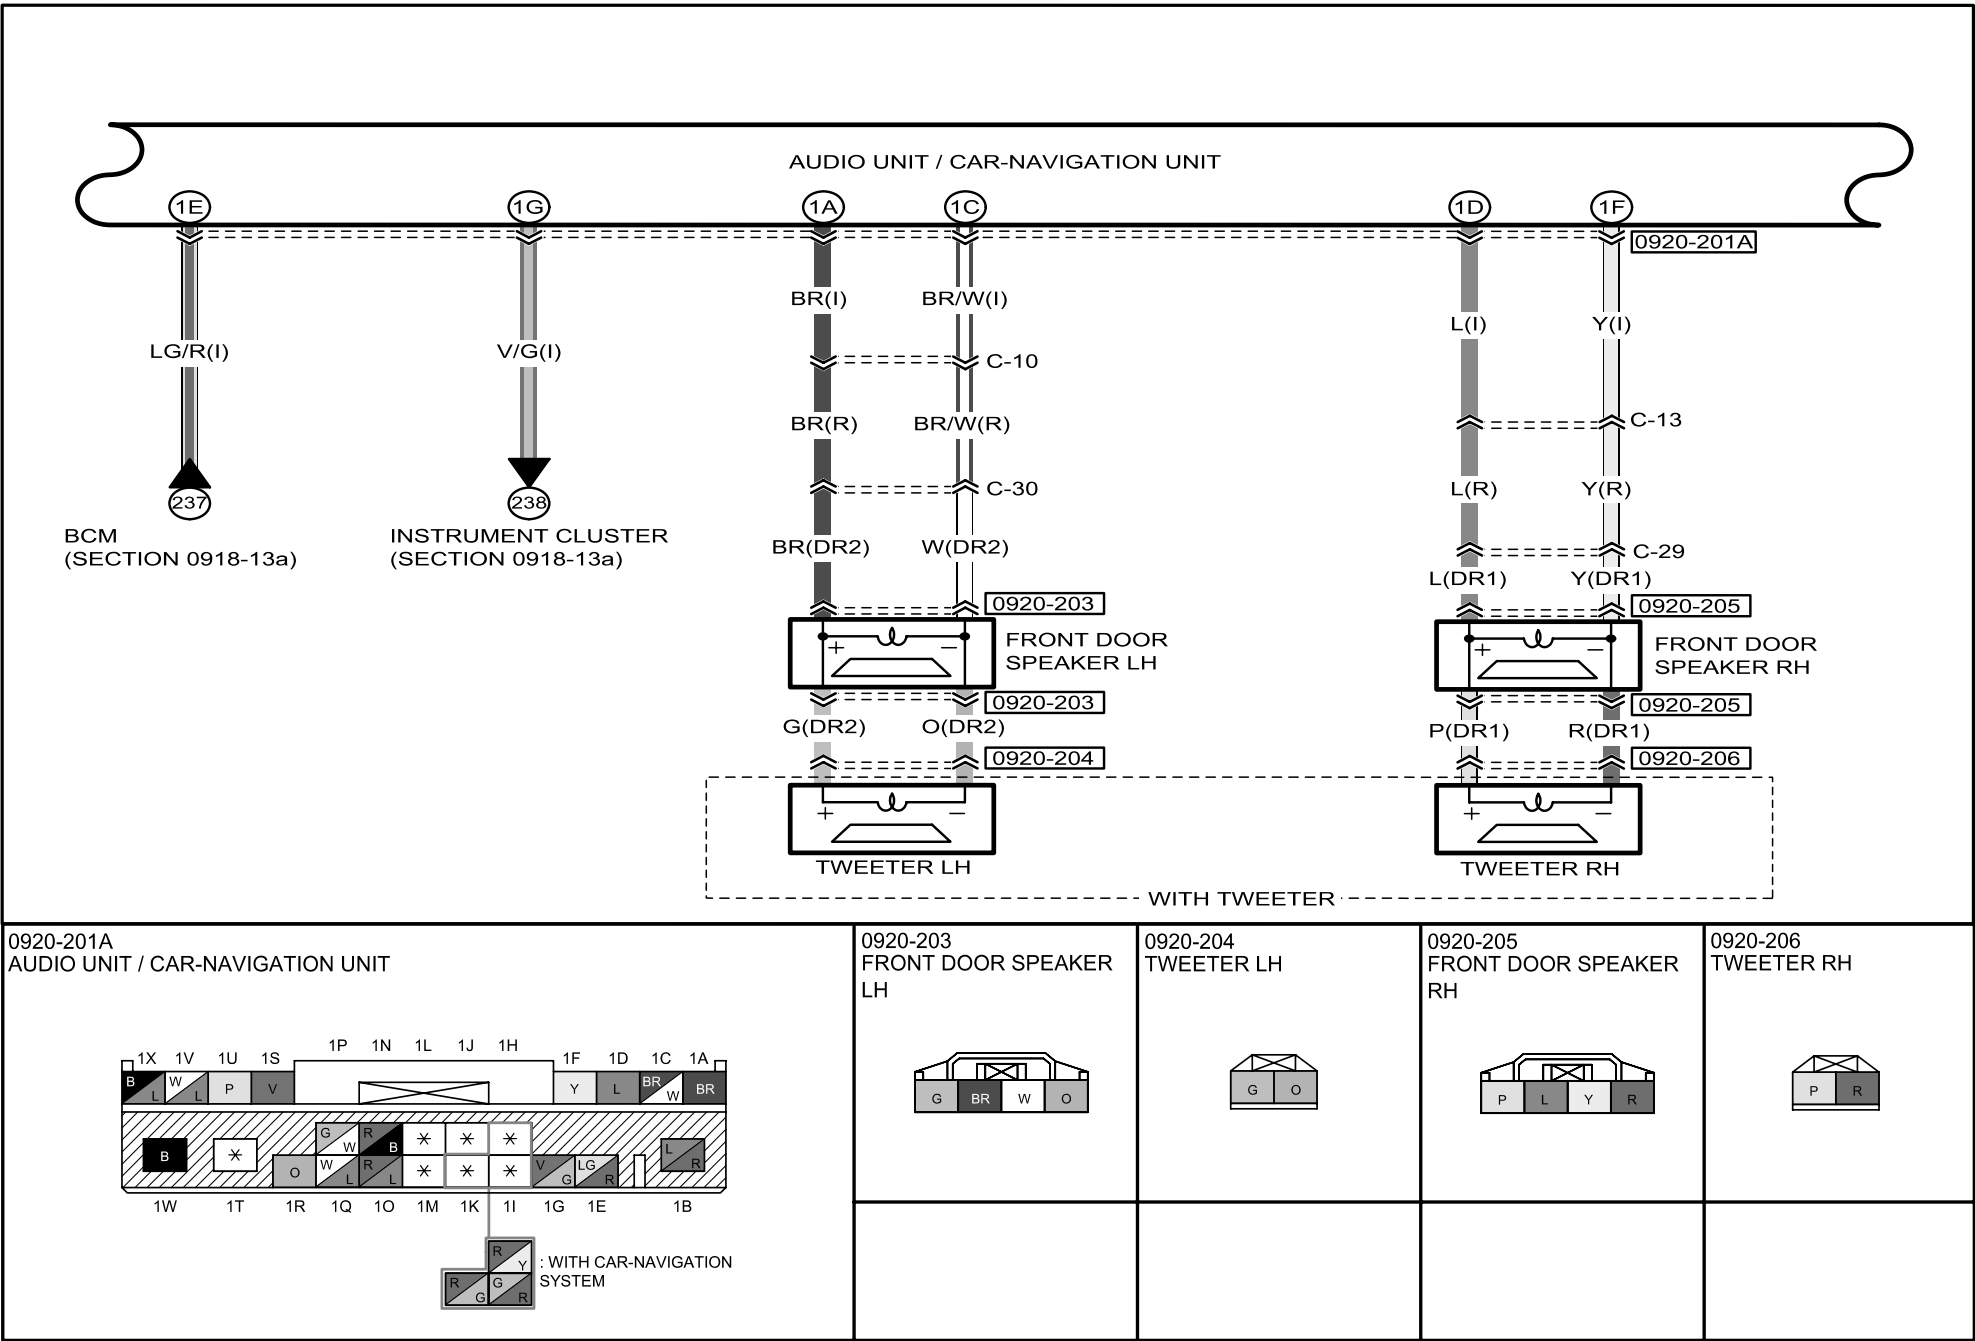

AUDIO UNIT / CAR-NAVIGATION UNIT

0920-201A

(R)-(DR1)
C-29

C-10
(L)-(R)

C-13
(L)-(R)
[GRAY]

(R)-(DR2)
C-30

[BLACK]
TWEETER LH

0920-204

FRONT DOOR SPEAKER LH

0920-203

(R)-(DR2)
C-30

[BLACK]
TWEETER RH

0920-206

(R)-(DR1)
C-29

[BLACK]
TWEETER LH

0920-204

FRONT DOOR SPEAKER LH

0920-203

[BLACK]
TWEETER RH

0920-206

(R)-(DR2)
C-30

C-29
(R)-(DR1)

[4SD]

[5HB]

0920-205

FRONT DOOR SPEAKER RH

[BLACK]
TWEETER LH

0920-204

FRONT DOOR SPEAKER LH

0920-203

(R)-(DR2)
C-30

[BLACK]
TWEETER RH

0920-206

(R)-(DR1)
C-29




[WAGON]

0920-205


FRONT DOOR SPEAKER RH

	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.3 HARNESS
	: REAR NO.4 HARNESS
	: REAR NO.5 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS

 
&2 : WITH CAR-NAVIGATION SYSTEM

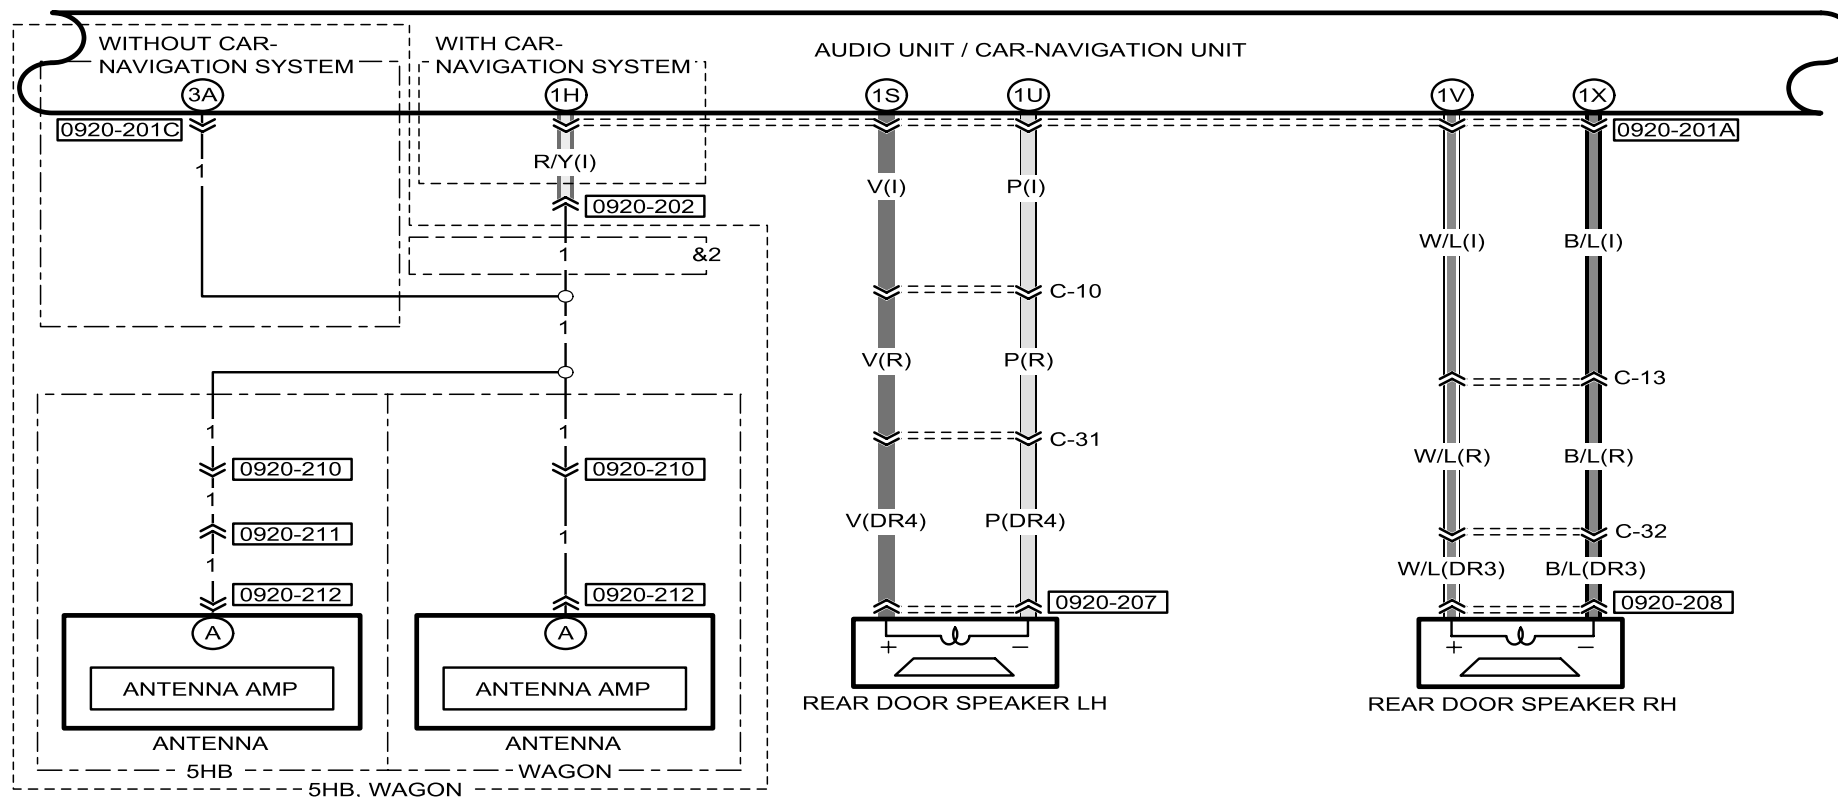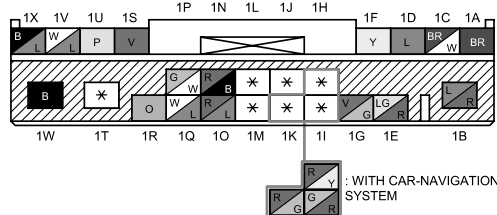0920-201A
AUDIO UNIT / CAR-NAVIGATION UNIT0920-201C
AUDIO UNIT / CAR-NAVIGATION UNIT



WIRE COLORS ARE INDICATED BY NUMBERS.

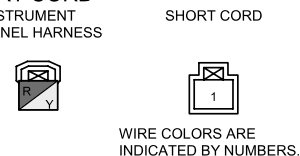0920-202
INSTRUMENT PANEL HARNESS-
SHORT CORD

WIRE COLORS ARE INDICATED BY NUMBERS.

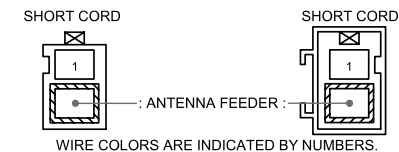0920-211
SHORT CORD-SHORT CORD




 
WIRE COLORS ARE INDICATED BY NUMBERS.

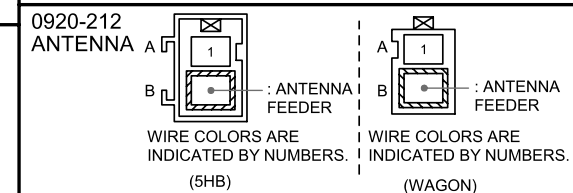




WIRE COLORS ARE INDICATED BY NUMBERS.
(5HB)WIRE COLORS ARE INDICATED BY NUMBERS.
(WAGON)0920-207
REAR DOOR SPEAKER LH0920-208
REAR DOOR SPEAKER RH


AUDIO SYSTEM (WITHOUT Bose® TYPE AUDIO)

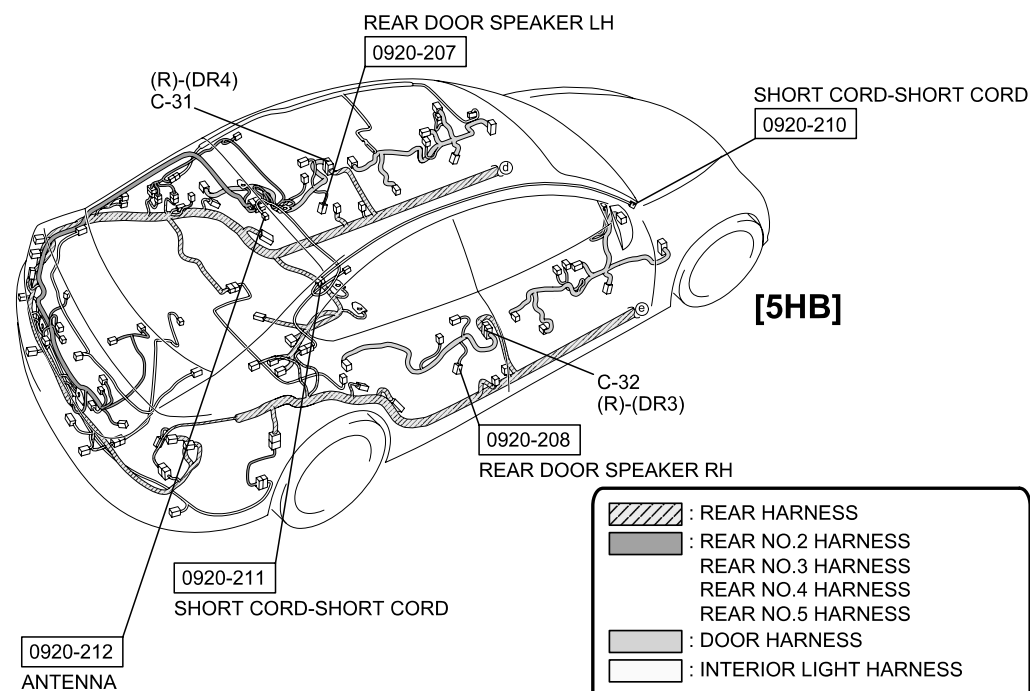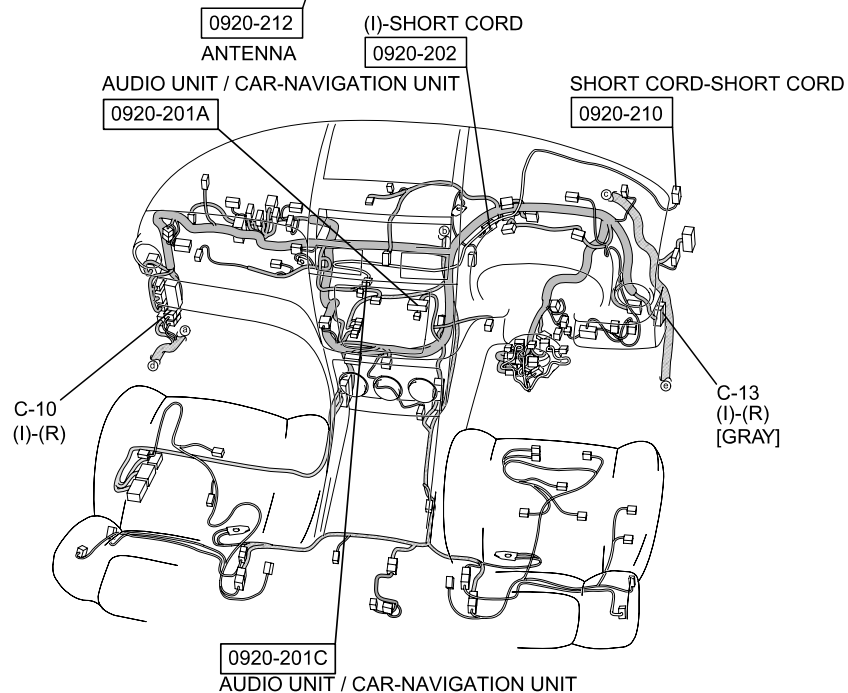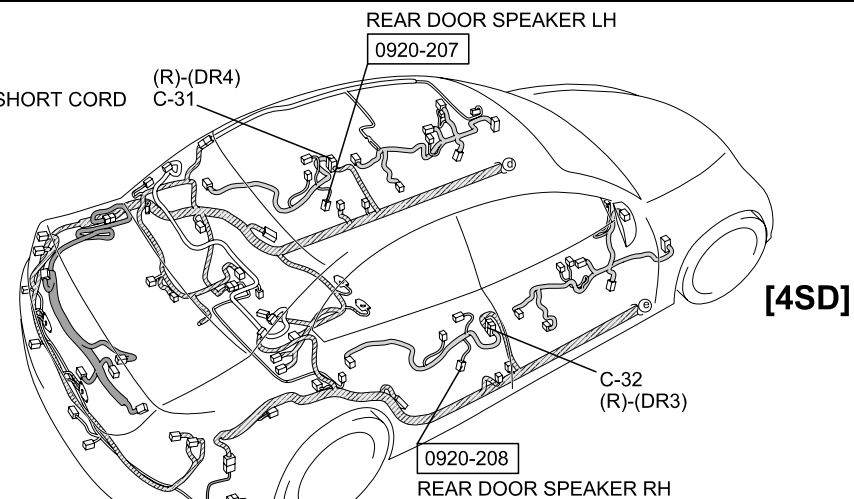
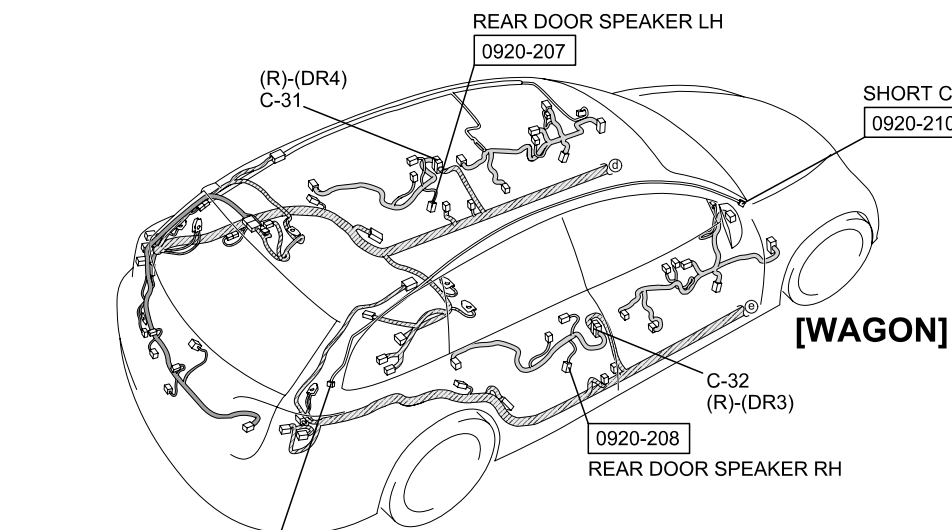
0920-2d


307




-  : REAR HARNESS
-  : REAR NO.2 HARNESS
-  : REAR NO.3 HARNESS
-  : REAR NO.4 HARNESS
-  : REAR NO.5 HARNESS
-  : DOOR HARNESS
-  : INTERIOR LIGHT HARNESS
-  : INSTRUMENT PANEL HARNESS
-  : FLOOR HARNESS

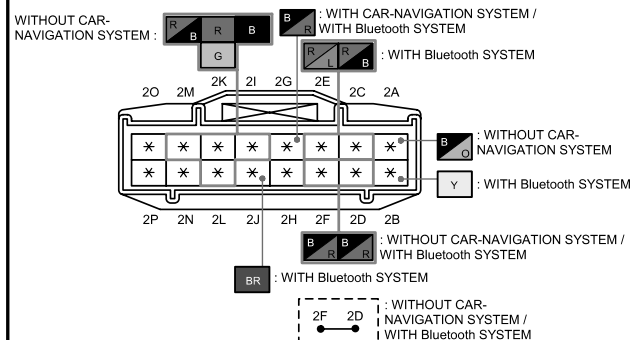

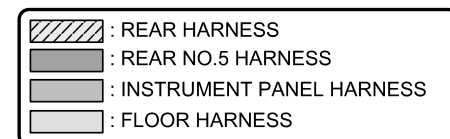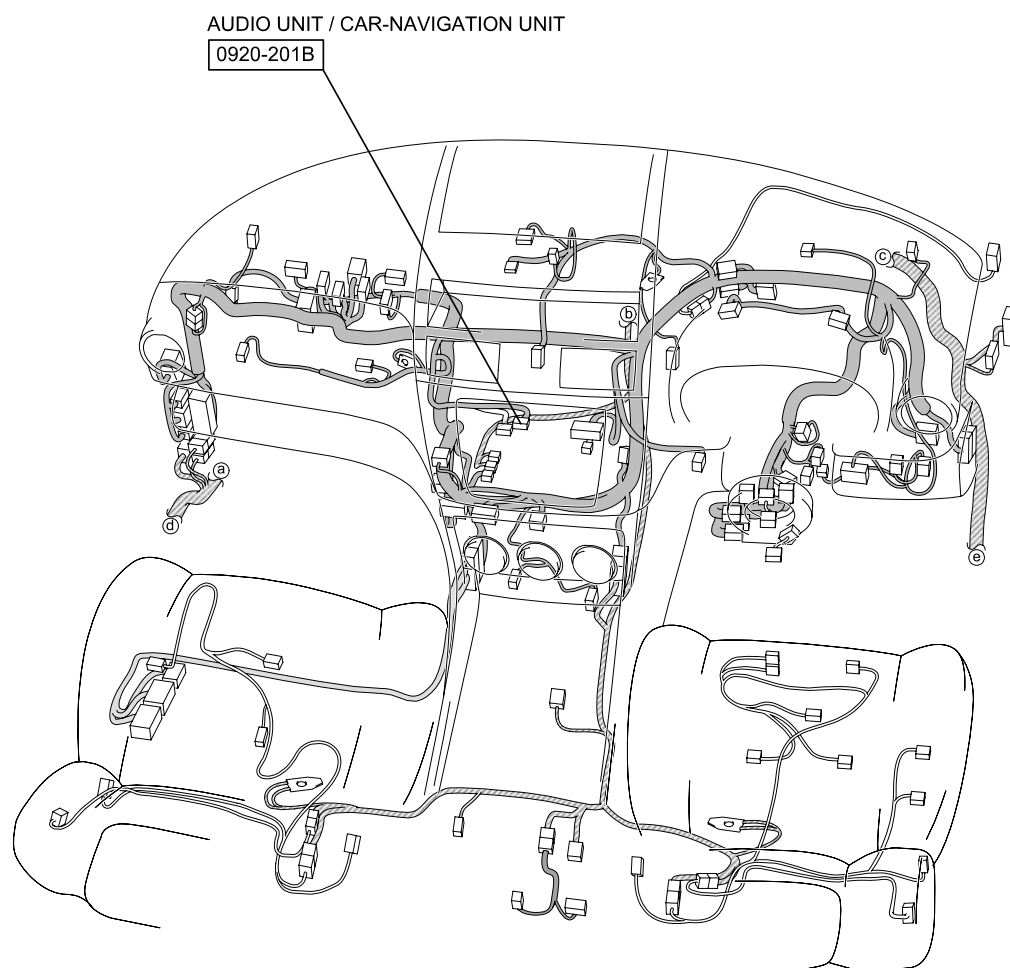


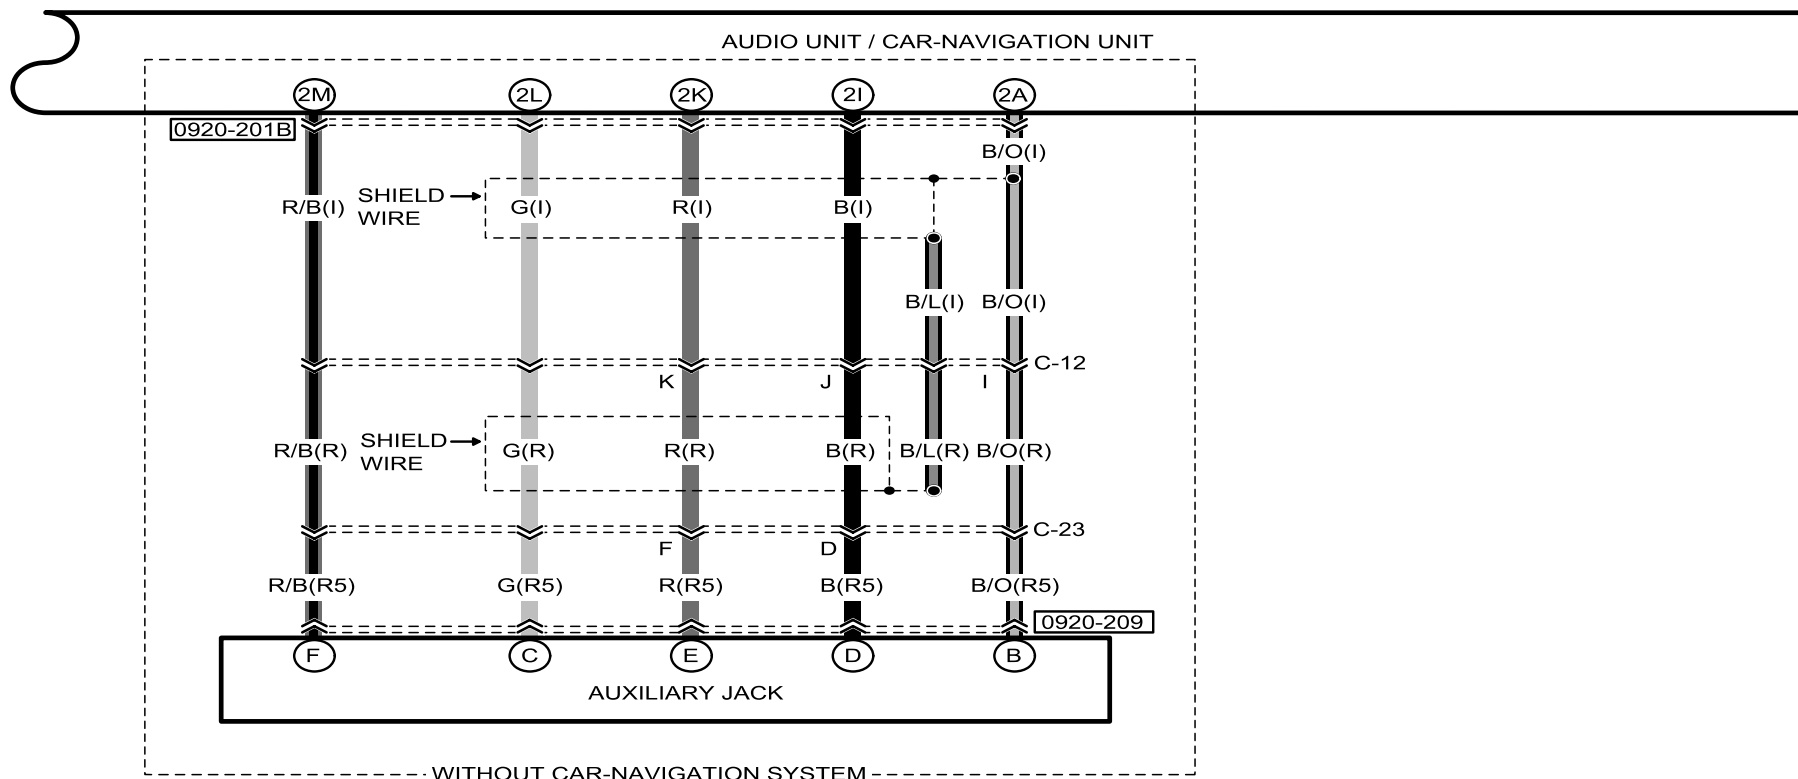



0920-201B
AUDIO UNIT / CAR-NAVIGATION UNIT

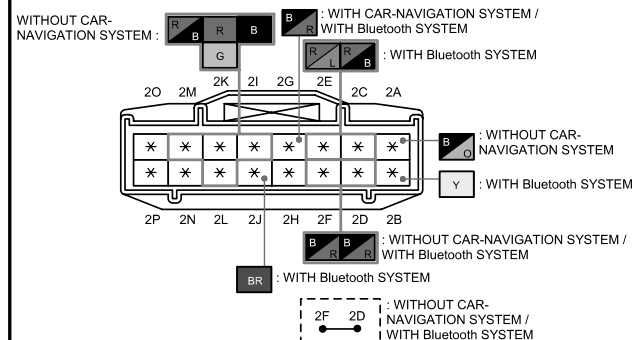


0920-209
AUXILIARY JACK

 


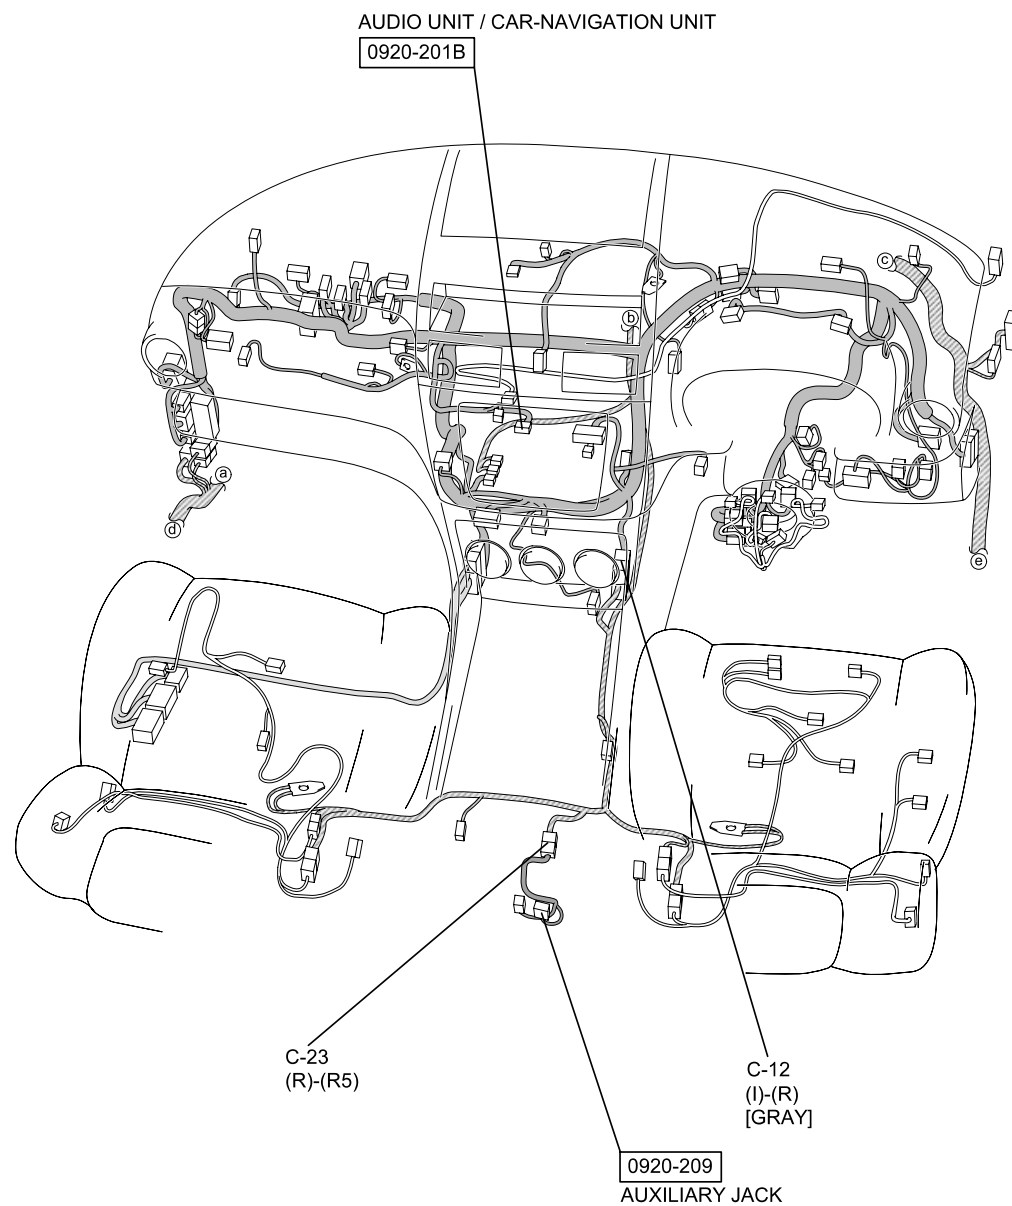

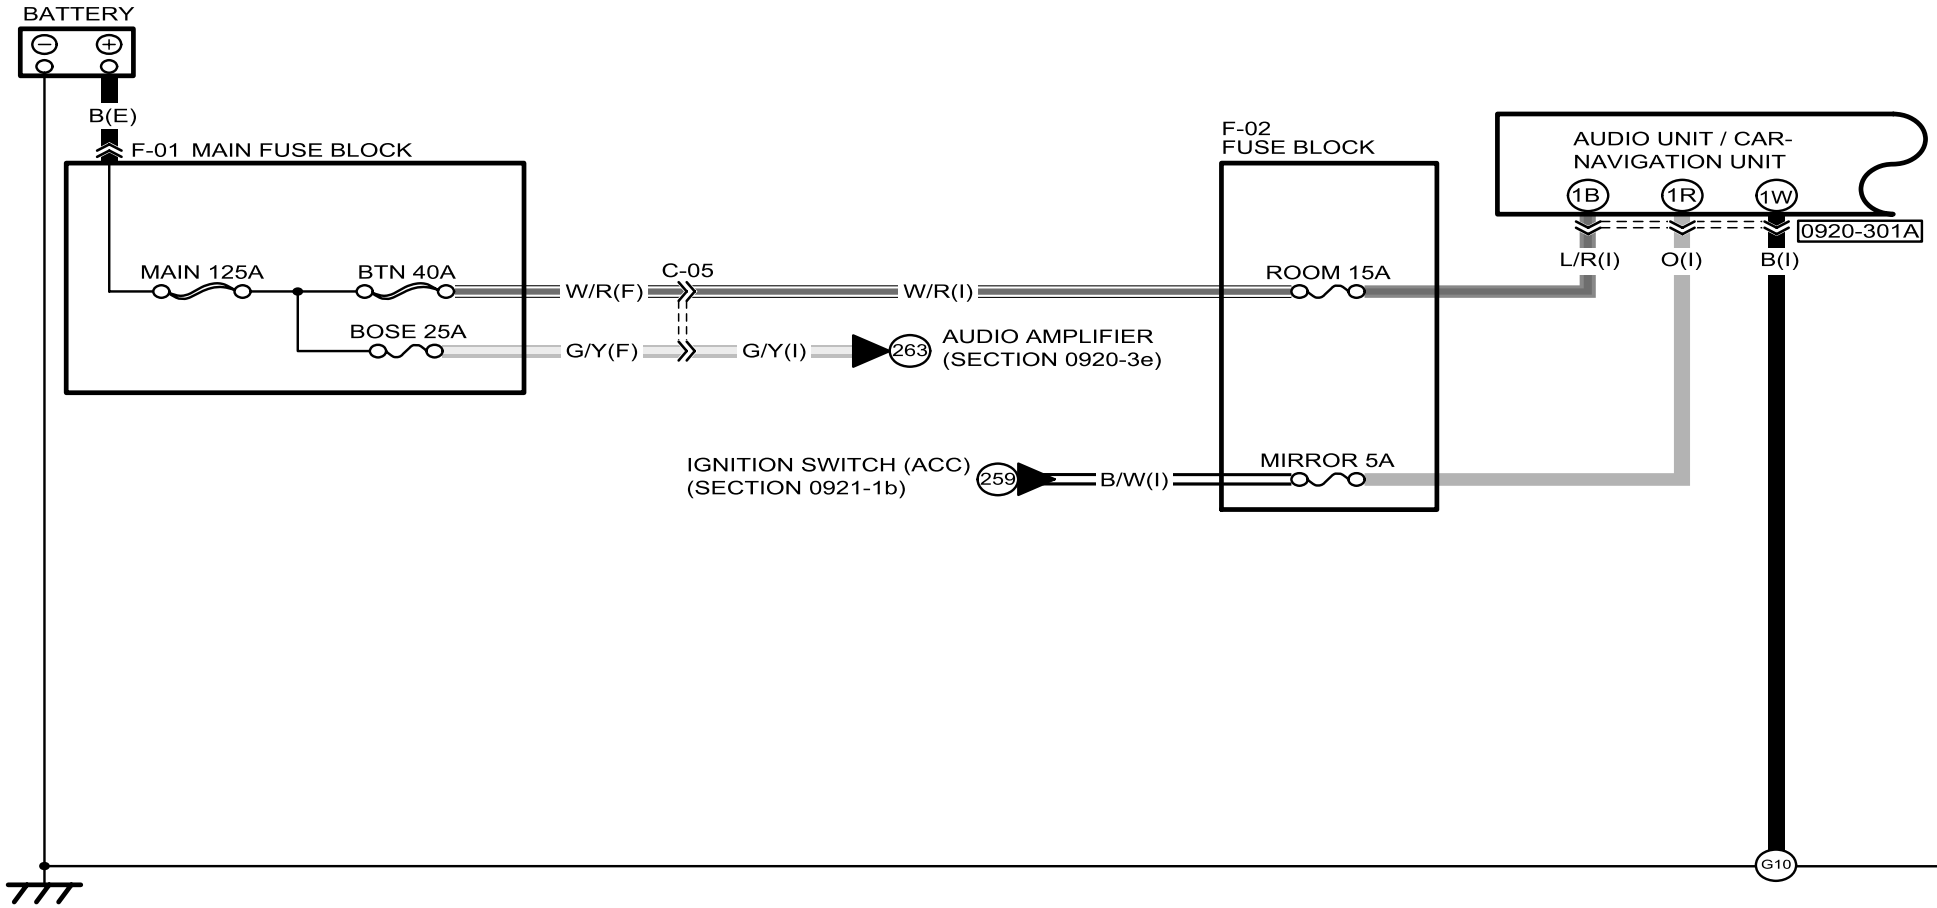


0920-301A
AUDIO UNIT / CAR-NAVIGATION UNIT

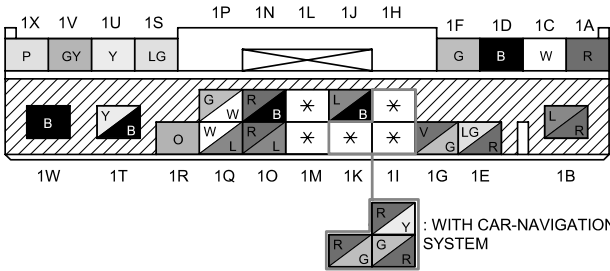

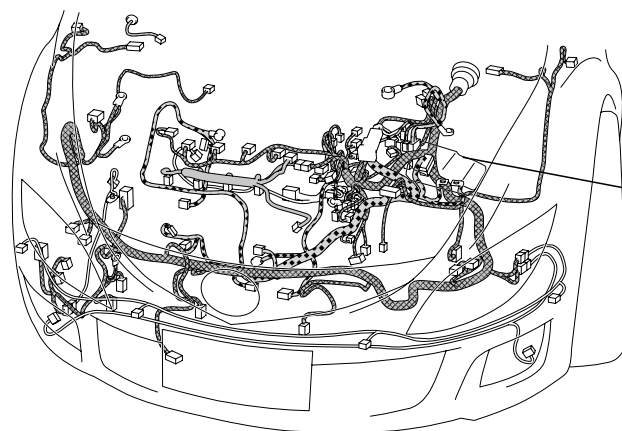

[EXCEPT MZR-CD 2.2]

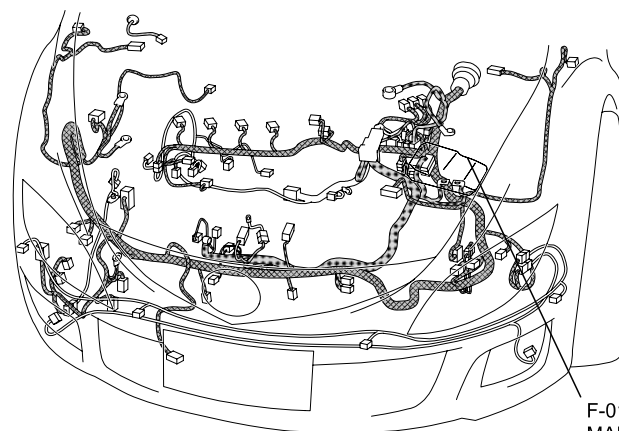

[MZR-CD 2.2]

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

AUDIO UNIT / CAR-NAVIGATION UNIT
0920-301A



[GRAY]
(F)-(I)
C-05


F-02
FUSE BLOCK
(REFER TO 00F SECTION)

G10


[GRAY]
(F)-(I)
C-05

	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

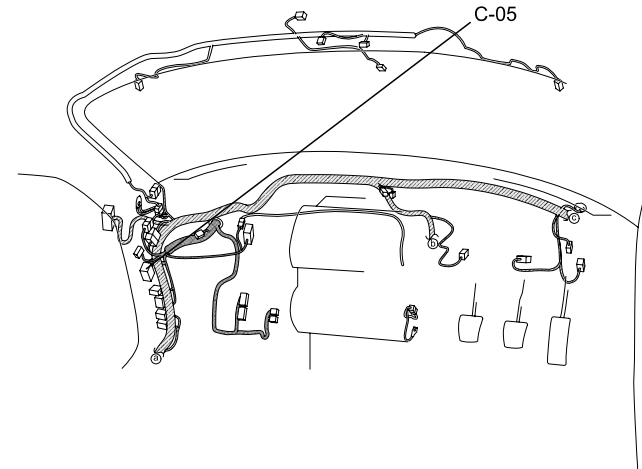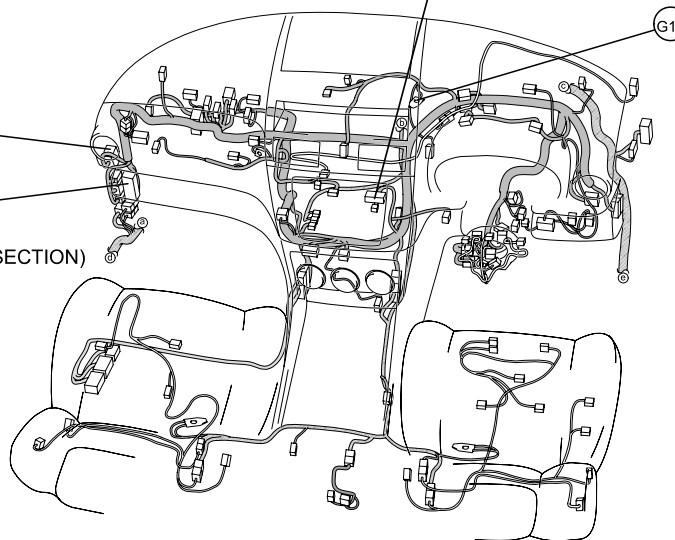


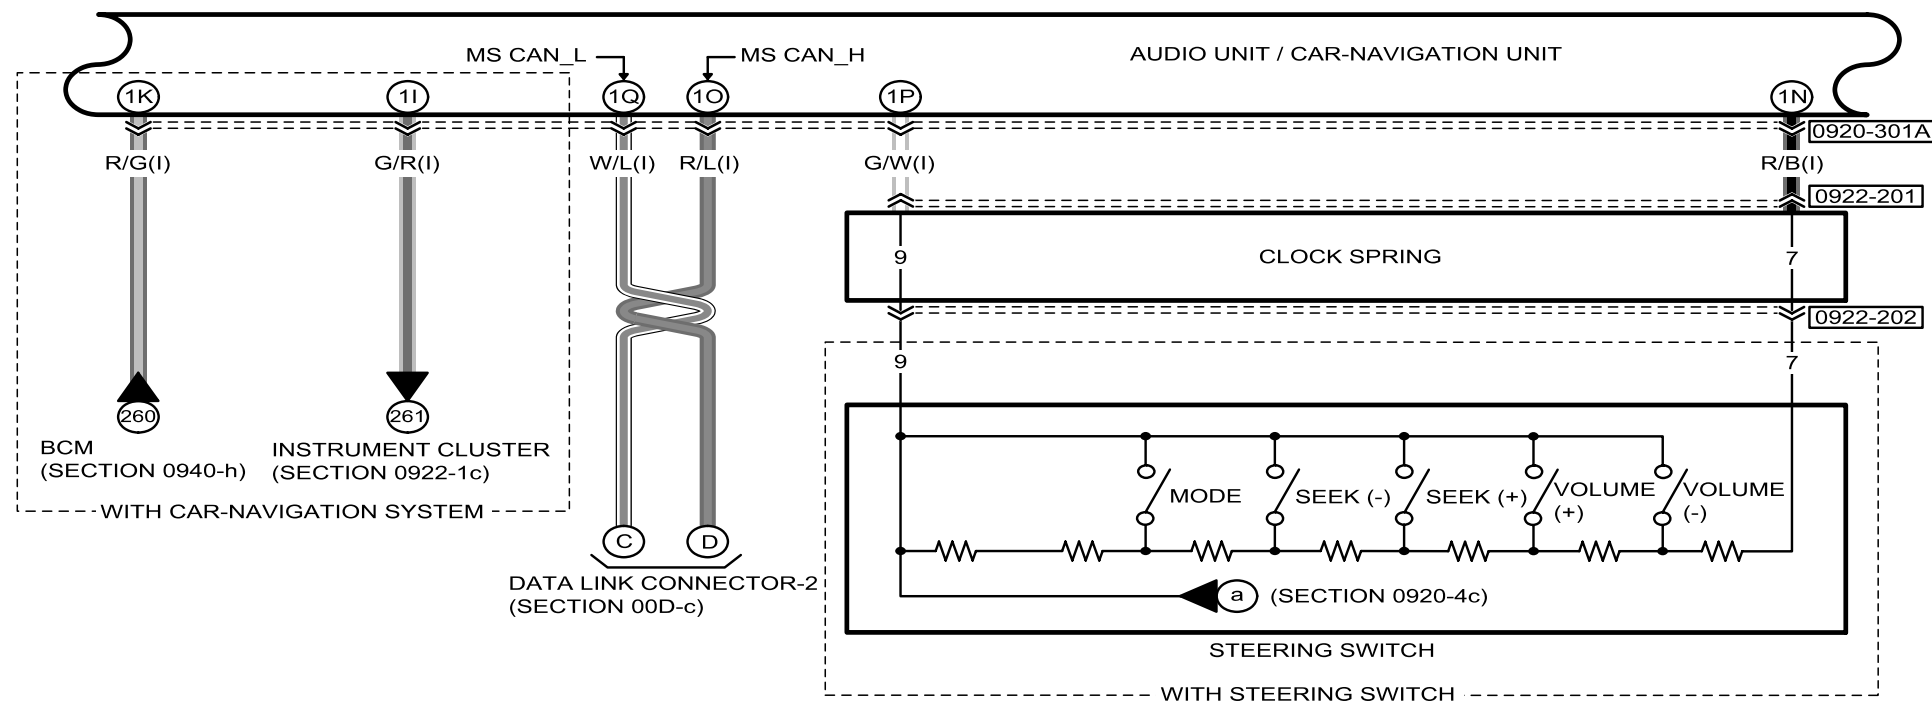


0920-301A
AUDIO UNIT / CAR-NAVIGATION UNIT

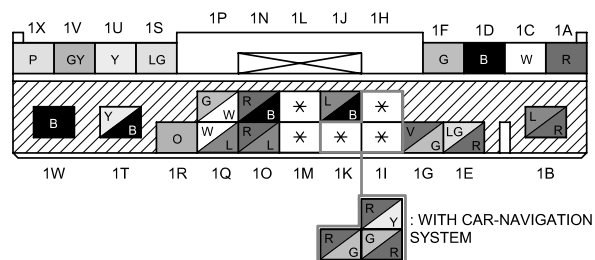



0922-201
CLOCK SPRING

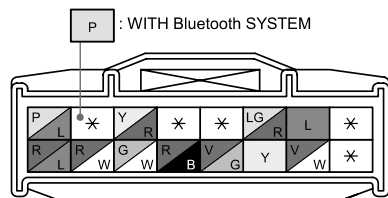


0922-202
CRUISE CONTROL SWITCH /
STEERING SWITCH ILLUMINATION /
CRUISE CONTROL SWITCH ILLUMINATION /
STEERING SWITCH /
CLOCK SPRING

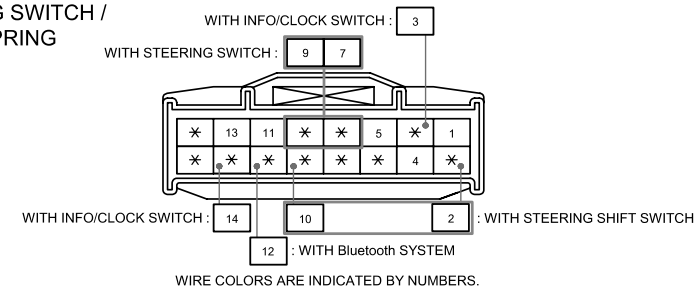

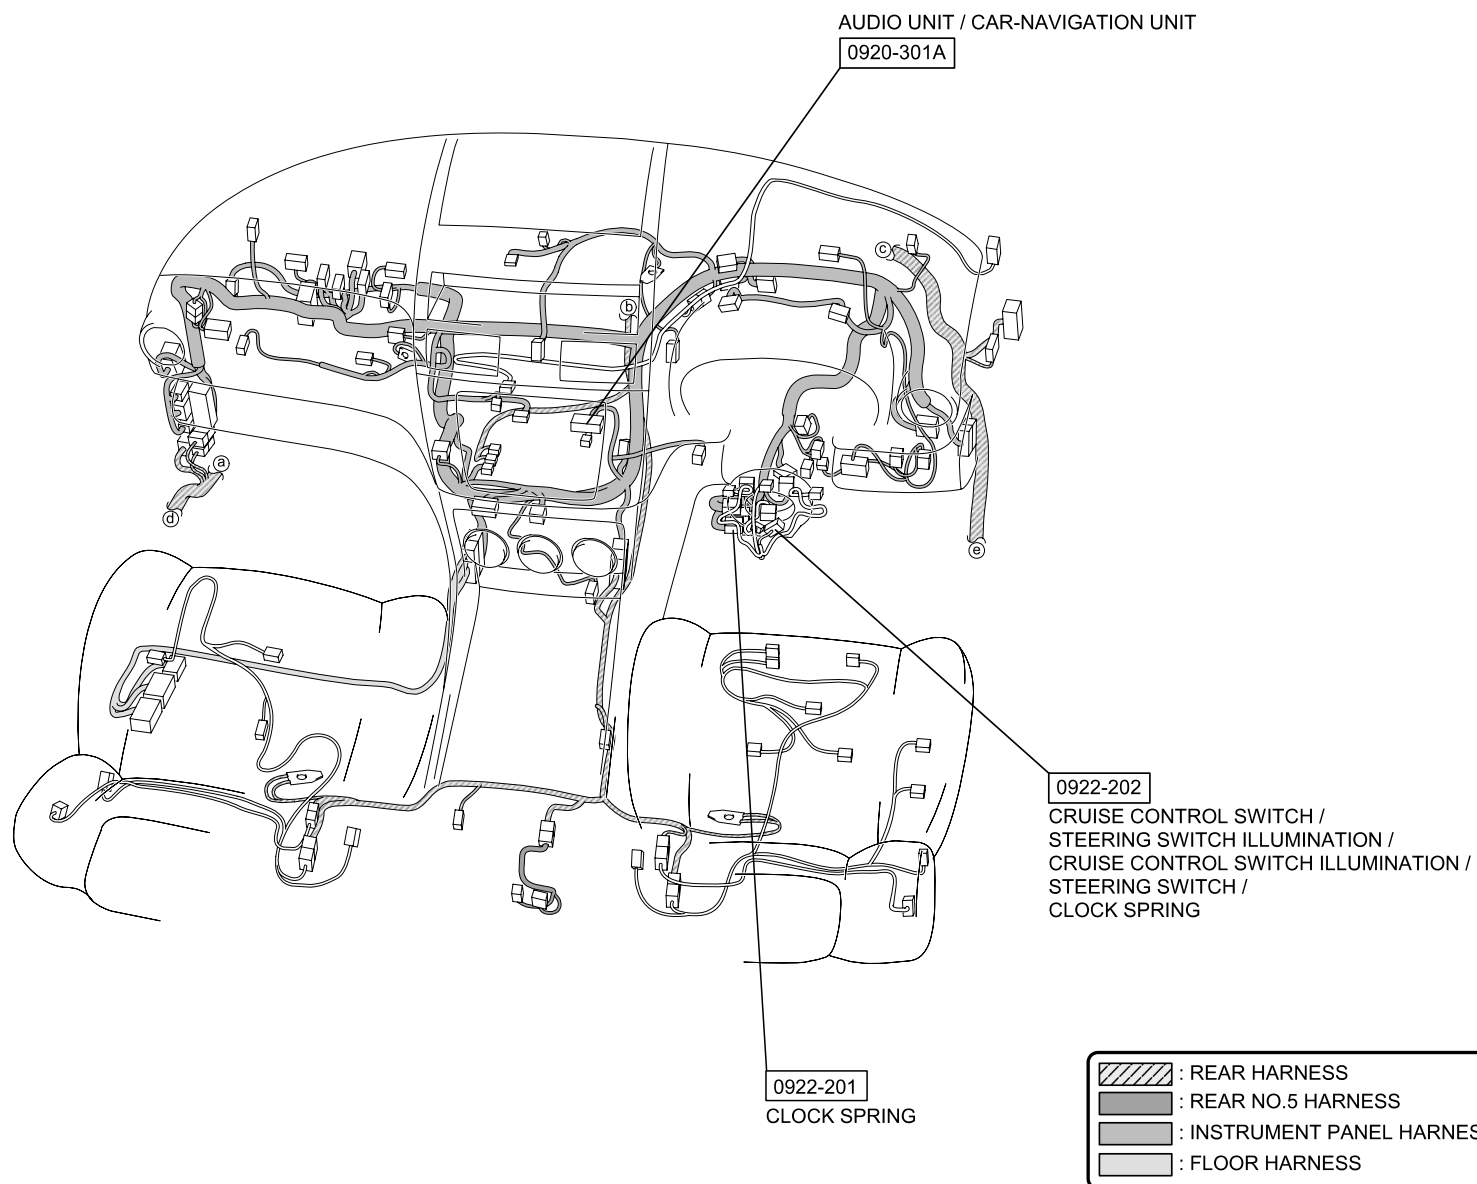


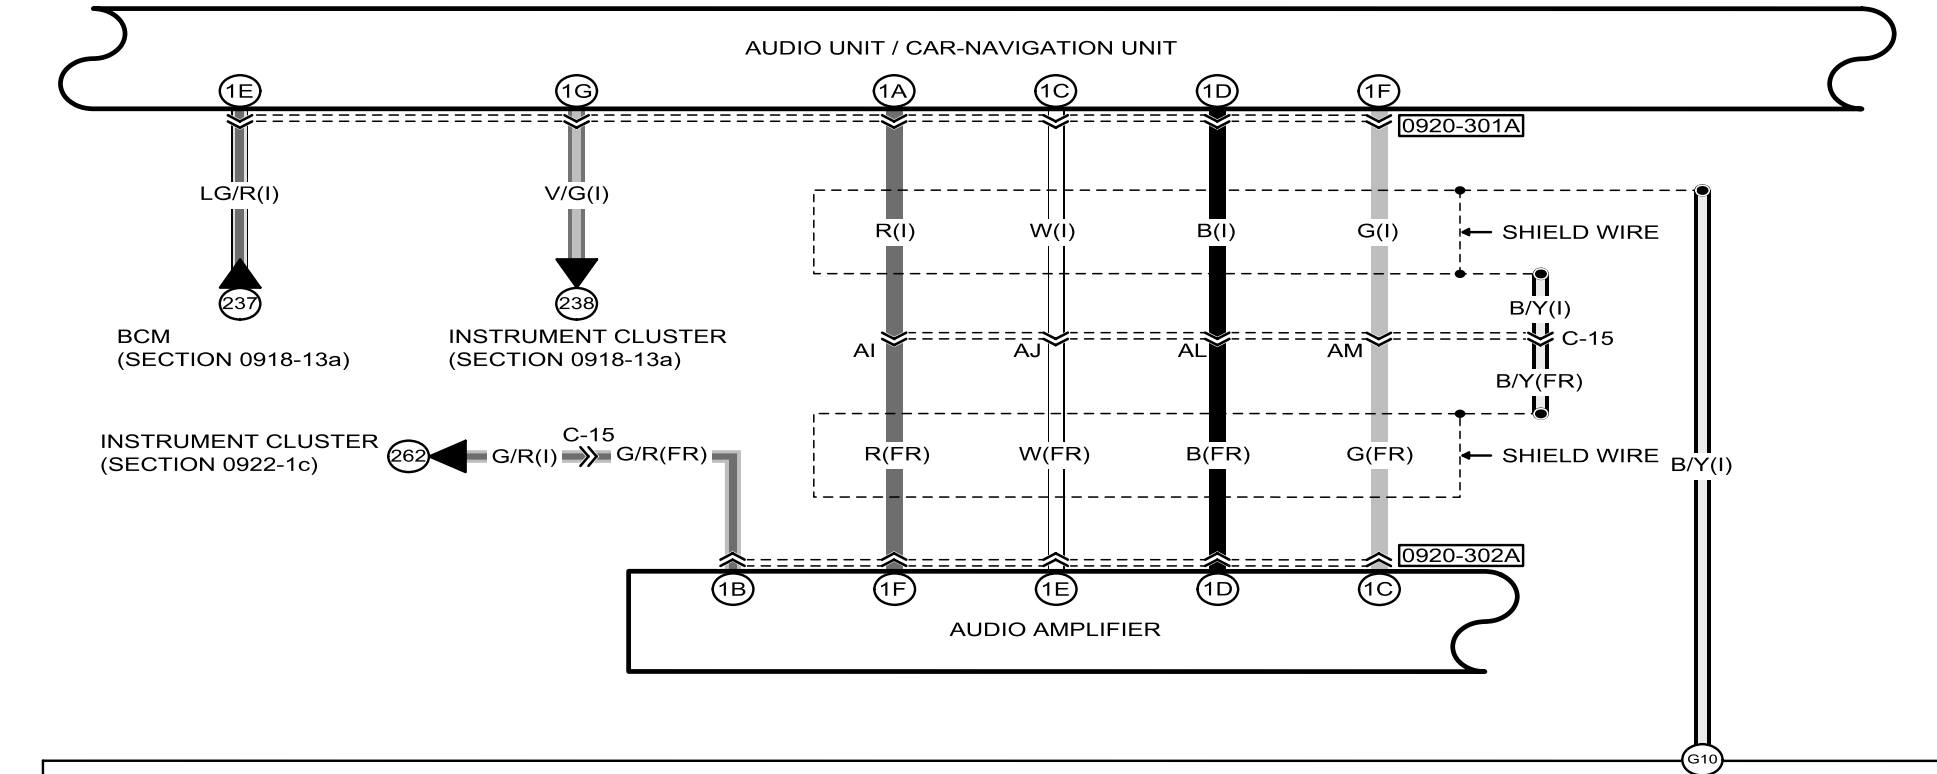


0920-301A
AUDIO UNIT / CAR-NAVIGATION UNIT

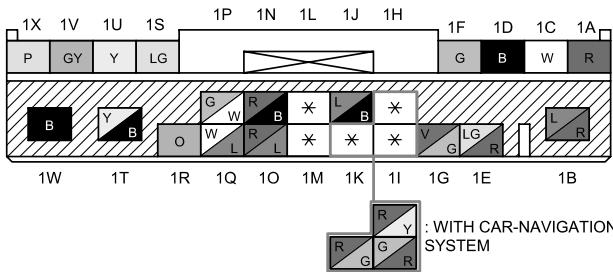

0920-302A
AUDIO AMPLIFIER

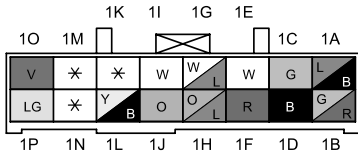

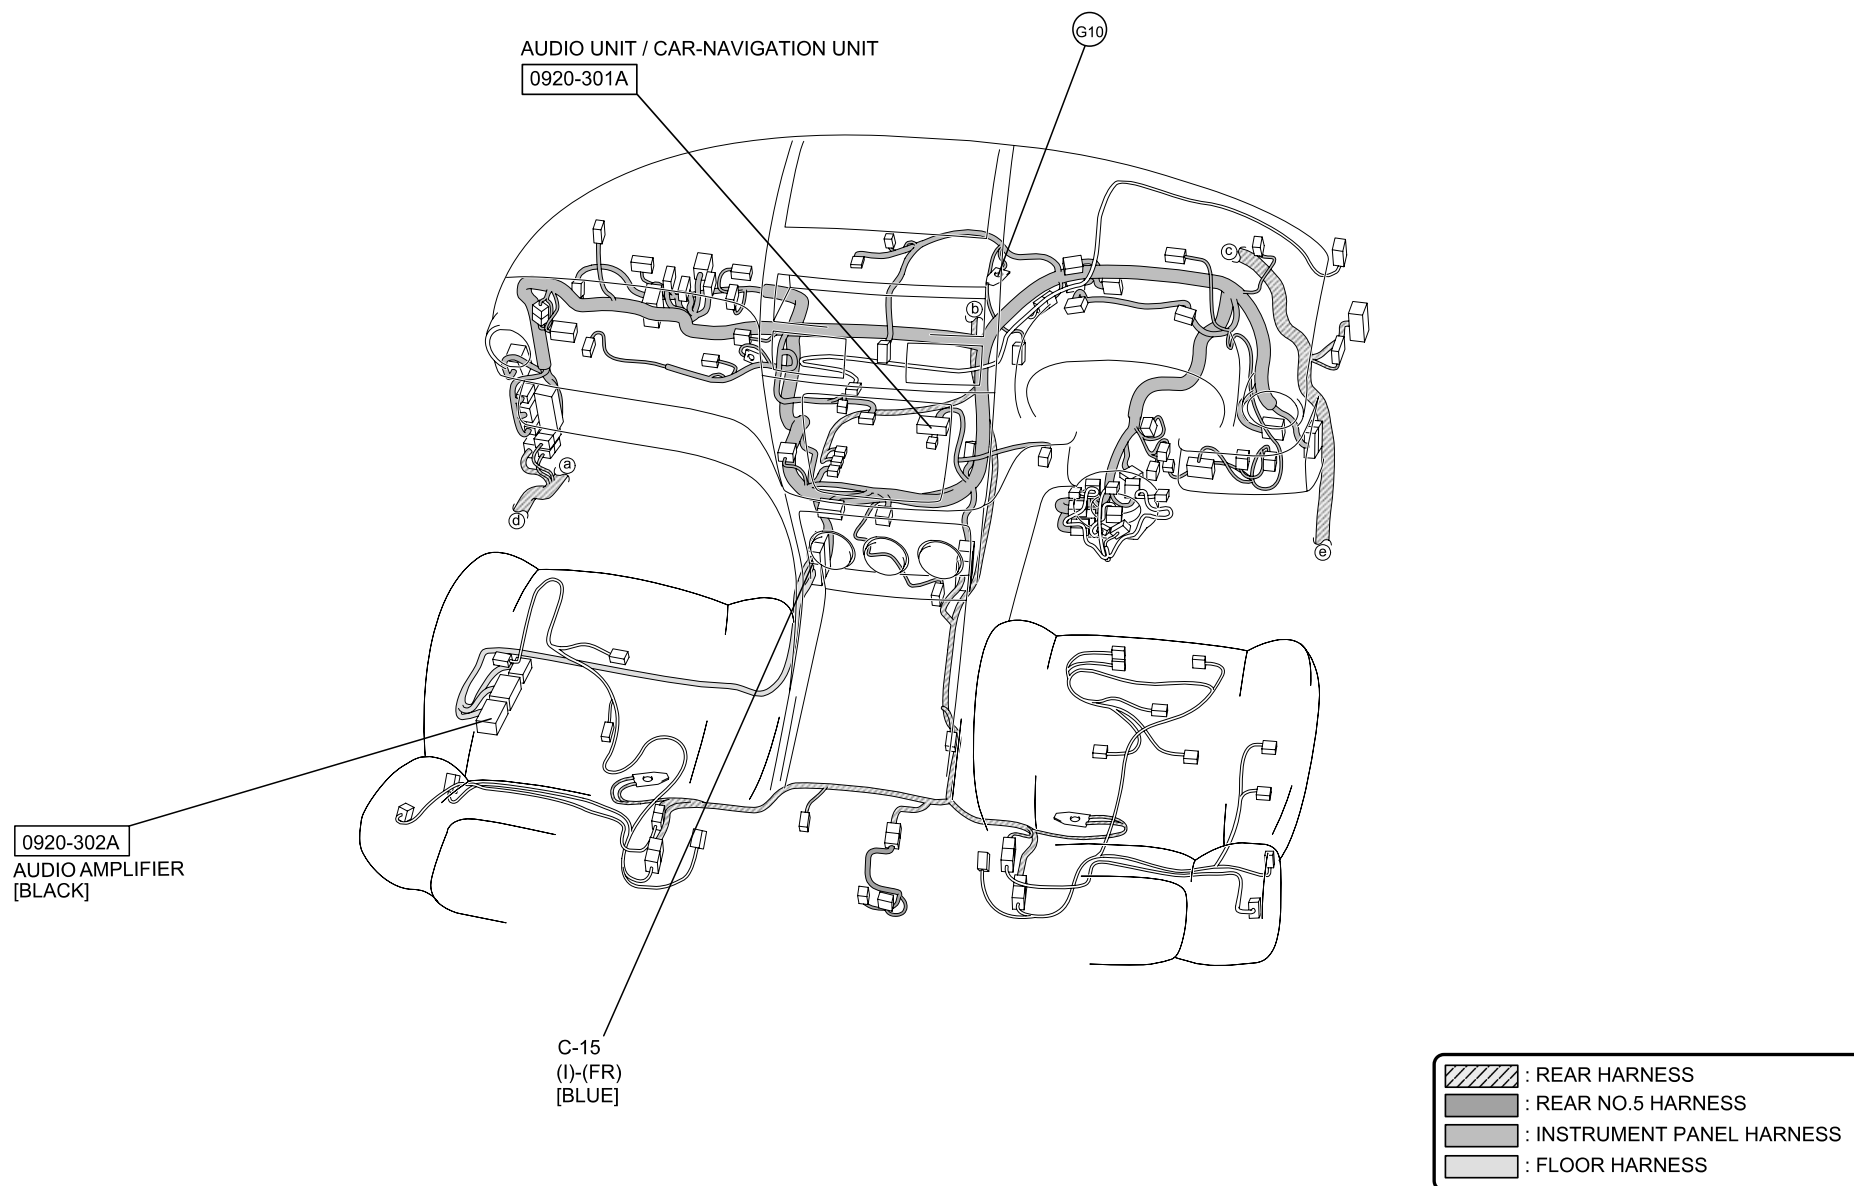




3A
3B : ANTENNA FEEDER

WIRE COLORS ARE INDICATED BY NUMBERS.

SHORT CORD SHORT CORD



1 : ANTENNA FEEDER : 1

WIRE COLORS ARE INDICATED BY NUMBERS.

WIRE COLORS ARE INDICATED BY NUMBERS

DIO AMPLI LINK

1K 1I 1G 1E

1O 1M [] [X] [] 1C 1A



V	*	*	W	W/L	W	G	L/E
LG	*	Y/B	O	O/L	R	B	G/F

1P 1N 1L 1J 1H 1F 1D 1B

WIRE COLORS ARE INDICATED BY NUMBERS

**INSTRUMENT
PANEL HARNESS**


SHORT CORD


**WIRE COLORS ARE
INDICATED BY NUMBERS.**


WIRE COLORS ARE
INDICATED BY NUMBERS

WIRE COLORS ARE INDICATED BY NUMBERS.

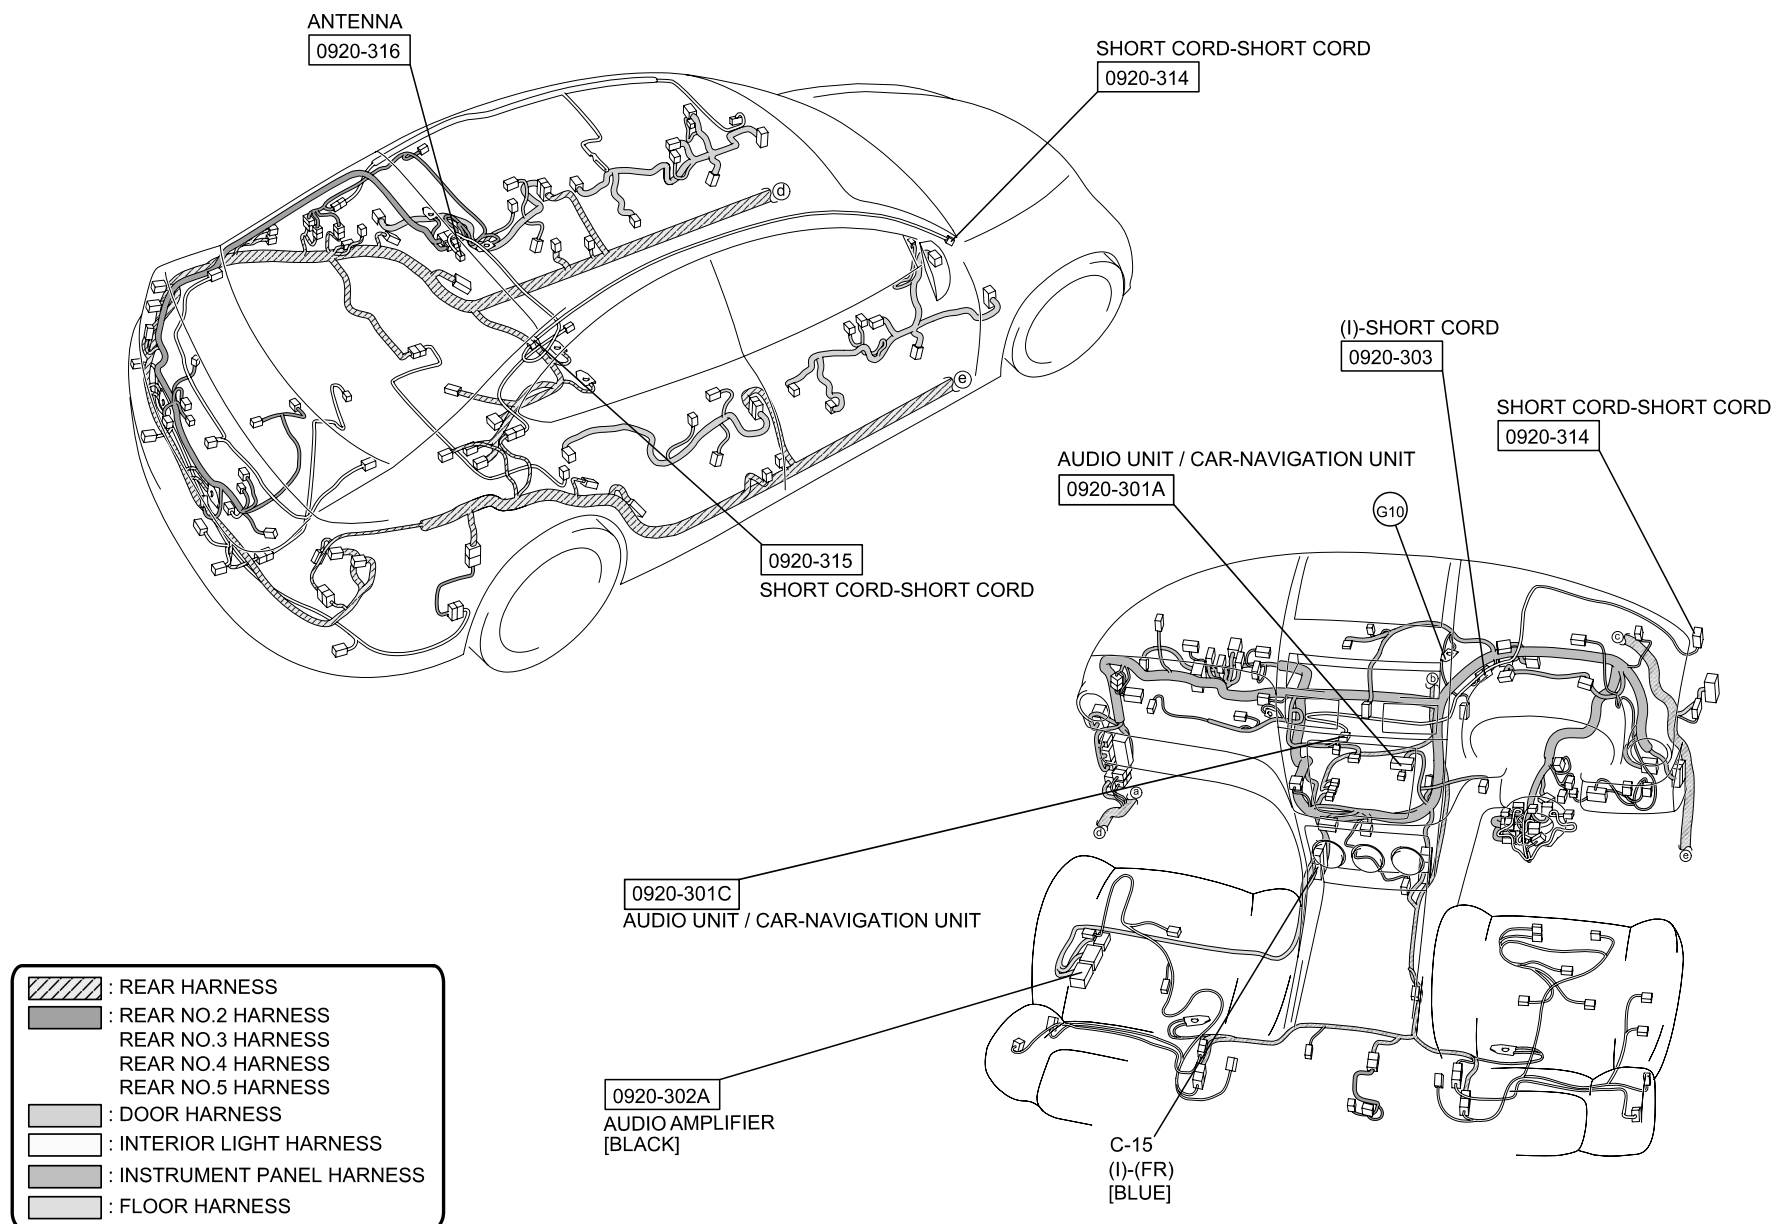




 


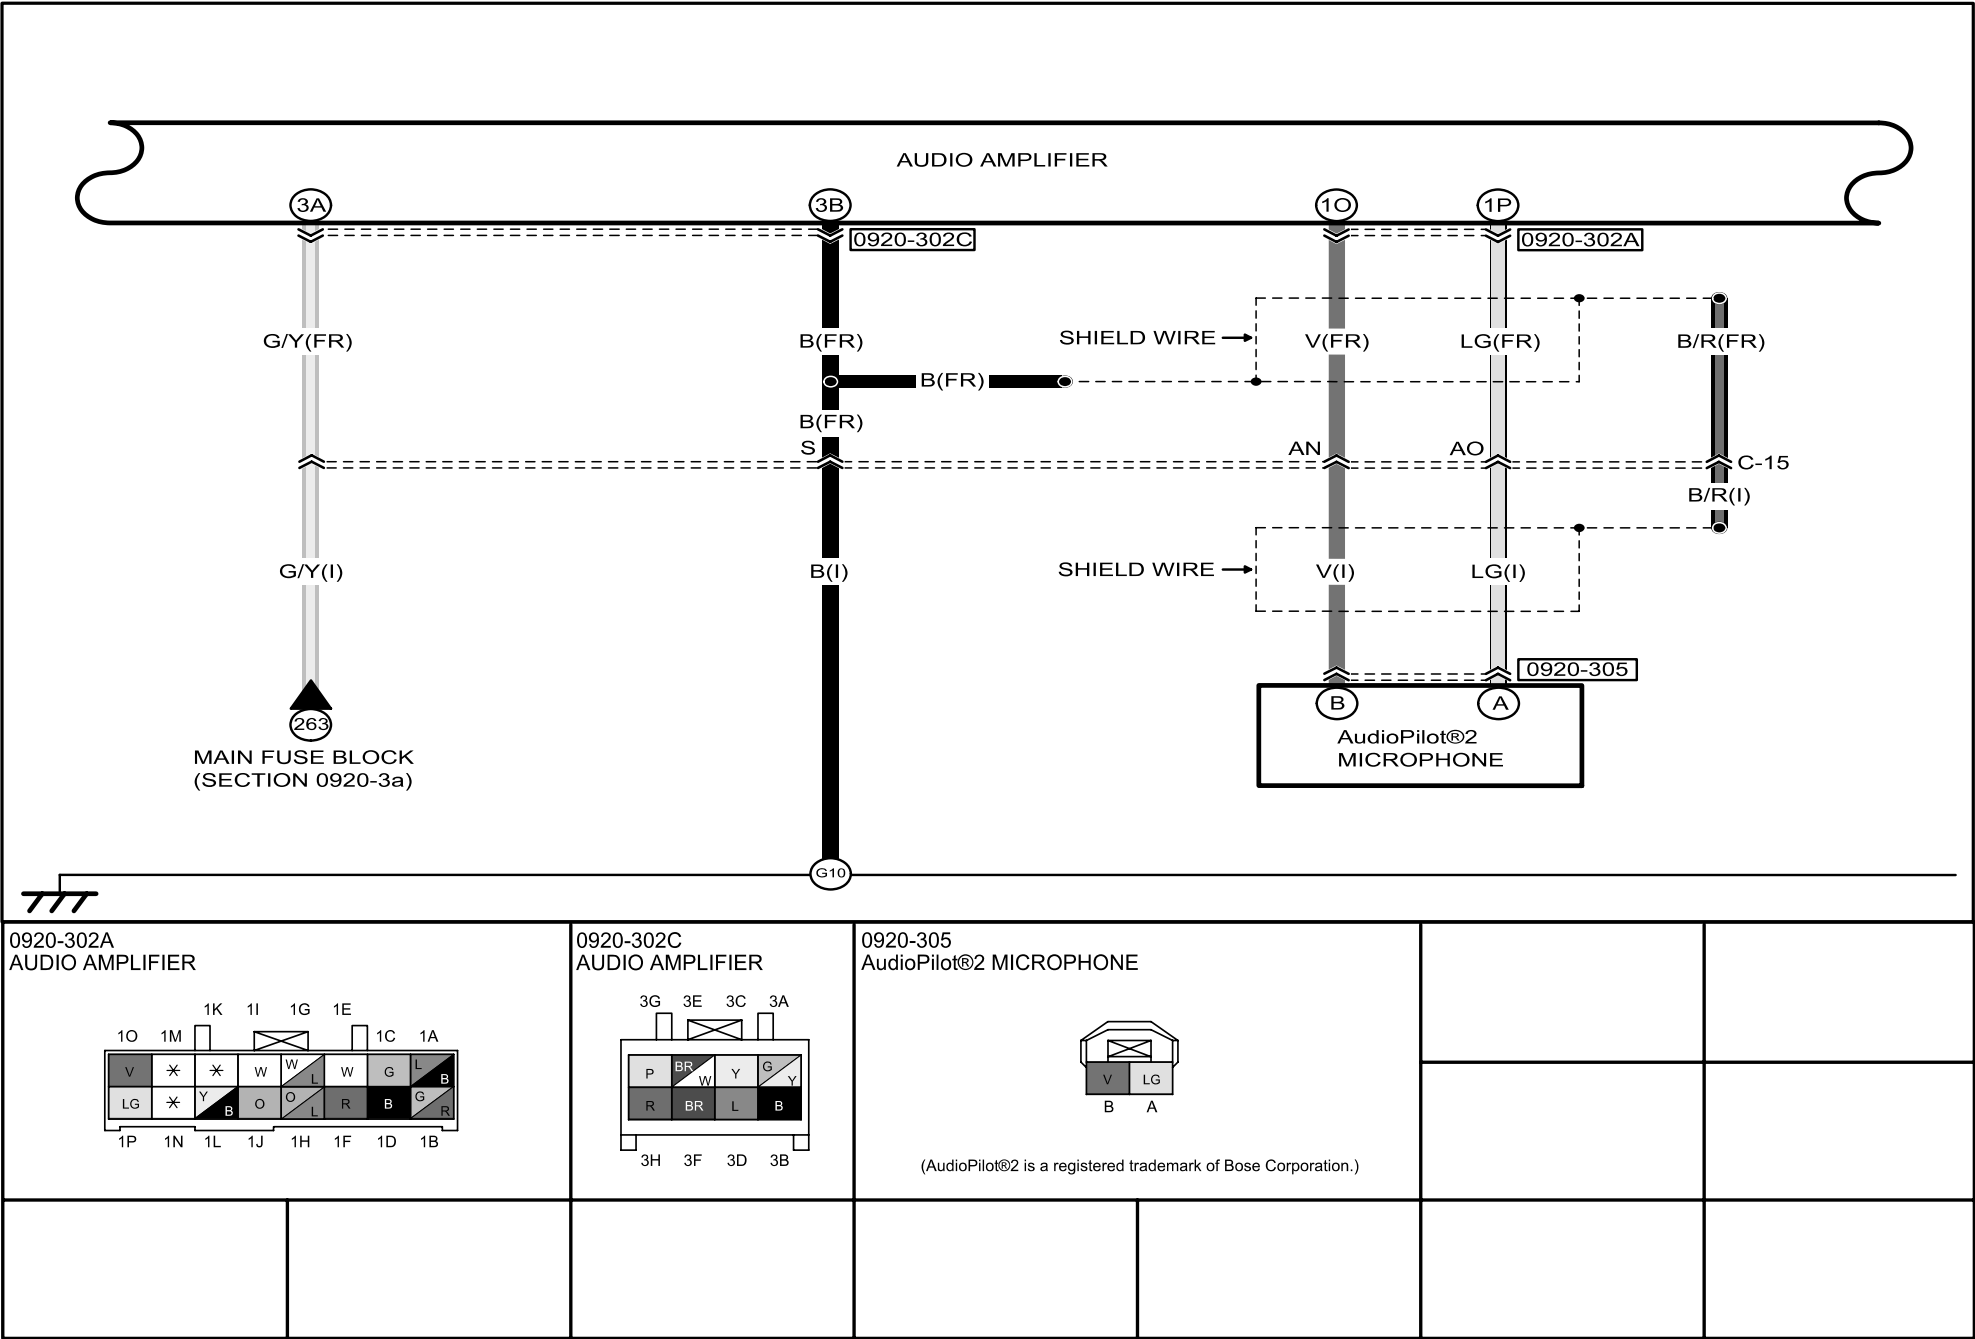320

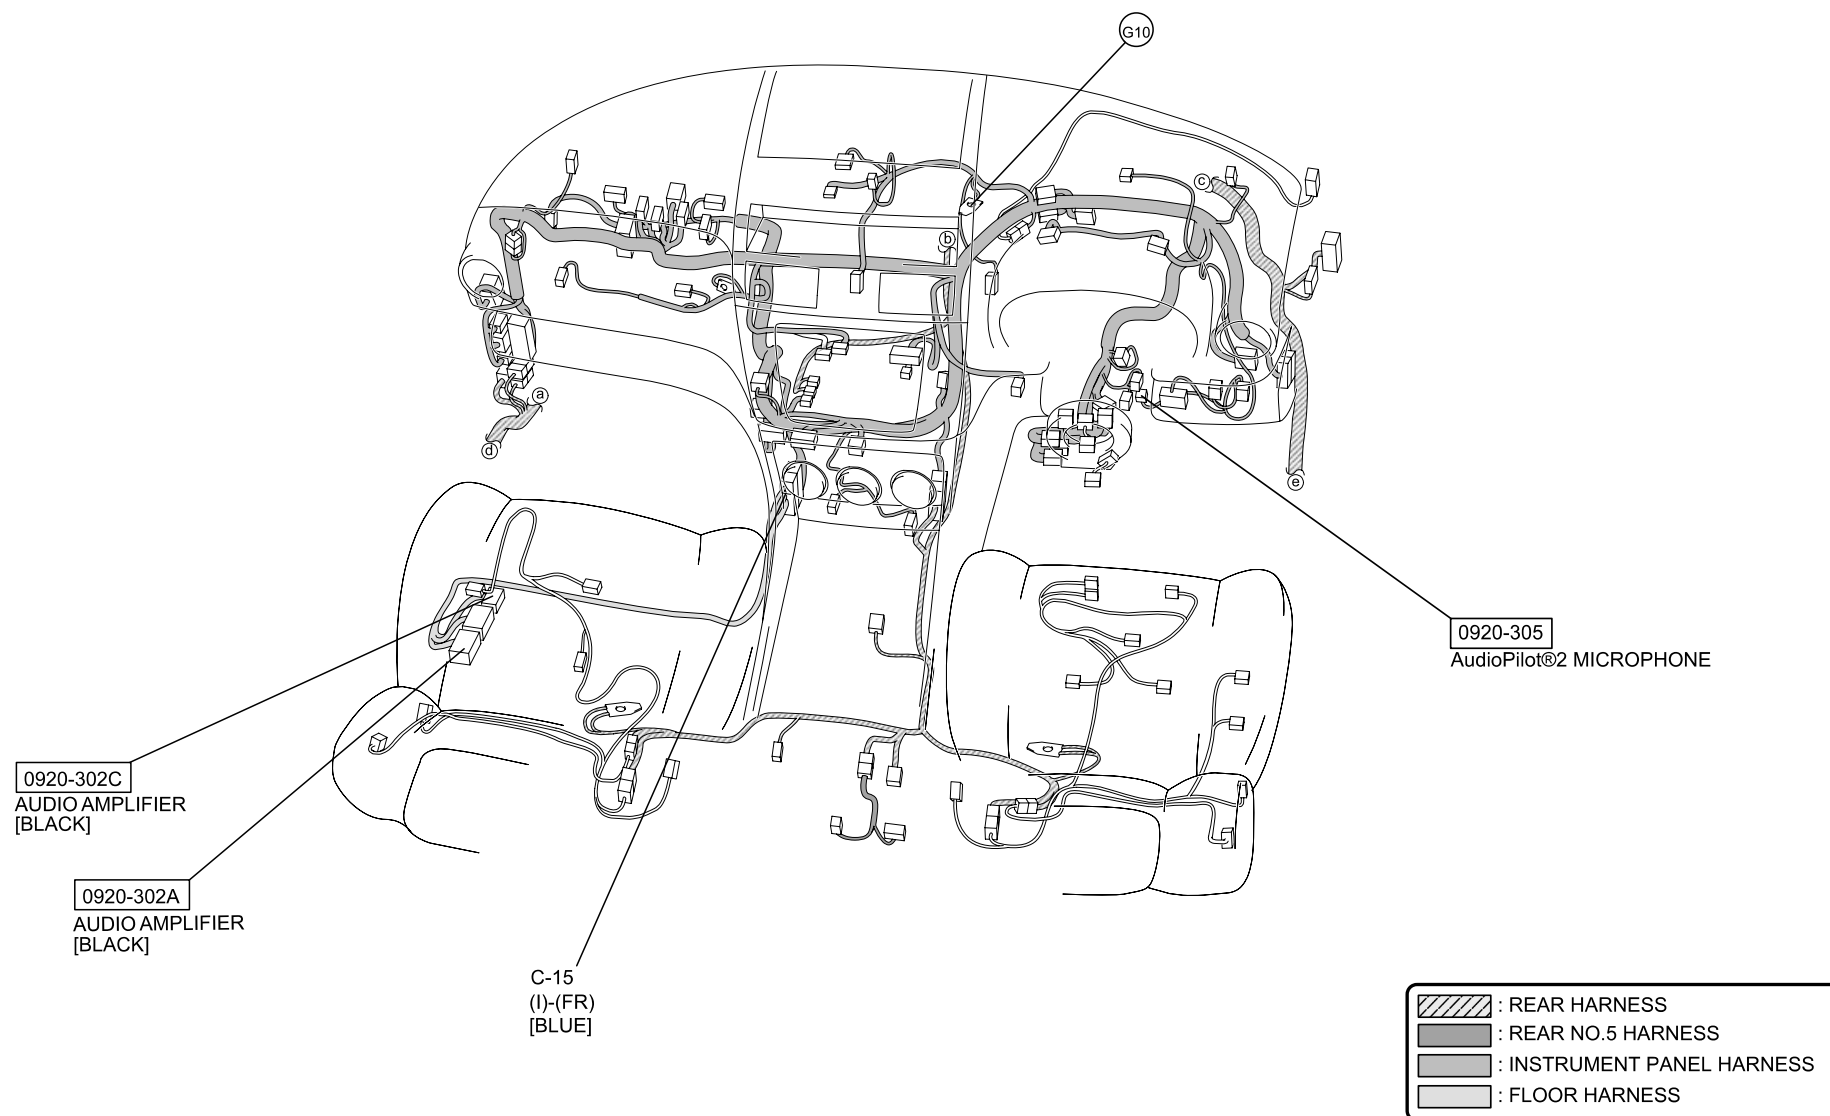

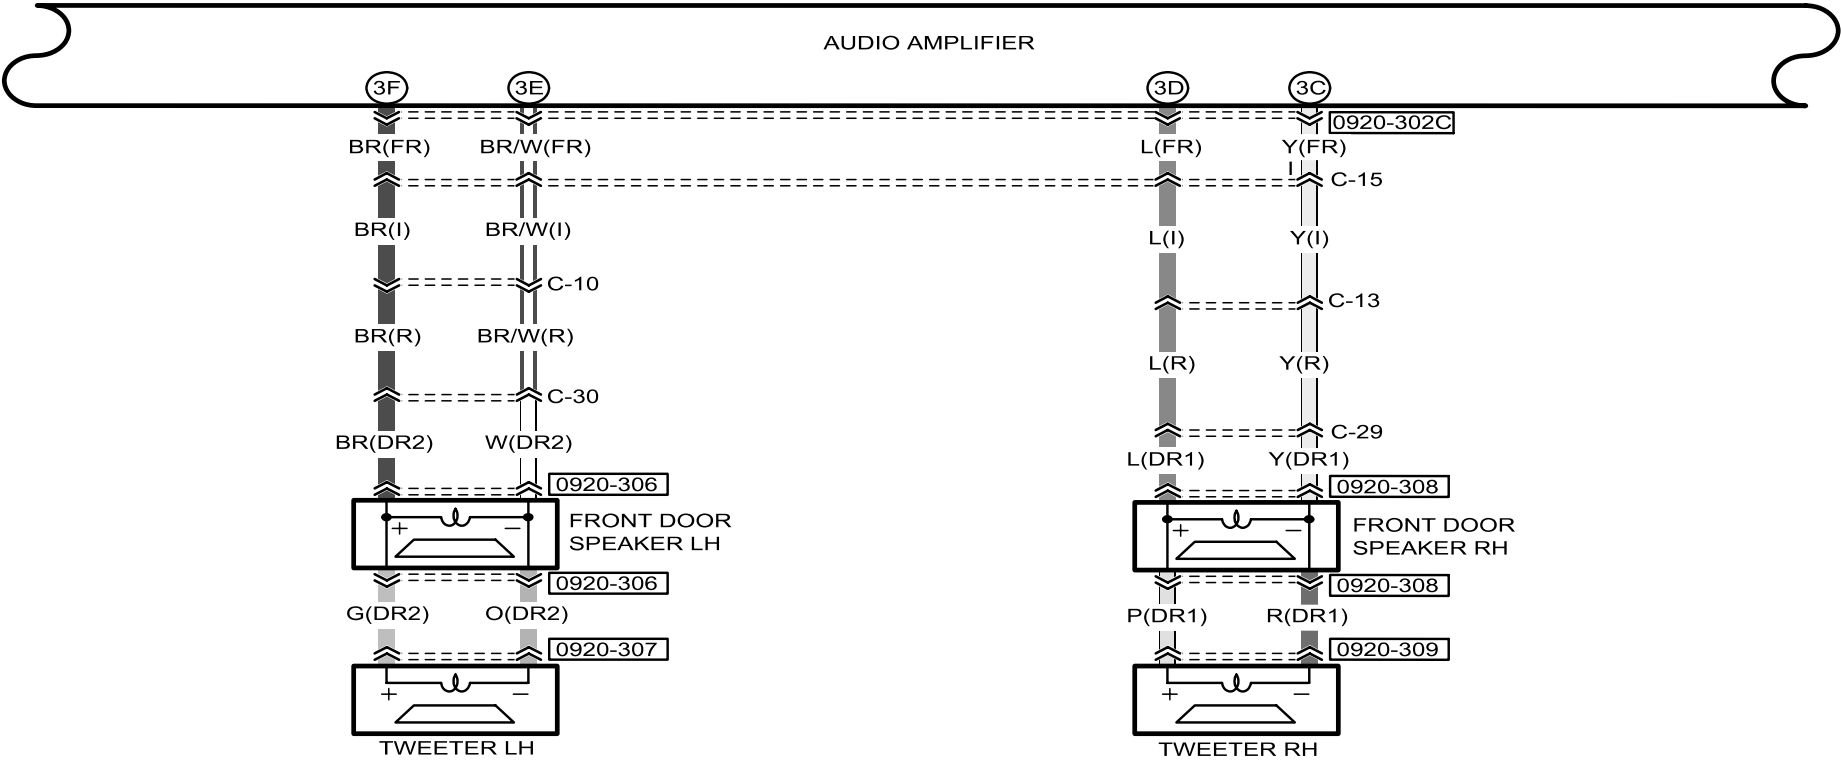

322

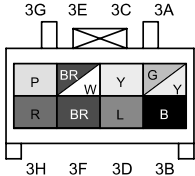


<p>0920-302C AUDIO AMPLIFIER</p> 	<p>0920-306 FRONT DOOR SPEAKER LH</p> 	<p>0920-307 TWEETER LH</p> 	<p>0920-308 FRONT DOOR SPEAKER RH</p> 	<p>0920-309 TWEETER RH</p> 	


AUDIO SYSTEM (WITH Bose® TYPE AUDIO)

0920-3f



323

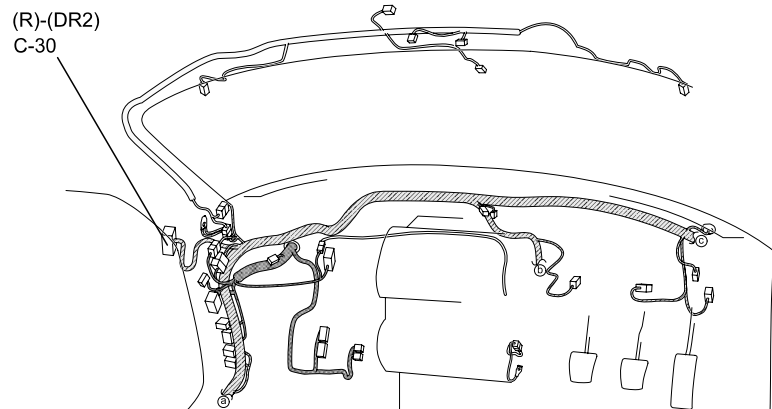


[4SD]

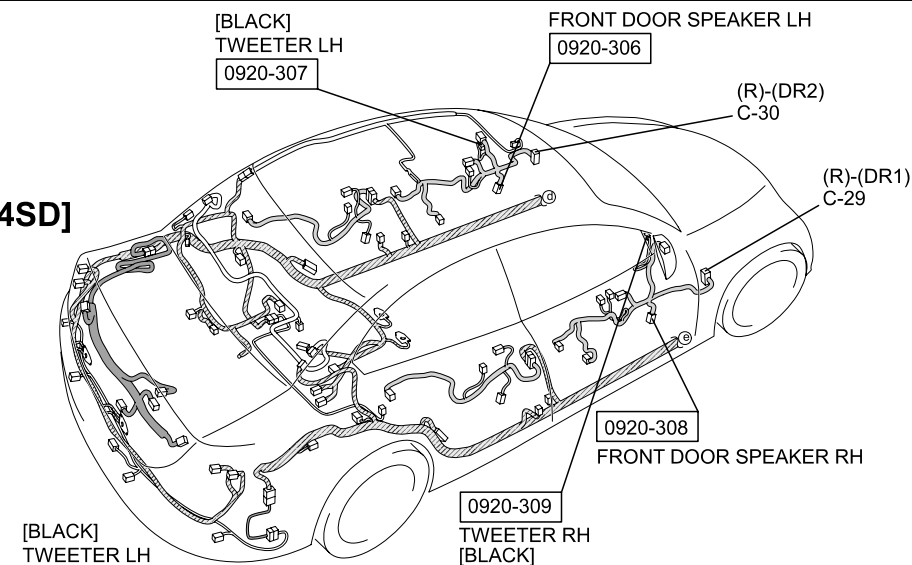


[5HB]

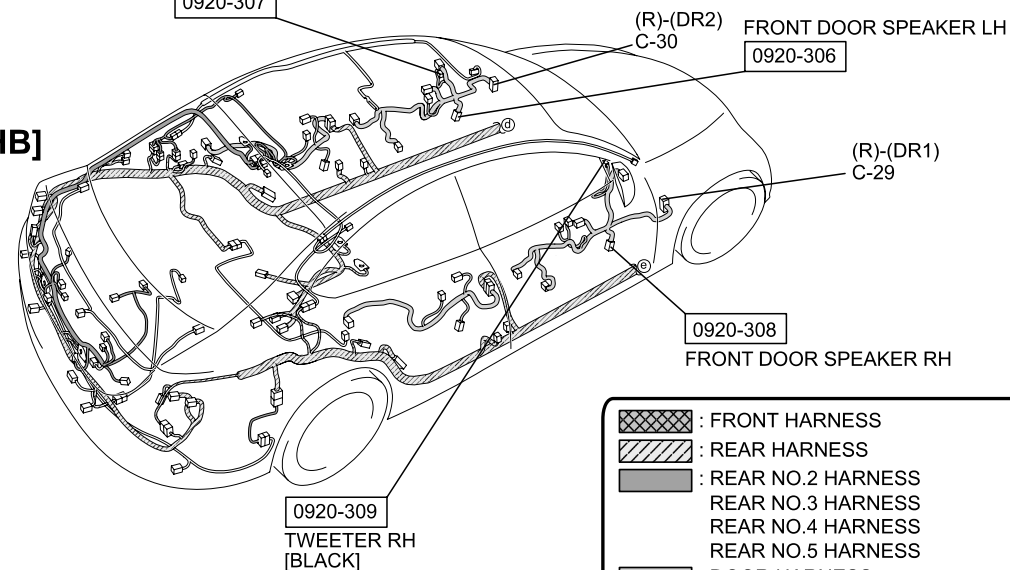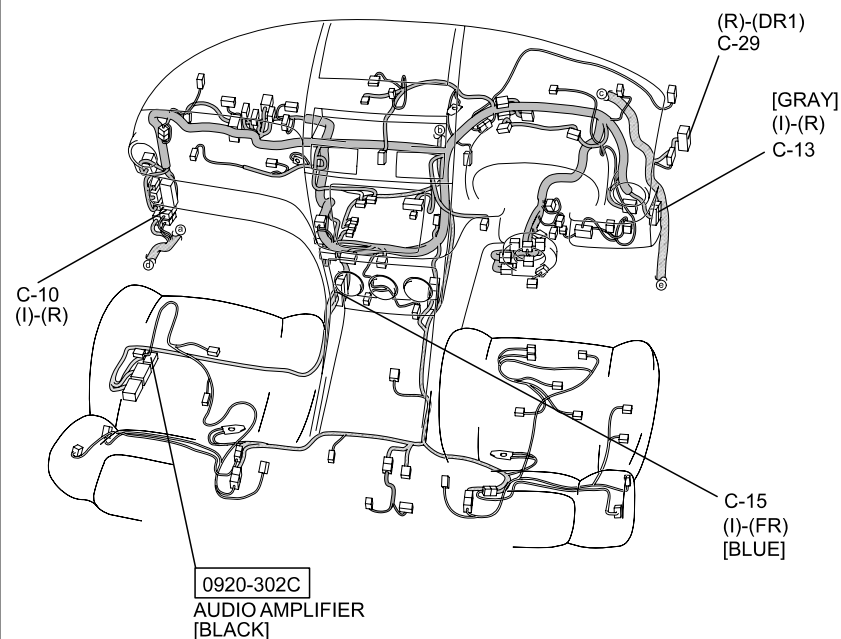


	: FRONT HARNESS
	: REAR HARNESS
	: REAR NO.2 HARNESS
	REAR NO.3 HARNESS
	REAR NO.4 HARNESS
	REAR NO.5 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS
	INTERIOR LIGHT NO.2 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS

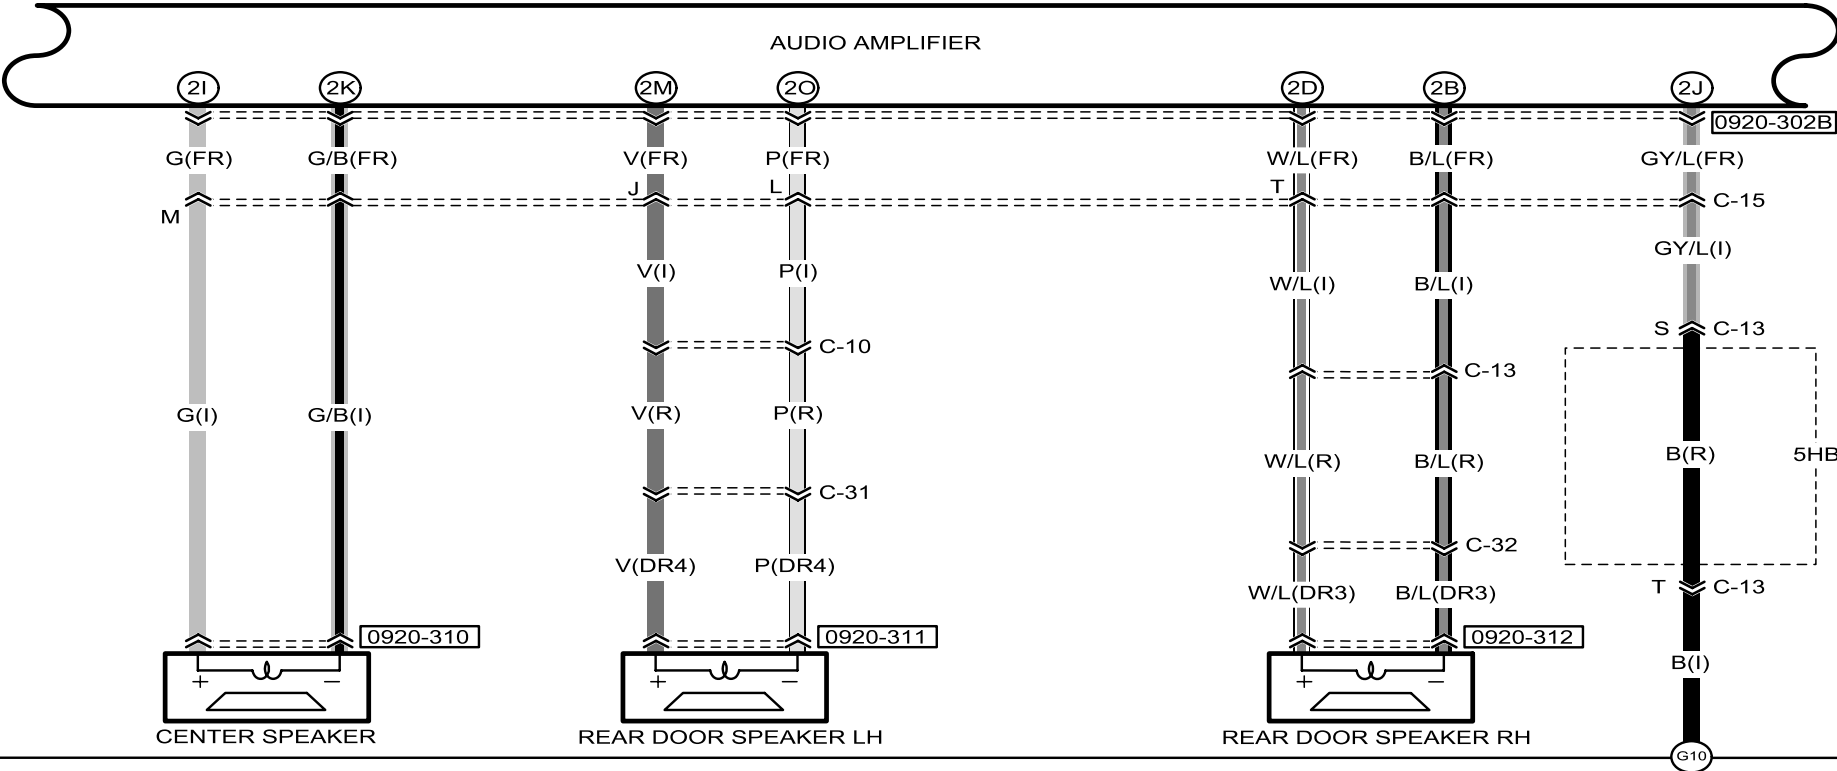

0920-302B
AUDIO AMPLIFIER

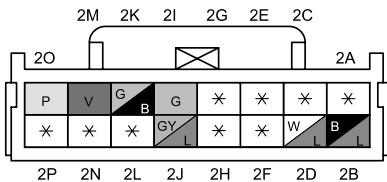


0920-310
CENTER SPEAKER

 




0920-311
REAR DOOR SPEAKER LH






 

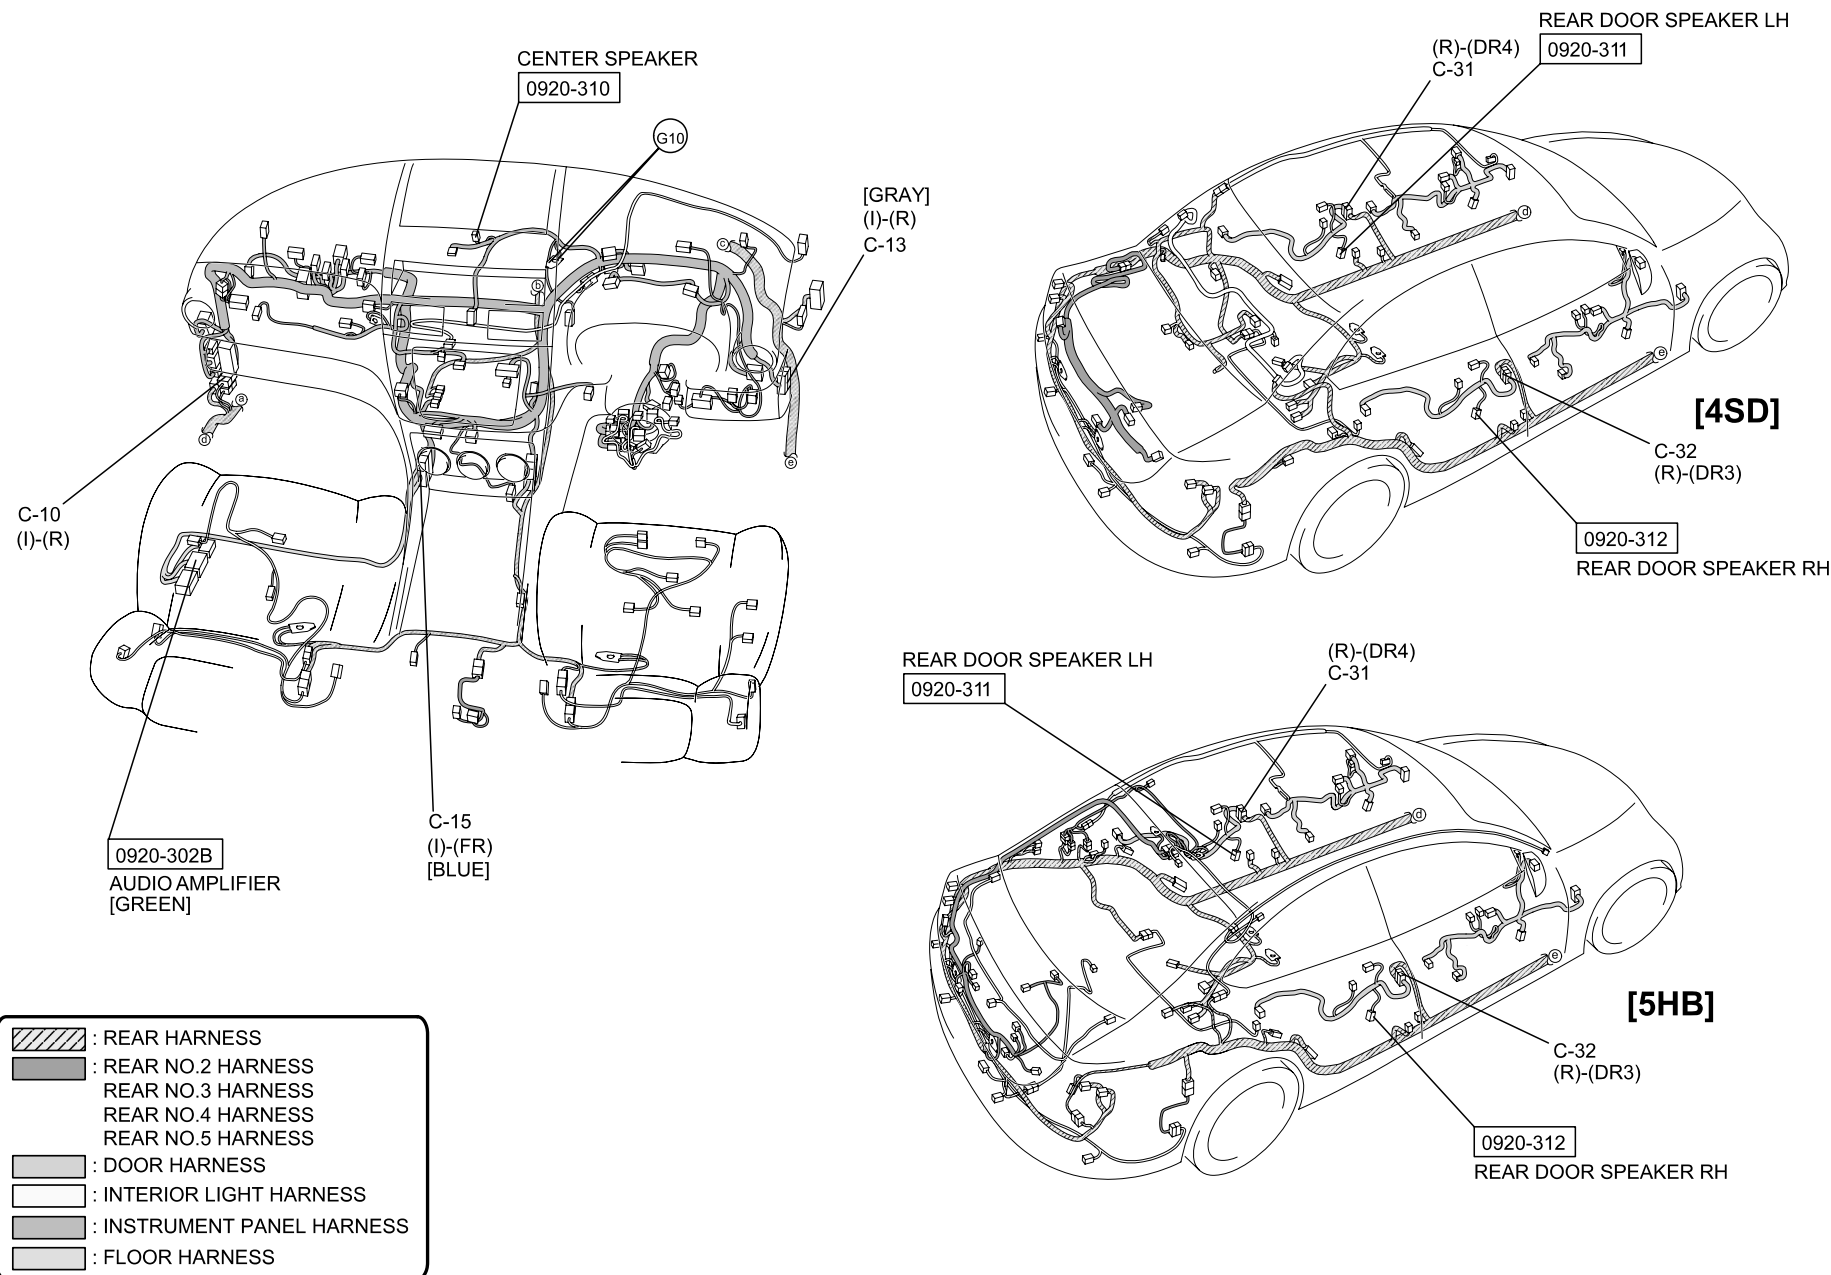0920-312
REAR DOOR SPEAKER RH

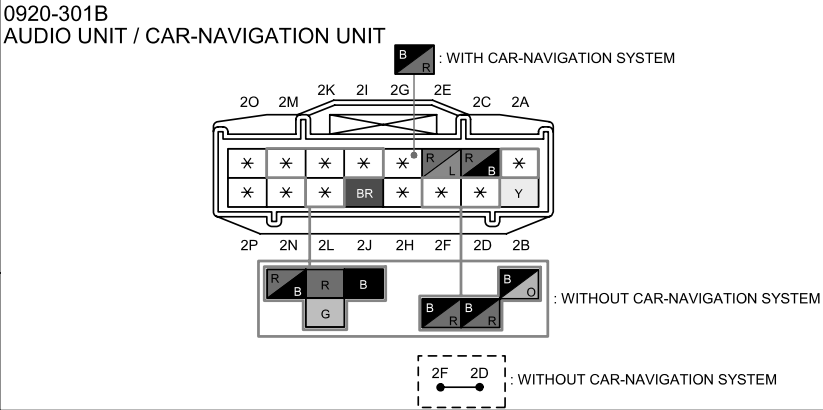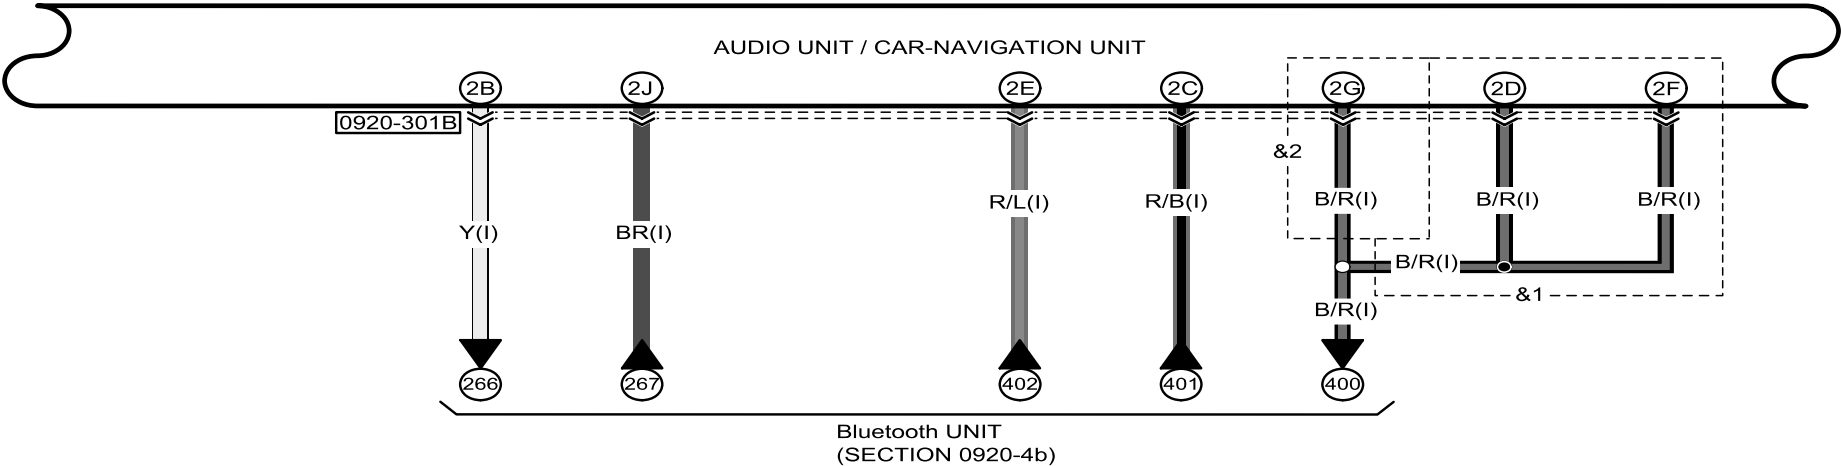


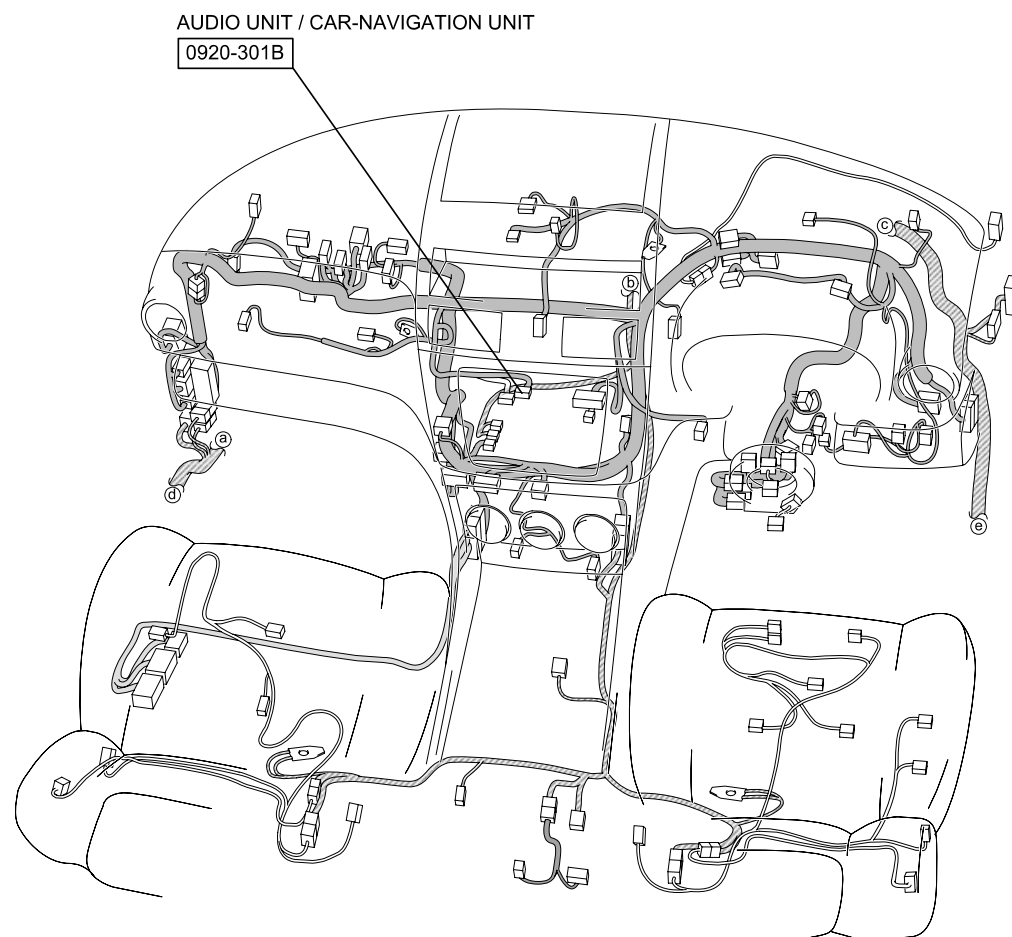











-  : REAR HARNESS
-  : REAR NO.5 HARNESS
-  : INSTRUMENT PANEL HARNESS
-  : FLOOR HARNESS

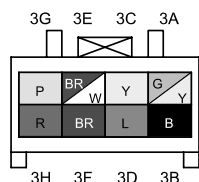


0920-304
REAR SPEAKER ← 4SD
BASS-BOX ← 5HB

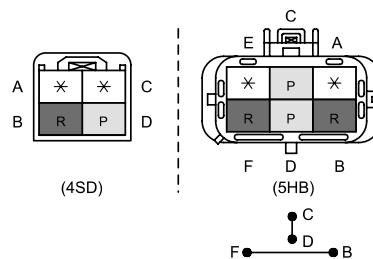

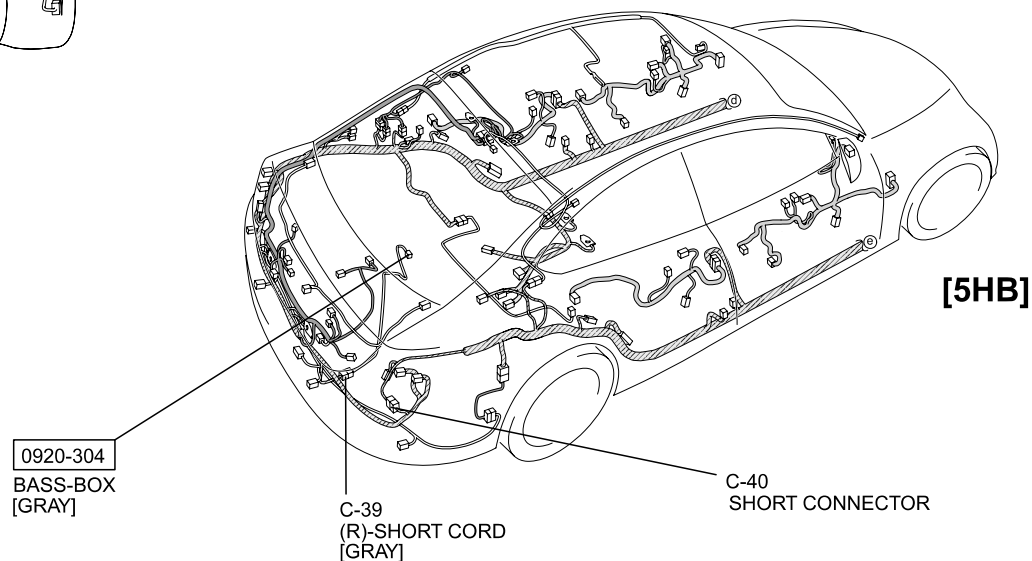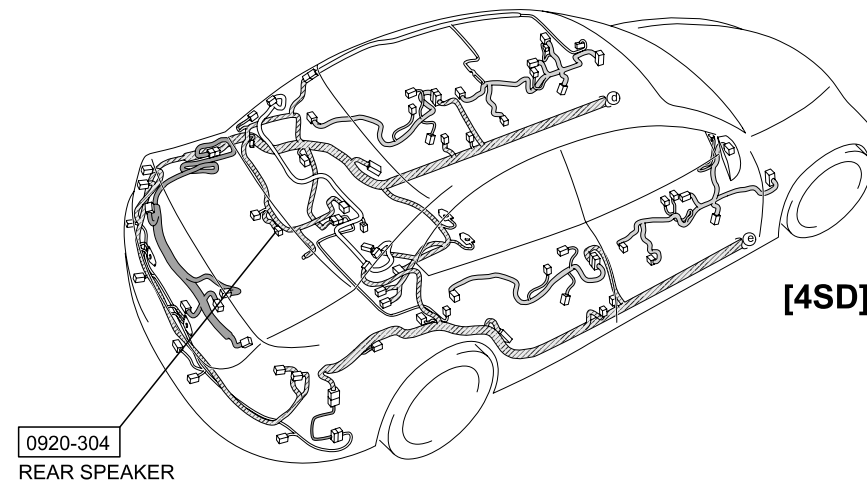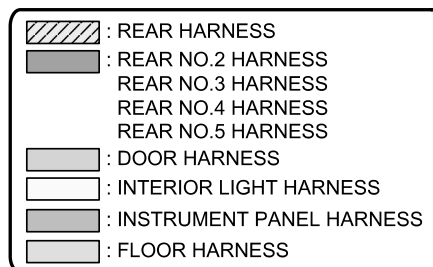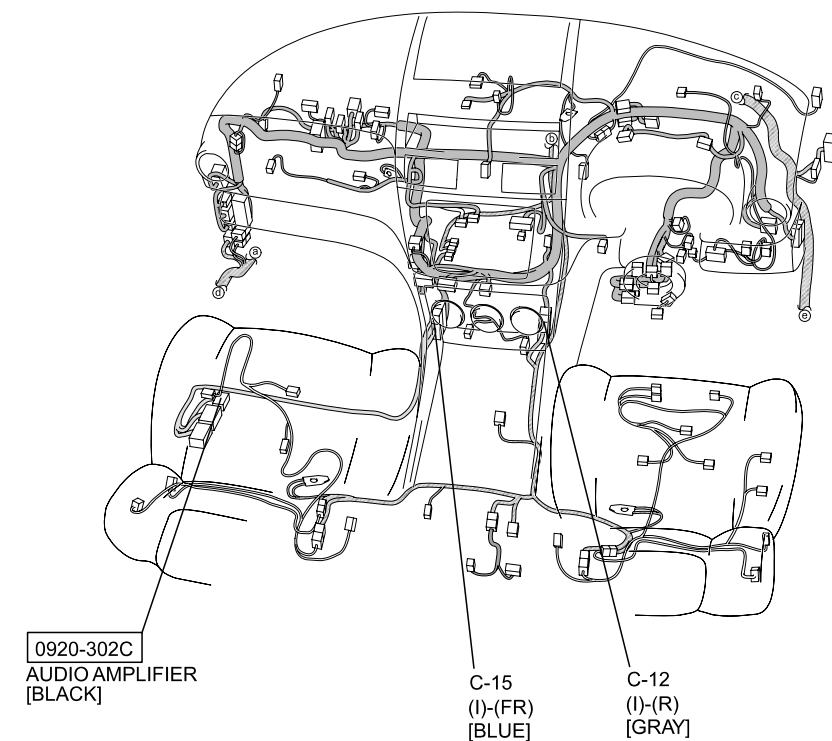


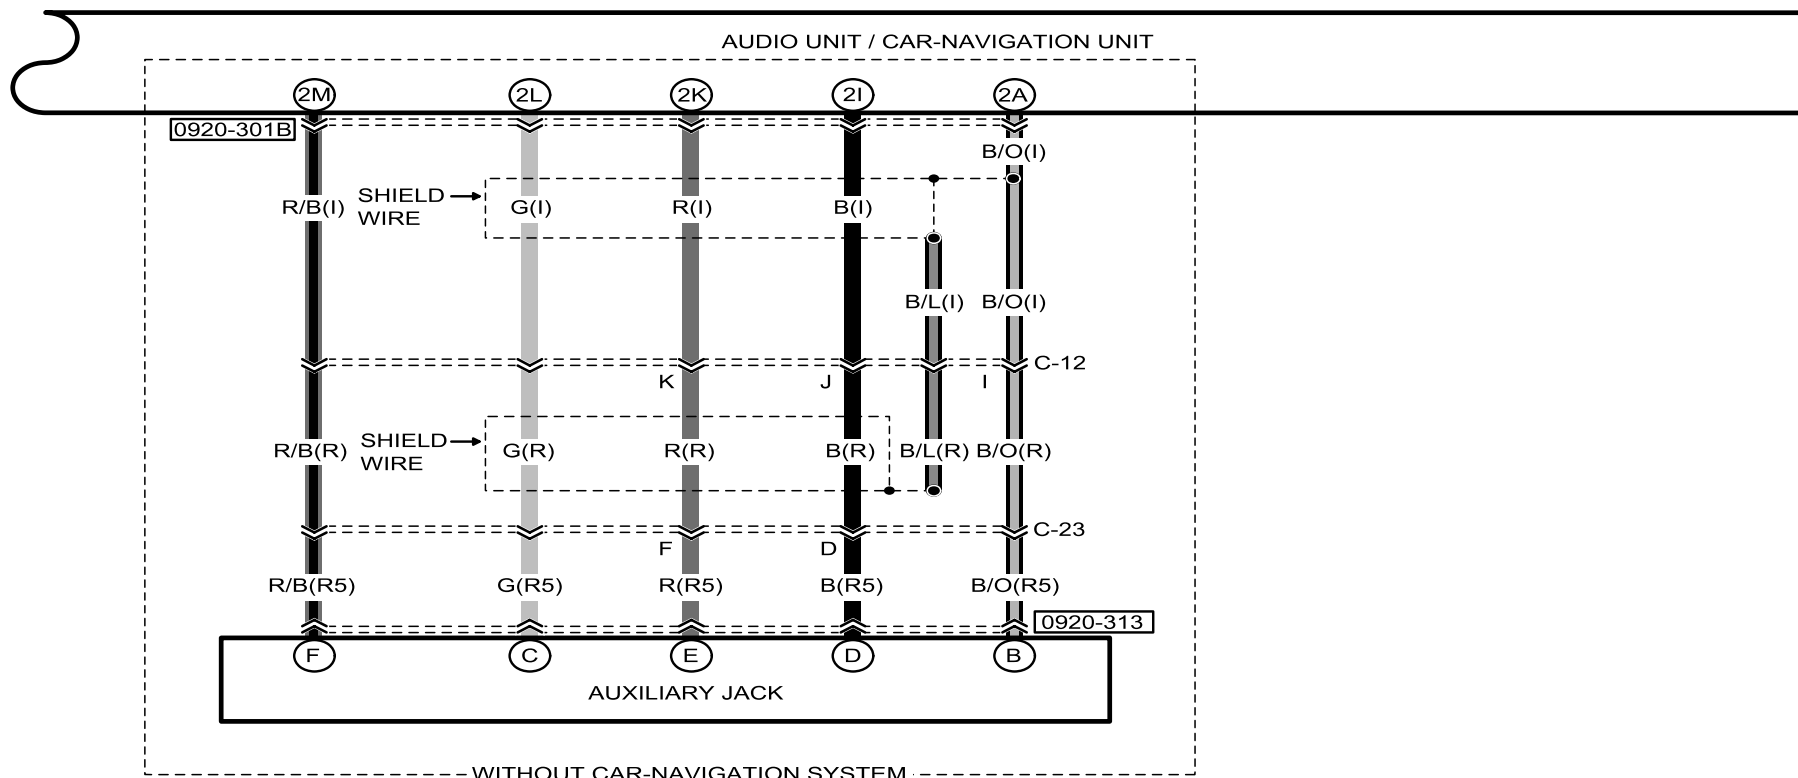




0920-301B
AUDIO UNIT / CAR-NAVIGATION UNIT

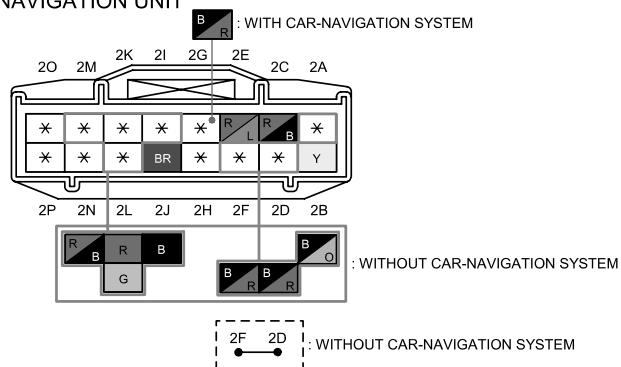


0920-313
AUXILIARY JACK

 

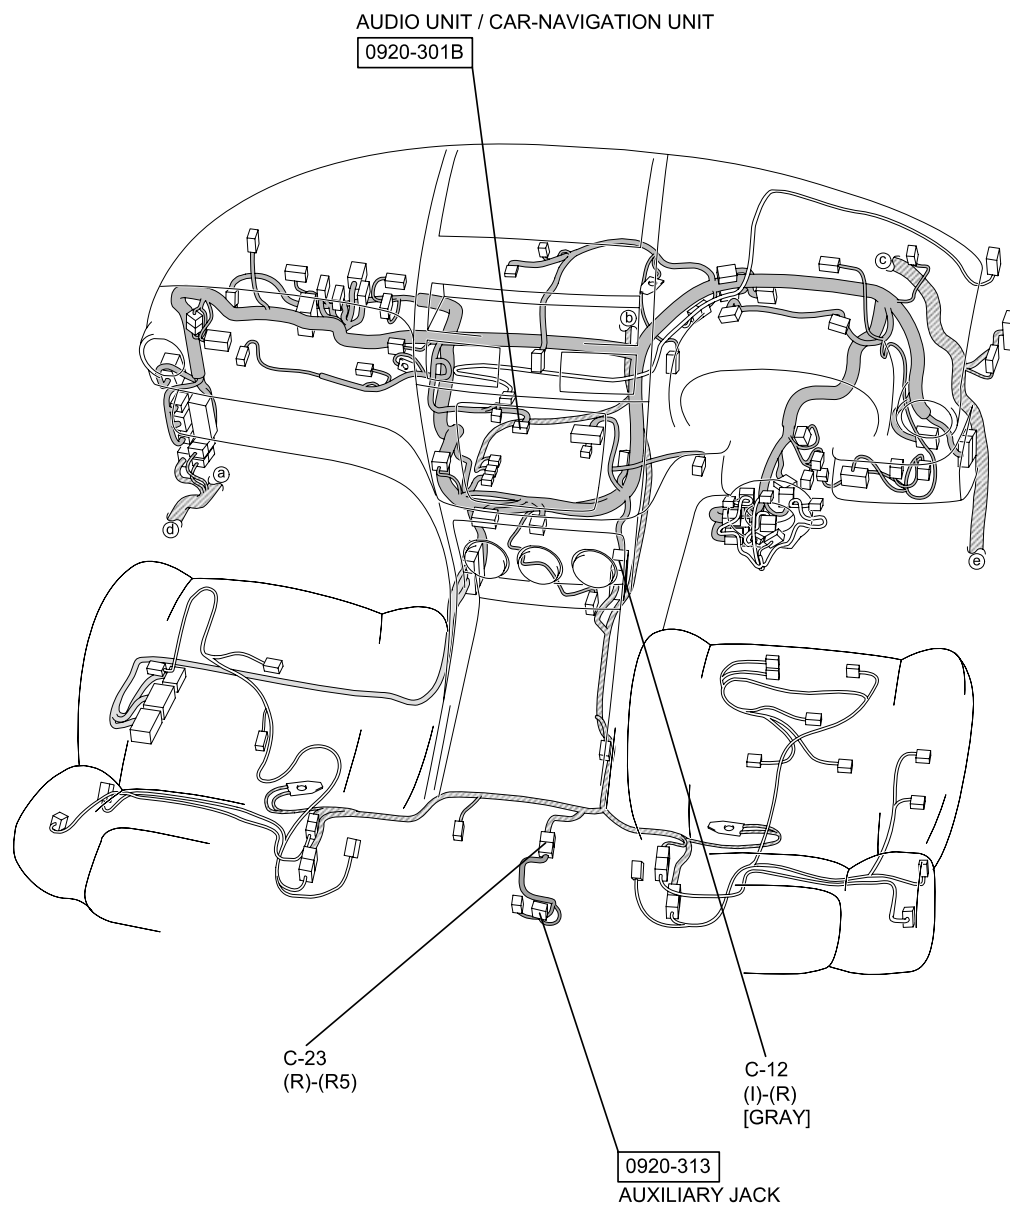


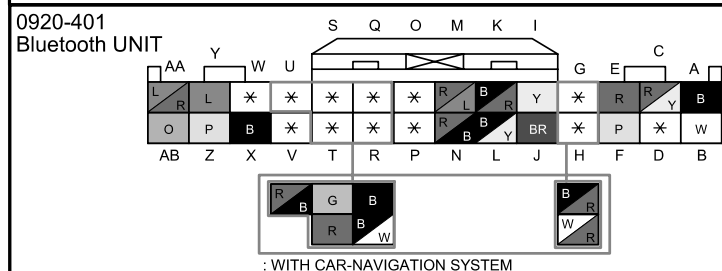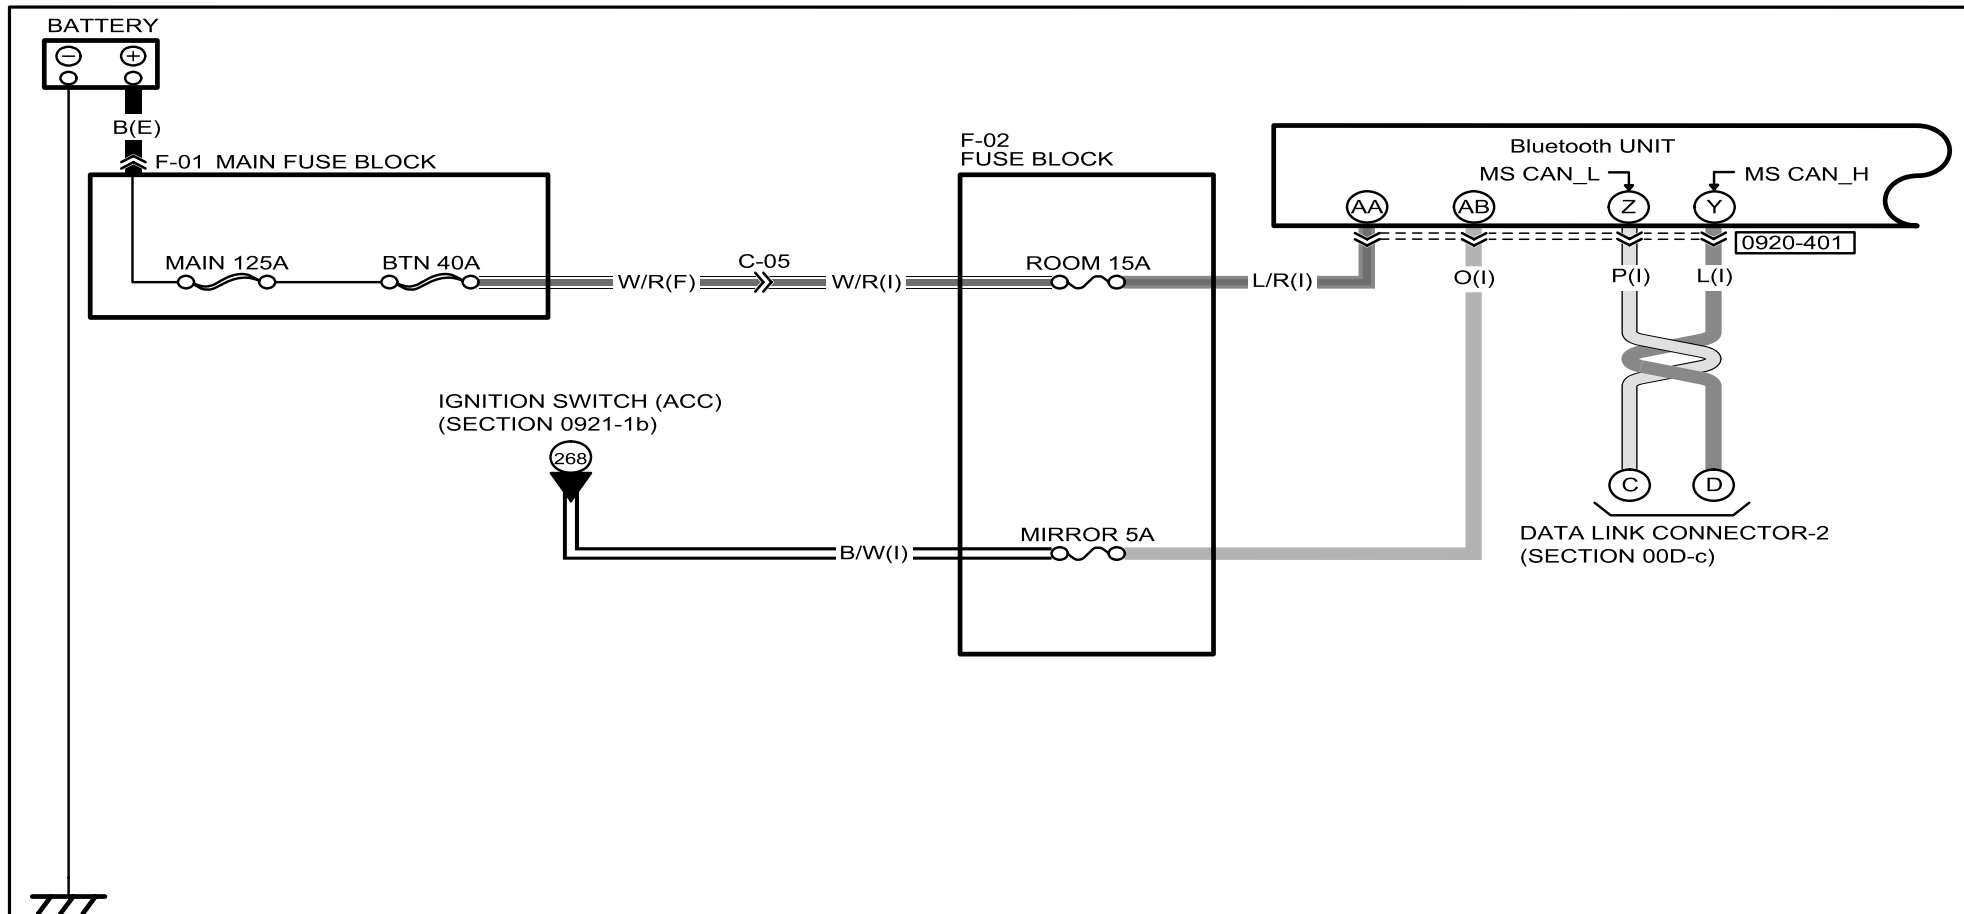

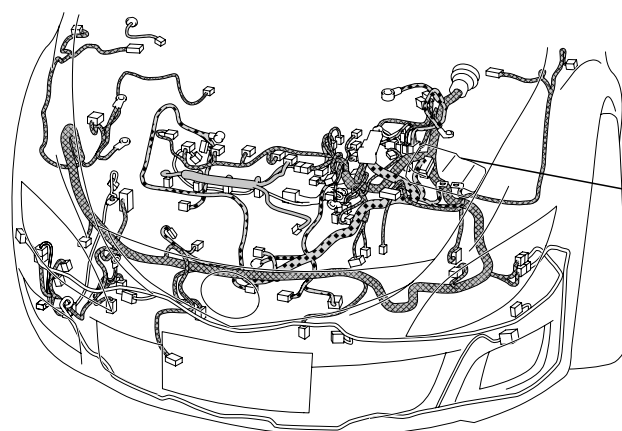

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

[EXCEPT MZR-CD 2.2]

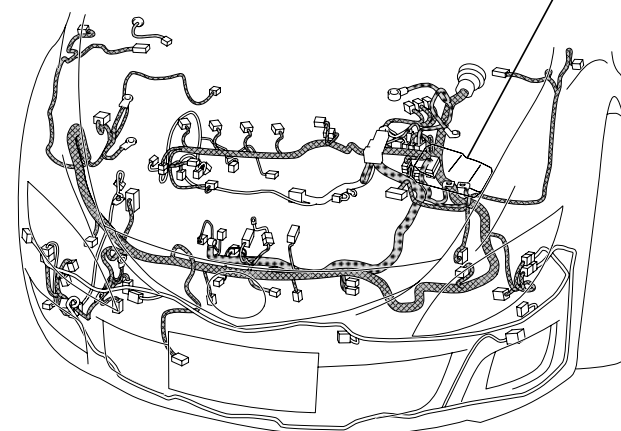

(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01


[MZR-CD 2.2]

Bluetooth UNIT
0920-401


[GRAY]
(F)-(I)
C-05


F-02
FUSE BLOCK
(REFER TO 00F SECTION)

	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

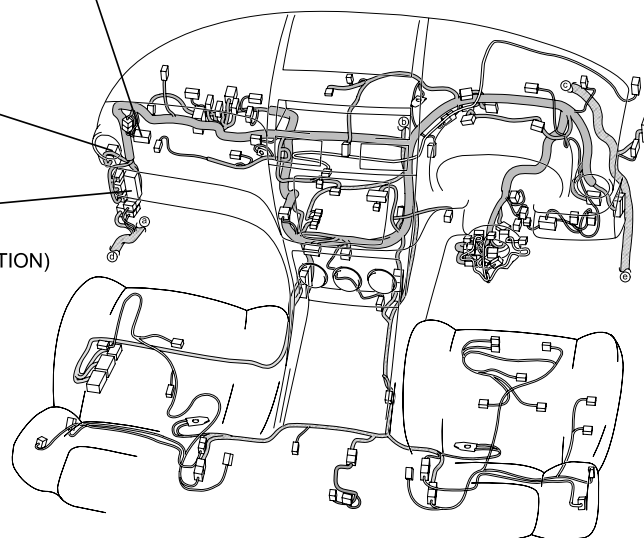




C-05
(F)-(I)
[GRAY]

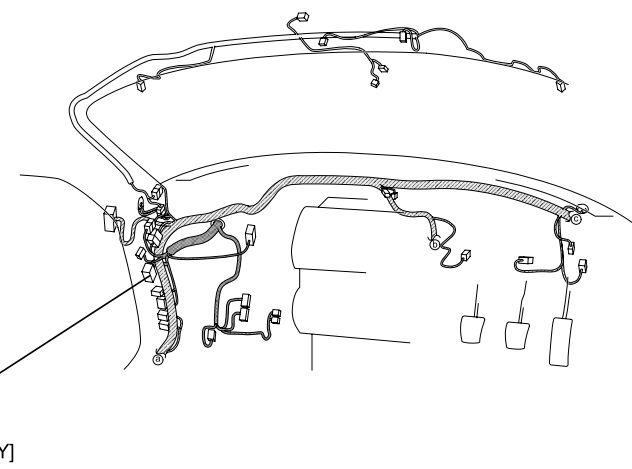

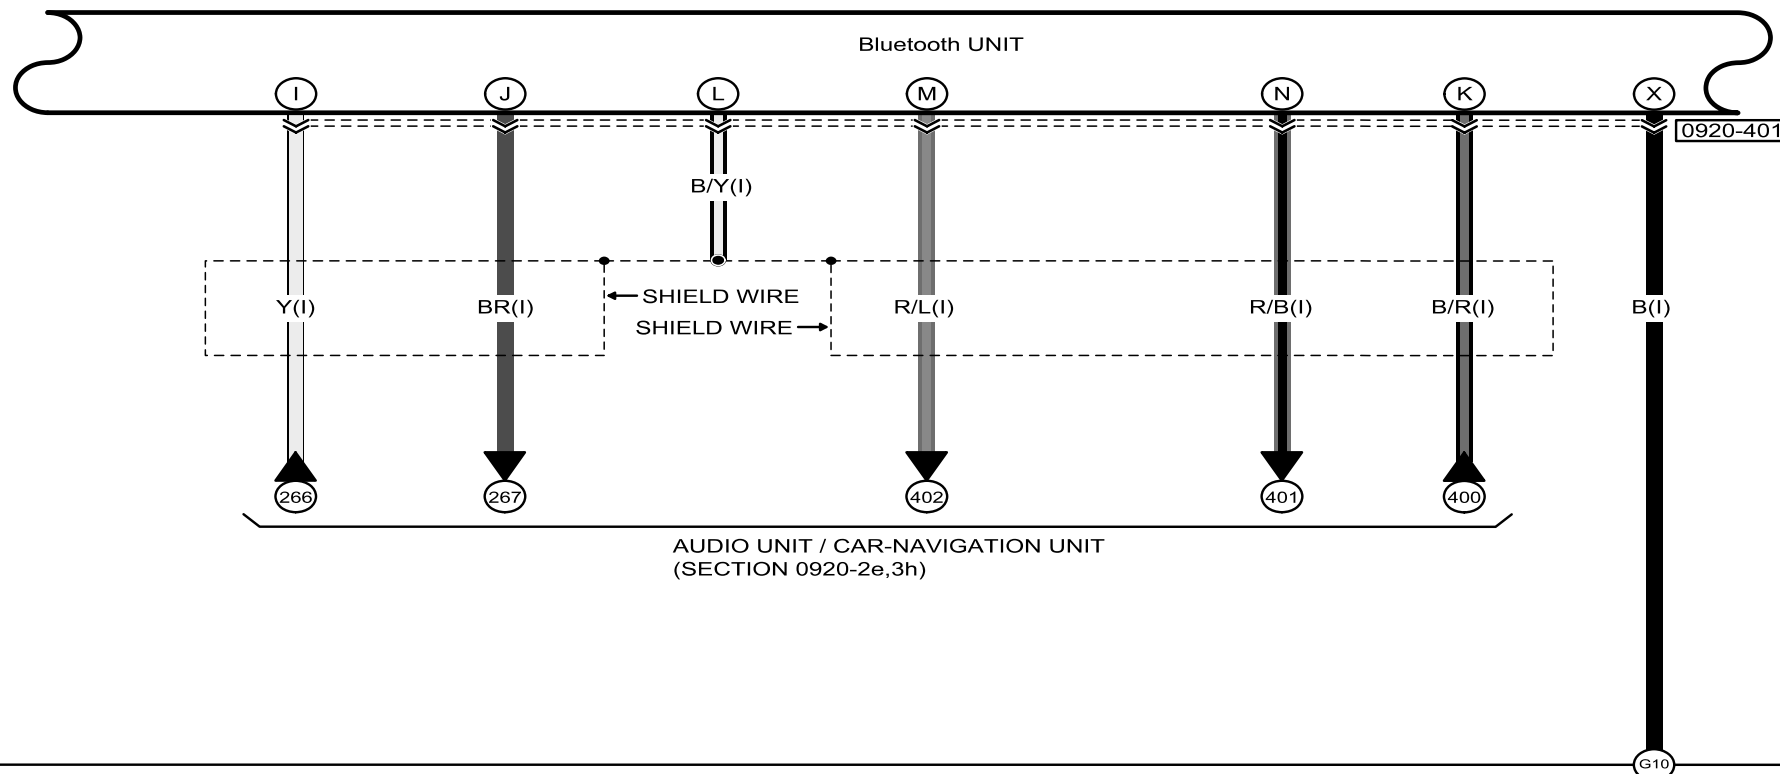


0920-401
Bluetooth UNIT

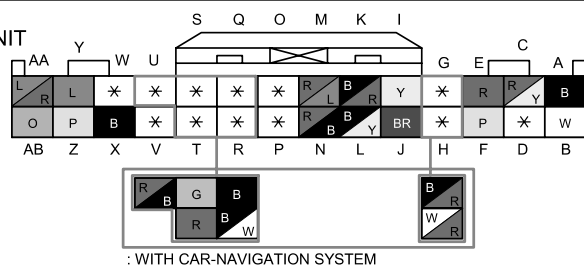


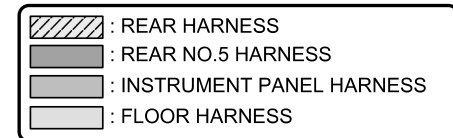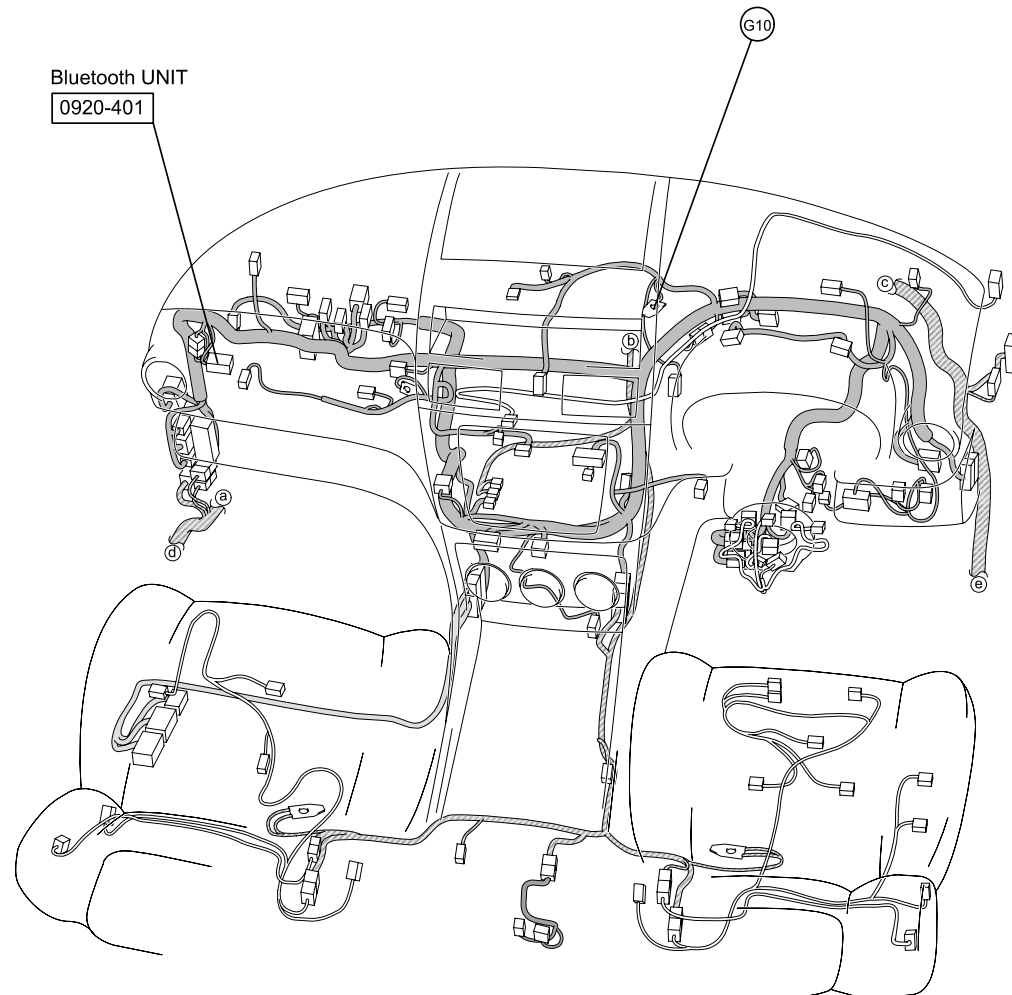

&13 : WITHOUT MICROPHONE D TERMINAL
&14 : WITH MICROPHONE D TERMINAL

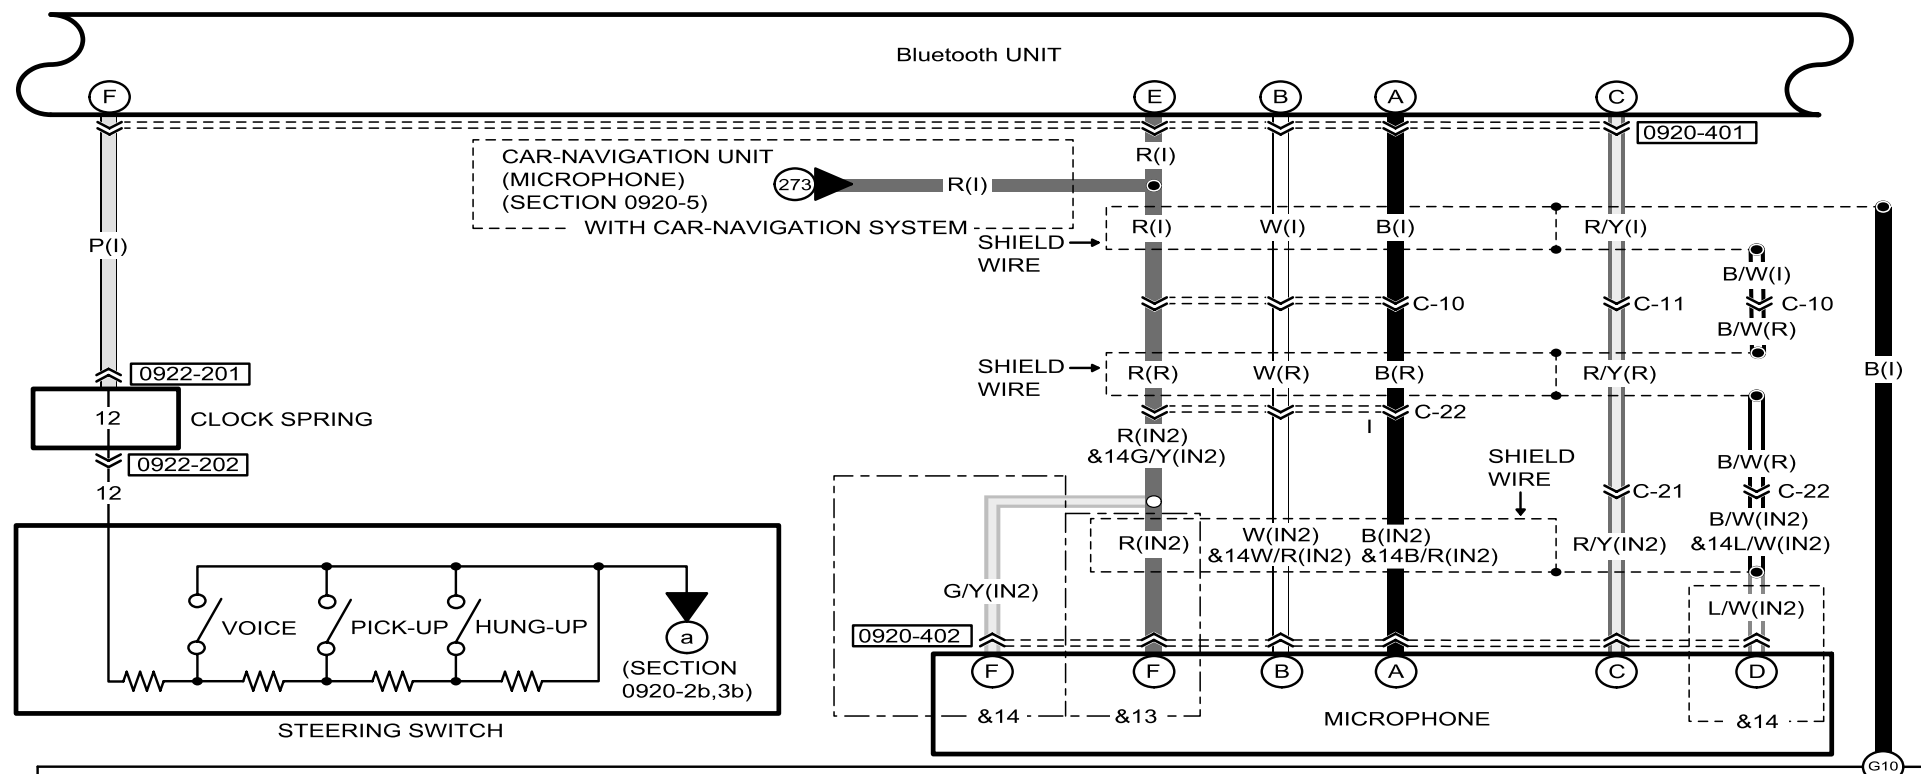


0920-401 Bluetooth UNIT

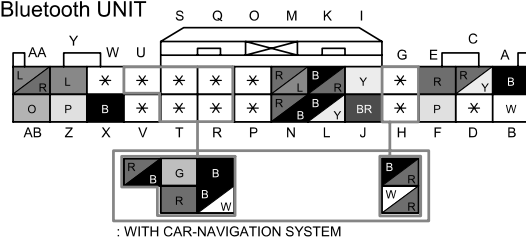


: WITH CAR-NAVIGATION SYSTEM

0920-402 MICROPHONE

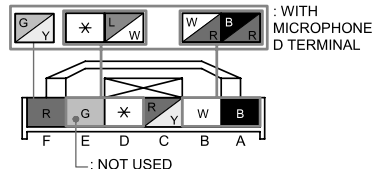


: NOT USED

0922-201 CLOCK SPRING

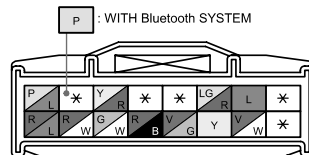


: WITH Bluetooth SYSTEM




0922-202 CRUISE CONTROL SWITCH / STEERING SWITCH ILLUMINATION / CRUISE CONTROL SWITCH ILLUMINATION / STEERING SWITCH / CLOCK SPRING

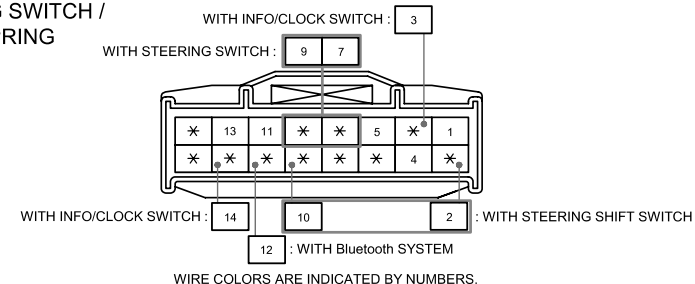


WIRE COLORS ARE INDICATED BY NUMBERS.

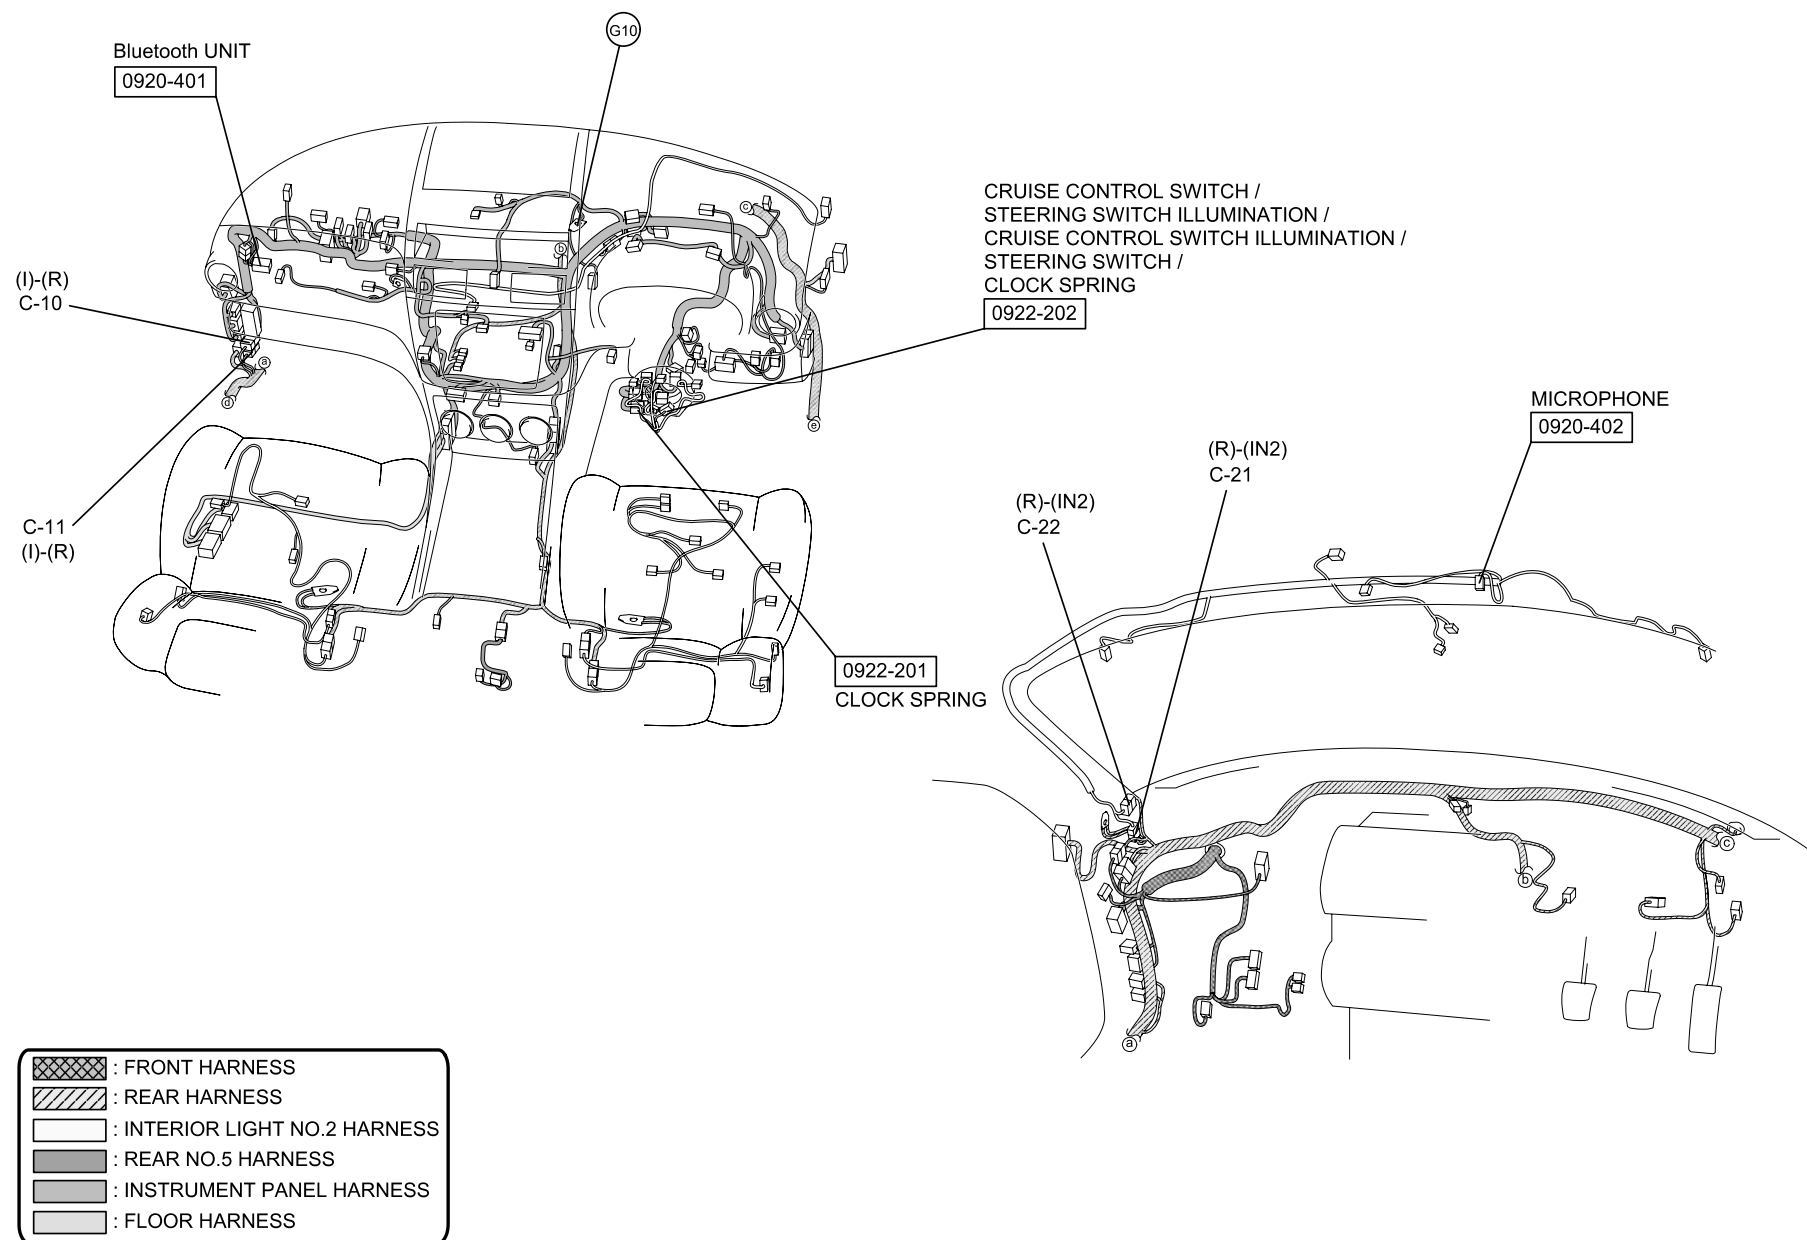


338

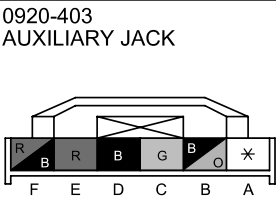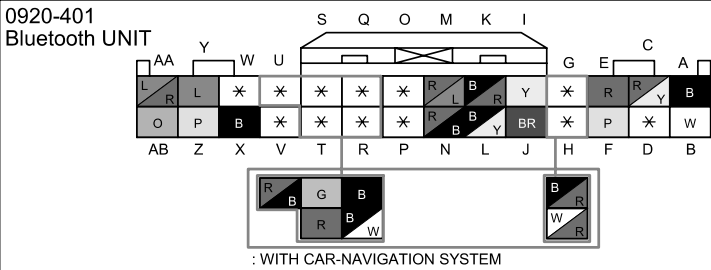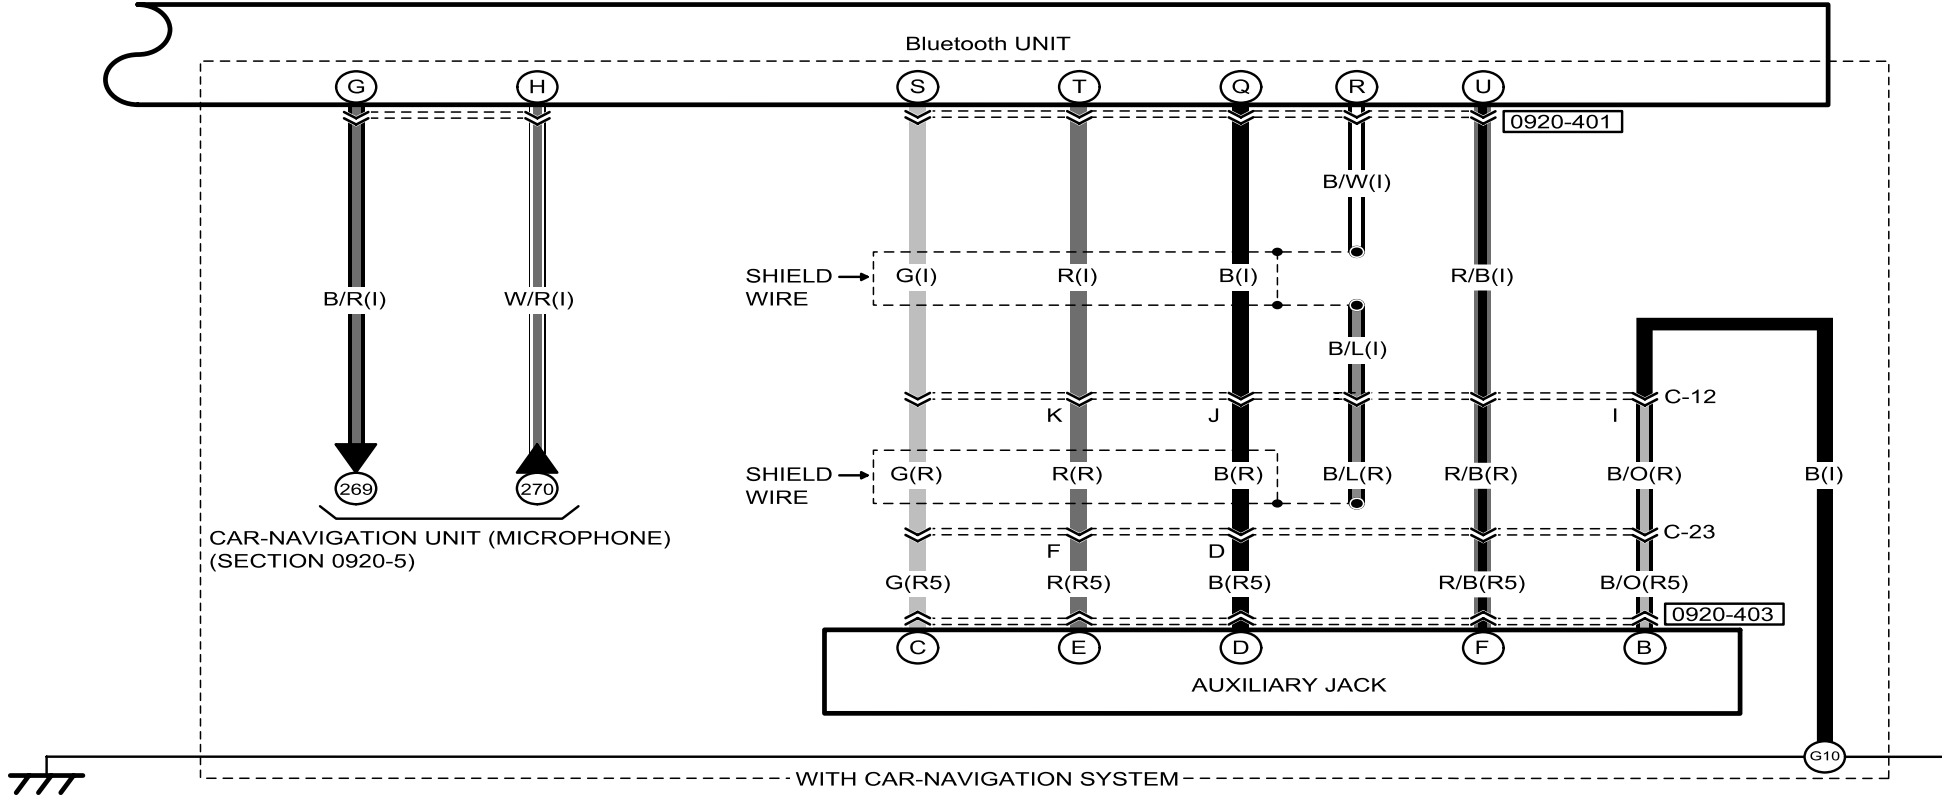


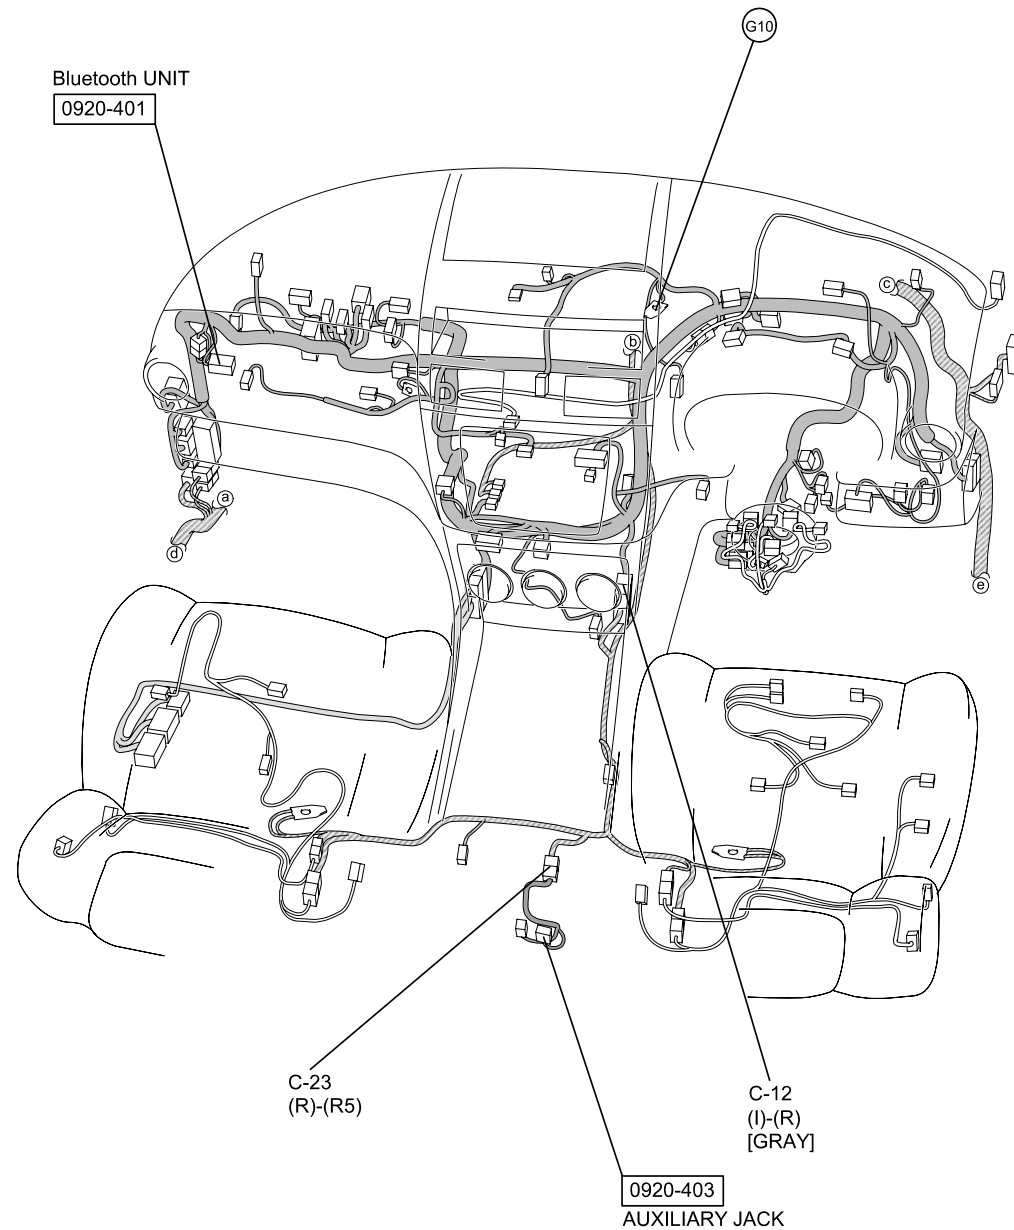



340

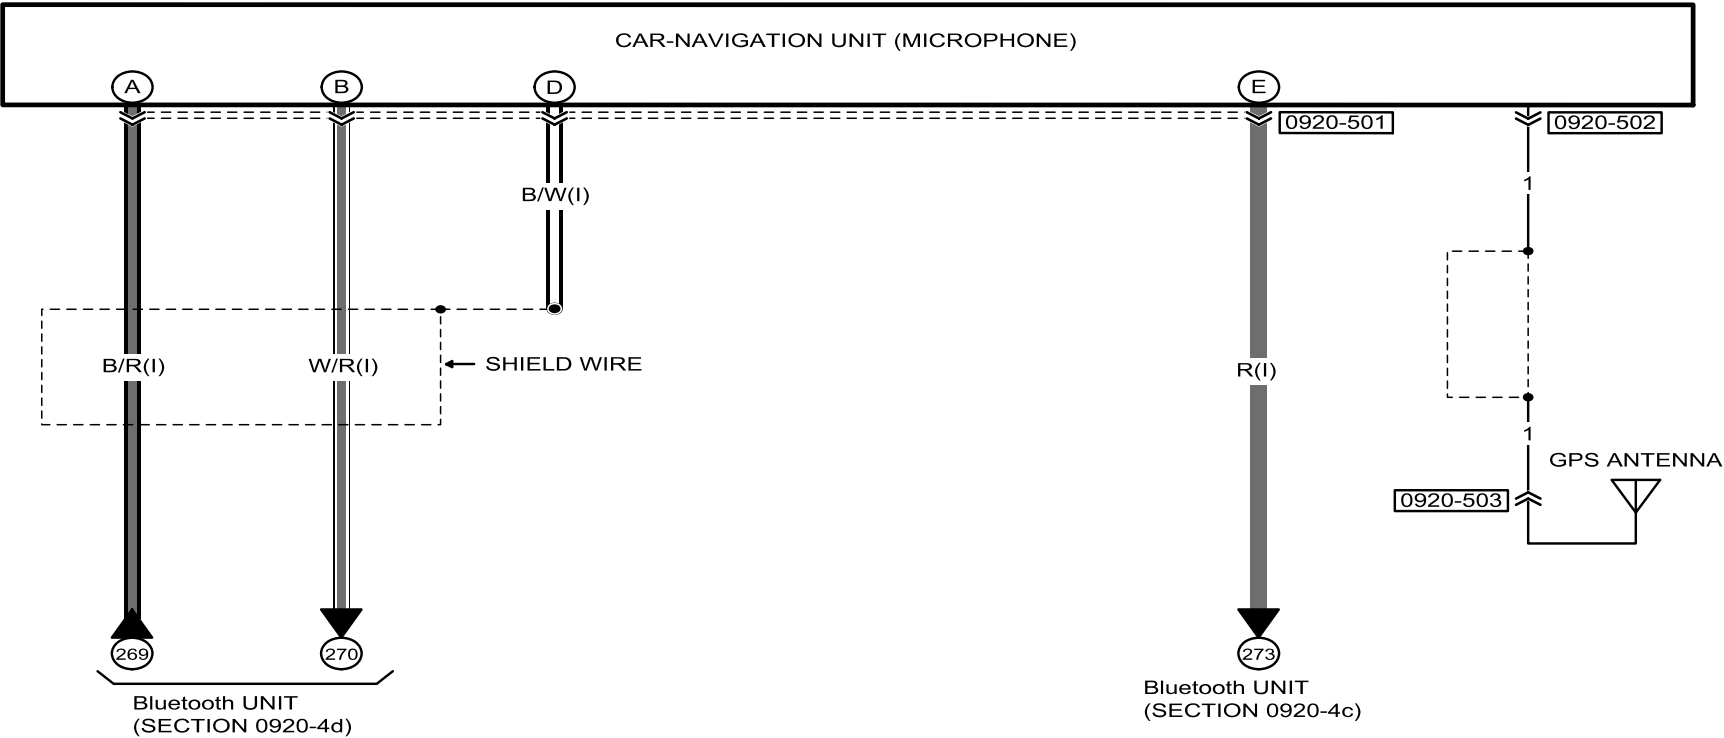

0920-501 CAR-NAVIGATION UNIT (MICROPHONE)	0920-502 CAR-NAVIGATION UNIT (MICROPHONE)	0920-503 GPS ANTENNA			
	<div>1</div> <p>WIRE COLORS ARE INDICATED BY NUMBERS.</p>	<div>1</div> <p>WIRE COLORS ARE INDICATED BY NUMBERS.</p>			

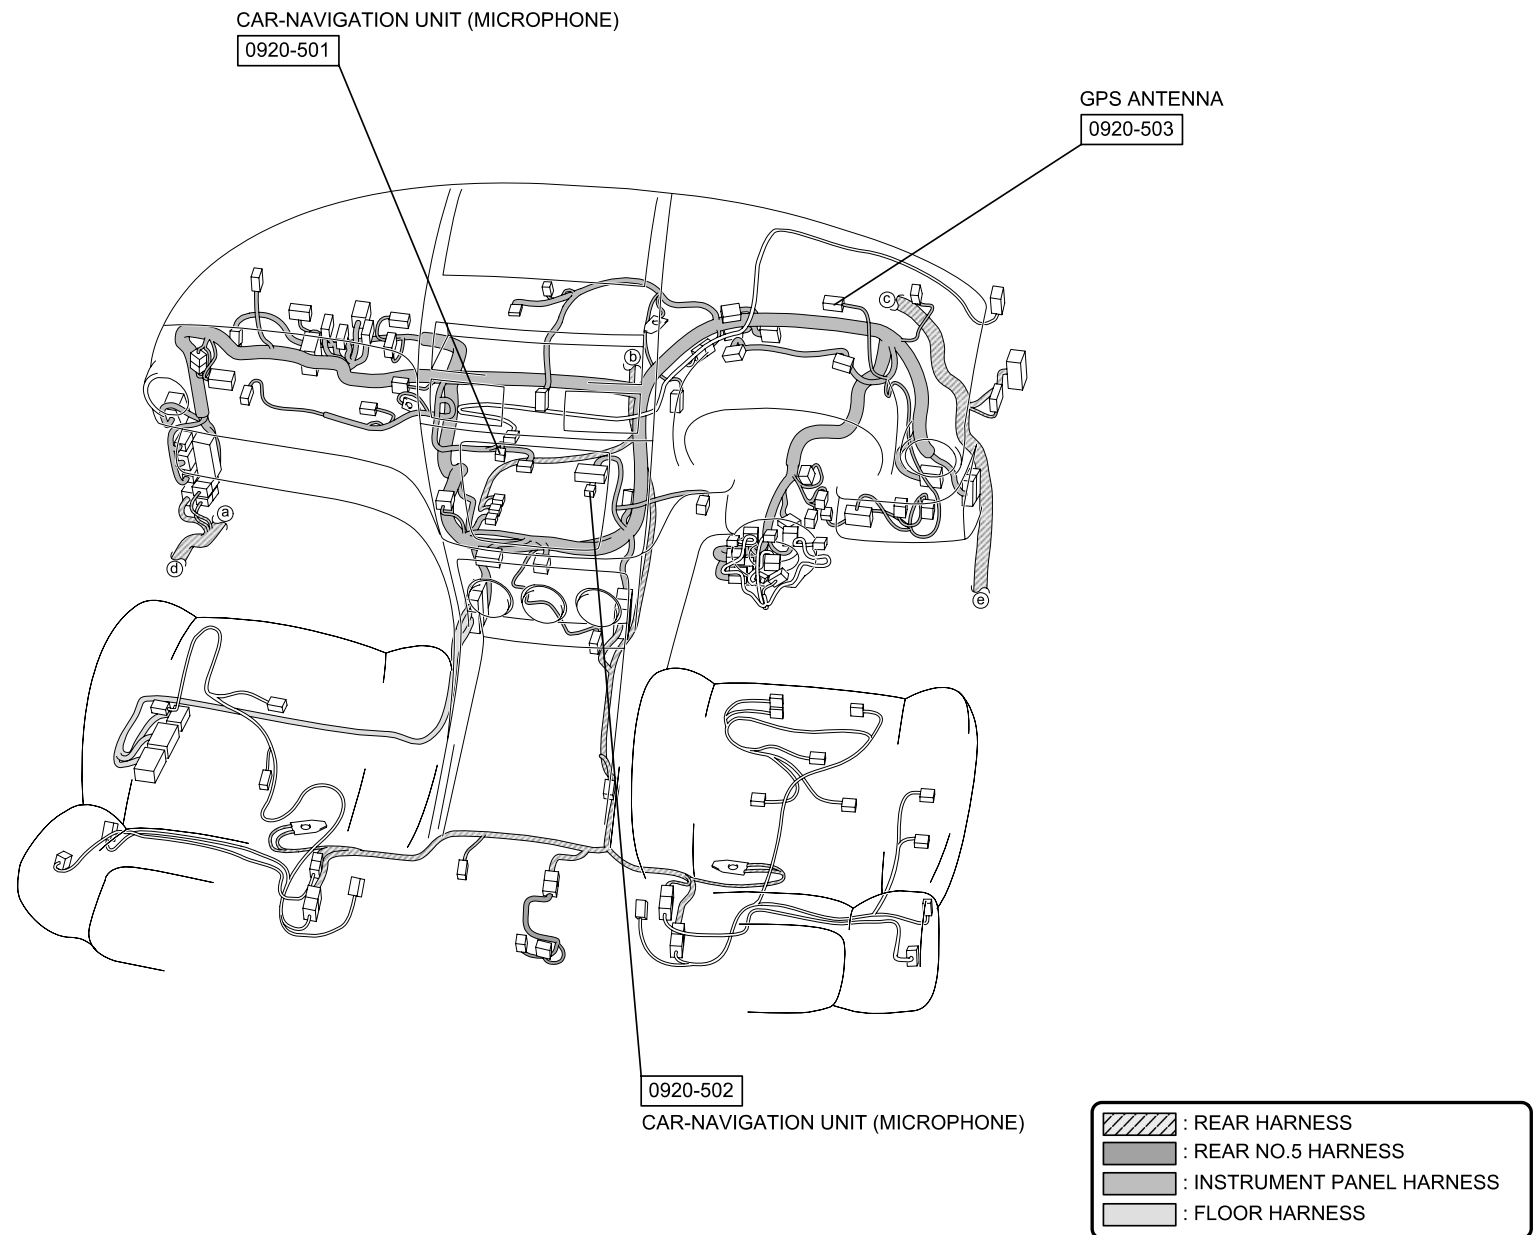


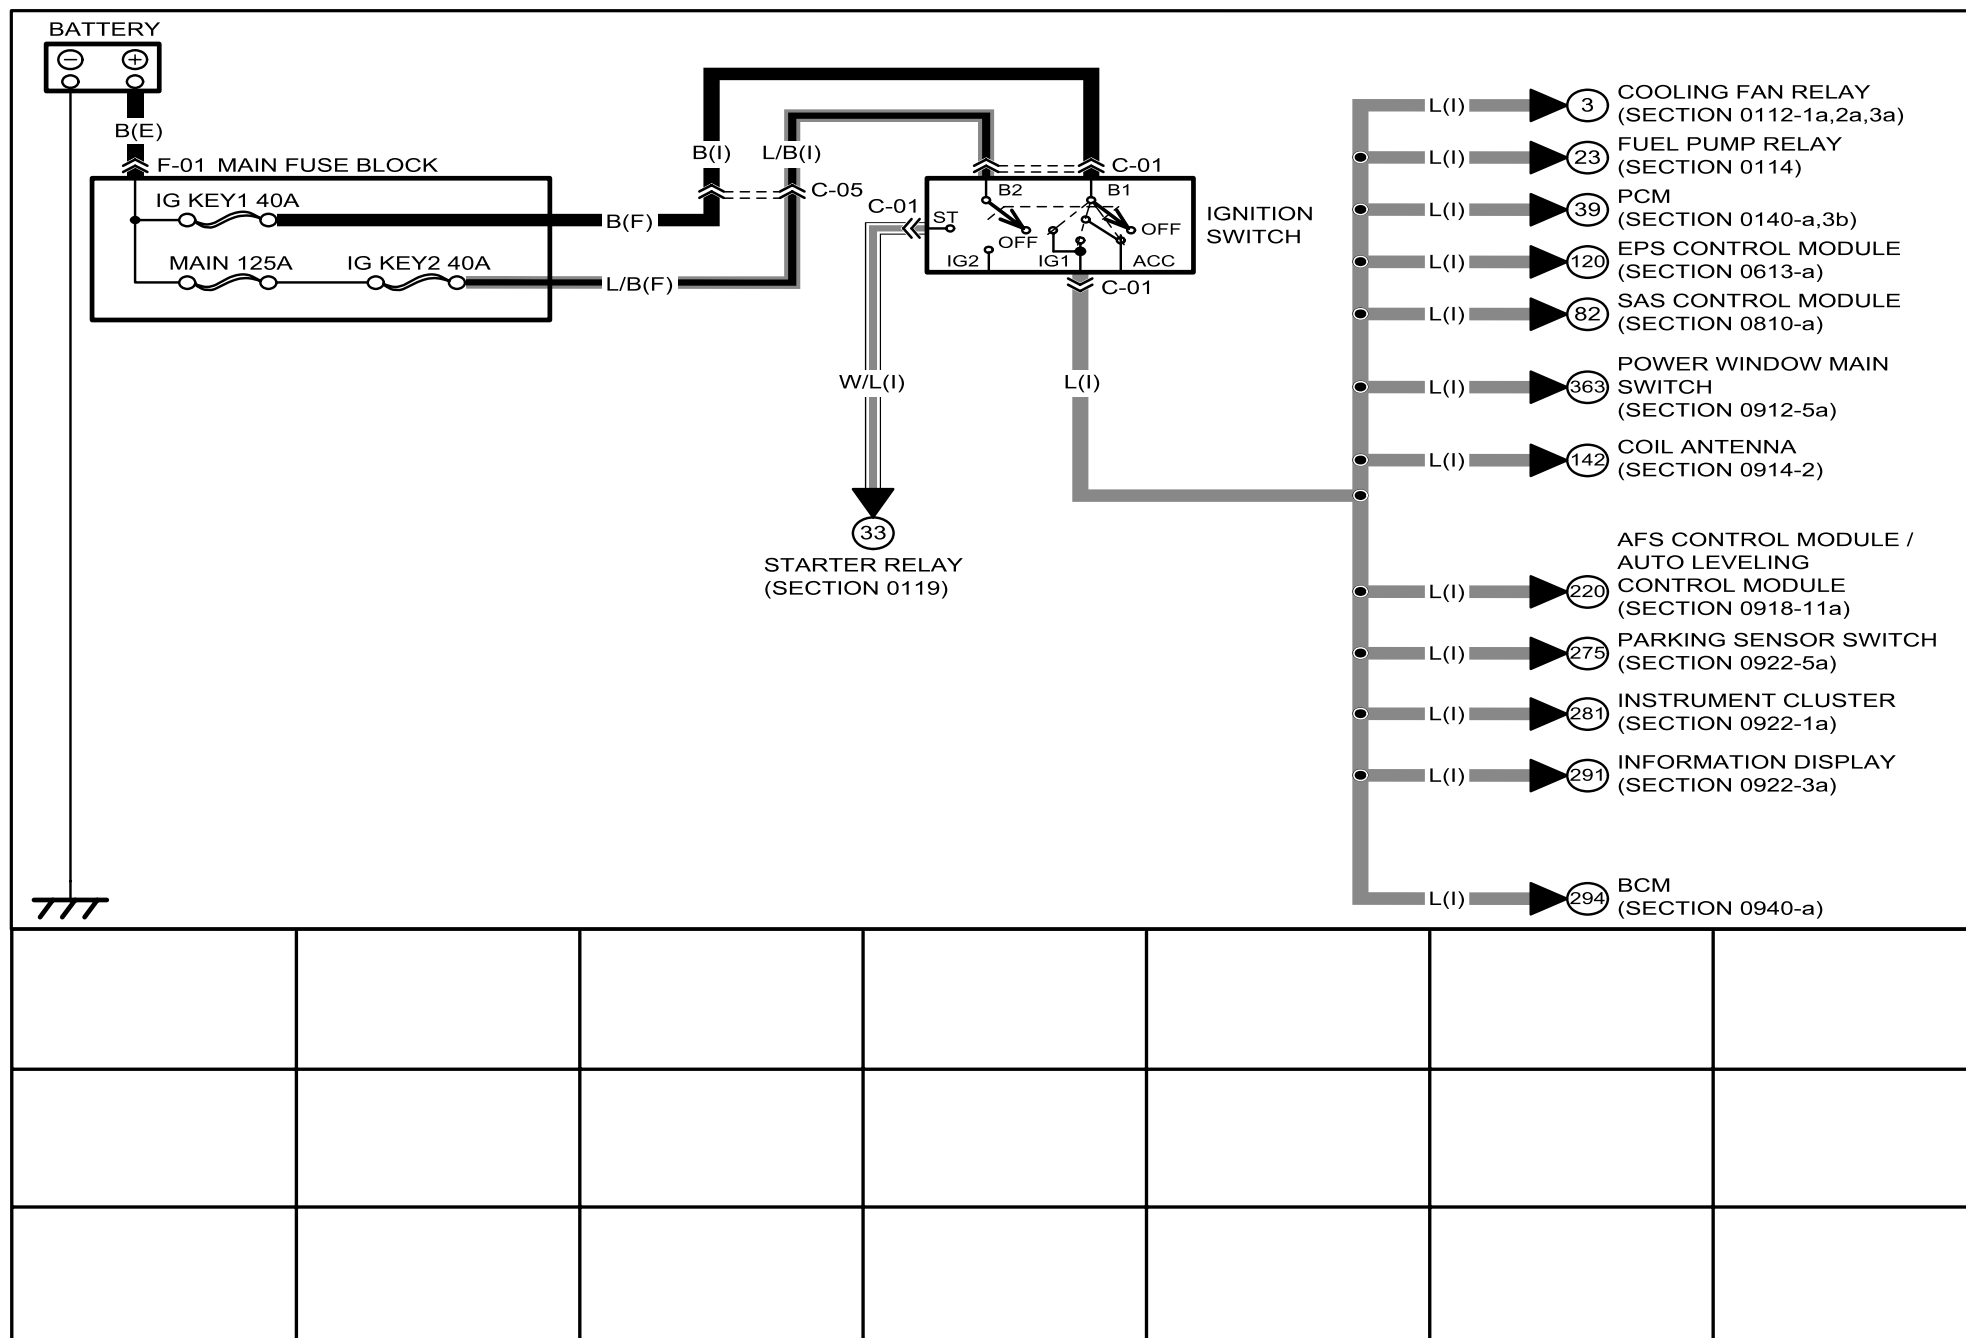

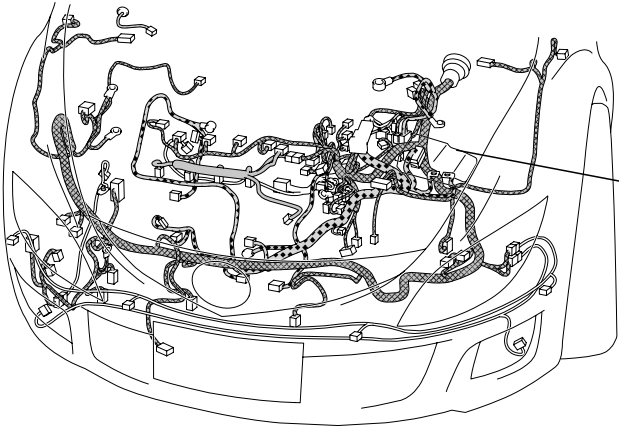


F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

[EXCEPT MZR-CD 2.2]

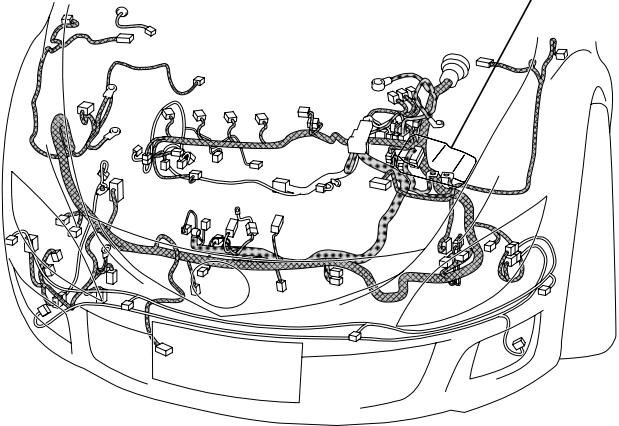


(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01

[MZR-CD 2.2]

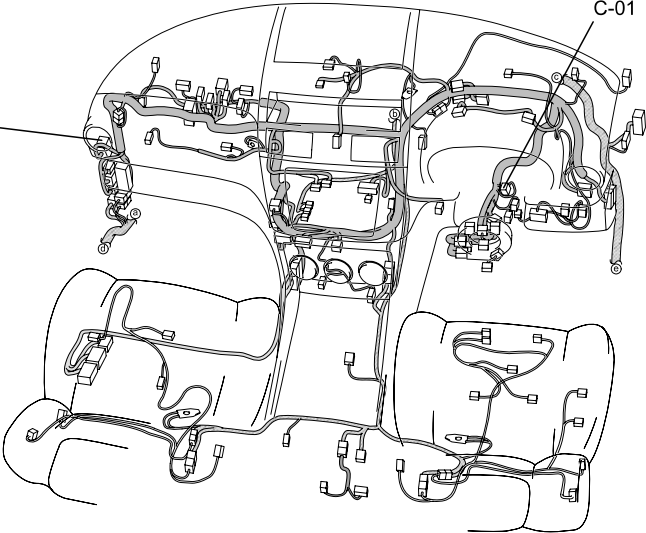



[GRAY]
(F)-(I)
C-05

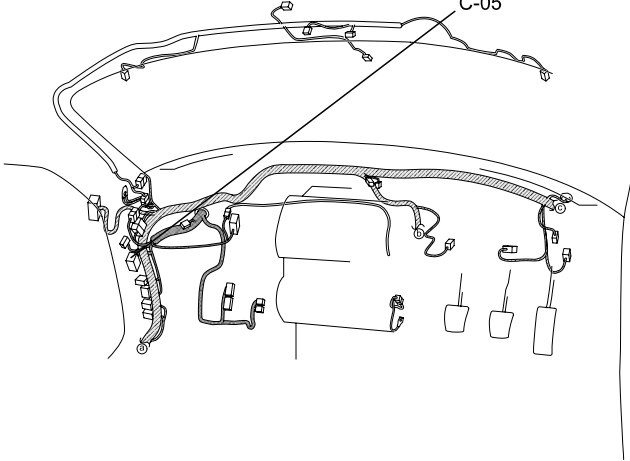


[GRAY]
(F)-(I)
C-05

- [Hatched pattern] : REAR HARNESS
- [Dark gray pattern] : REAR NO.5 HARNESS
- [Medium gray pattern] : INSTRUMENT PANEL HARNESS
- [Light gray pattern] : FLOOR HARNESS
- [White pattern] : INTERIOR LIGHT NO.2 HARNESS
- [Cross-hatched pattern] : FRONT HARNESS
- [Dotted pattern] : ENGINE HARNESS
- [Solid gray pattern] : INJECTION HARNESS

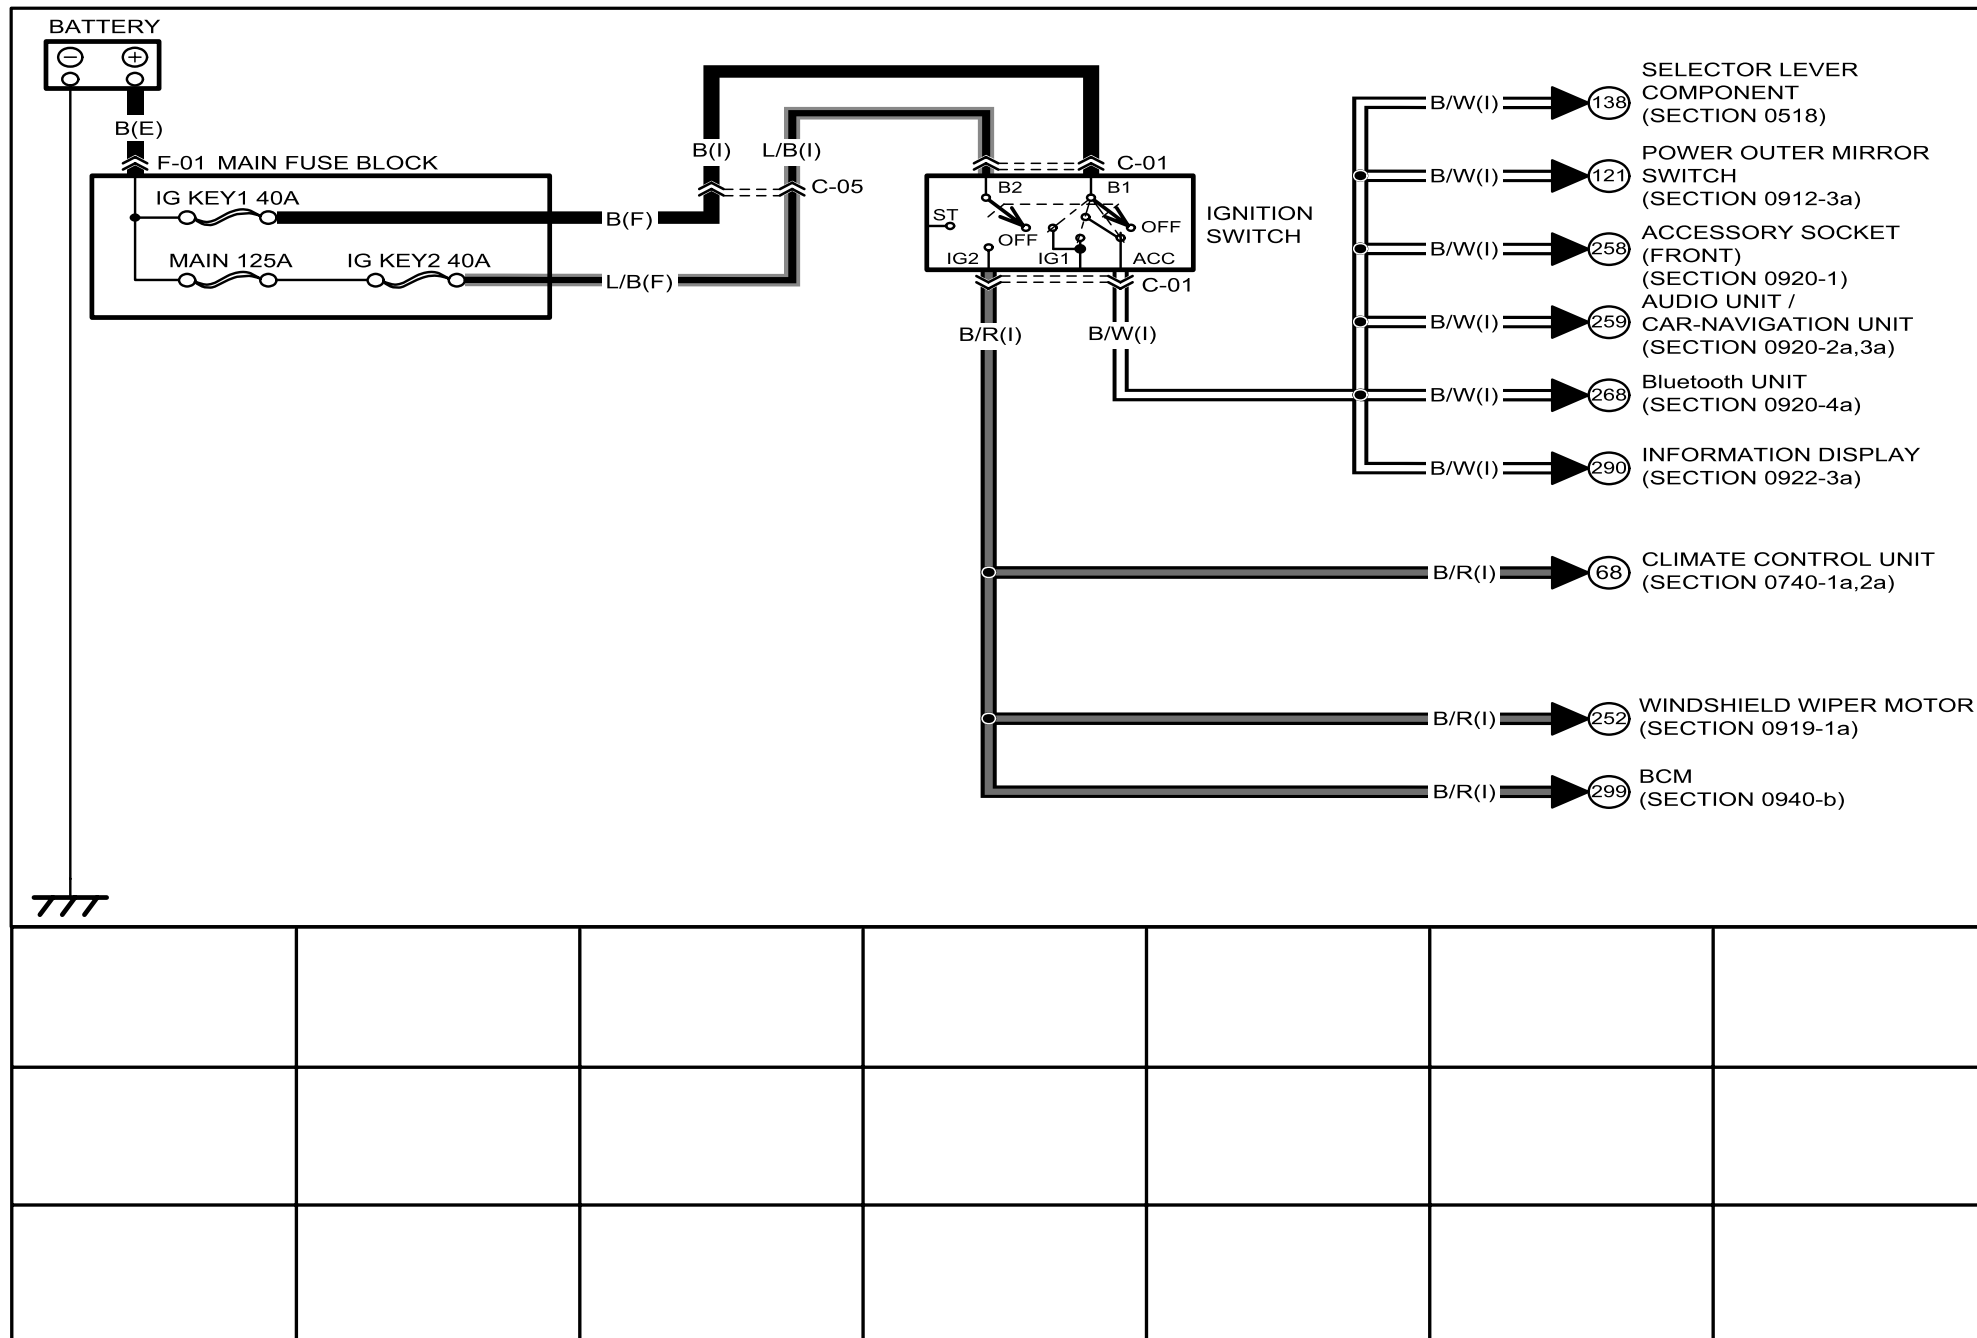

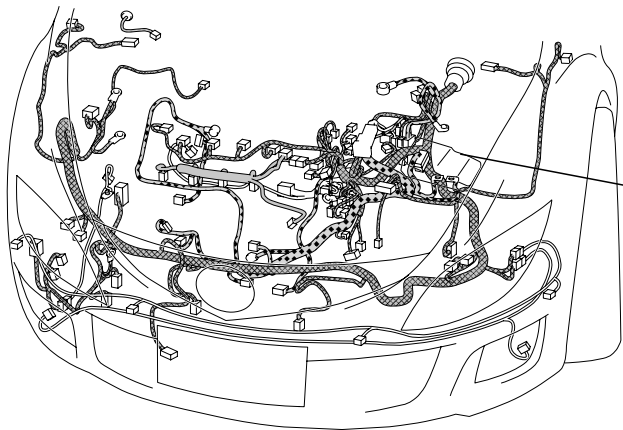

[EXCEPT MZR-CD 2.2]

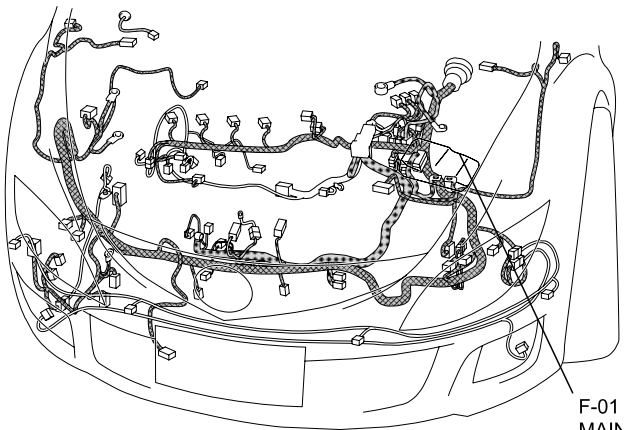

[MZR-CD 2.2]

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)



F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)


[GRAY]
(F)-(I)
C-05

IGNITION SWITCH
C-01

[GRAY]
(F)-(I)
C-05


- [Hatched pattern] : REAR HARNESS
- [Dark gray] : REAR NO.5 HARNESS
- [Medium gray] : INSTRUMENT PANEL HARNESS
- [Light gray] : FLOOR HARNESS
- [White] : INTERIOR LIGHT NO.2 HARNESS
- [Cross-hatched] : FRONT HARNESS
- [Dotted] : ENGINE HARNESS
- [Solid gray] : INJECTION HARNESS

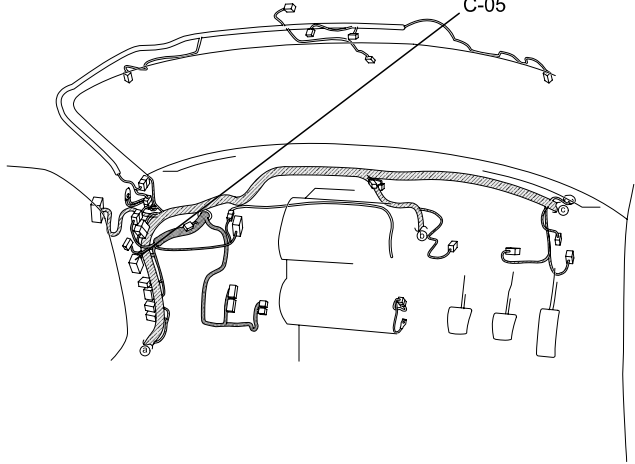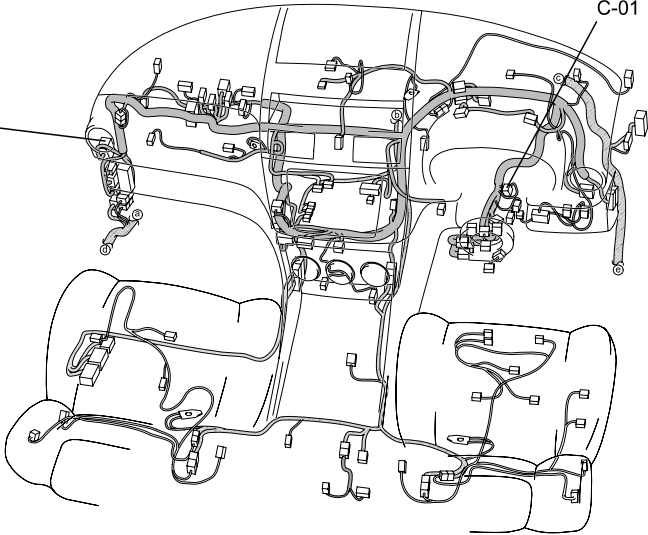

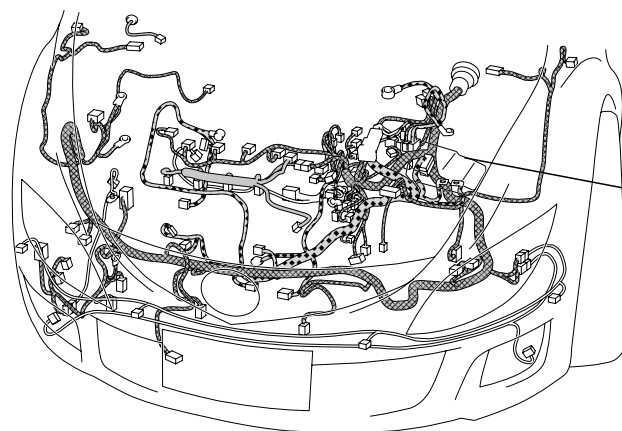

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)

[EXCEPT MZR-CD 2.2]

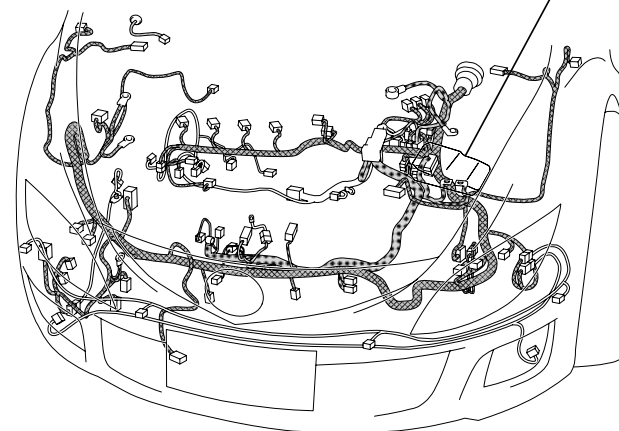


(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01

[MZR-CD 2.2]


[GRAY]
(F)-(I)
C-05

F-02
FUSE BLOCK
(REFER TO 00F SECTION)


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS



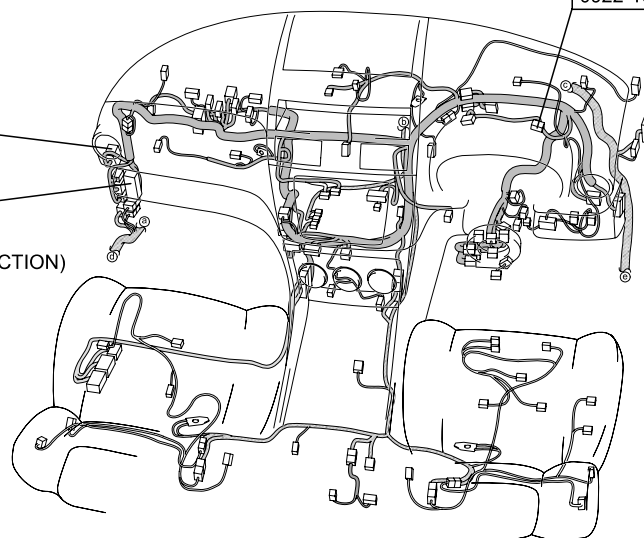






INSTRUMENT CLUSTER
0922-101B

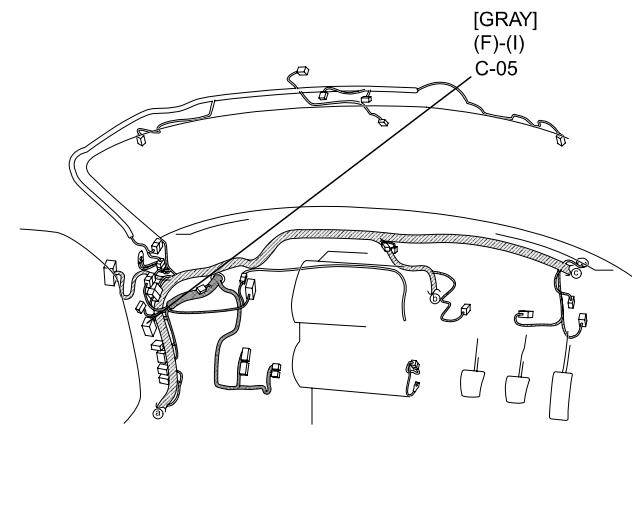


[GRAY]
(F)-(I)
C-05

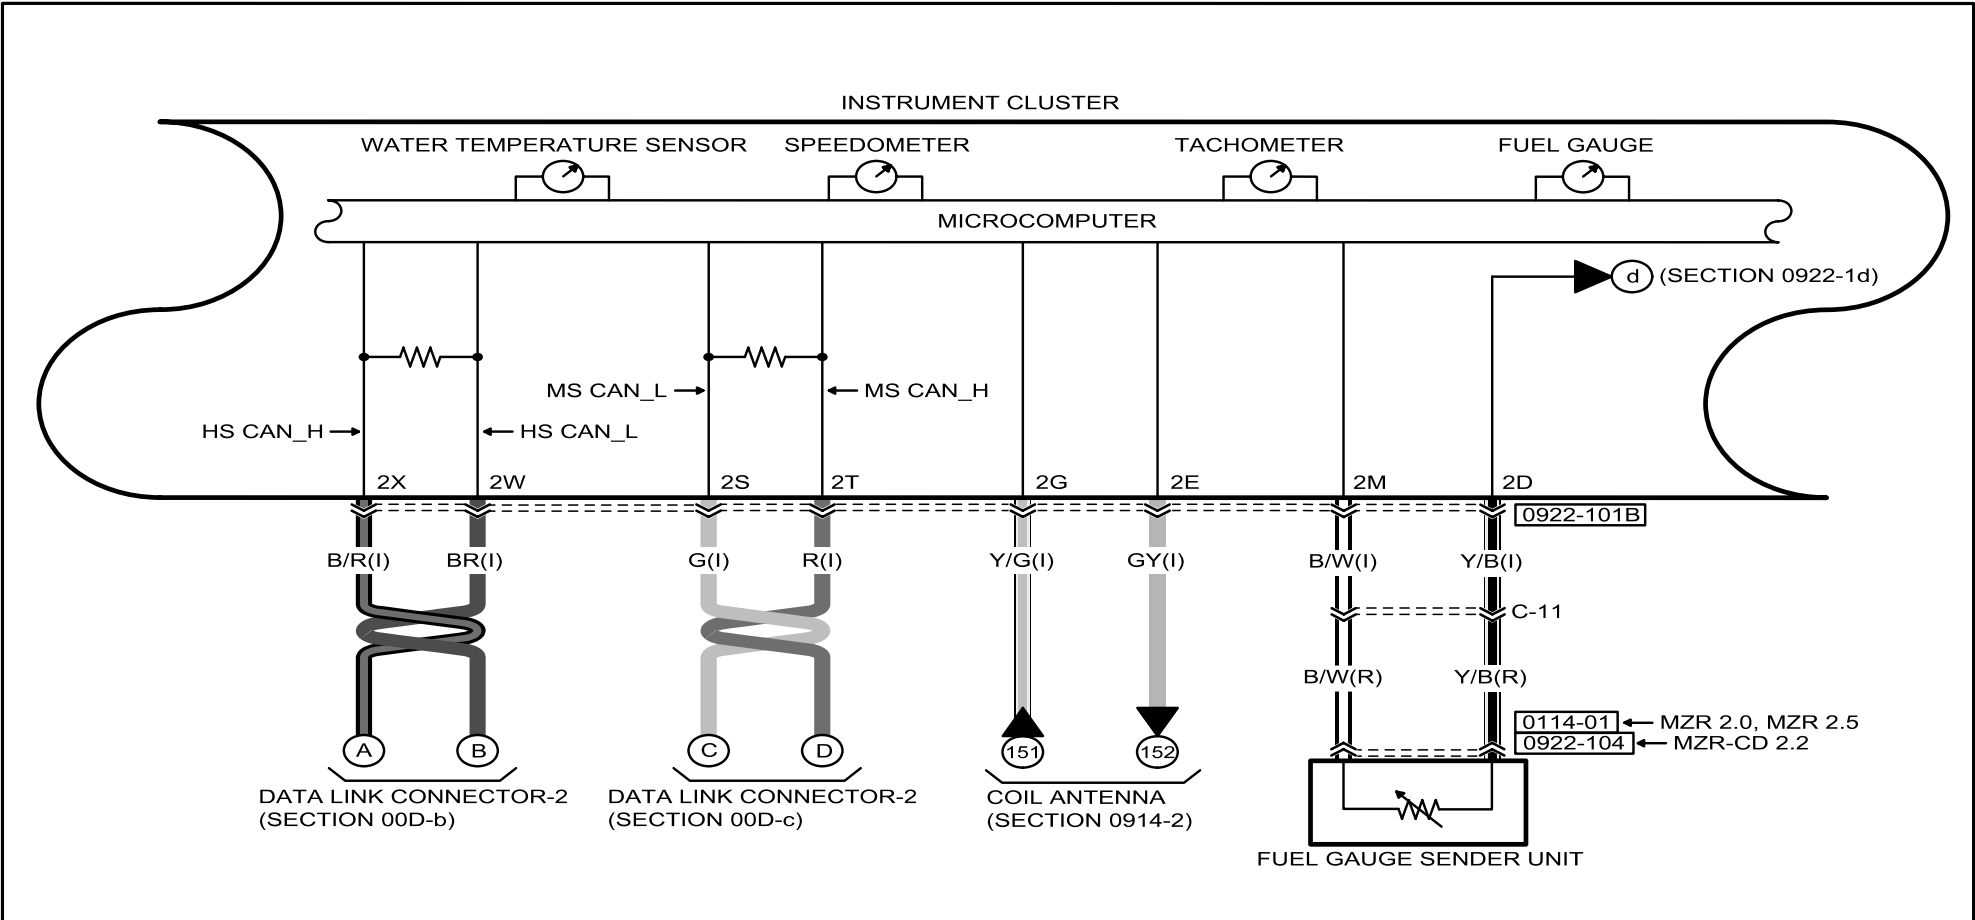

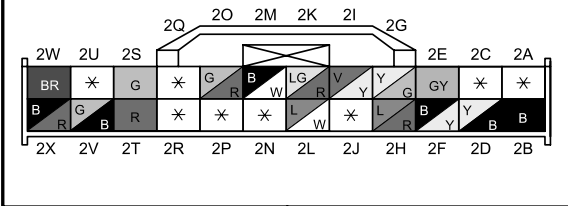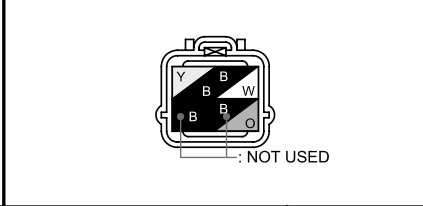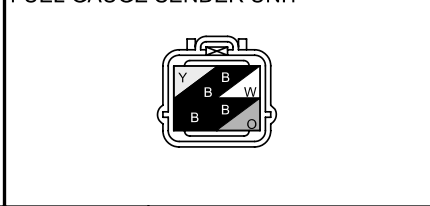
<p>0922-101B INSTRUMENT CLUSTER</p> 	<p>0922-104 FUEL GAUGE SENDER UNIT</p> 	<p>0114-01 FUEL PUMP UNIT / FUEL GAUGE SENDER UNIT</p> 		

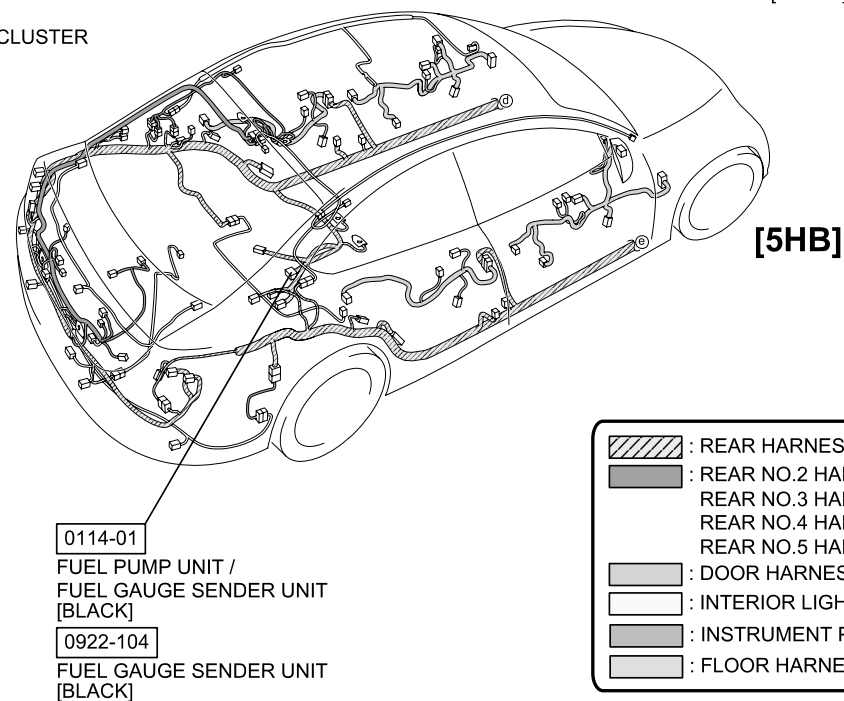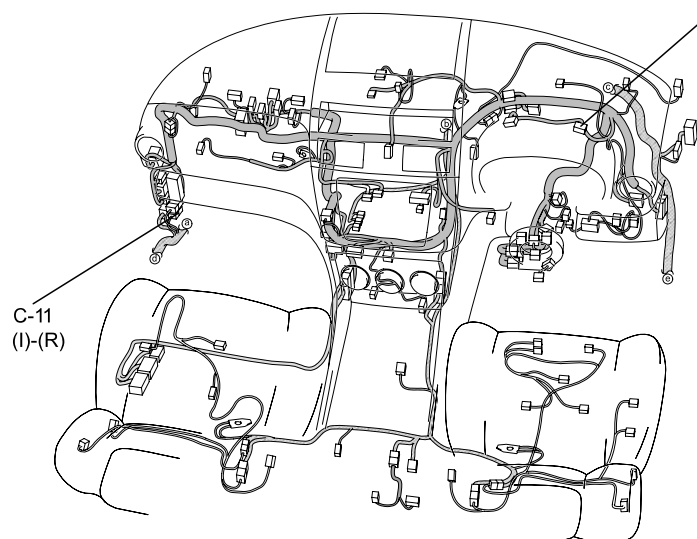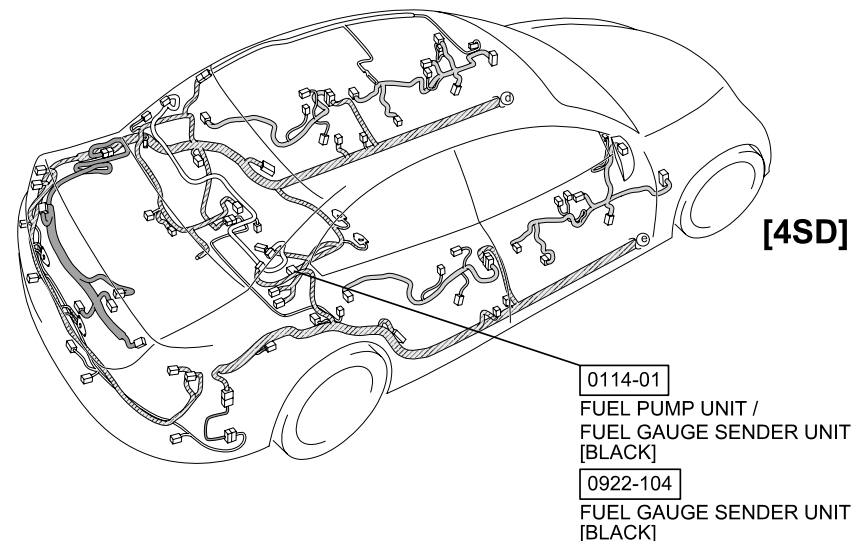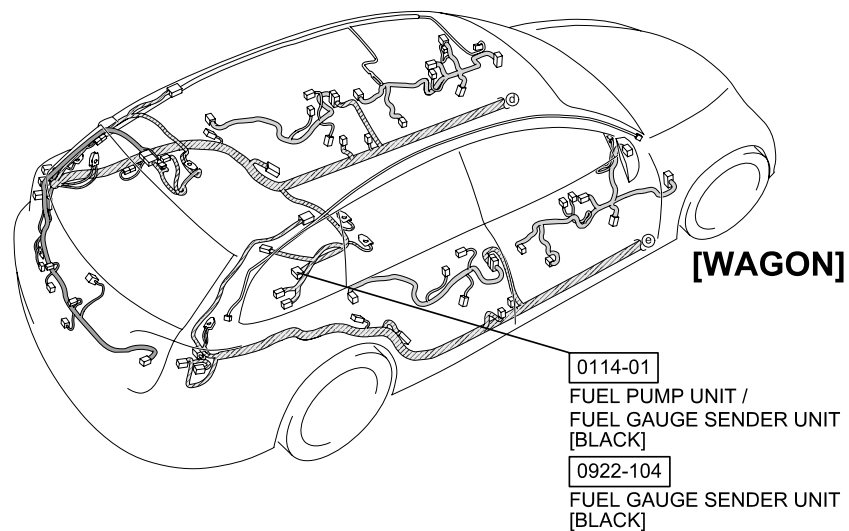



	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.3 HARNESS
	: REAR NO.4 HARNESS
	: REAR NO.5 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS

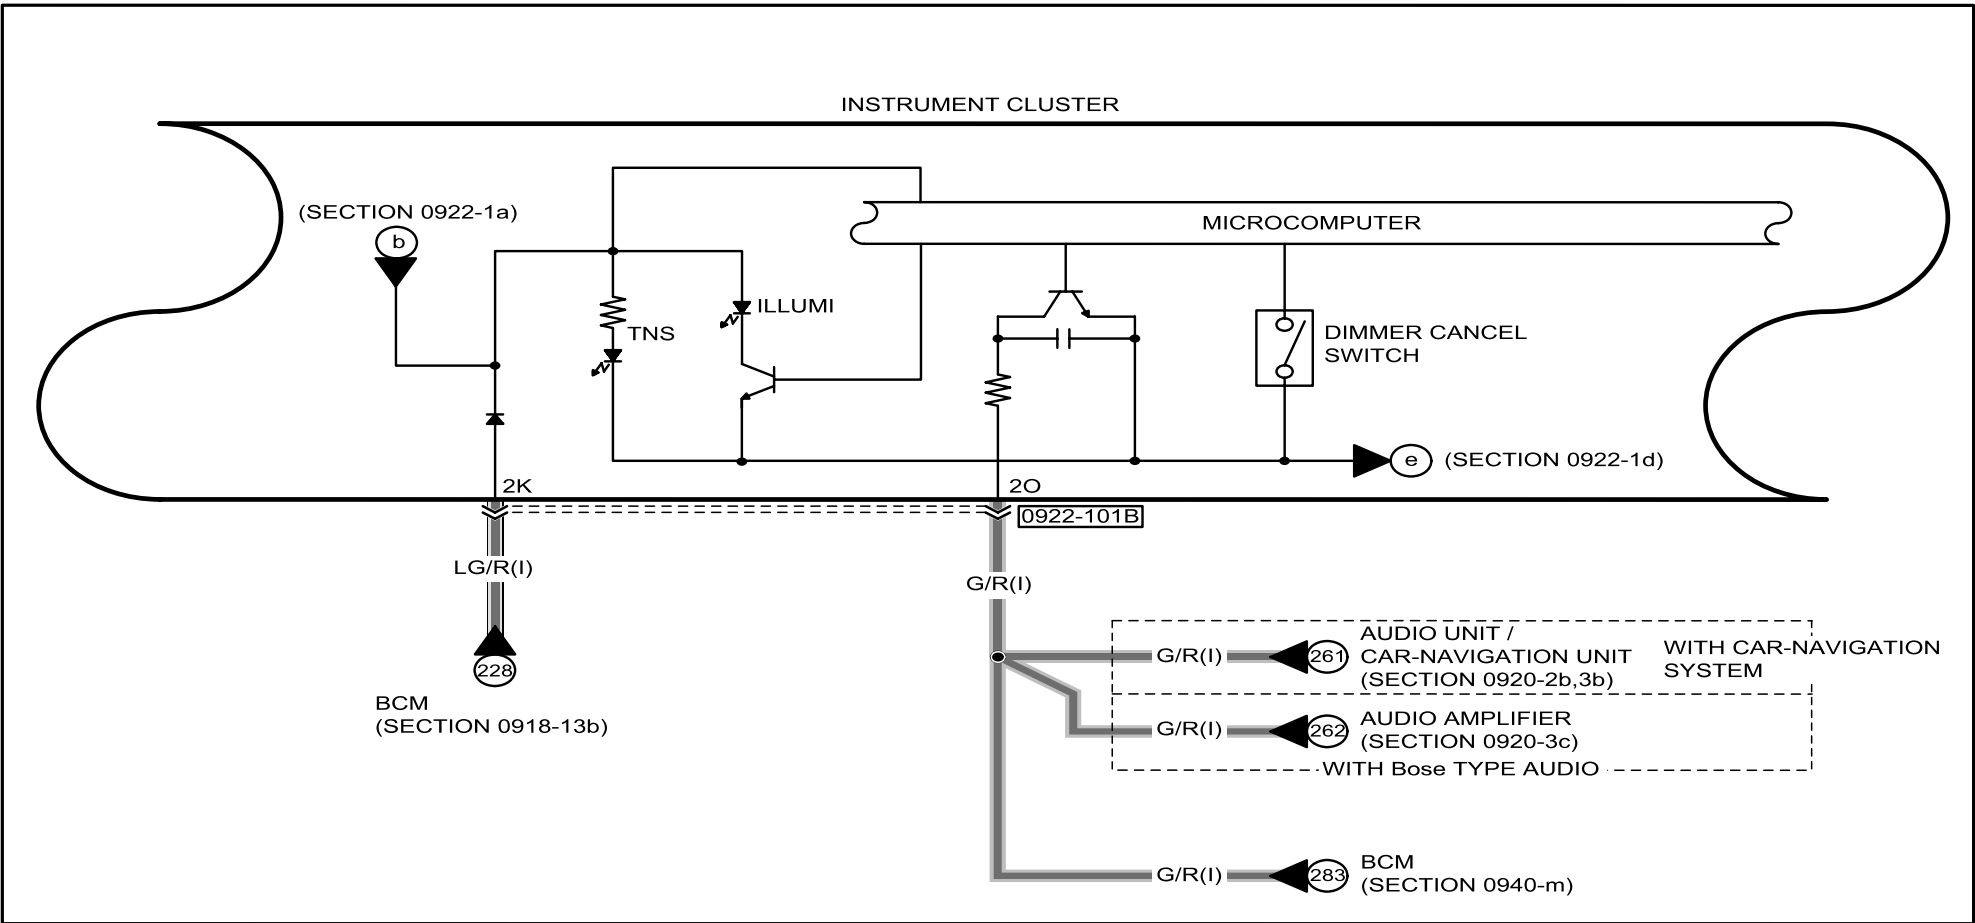


0922-101B
INSTRUMENT CLUSTER

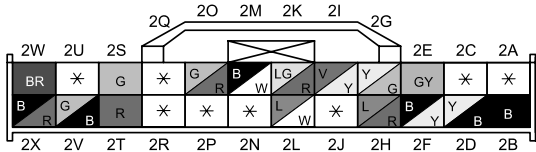


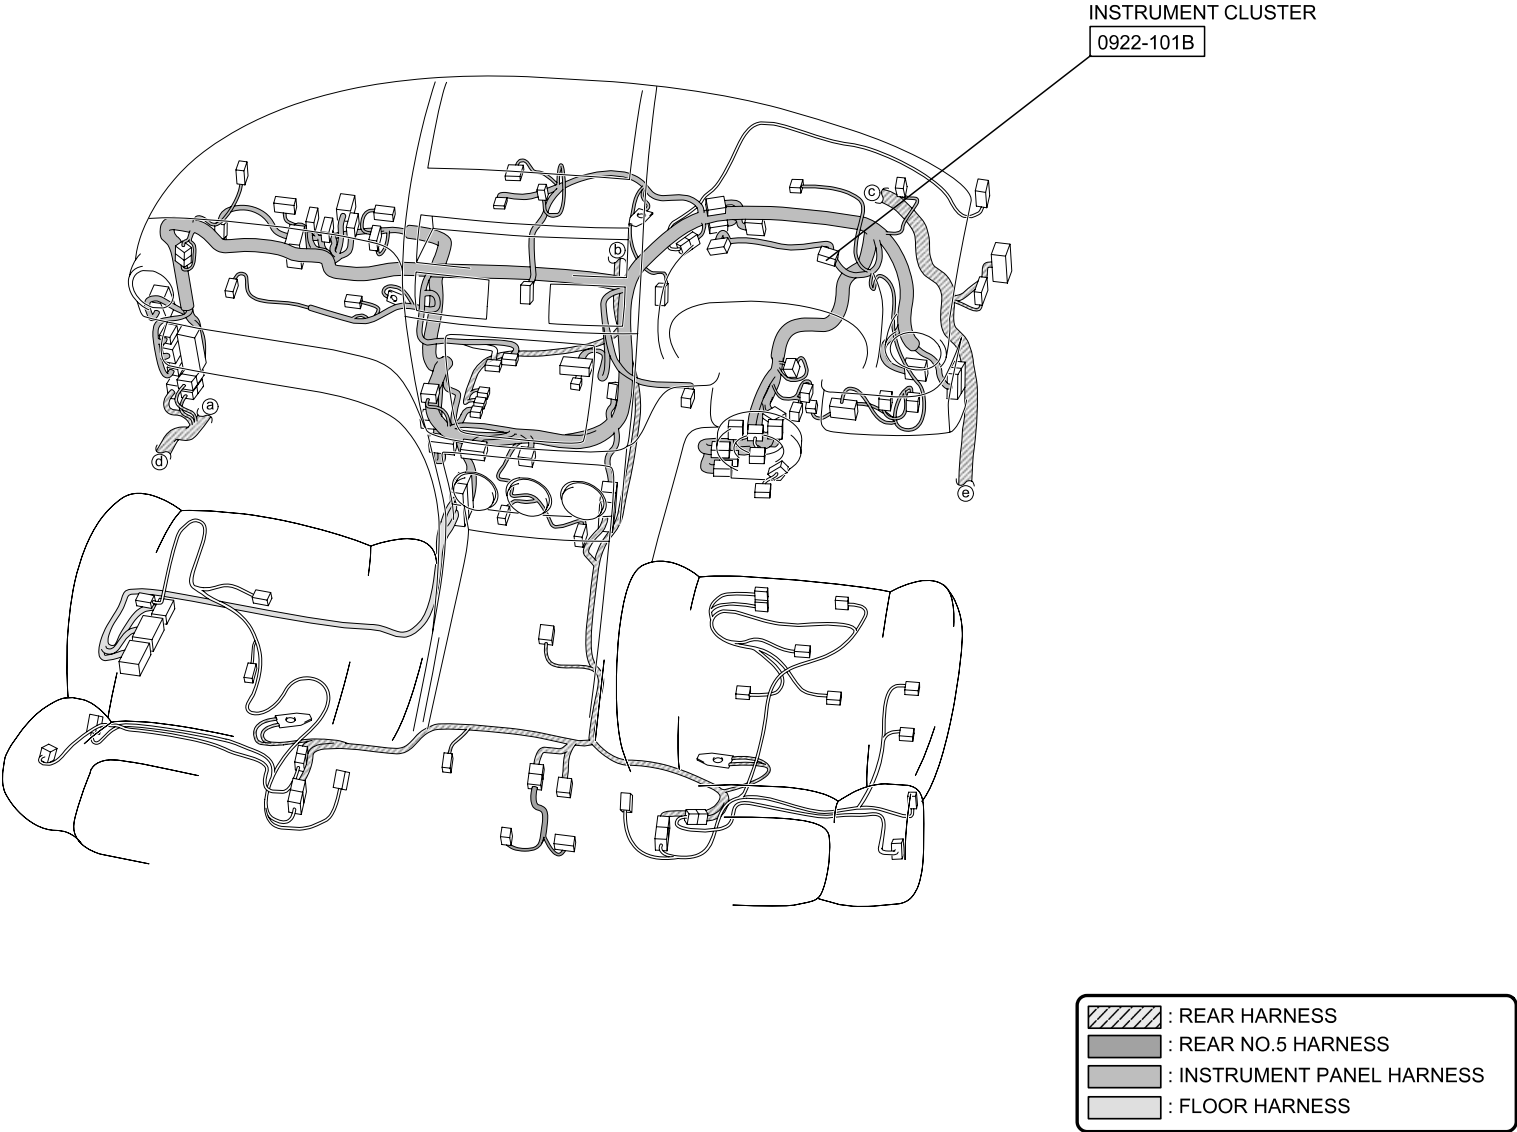


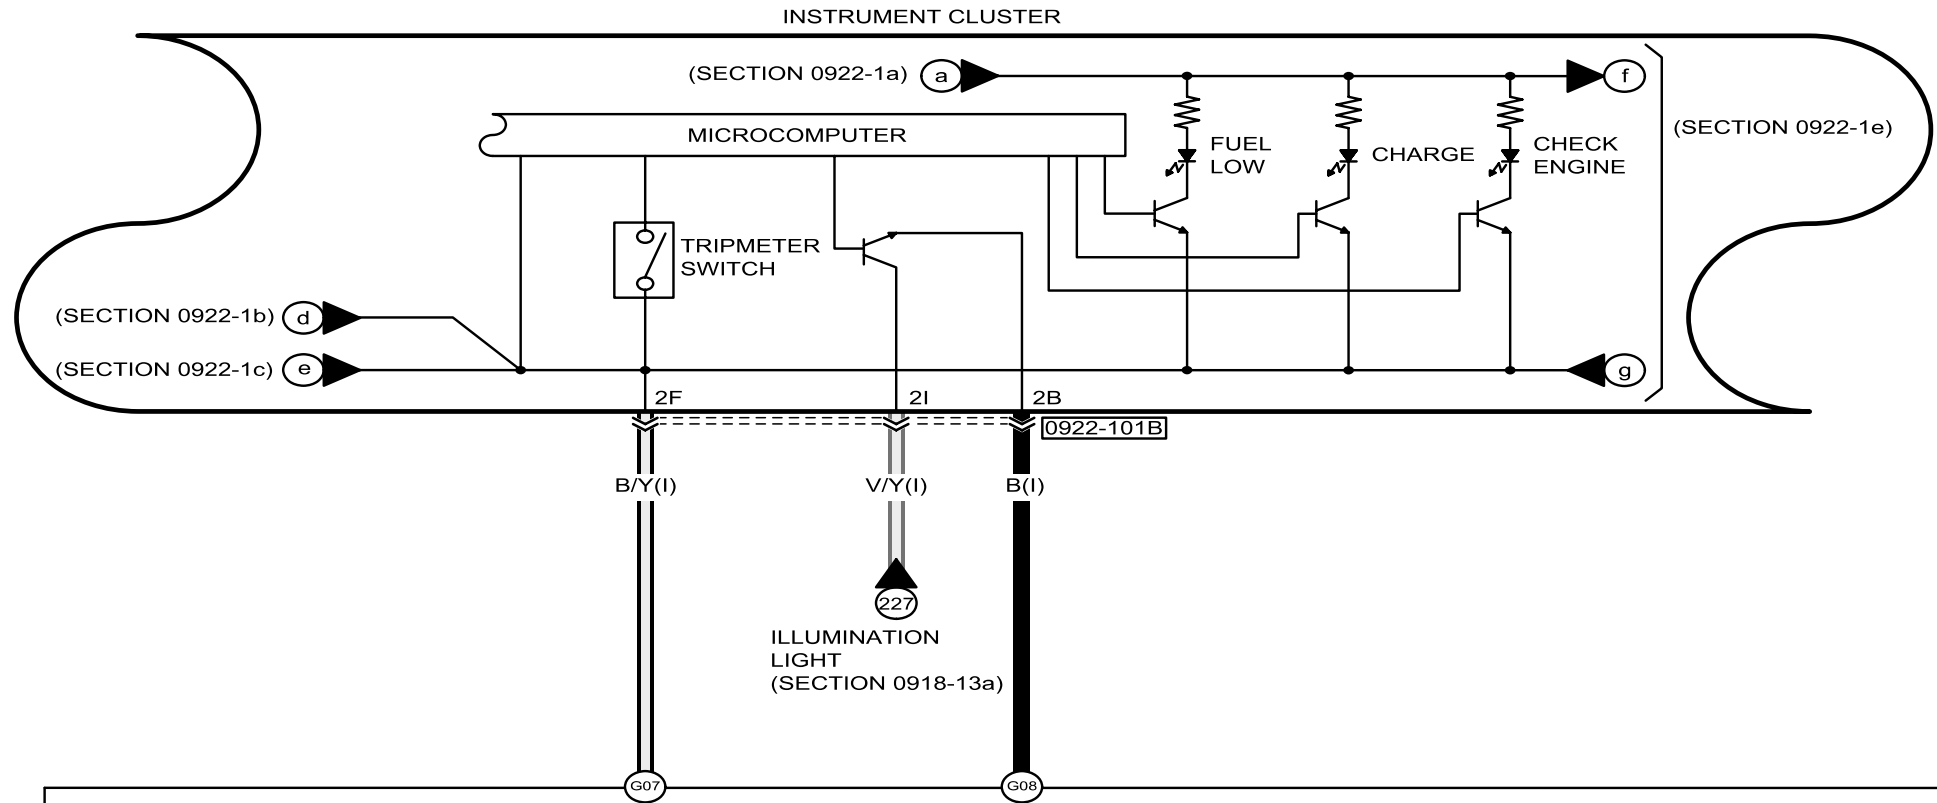


0922-101B
INSTRUMENT CLUSTER

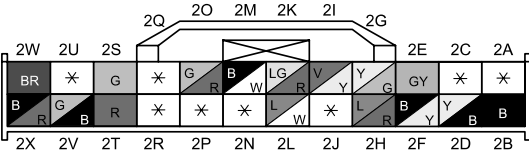

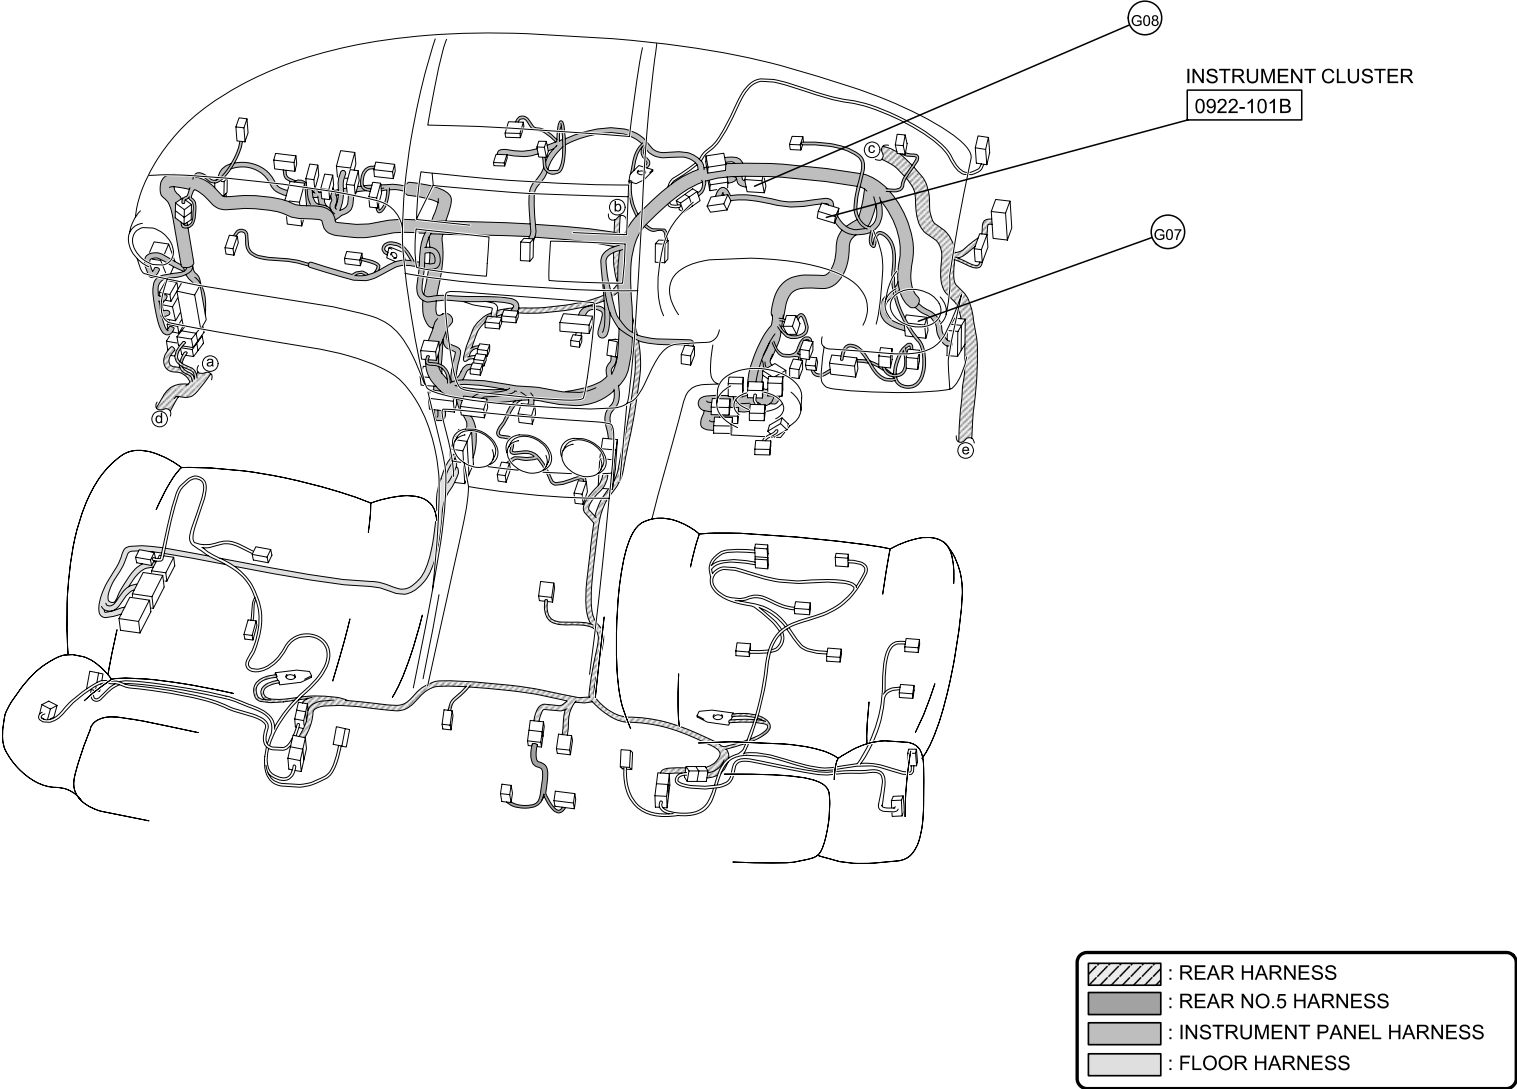

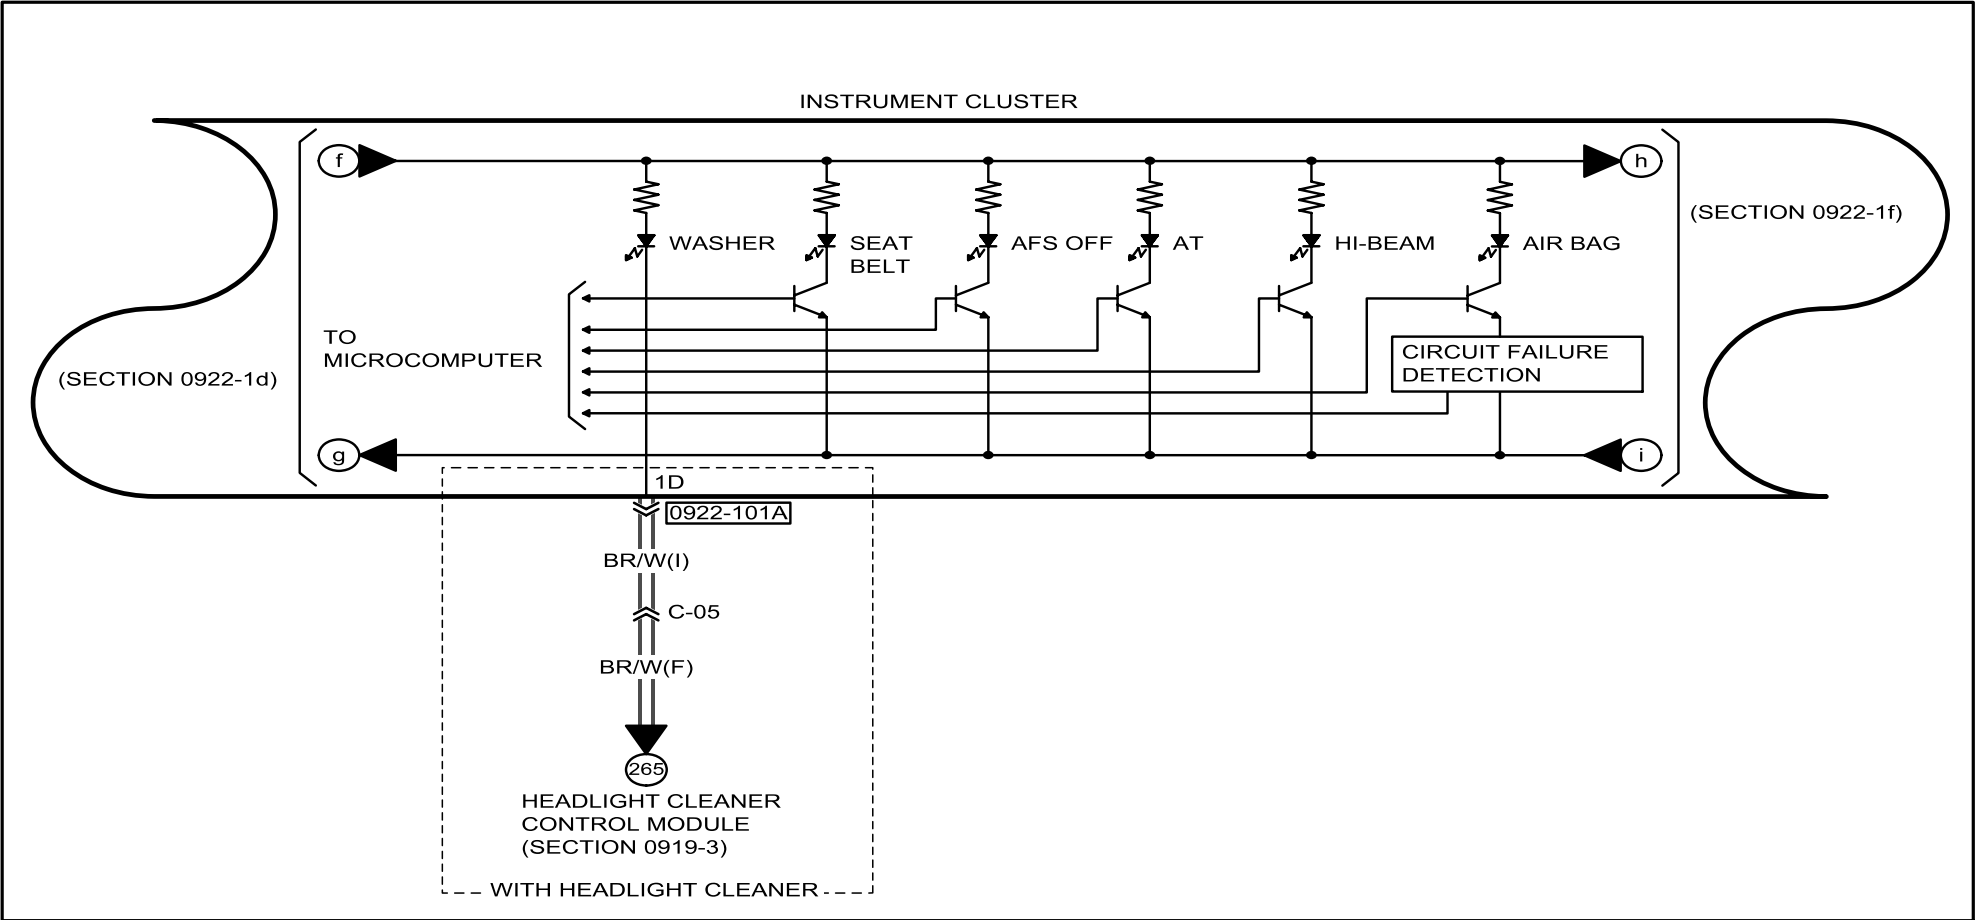



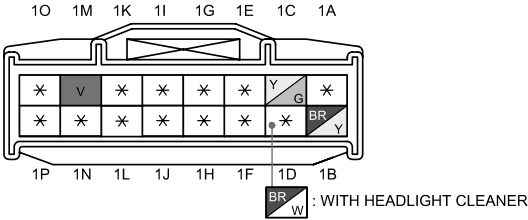



0922-101A
INSTRUMENT CLUSTER




[GRAY]
(F)-(I)
C-05

INSTRUMENT CLUSTER
0922-101A


[GRAY]
(F)-(I)
C-05

	: FRONT HARNESS
	: REAR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS


@18 : WITH MALFUNCTION WARNING LIGHT




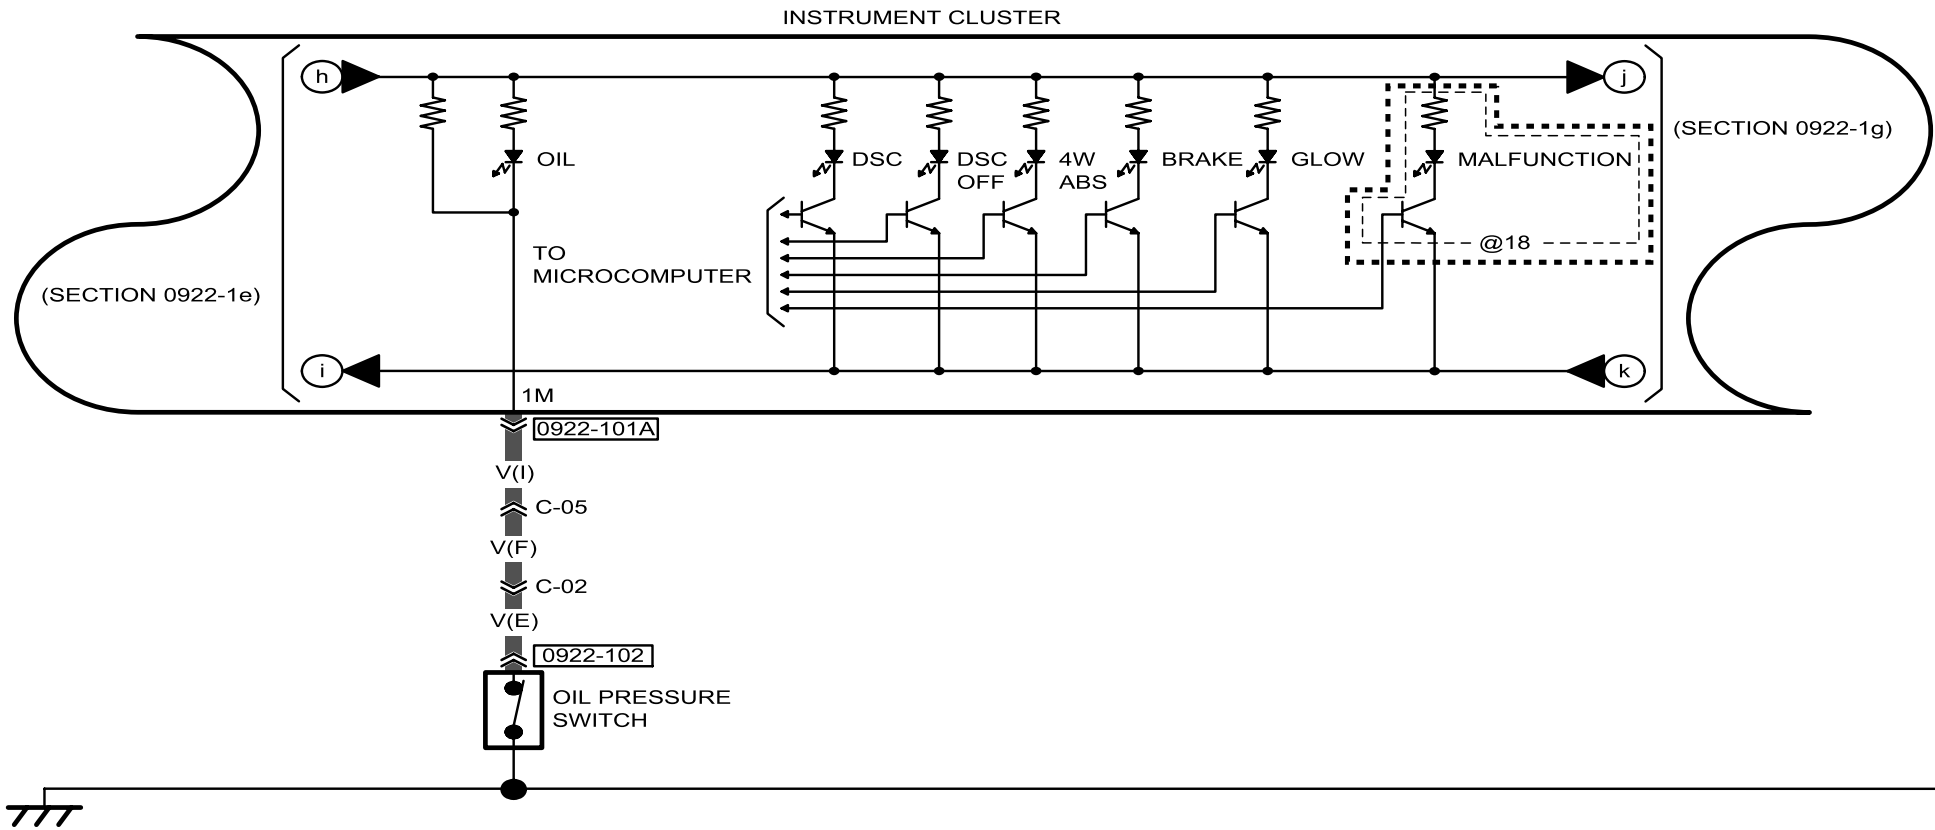



0922-101A
INSTRUMENT CLUSTER

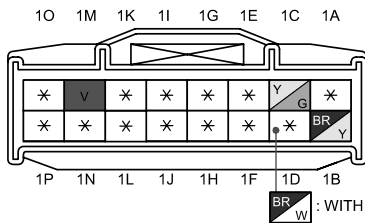




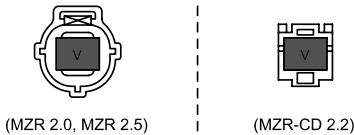

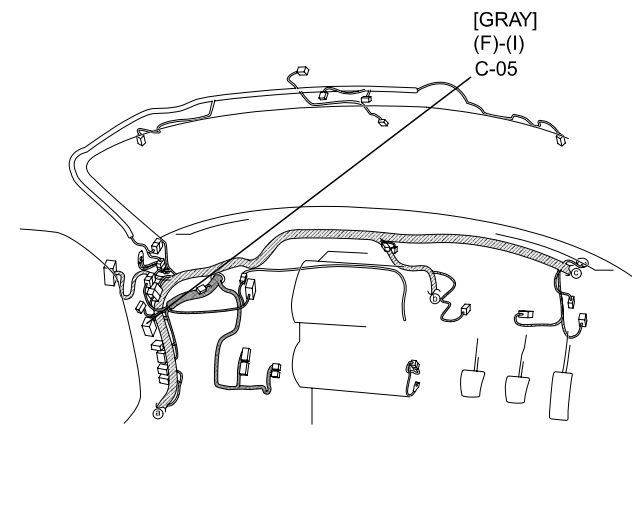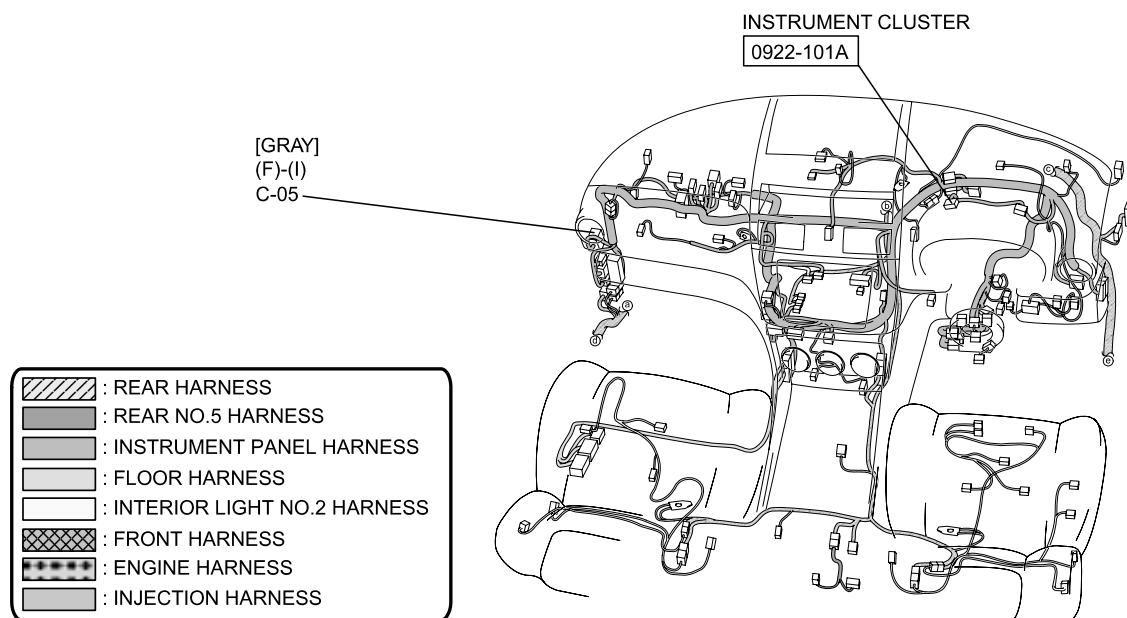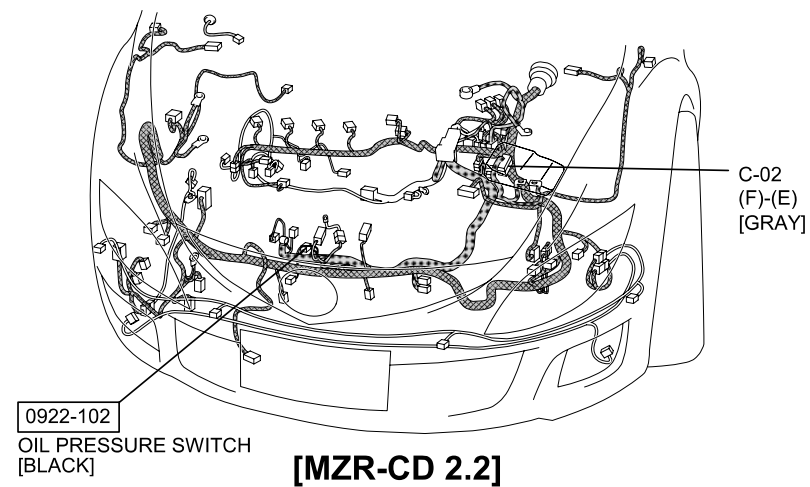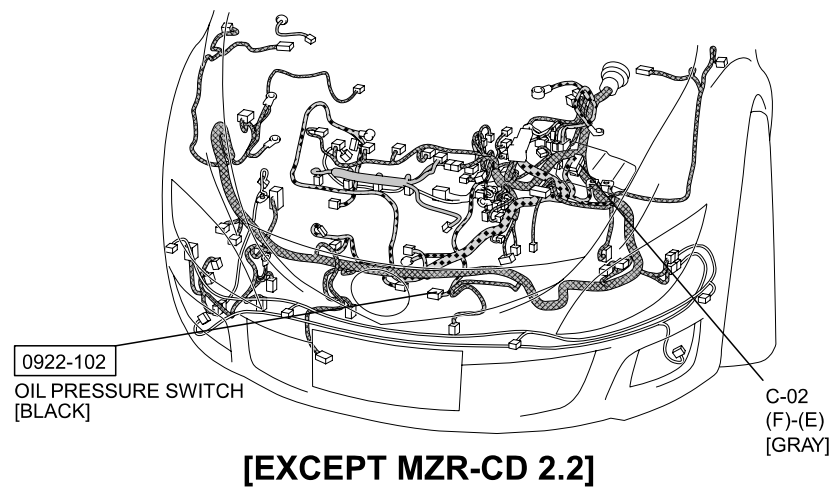0922-102
OIL PRESSURE SWITCH

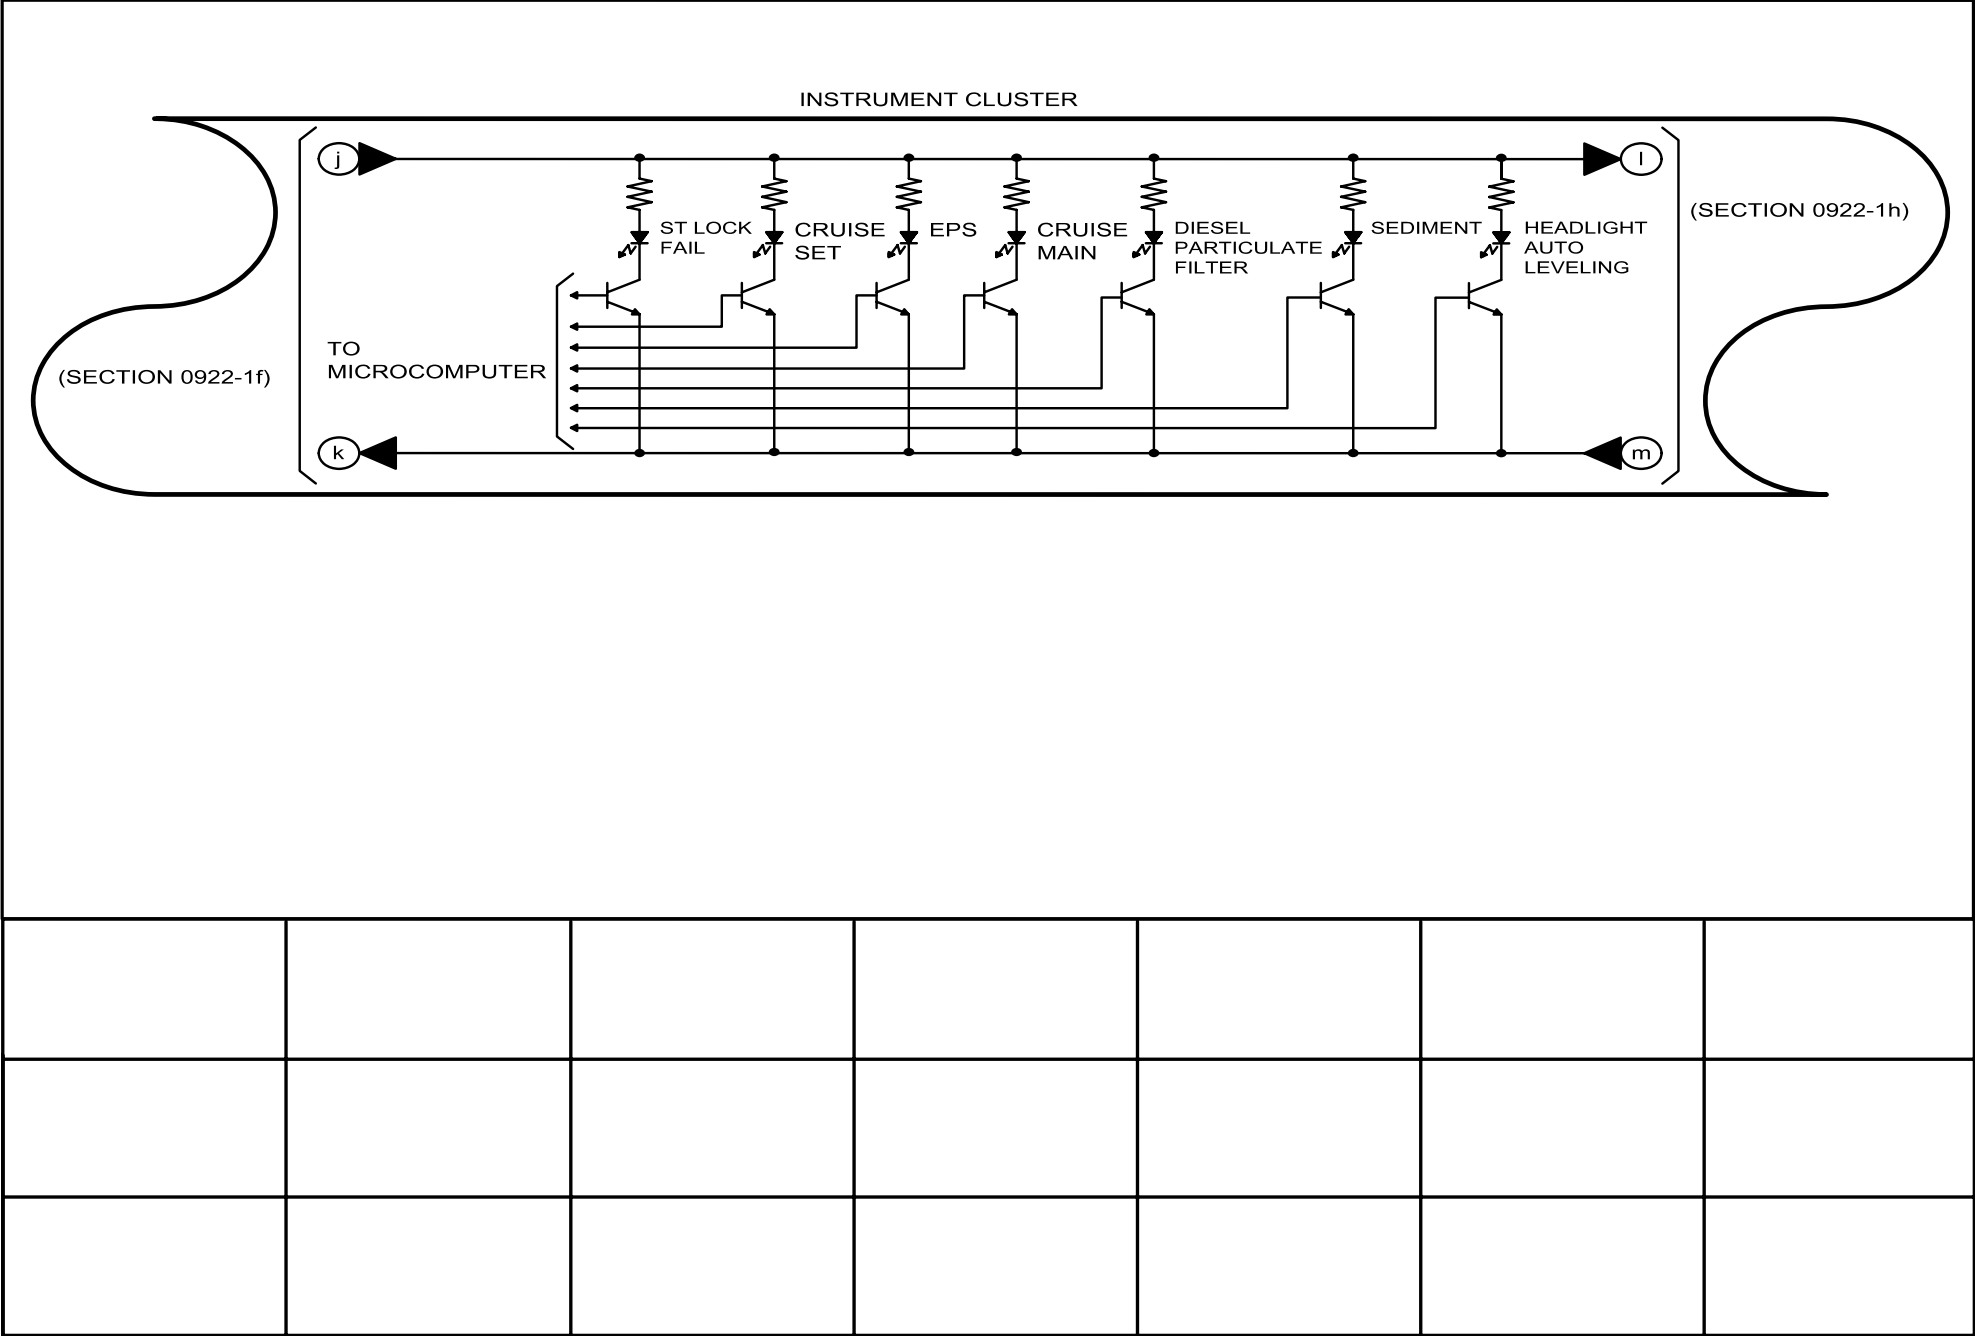



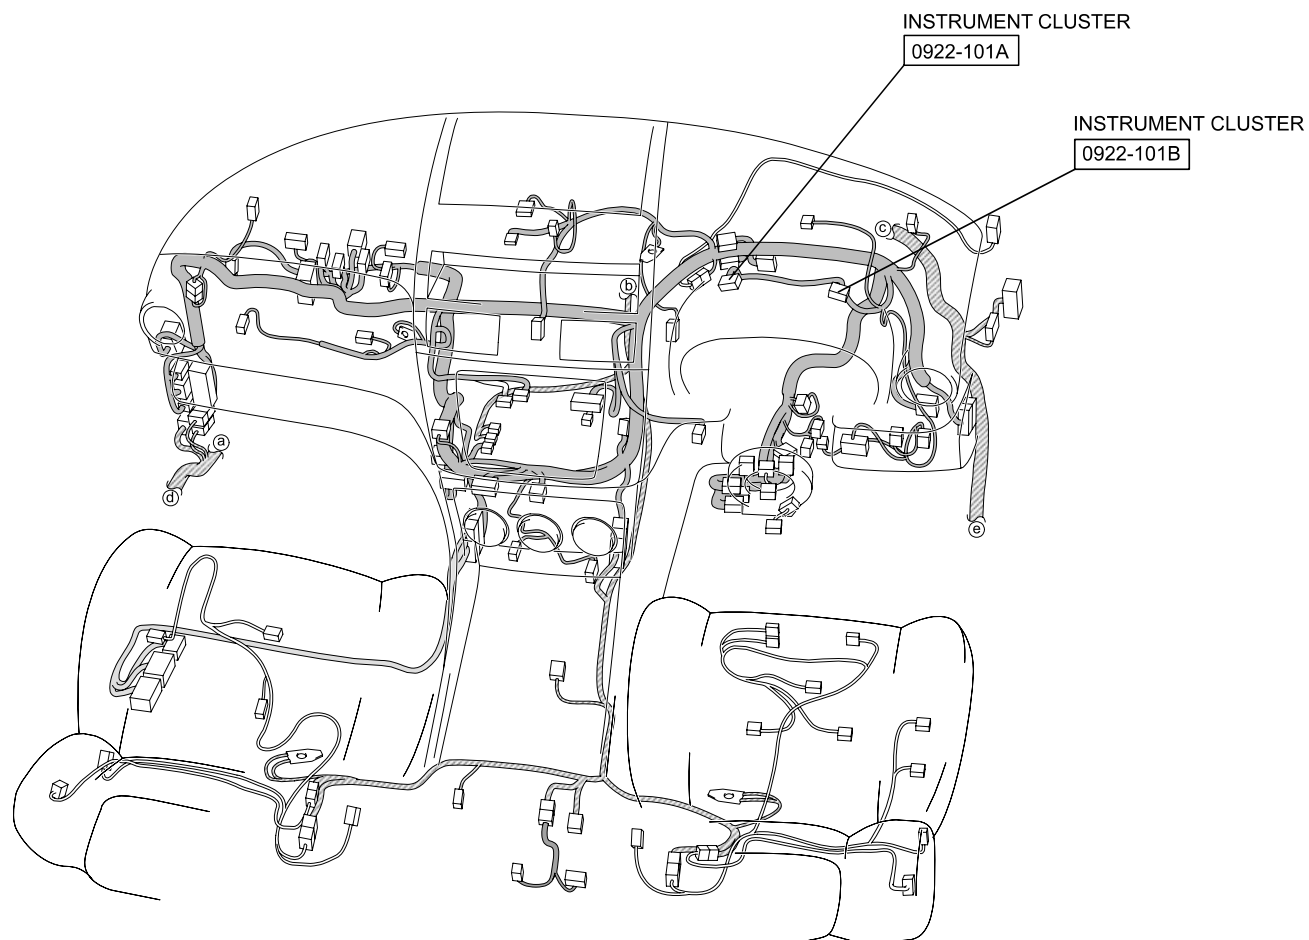







-  : REAR HARNESS
-  : REAR NO.5 HARNESS
-  : INSTRUMENT PANEL HARNESS
-  : FLOOR HARNESS

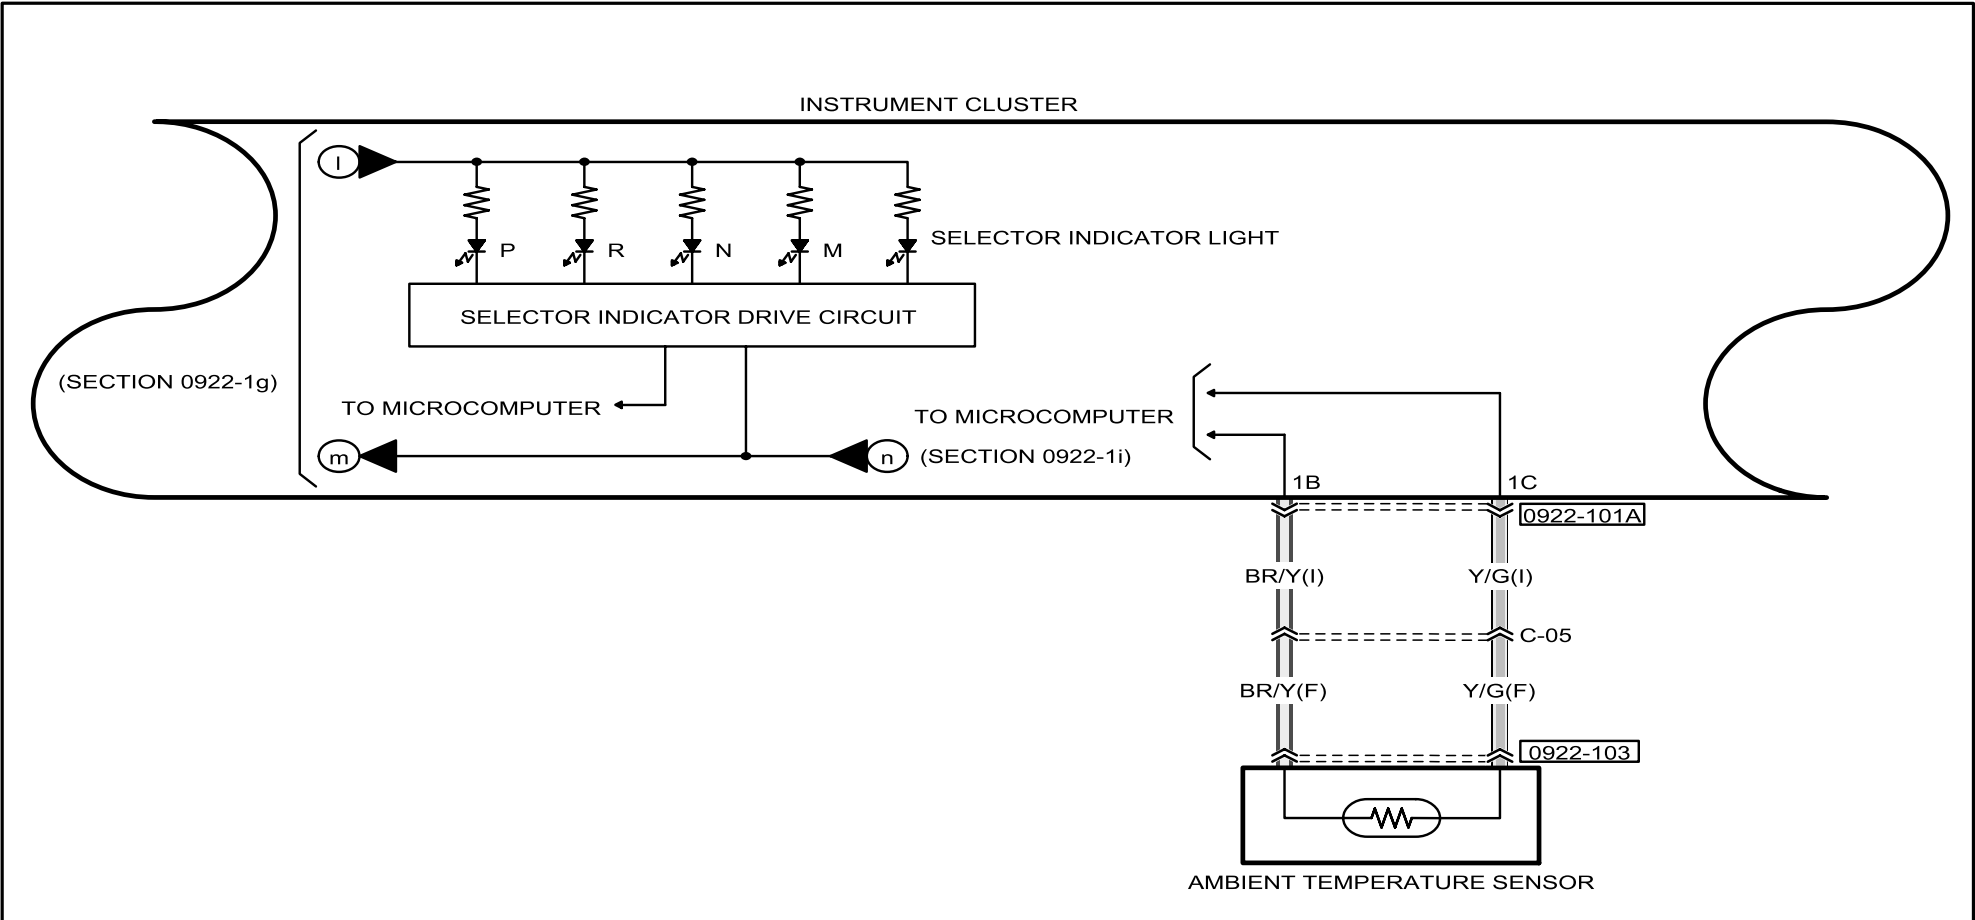

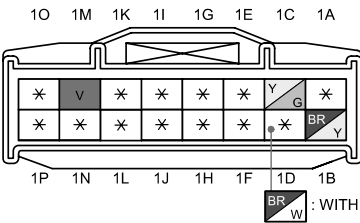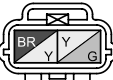
<p>0922-101A INSTRUMENT CLUSTER</p>  <p>1O 1M 1K 1I 1G 1E 1C 1A</p> <p>1P 1N 1L 1J 1H 1F 1D 1B</p> <p>1W : WITH HEADLIGHT CLEANER</p>	<p>0922-103 AMBIENT TEMPERATURE SENSOR</p> 			
--	---	--	--	--

[GRAY]
AMBIENT TEMPERATURE SENSOR

0922-103

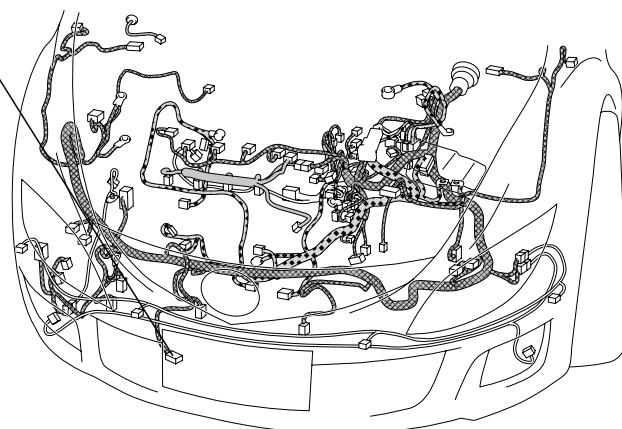

[EXCEPT MZR-CD 2.2]

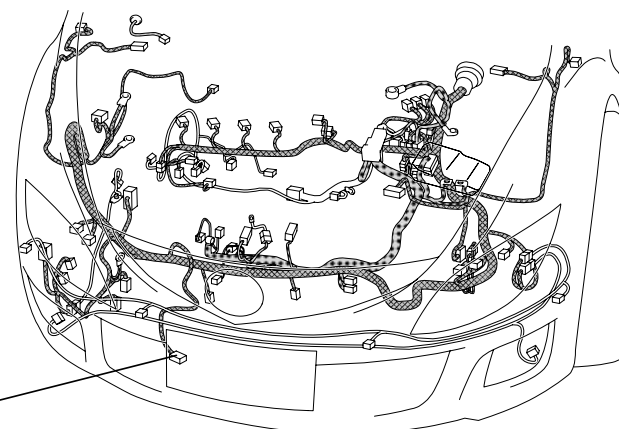

0922-103


AMBIENT TEMPERATURE SENSOR
[GRAY]

[MZR-CD 2.2]


INSTRUMENT CLUSTER

0922-101A


[GRAY]
(F)-(I)
C-05

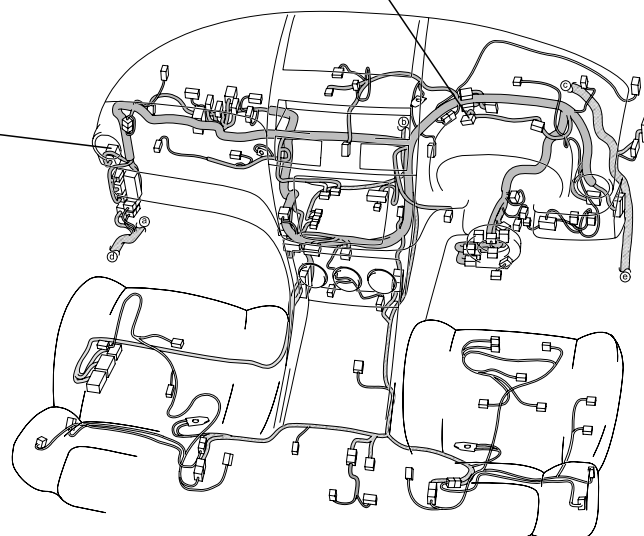

[GRAY]
(F)-(I)
C-05

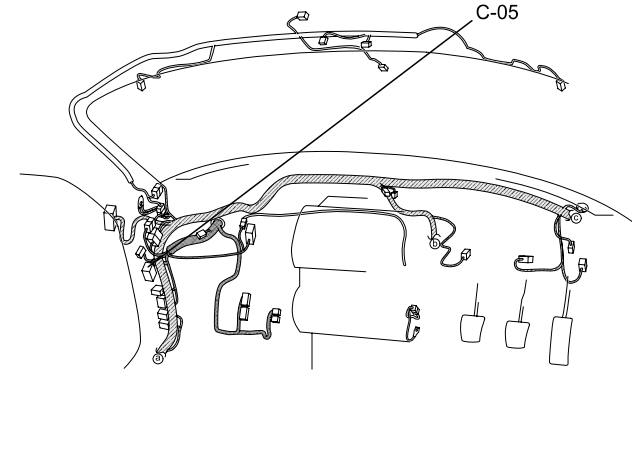

	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

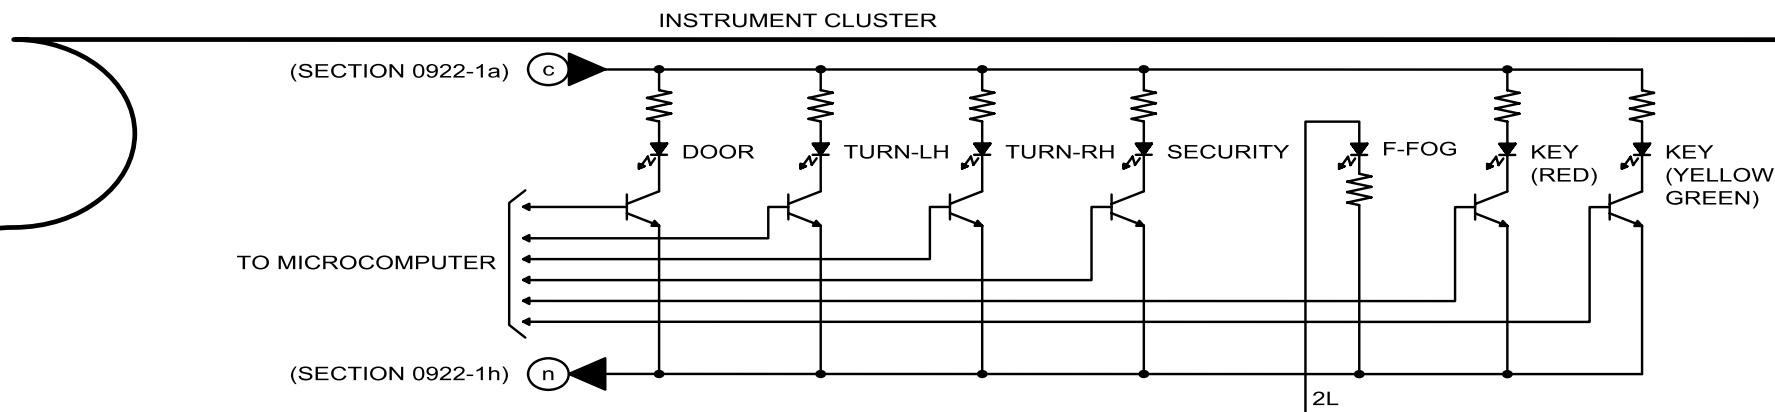


0922-101B


L/W(I)

198





FRONT FOG LIGHT RELAY
(SECTION 0918-3a)

0922-101B
INSTRUMENT CLUSTER

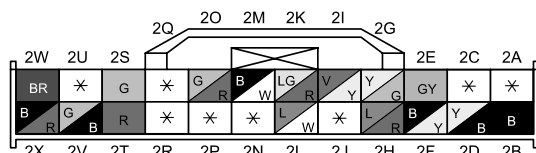

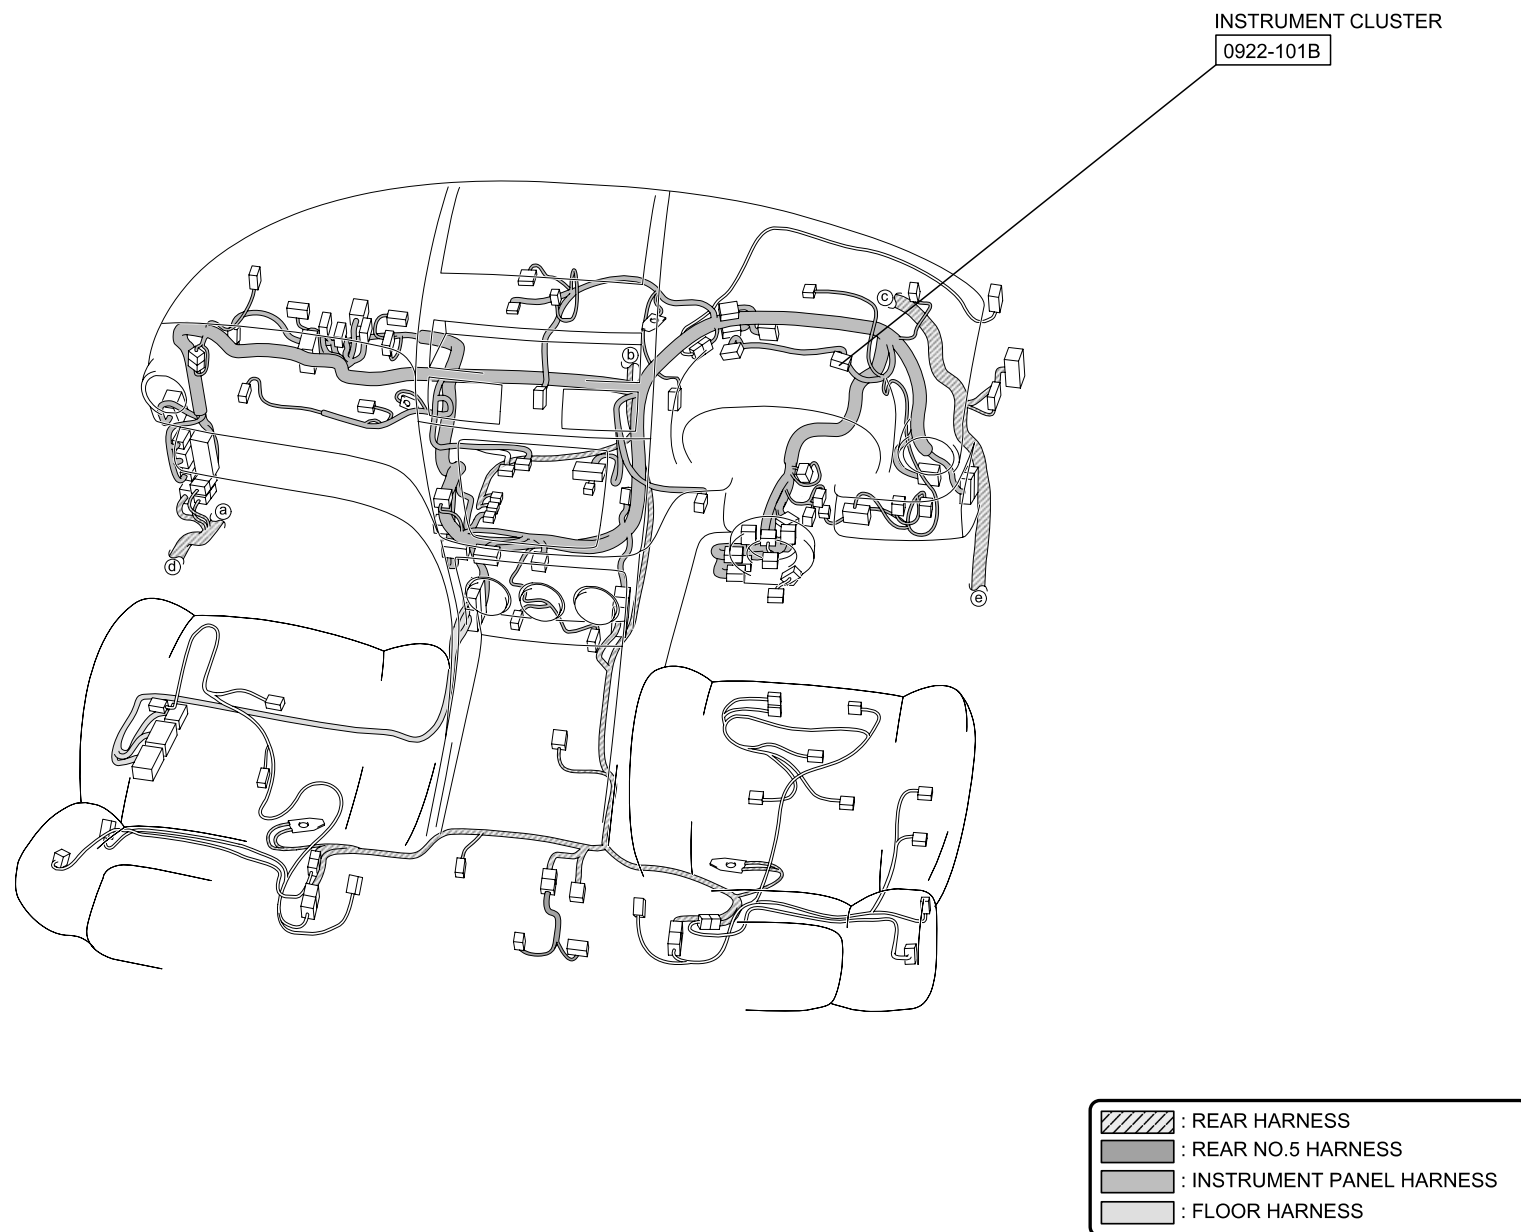

{ } : NAME INDICATED ON FUSE BOX COVER

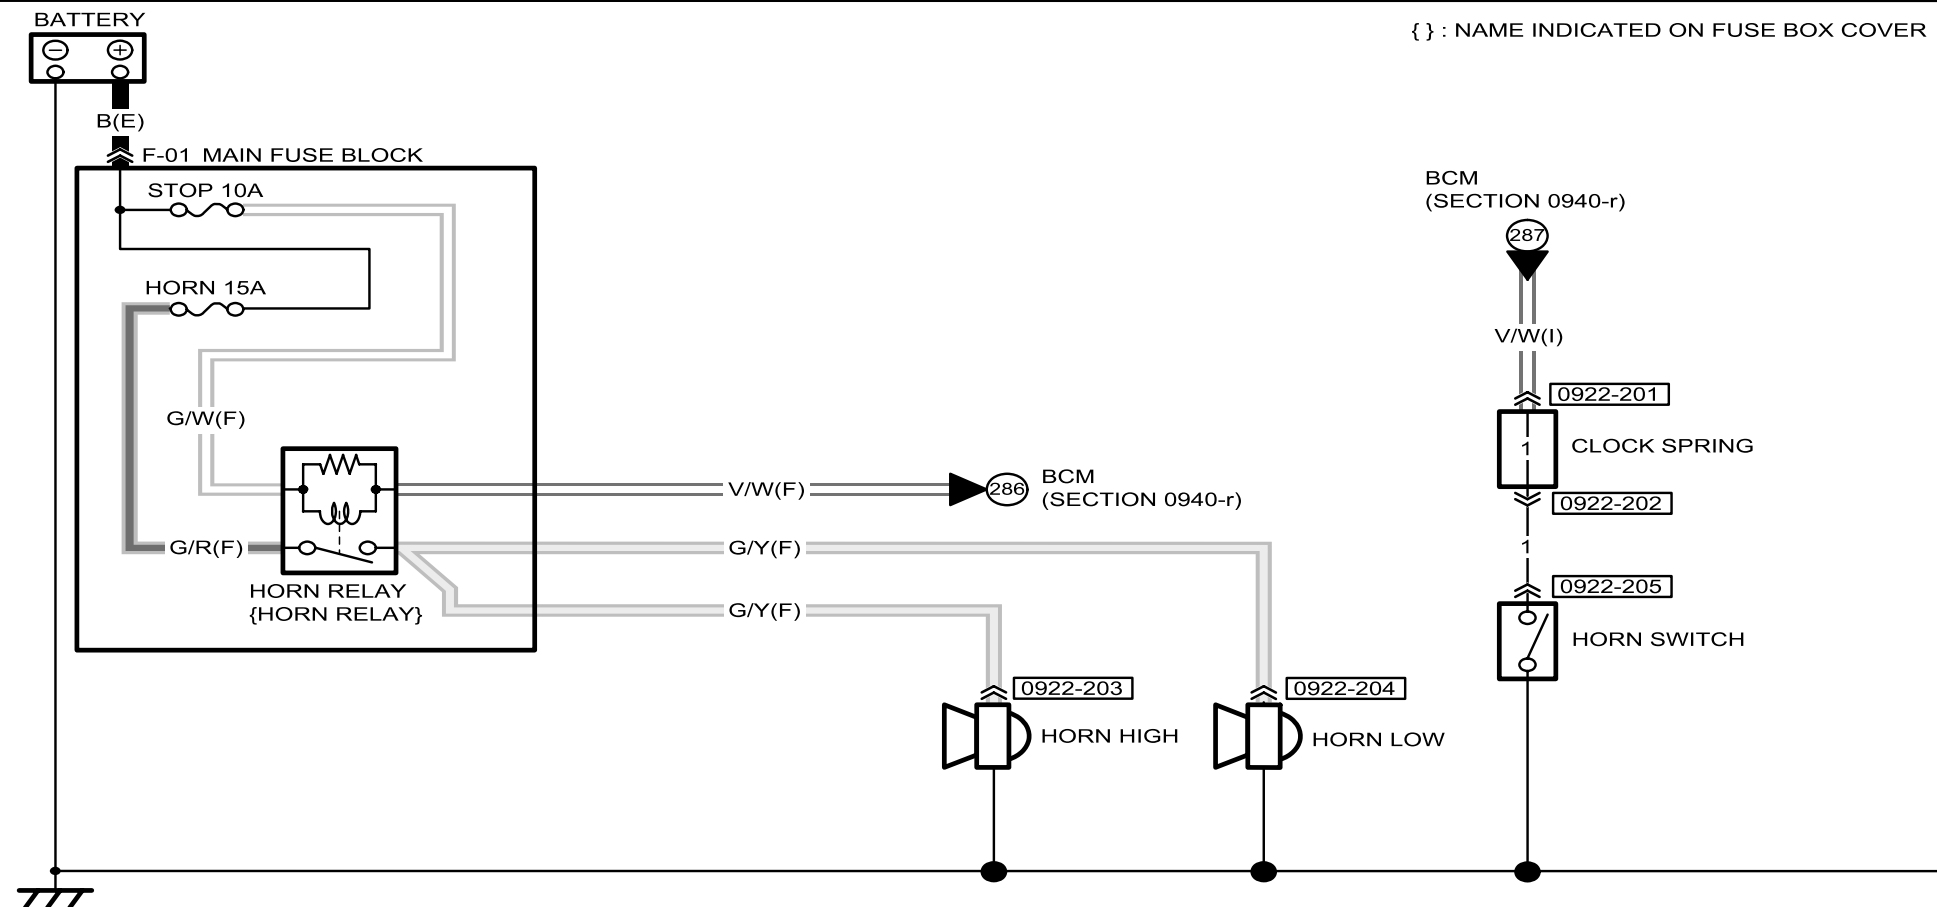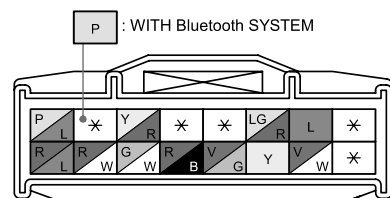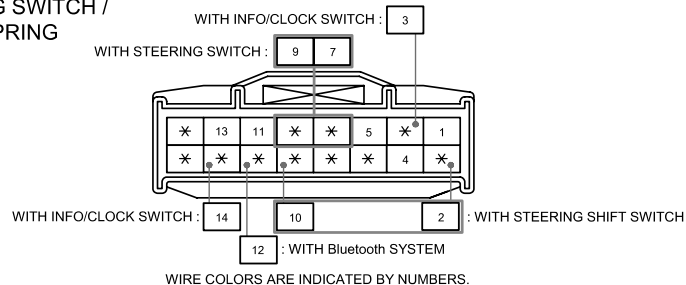 0922-201
CLOCK SPRING0922-202
CRUISE CONTROL SWITCH /
STEERING SWITCH ILLUMINATION /
CRUISE CONTROL SWITCH ILLUMINATION /
STEERING SWITCH /
CLOCK SPRING0922-203
HORN HIGH0922-204
HORN LOW0922-205
HORN SWITCHWIRE COLORS ARE
INDICATED BY NUMBERS.

(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01

0922-204
HORN LOW
[BLACK]

0922-203
HORN HIGH
[BLACK]

[EXCEPT MZR-CD 2.2]

(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01

0922-204
HORN LOW
[BLACK]








0922-203
HORN HIGH
[BLACK]


[MZR-CD 2.2]


HORN SWITCH
0922-205

0922-202
CRUISE CONTROL SWITCH /
STEERING SWITCH ILLUMINATION /
CRUISE CONTROL SWITCH ILLUMINATION /
STEERING SWITCH /
CLOCK SPRING


0922-201
CLOCK SPRING

	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

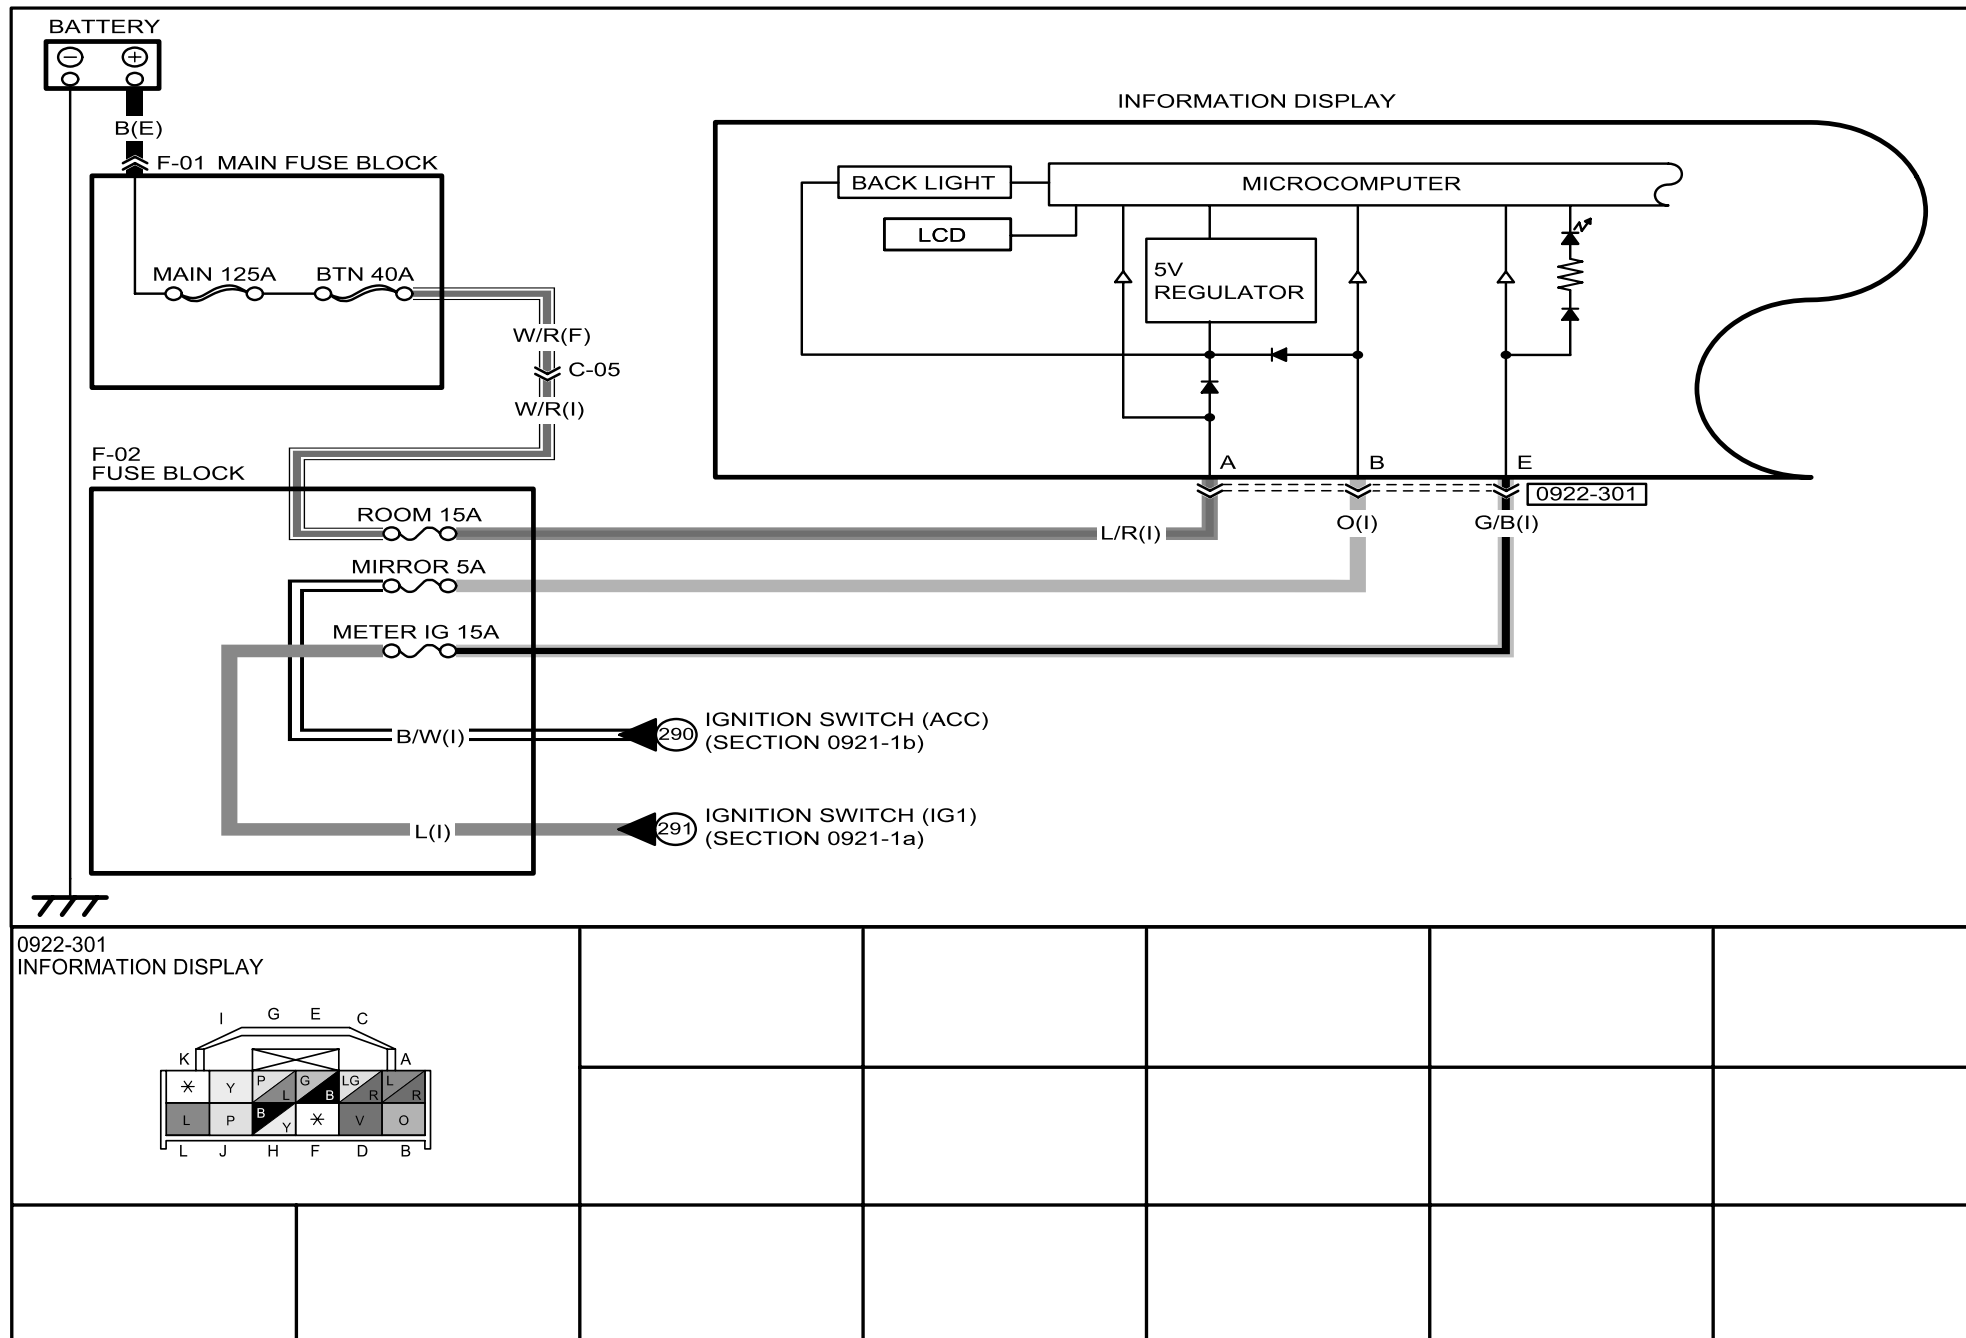

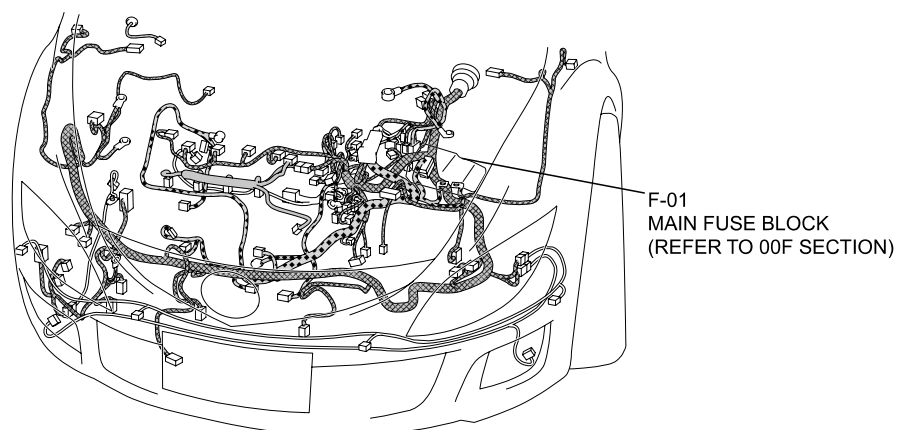

[EXCEPT MZR-CD 2.2]

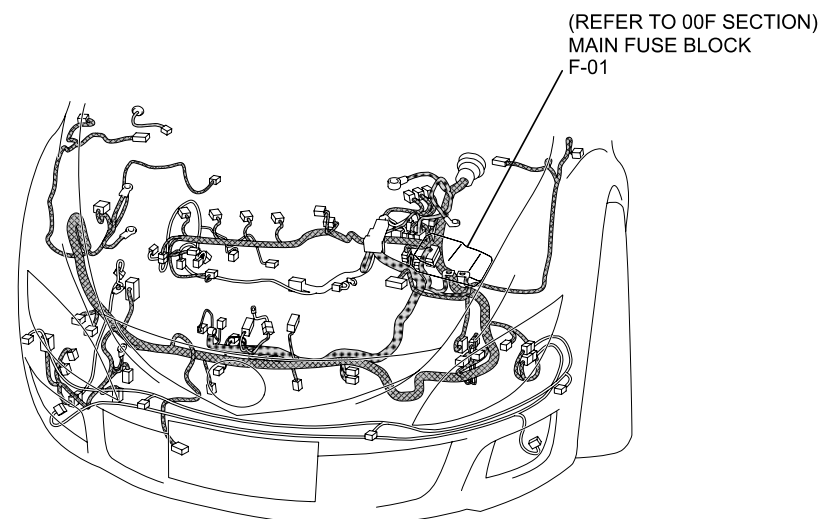

[MZR-CD 2.2]






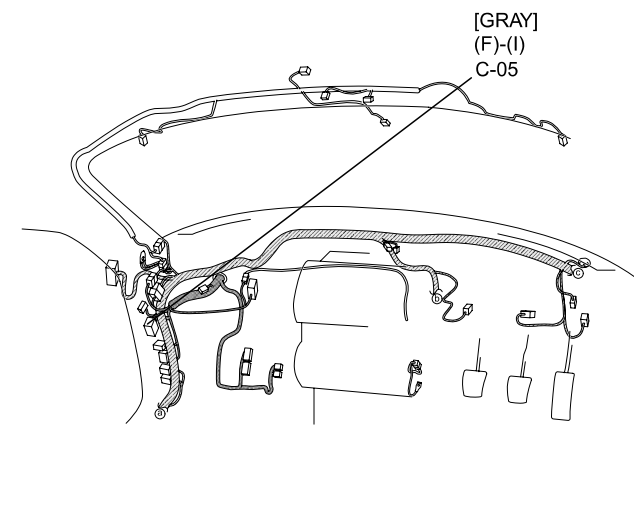



Figure 1 shows a 10x10 grid representing a ship deck layout. A box labeled 'P' with the text 'WITH Bluetooth SYSTEM' is connected to the top-left cell of the grid. The grid contains various letters and asterisks in different cells, indicating specific locations or systems.

[illegible]

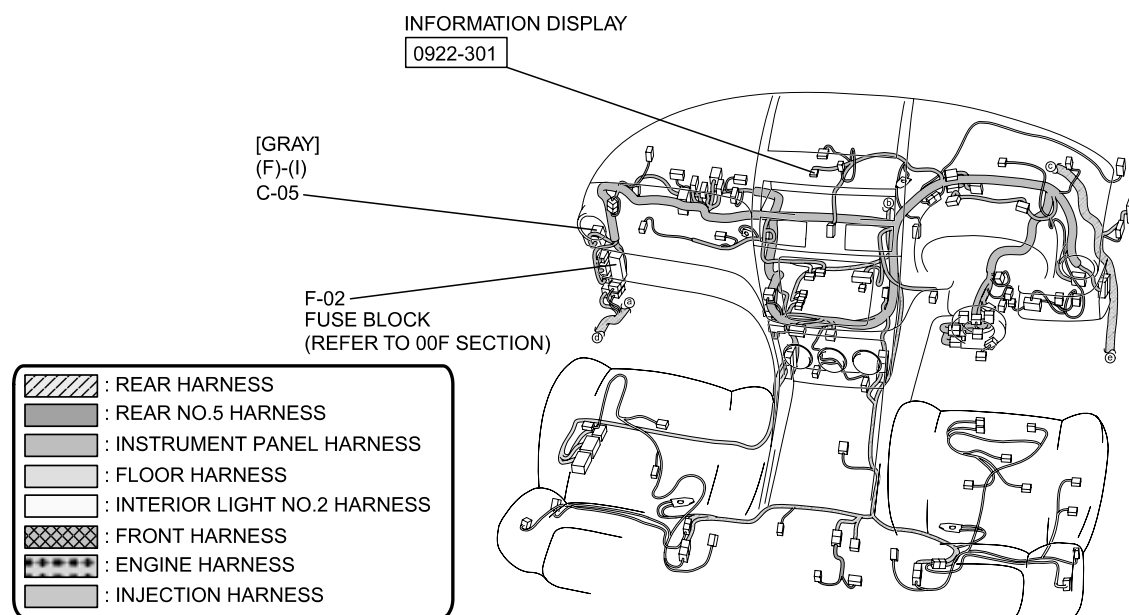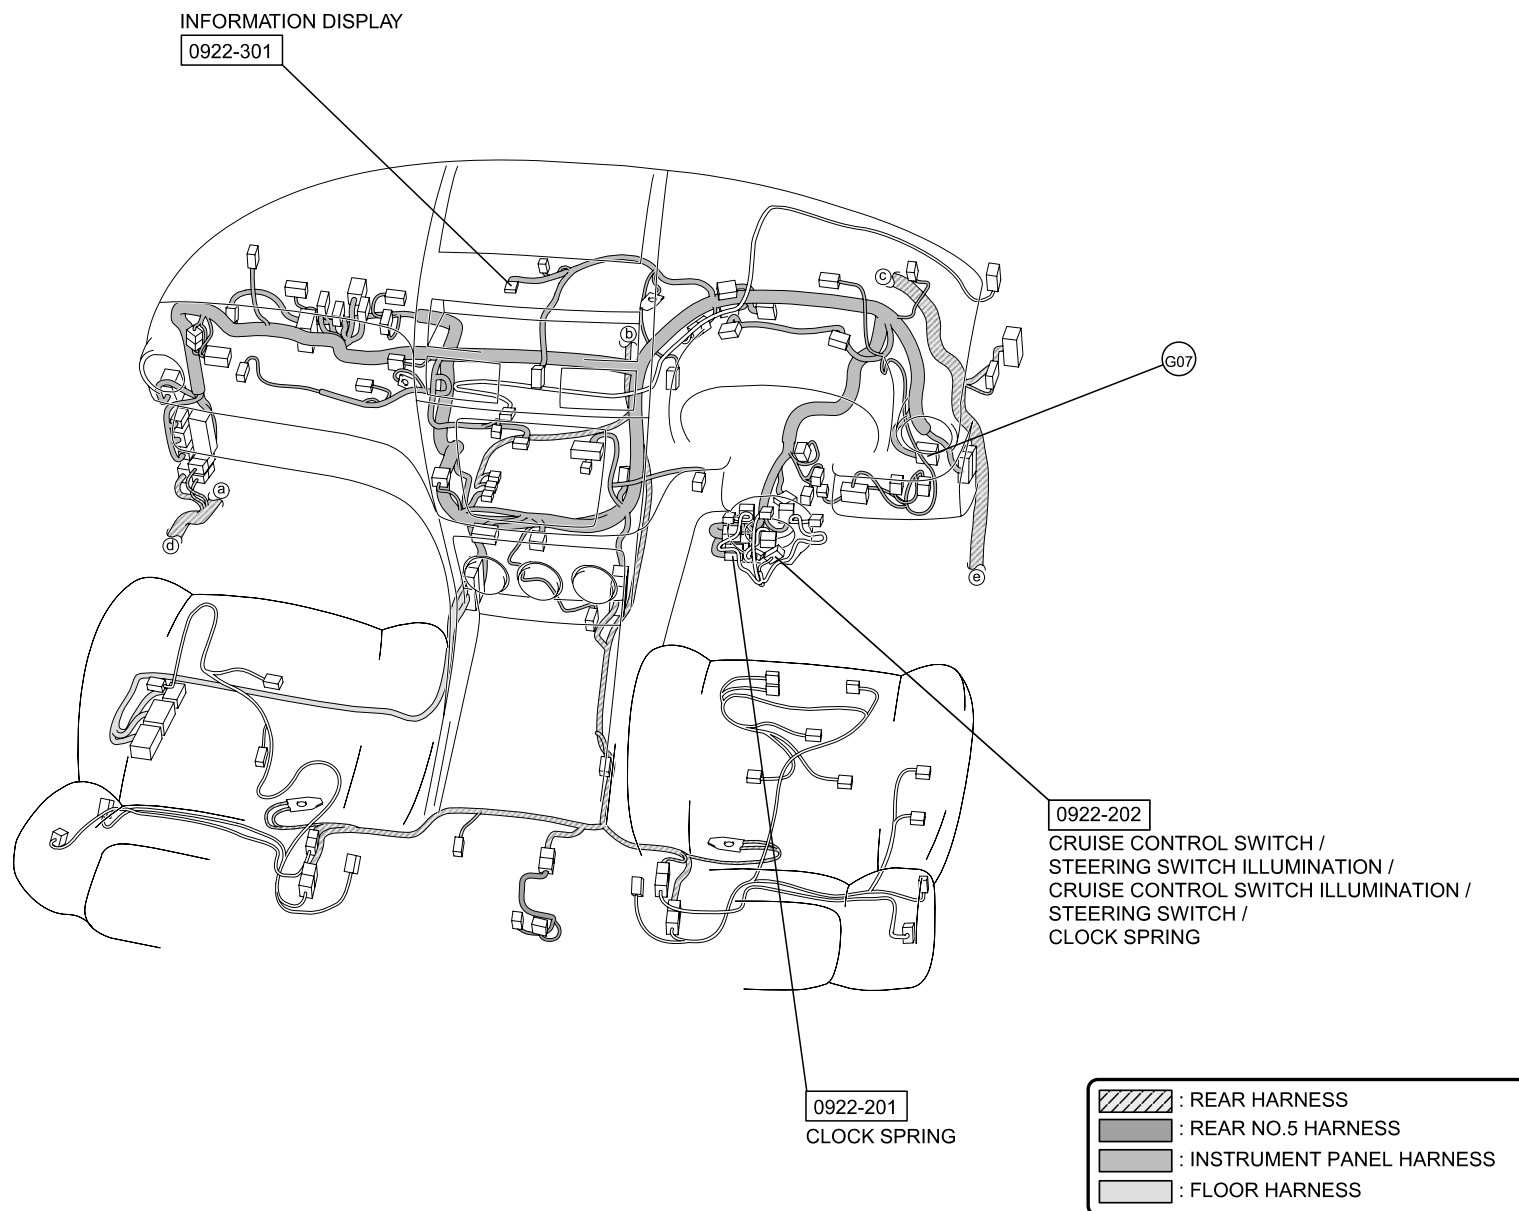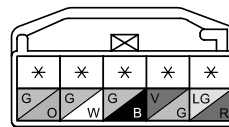


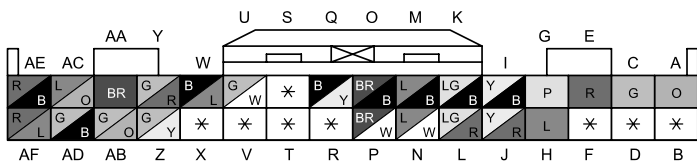


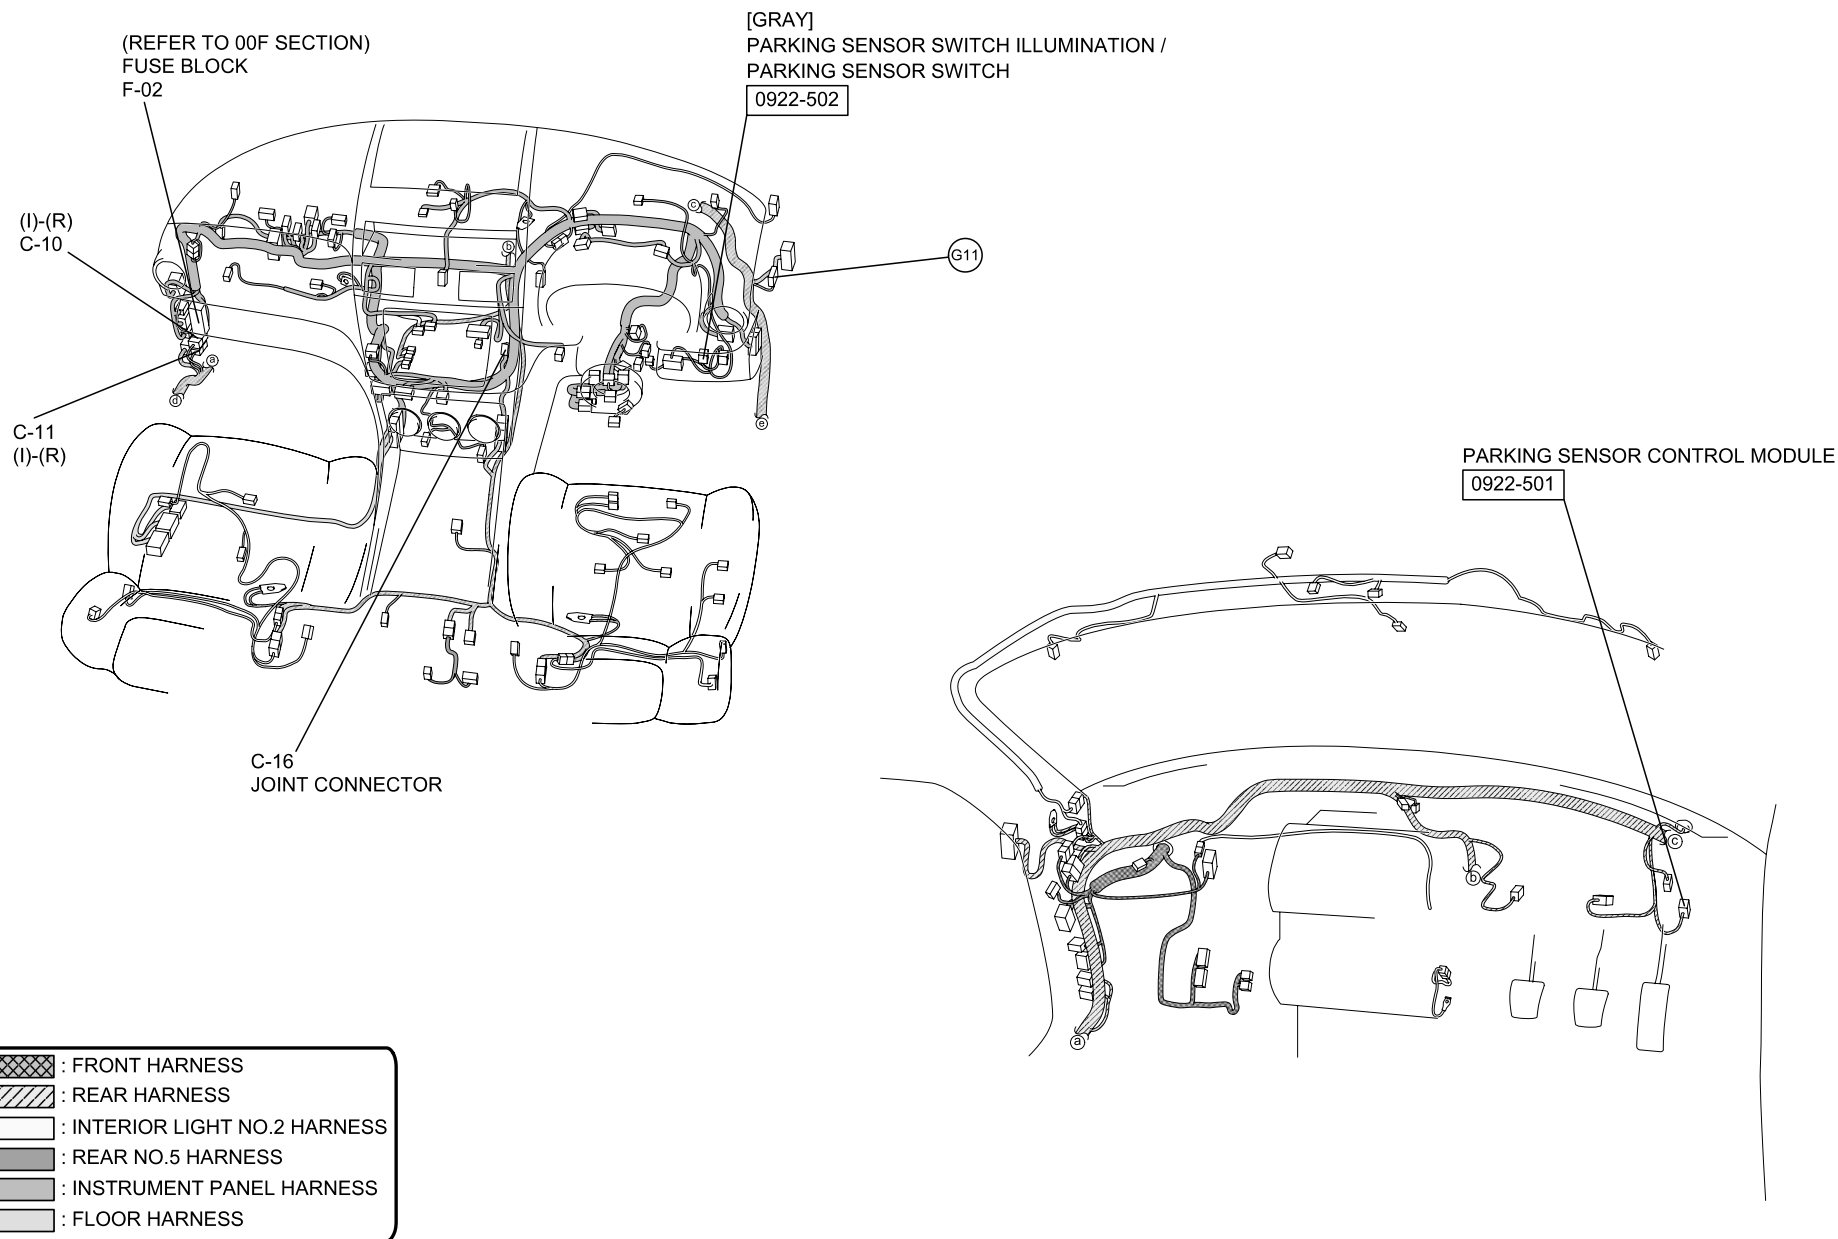


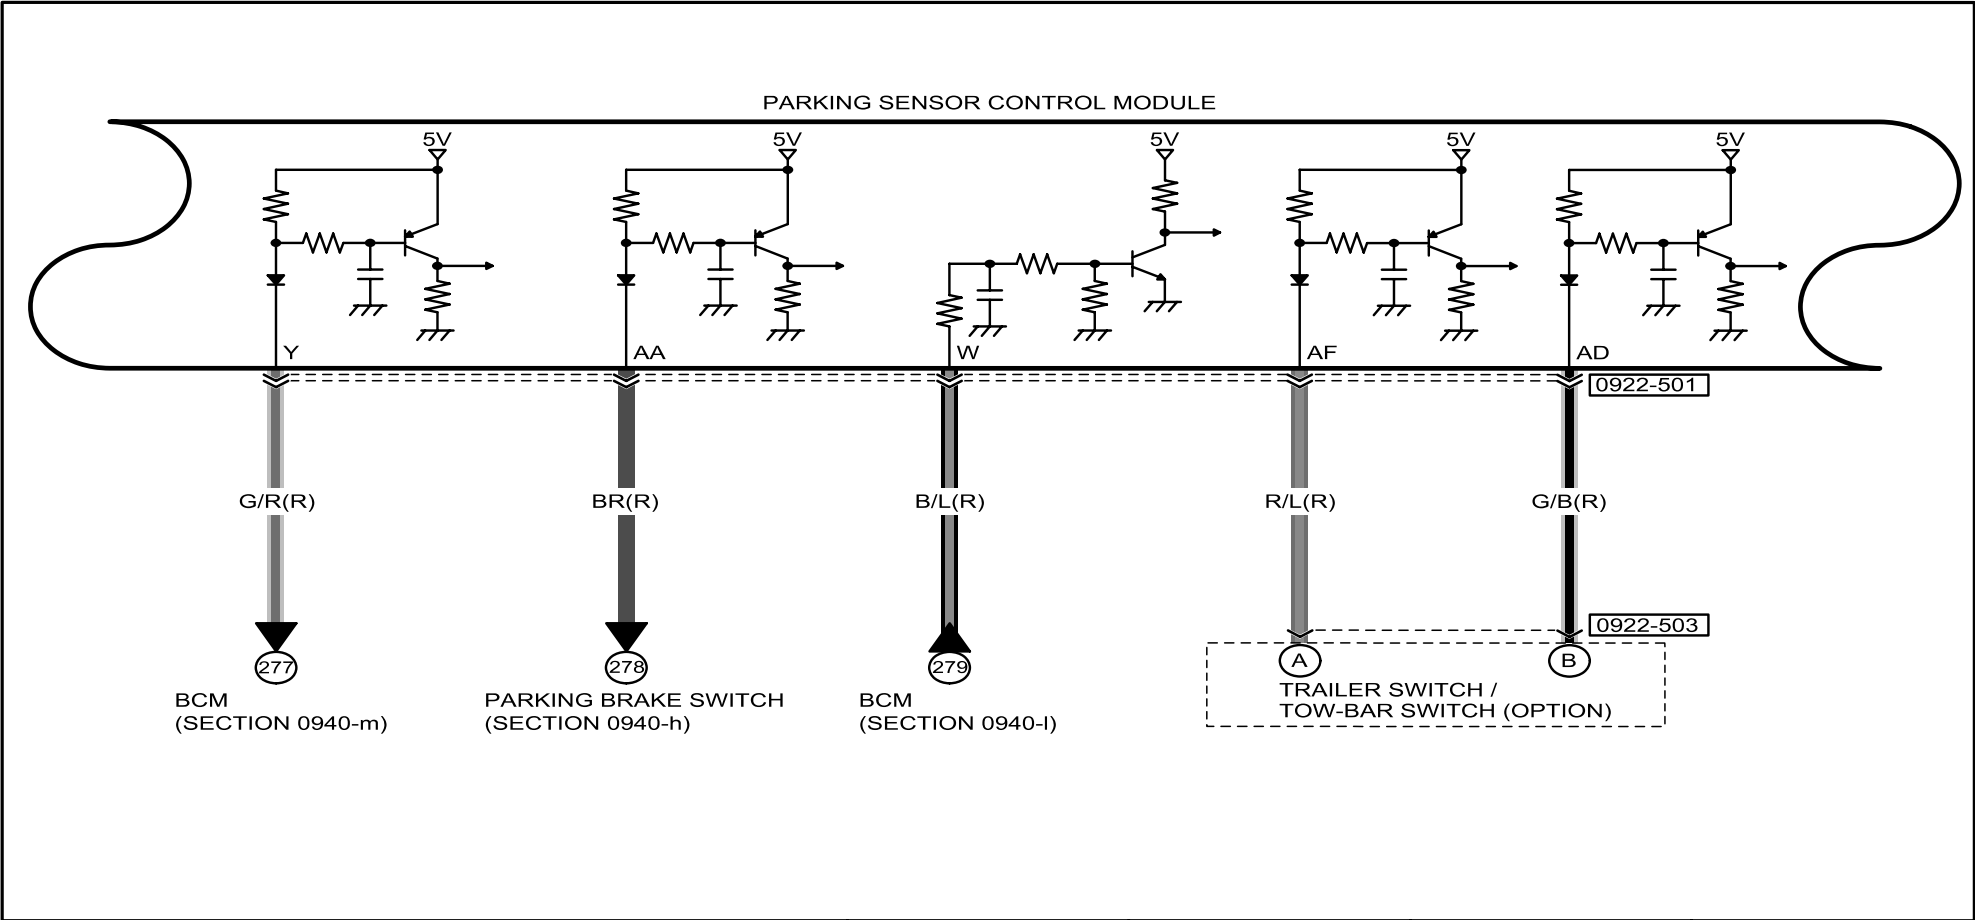


0922-501 PARKING SENSOR CONTROL MODULE			0922-503 TRAILER SWITCH / TOW-BAR SWITCH (OPTION)		

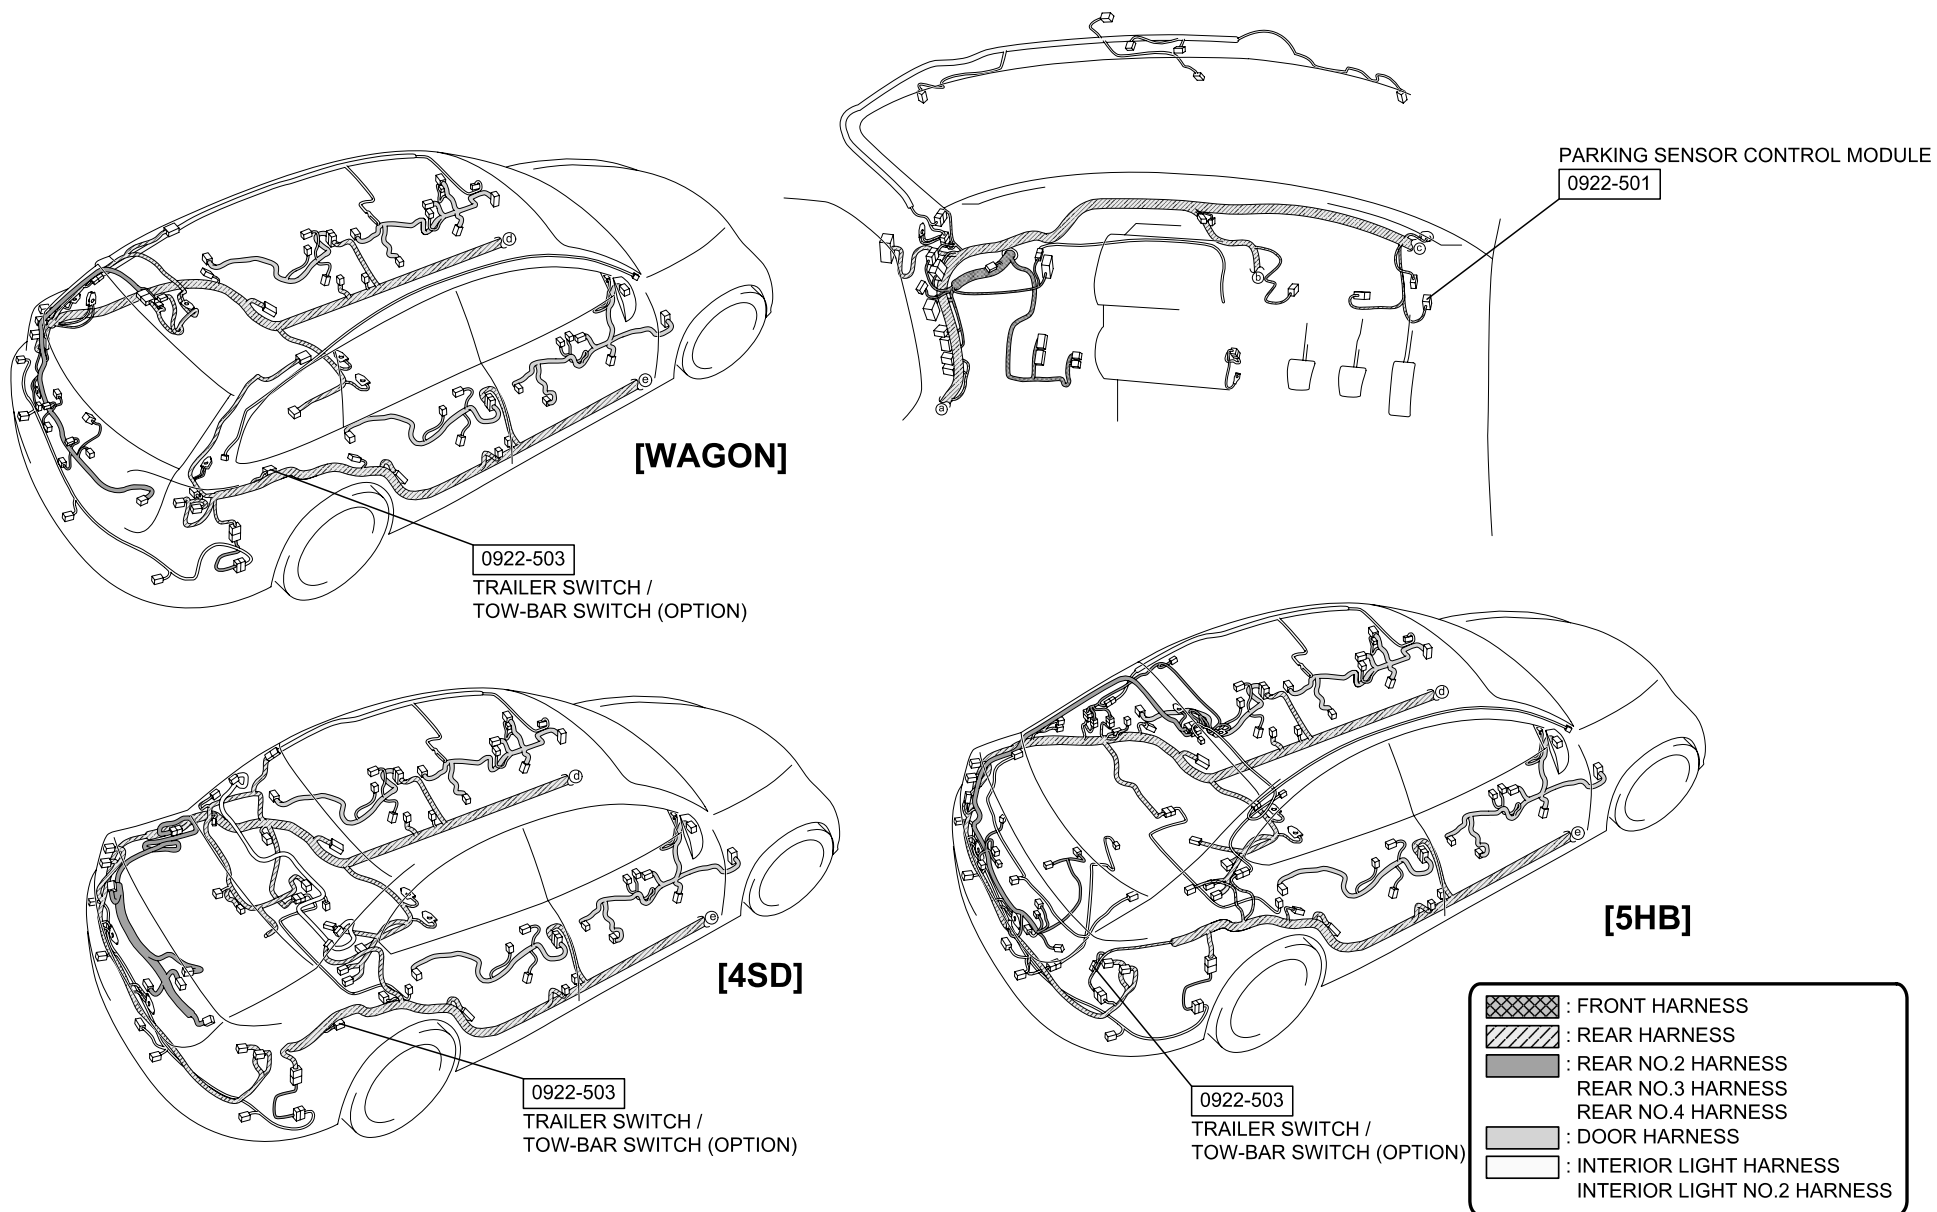

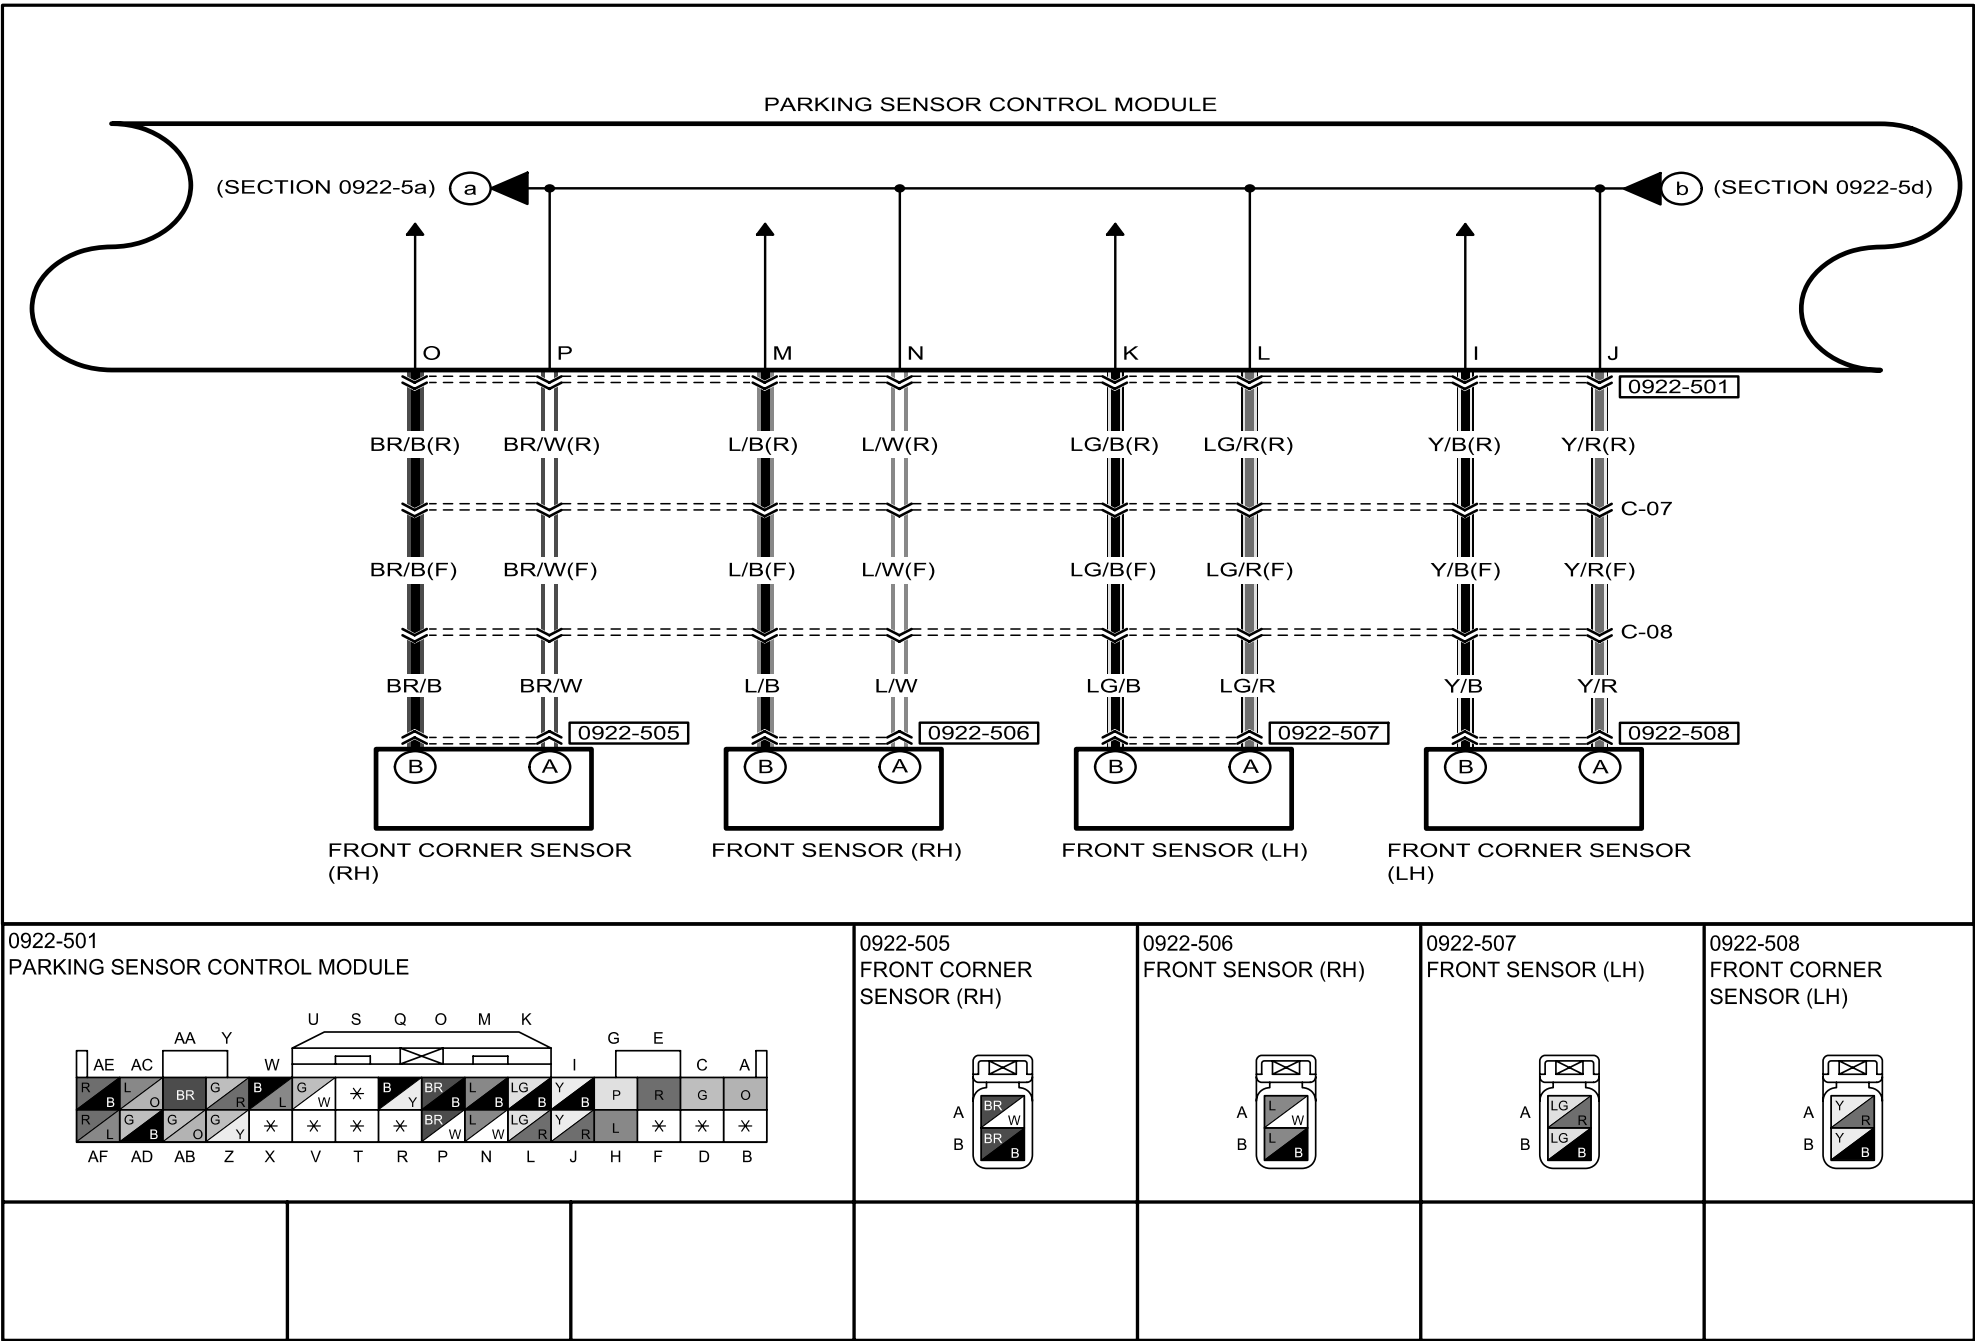




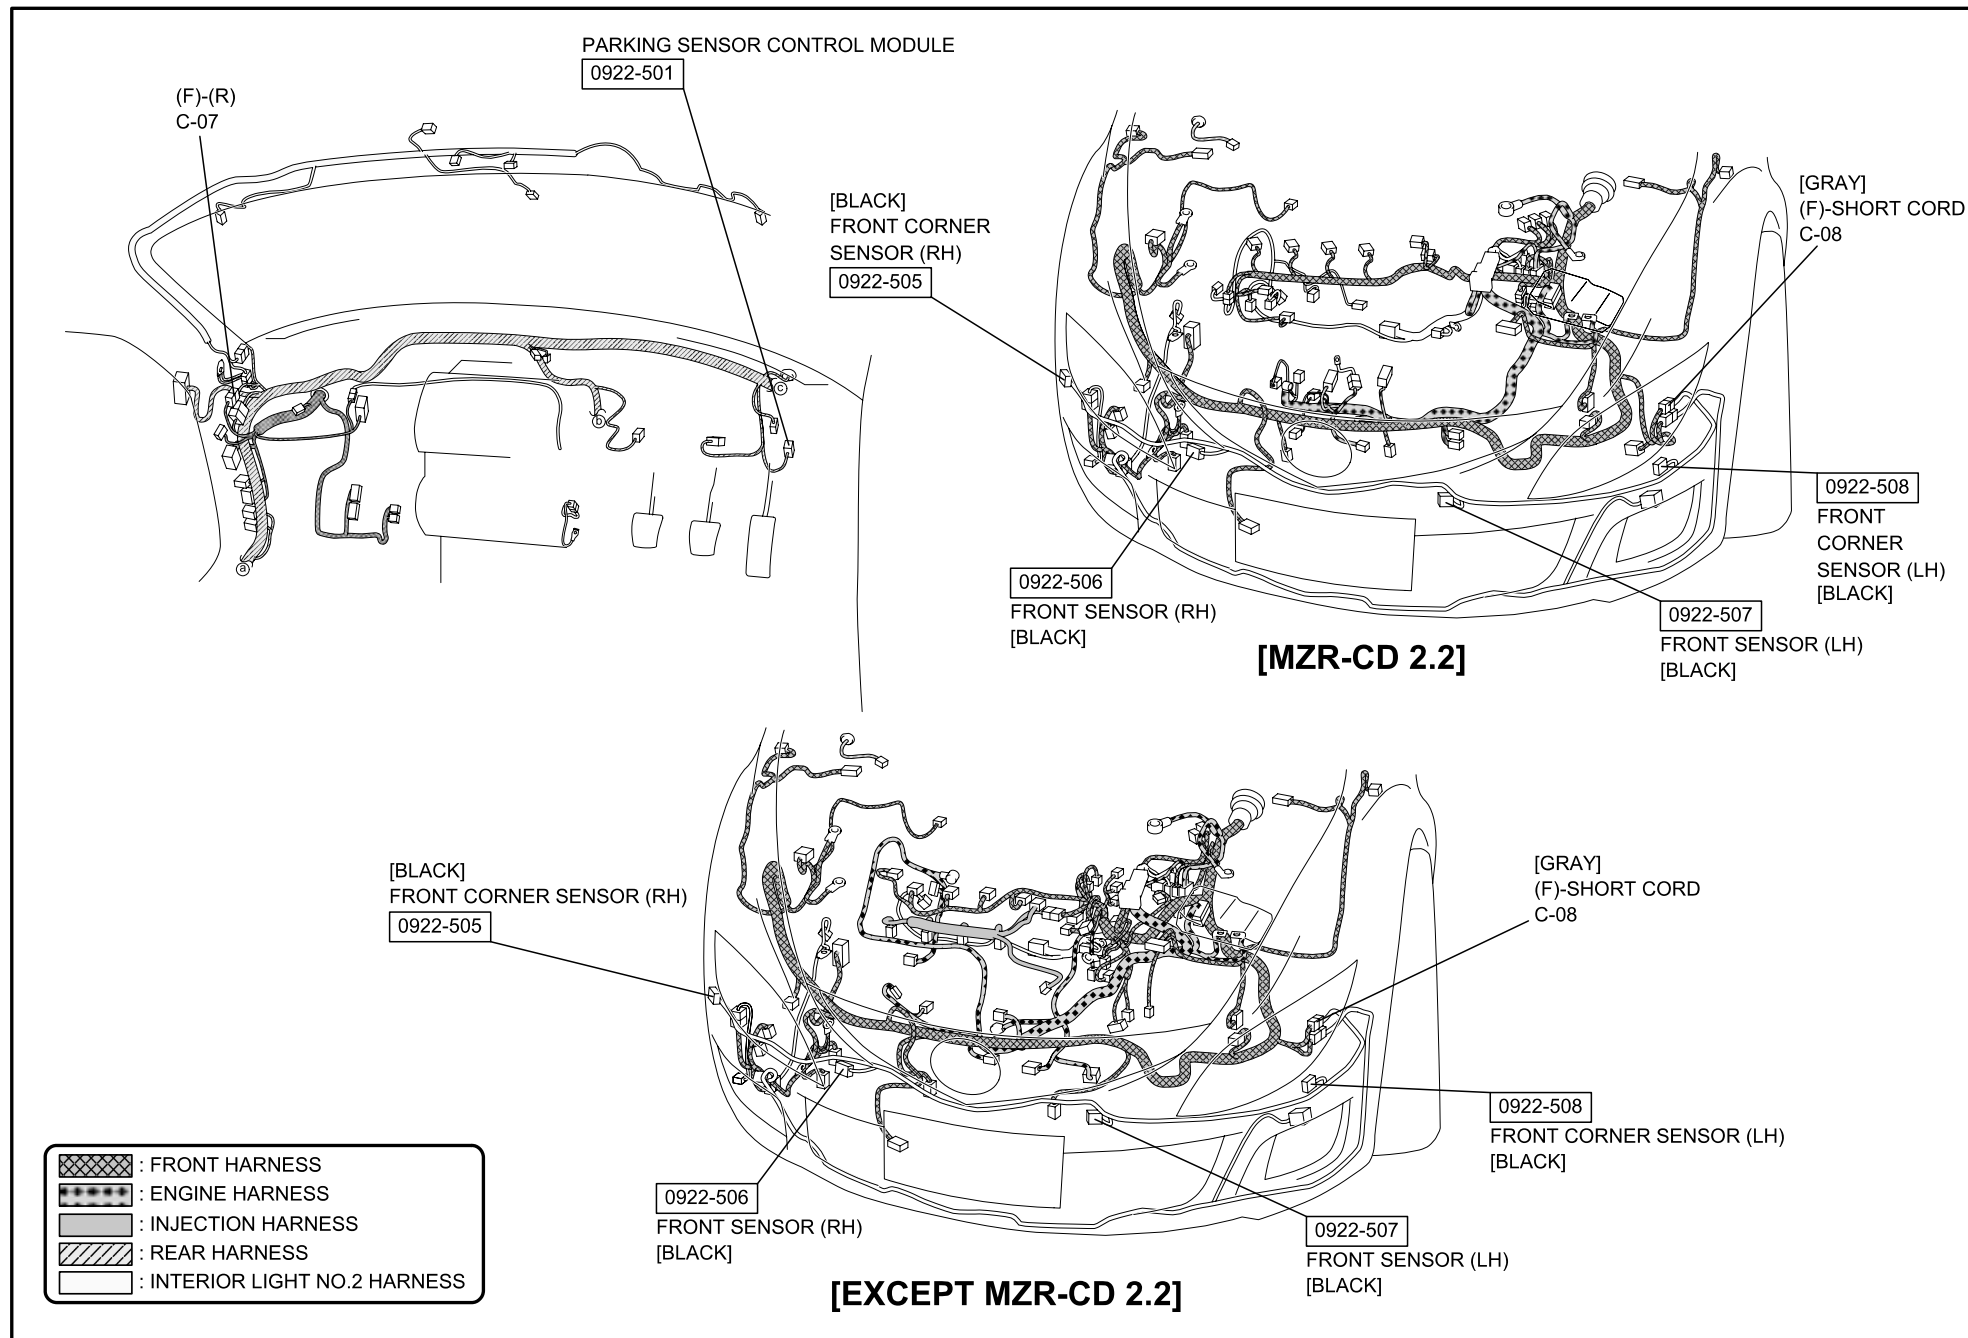


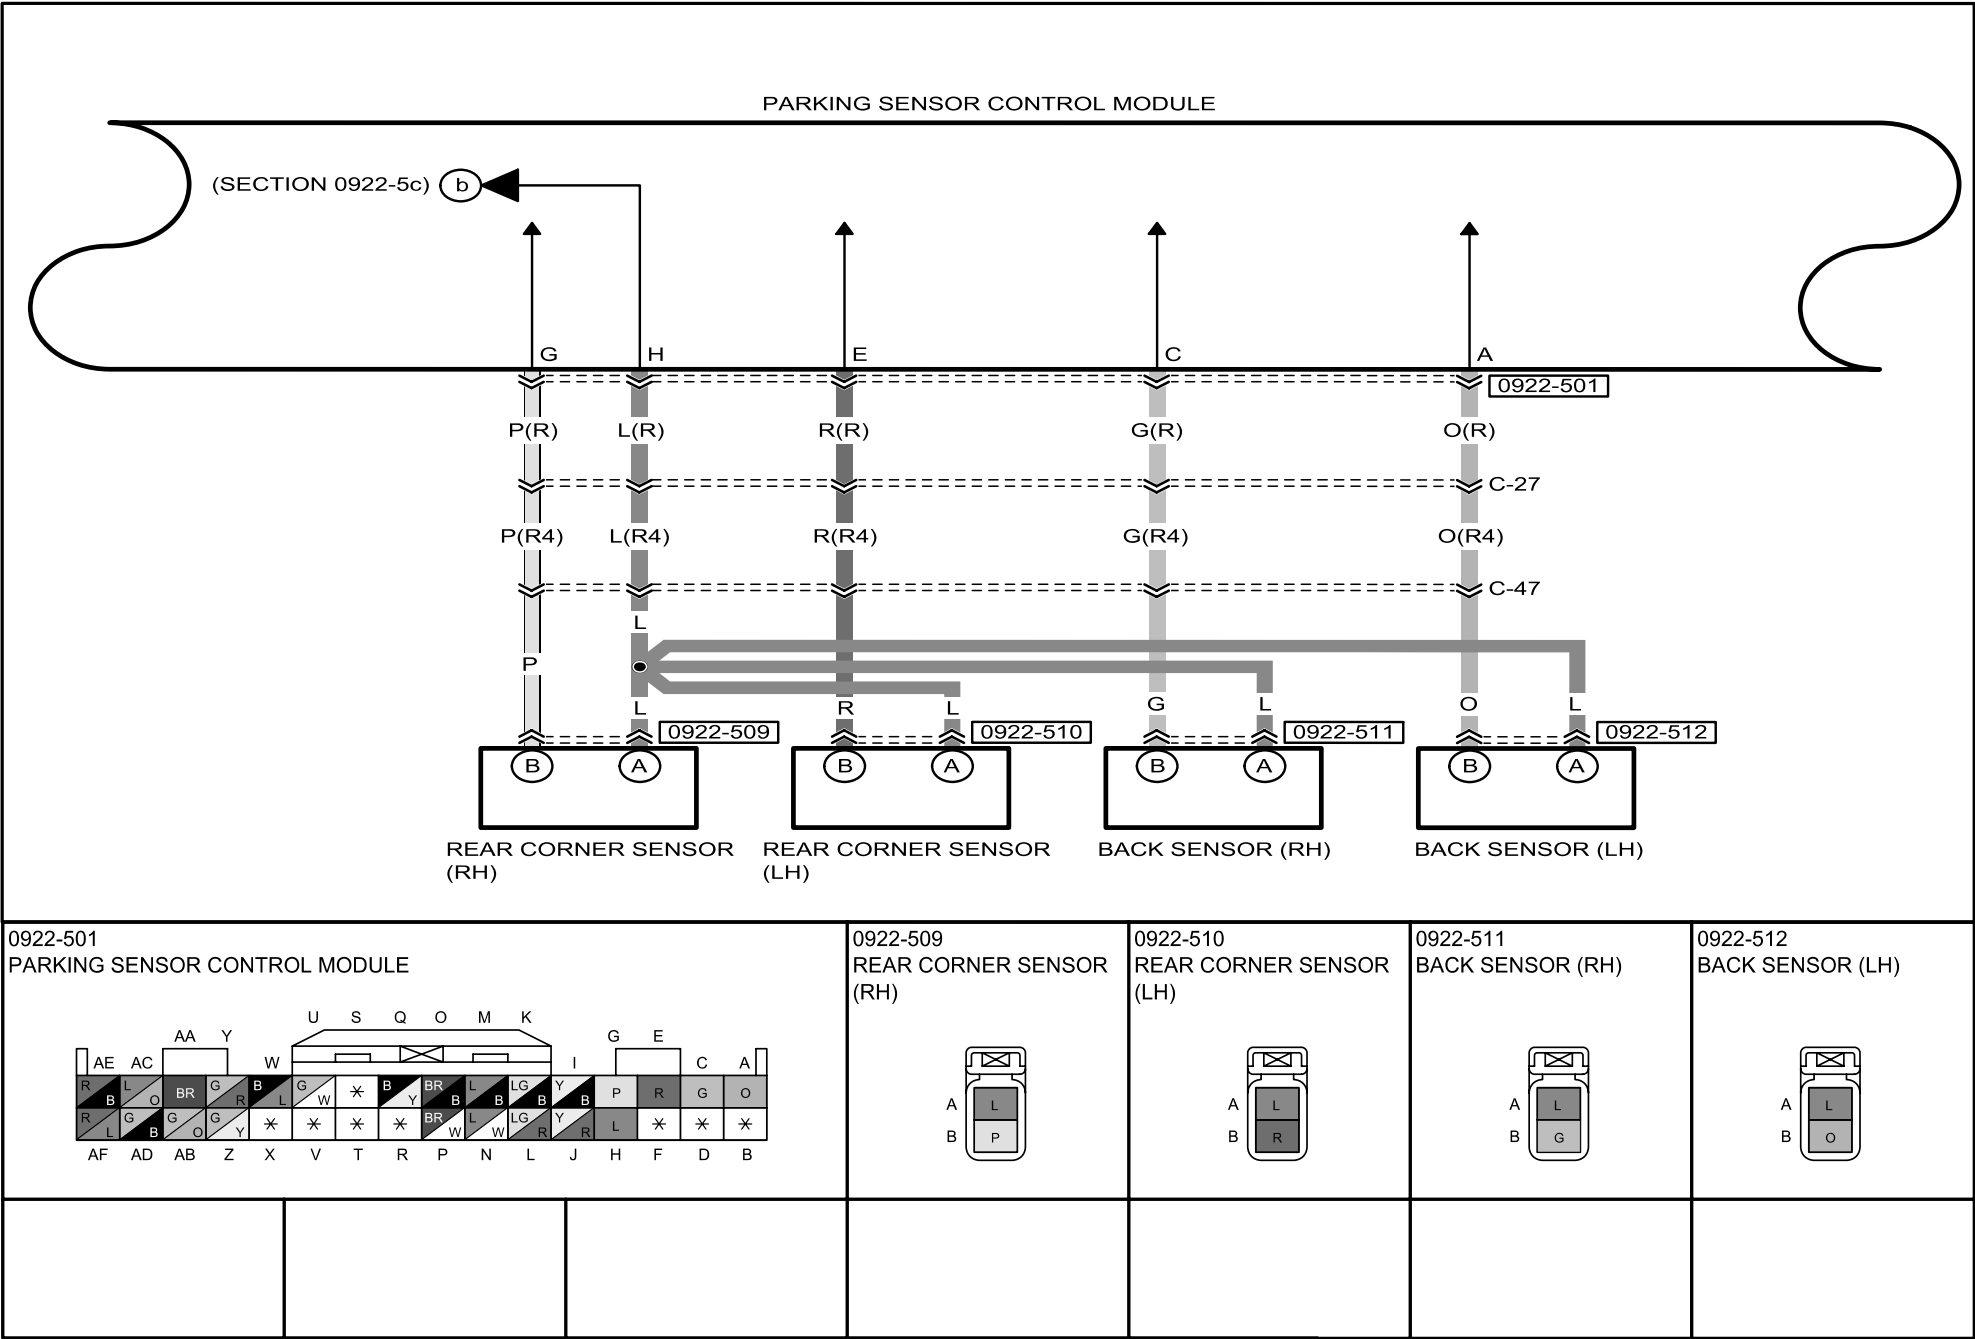

PARKING SENSOR SYSTEM


0922-5d

377

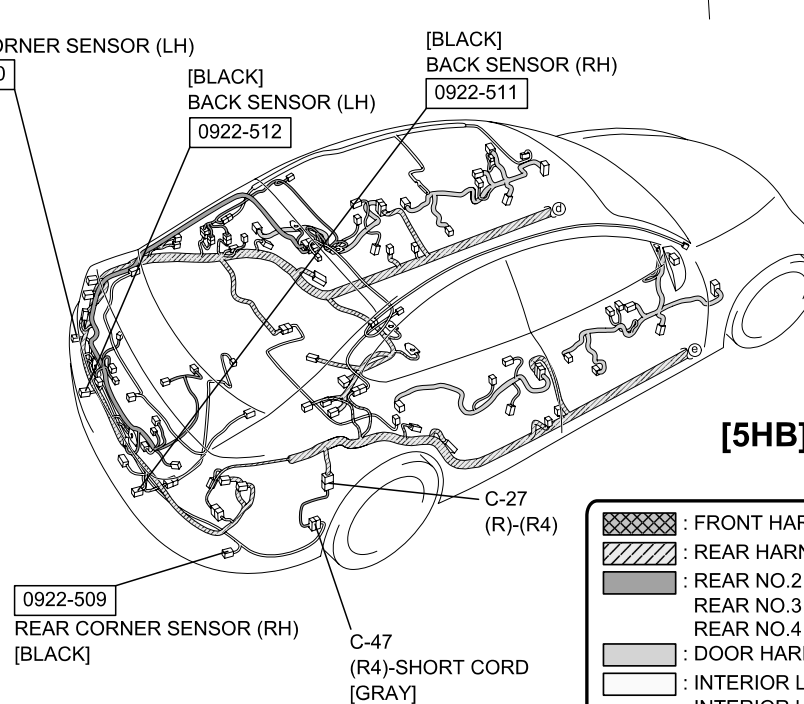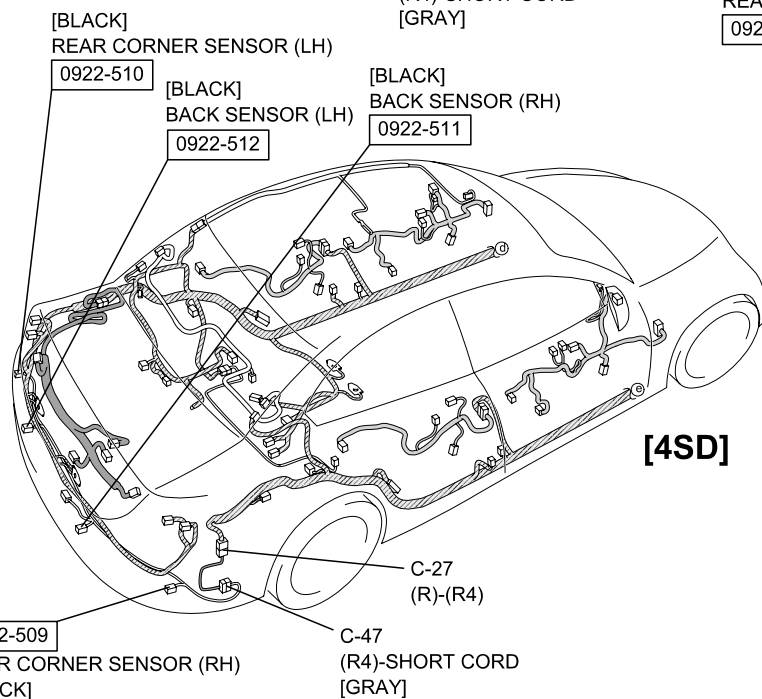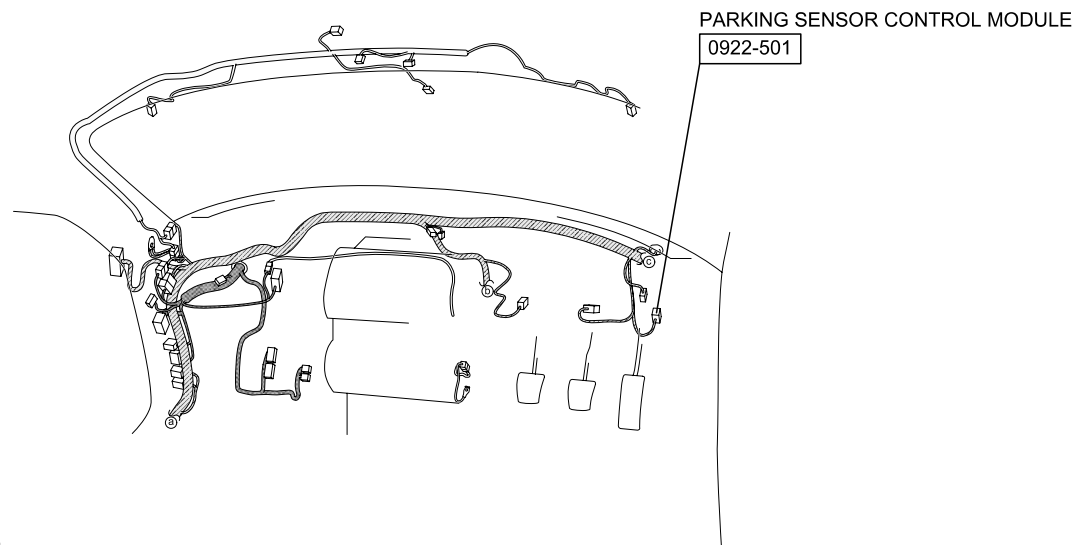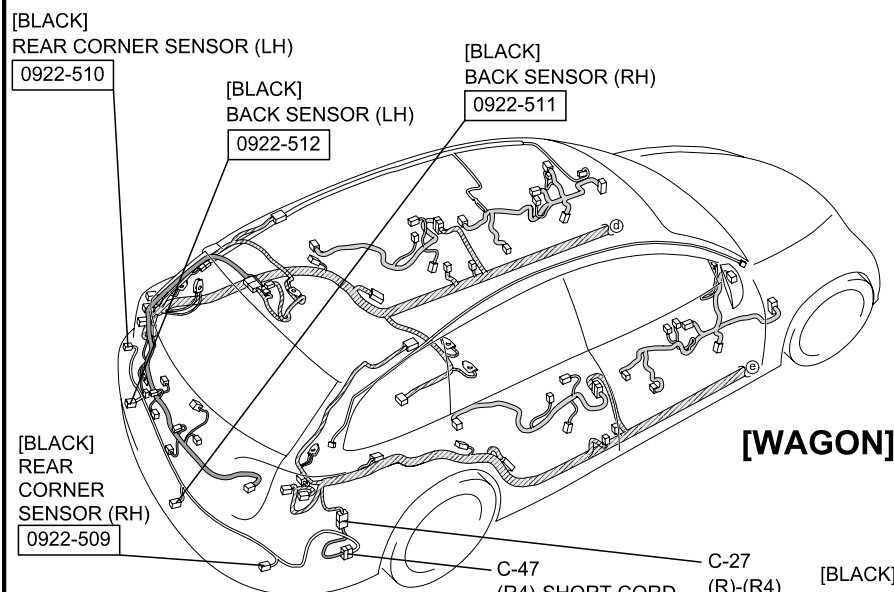


	: FRONT HARNESS
	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.3 HARNESS
	: REAR NO.4 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS
	: INTERIOR LIGHT NO.2 HARNESS


[] : 5HB, WAGON

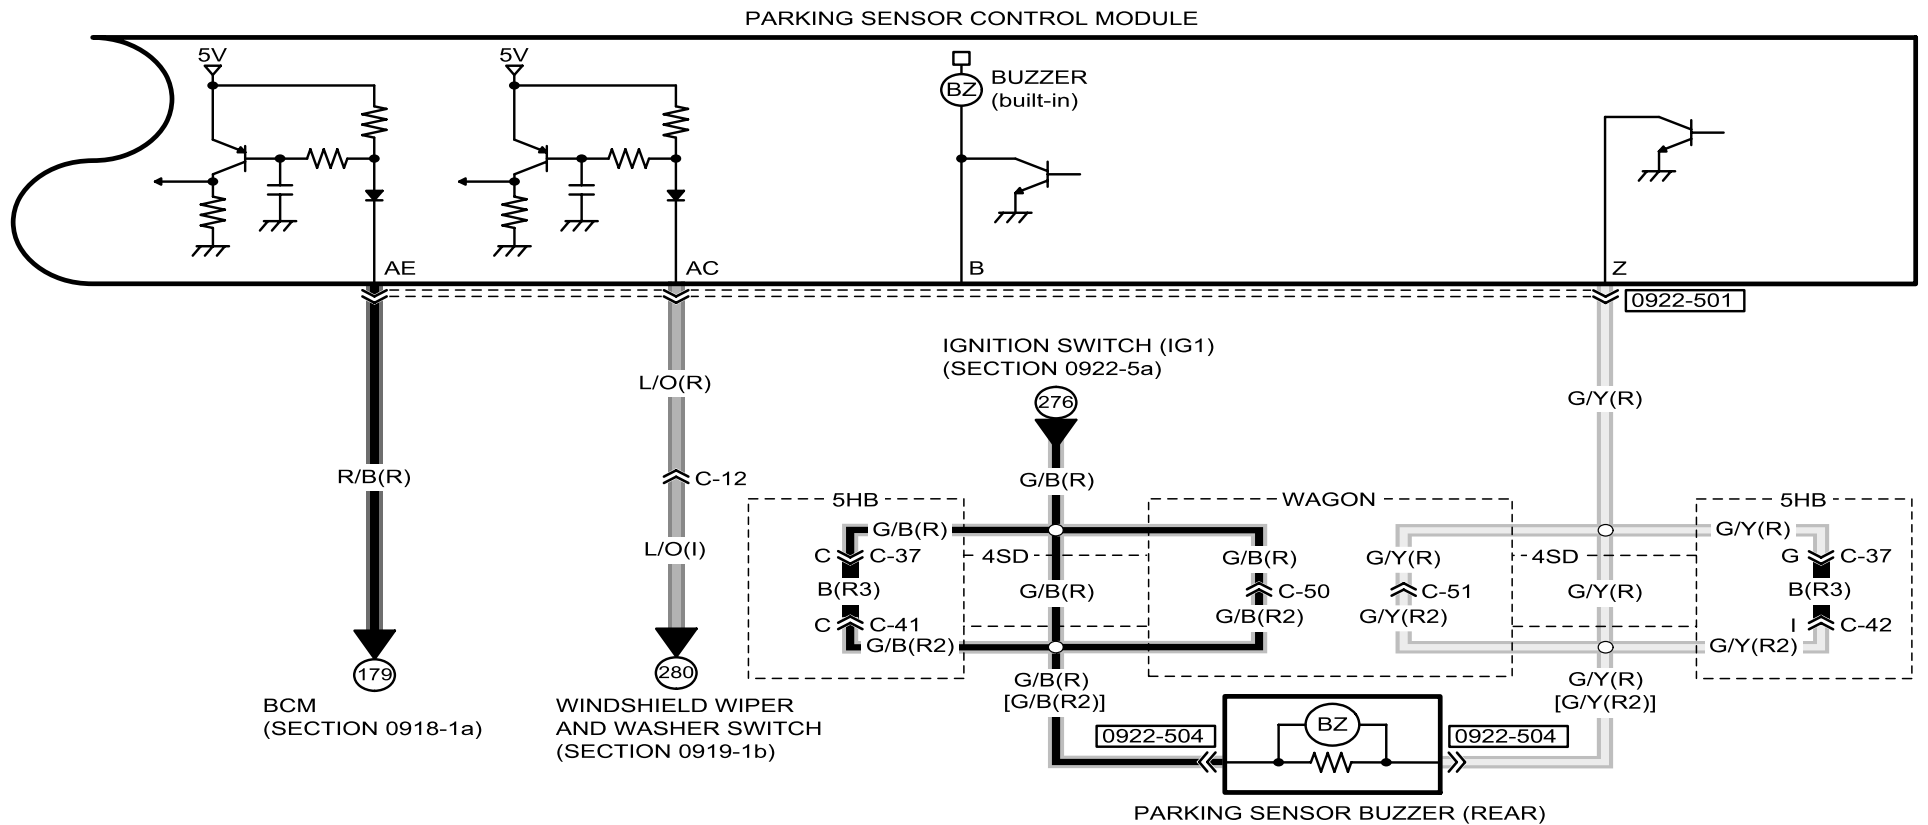



0922-501
PARKING SENSOR CONTROL MODULE

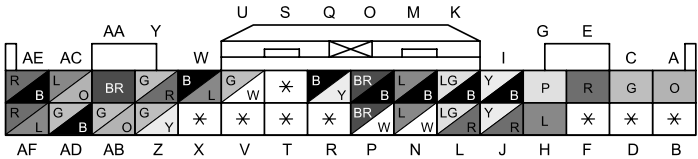


0922-504
PARKING SENSOR BUZZER (REAR)

 


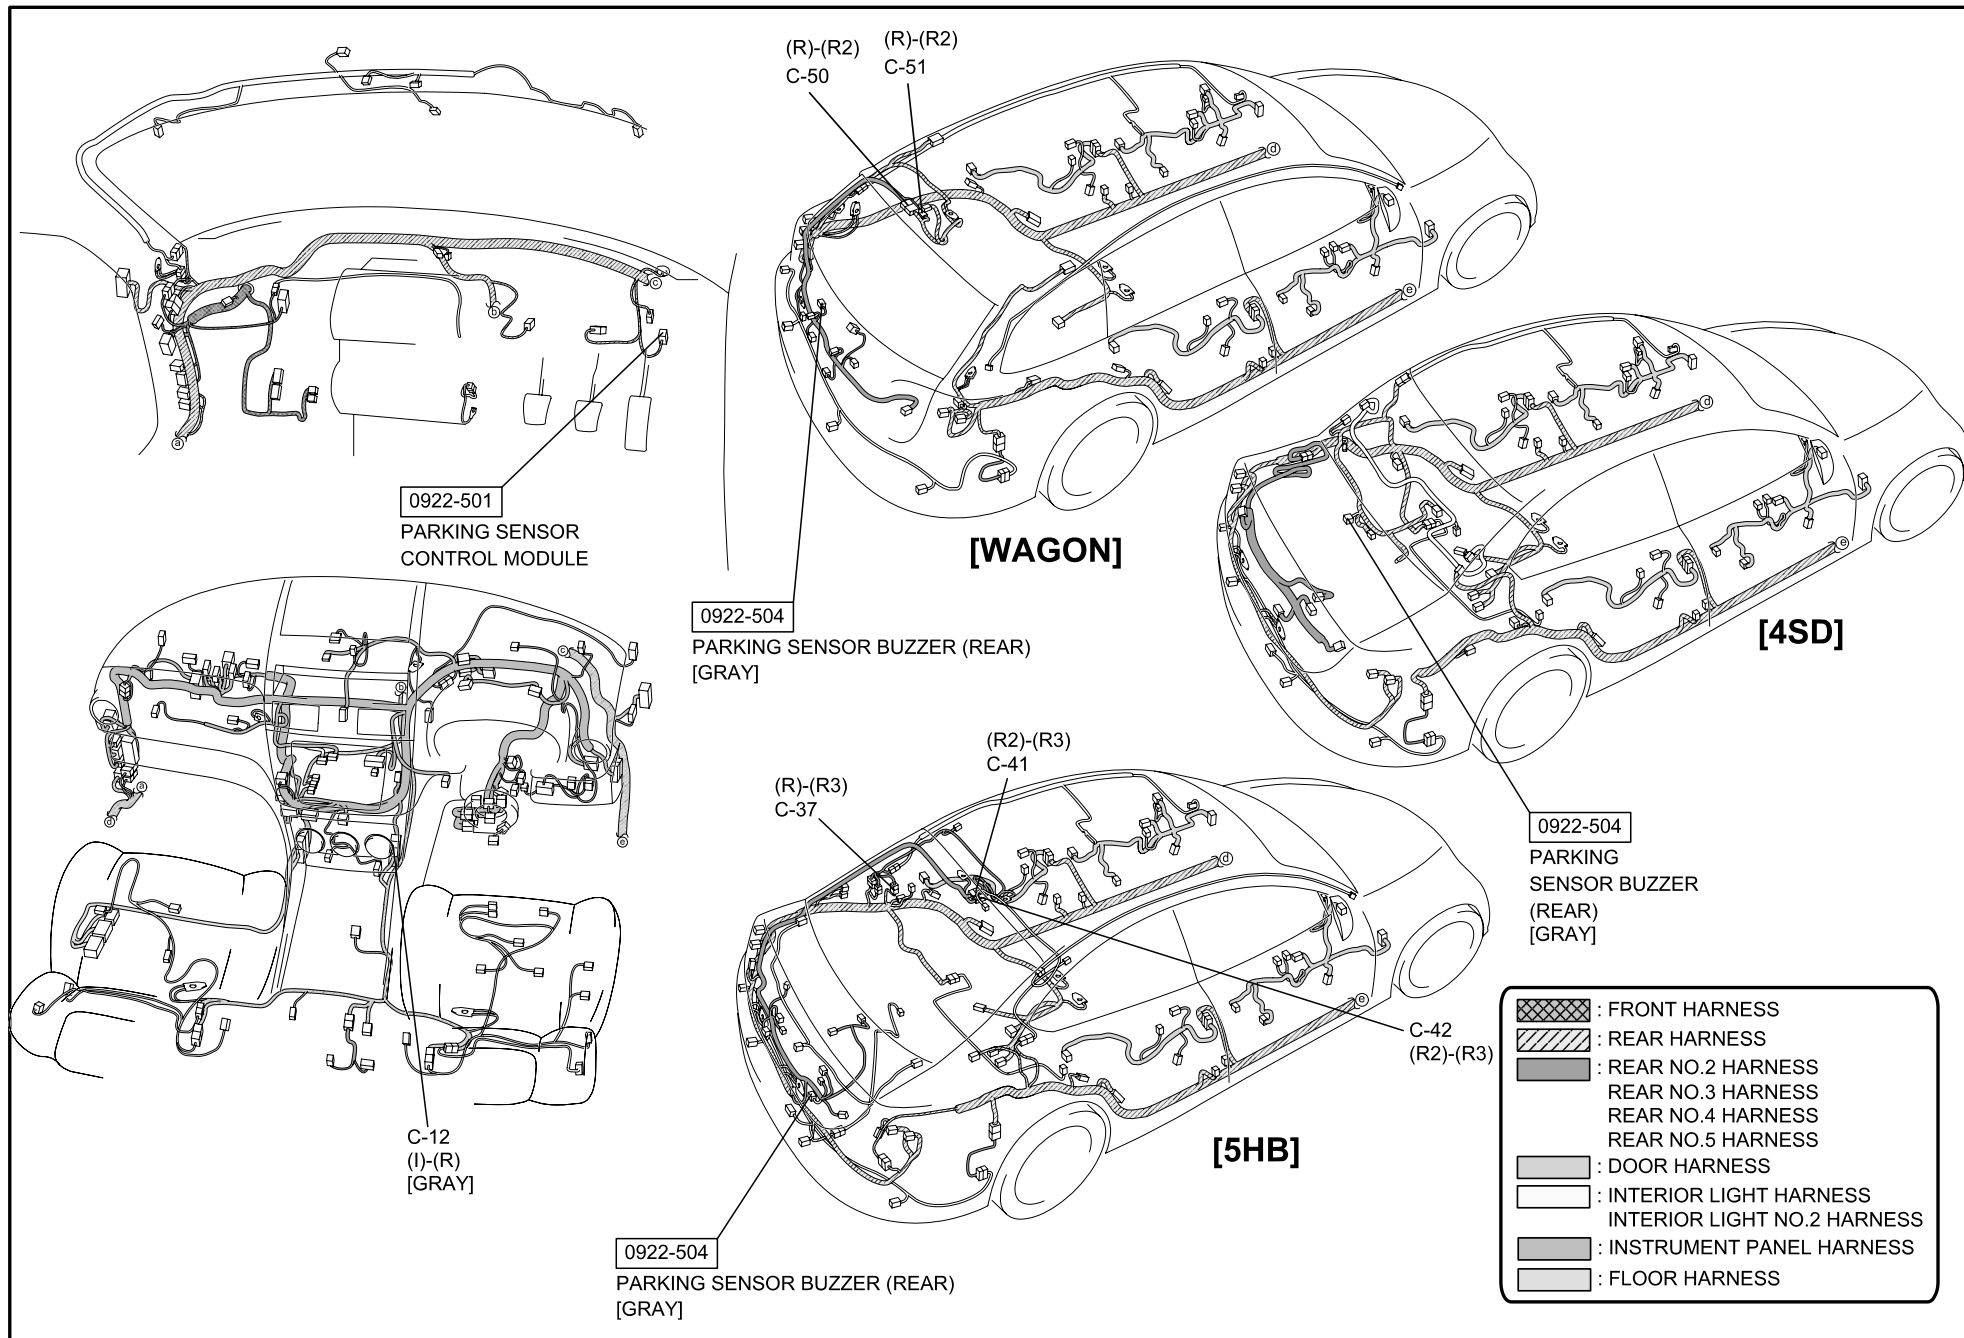

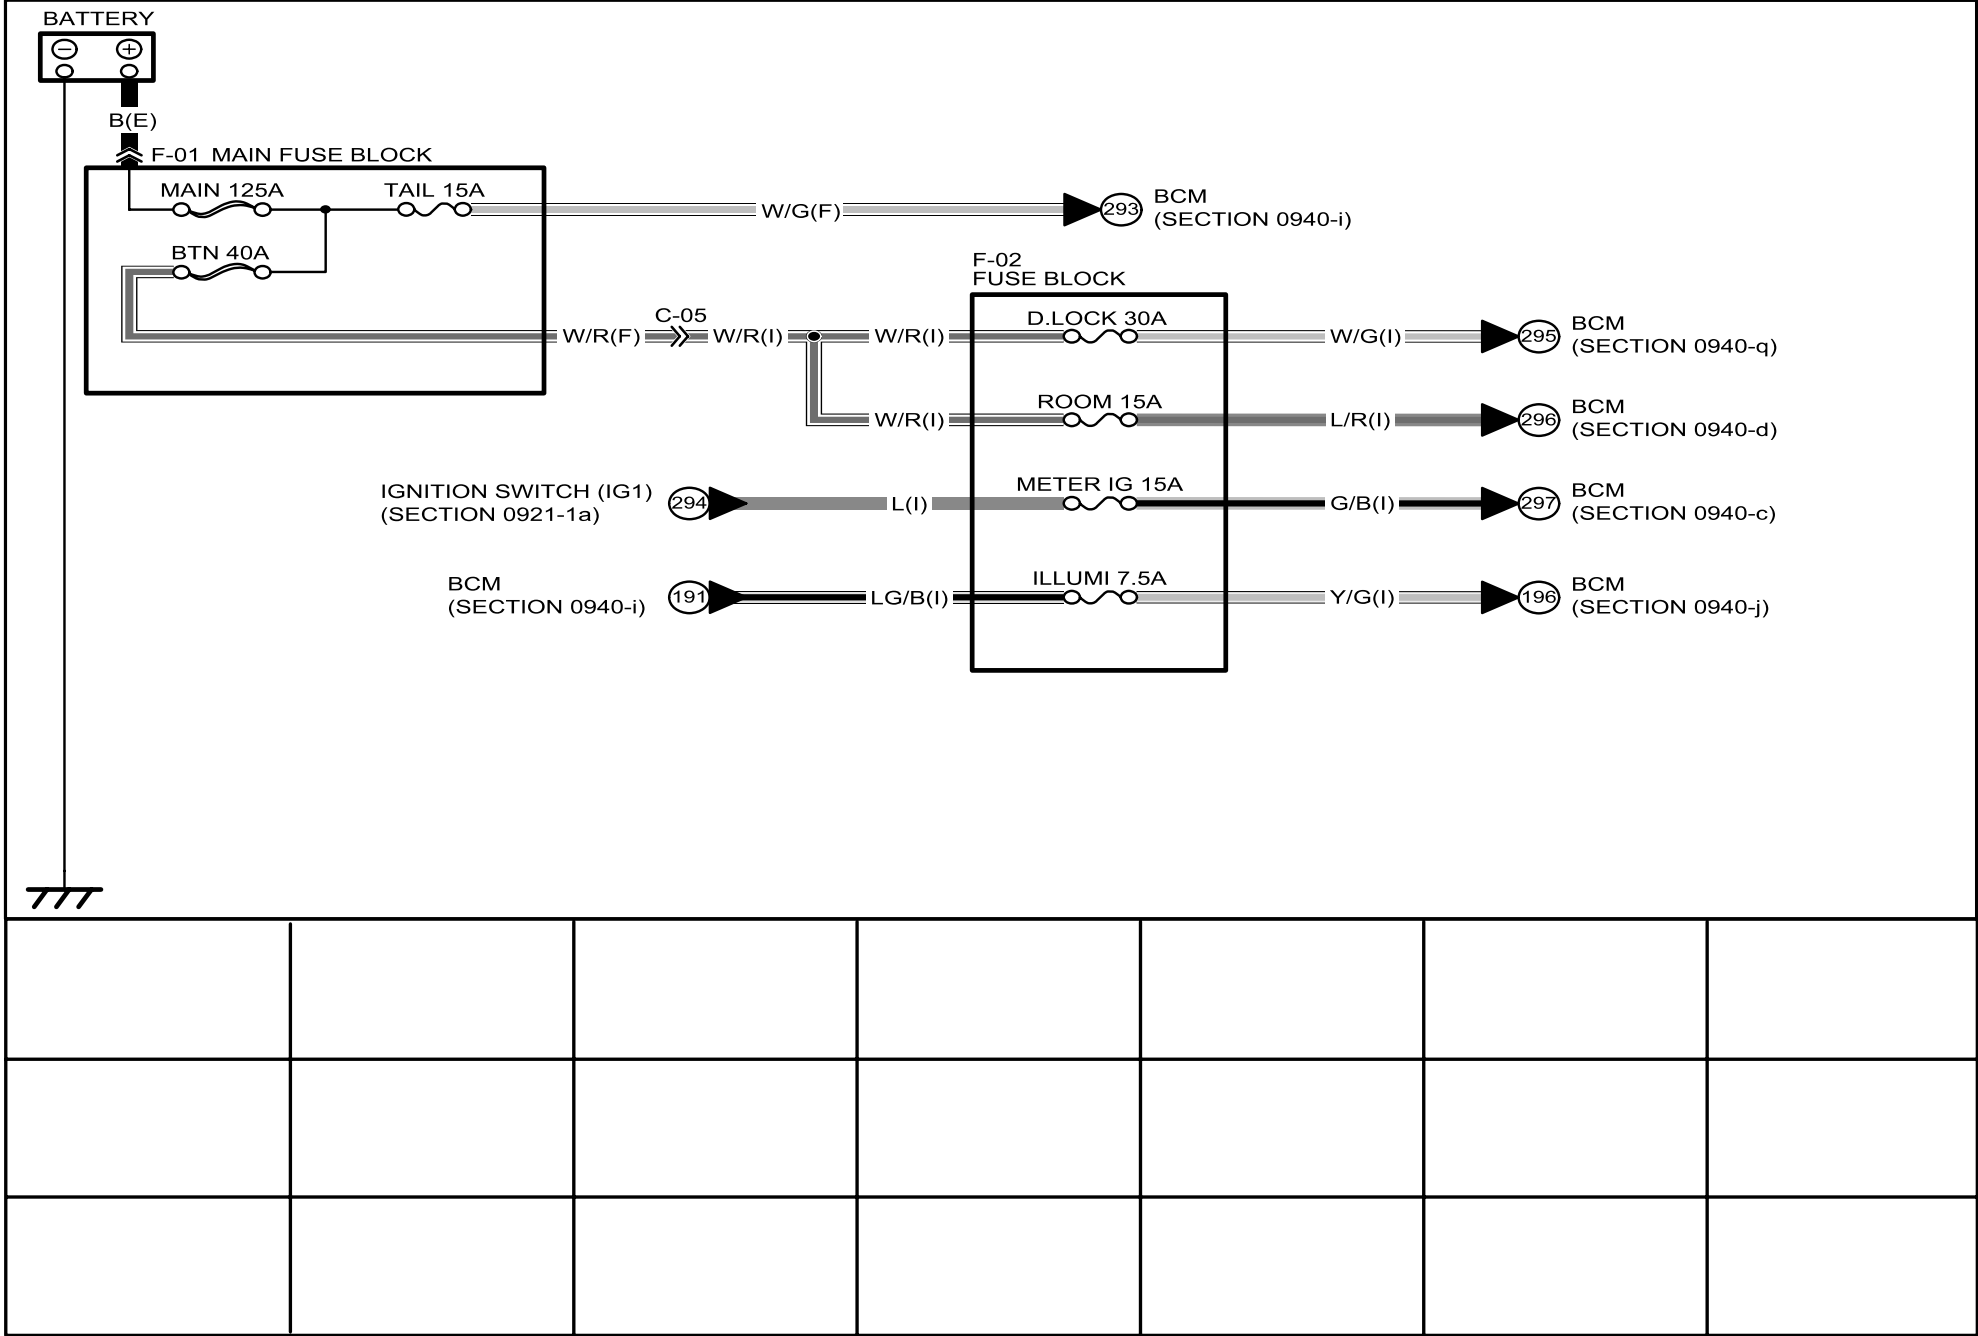

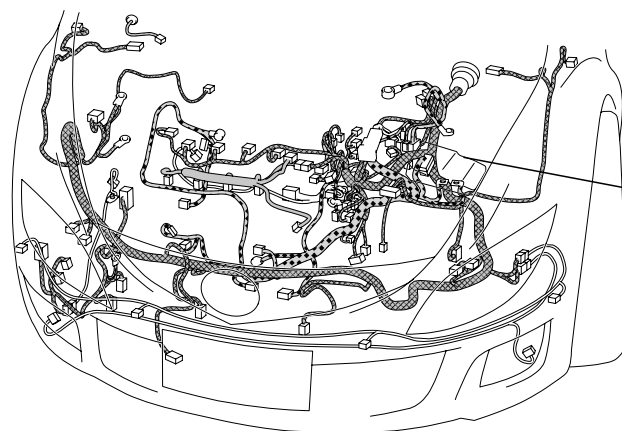

[EXCEPT MZR-CD 2.2]


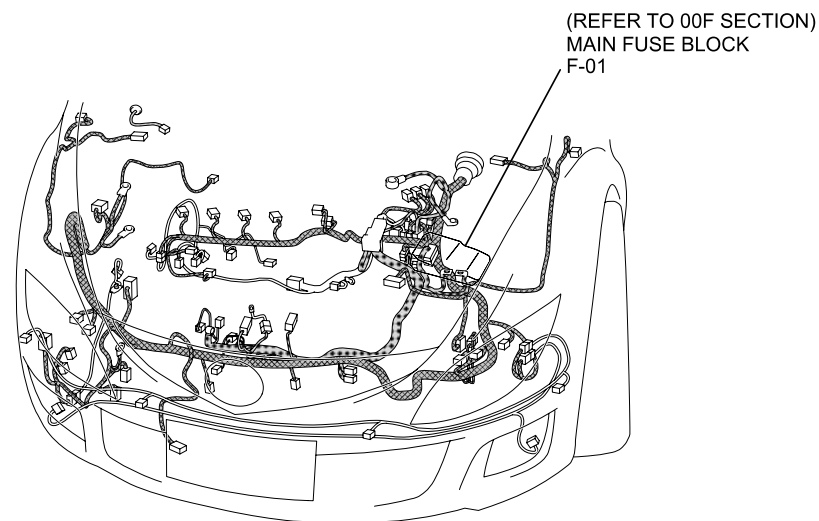


[MZR-CD 2.2]


[GRAY]
(F)-(I)
C-05

F-02
FUSE BLOCK
(REFER TO 00F SECTION)


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

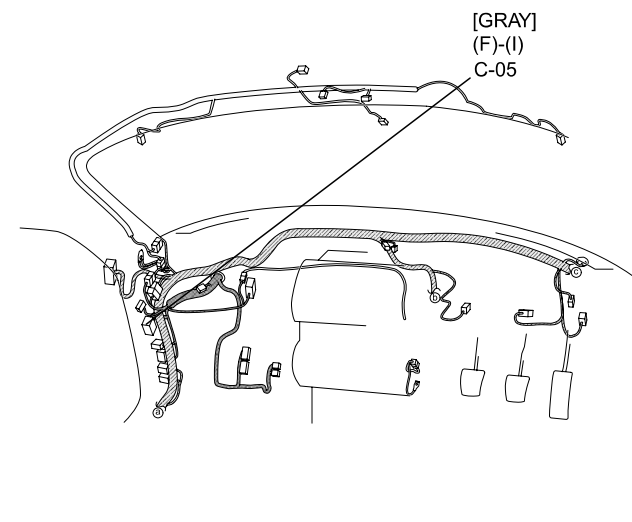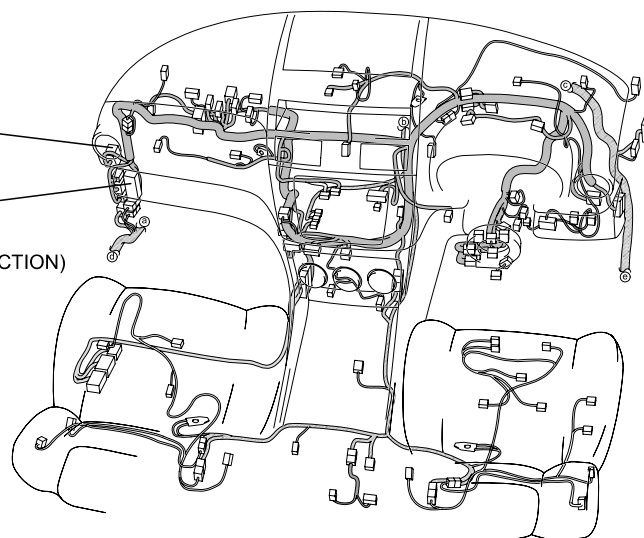

[GRAY]
(F)-(I)
C-05

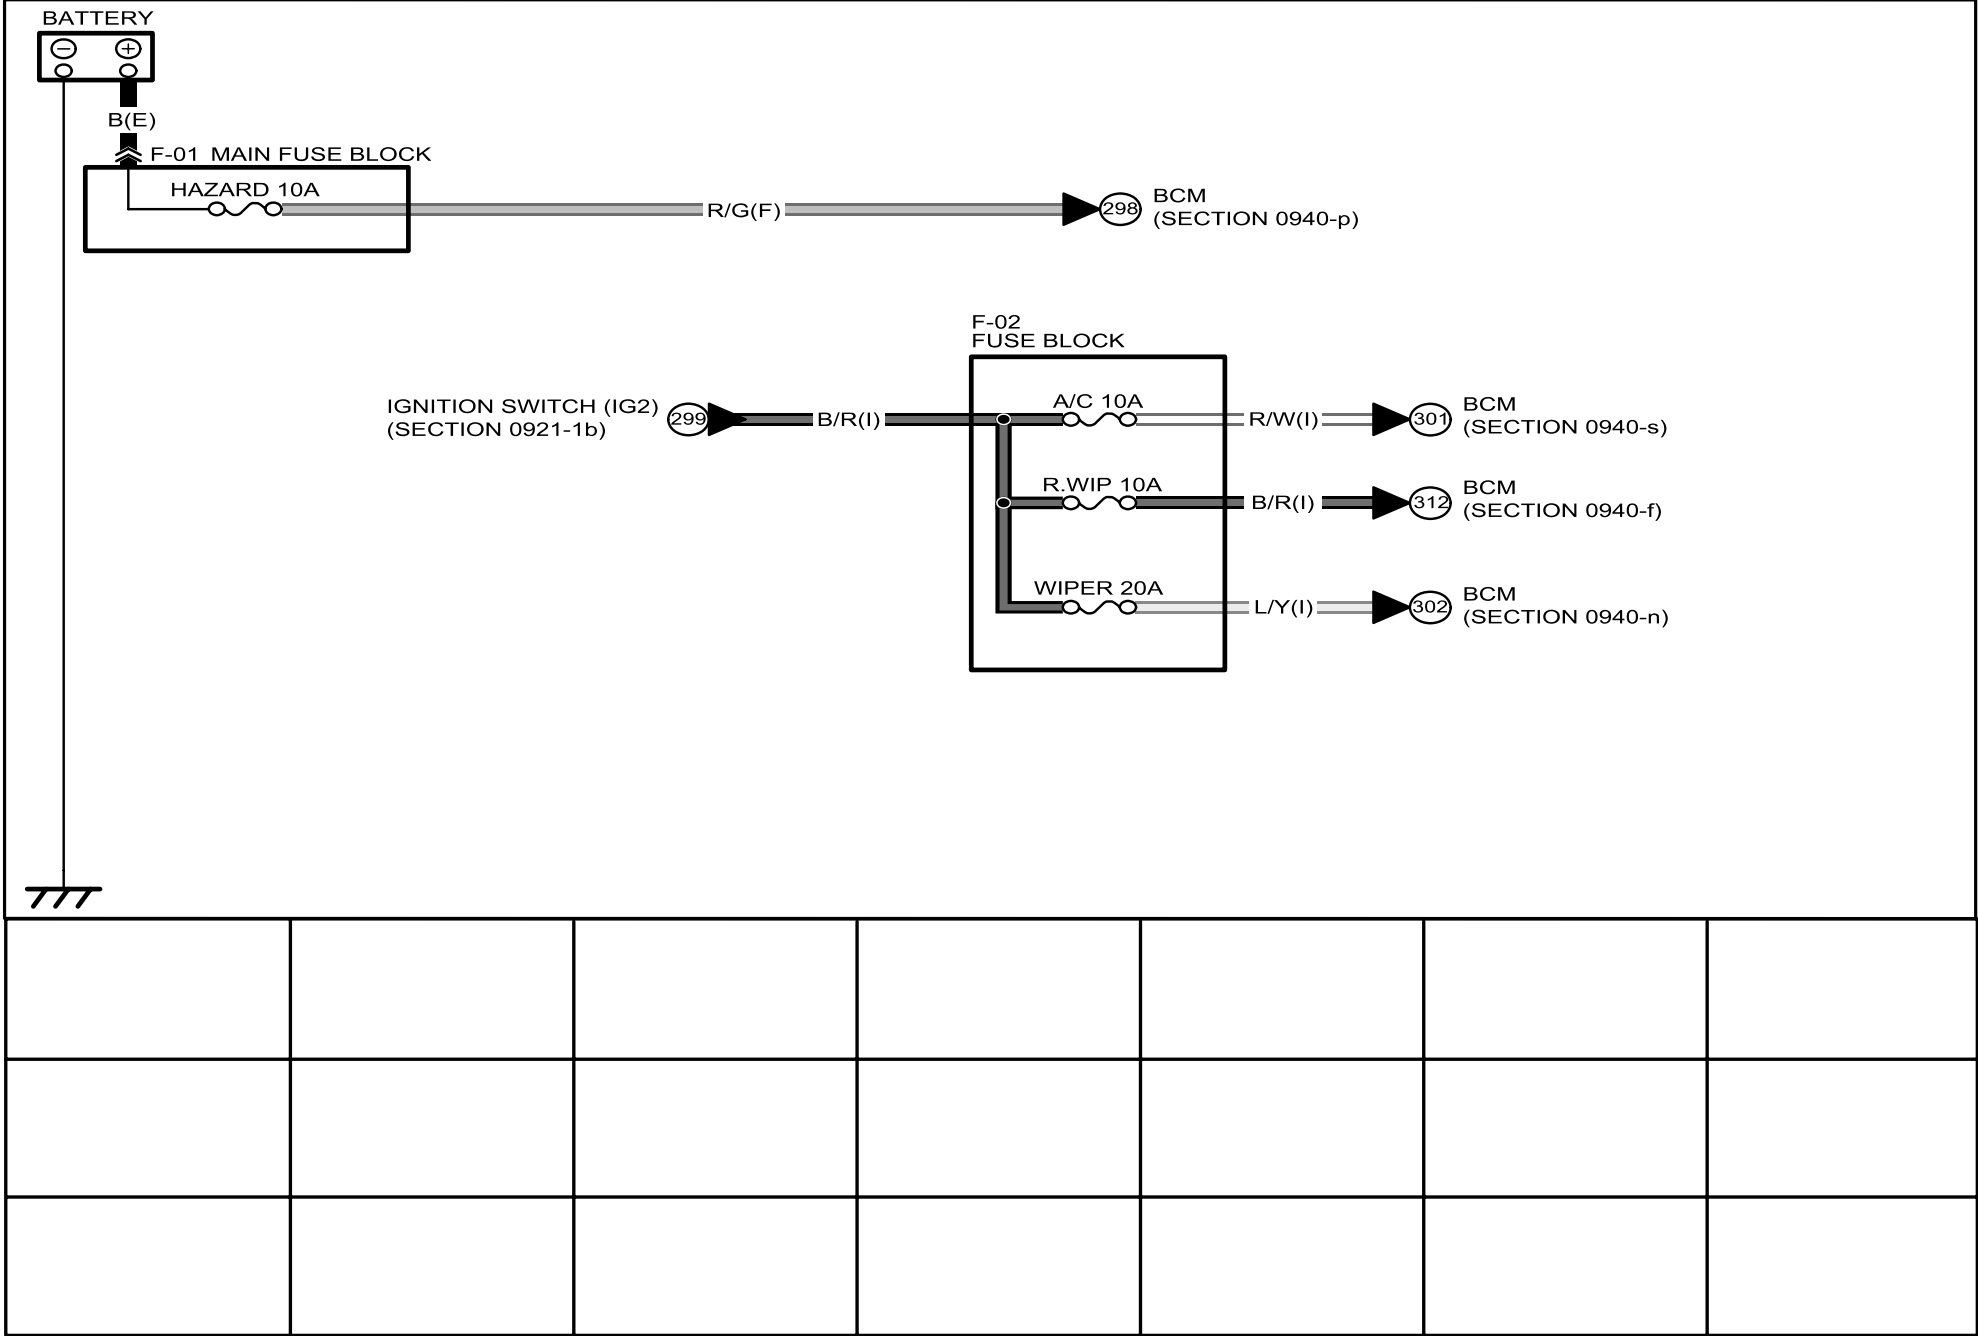


(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01

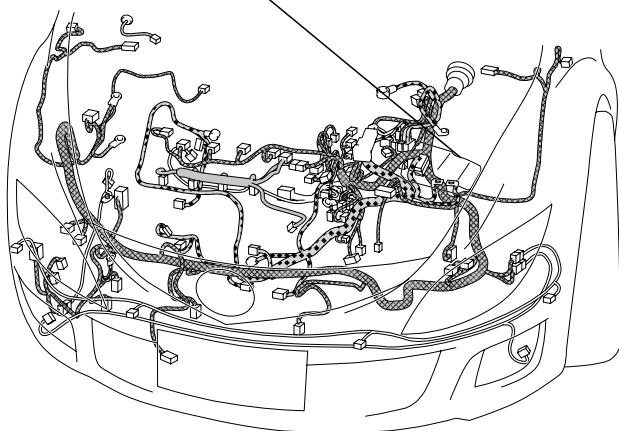


[EXCEPT MZR-CD 2.2]

(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01

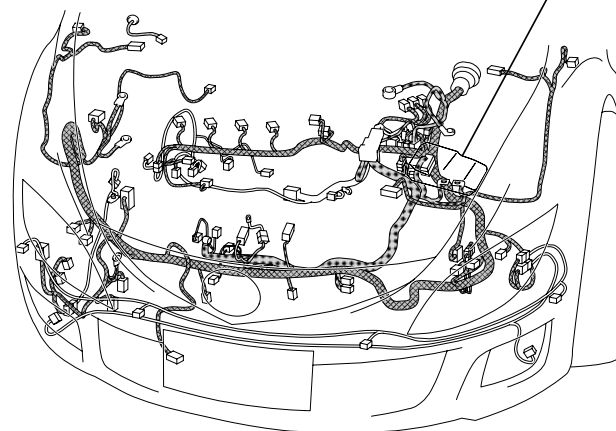



[MZR-CD 2.2]


(REFER TO 00F SECTION)
FUSE BLOCK
F-02

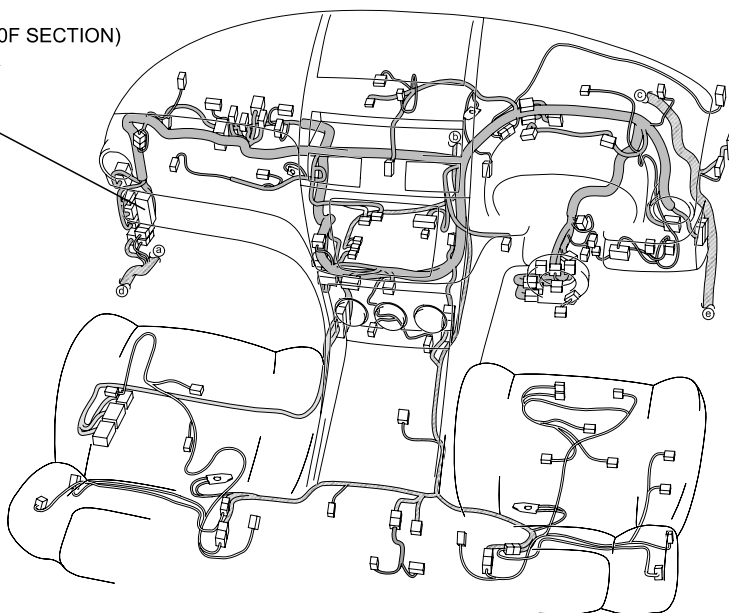


	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: FRONT HARNESS
	: ENGINE HARNESS
	: INJECTION HARNESS

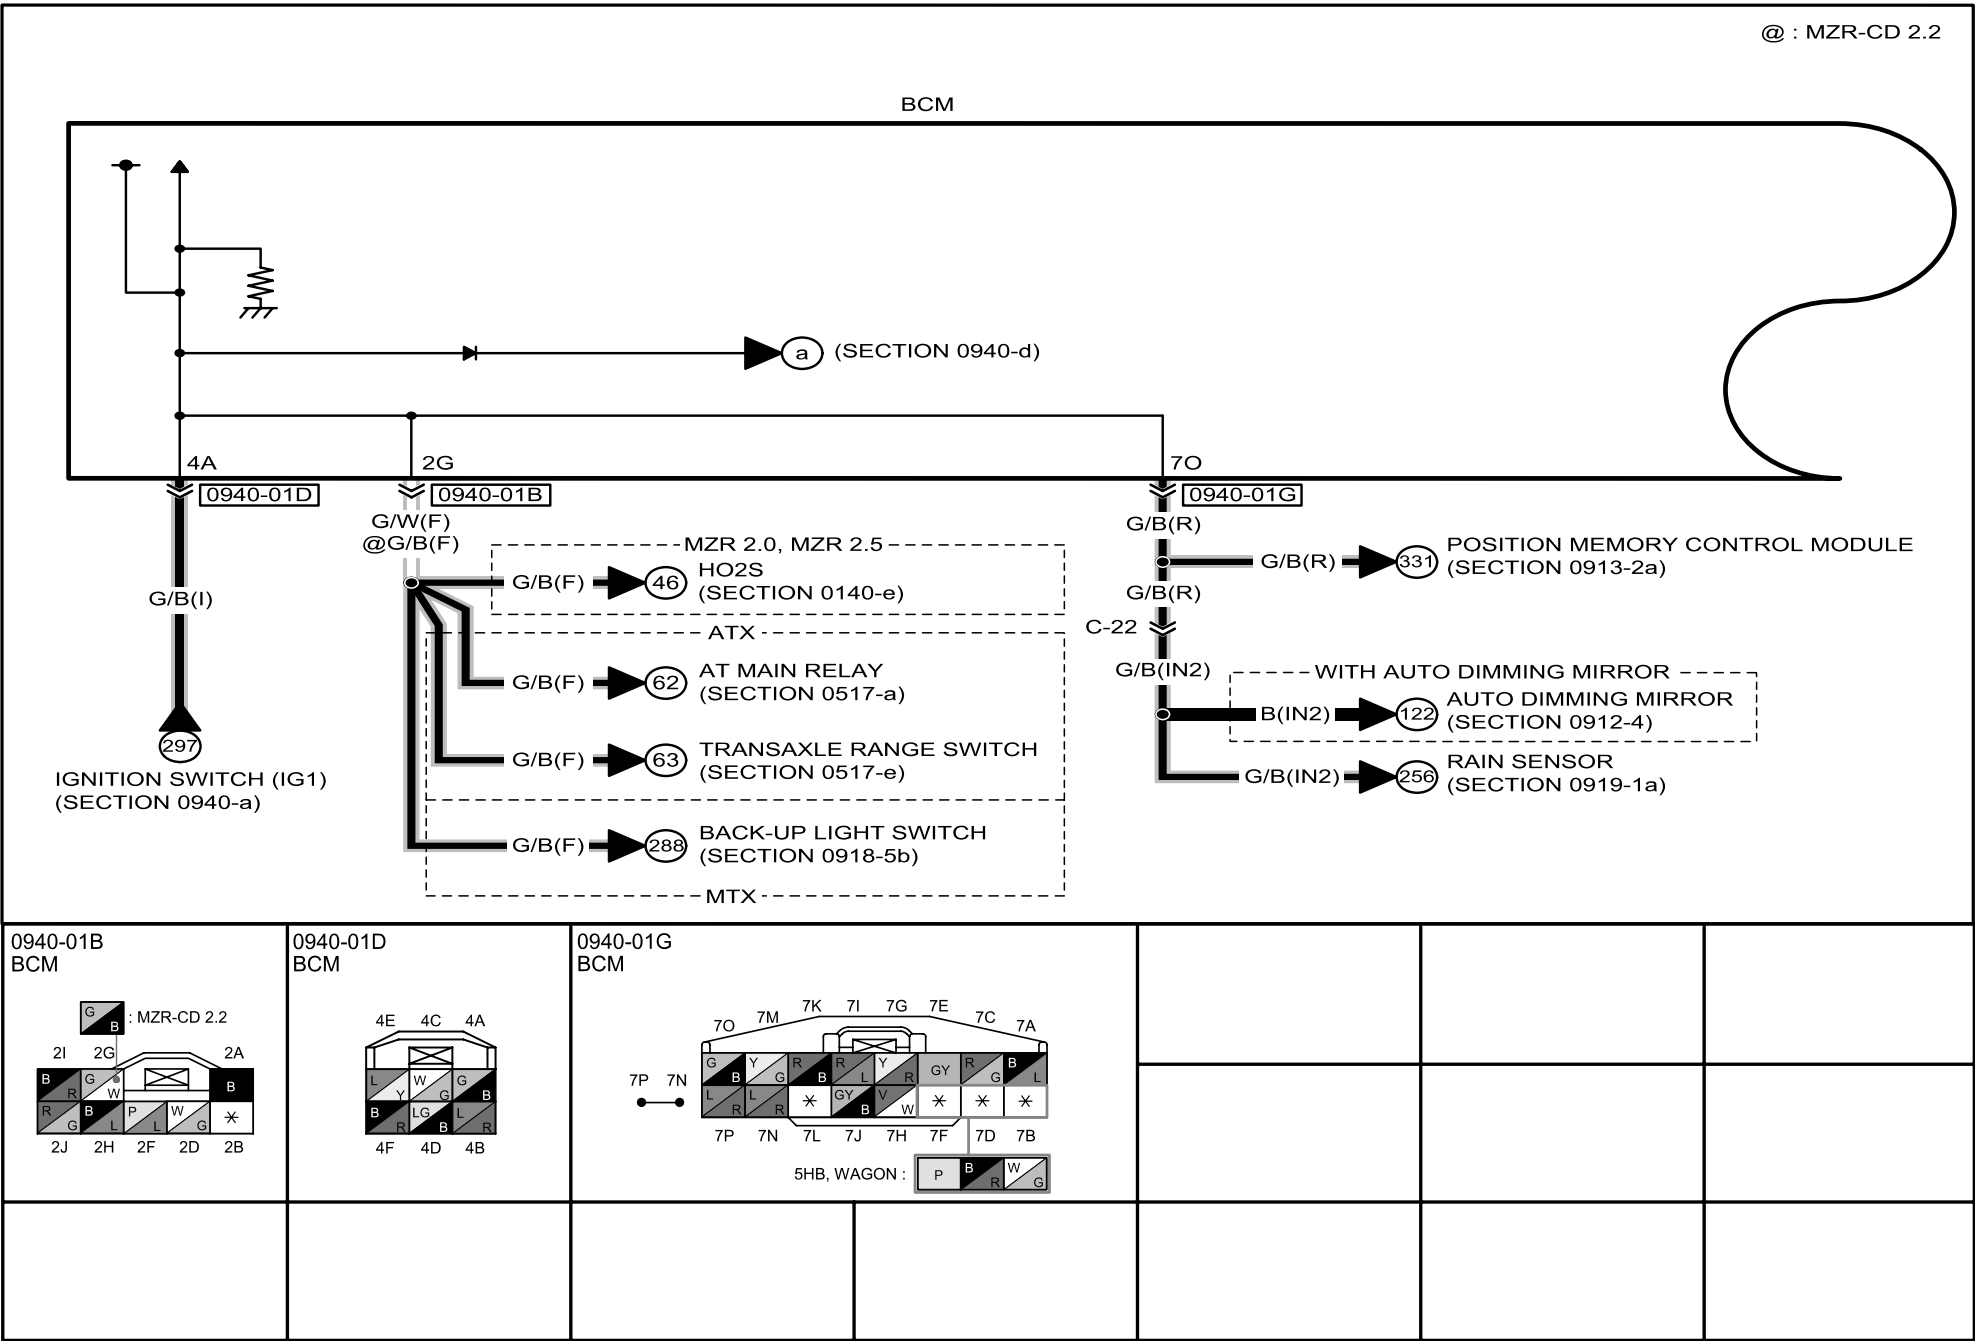

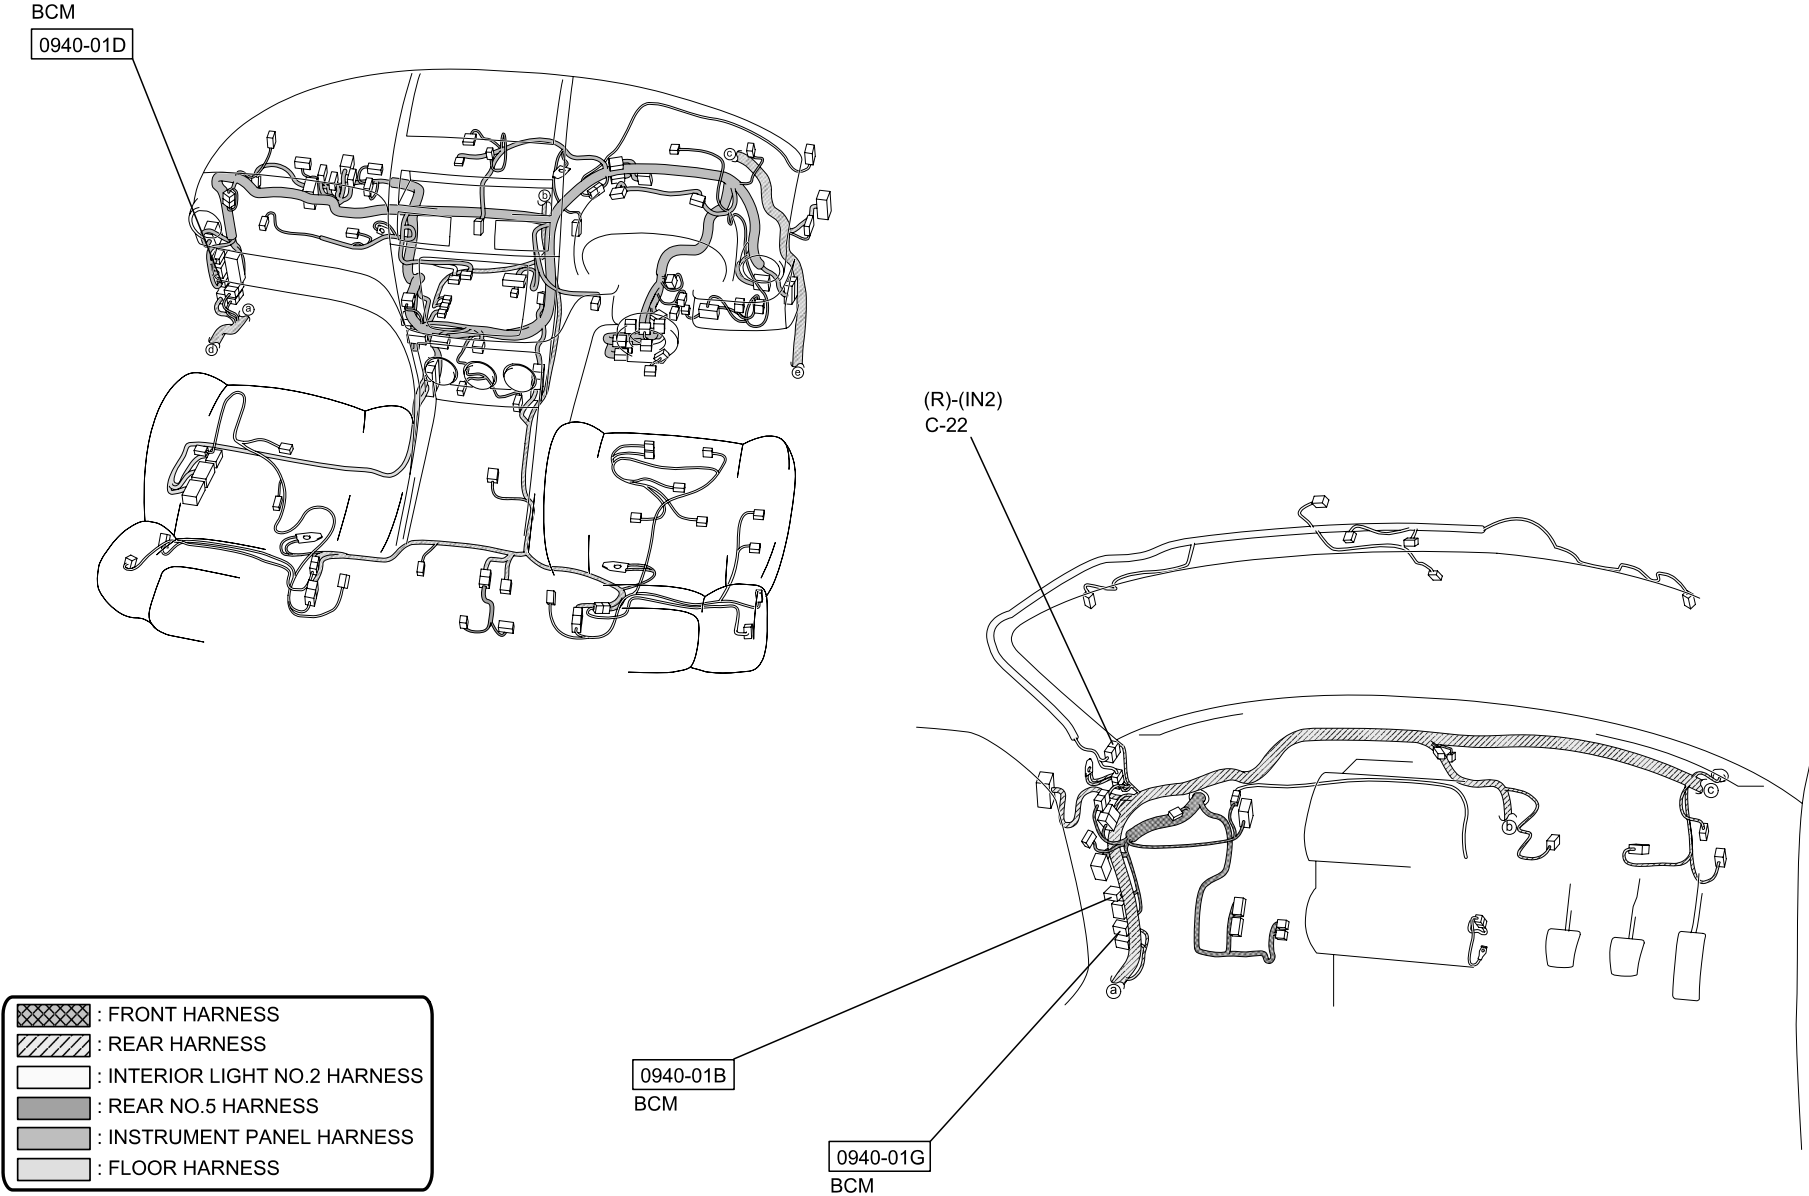




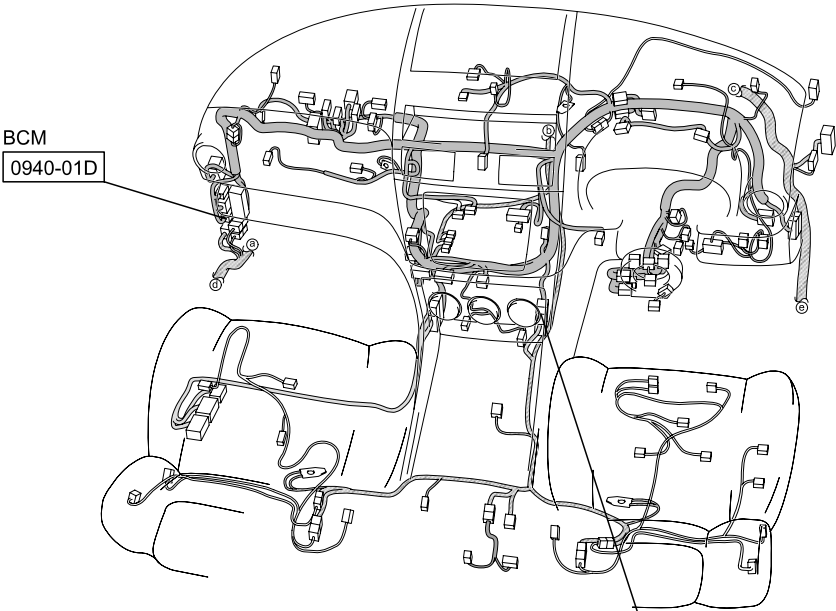



- FRONT HARNESS
- REAR HARNESS
- INTERIOR LIGHT NO.2 HARNESS
- REAR NO.5 HARNESS
- INSTRUMENT PANEL HARNESS
- FLOOR HARNESS

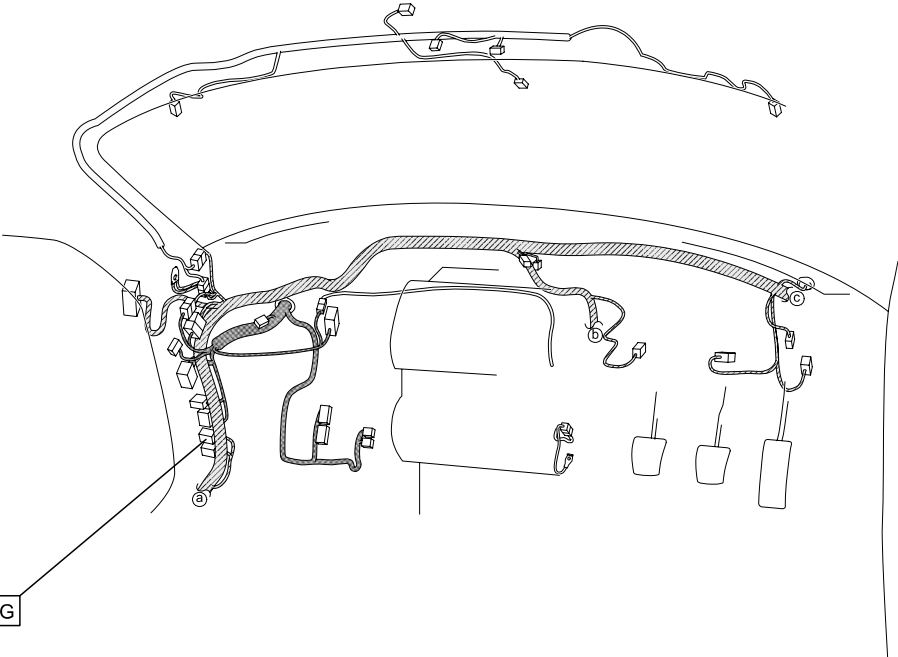


388

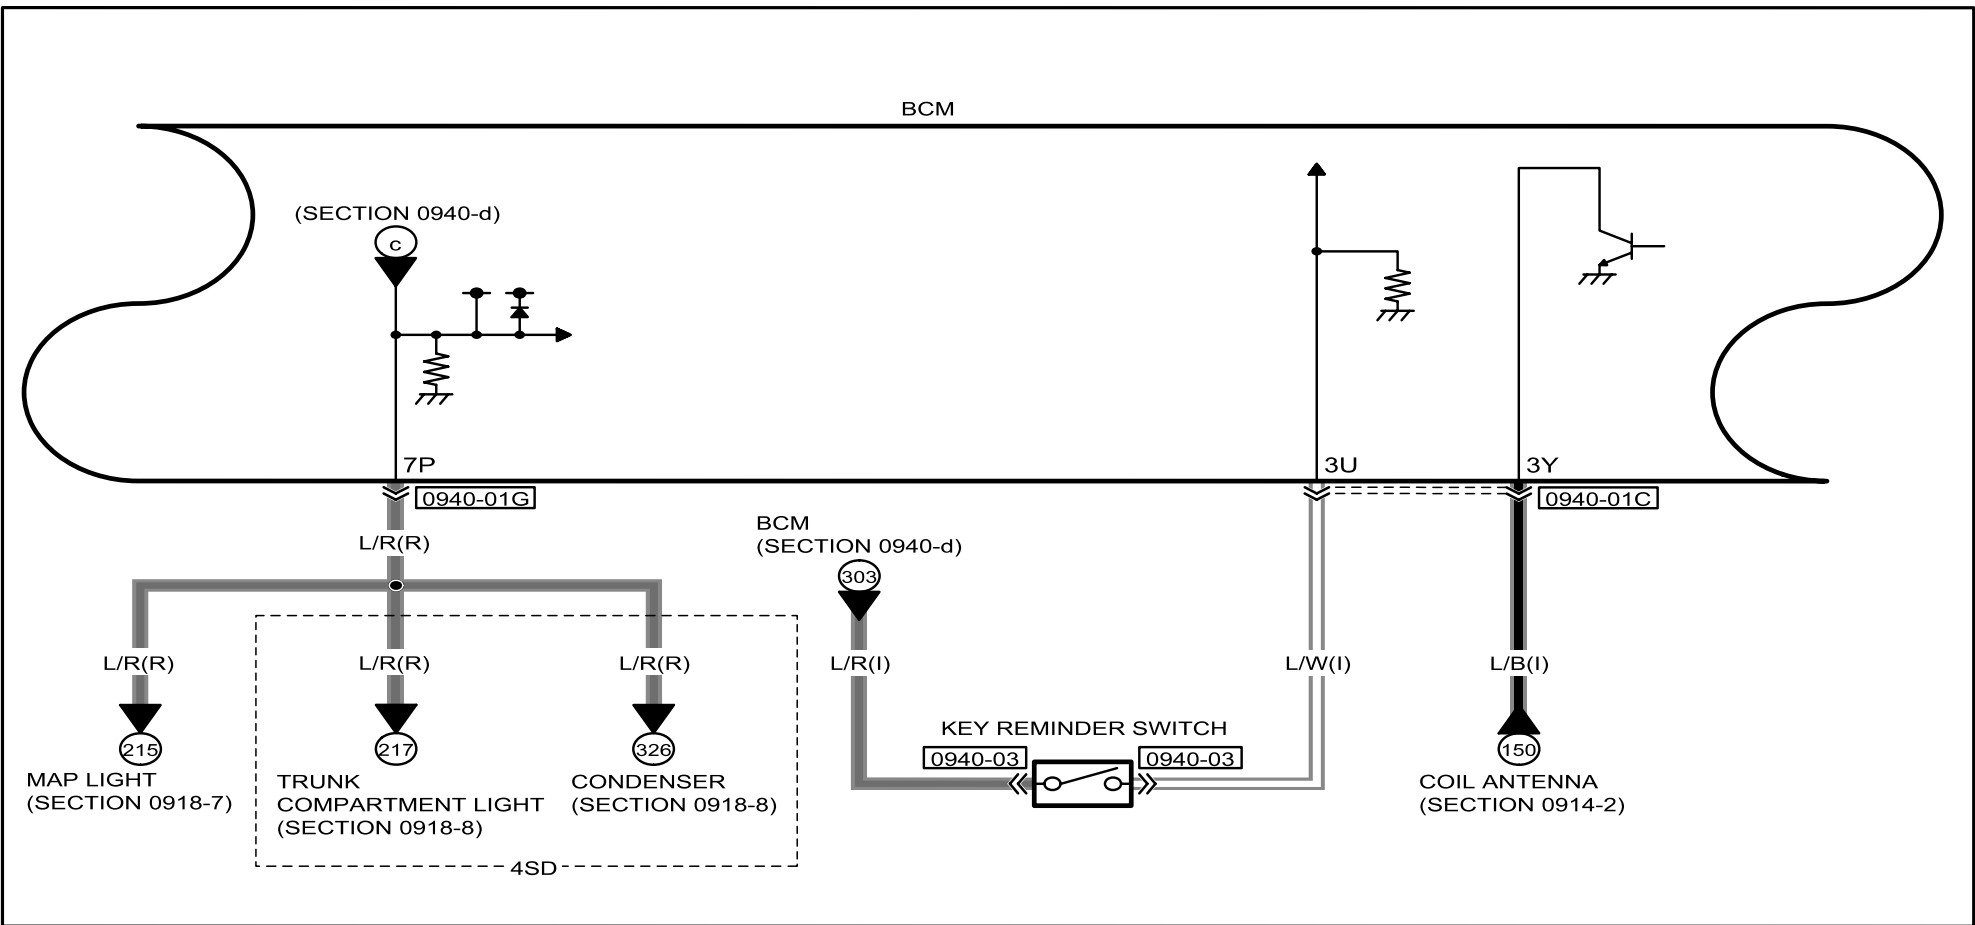


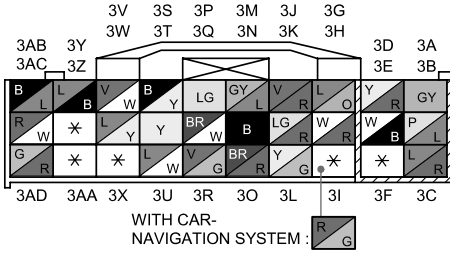
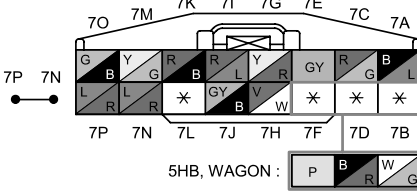
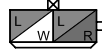
<div>0940-01C BCM</div> <div><p>WITH CAR-NAVIGATION SYSTEM :</p></div>	<div>0940-01G BCM</div> <div><p>5HB, WAGON :</p></div>	<div>0940-03 KEY REMINDER SWITCH</div> <div></div>		

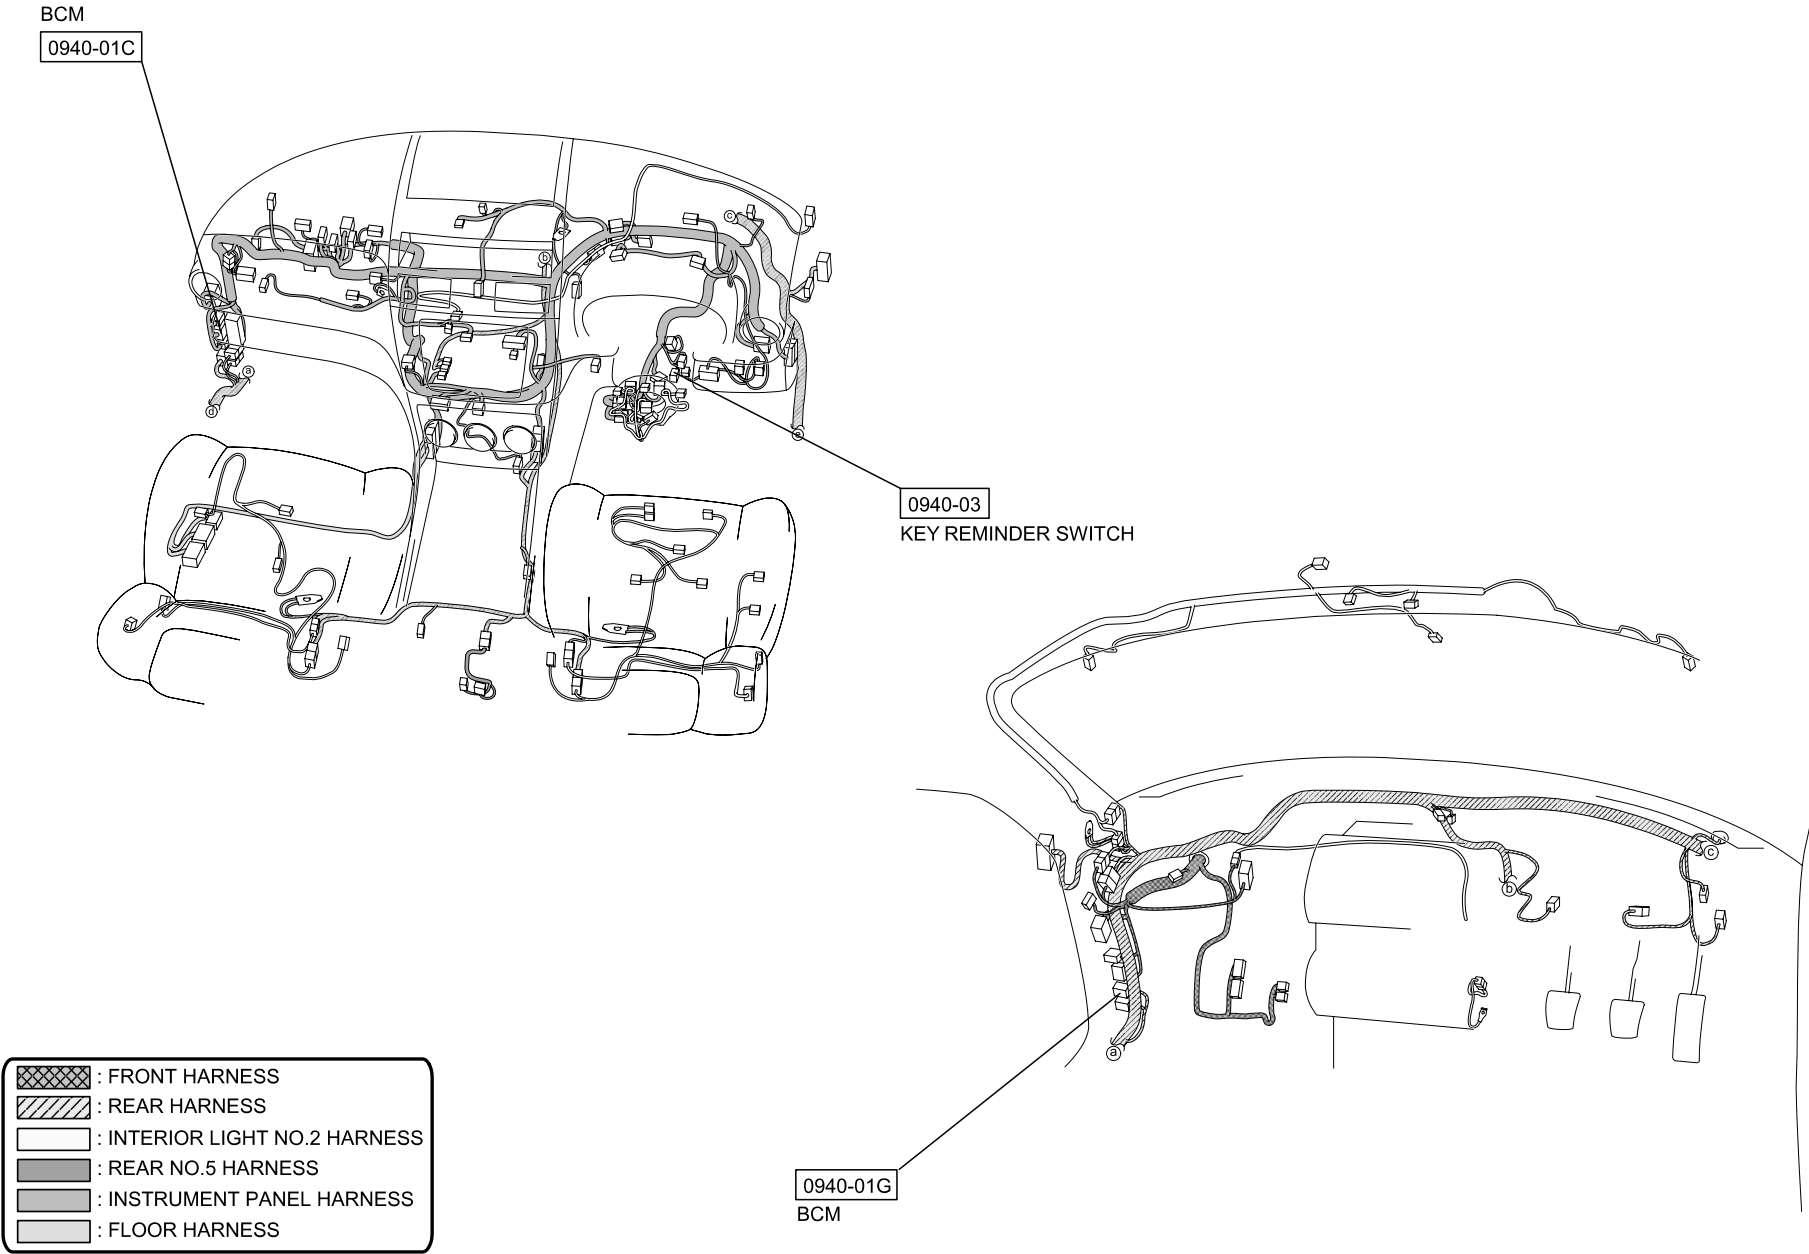


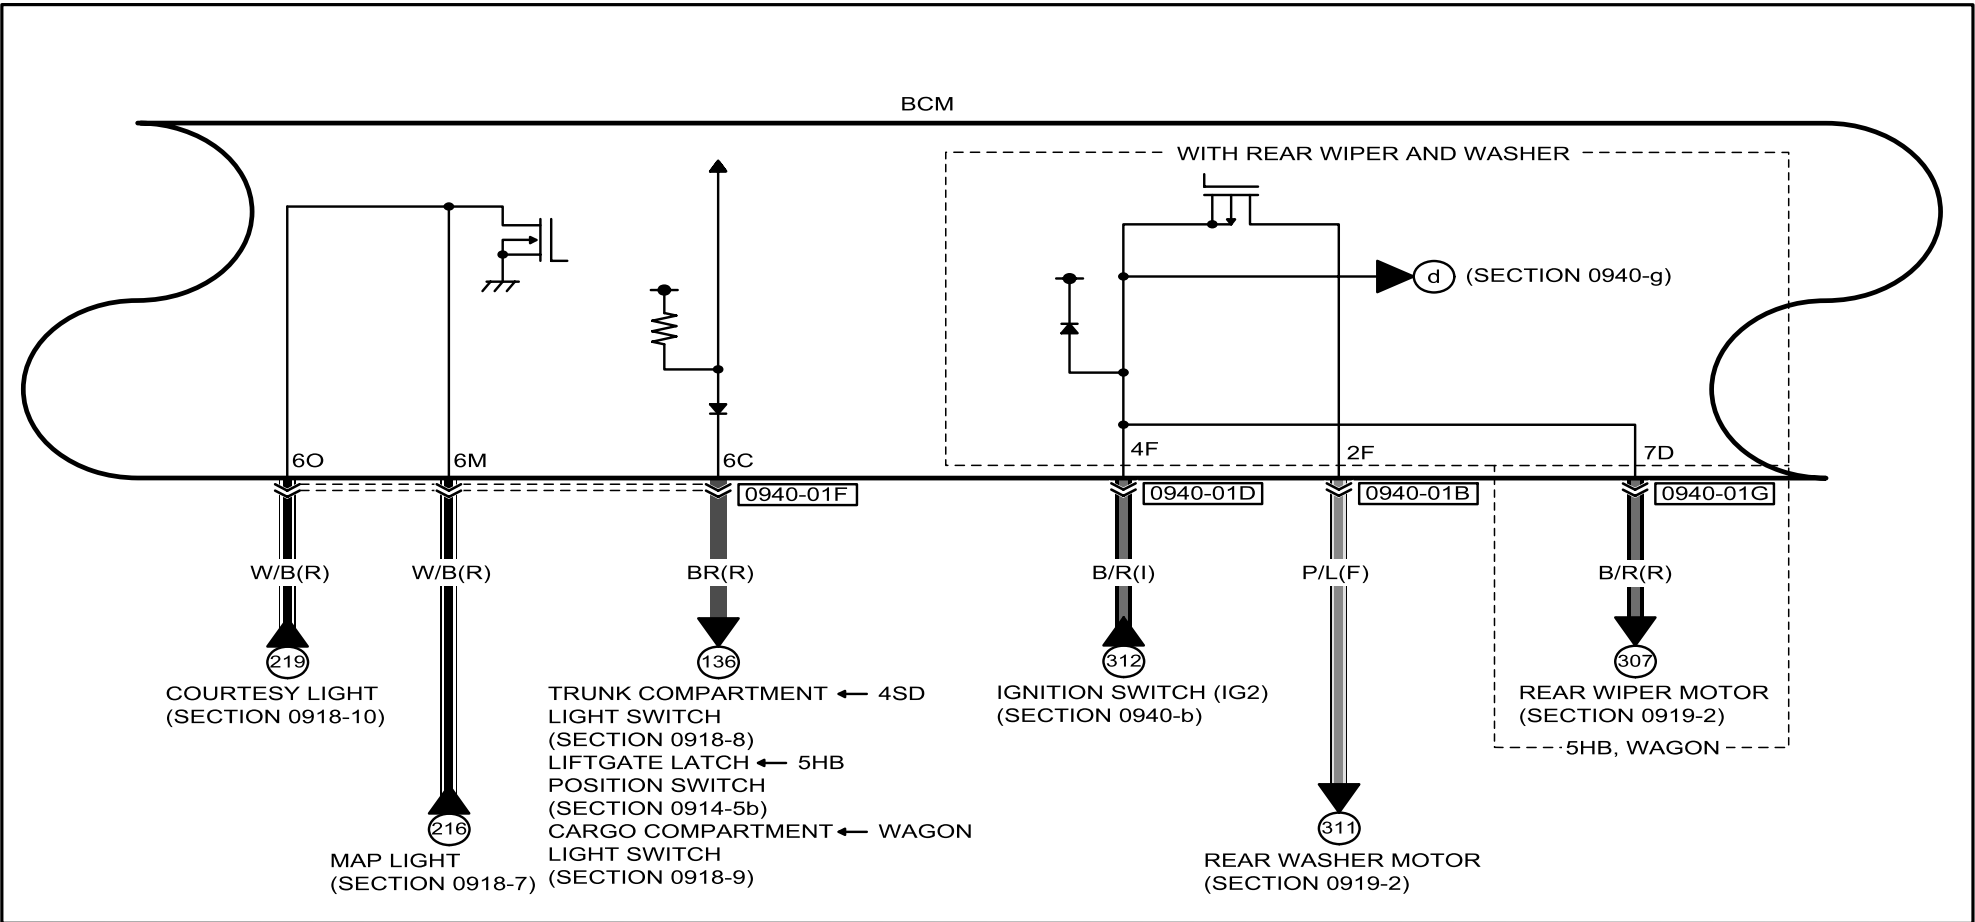


0940-01B BCM	0940-01D BCM	0940-01F BCM	0940-01G BCM	
			5HB, WAGON :	

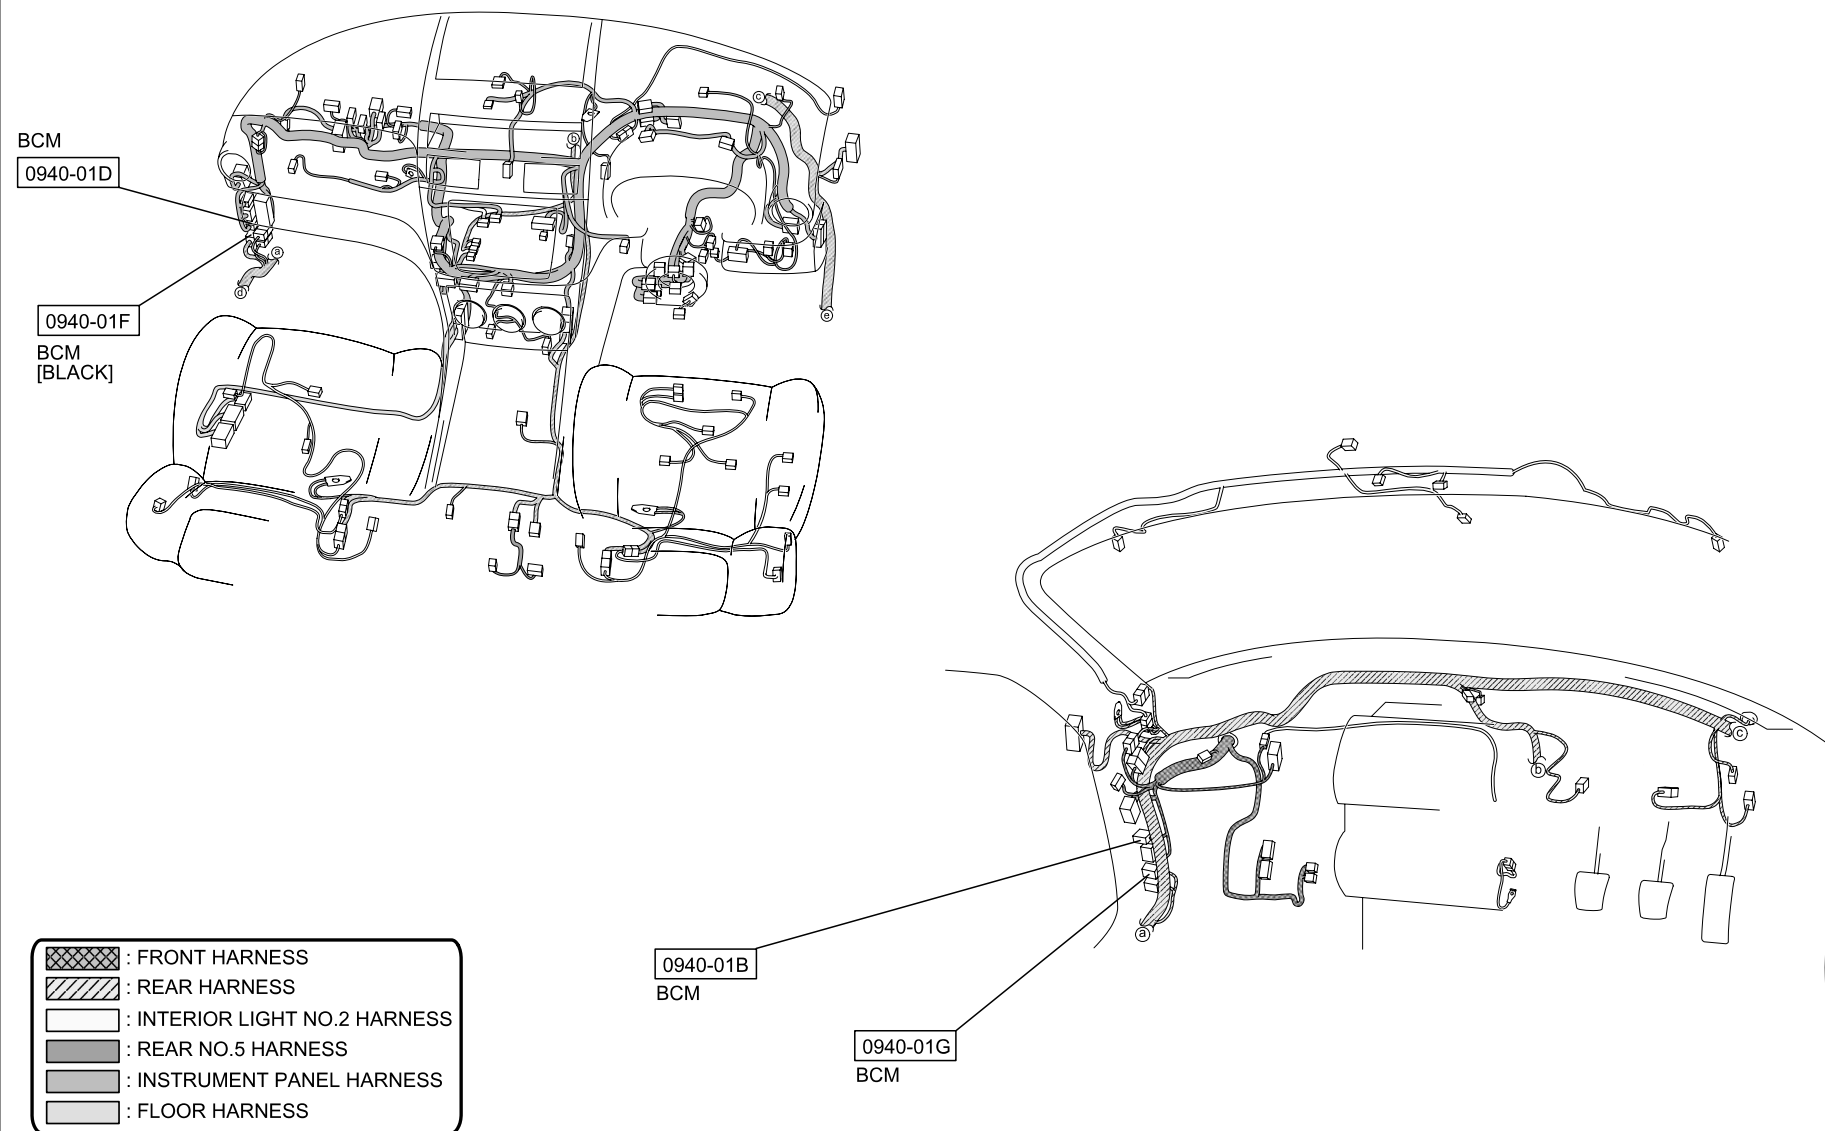

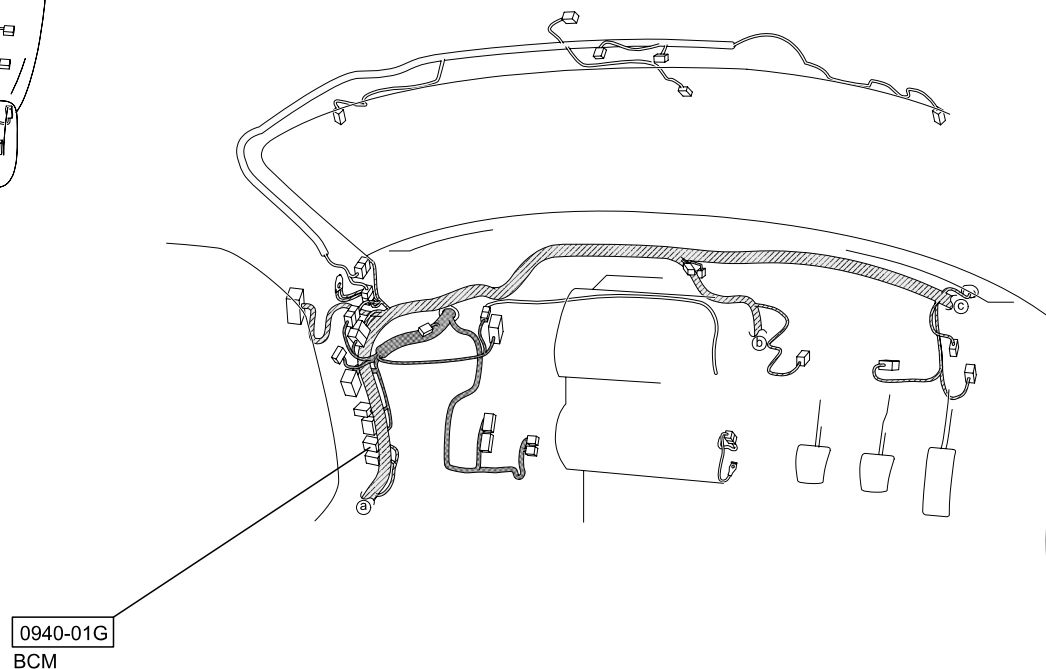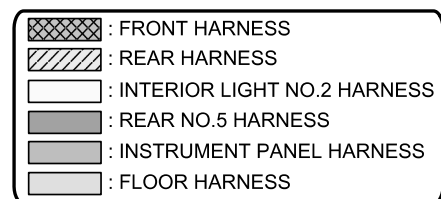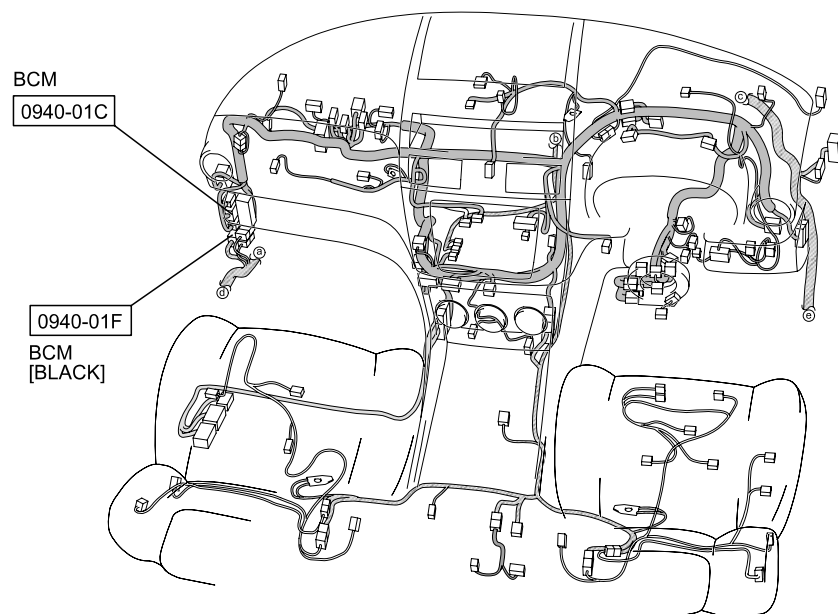


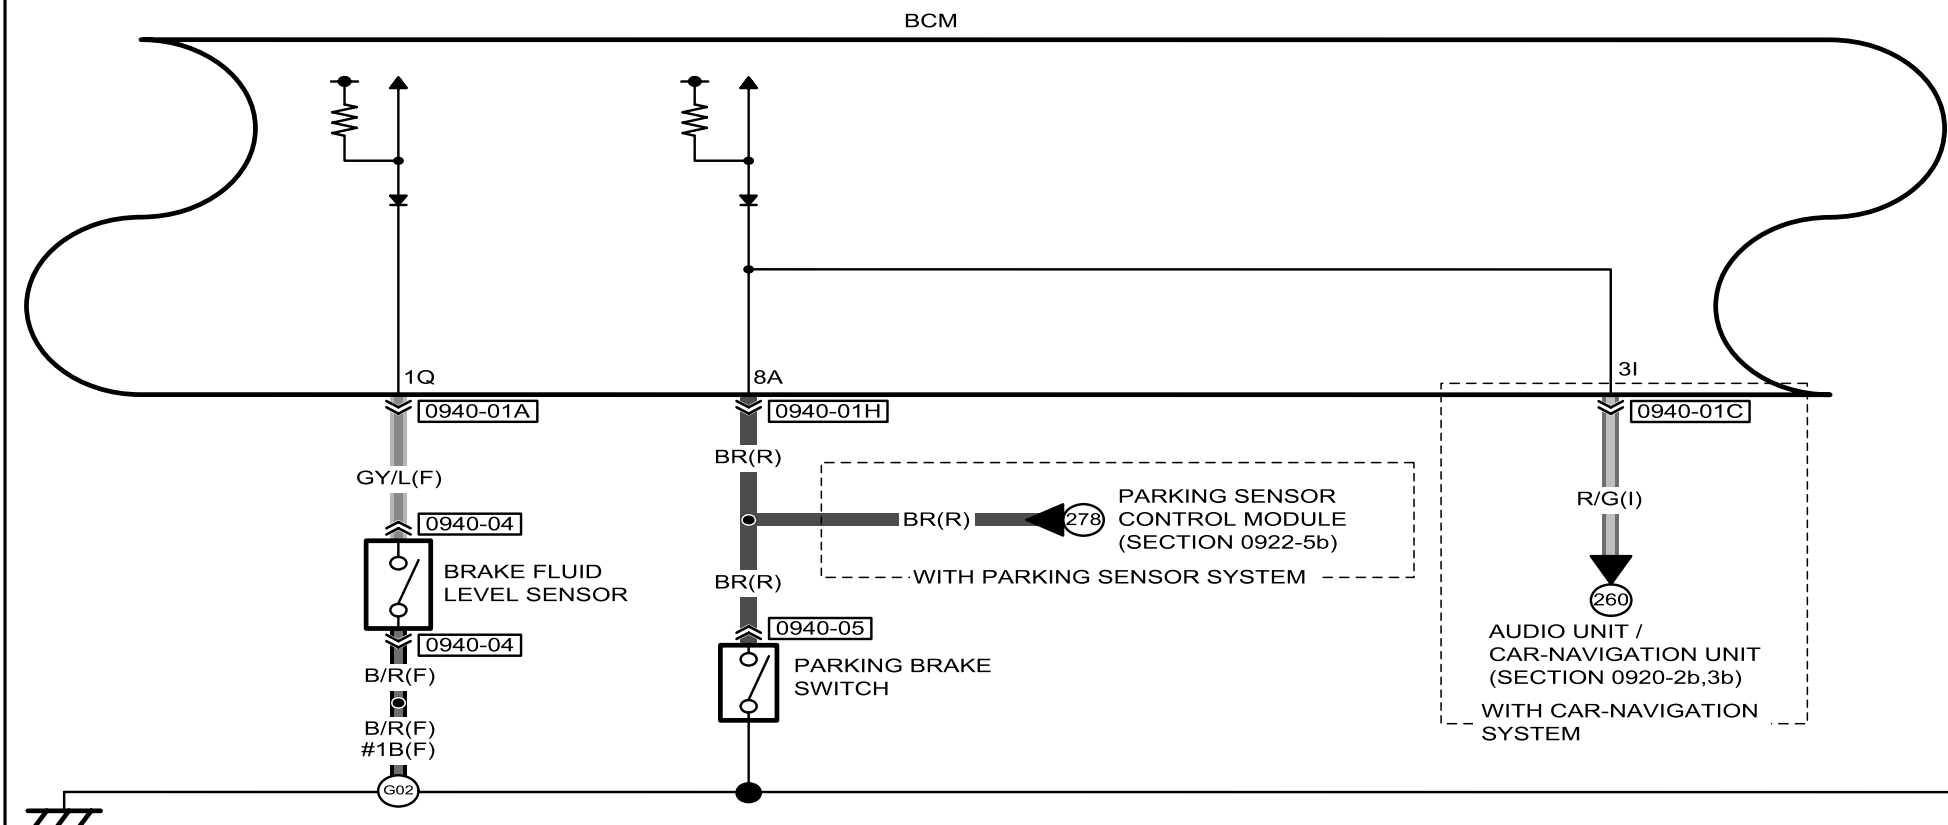


0940-01A
BCM

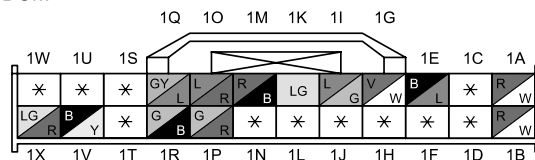

0940-01C
BCM

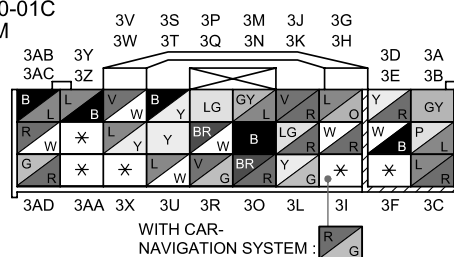

0940-01H
BCM

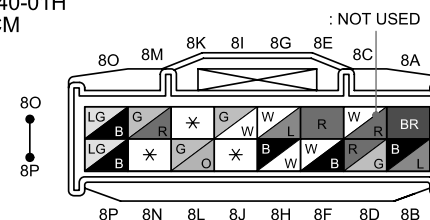


0940-04
BRAKE FLUID LEVEL
SENSOR



0940-05
PARKING BRAKE SWITCH




[GRAY]
BRAKE FLUID LEVEL SENSOR
0940-04

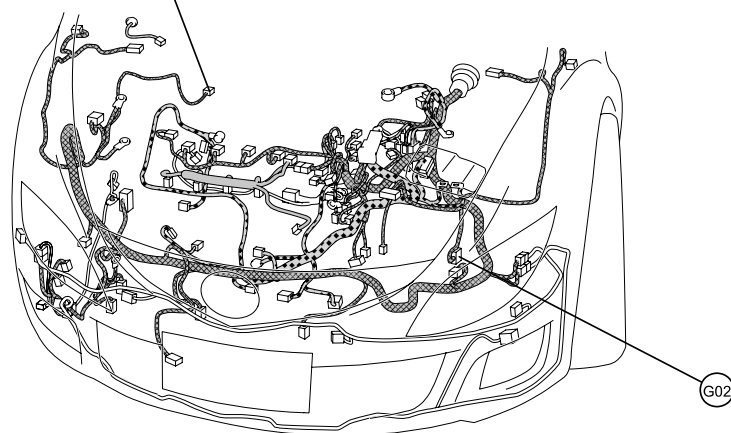

[EXCEPT MZR-CD 2.2]


[GRAY]
BRAKE FLUID LEVEL SENSOR
0940-04

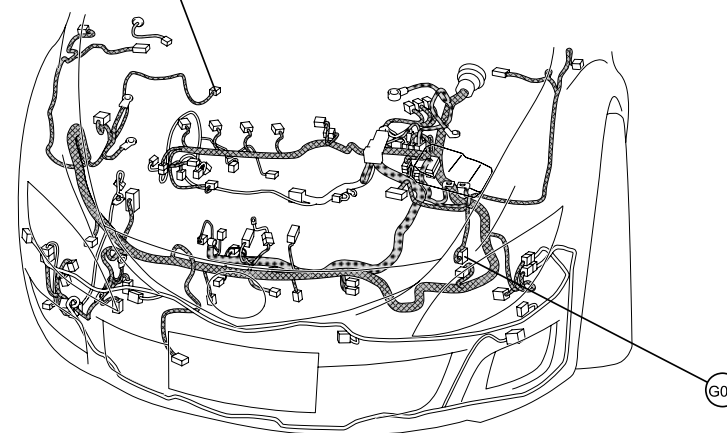

[MZR-CD 2.2]


PARKING BRAKE SWITCH
0940-05



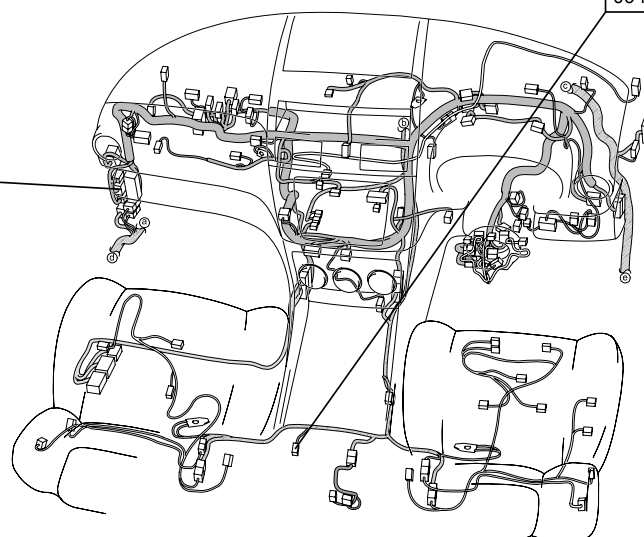





BCM
0940-01C





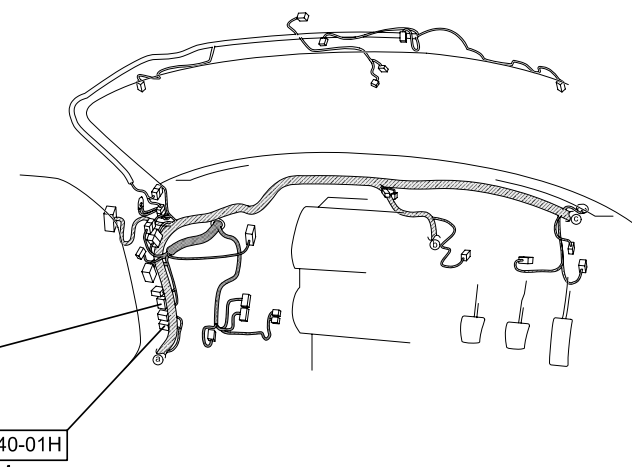



0940-01A
BCM

 
0940-01H
BCM




-  : REAR HARNESS
-  : REAR NO.5 HARNESS
-  : INSTRUMENT PANEL HARNESS
-  : FLOOR HARNESS
-  : INTERIOR LIGHT NO.2 HARNESS
-  : FRONT HARNESS
-  : ENGINE HARNESS
-  : INJECTION HARNESS

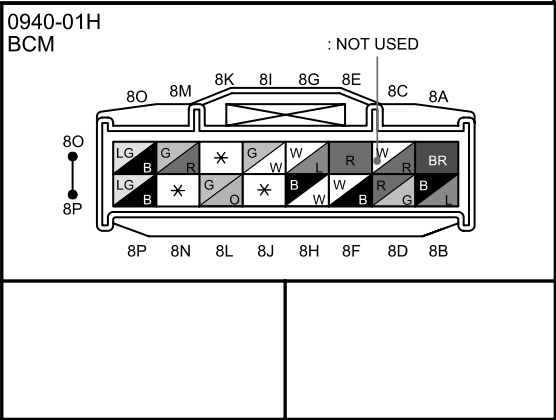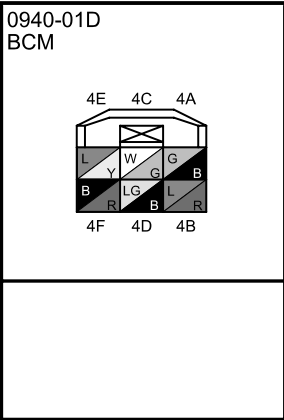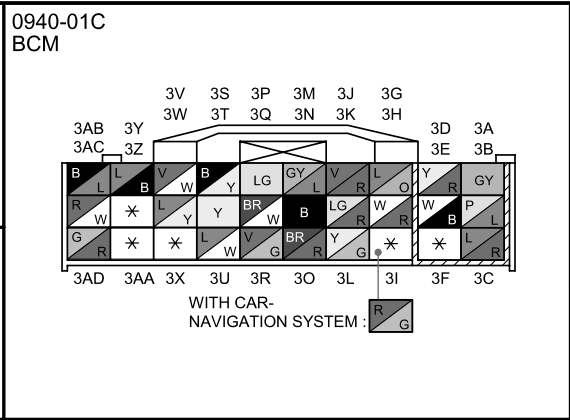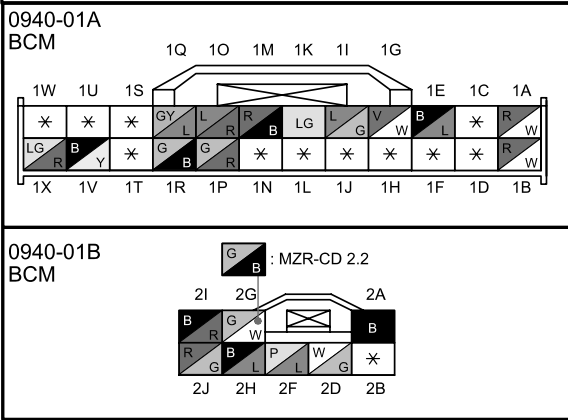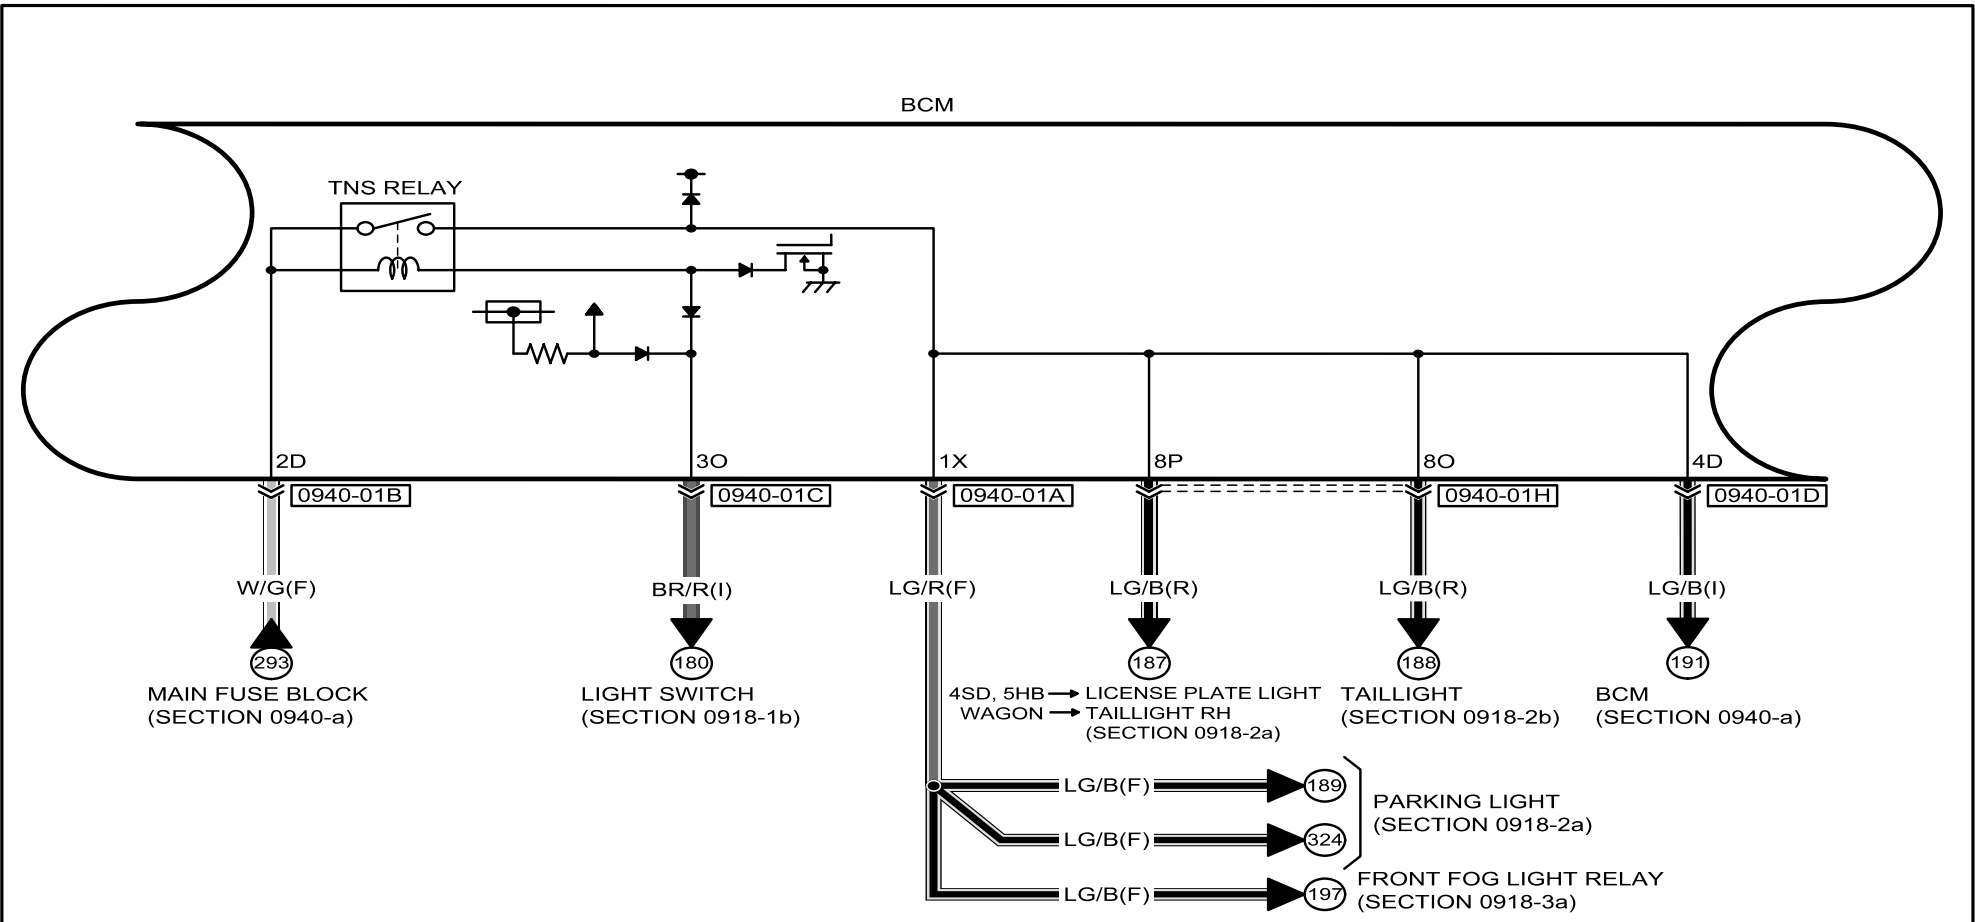

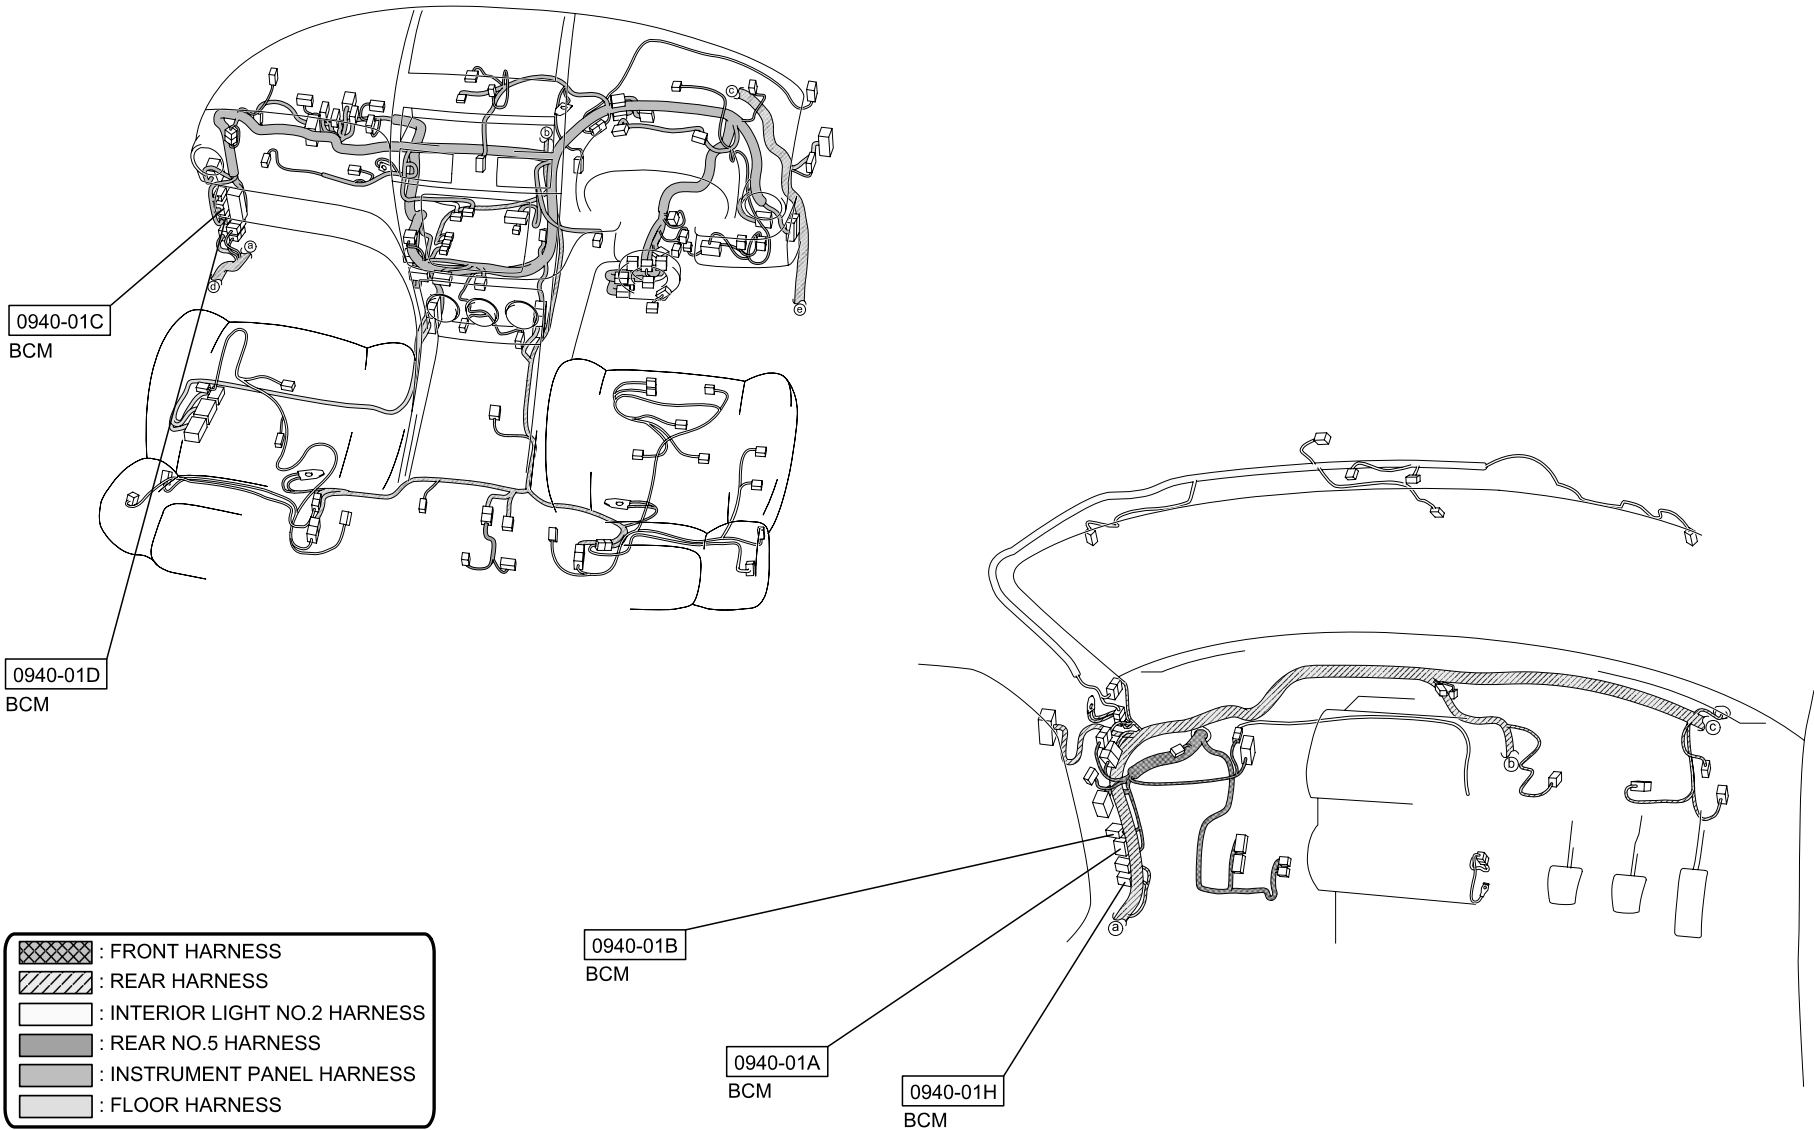


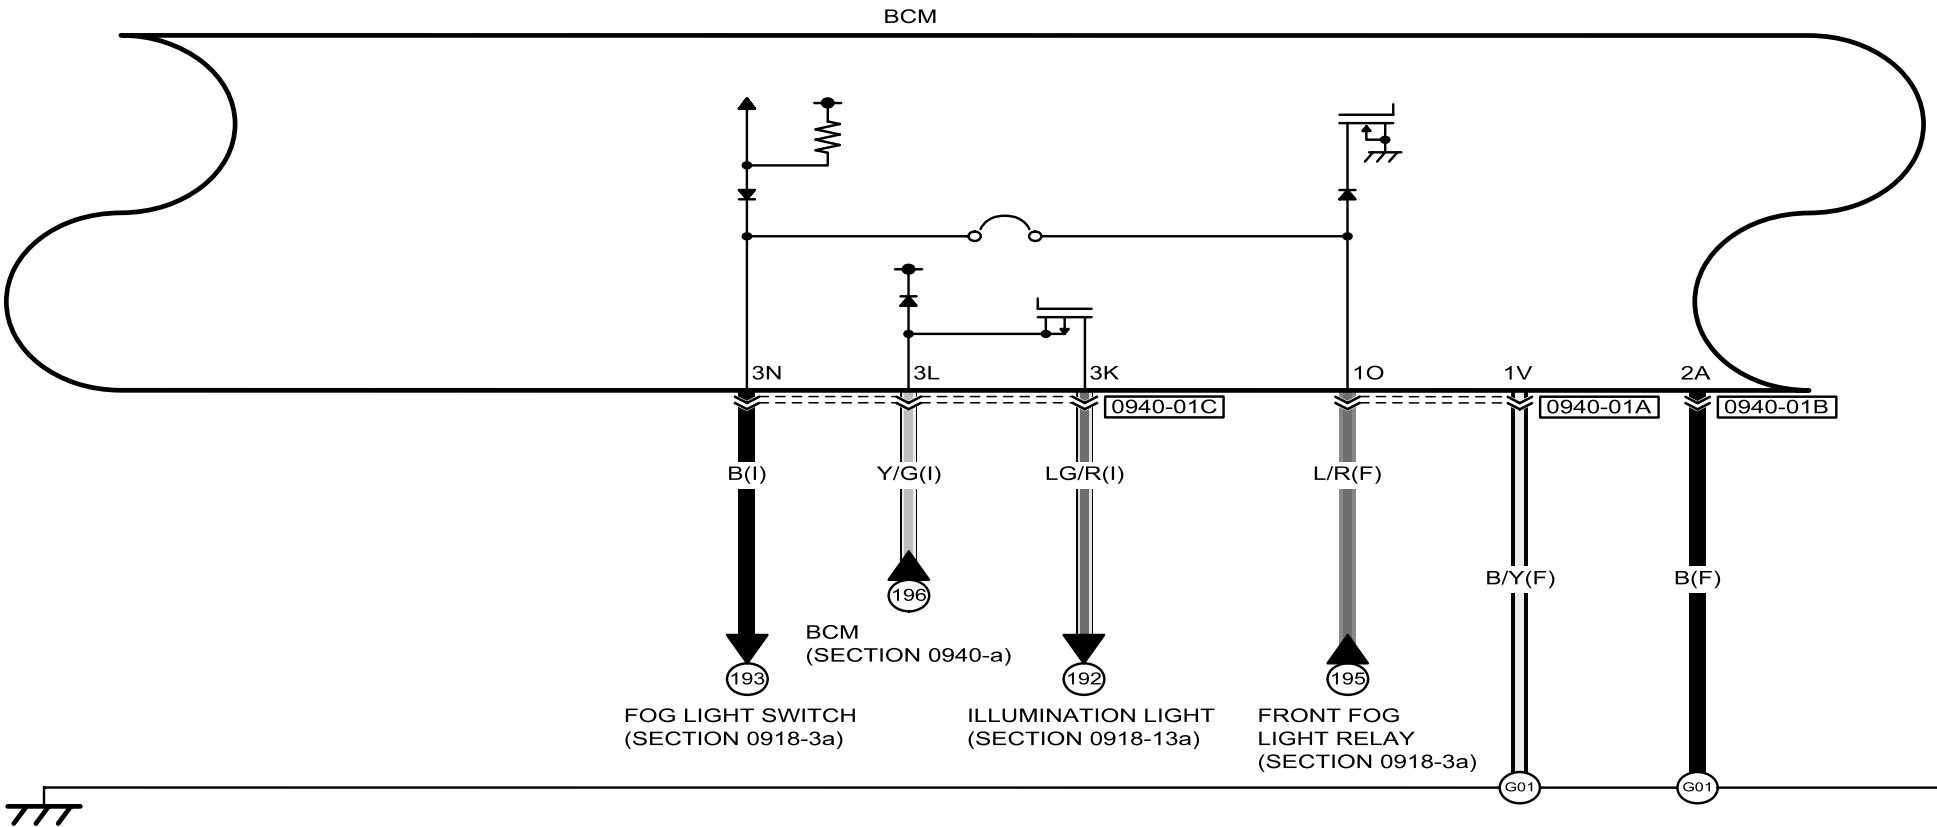


0940-01A
BCM

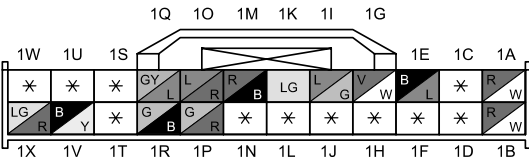


0940-01B
BCM

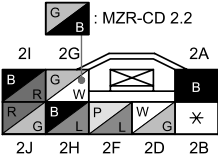




0940-01C
BCM

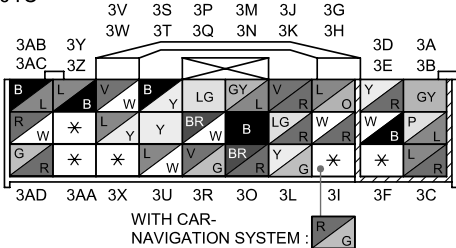

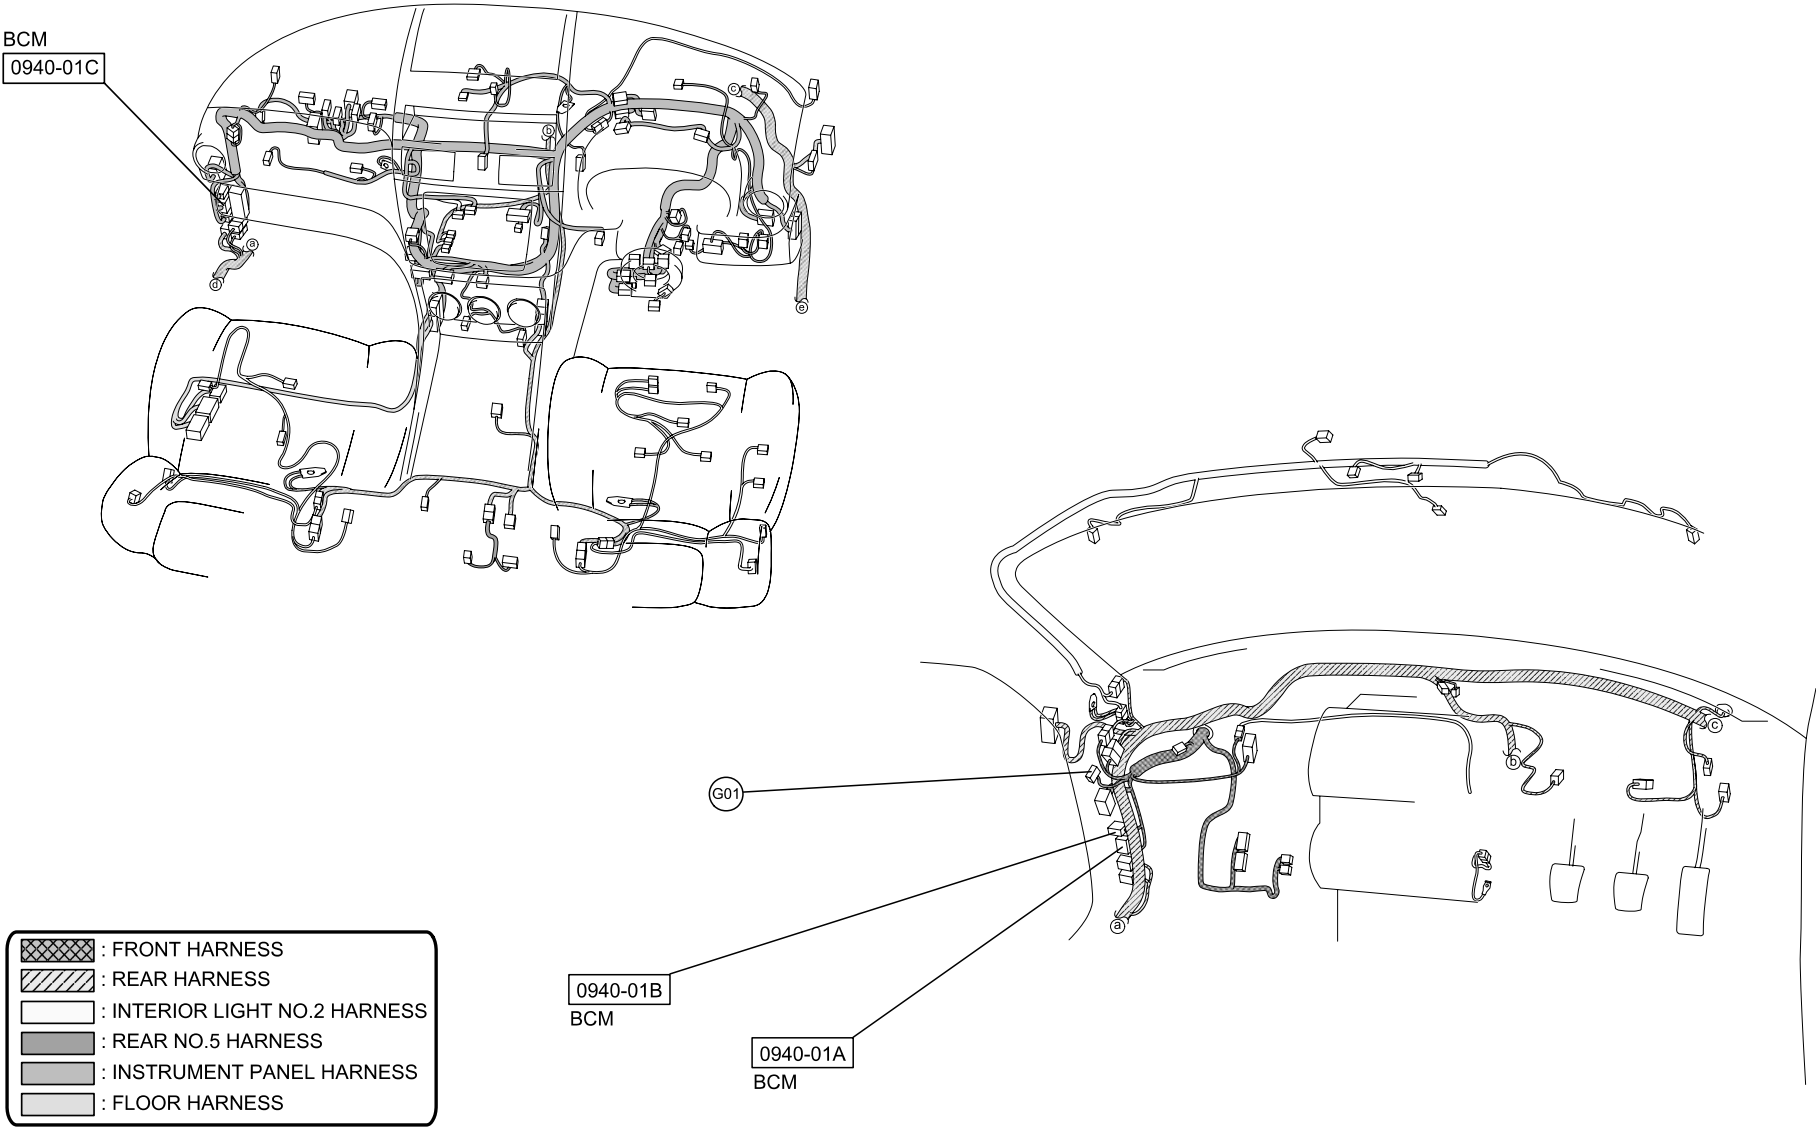


400

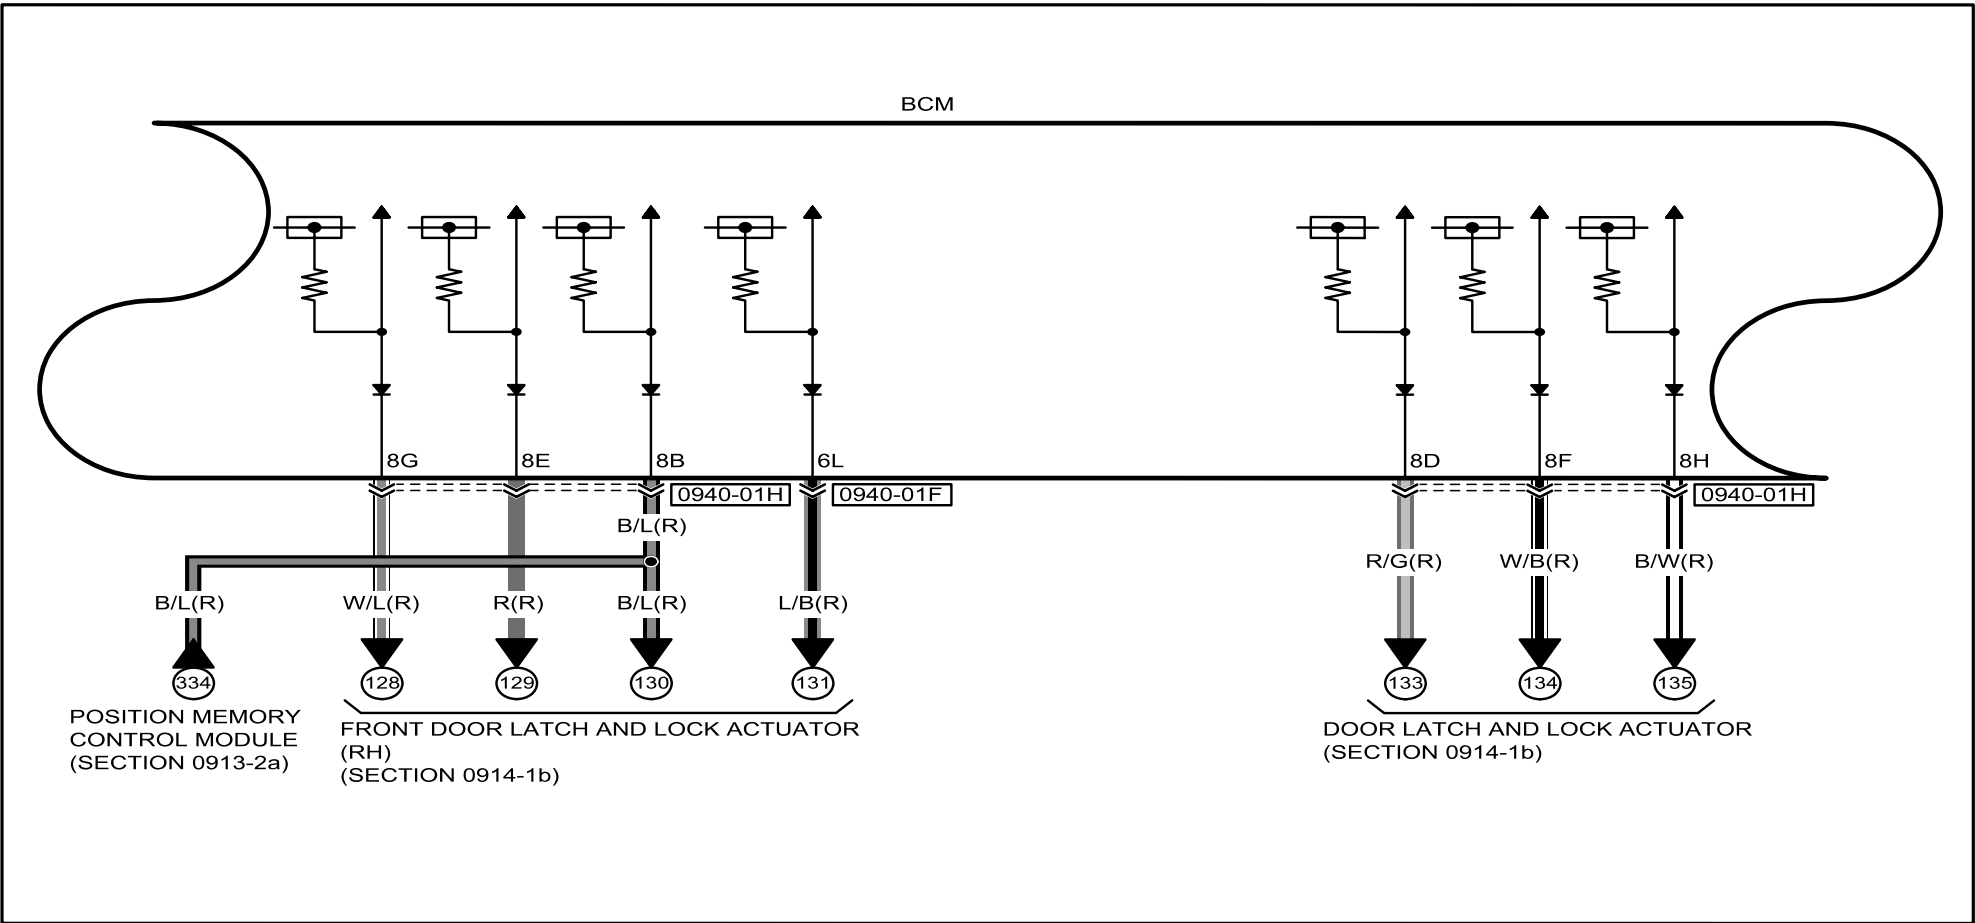




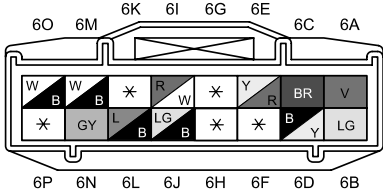
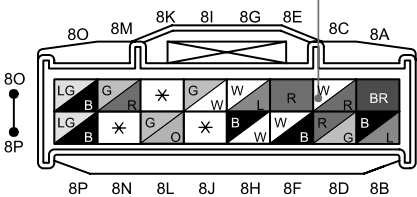
<p>0940-01F BCM</p> 	<p>0940-01H BCM</p> <p>: NOT USED</p> 			


401



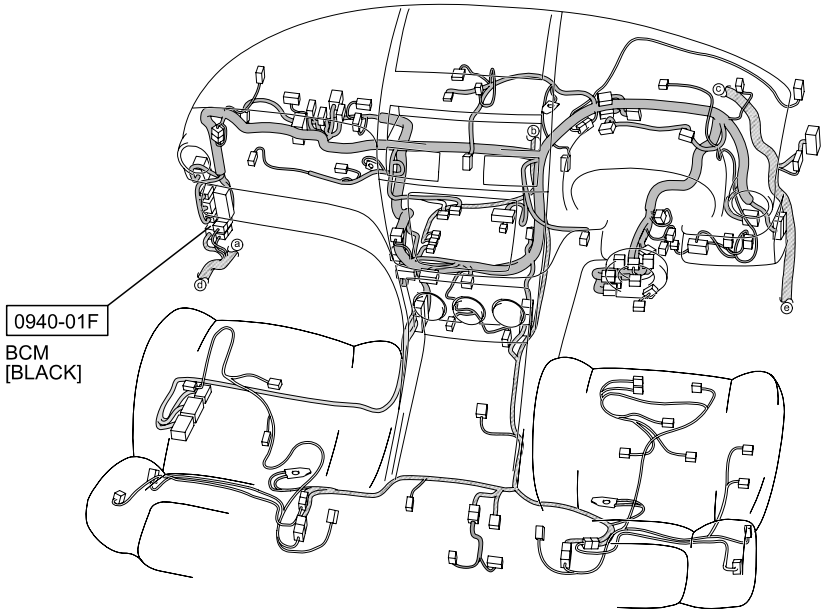



-  : FRONT HARNESS
-  : REAR HARNESS
-  : INTERIOR LIGHT NO.2 HARNESS
-  : REAR NO.5 HARNESS
-  : INSTRUMENT PANEL HARNESS
-  : FLOOR HARNESS

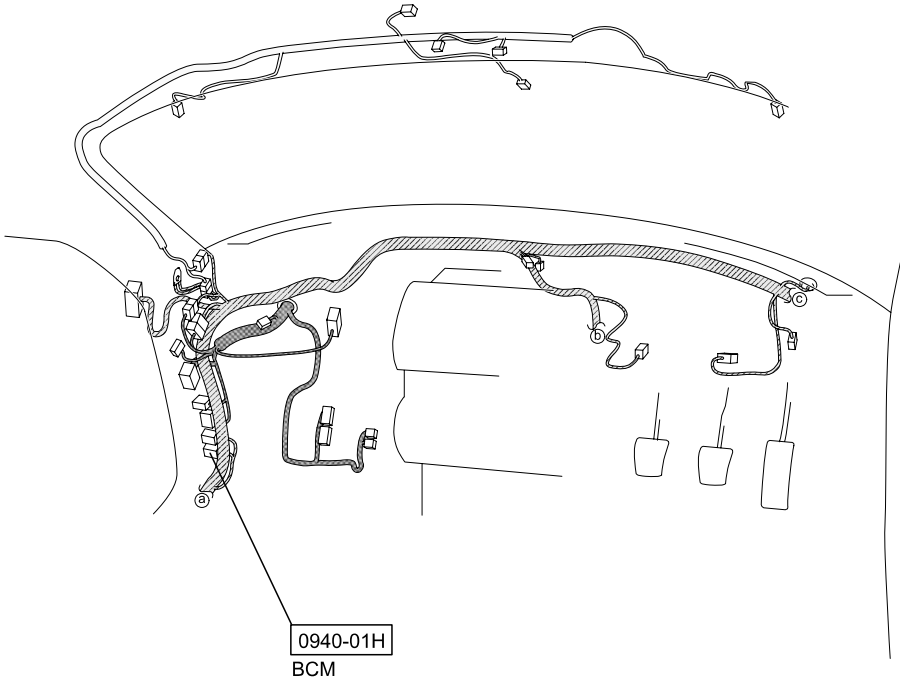

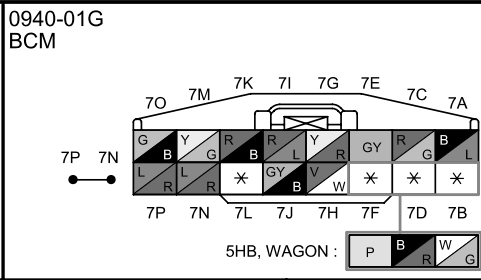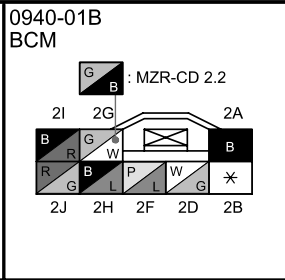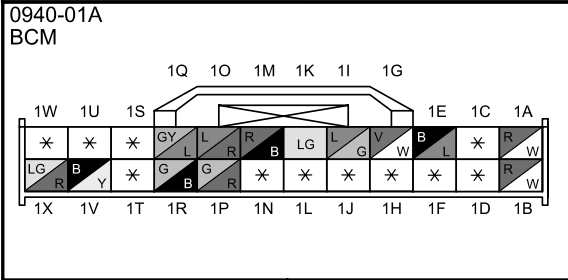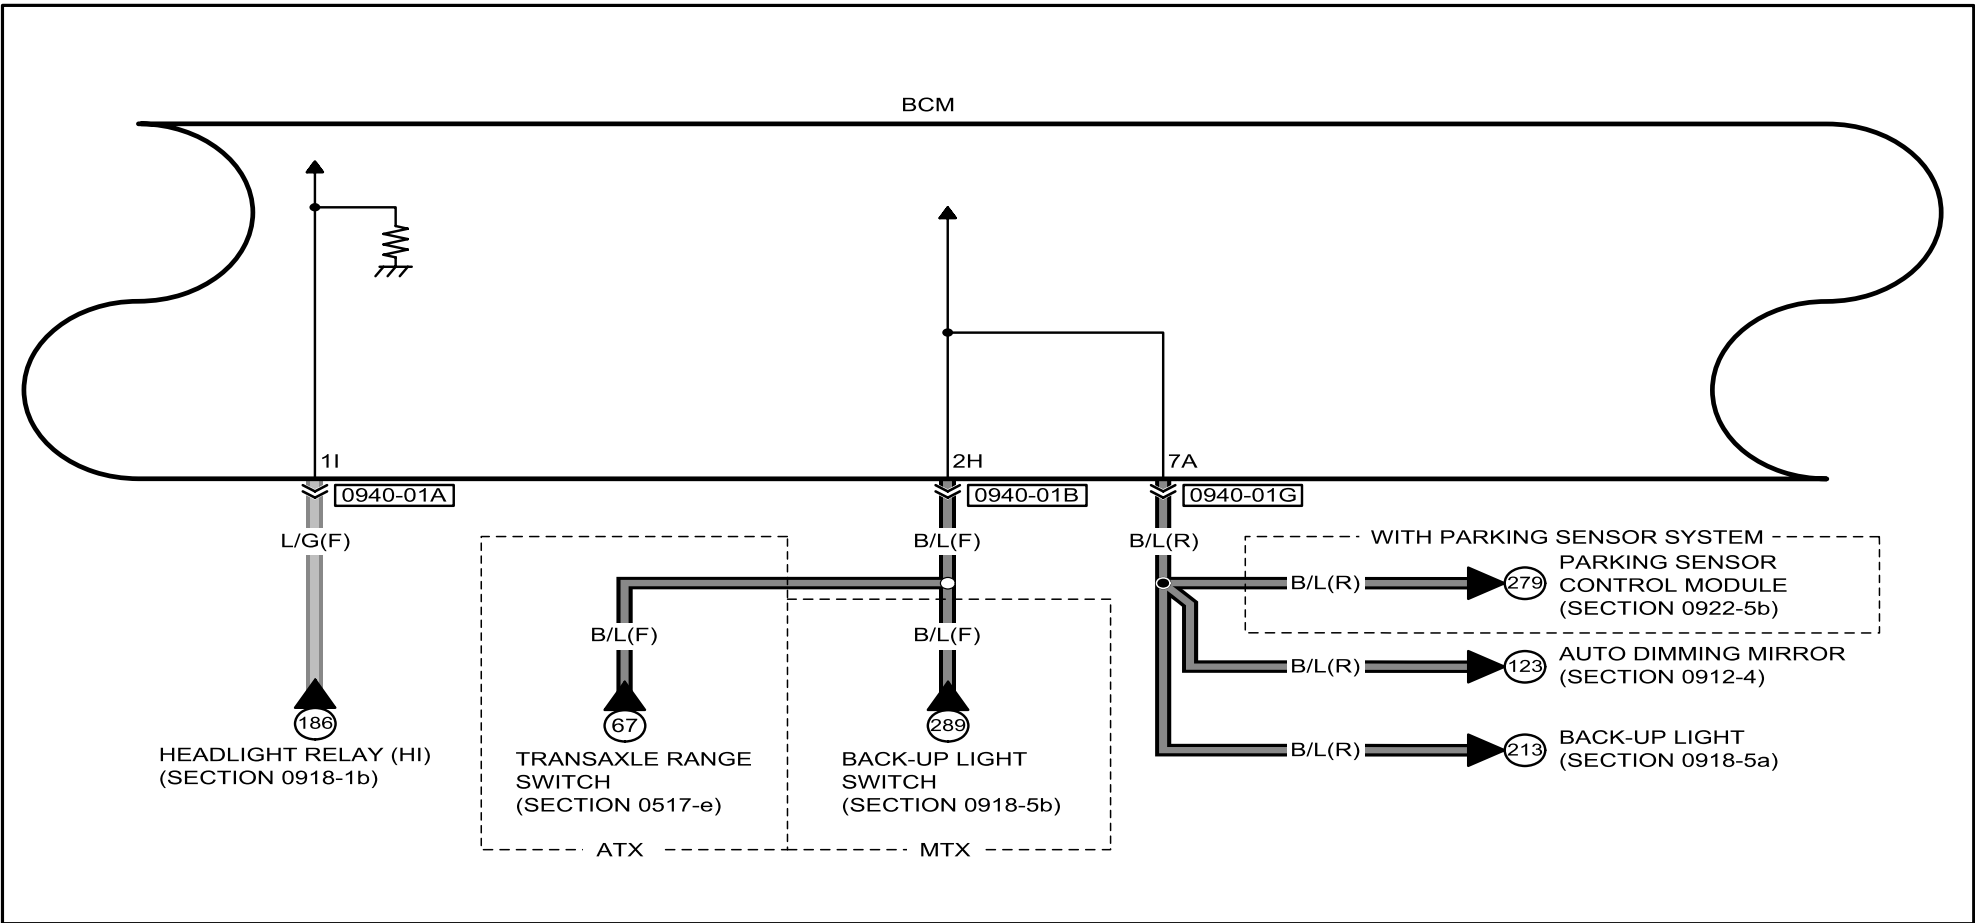


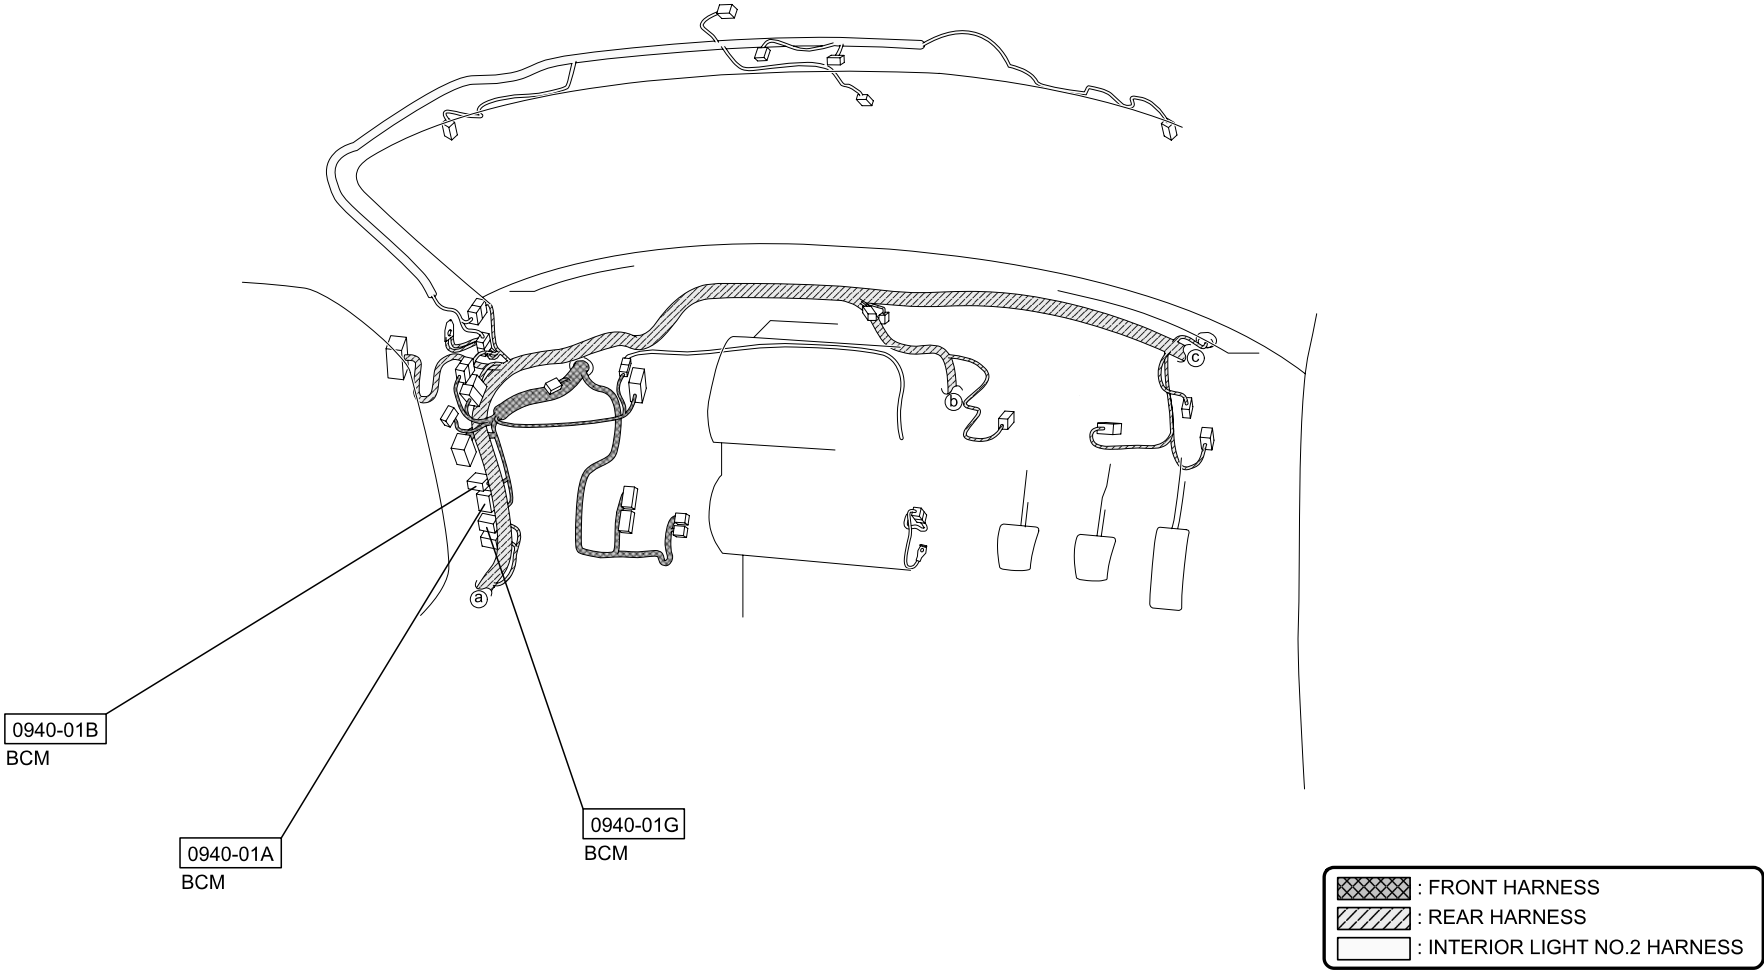

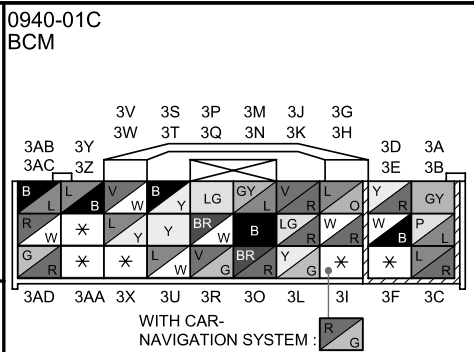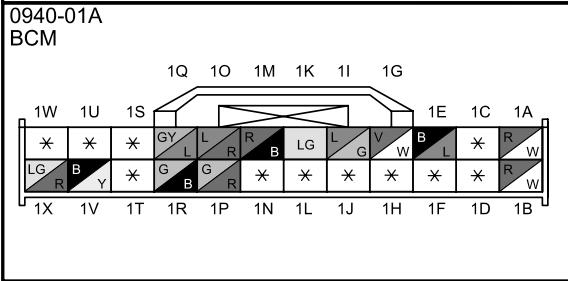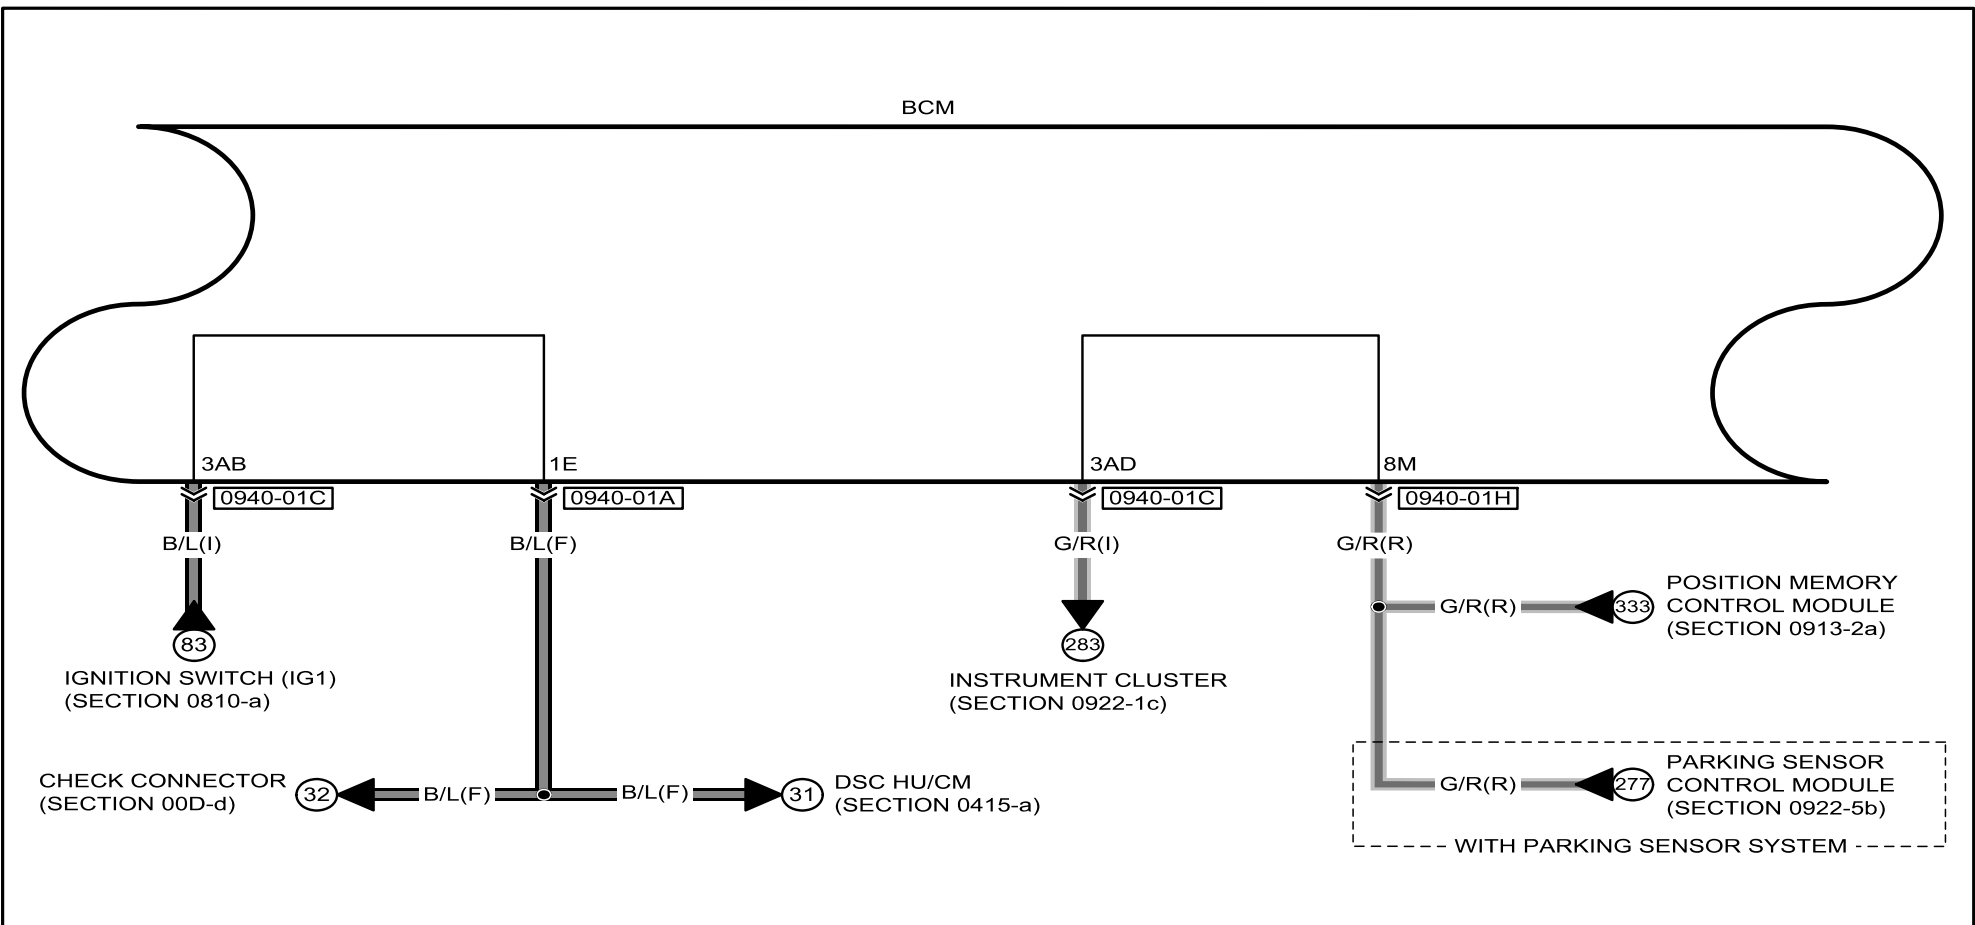


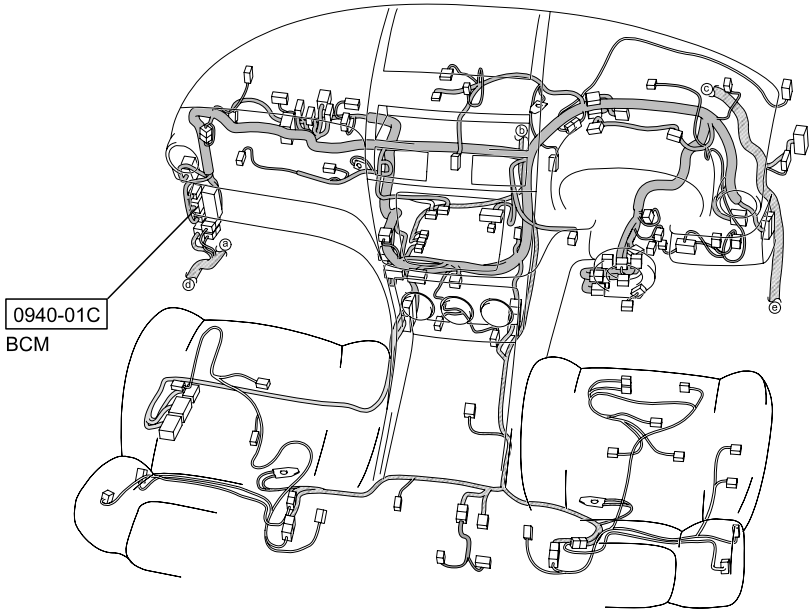


-  : FRONT HARNESS
-  : REAR HARNESS
-  : INTERIOR LIGHT NO.2 HARNESS
-  : REAR NO.5 HARNESS
-  : INSTRUMENT PANEL HARNESS
-  : FLOOR HARNESS

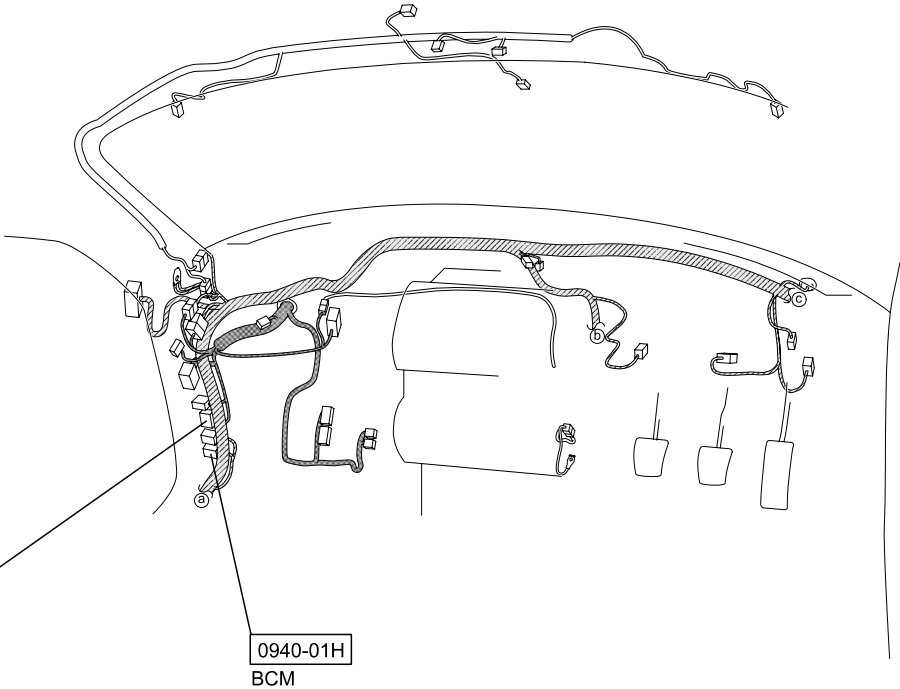


@12 : WITH HEADLIGHT CLEANER

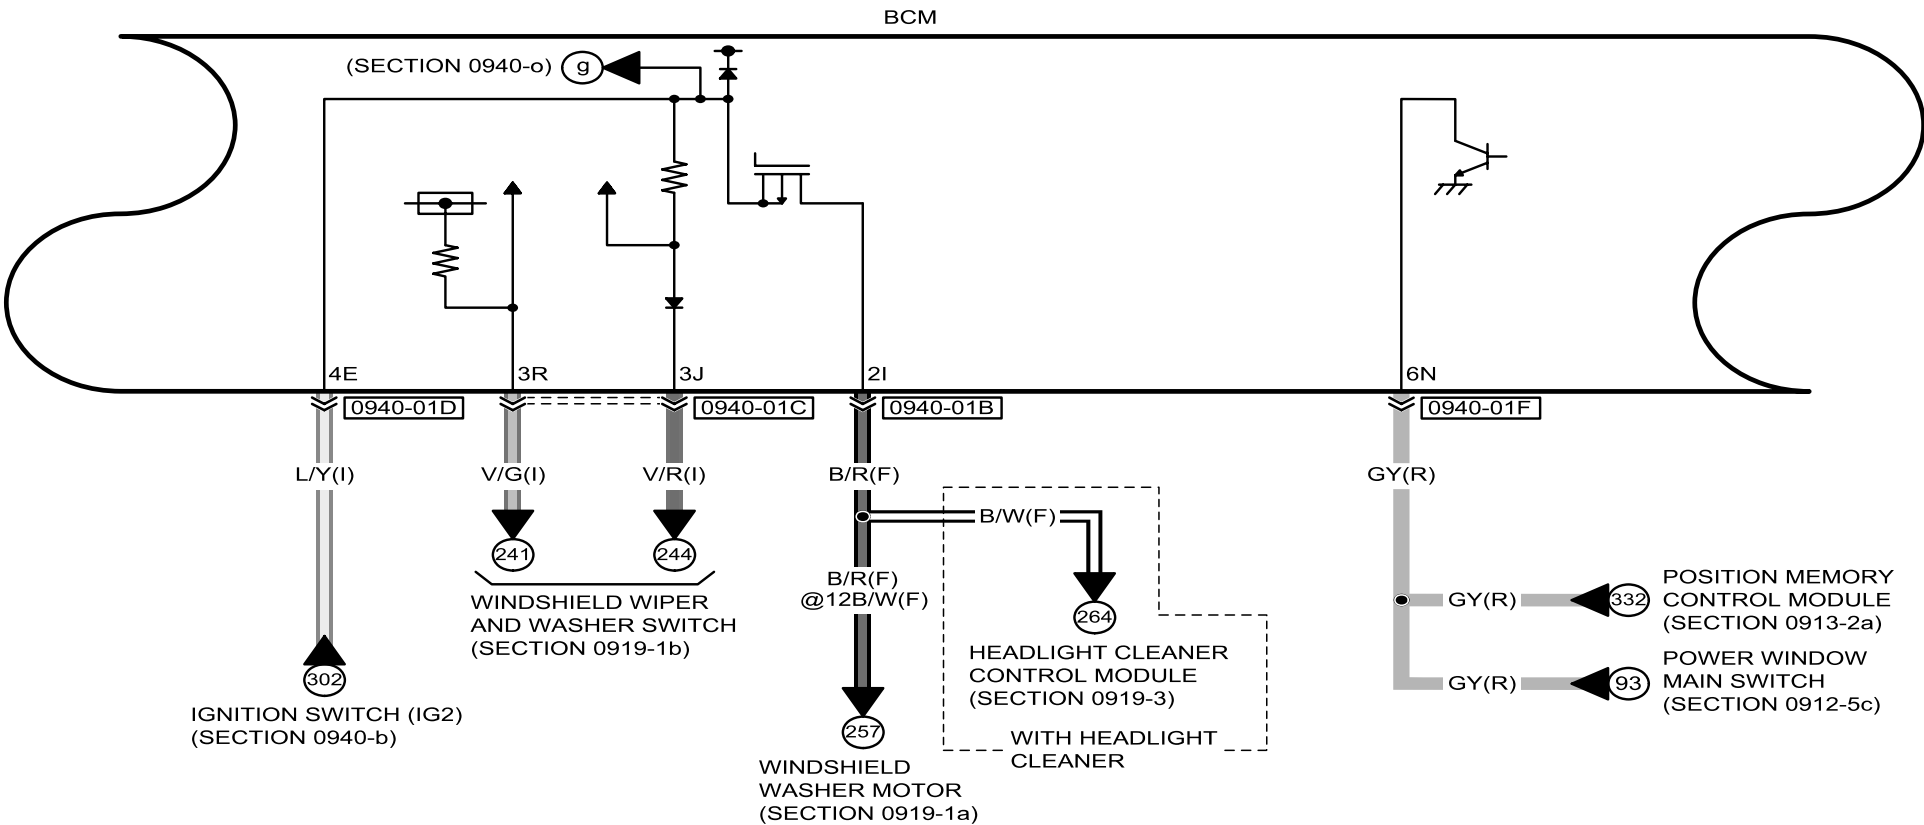


0940-01B
BCM

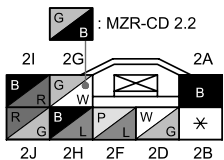


0940-01C
BCM

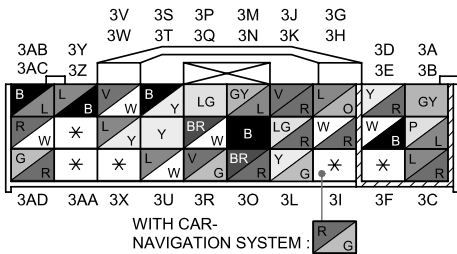



0940-01D
BCM

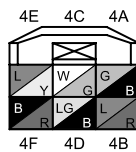


0940-01F
BCM

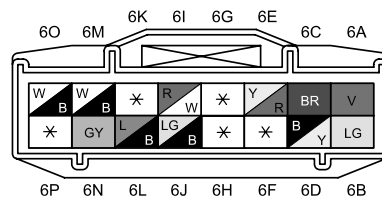

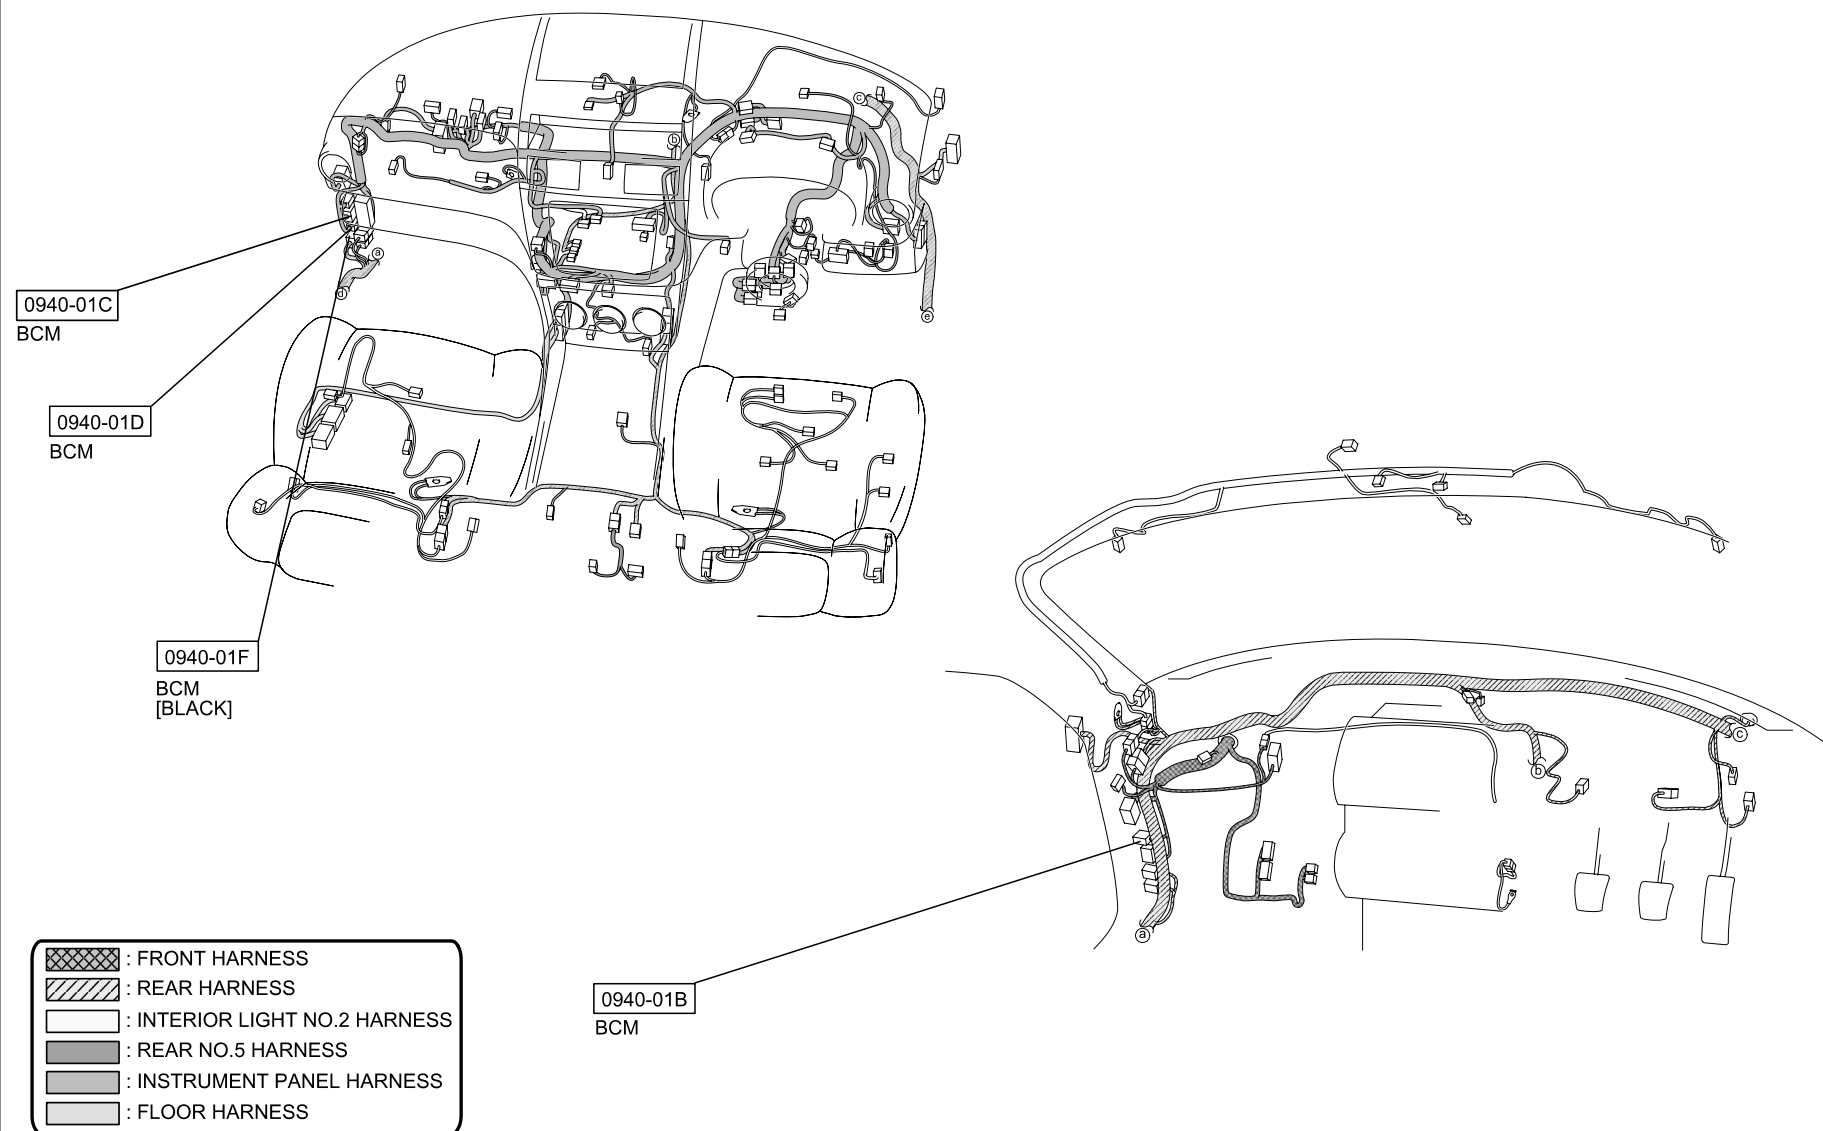


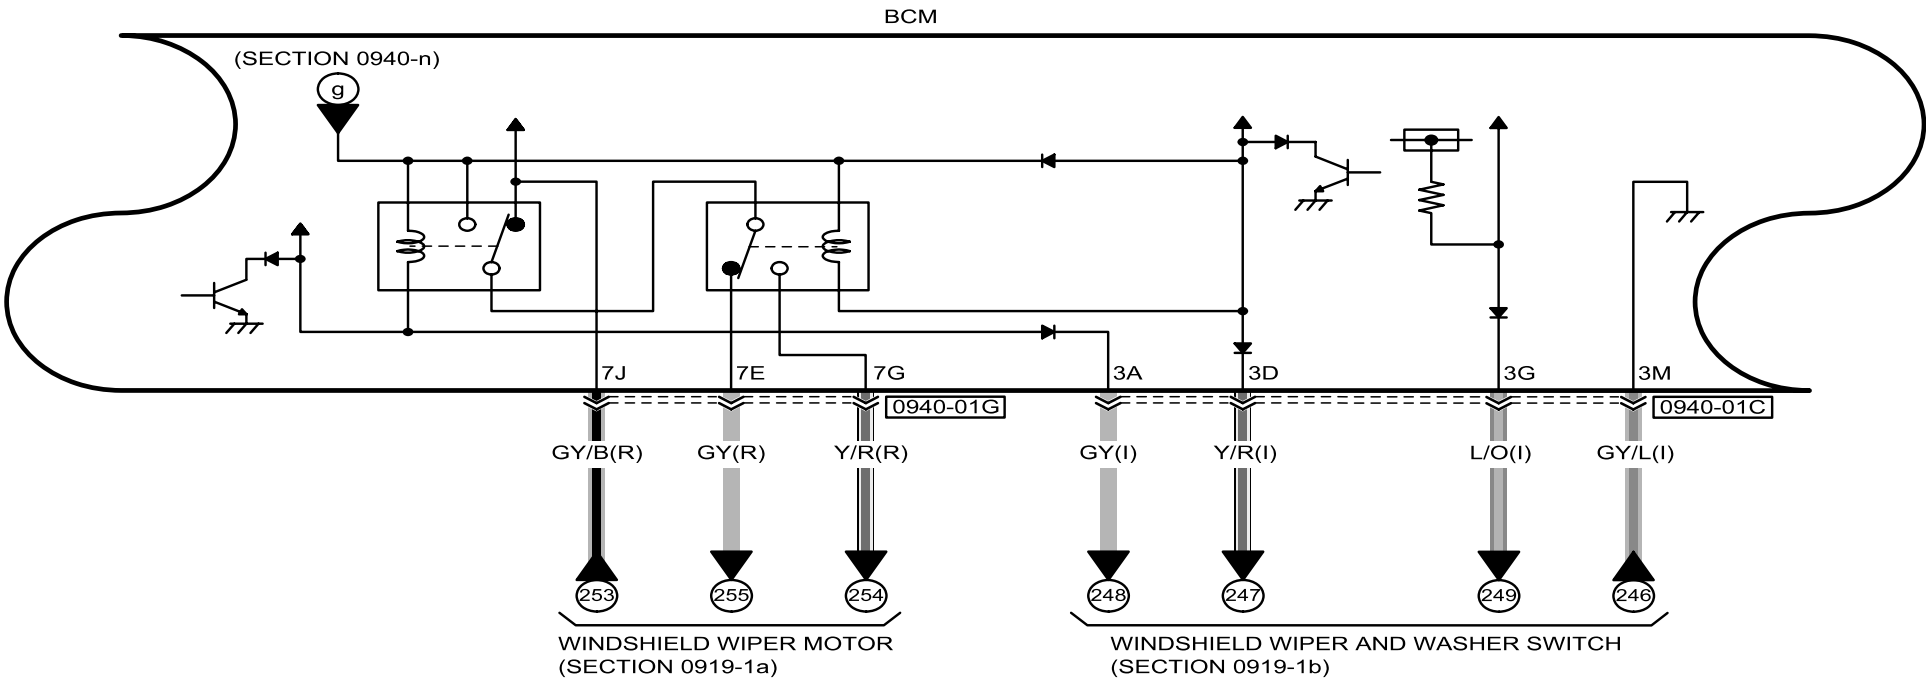


0940-01C
BCM

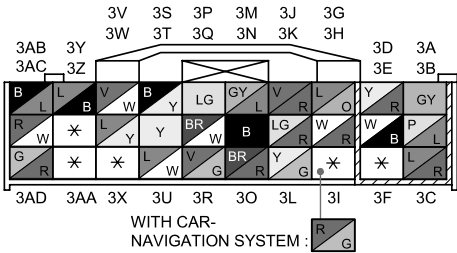

0940-01G
BCM

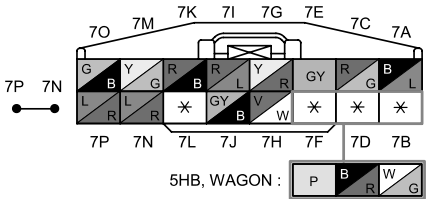



0940-01C
BCM

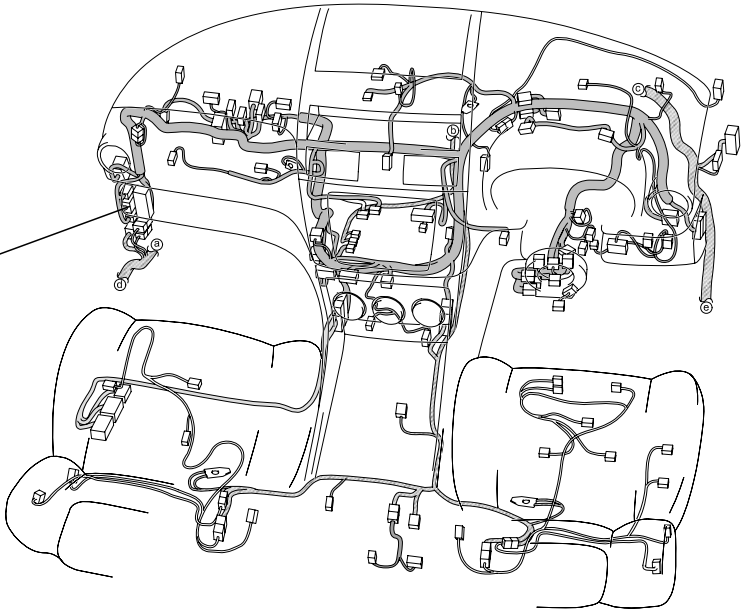


- FRONT HARNESS
- REAR HARNESS
- INTERIOR LIGHT NO.2 HARNESS
- REAR NO.5 HARNESS
- INSTRUMENT PANEL HARNESS
- FLOOR HARNESS

0940-01G
BCM

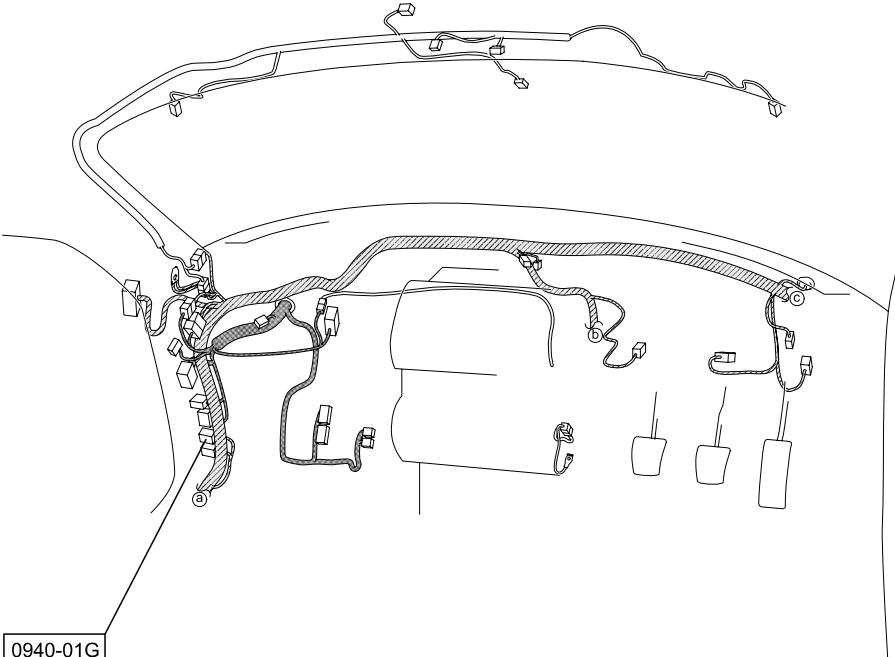


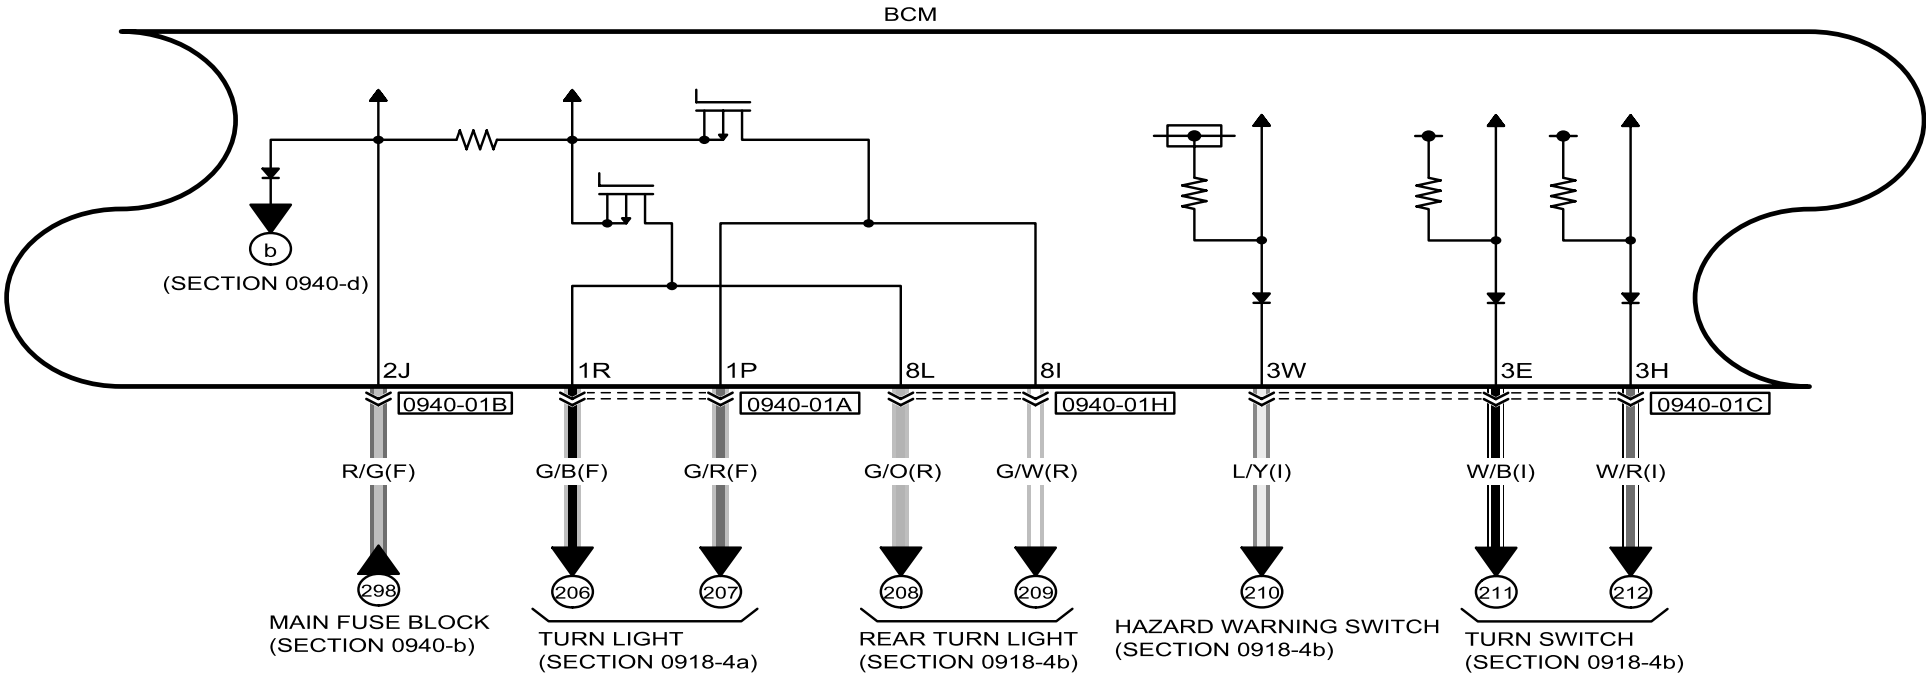


0940-01A
BCM

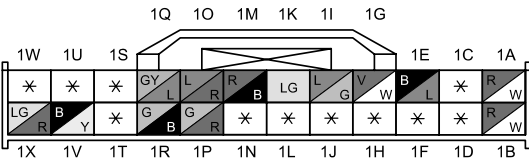

0940-01B
BCM

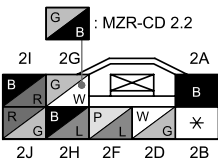


0940-01C
BCM

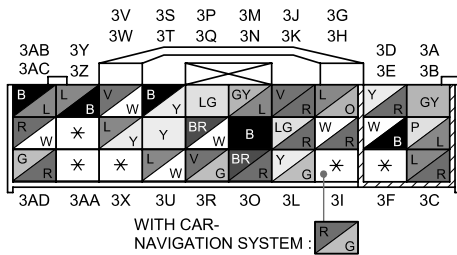

WITH CAR-NAVIGATION SYSTEM :

0940-01H
BCM

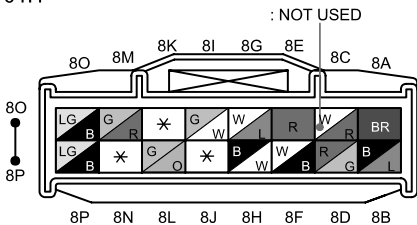


0940-01C
BCM


0940-01B
BCM



0940-01A
BCM


0940-01H
BCM

- : FRONT HARNESS
- : REAR HARNESS
- : INTERIOR LIGHT NO.2 HARNESS
- : REAR NO.5 HARNESS
- : INSTRUMENT PANEL HARNESS
- : FLOOR HARNESS

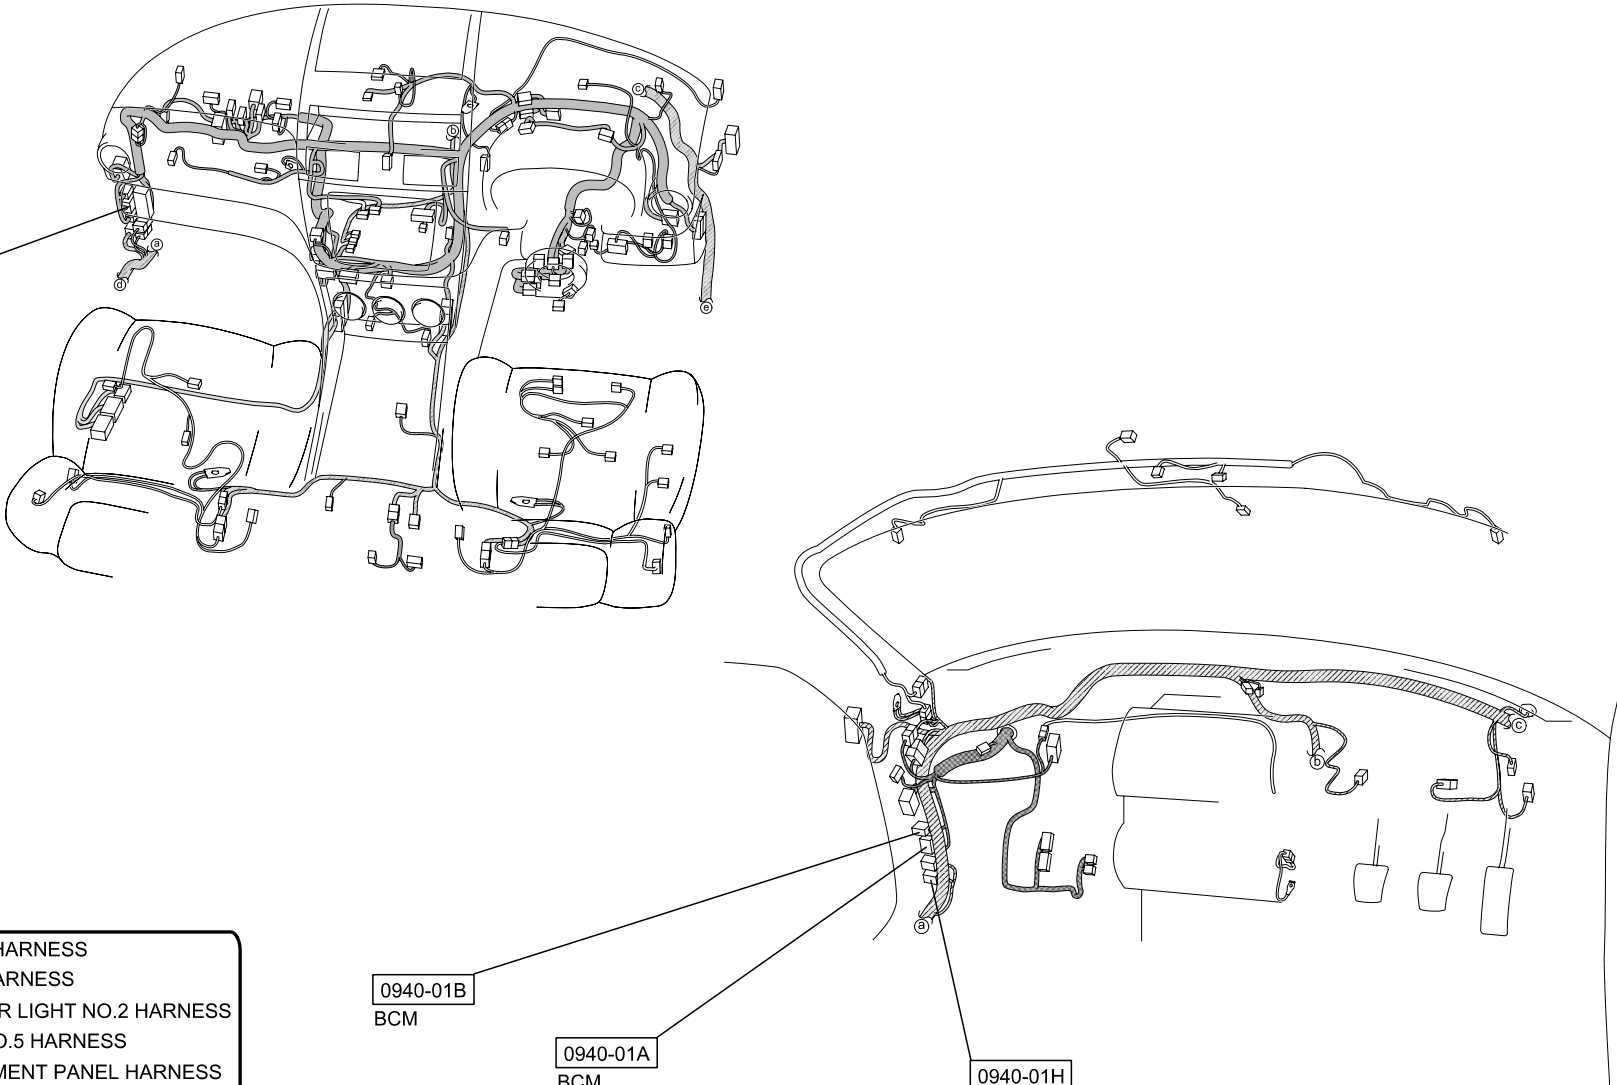


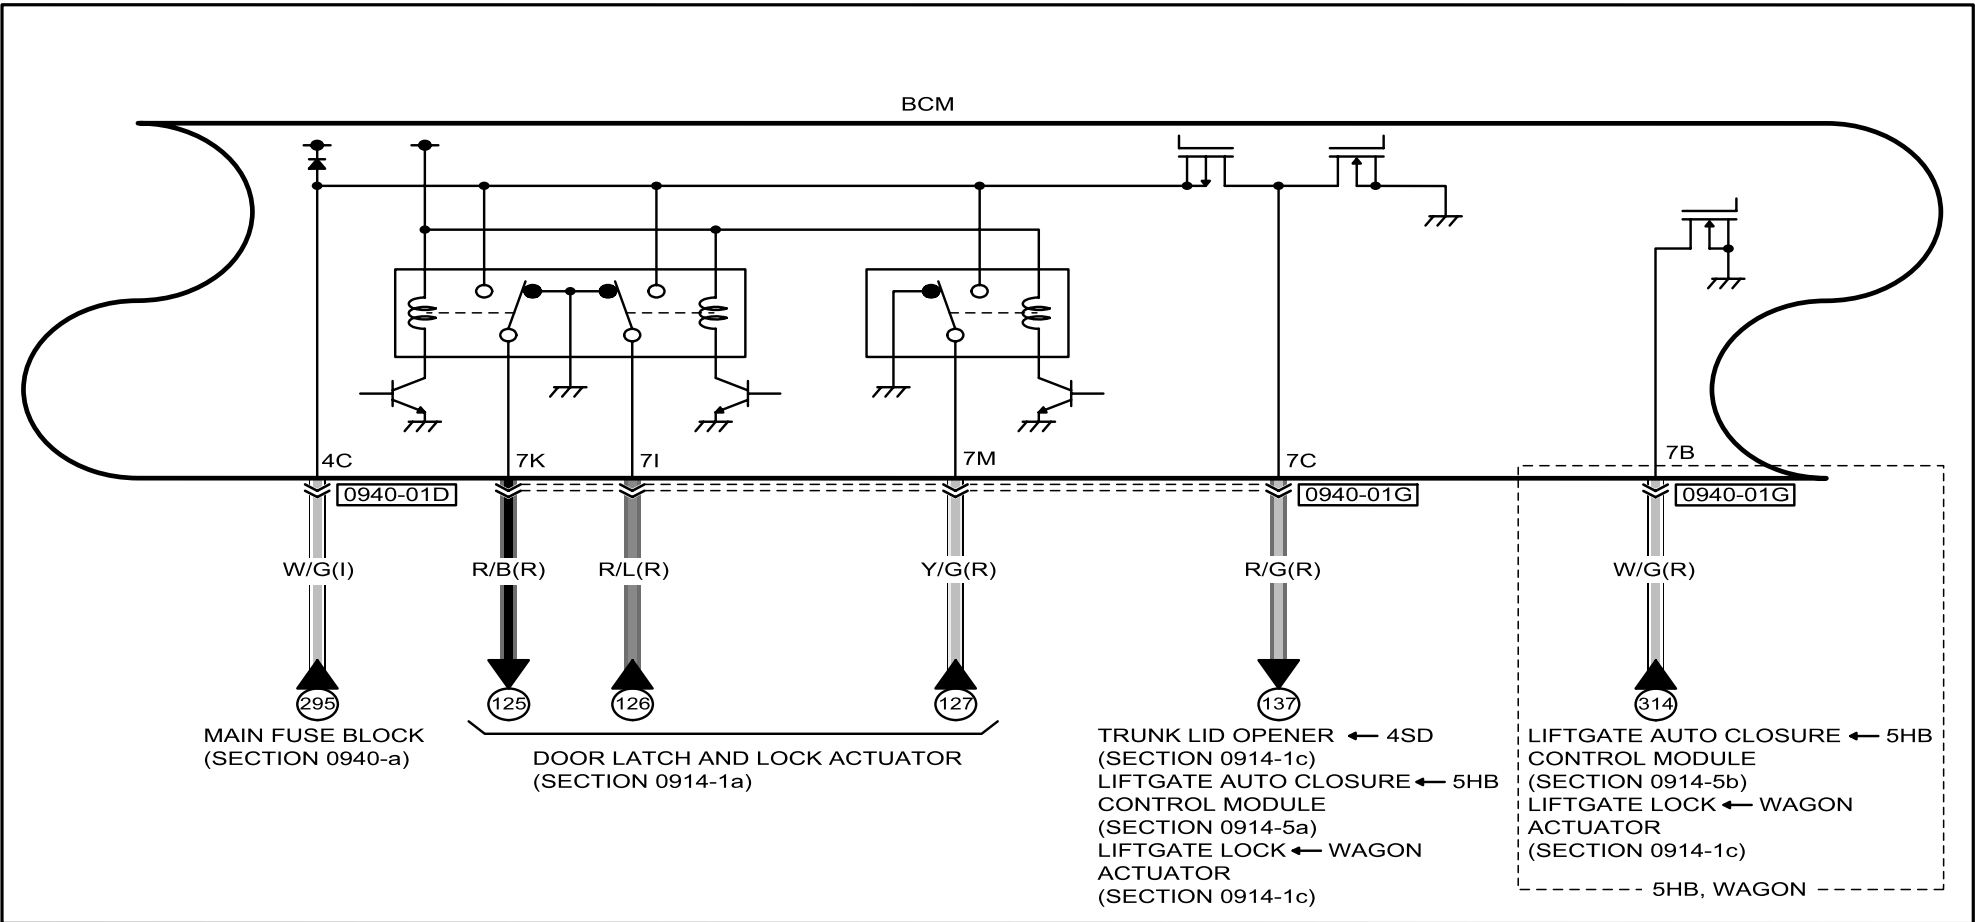

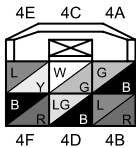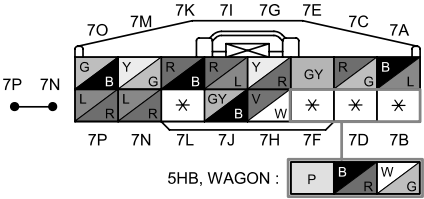
<p>0940-01D BCM</p> 	<p>0940-01G BCM</p> 			

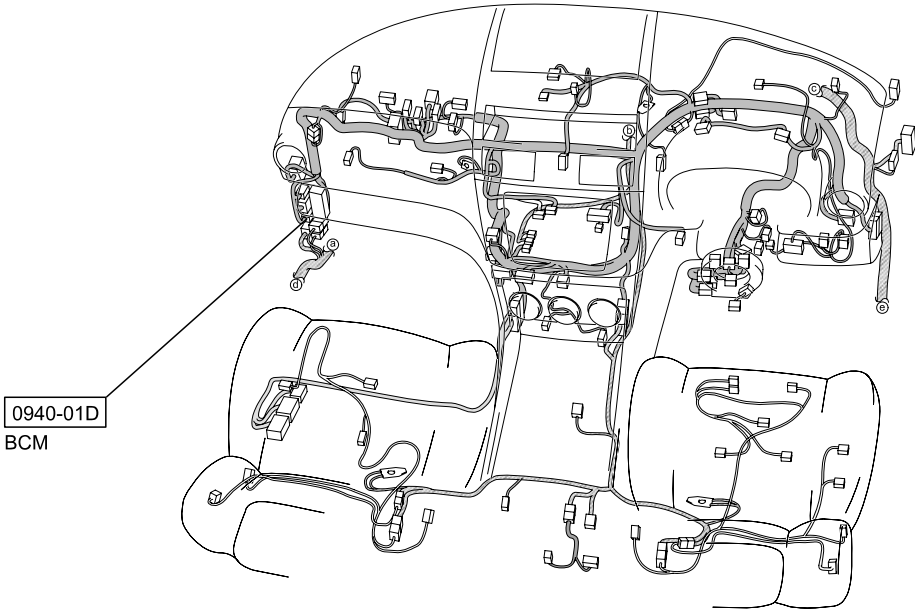


- FRONT HARNESS
- REAR HARNESS
- INTERIOR LIGHT NO.2 HARNESS
- REAR NO.5 HARNESS
- INSTRUMENT PANEL HARNESS
- FLOOR HARNESS

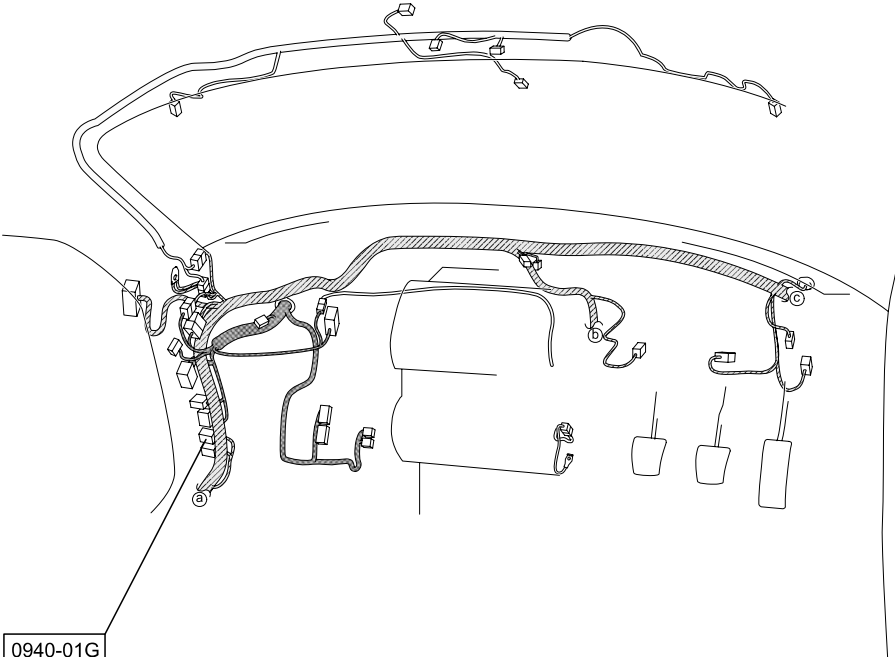


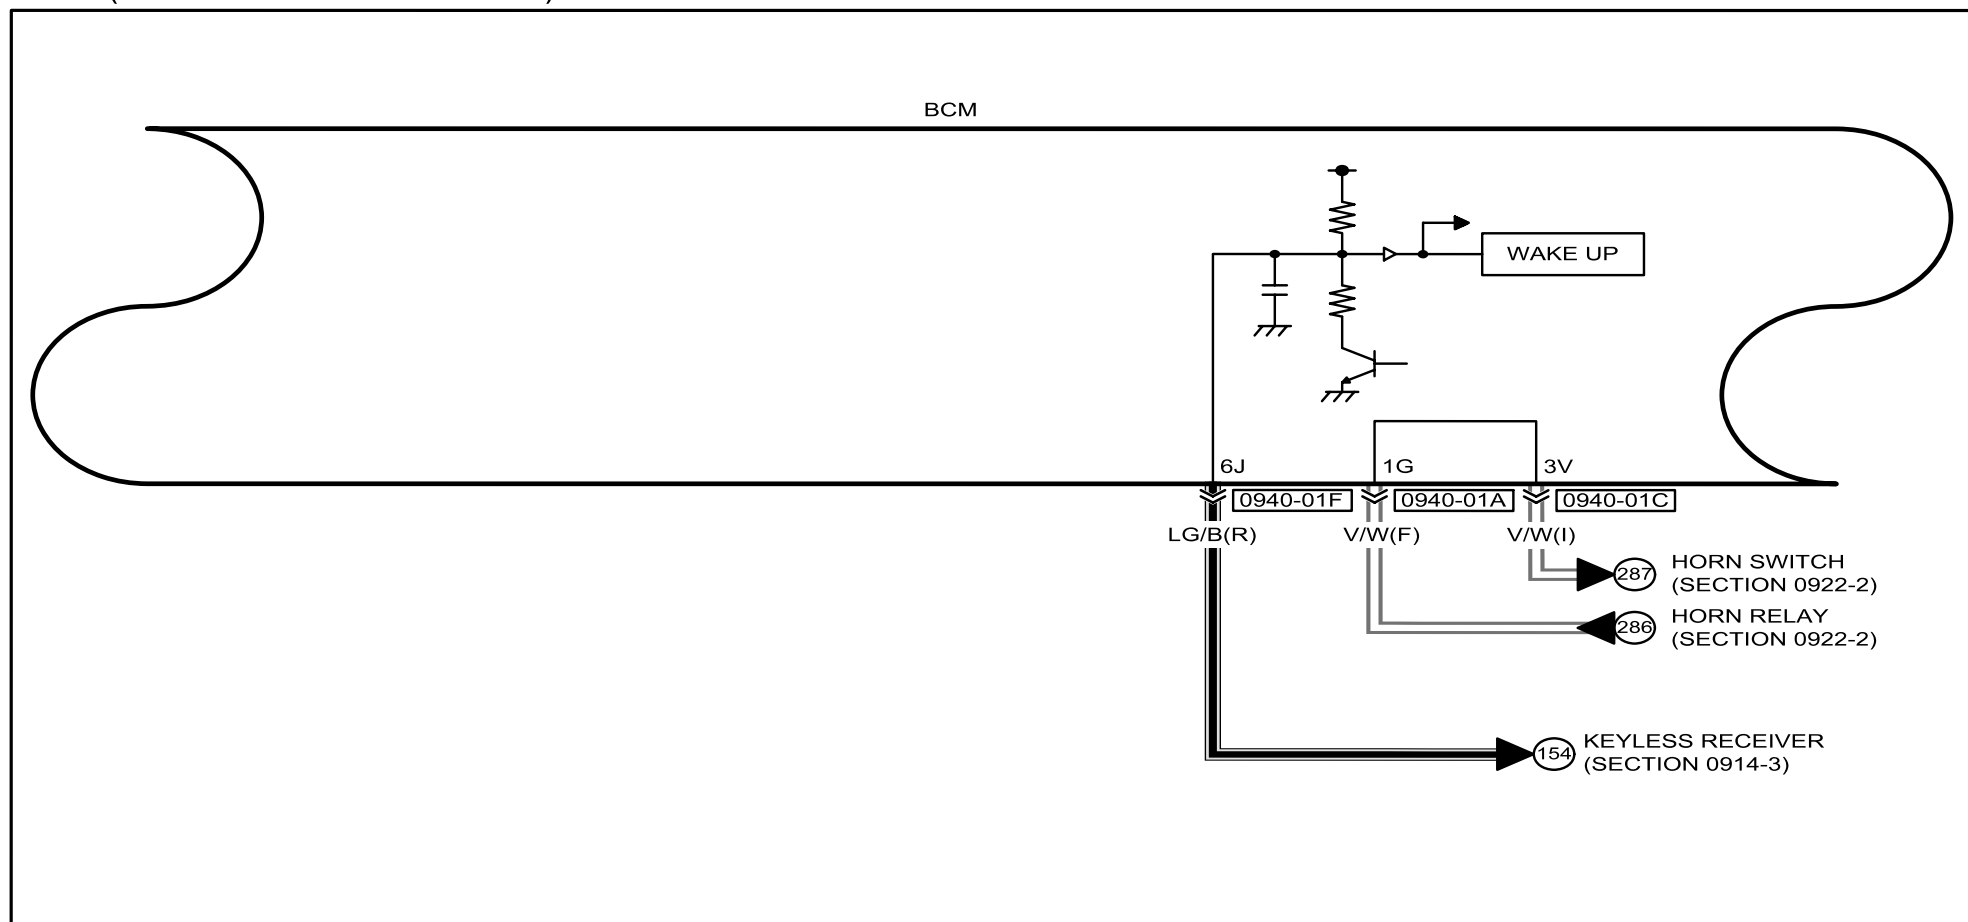


0940-01A
BCM

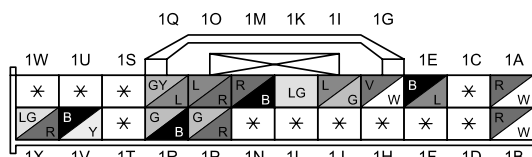



0940-01C
BCM

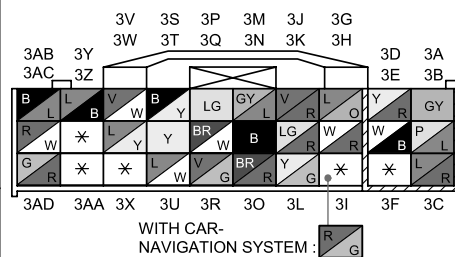


0940-01F
BCM

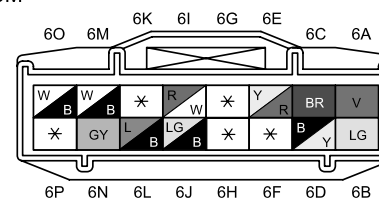

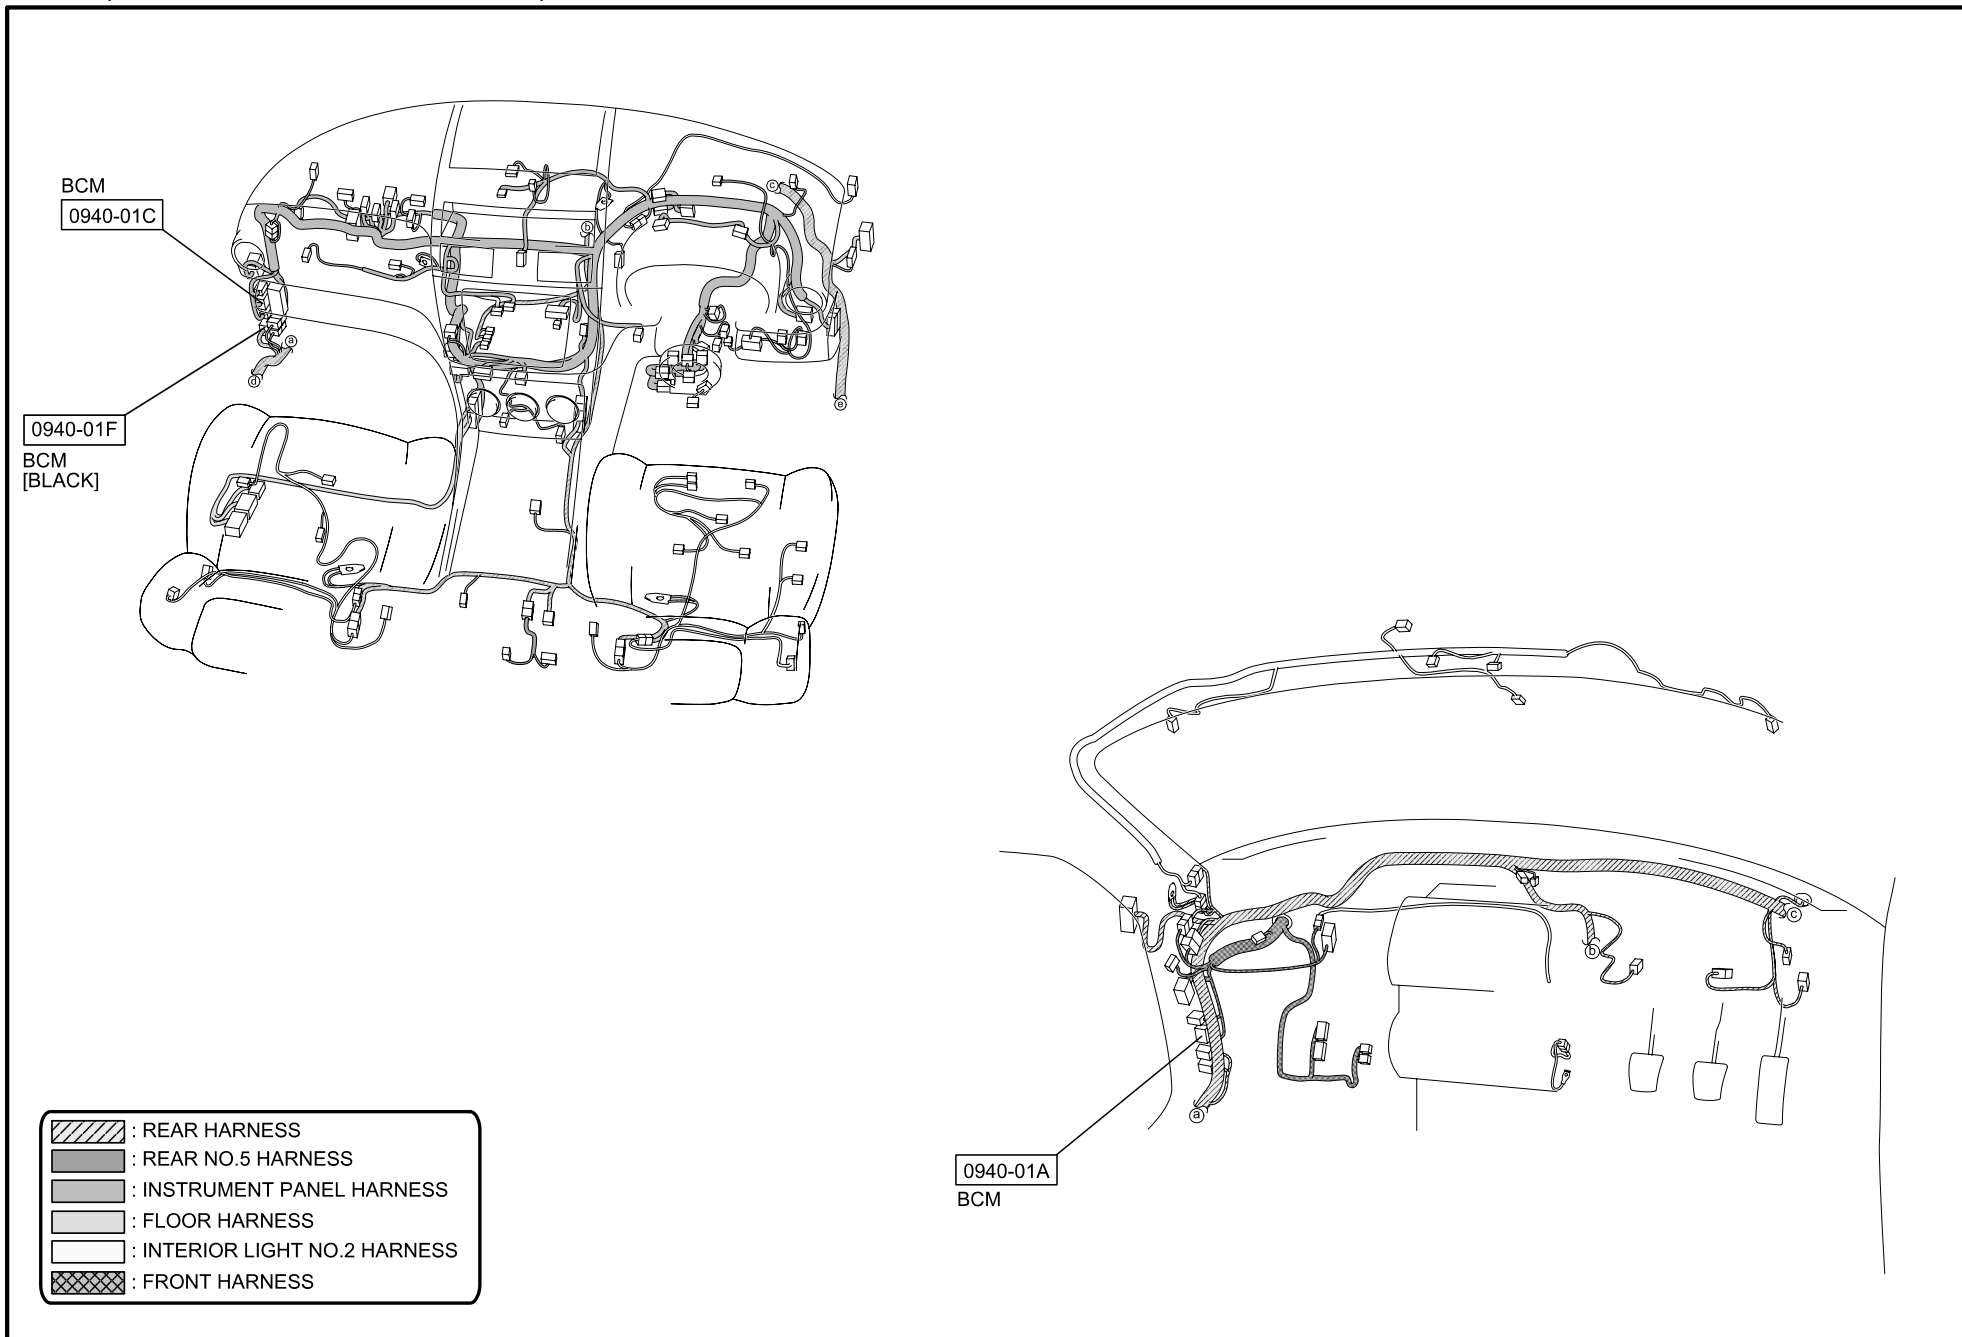


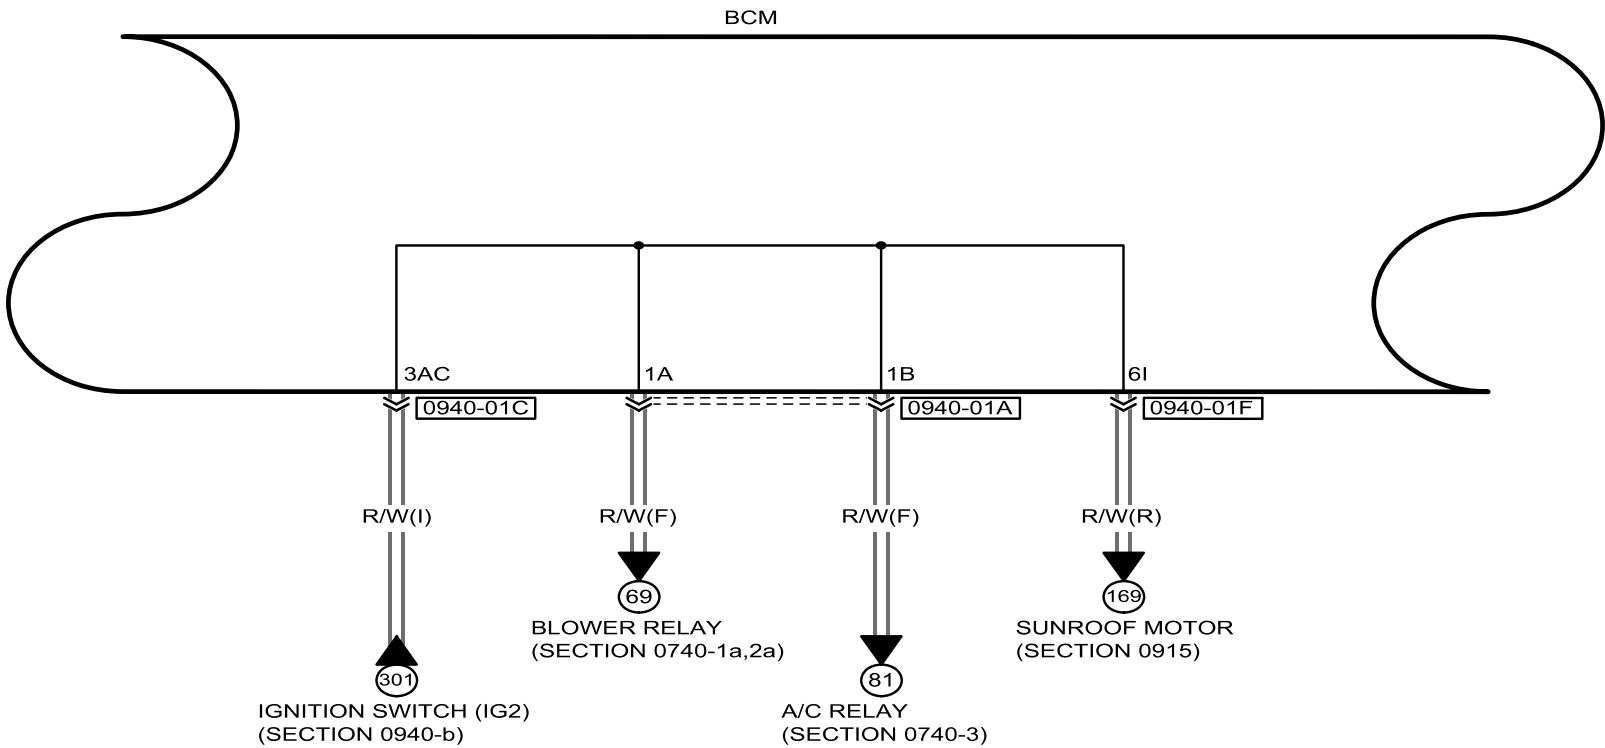


0940-01A
BCM

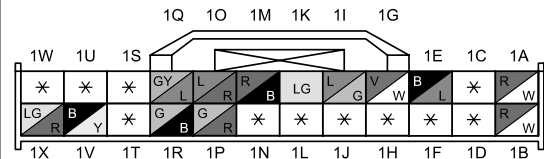

0940-01C
BCM

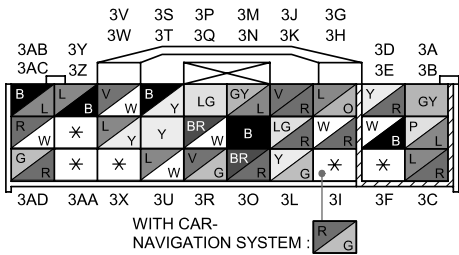



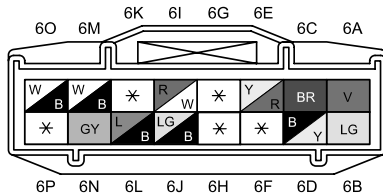



0940-01F
BCM





0940-01C
BCM





0940-01F
BCM
[BLACK]

	: FRONT HARNESS
	: REAR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS


0940-01A
BCM

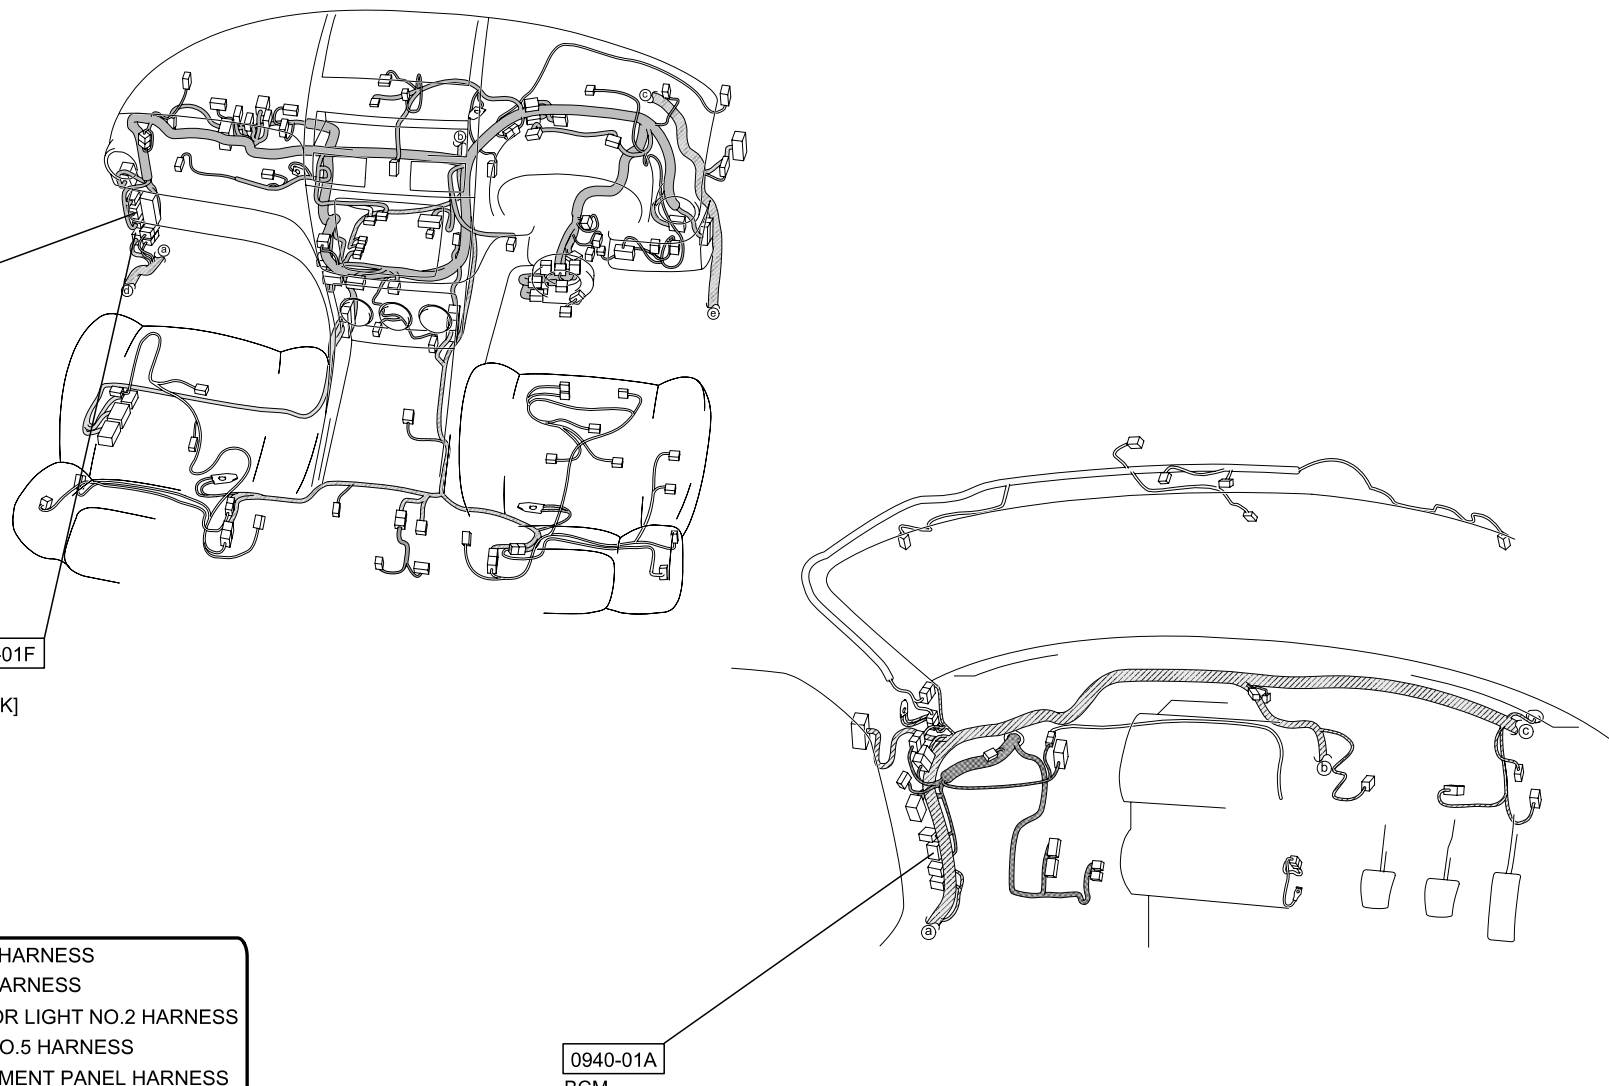

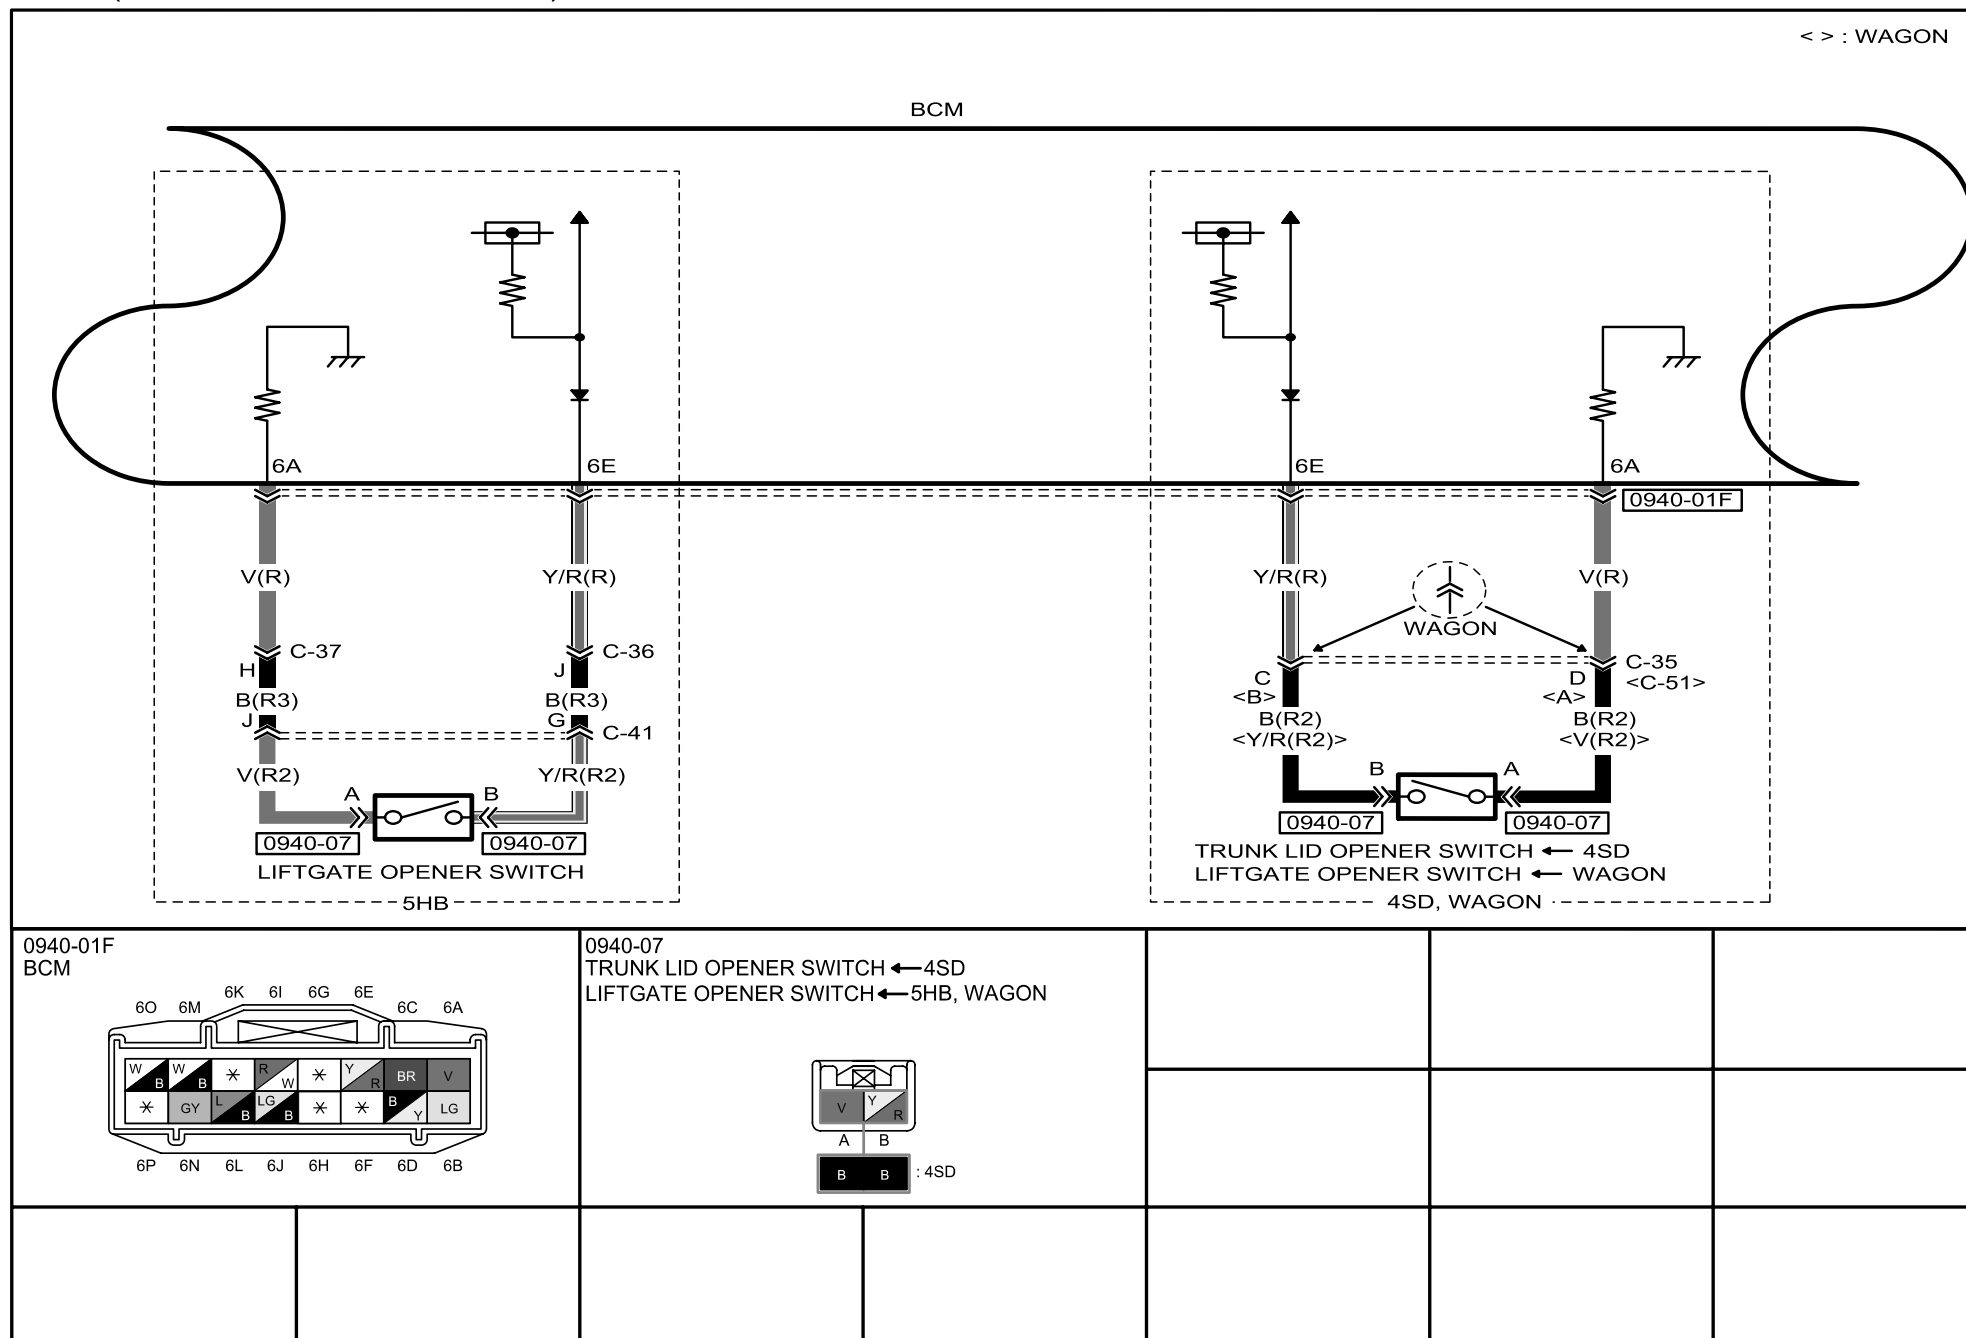


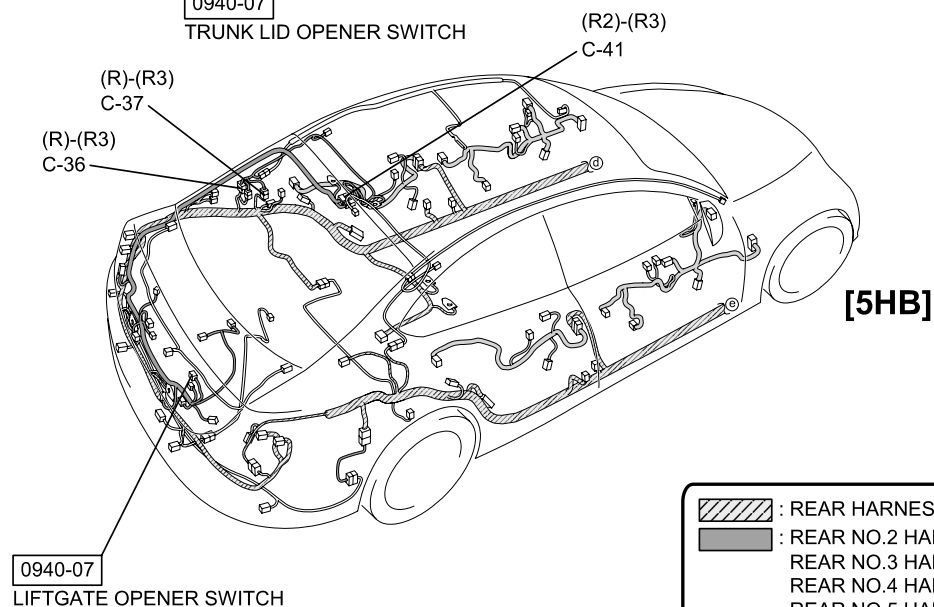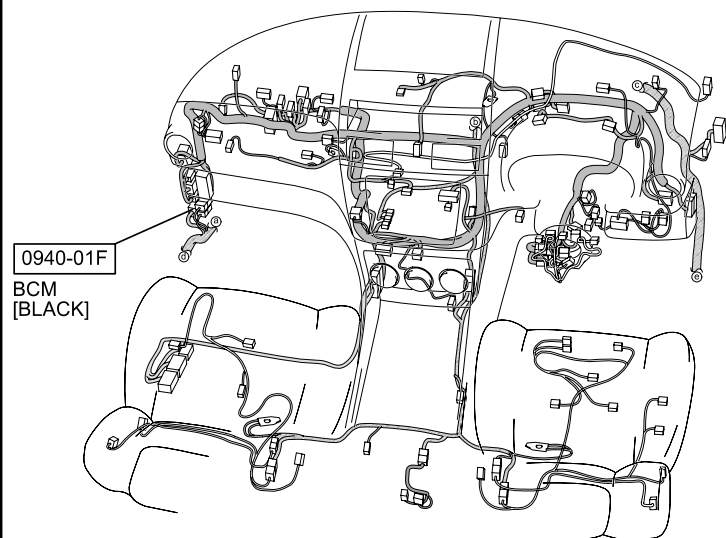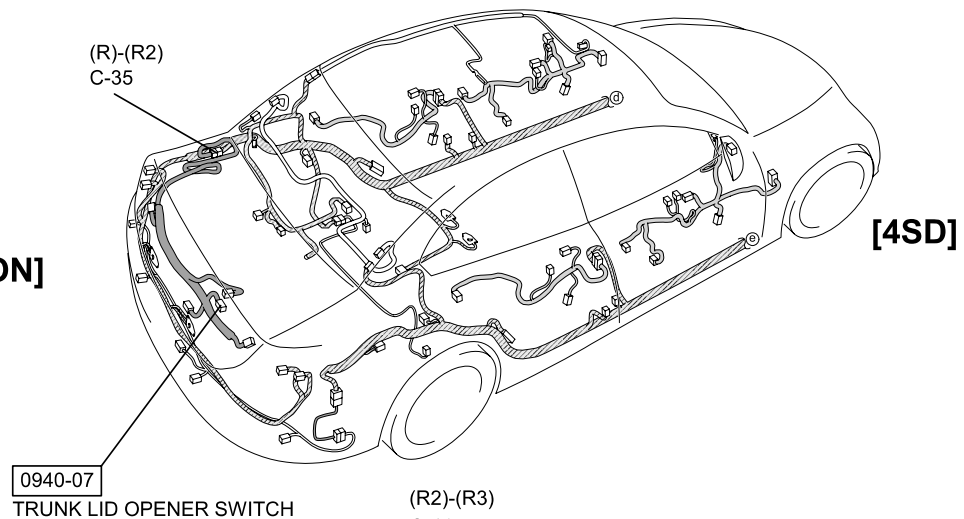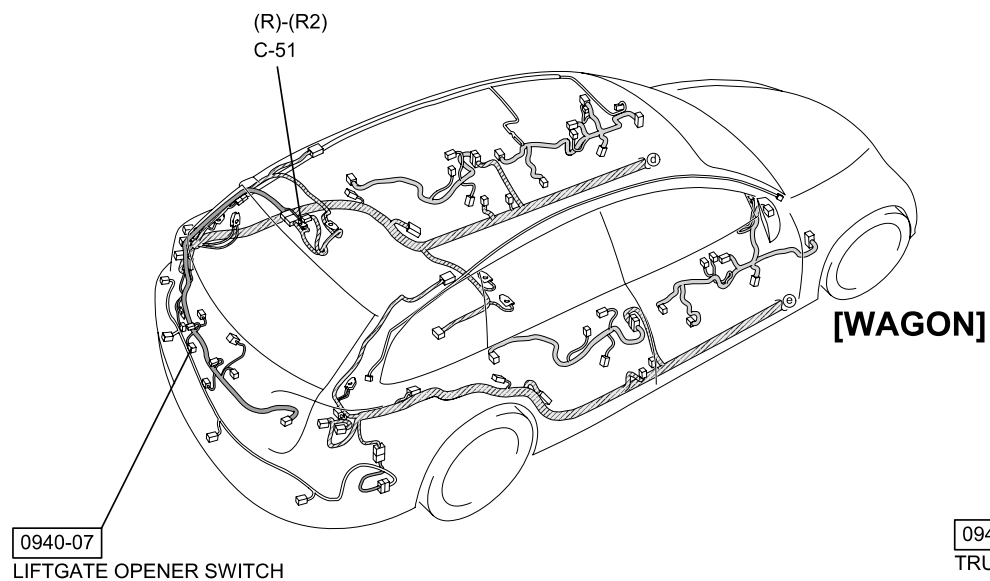


	: REAR HARNESS
	: REAR NO.2 HARNESS REAR NO.3 HARNESS REAR NO.4 HARNESS REAR NO.5 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS

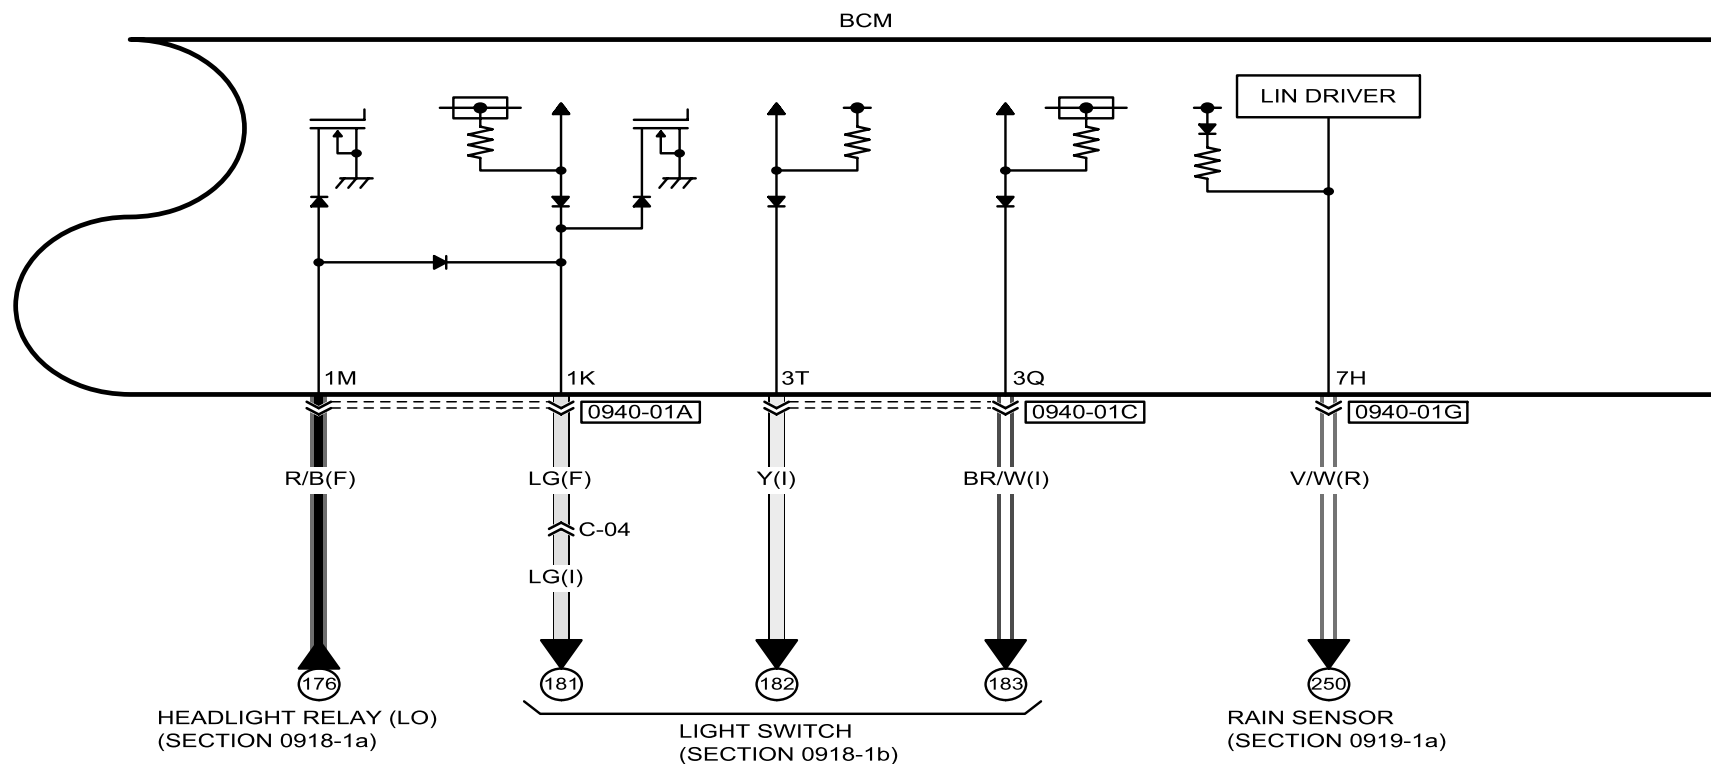


0940-01A
BCM



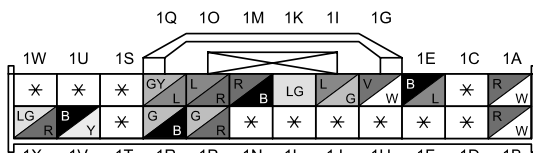


0940-01C
BCM

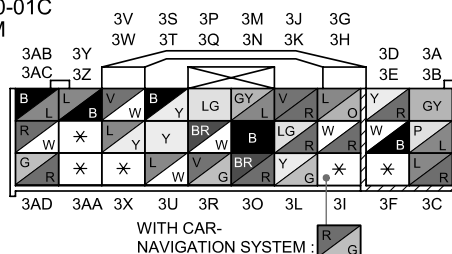

0940-01G
BCM

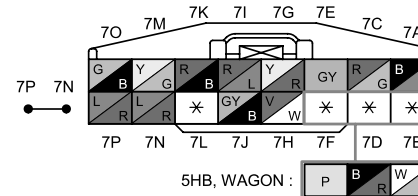

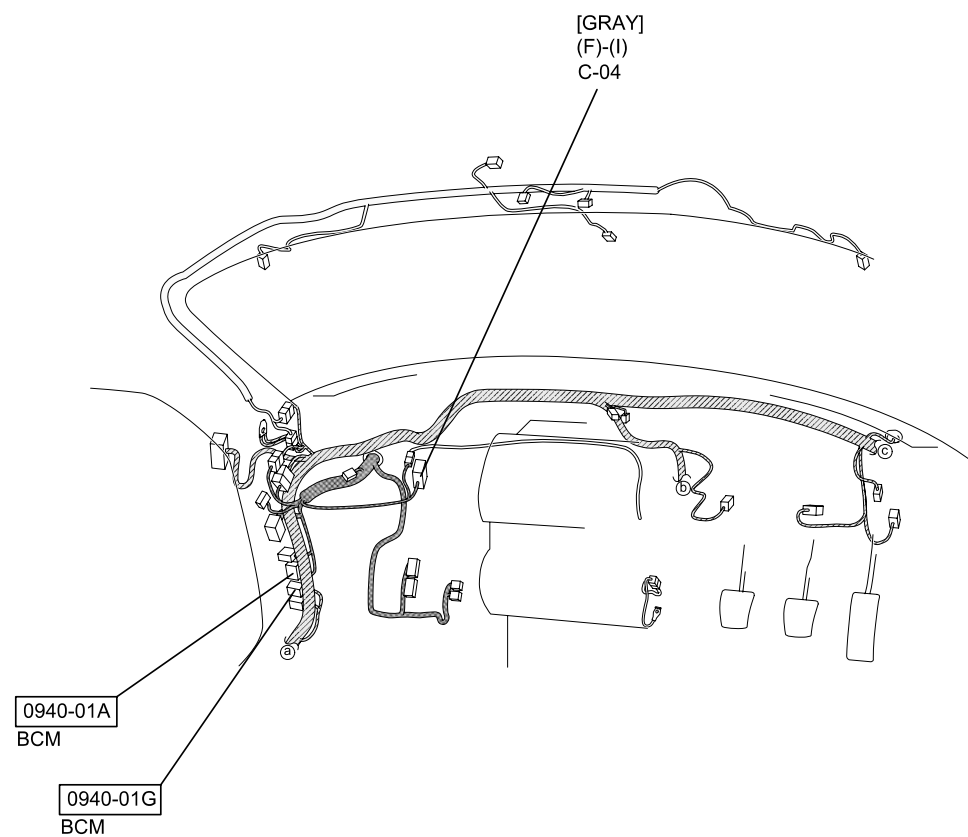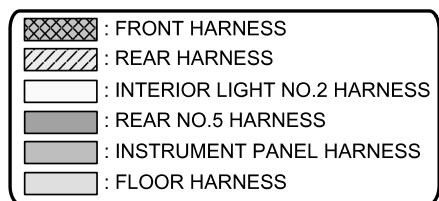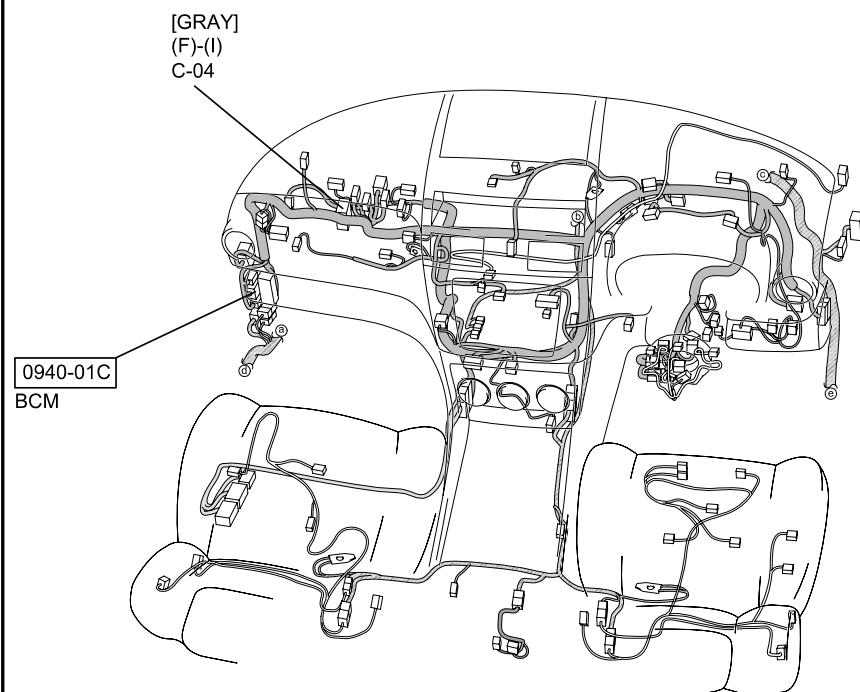

ALPHABETICAL INDEX

A	
A/C RELAY	23,174
A/F SENSOR	102,110
ABBREVIATIONS	12
ABS WHEEL-SPEED SENSOR	134
ACCELERATOR PEDAL POSITION SENSOR	96,112
ACCESSORY SOCKET	298
AFS CONTROL MODULE	274
AFS OFF SWITCH	274
AIR BAG MODULE	176
AIR INTAKE ACTUATOR	158,166
AIR MIX ACTUATOR	160,168
AIRFLOW MODE ACTUATOR	160,170
AMBIENT TEMPERATURE SENSOR	360
ANTENNA	306,318
AT MAIN RELAY	23,138
AUDIO AMPLIFIER	316
AUDIO UNIT	300,312
AudioPilot®2 MICROPHONE	320
AUTO CLOSURE MOTOR	230
AUTO DIMMING MIRROR	194
AUTO LEVELING CONTROL MODULE	274
AUTO LEVELING SENSOR	276
AUXILIARY JACK	310,330,338
B	
BACK SENSOR	376
BACK-UP LIGHT	256
BACK-UP LIGHT SWITCH	258
BASS-BOX	328
BCM	288,384
BLOWER MOTOR	158,166
BLOWER RELAY	23,156,164
Bluetooth UNIT	332
BOOST SENSOR	118
BRAKE FLUID LEVEL SENSOR	394
BRAKE LIGHT	260
BRAKE SWITCH	260
BRAKE SWITCH2	76
BUCKLE SWITCH	178
C	
CABIN TEMPERATURE SENSOR	170
CAMSHAFT POSITION SENSOR	90,122
CARGO COMPARTMENT LIGHT	270
CARGO COMPARTMENT LIGHT SWITCH	270
CAR-NAVIGATION UNIT	300,312,340
CENTER SPEAKER	324
CHECK CONNECTOR	50
CLIMATE CONTROL UNIT	156,164
CLOCK SPRING	76,148,176,284,302,314,336,364,368
CLUTCH PEDAL POSITION SWITCH	96,130
COIL ANTENNA	226
COMBINATION LIGHT	240,244,252
COMMON CONNECTOR LIST	26
CONDENSER	68,92,230,262,268,290,294
COOLING FAN MOTOR	52,56,62
COOLING FAN RELAY	23,52,56,62
CORNER SENSOR	
(FRONT)	374
(REAR)	376
COURTESY LIGHT	272
CRANKSHAFT POSITION SENSOR	90,122
CRUISE CONTROL SWITCH	76
CURTAIN AIR BAG MODULE	182
D	
DATA LINK CONNECTOR-2	44
DIMMER CANCEL SWITCH	350
DISCHARGE HEADLIGHT CONTROL MODULE	240
DOOR LATCH AND LOCK ACTUATOR	220
DOOR SPEAKER	
(FRONT)	304,322
(REAR)	306,324
DOWN LIGHT	286
DRIVER-SIDE AIR BAG MODULE	176
DRIVER-SIDE AIR MIX ACTUATOR	168
DRIVER-SIDE BUCKLE SWITCH	178
DRIVER-SIDE CURTAIN AIR BAG MODULE	182
DRIVER-SIDE POWER SEAT SWITCH	210
DRIVER-SIDE PRE-TENSIONER SEAT BELT	180
DRIVER-SIDE SIDE AIR BAG MODULE	180
DRIVER-SIDE SIDE AIR BAG SENSOR	184
DSC HU/CM	132
DSC OFF SWITCH	136
E	
EGR COOLER BYPASS VALVE	110
EGR VALVE	82,122
ELECTRICAL WIRING SCHEMATIC	18
ENGINE COOLANT TEMPERATURE SENSOR	94,116
EPS CONTROL MODULE	152
EPS MOTOR	152
EVAPORATOR TEMPERATURE SENSOR	160,168
EXHAUST GAS PRESSURE	
CORRECTION TEMPERATURE SENSOR	126
EXHAUST GAS PRESSURE SENSOR	120
EXHAUST GAS TEMPERATURE SENSOR	120
F	
FILAMENT	188
FOG LIGHT	250
FOG LIGHT RELAY	23,248
FOG LIGHT SWITCH	248
FRONT AUTO LEVELING SENSOR	276
FRONT COMBINATION LIGHT	240,244,252
FRONT CORNER SENSOR	374
FRONT DOOR LATCH AND LOCK ACTUATOR	220
FRONT DOOR SPEAKER	304,322
FRONT FOG LIGHT	250
FRONT FOG LIGHT RELAY	23,248
FRONT SENSOR	374
FRONT TURN LIGHT	252
FUEL GAUGE SENDER UNIT	348
FUEL INJECTOR	88,124
FUEL PRESSURE SENSOR	118
FUEL PUMP RELAY	23,68
FUEL PUMP UNIT	68
FUEL TEMPERATURE SENSOR	116
FUSE BOX	22
G	
GENERAL INFORMATION	4
GENERATOR	70,72
GLOVE COMPARTMENT LIGHT	280
GLOW PLUG	104
GLOW PLUG RELAY	23,104
GPS ANTENNA	340
GROUND POINT	38
GUIDE BLADE ACTUATOR POSITION SENSOR	130
H	
HAZARD WARNING SWITCH	254
HEADLIGHT	240
HEADLIGHT CLEANER CONTROL MODULE	296
HEADLIGHT CLEANER MOTOR	296
HEADLIGHT LEVELING ACTUATOR	278
HEADLIGHT RELAY	23,236
HIGH-MOUNT BRAKE LIGHT	262
HO2S	86
HORN HIGH	364
HORN LOW	364
HORN RELAY	23,364
HORN SWITCH	364

ALPHABETICAL INDEX

I

IGNITION COIL..... 92

ILLUMINATION

AFS OFF SWITCH..... 282
CRUISE CONTROL SWITCH..... 284
DSC OFF SWITCH..... 282
HAZARD WARNING SWITCH..... 282
PARKING SENSOR SWITCH..... 284
SELECTOR..... 286
STEERING SHIFT SWITCH..... 284
STEERING SWITCH..... 284
VANITY MIRROR..... 272
INFORMATION DISPLAY..... 366
INPUT/TURBINE SPEED SENSOR..... 144
INSTRUMENT CLUSTER..... 346
INTAKE AIR TEMPERATURE SENSOR..... 118
INTAKE SHUTTER VALVE..... 128
INTERIOR LIGHT..... 266
INTERMEDIATE SENSOR..... 140

K

KEY INTERLOCK SOLENOID..... 150
KEY REMINDER SWITCH..... 388
KEYLESS RECEIVER..... 228
KNOCK SENSOR..... 86

L

LICENSE PLATE LIGHT..... 244
LIFTGATE AUTO CLOSURE CONTROL MODULE..... 230
LIFTGATE LATCH POSITION SWITCH..... 232
LIFTGATE LOCK ACTUATOR..... 224
LIFTGATE OPENER SWITCH..... 418
LIGHT SWITCH..... 238

M

MAGNETIC CLUTCH..... 174
MAIN RELAY..... 23,78,106
MANIFOLD ABSOLUTE PRESSURE SENSOR..... 94
MAP LIGHT..... 266
MASS AIR FLOW /
INTAKE AIR TEMPERATURE SENSOR..... 84,110
MICROPHONE..... 336

N

NEUTRAL SWITCH..... 96,130
NOISE FILTER..... 188

O

OCCUPANCY SENSOR..... 178
OIL CONTROL VALVE..... 80
OIL PRESSURE SWITCH..... 144,356
OUTLET RELAY..... 23,298

P

PARKING BRAKE SWITCH..... 394
PARKING LIGHT..... 244
PARKING SENSOR BUZZER..... 378
PARKING SENSOR CONTROL MODULE..... 370
PARKING SENSOR SWITCH..... 370
PASSENGER-SIDE AIR BAG MODULE..... 176
PASSENGER-SIDE AIR MIX ACTUATOR..... 168
PASSENGER-SIDE BUCKLE SWITCH..... 178
PASSENGER-SIDE CURTAIN AIR BAG MODULE..... 182
PASSENGER-SIDE POWER SEAT SWITCH..... 218
PASSENGER-SIDE PRE-TENSIONER SEAT BELT..... 180
PASSENGER-SIDE SIDE AIR BAG MODULE..... 180
PASSENGER-SIDE SIDE AIR BAG SENSOR..... 184
PCM..... 78,104
POSITION MEMORY CONTROL MODULE..... 208
POSITION MEMORY SWITCH..... 212
POWER MOS FET..... 166
POWER OUTER MIRROR..... 192

POWER OUTER MIRROR SWITCH..... 190
POWER SEAT SWITCH
(DRIVER-SIDE)..... 210
(PASSENGER-SIDE)..... 218
POWER WINDOW MAIN SWITCH..... 196
POWER WINDOW MOTOR..... 200
POWER WINDOW SUBSWITCH..... 204
PRE-TENSIONER SEAT BELT..... 180
PURGE SOLENOID VALVE..... 82

R

RAIN SENSOR..... 290
REAR AUTO LEVELING SENSOR..... 276
REAR CORNER SENSOR..... 376
REAR DOOR LATCH AND LOCK ACTUATOR..... 220
REAR DOOR SPEAKER..... 306,324
REAR SPEAKER..... 328
REAR TURN LIGHT..... 254
REAR WASHER MOTOR..... 294
REAR WINDOW DEFROSTER RELAY..... 23,186
REAR WIPER AND WASHER SWITCH..... 294
REAR WIPER MOTOR..... 294
RECLINER MOTOR..... 218
RECLINER MOTOR AND POSITION SENSOR..... 216
REFRIGERANT PRESSURE SWITCH..... 162,172
RESISTOR..... 158
RESOLVER SENSOR..... 154

S

SAS CONTROL MODULE..... 176
SELECTOR LEVER COMPONENT..... 140,150
SENSOR..... 374
SIDE AIR BAG MODULE..... 180
SIDE AIR BAG SENSOR..... 184
SIDE TURN LIGHT..... 252
SLIDER MOTOR..... 218
SLIDER MOTOR AND POSITION SENSOR..... 214
SOLAR RADIATION SENSOR..... 170
SOLENOID VALVE..... 142
SPEAKER..... 328
STARTER..... 74
STARTER RELAY..... 23,74
STEERING ANGLE SENSOR..... 288
STEERING GEAR AND LINKAGE..... 152
STEERING SHIFT SWITCH..... 148
STEERING SWITCH..... 302,314,336,368
SUCTION CONTROL VALVE..... 116
SUNROOF MOTOR..... 234
SUNROOF SWITCH..... 234
SWIVEL ACTUATOR..... 278

T

TAILLIGHT..... 244
TCM..... 138
THROTTLE BODY..... 94
TILT MOTOR AND POSITION SENSOR..... 214
TNS RELAY..... 396
TORQUE SENSOR..... 154
TOW-BAR SWITCH..... 372
TRAILER SWITCH..... 372
TRANSAXLE CASE..... 142
TRANSAXLE FLUID TEMPERATURE SENSOR..... 142
TRANSAXLE RANGE SWITCH..... 74,146
TRIPMETER SWITCH..... 352
TRUNK COMPARTMENT LIGHT..... 268
TRUNK COMPARTMENT LIGHT SWITCH..... 268
TRUNK LID OPENER..... 224
TRUNK LID OPENER SWITCH..... 418
TURN LIGHT
(FRONT)..... 252
(REAR)..... 254
TURN SWITCH..... 254
TWEETER..... 304,322

ALPHABETICAL INDEX

V

VARIABLE AIR DUCT SOLENOID VALVE.....	84
VARIABLE BOOST CONTROL SOLENOID VALVE	110
VARIABLE INTAKE AIR SOLENOID VALVE	80
VARIABLE TUMBLE SOLENOID VALVE	80
VEHICLE IDENTIFICATION NUMBERS (VIN)	3
VEHICLE SPEED SENSOR.....	140

W

WASHER MOTOR	
(WINDSHIELD).....	290
(REAR)	294
WINDSHIELD WASHER MOTOR	290
WINDSHIELD WIPER AND WASHER SWITCH.....	292
WINDSHIELD WIPER MOTOR	290
WIPER AND WASHER SWITCH	
(WINDSHIELD).....	292
(REAR)	294
WIPER MOTOR	
(WINDSHIELD).....	290
(REAR)	294
WIRING COLOR CODE.....	9