



#1 : WITHOUT AUTO LIGHT SYSTEM
#2 : WITH AUTO LIGHT SYSTEM/WITH AUTO WIPER SYSTEM
#9 : WITH AUTO LIGHT SYSTEM/WITHOUT AUTO WIPER SYSTEM
@ : EXCEPT U.K. specs.

0918-10b

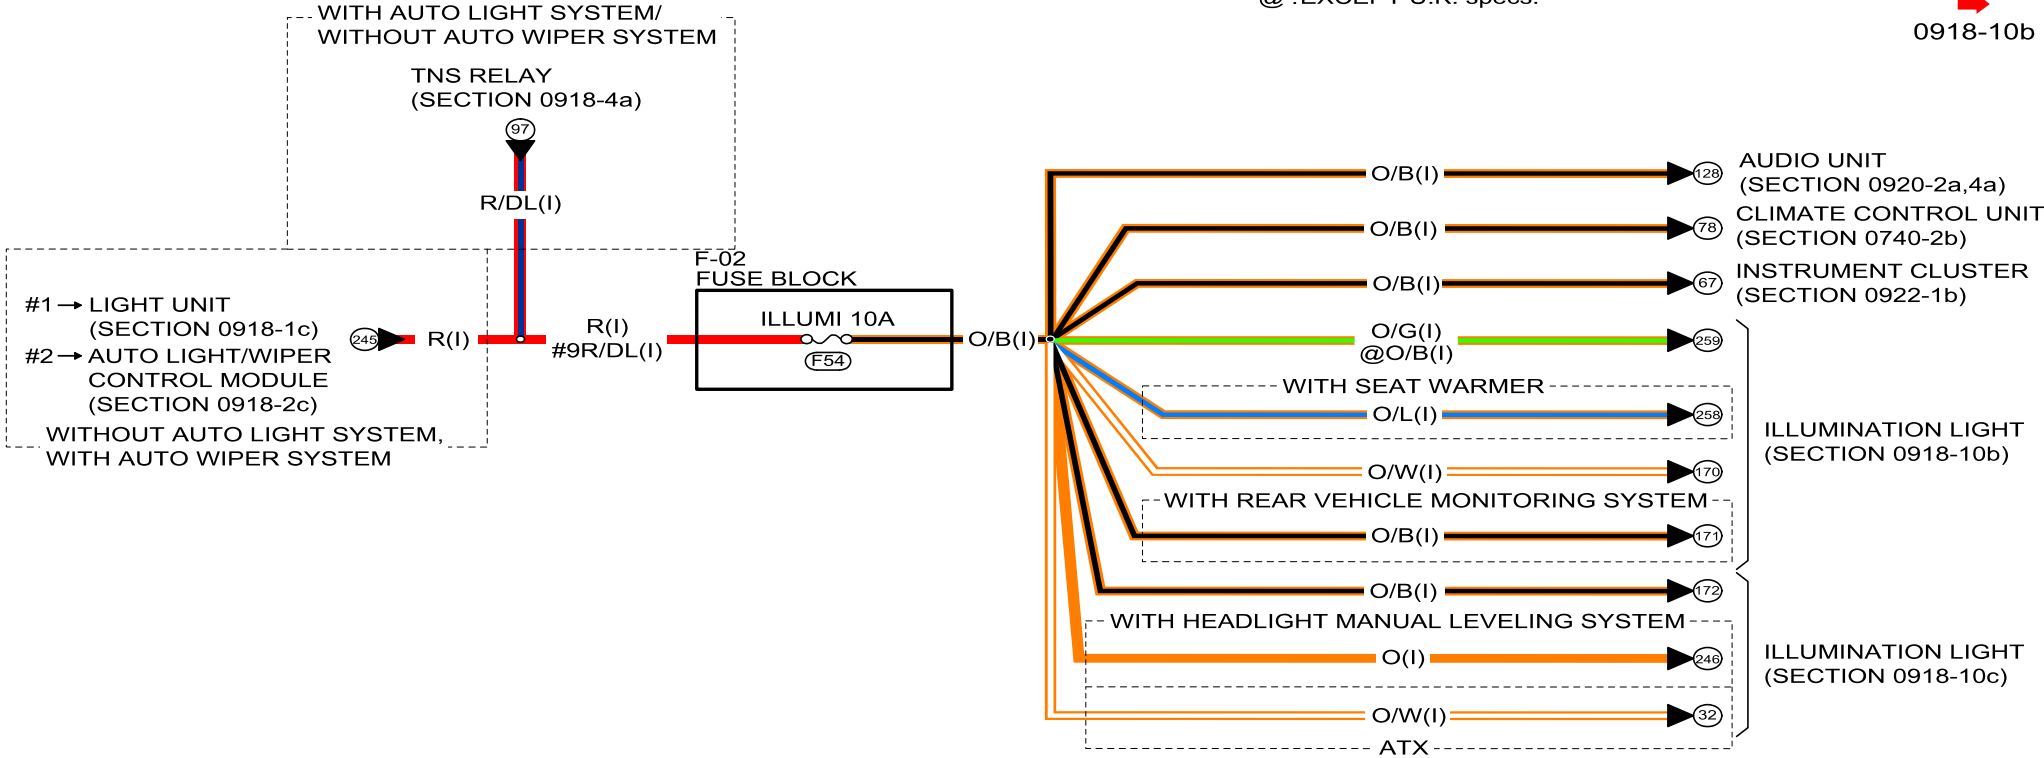

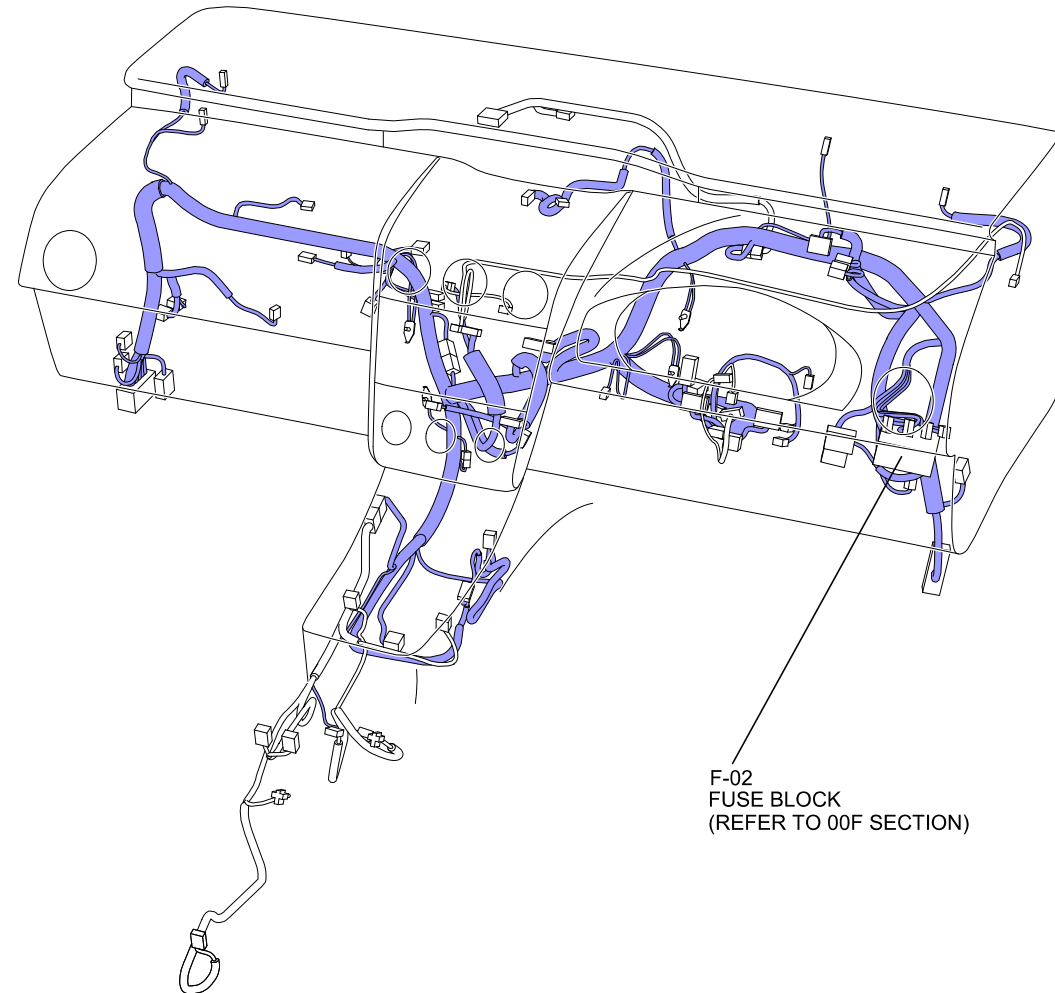


F-02
FUSE BLOCK
(REFER TO 00F SECTION)

 : INSTRUMENT PANEL HARNESS


@ : EXCEPT U.K. specs.

0918-10c

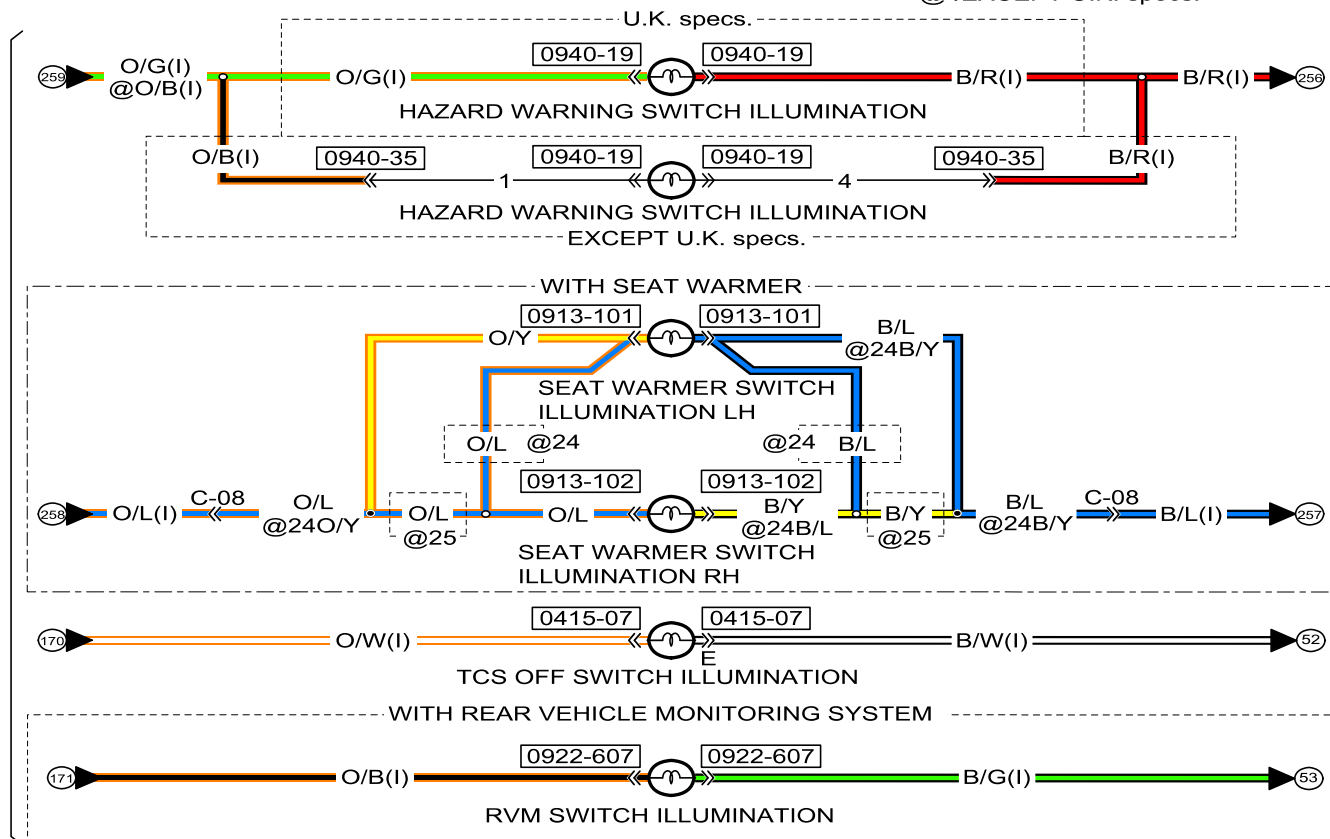

INSTRUMENT CLUSTER
(SECTION 0918-10d)



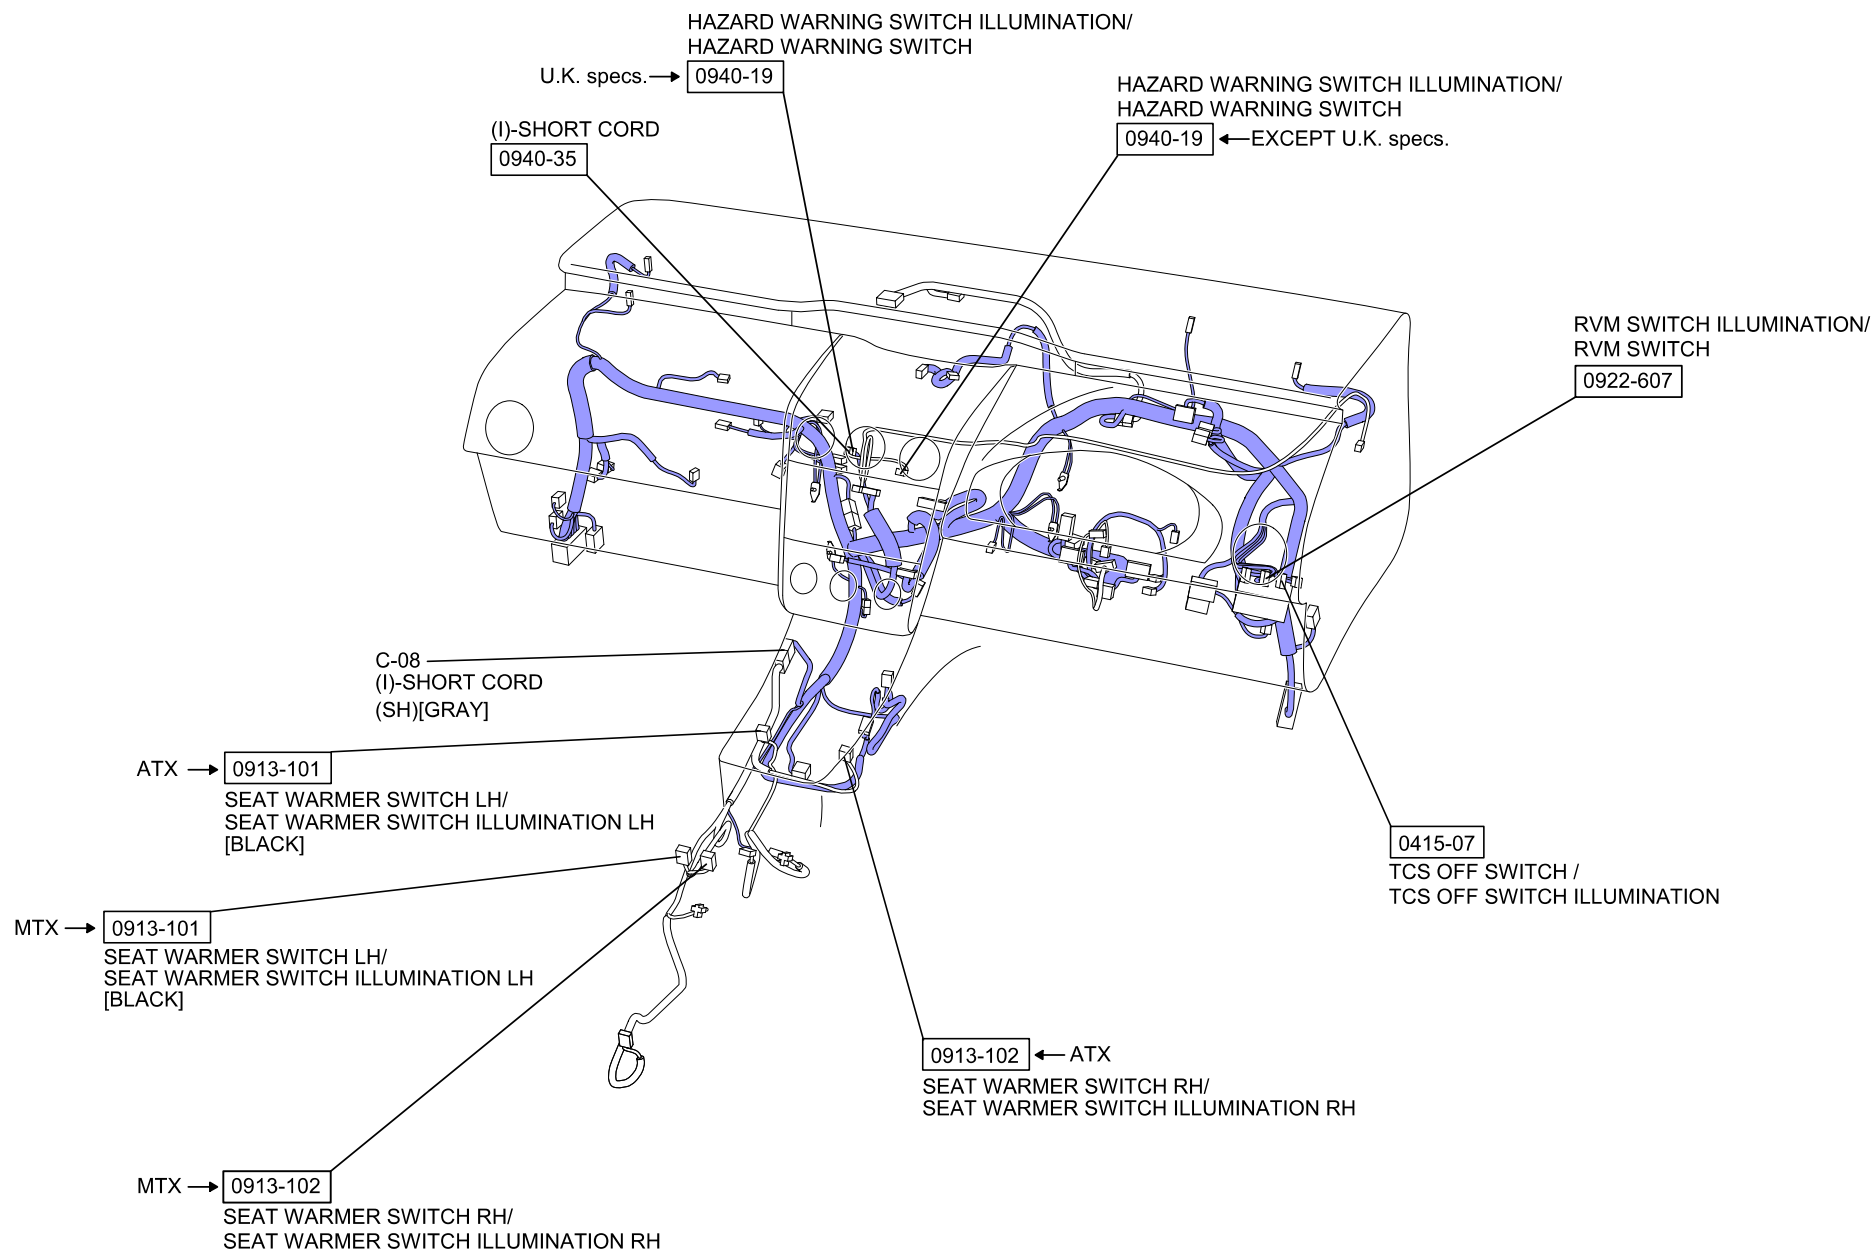

 : INSTRUMENT PANEL HARNESS


0918-10b

#1 : WITHOUT AUTO LIGHT SYSTEM
 #2 : WITH AUTO LIGHT SYSTEM/WITH AUTO WIPER SYSTEM
 #9 : WITH AUTO LIGHT SYSTEM/WITHOUT AUTO WIPER SYSTEM



IGNITION KEY ILLUMINATION

WITHOUT ADVANCED KEYLESS ENTRY AND START SYSTEM

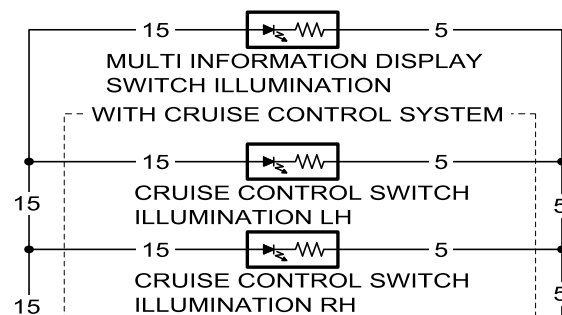


CLOCK SPRING


STEERING SWITCH ILLUMINATION

CLOCK SPRING







WITH HEADLIGHT MANUAL LEVELING SYSTEM




HEADLIGHT LEVELING SWITCH ILLUMINATION

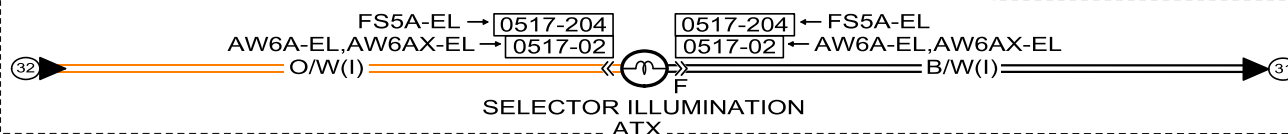SELECTOR ILLUMINATION
ATXINSTRUMENT CLUSTER
(SECTION 0918-10d)


#1 → LIGHT UNIT
 #2 → AUTO LIGHT/WIPER
 CONTROL MODULE
 #9 → TNS RELAY
 (SECTION 0918-10a)

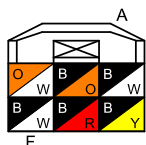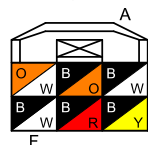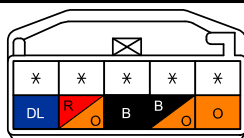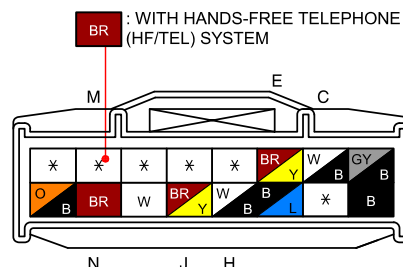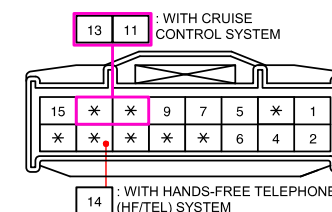
0918-1002
IGNITION KEY
ILLUMINATION0517-02
SELECTOR LEVER
COMPONENT/
SELECTOR
ILLUMINATION0517-204
SELECTOR LEVER
COMPONENT/
SELECTOR
ILLUMINATION0918-901
HEADLIGHT LEVELING SWITCH/
HEADLIGHT LEVELING
SWITCH ILLUMINATION0922-202
CLOCK SPRING0922-203
CRUISE CONTROL SWITCH/
CRUISE CONTROL SWITCH ILLUMINATION LH/
CRUISE CONTROL SWITCH ILLUMINATION RH/
STEERING SWITCH ILLUMINATION/
MULTI INFORMATION DISPLAY SWITCH ILLUMINATION/
STEERING SWITCH/
CLOCK SPRING/
MULTI INFORMATION DISPLAY SWITCH

WIRE COLORS ARE INDICATED BY NUMBERS.

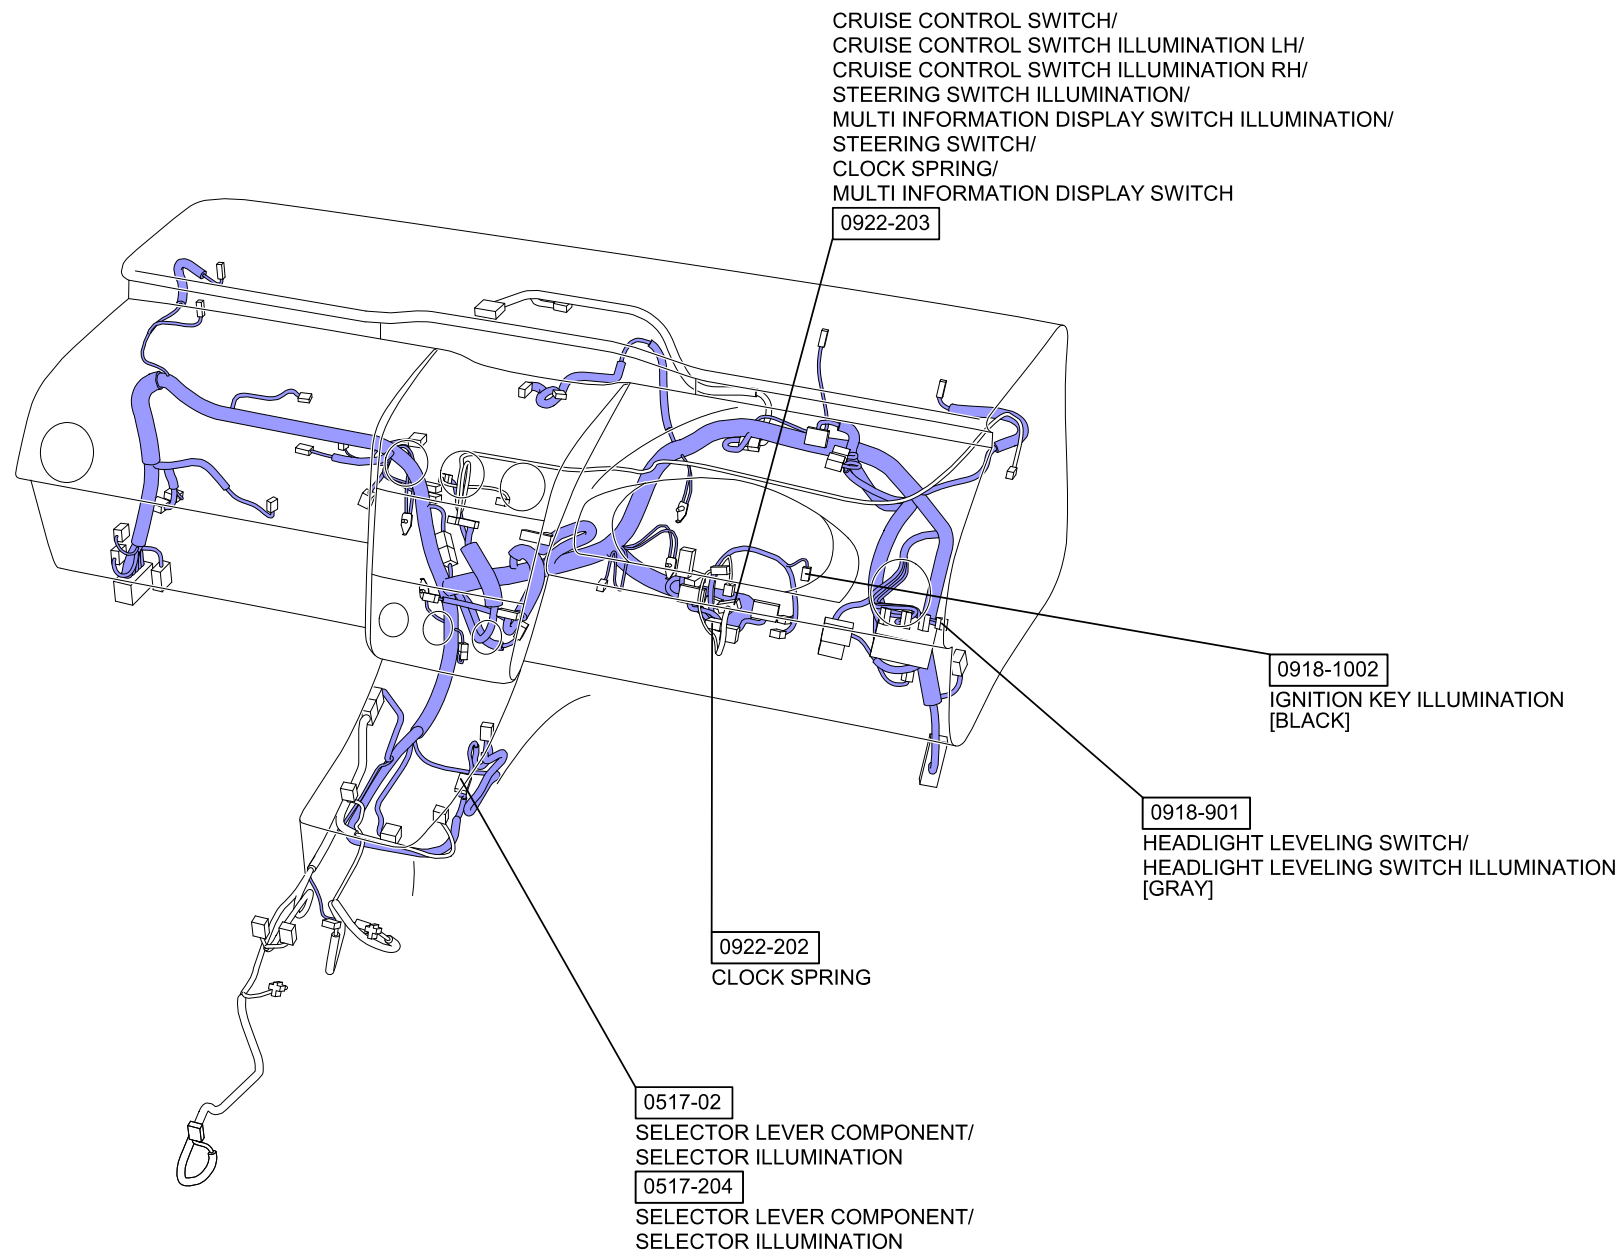

 : INSTRUMENT PANEL HARNESS

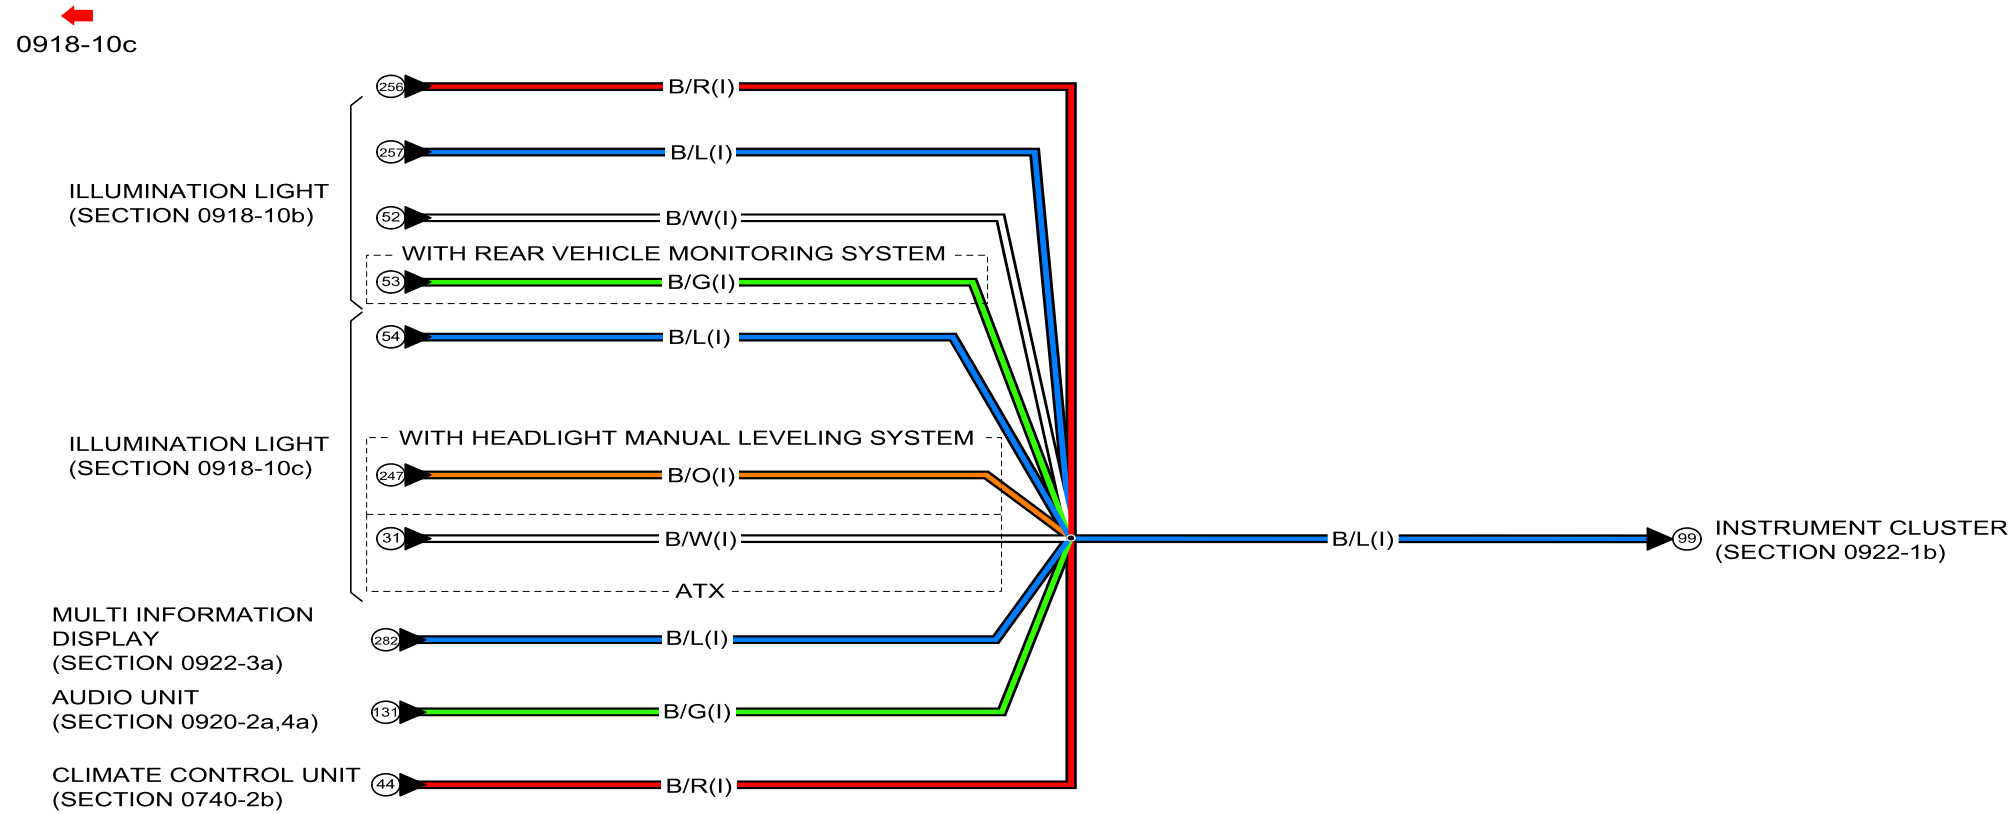

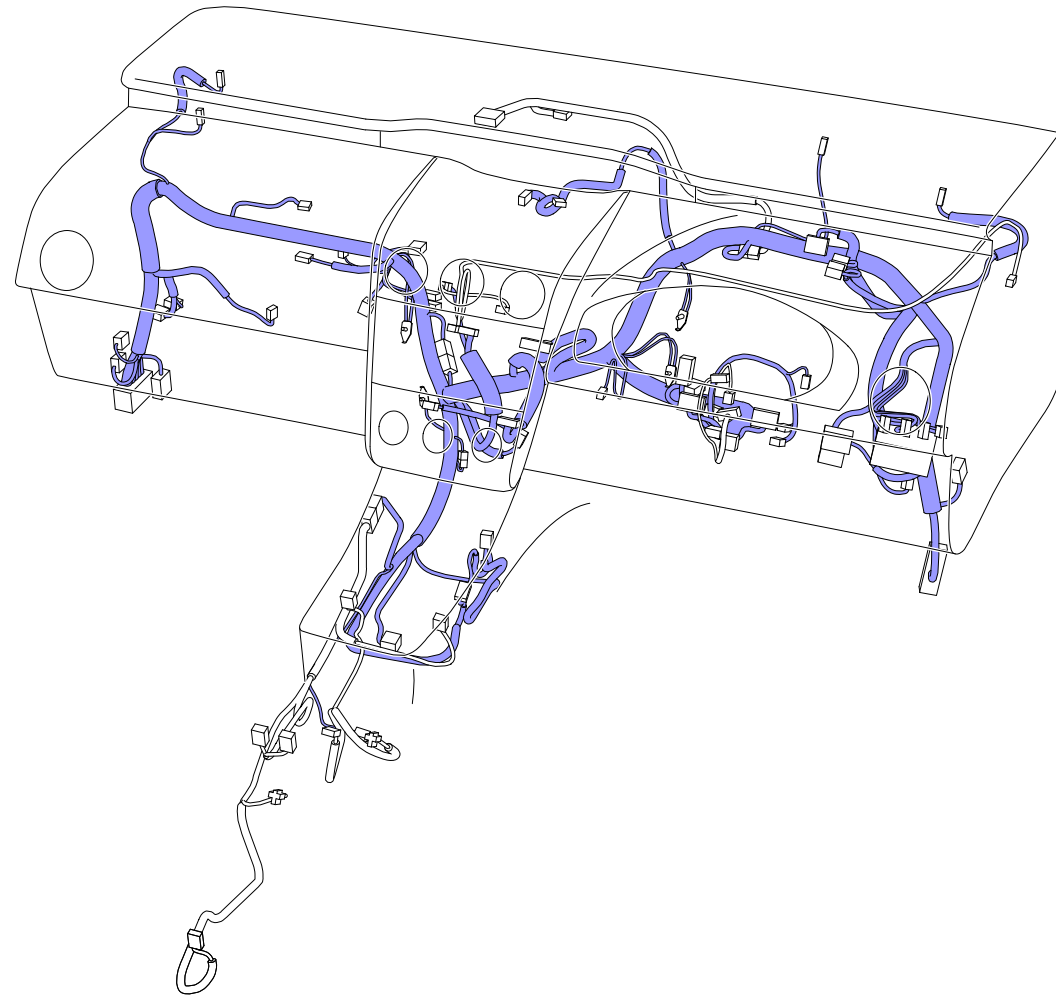

 : INSTRUMENT PANEL HARNESS