


0140-101A
PCM



B : SKYACTIV-G 1.3, 1.5
(WITH 4-1 EXHAUST SYSTEM) / WITH i-ELOOP

B : SKYACTIV-G 1.3, 1.5
(WITH 4-1 EXHAUST SYSTEM) / WITHOUT i-ELOOP

F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F
1EE	1EA	1DW	1DS	1DO	1DK	1DG	1DA	1CW	1CS	1CO	1CK	1CG	1CC	1BY	1DB	1CX	1CT	1CP	1CL
1EF	1EB	1DX	1DT	1DP	1DL	1DH	1DB	1CX	1CT	1CP	1CL	1CH	1CD	1BZ					

T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T
1BR	1BM	1BH	1BC	1AX	1AS	1AN	1AI	1AD	1Y	1T	1O	1J	1E	1A	1BS	1BN	1BI	1BD	1AY
1AT	1AO	1AJ	1AE	1Z	1U	1P	1K	1F	1B										

W	P	LG	Y	BR	GY	GY
V	L	GY	G	R	B	B

GY	GY	GY	GY	G	W	BR	G
B	B	B	B	B		*	B

V	*	*	*	*	Y	L	V
GY	L		*	BR	GY	LG	R
*	Y	G	V	LG	*	*	P
V	R	W	BR	L	W	*	*
	LG	GY	P	Y	*	*	GY

W	BR	R	W	Y		G
GY	LG		G	BR	*	GY
G				P	LG	*
W	R	B			L	P
LG	V	BR	*	*	R	

1EI	1EG	1EC	1DY	1DU	1DQ	1DM	1DI	1DE	1DC	1CY	1CU	1CQ	1CM	1CI	1CE	1CA	1BW
1EJ	1EH	1ED	1DZ	1DV	1DR	1DN	1DJ	1DF	1DD	1CZ	1CV	1CR	1CN	1CJ	1CF	1CB	1BX
T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T

1BT	1BO	1BJ	1BE	1AZ	1AU	1AP	1AK	1BU	1BP	1BK	1BF	1BA	1AV	1AQ	1AL
1BV	1BQ	1BL	1BG	1BB	1AW	1AR	1AM	T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T


1AF	1AA	1V	1Q	1L	1G	1C	1AG	1AB	1W	1R	1M	1H	1D
1AH	1AC	1X	1S	1N	1I	T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T	T	T	T	T	T	T

(SKYACTIV-G 1.3, 1.5)

0140-101B
PCM



T	T	T	T	T	F	F	F	F	F	F	F	F	F
T	T	T	T	T	F	F	F	F	F	F	F	F	F
2BE	2AZ	2AU	2AP	2AK	2AE	2AA	2W	2S	2O	2K	2G	2C	
2BF	2BA	2AV	2AQ	2AL	2AF	2AB	2X	2T	2P	2L	2H	2D	

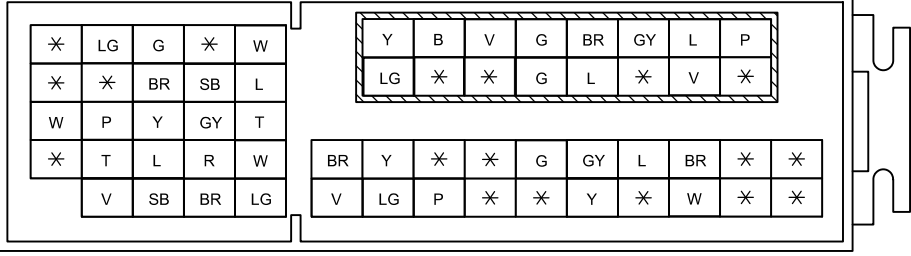

2BG	2BH	2BB	2AW	2AR	2AM	2AI	2AG	2AC	2Y	2U	2Q	2M	2I	2E	2A
2BD	2AY	2AT	2AO	2AJ	2AH	2AD	2Z	2V	2R	2N	2J	2F	2B		
T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T

(SKYACTIV-G 1.3, 1.5)

COMMON CONNECTOR LIST

00C-2

0140-201A
PCM



F	F	F	F	F	F	F		F	F	F	F	F	F	F	F		T	T	T	T	T	T	T	T	T	T	T	T	T	T		
F	F	F	F	F	F	F		F	F	F	F	F	F	F	F		T	T	T	T	T	T	T	T	T	T	T	T	T	T		
1EE	1EA	1DW	1DS	1DO	1DK	1DG		1DA	1CW	1CS	1CO	1CK	1CG	1CC	1BY		1BR	1BM	1BH	1BC	1AX	1AS	1AN	1AI		1AD	1Y	1T	1O	1J	1E	1A
1EF	1EB	1DX	1DT	1DP	1DL	1DH		1DB	1CX	1CT	1CP	1CL	1CH	1CD	1BZ		1BS	1BN	1BI	1BD	1AY	1AT	1AO	1AJ		1AE	1Z	1U	1P	1K	1F	1B

L	G	G	*	*	R	W
L	*	*	*	*	G	G

G	G	L	R	*	Y	G	BR
*	*	L	W	*	L	B	B

V	BR	L	P	R	L	G	GY
*	*	W	*	Y	*	LG	G
R	L	LG	V	BR	G	L	Y
LG	GY	P	R	L	W	P	R
W	G	Y	GY	P	Y	V	BR

LG	*	*	LG	L	W	P
*	*	*	V	R	LG	V
Y	W	*	Y	BR	G	GY
L	GY	LG	*	*	W	P
G	R	W	*	GY	R	


*	*	GY	LG	*	P	*	*
R	*	*	B	L	*	*	*

*	*	L	W	V	*	BR	V	GY	BR
P	*	BR	LG	GY	G	LG	R	L	P

																	1BT	1BO	1BJ	1BE	1AZ	1AU	1AP	1AK	1AF	1AA	1V	1Q	1L	1G	1C	
1EI	1EG	1EC	1DY	1DU	1DQ	1DM	1DI	1DE	1DC	1CY	1CU	1CQ	1CM	1CI	1CE	1CA	1BW	1BU	1BP	1BK	1BF	1BA	1AV	1AQ	1AL	1AG	1AB	1W	1R	1M	1H	1D
1EJ	1EH	1ED	1DZ	1DV	1DR	1DN	1DJ	1DF	1DD	1CZ	1CV	1CR	1CN	1CJ	1CF	1CB	1BX	1BV	1BQ	1BL	1BG	1BB	1AW	1AR	1AM	1AH	1AC	1X	1S	1N	1I	
																		T	T	T	T	T	T	T		T	T	T	T	T	T	
T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	
T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	

(SKYACTIV-D 1.5)

0140-201B
PCM



T	T	T	T	T	F	F	F	F	F	F	F	F	F	F	F	F	F
T	T	T	T	T	F	F	F	F	F	F	F	F	F	F	F	F	F
2BE	2AZ	2AU	2AP	2AK	2AE	2AA	2W	2S	2O	2K	2G	2C					
2BF	2BA	2AV	2AQ	2AL	2AF	2AB	2X	2T	2P	2L	2H	2D					

*	G	V	*	W
LG	*	*	LG	BR
BR	*	Y	P	GY
L	GY	R	G	W
	LG	BR	V	LG

B	L	R	G	BR	GY	G	W
B	Y	B	G	L	*	V	L


P	BR	T	*	*	*	W	*	BR	*
L	V	B	GY	SB	*	V	P	*	GY

2BG	2BB	2AW	2AR	2AM	2AI	2AG	2AC	2Y	2U	2Q	2M	2I	2E	2A
2BH	2BC	2AX	2AS	2AN	2AJ	2AH	2AD	2Z	2V	2R	2N	2J	2F	2B
	2BD	2AY	2AT	2AO										
T	T	T	T	T	T	T	T	T	T	T	T	T	T	T
T	T	T	T	T	T	T	T	T	T	T	T	T	T	T
		T	T	T										




(SKYACTIV-D 1.5)

0140-301A
PCM



0140-301B
PCM

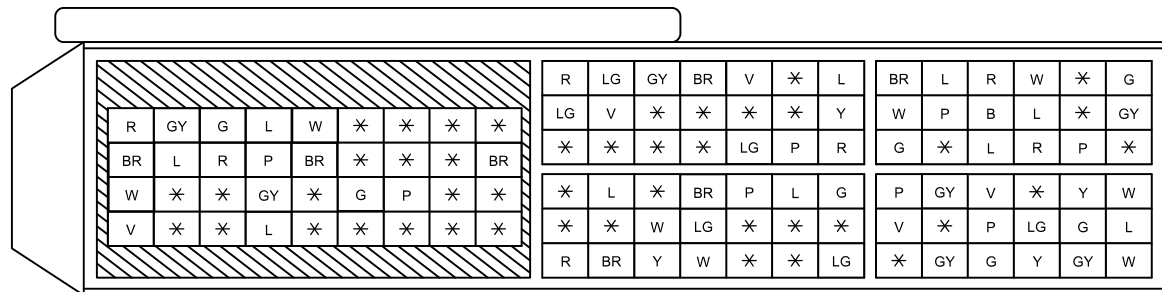[illegible]


1DI	1DE	1DA	1CW	1CS	1CO	1CK	1CG	1CC		1BX	1BR	1BL	1BF	1AZ	1AT	1AN		1AH	1AB	1V	1P	1J	1D
1DJ	1DF	1DB	1CX	1CT	1CP	1CL	1CH	1CD		1BY	1BS	1BM	1BG	1BA	1AU	1AO		1AI	1AC	1W	1Q	1K	1E
										1BZ	1BT	1BN	1BH	1BB	1AV	1AP		1AJ	1AD	1X	1R	1L	1F
F	F	F	F	F	F	F	F	F		T	T	T	T	T	T	T		T	T	T	T	T	T
F	F	F	F	F	F	F	F	F		T	T	T	T	T	T	T		T	T	T	T	T	T
										T	T	T	T	T	T	T		T	T	T	T	T	T

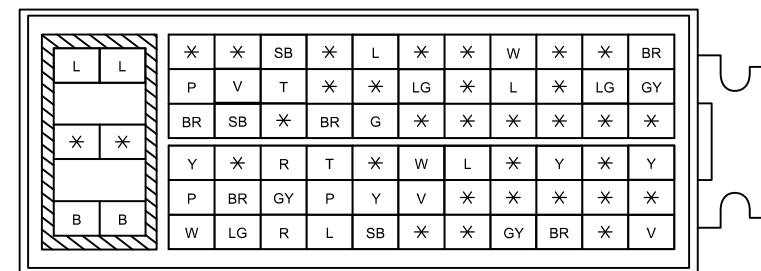[illegible][illegible]


C-01
FRONT HARNESS-EMISSION HARNESS

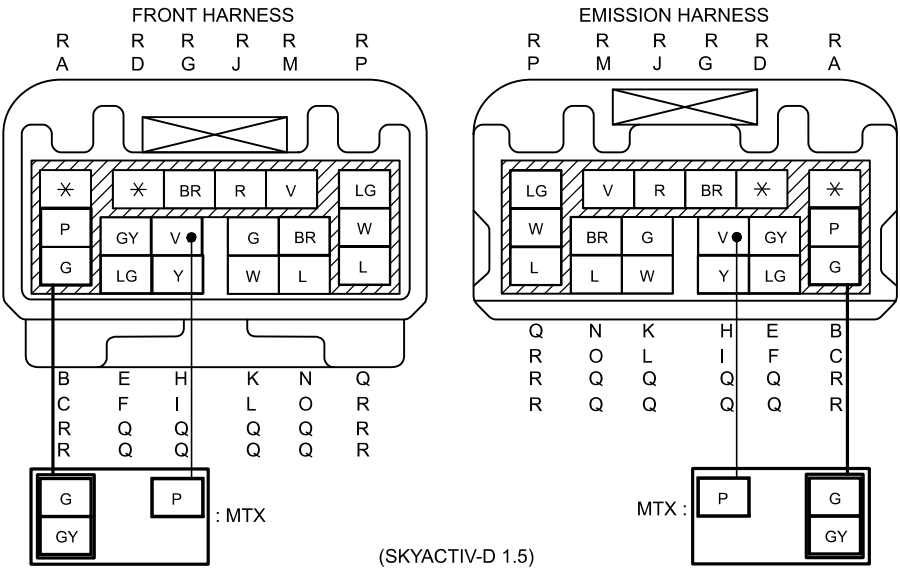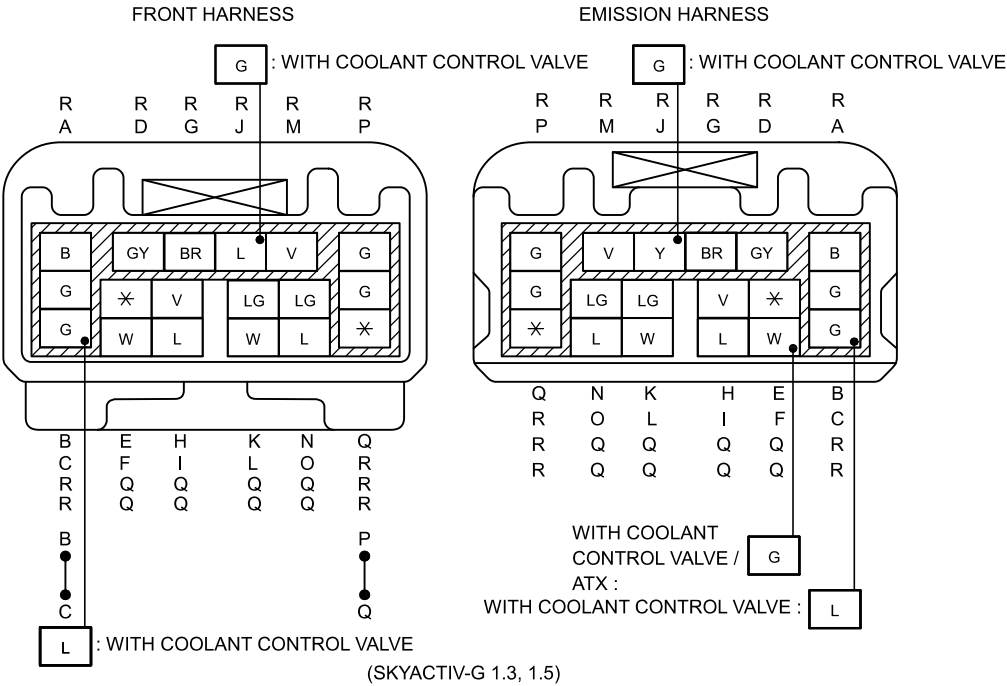


C-02
FRONT HARNESS-EMISSION HARNESS

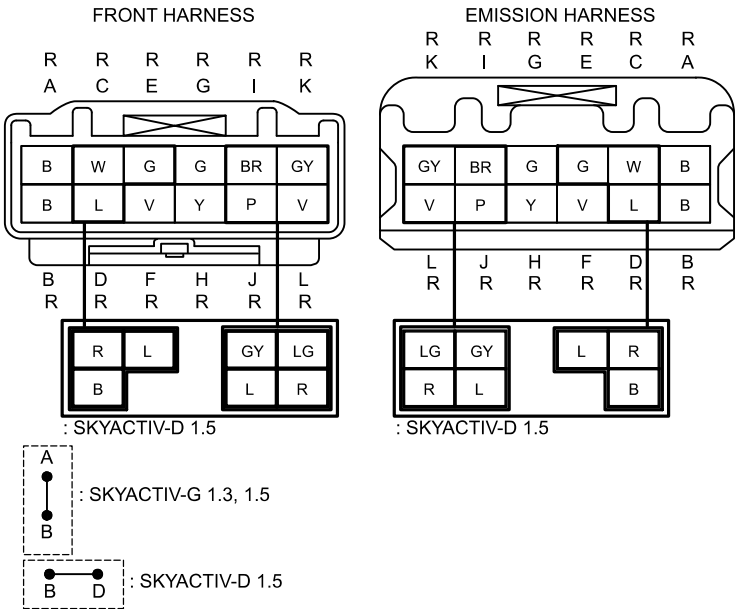


C-03
FRONT HARNESS-EMISSION HARNESS

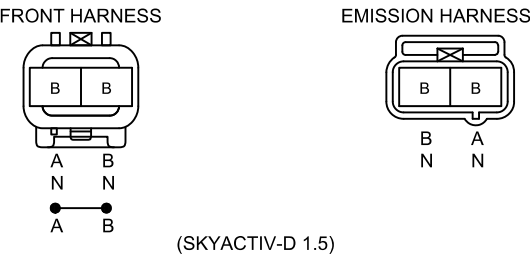

C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

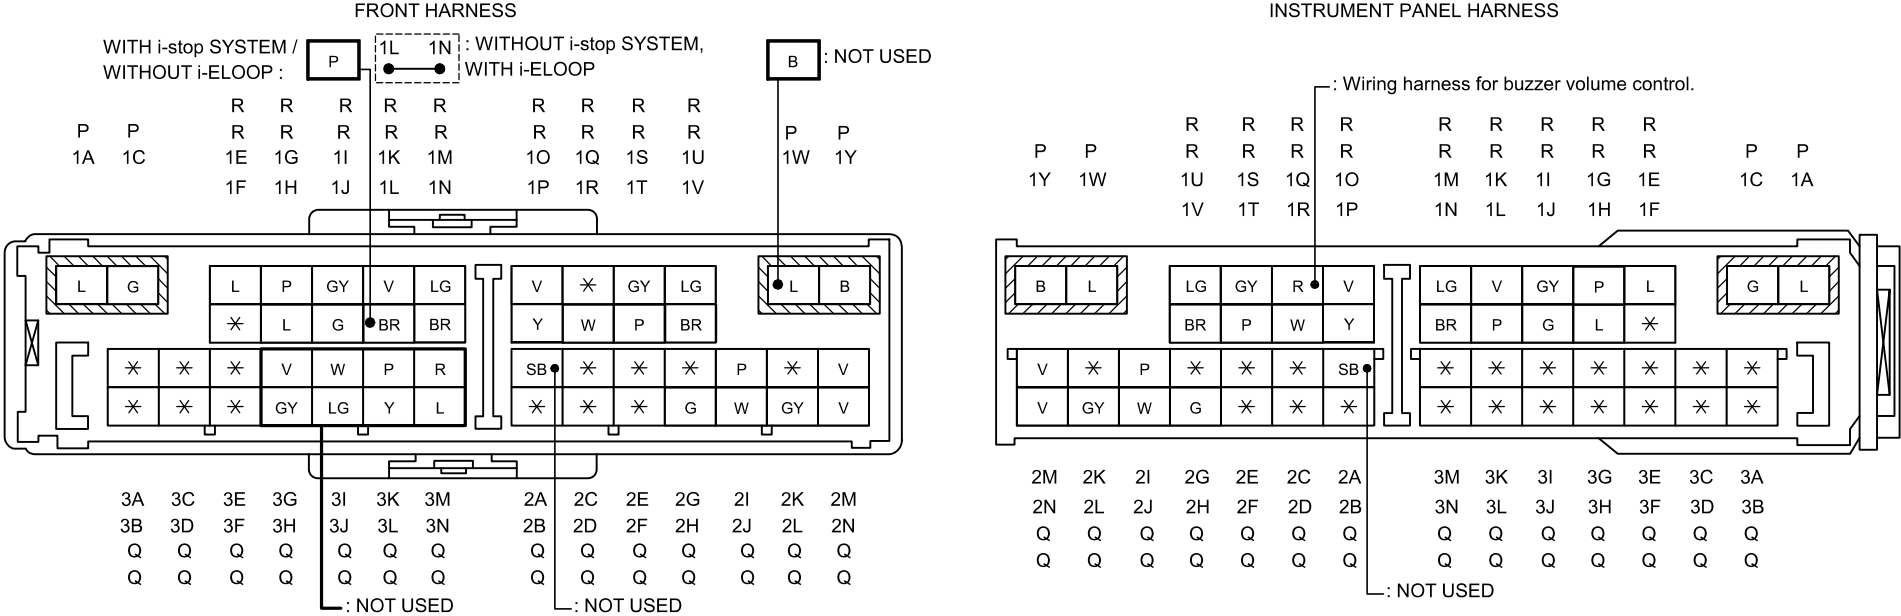

C-05
FRONT HARNESS-REAR HARNESS

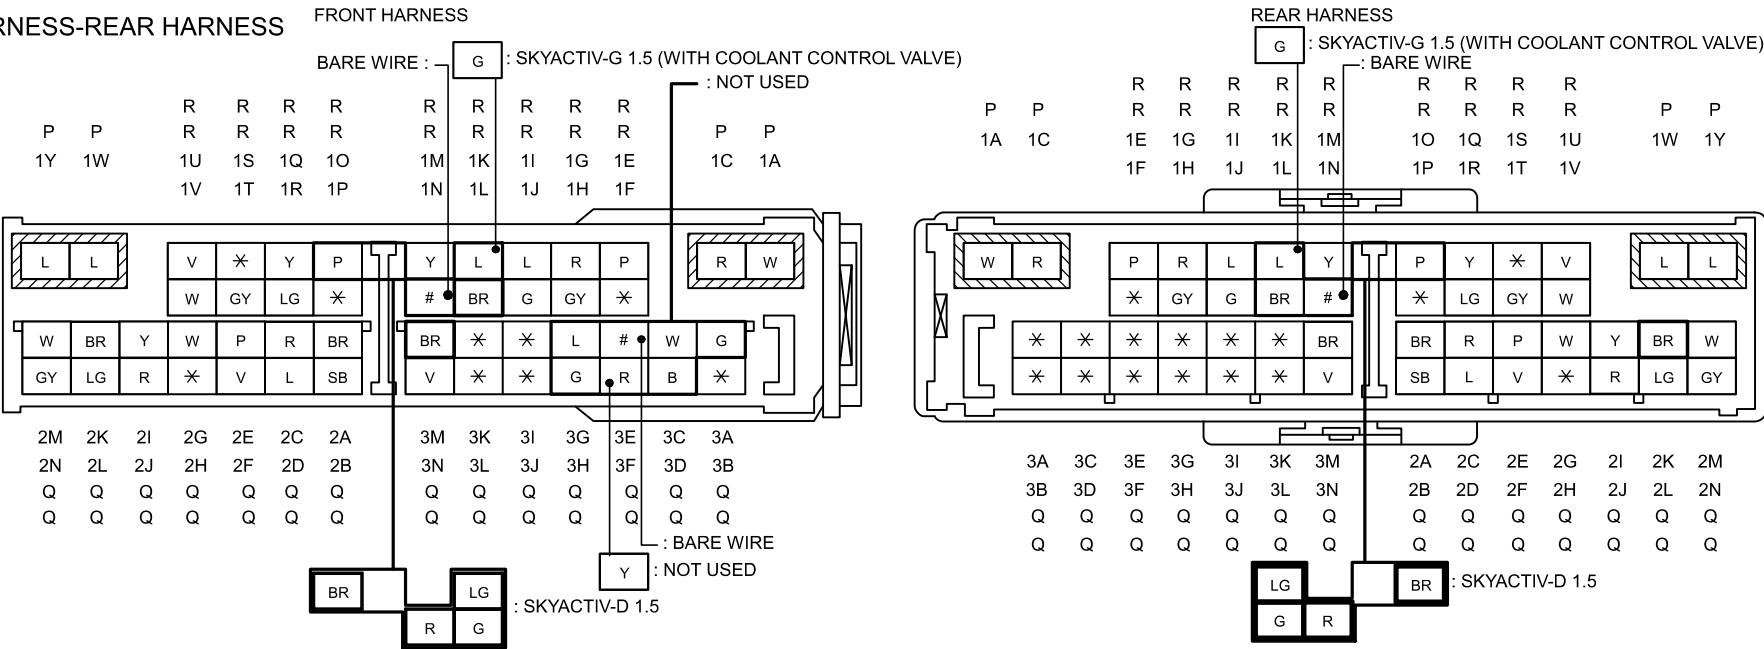


COMMON CONNECTOR LIST

00C-6


C-06
FRONT HARNESS-REAR HARNESS





C-07
INSTRUMENT PANEL HARNESS-REAR HARNESS

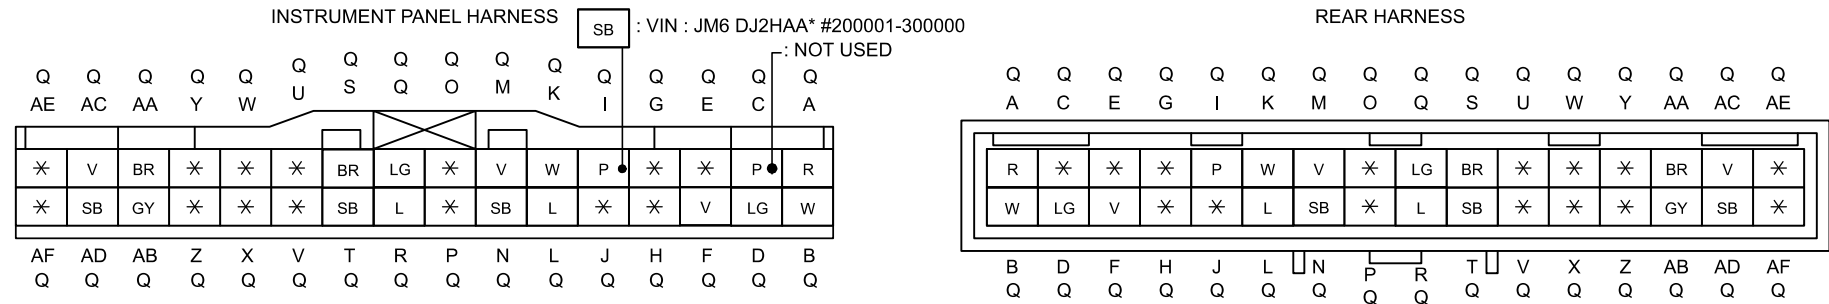



C-08
INSTRUMENT PANEL HARNESS-
REAR HARNESS

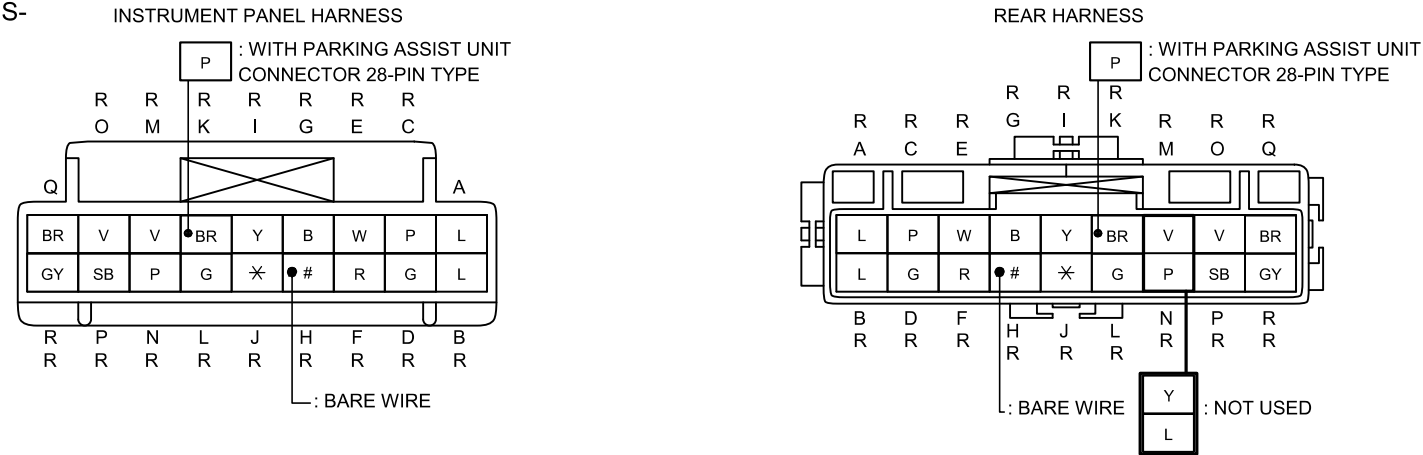



C-09
INSTRUMENT PANEL HARNESS-REAR HARNESS

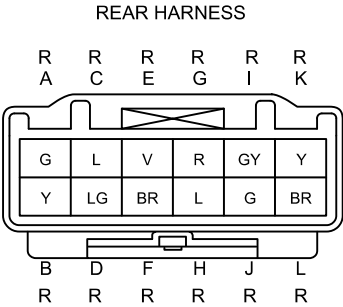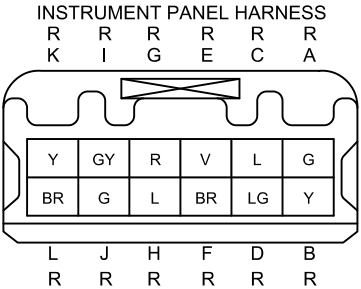



C-10
INSTRUMENT PANEL HARNESS-REAR HARNESS

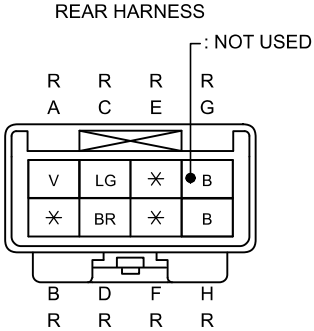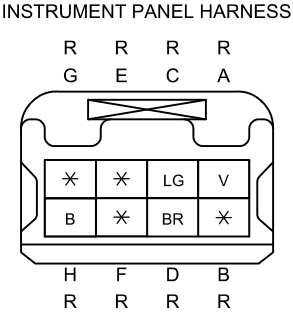



C-11
INSTRUMENT PANEL HARNESS-INTERIOR LIGHT No.2 HARNESS
INSTRUMENT PANEL HARNESS

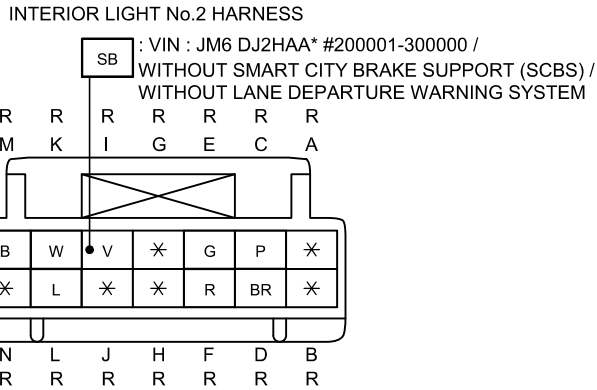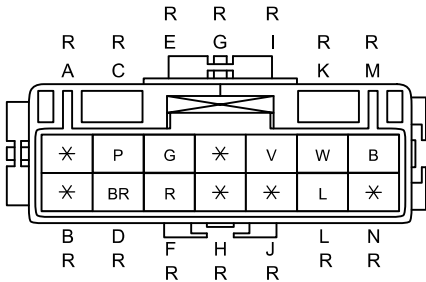



C-12
INSTRUMENT PANEL HARNESS-INTERIOR LIGHT No.2 HARNESS

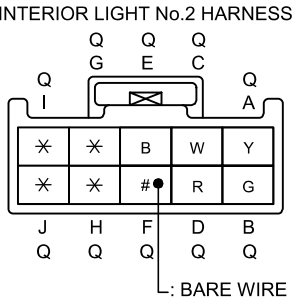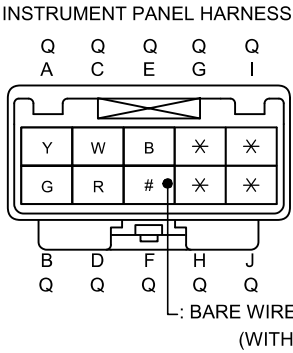



C-13
REAR HARNESS-REAR No.2 HARNESS

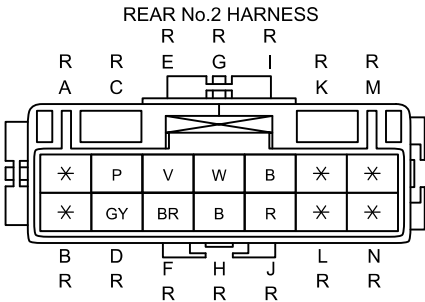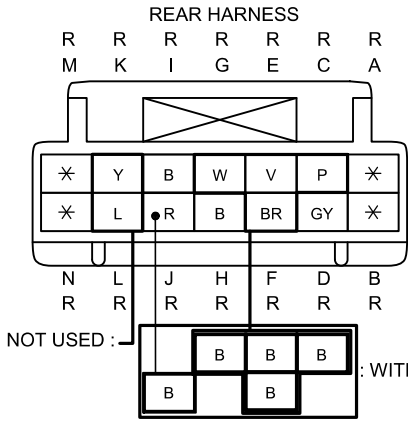


C-14
REAR HARNESS-INTERIOR LIGHT HARNESS

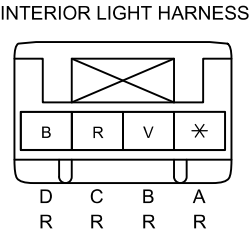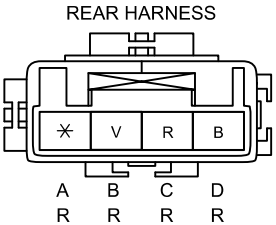


C-15
REAR HARNESS-
DOOR No.1 HARNESS

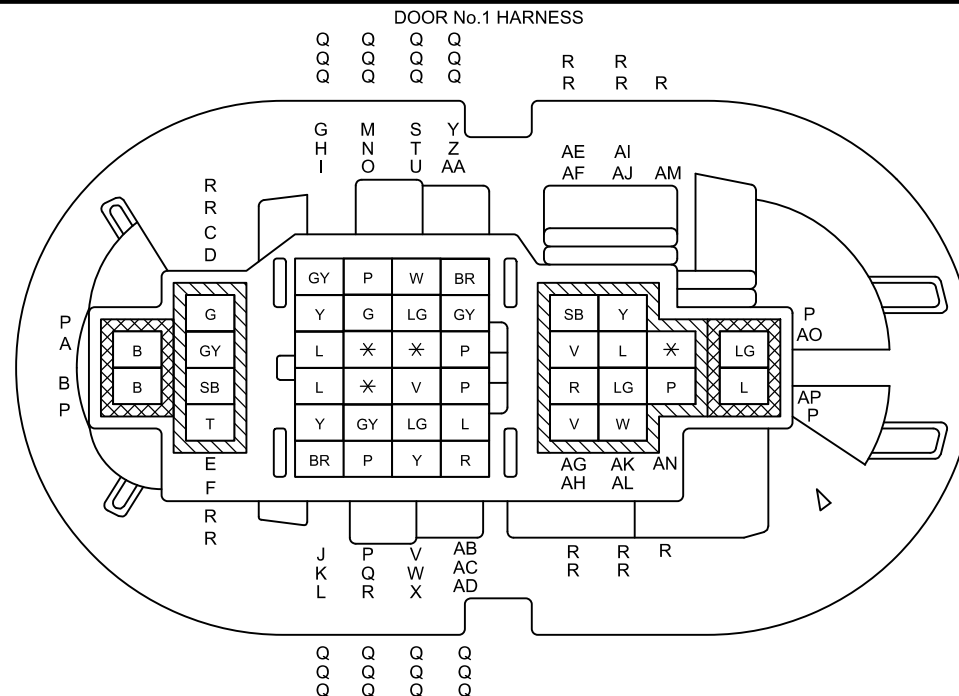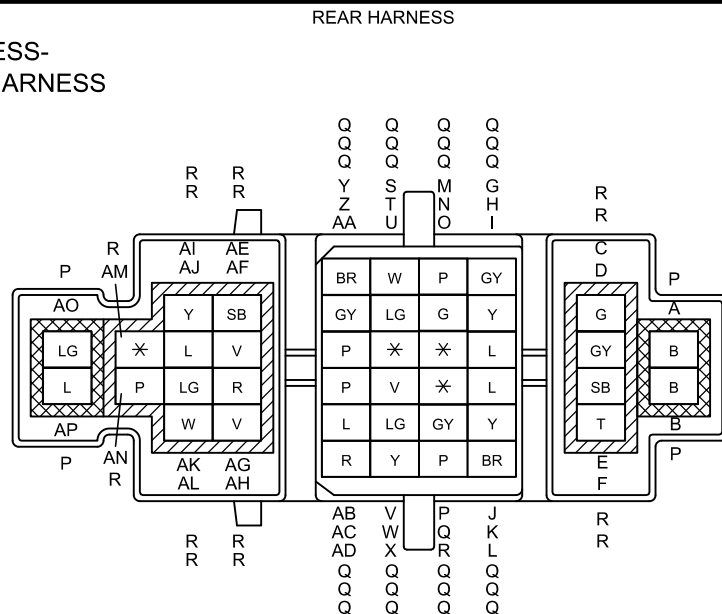


C-16
REAR HARNESS-DOOR No.2 HARNESS

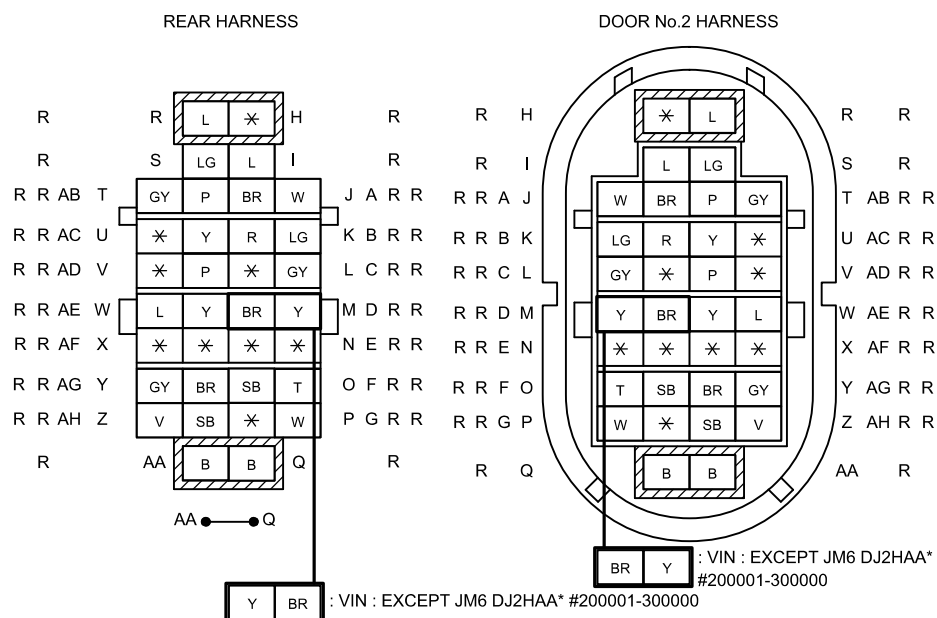


C-17
REAR HARNESS-DOOR No.4 HARNESS

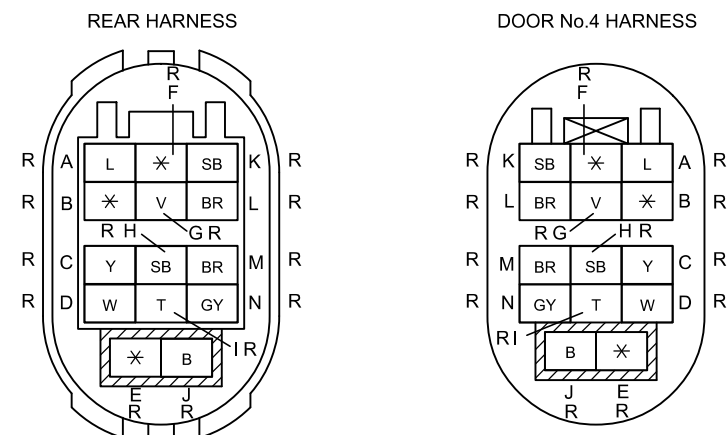


C-18
REAR HARNESS-DOOR No.3 HARNESS

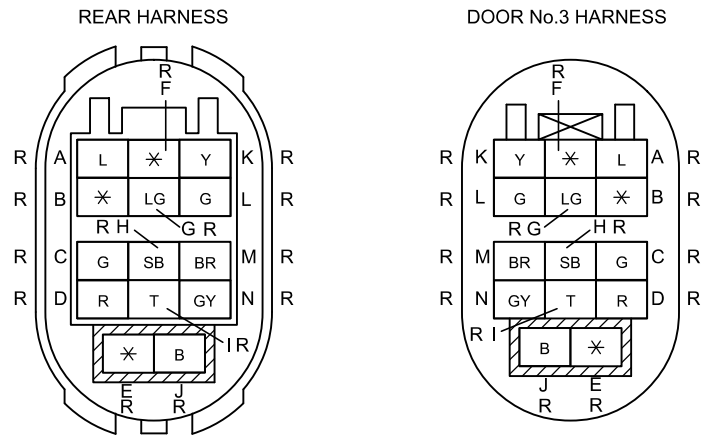


C-19
REAR HARNESS-SHORT CORD

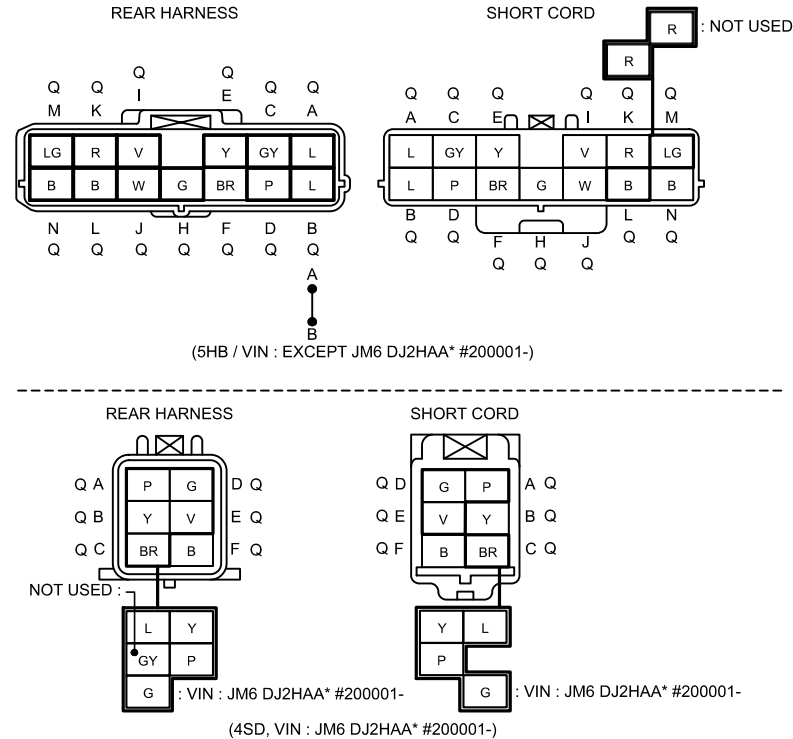


C-20
REAR HARNESS-SHORT CORD

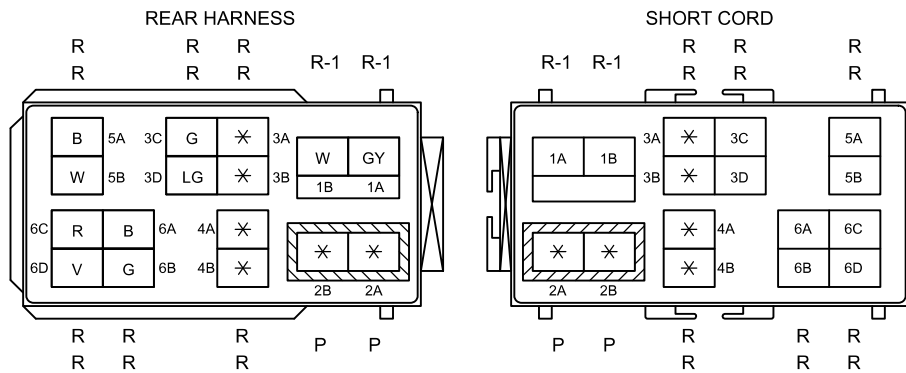


C-21
REAR HARNESS-SHORT CORD

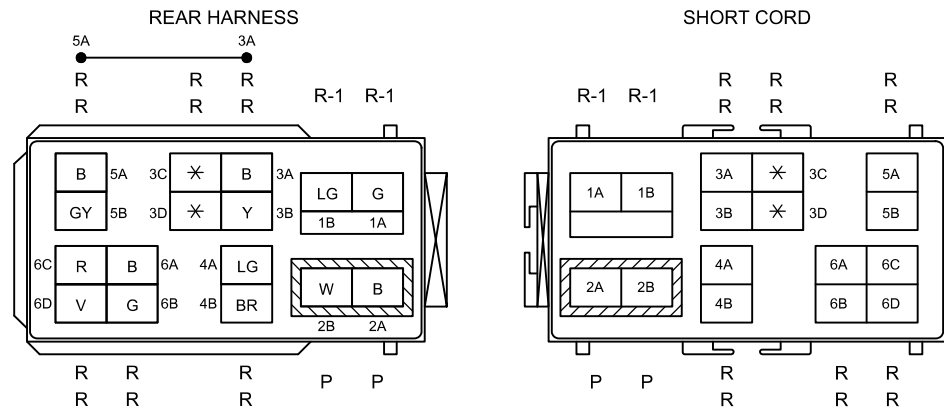


C-22
REAR HARNESS-SHORT CORD

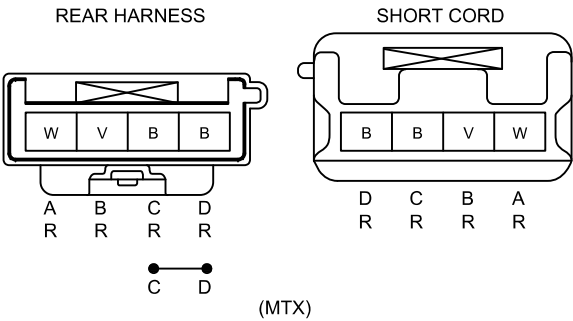


C-23
INTERIOR LIGHT No.2 HARNESS-SHORT CORD
INTERIOR LIGHT No.2 HARNESS
SHORT CORD

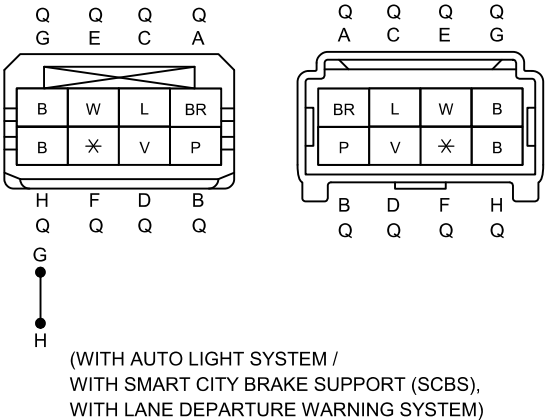


C-24
DOOR No.1 HARNESS-SHORT CORD

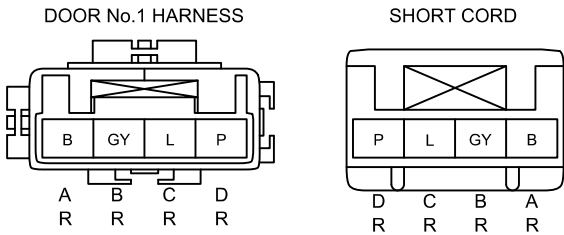


C-25
DOOR No.2 HARNESS-SHORT CORD

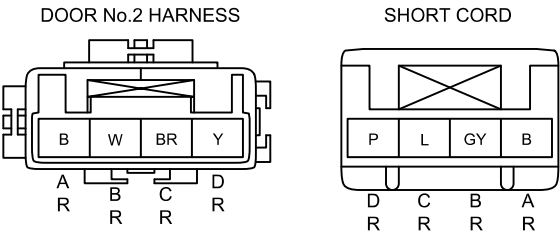


C-26
JOINT CONNECTOR

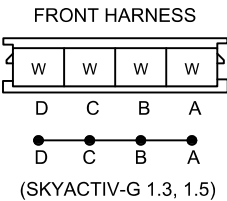


C-27
JOINT CONNECTOR

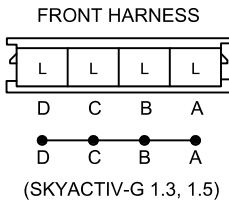


C-28
JOINT CONNECTOR

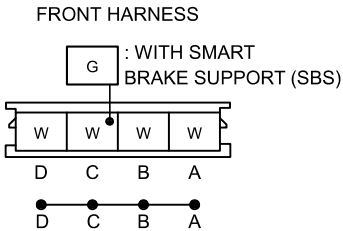


C-29
JOINT CONNECTOR

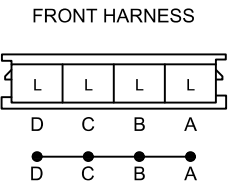


C-30
JOINT CONNECTOR

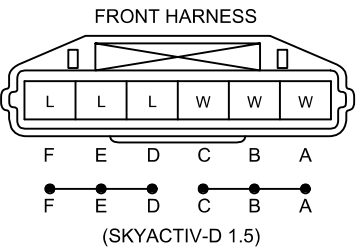


C-31
JOINT CONNECTOR

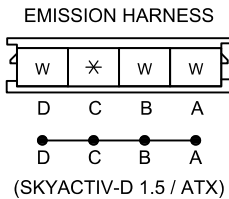


C-32
JOINT CONNECTOR

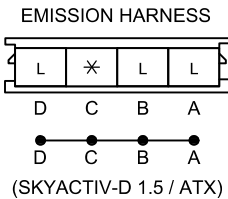


C-33
JOINT CONNECTOR

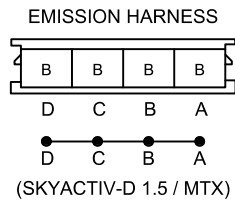


C-34
JOINT CONNECTOR

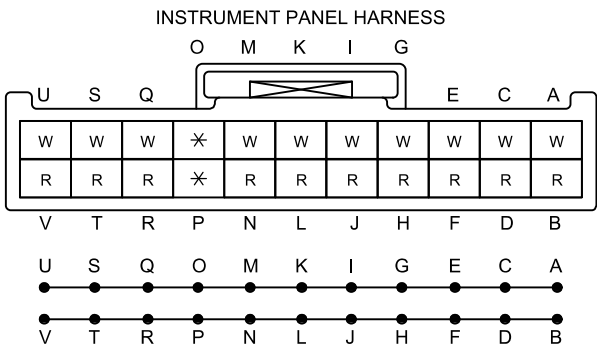


C-35
JOINT CONNECTOR

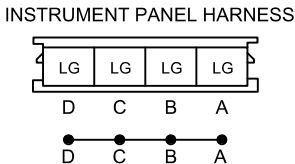


C-36
JOINT CONNECTOR

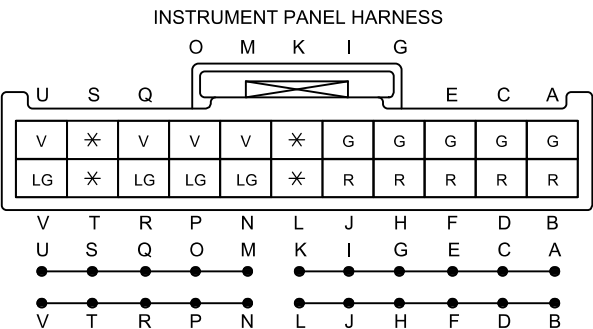


C-37
JOINT CONNECTOR

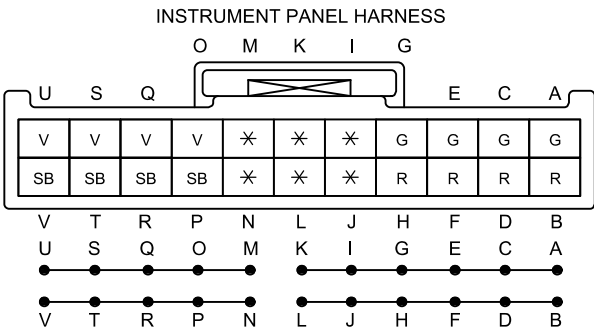


C-38
JOINT CONNECTOR

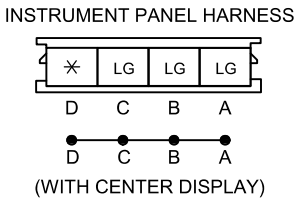

C-39
JOINT CONNECTOR

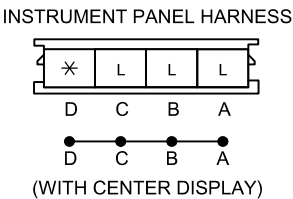


C-40
JOINT CONNECTOR

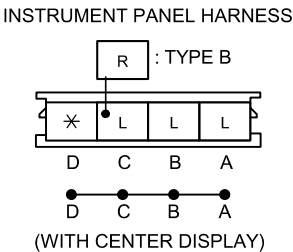


There are two types of circuit (types A and B).

C-41
JOINT CONNECTOR

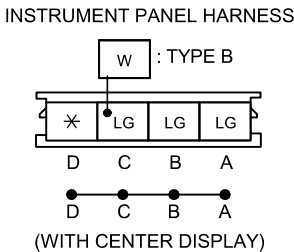


There are two types of circuit (types A and B).


C-42
JOINT CONNECTOR

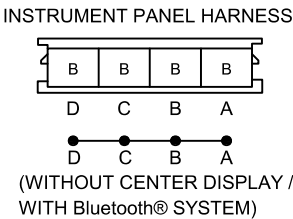


C-43
JOINT CONNECTOR

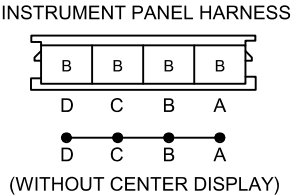


C-44
JOINT CONNECTOR

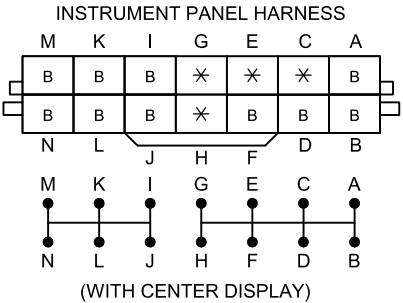


C-45
JOINT CONNECTOR

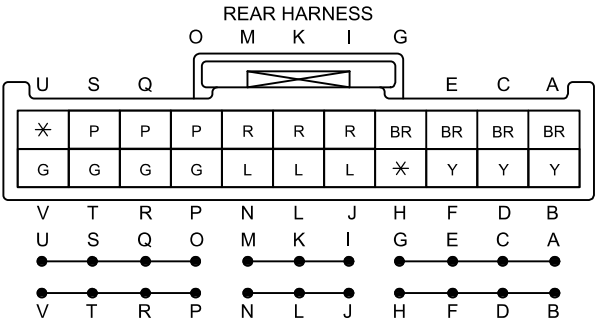


C-46
JOINT CONNECTOR

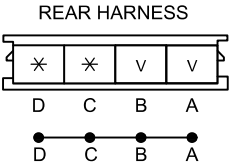


C-47
JOINT CONNECTOR

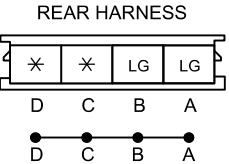


C-48
JOINT CONNECTOR

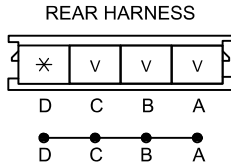


C-49
JOINT CONNECTOR

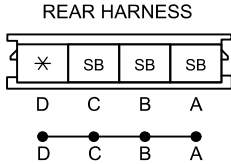


C-50
JOINT CONNECTOR

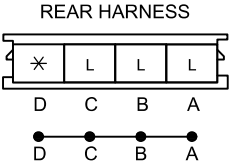


C-51
JOINT CONNECTOR

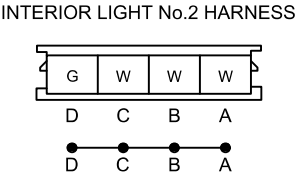


C-52
JOINT CONNECTOR

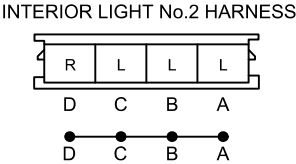


C-53
INSTRUMENT PANEL HARNESS-SHORT CORD

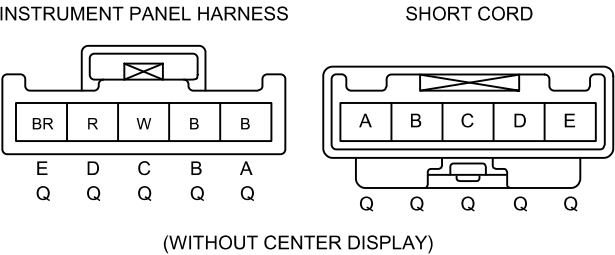


C-54
INSTRUMENT PANEL HARNESS-SHORT CORD

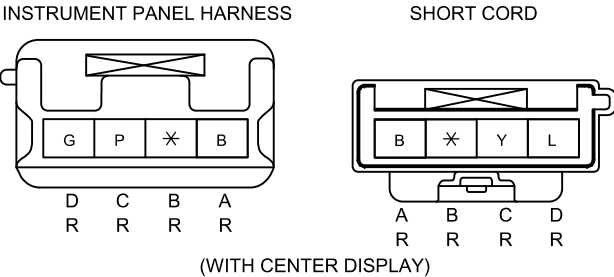


C-57
JOINT CONNECTOR

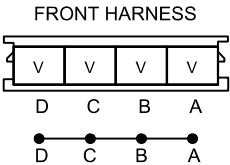


C-58
REAR HARNESS-SHORT CORD

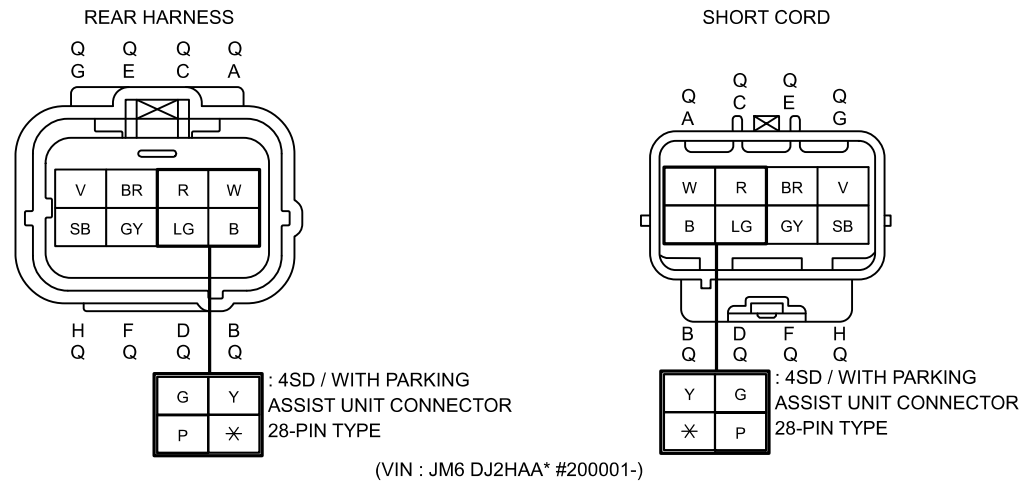


C-59
JOINT CONNECTOR

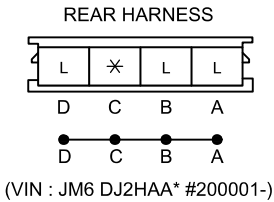


C-60
JOINT CONNECTOR

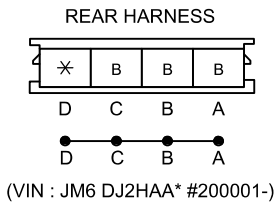


C-63
JOINT CONNECTOR

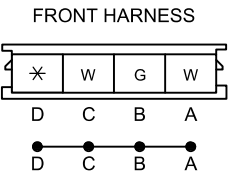

C-64
JOINT CONNECTOR

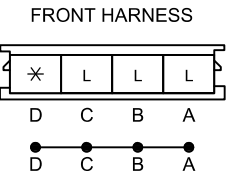

C-65
REAR HARNESS-SHORT CORD

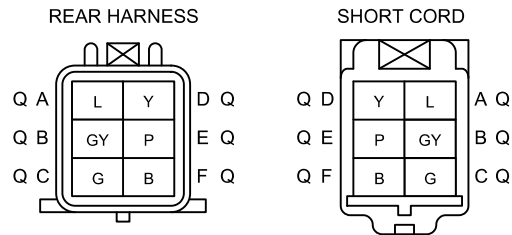

C-66
REAR HARNESS-SHORT CORD

